

CROPPICO INSTALLATION SUPPORT DOCUMENT

Requirements:

Software:

<https://ww1.microchip.com/downloads/aemDocuments/documents/DEV/ProductDocuments/SoftwareTools/as-installer-7.0.2594-full.exe>

Hardware:

<https://www.microchip.com/en-us/development-tool/PG164140>


Support video:

https://drive.google.com/drive/folders/1Eo1GfP3MEXvkdSlcYImRS2mn9Cr8TR_1?usp=sharing


S.Badhrinath
R&D

Procedure

1. Before turning ON system, create an hotspot tethering with below credentials

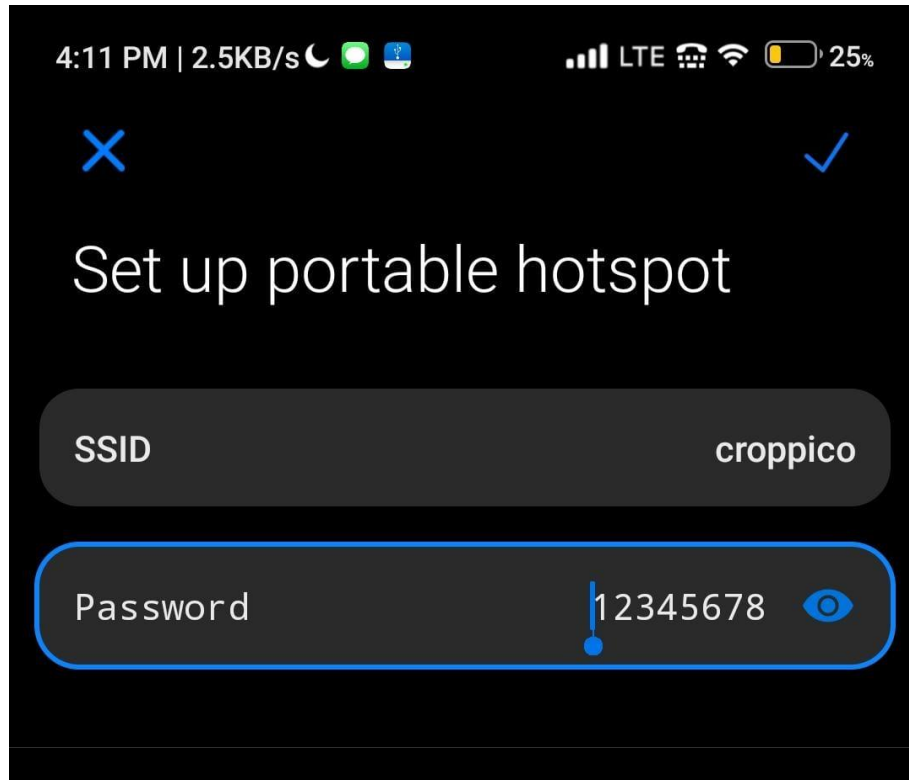


Insert Keyboard in any of the available USB ports in the master

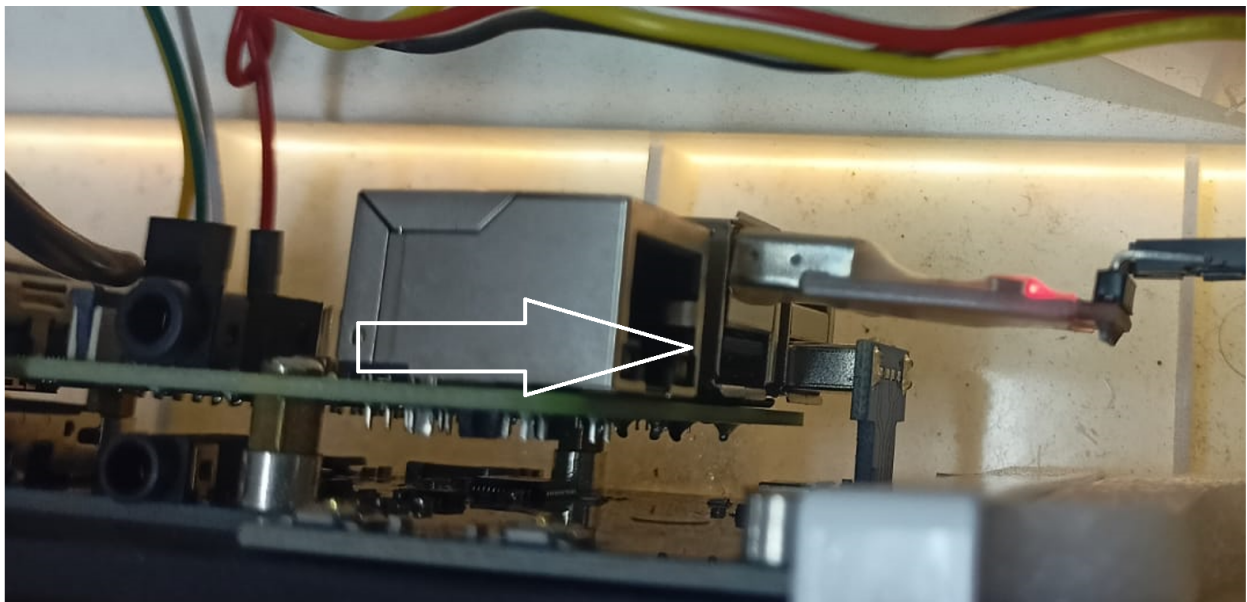





Check whether the device is connected to croppico ID

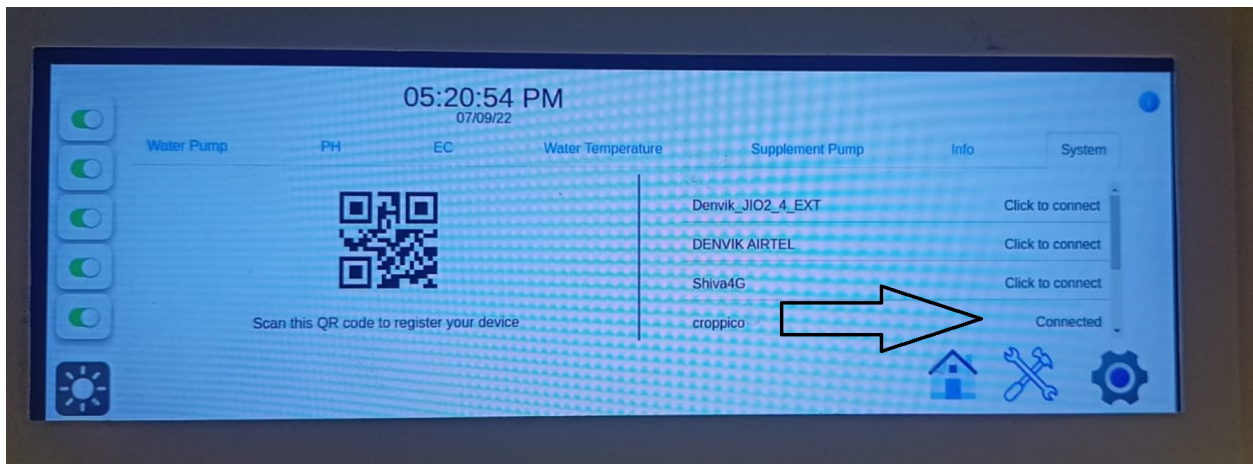

Select your home/ wifi network

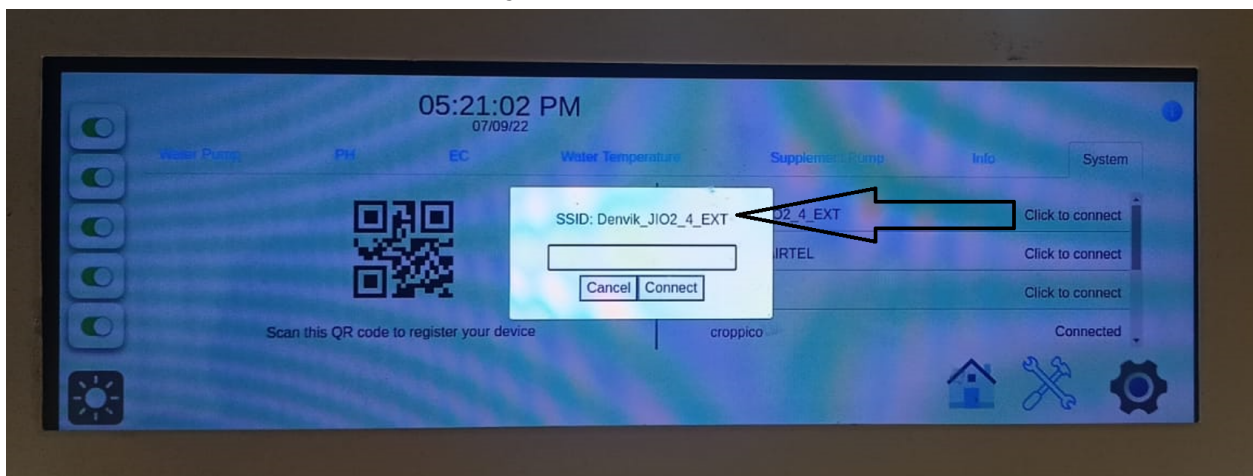


Using keyboard enter the password

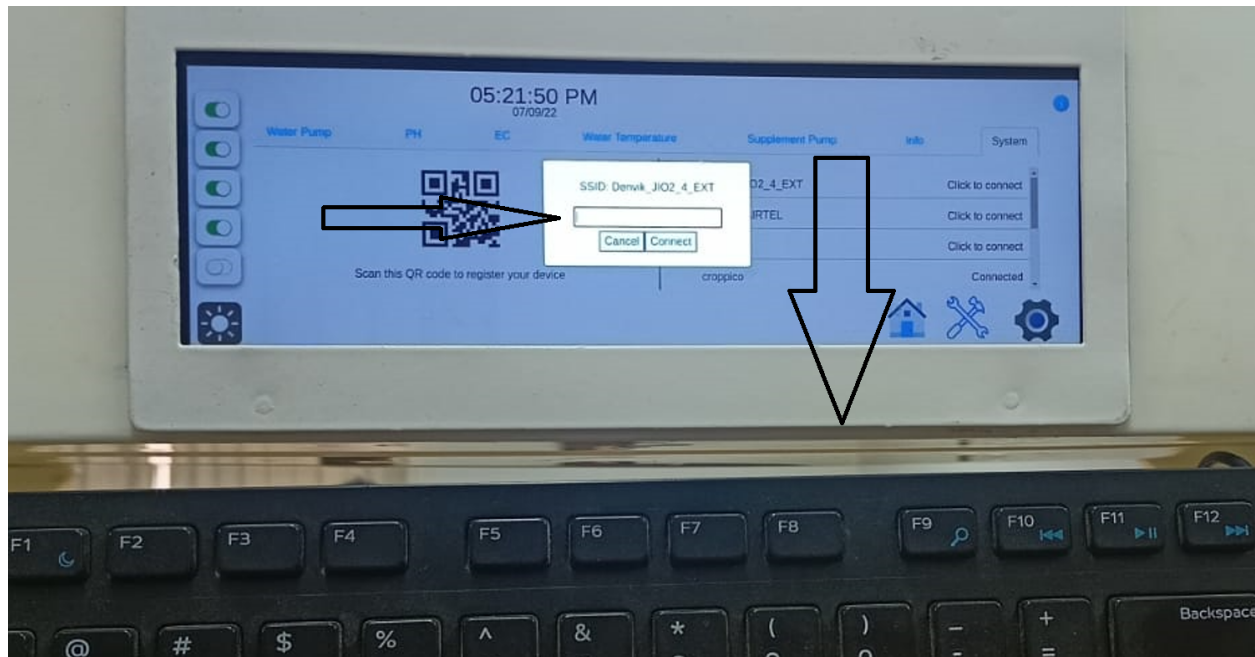


And click connect

Device will be connected to your own wifi network


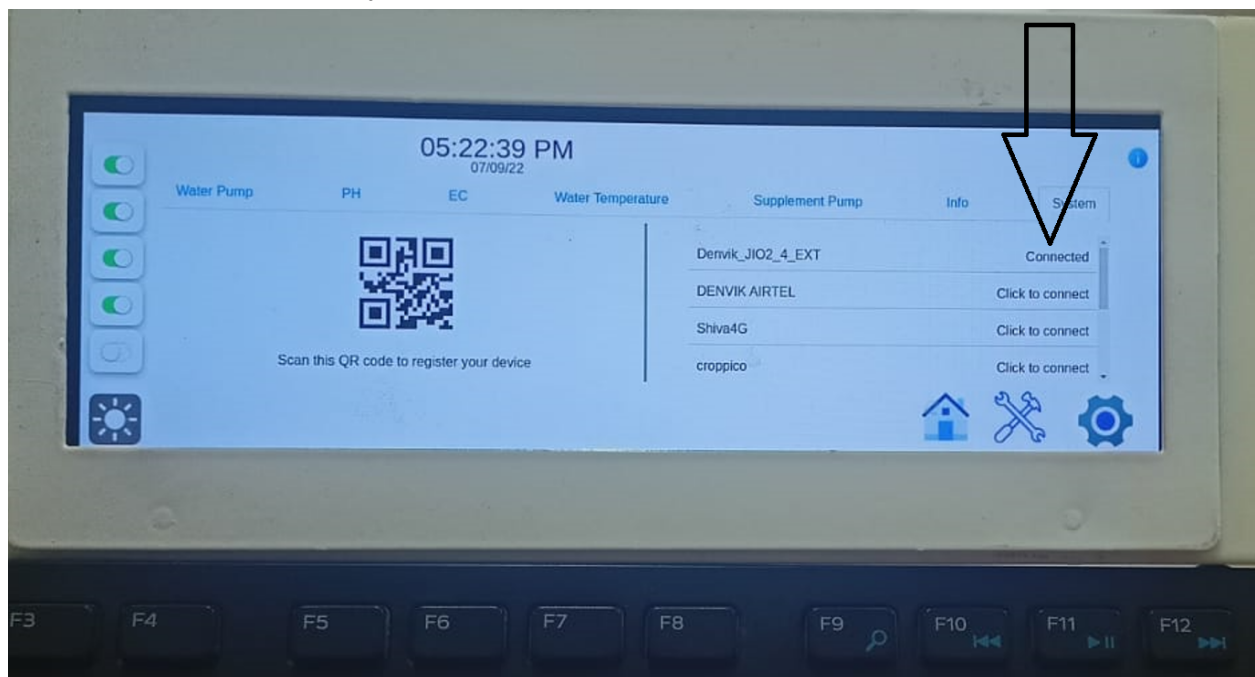



THEN

2. Download and install the microchip studio software.
3. Connect Pickit 4 to your laptop.

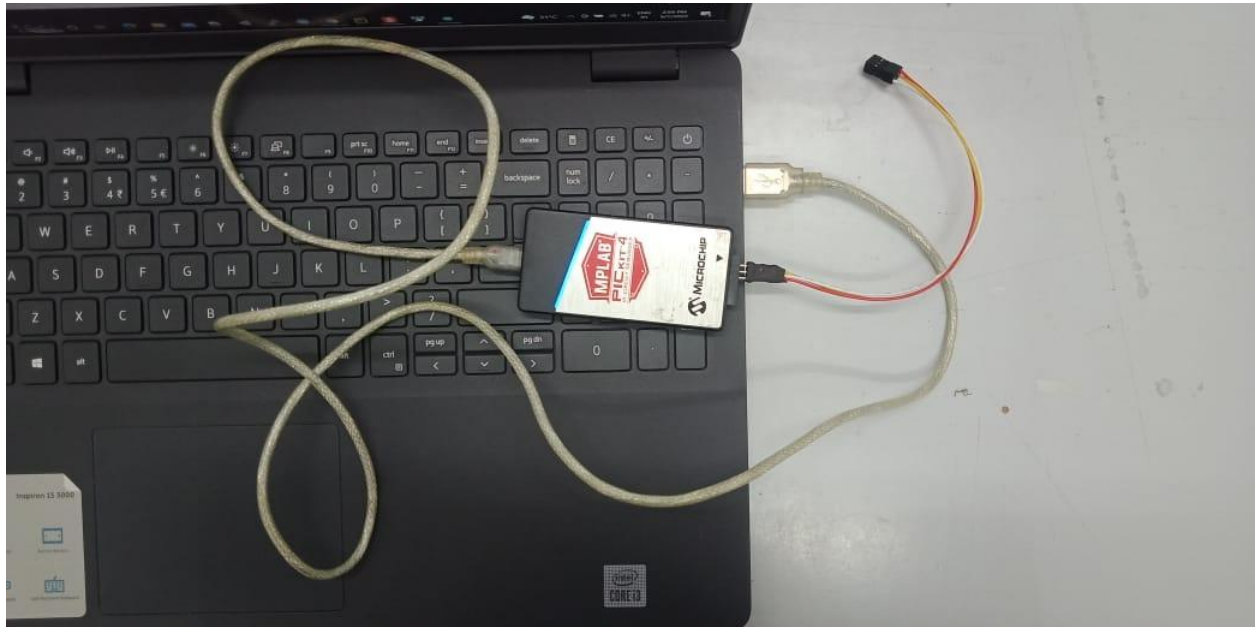




4. Open microchip studio and follow the below instructions step by step. Or see support video using link in first page.

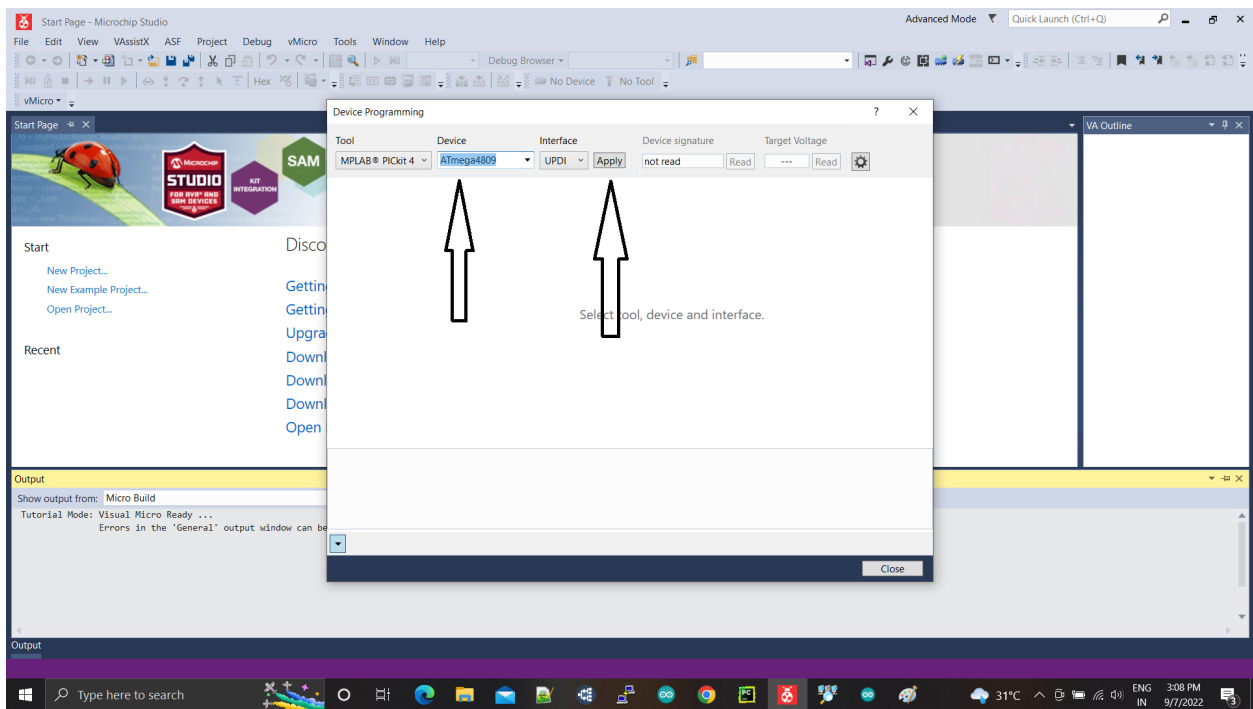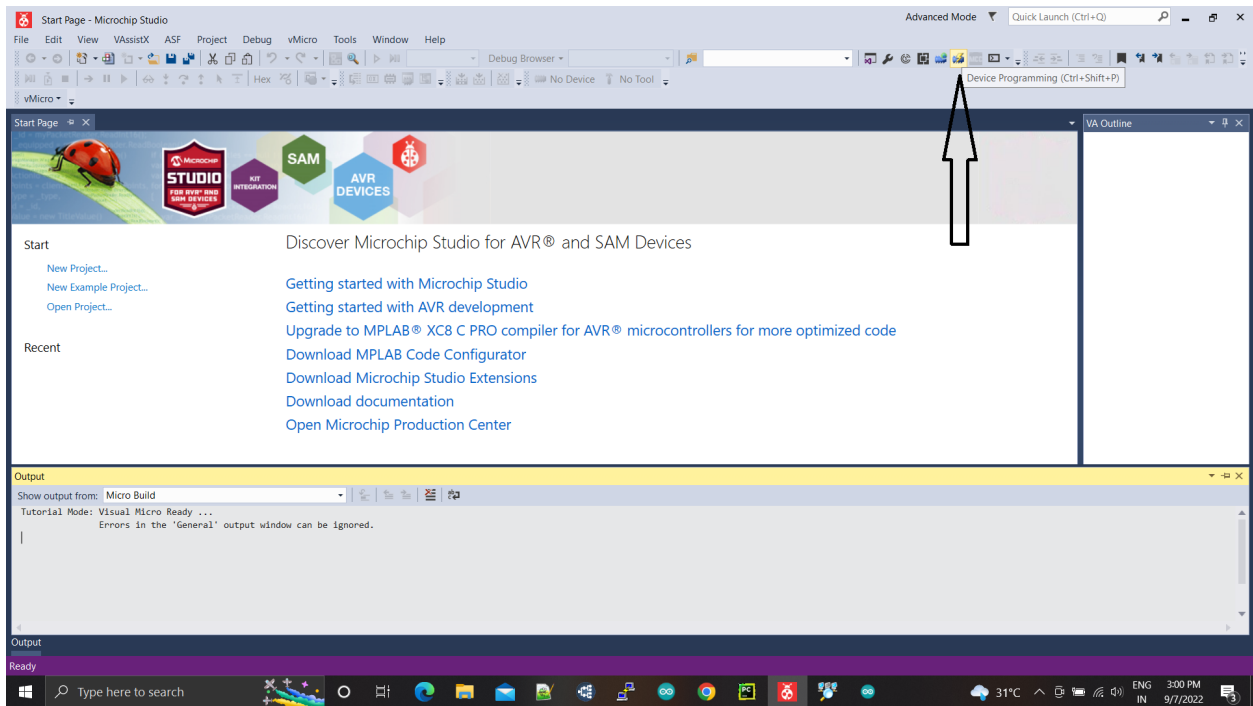


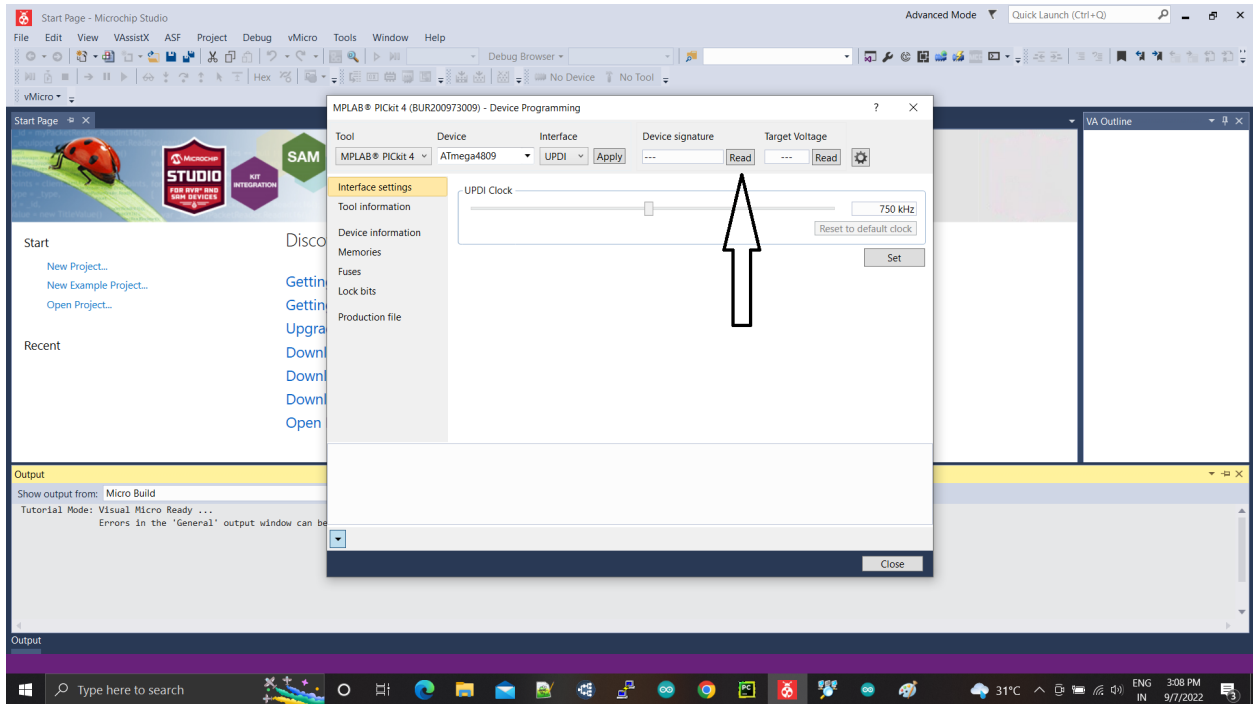


Check whether the signature and voltage is updated


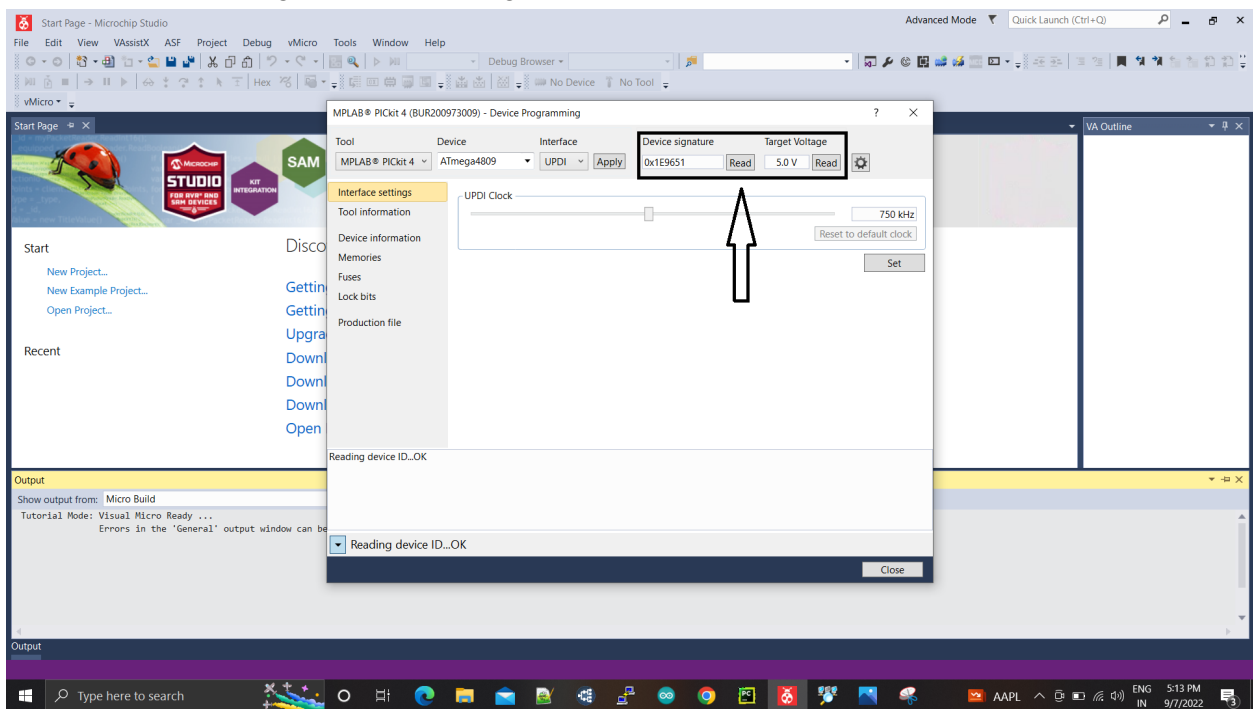


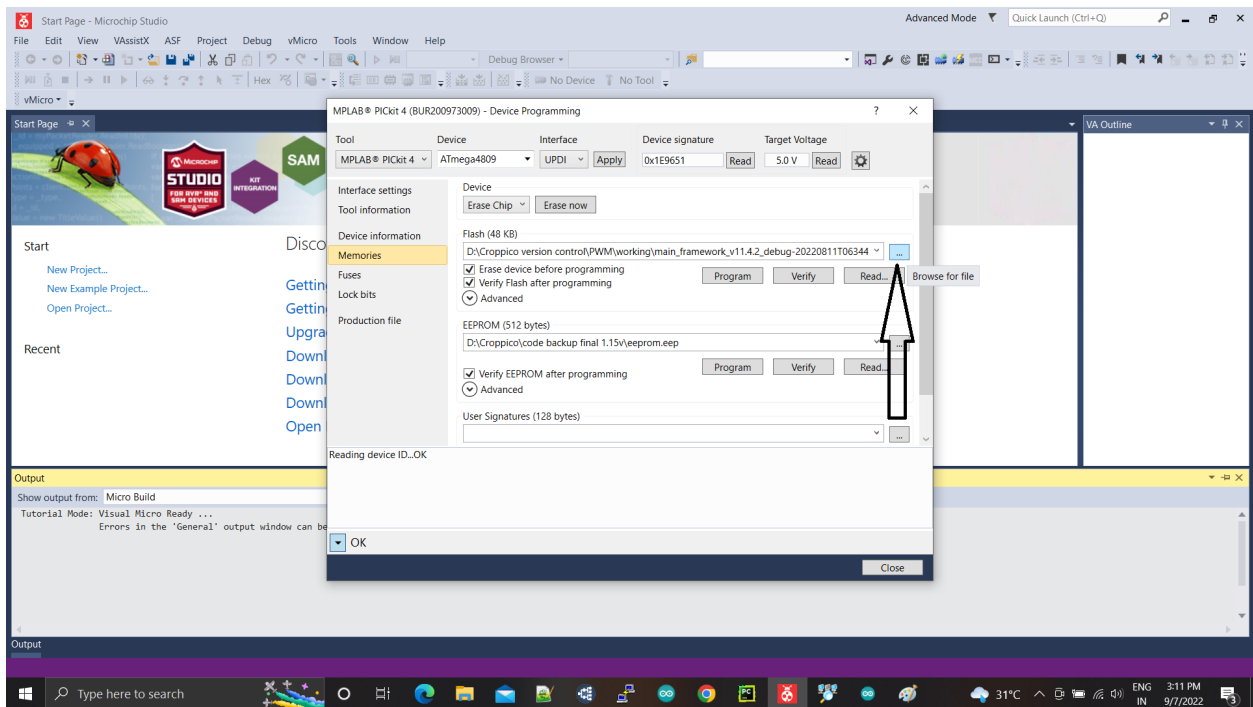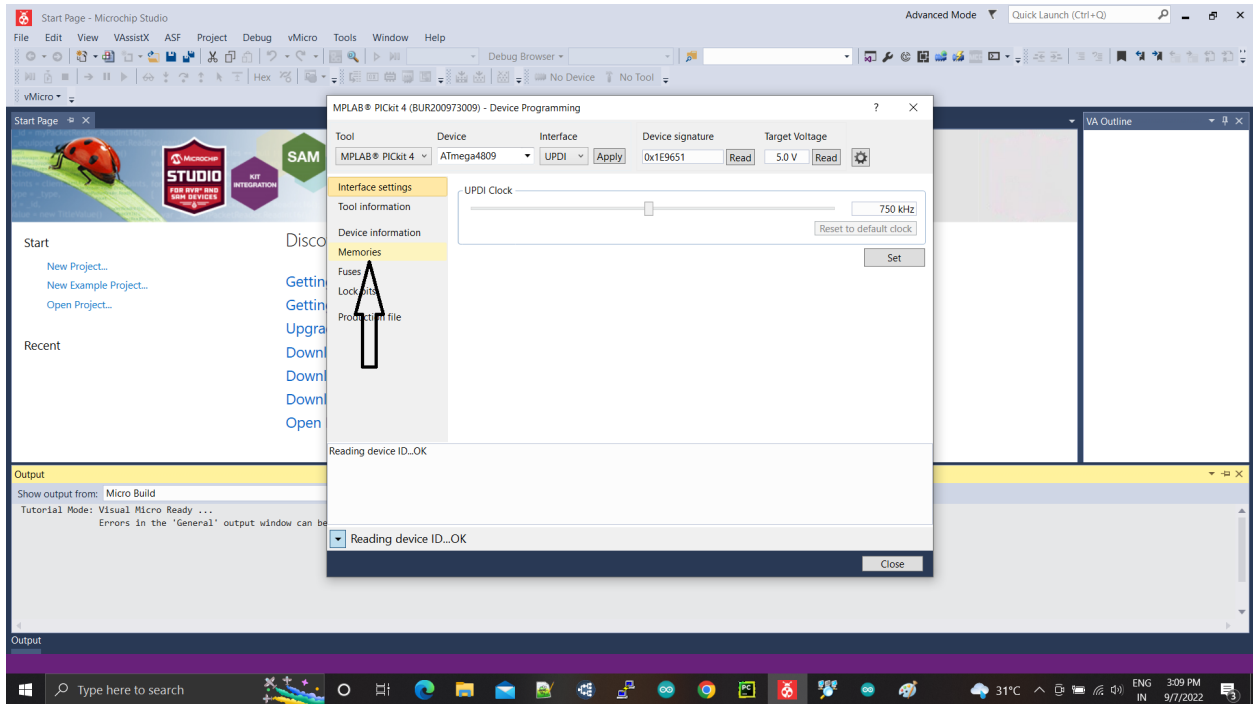


Select the FLASH file

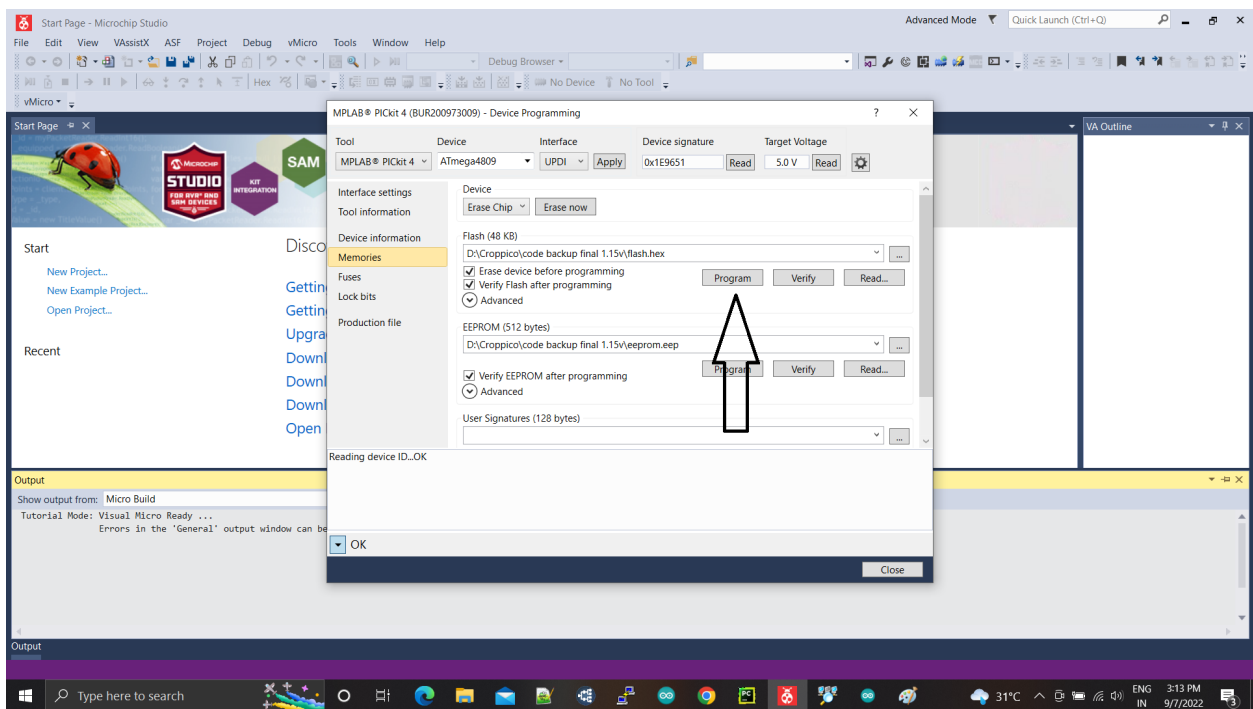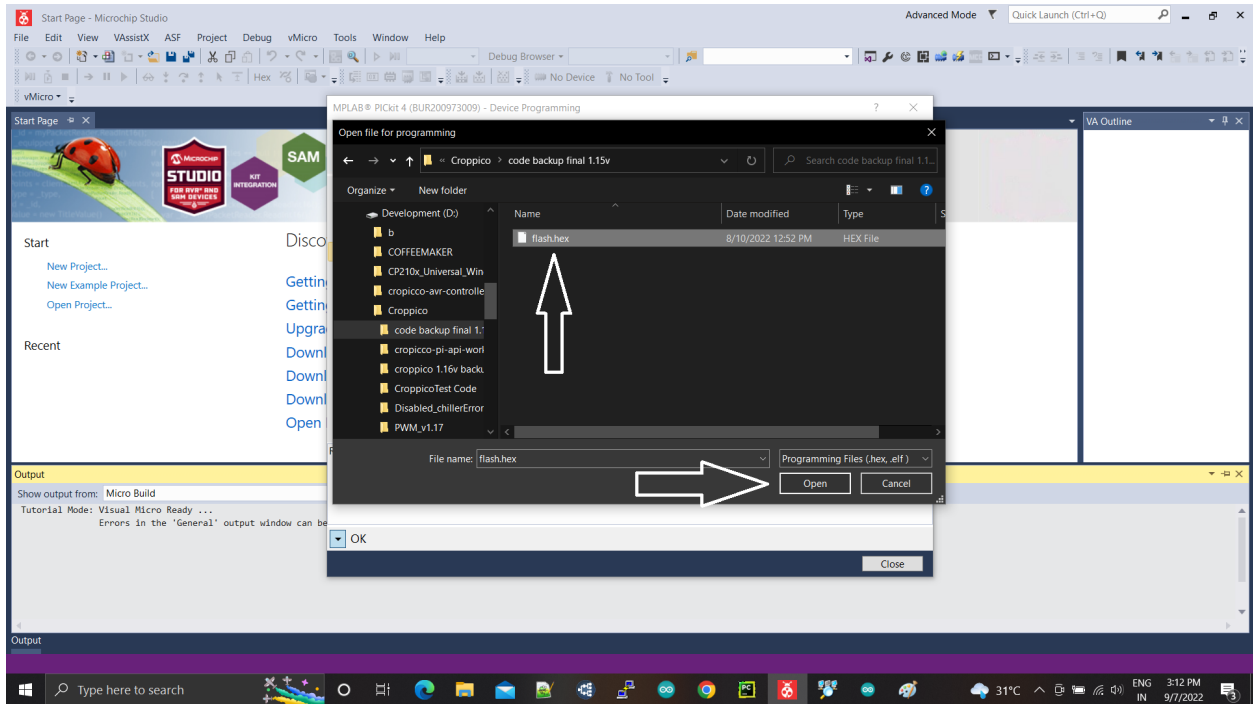


Program and verify the upload

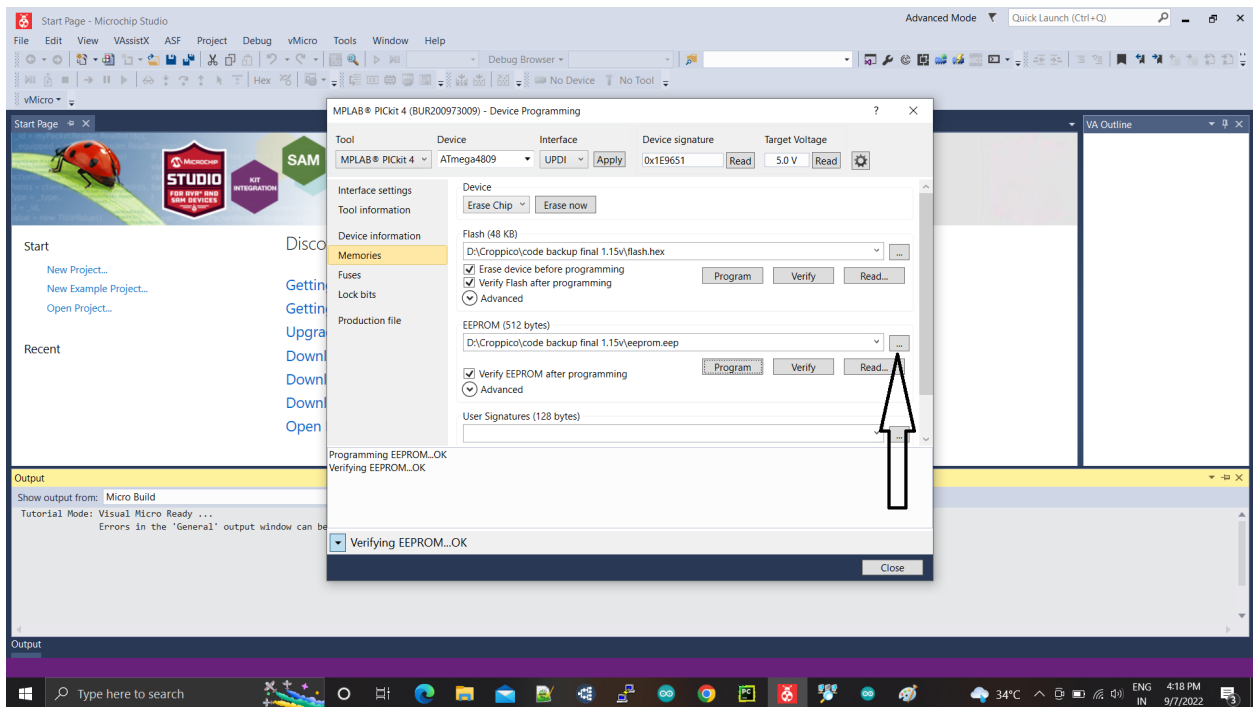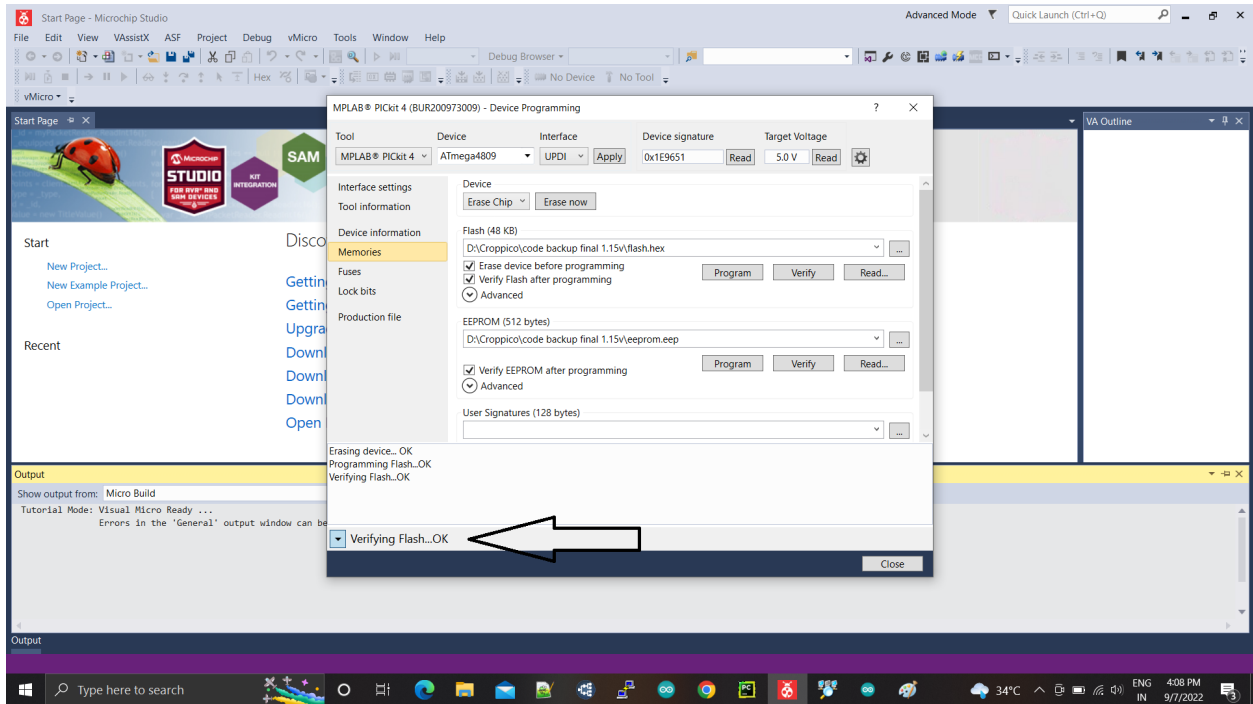


Select EEPROM file

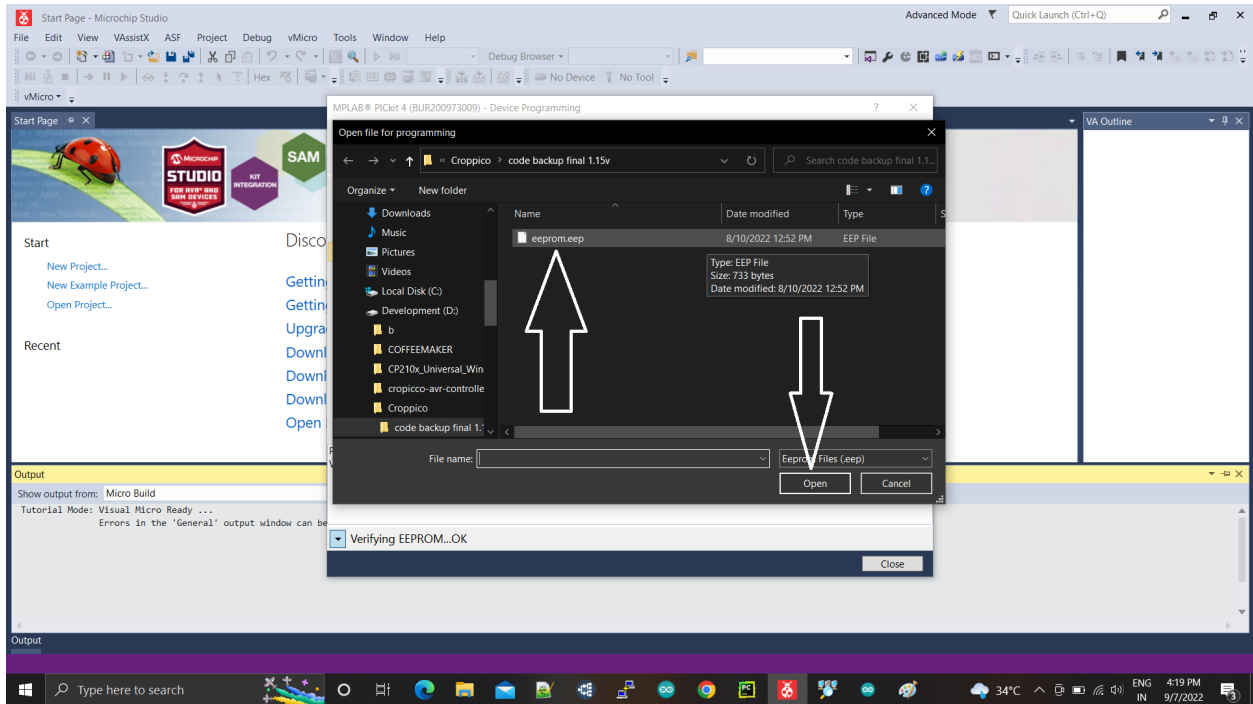

Program and verify the upload

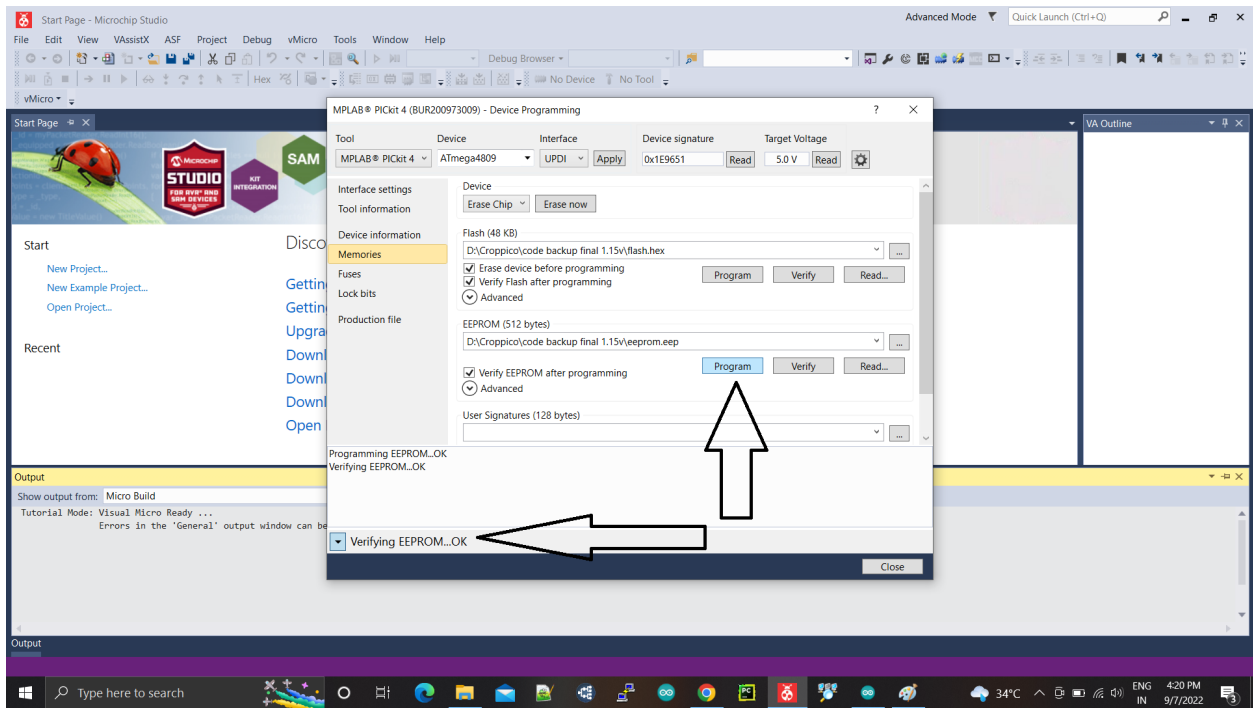

Set FUSE bits as like below image

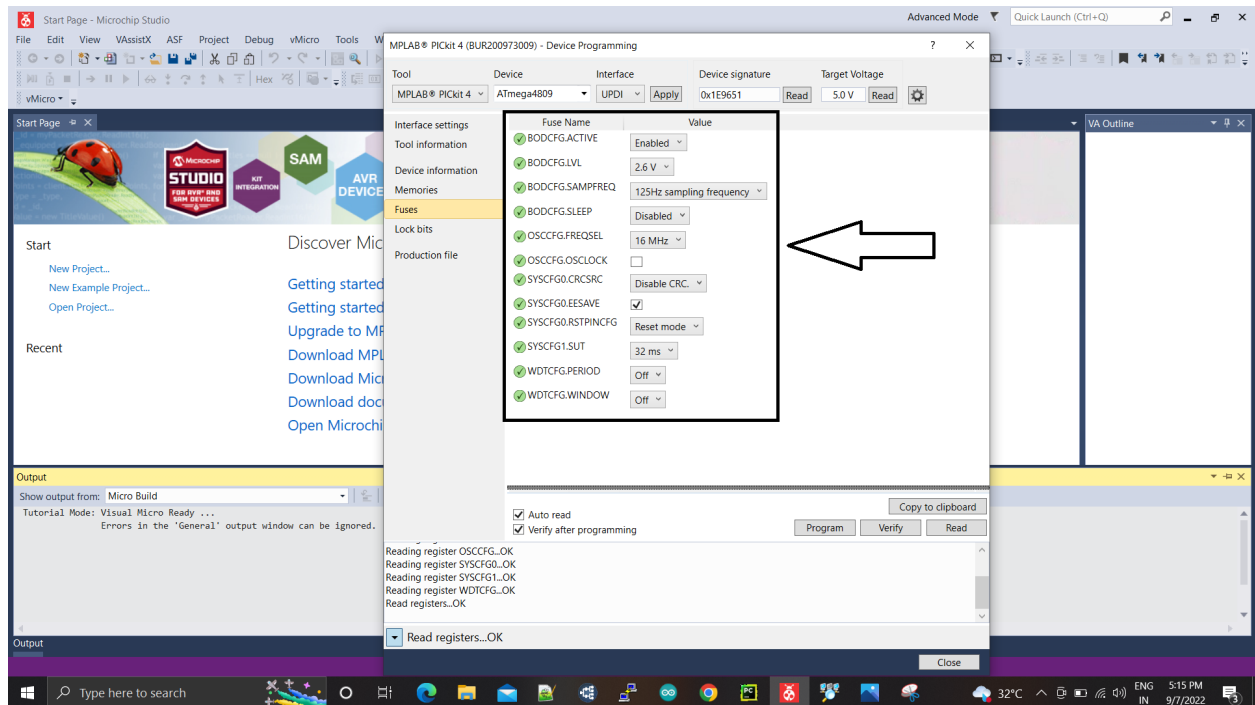

6. TURN OFF the system and Turn ON after 10 seconds