



Install RealTerm on your PC.


Easy Frp Bypass.apk enter into the SD card into my phone .SD card Inserted.

Select English (United States) then Click START. connect Wifi internet.

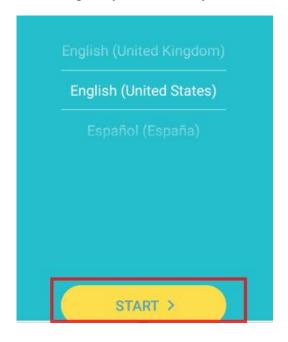

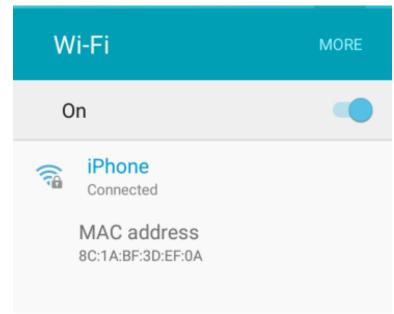


Open RealTerm and CHECK Half Duplex.

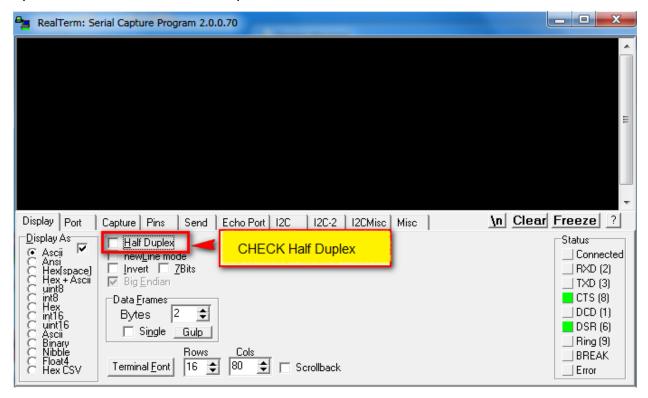





Inside the Device Manager. Samsung under Modems, right click and click Properties.

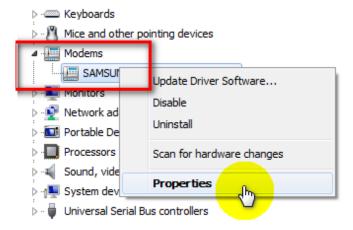

Under Modem Check Port: COM14

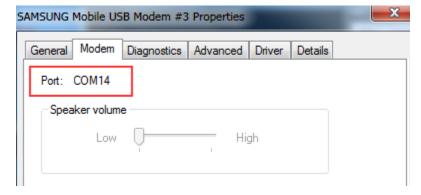


RealTerm port number must be according to the above number. And change it if it is not.

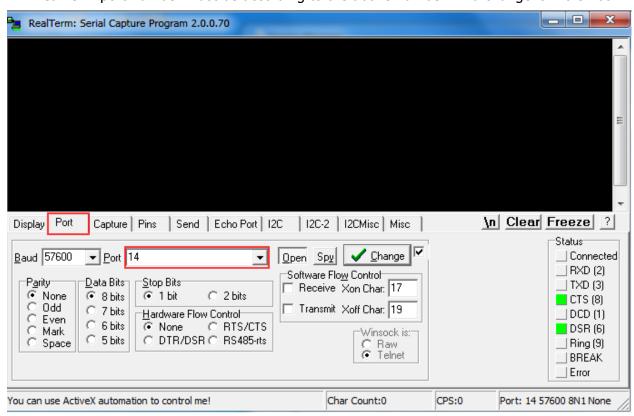



Type "at+creg?\r\n" and click "Send ASCII" if have error insert SIM into phone

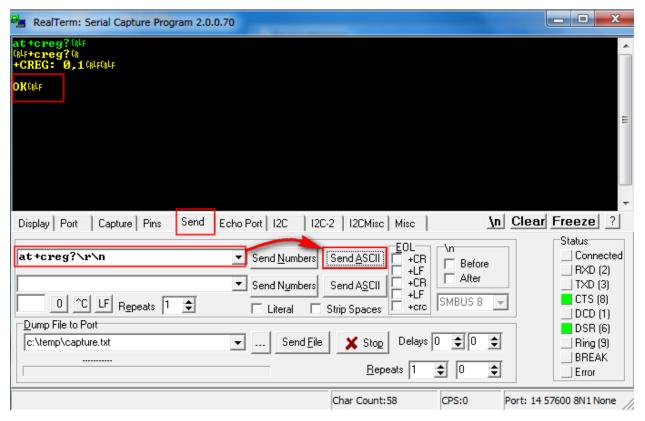

Input "atd1234;\r\n" And click "Send ASCII" button will call .1234.







Click Red button To end call




then select Create contact

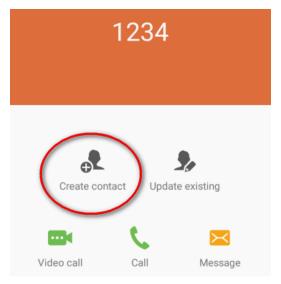

Select SCAN BUSINESS CARD

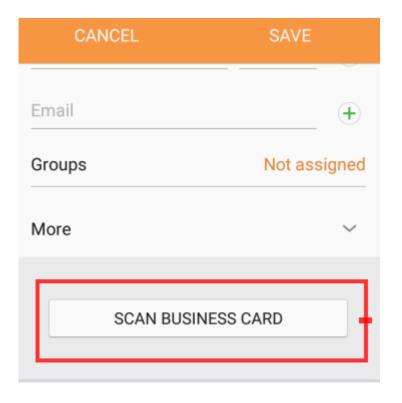


Click AGREE

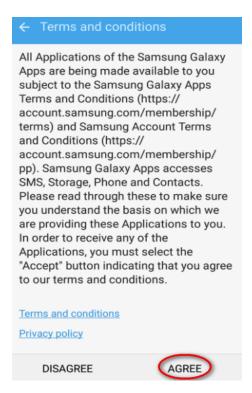





Samsung account anyway., Then click Create account and then add one below.

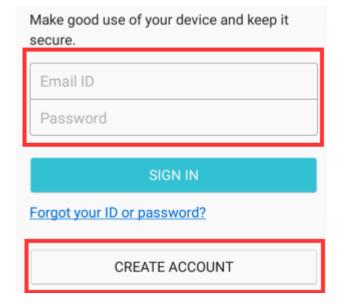


C lick SEARCH and input Es File Explorer

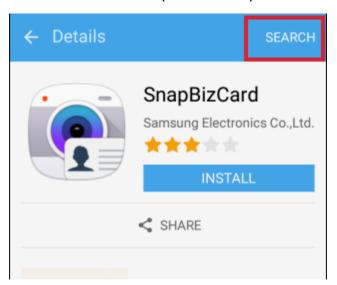

Download

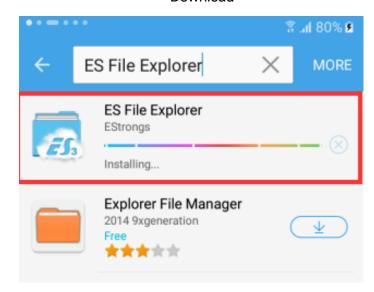

Open ES File Explorer o SD Card click Easy Frp Bypass.apk

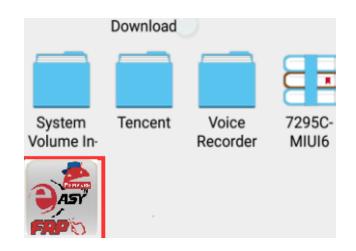





www.easy-firmware.com



check Unknown sources Install and OPEN

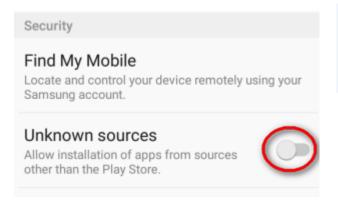

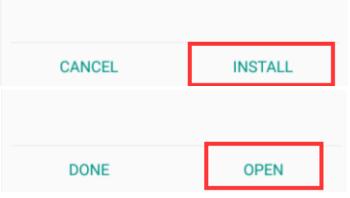






www.easy-firmware.com



c lick Browser sign in

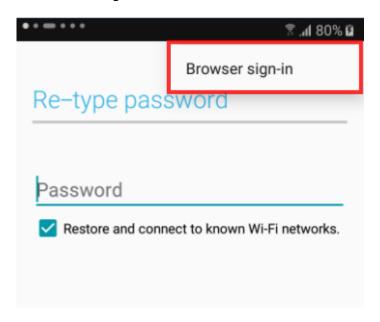

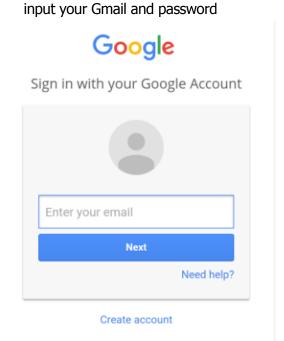

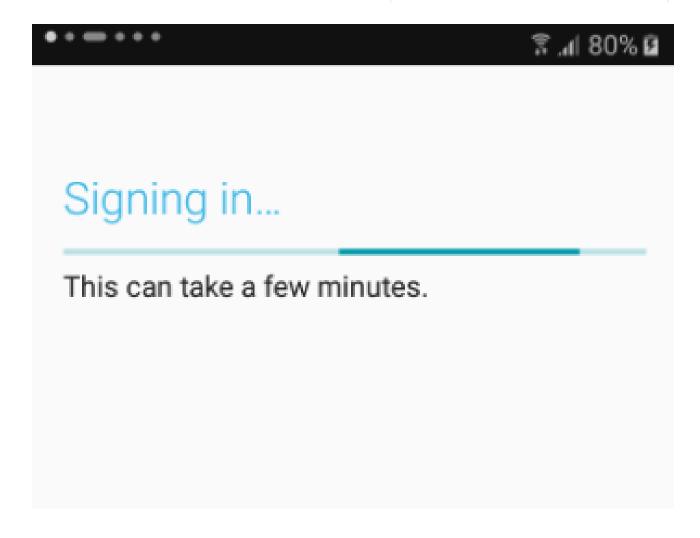



After Signe in go back this page click back or restart phone



now welcome start again without FRP





www.easy-firmware.com