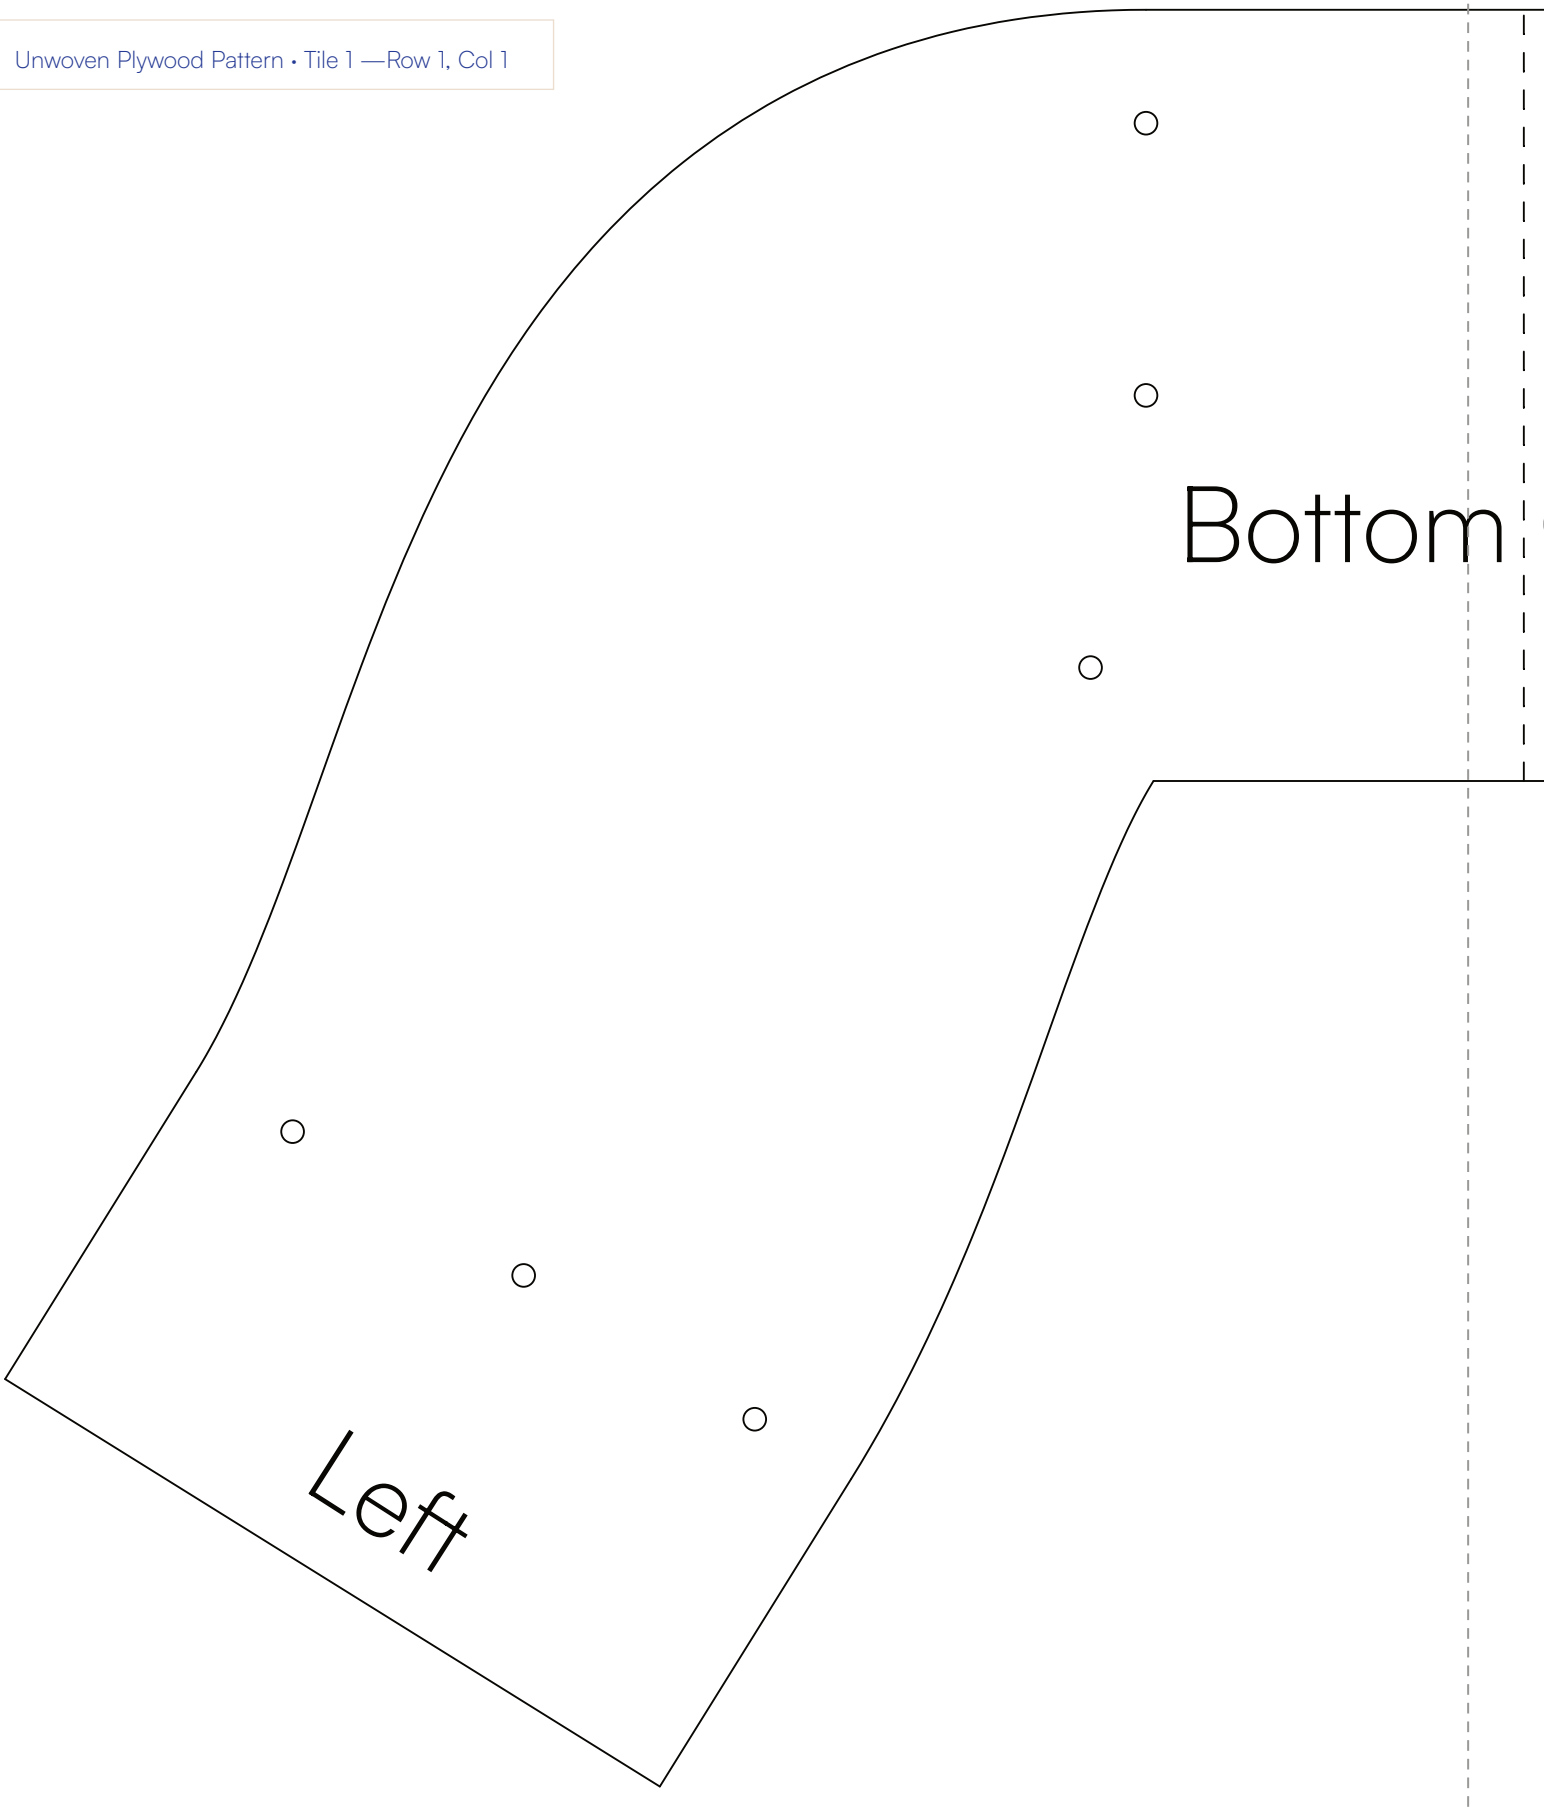
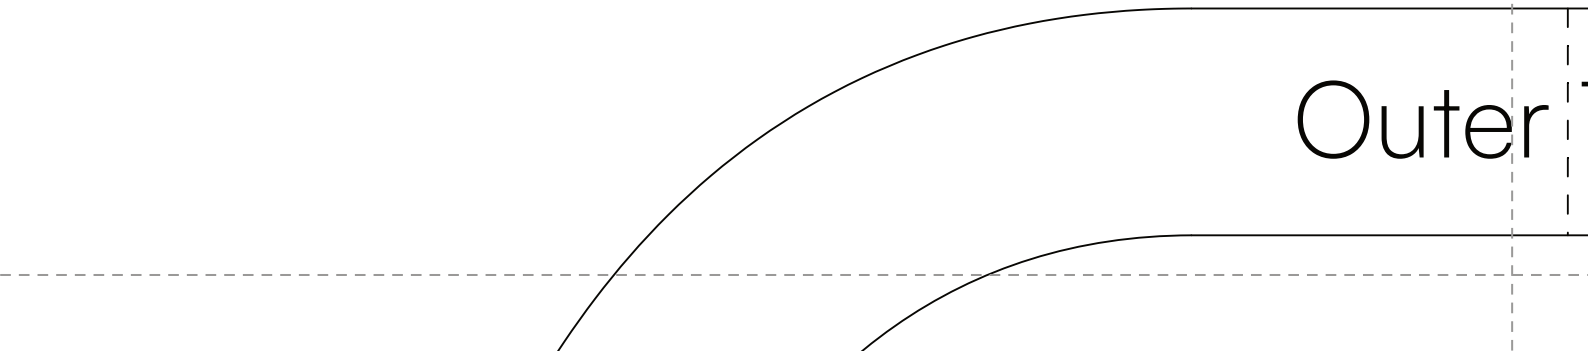
Assembly Map — Unwoven Plywood Pattern

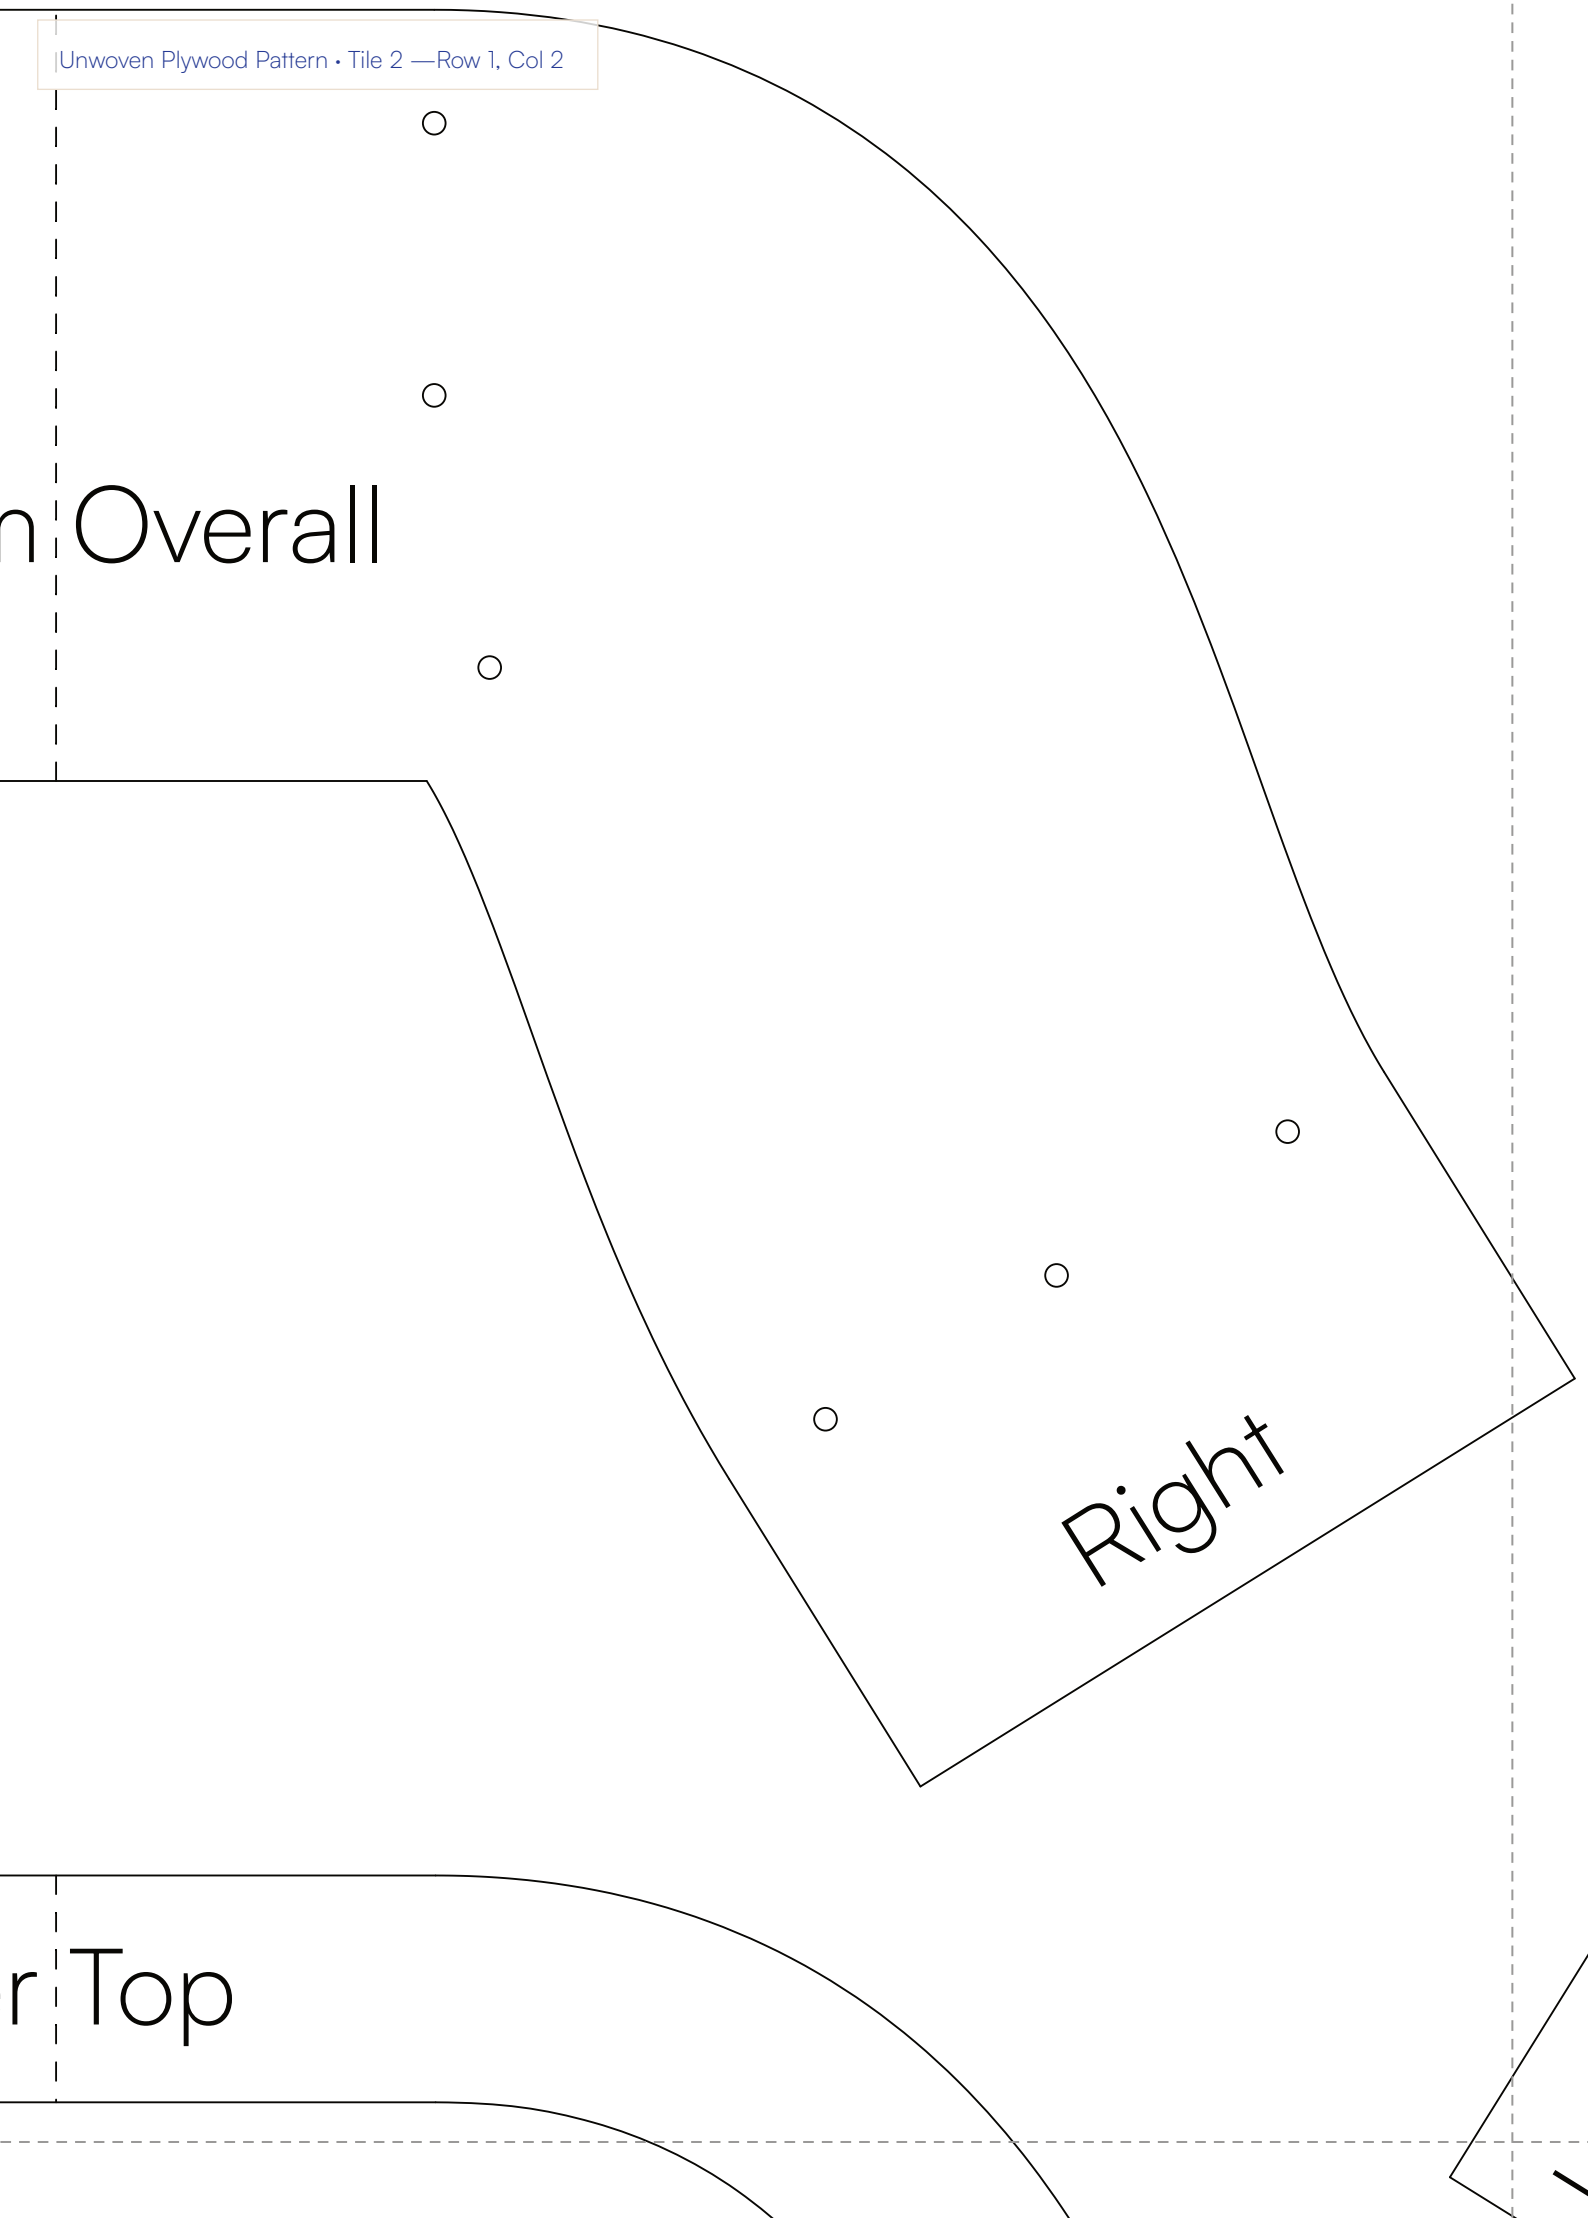
4 rows × 4 columns = 16 A4 pages. Print every tile, then tape them together using the dashed overlap margins.

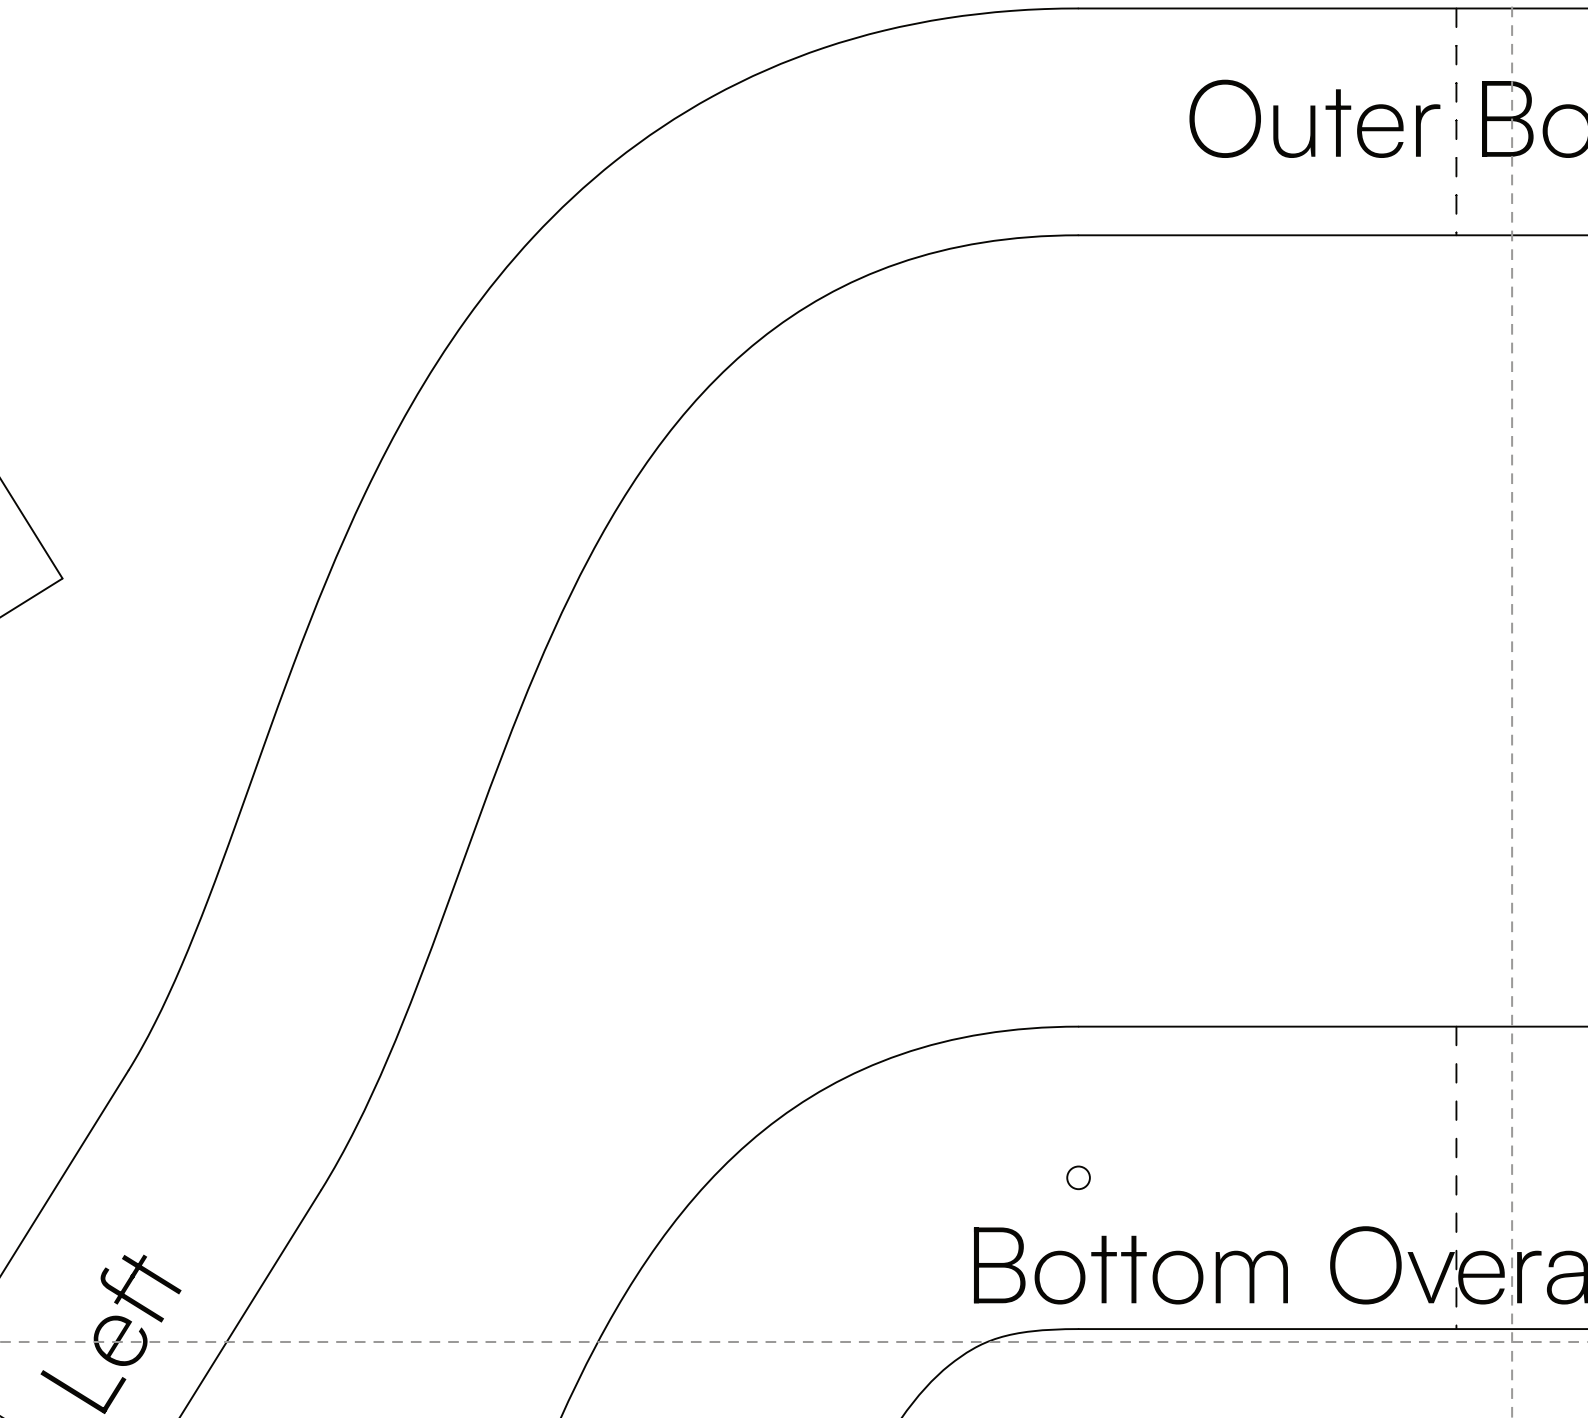
1 R1C1	2 R1C2	3 R1C3	4 R1C4
5 R2C1	6 R2C2	7 R2C3	8 R2C4
9 R3C1	10 R3C2	11 R3C3	12 R3C4
13 R4C1	14 R4C2	15 R4C3	16 R4C4

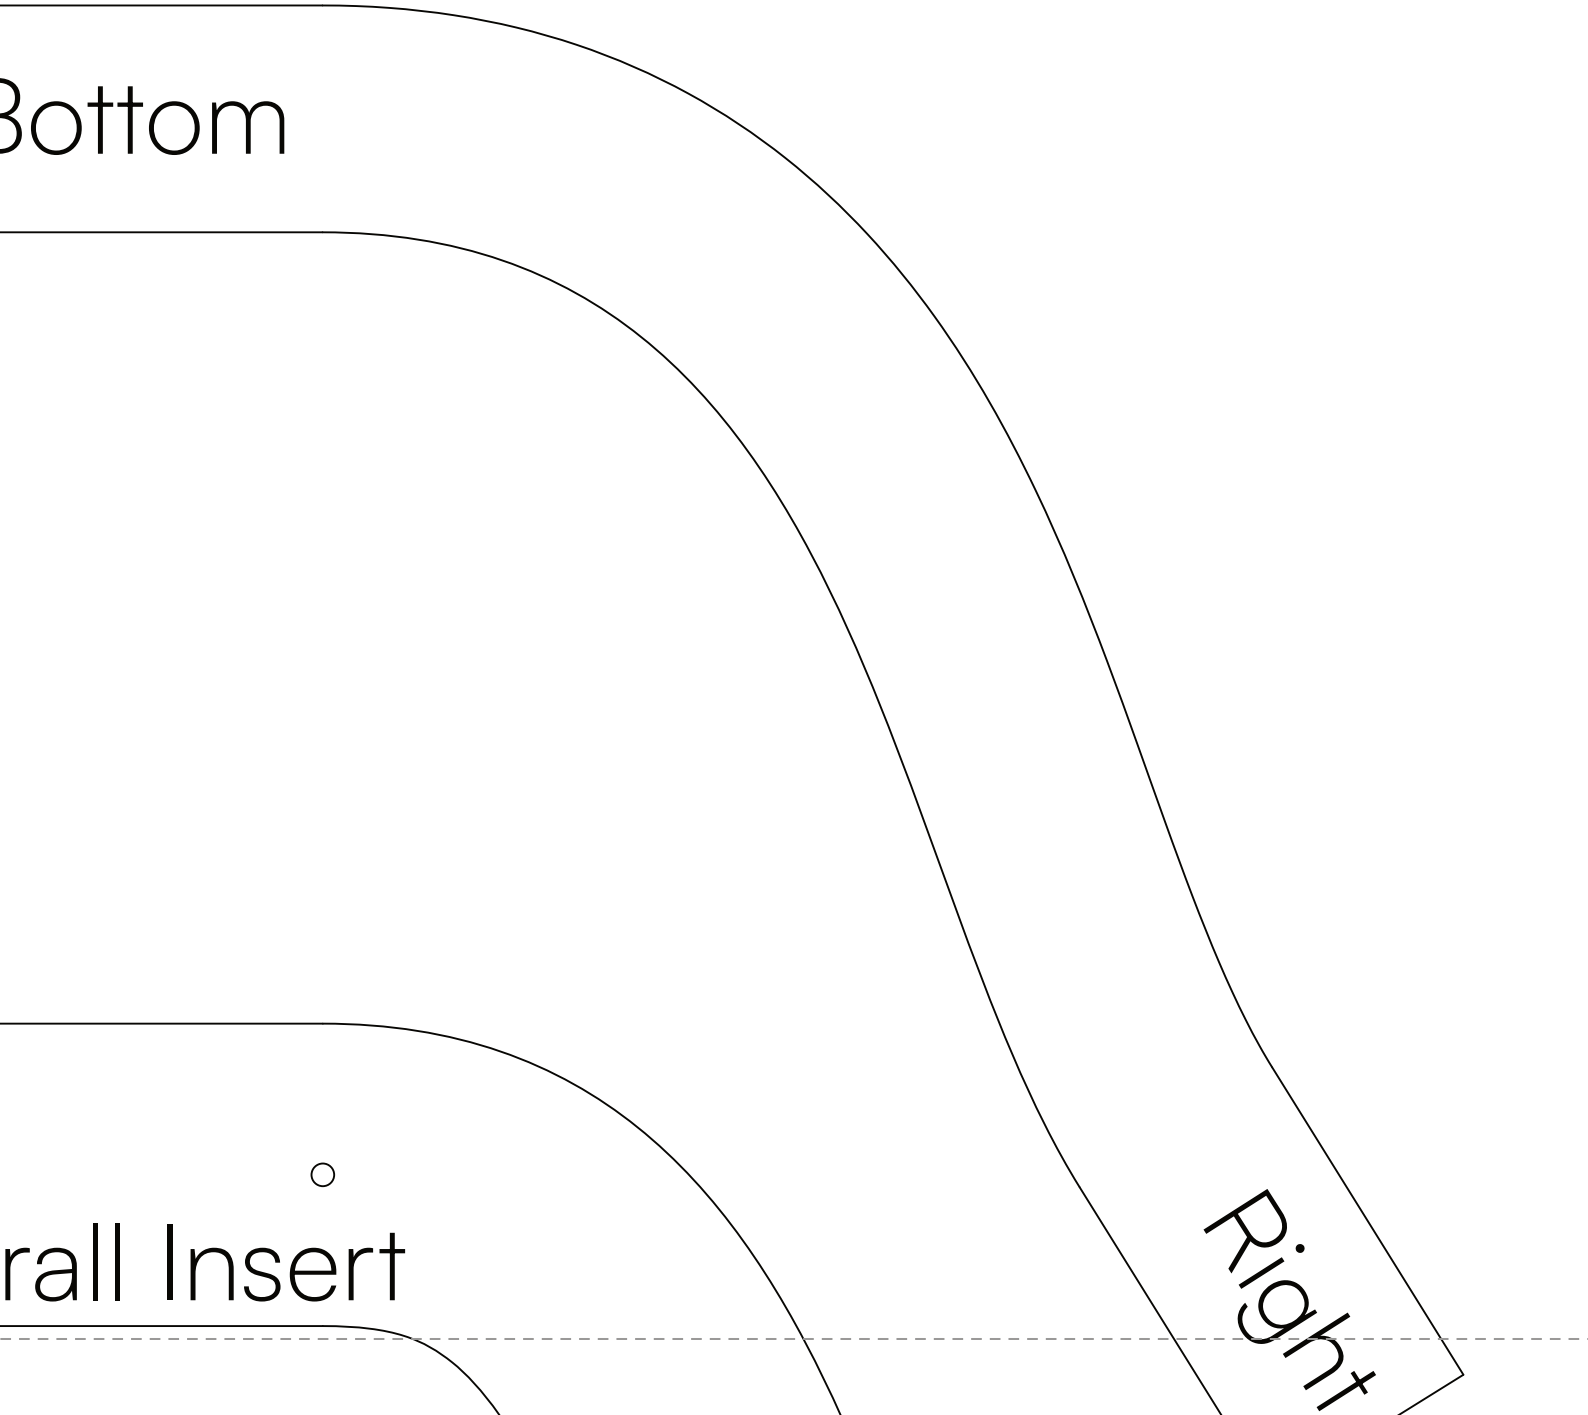
100 mm reference —confirm your printer is set to 100% (Actual Size)


Bottom
Left

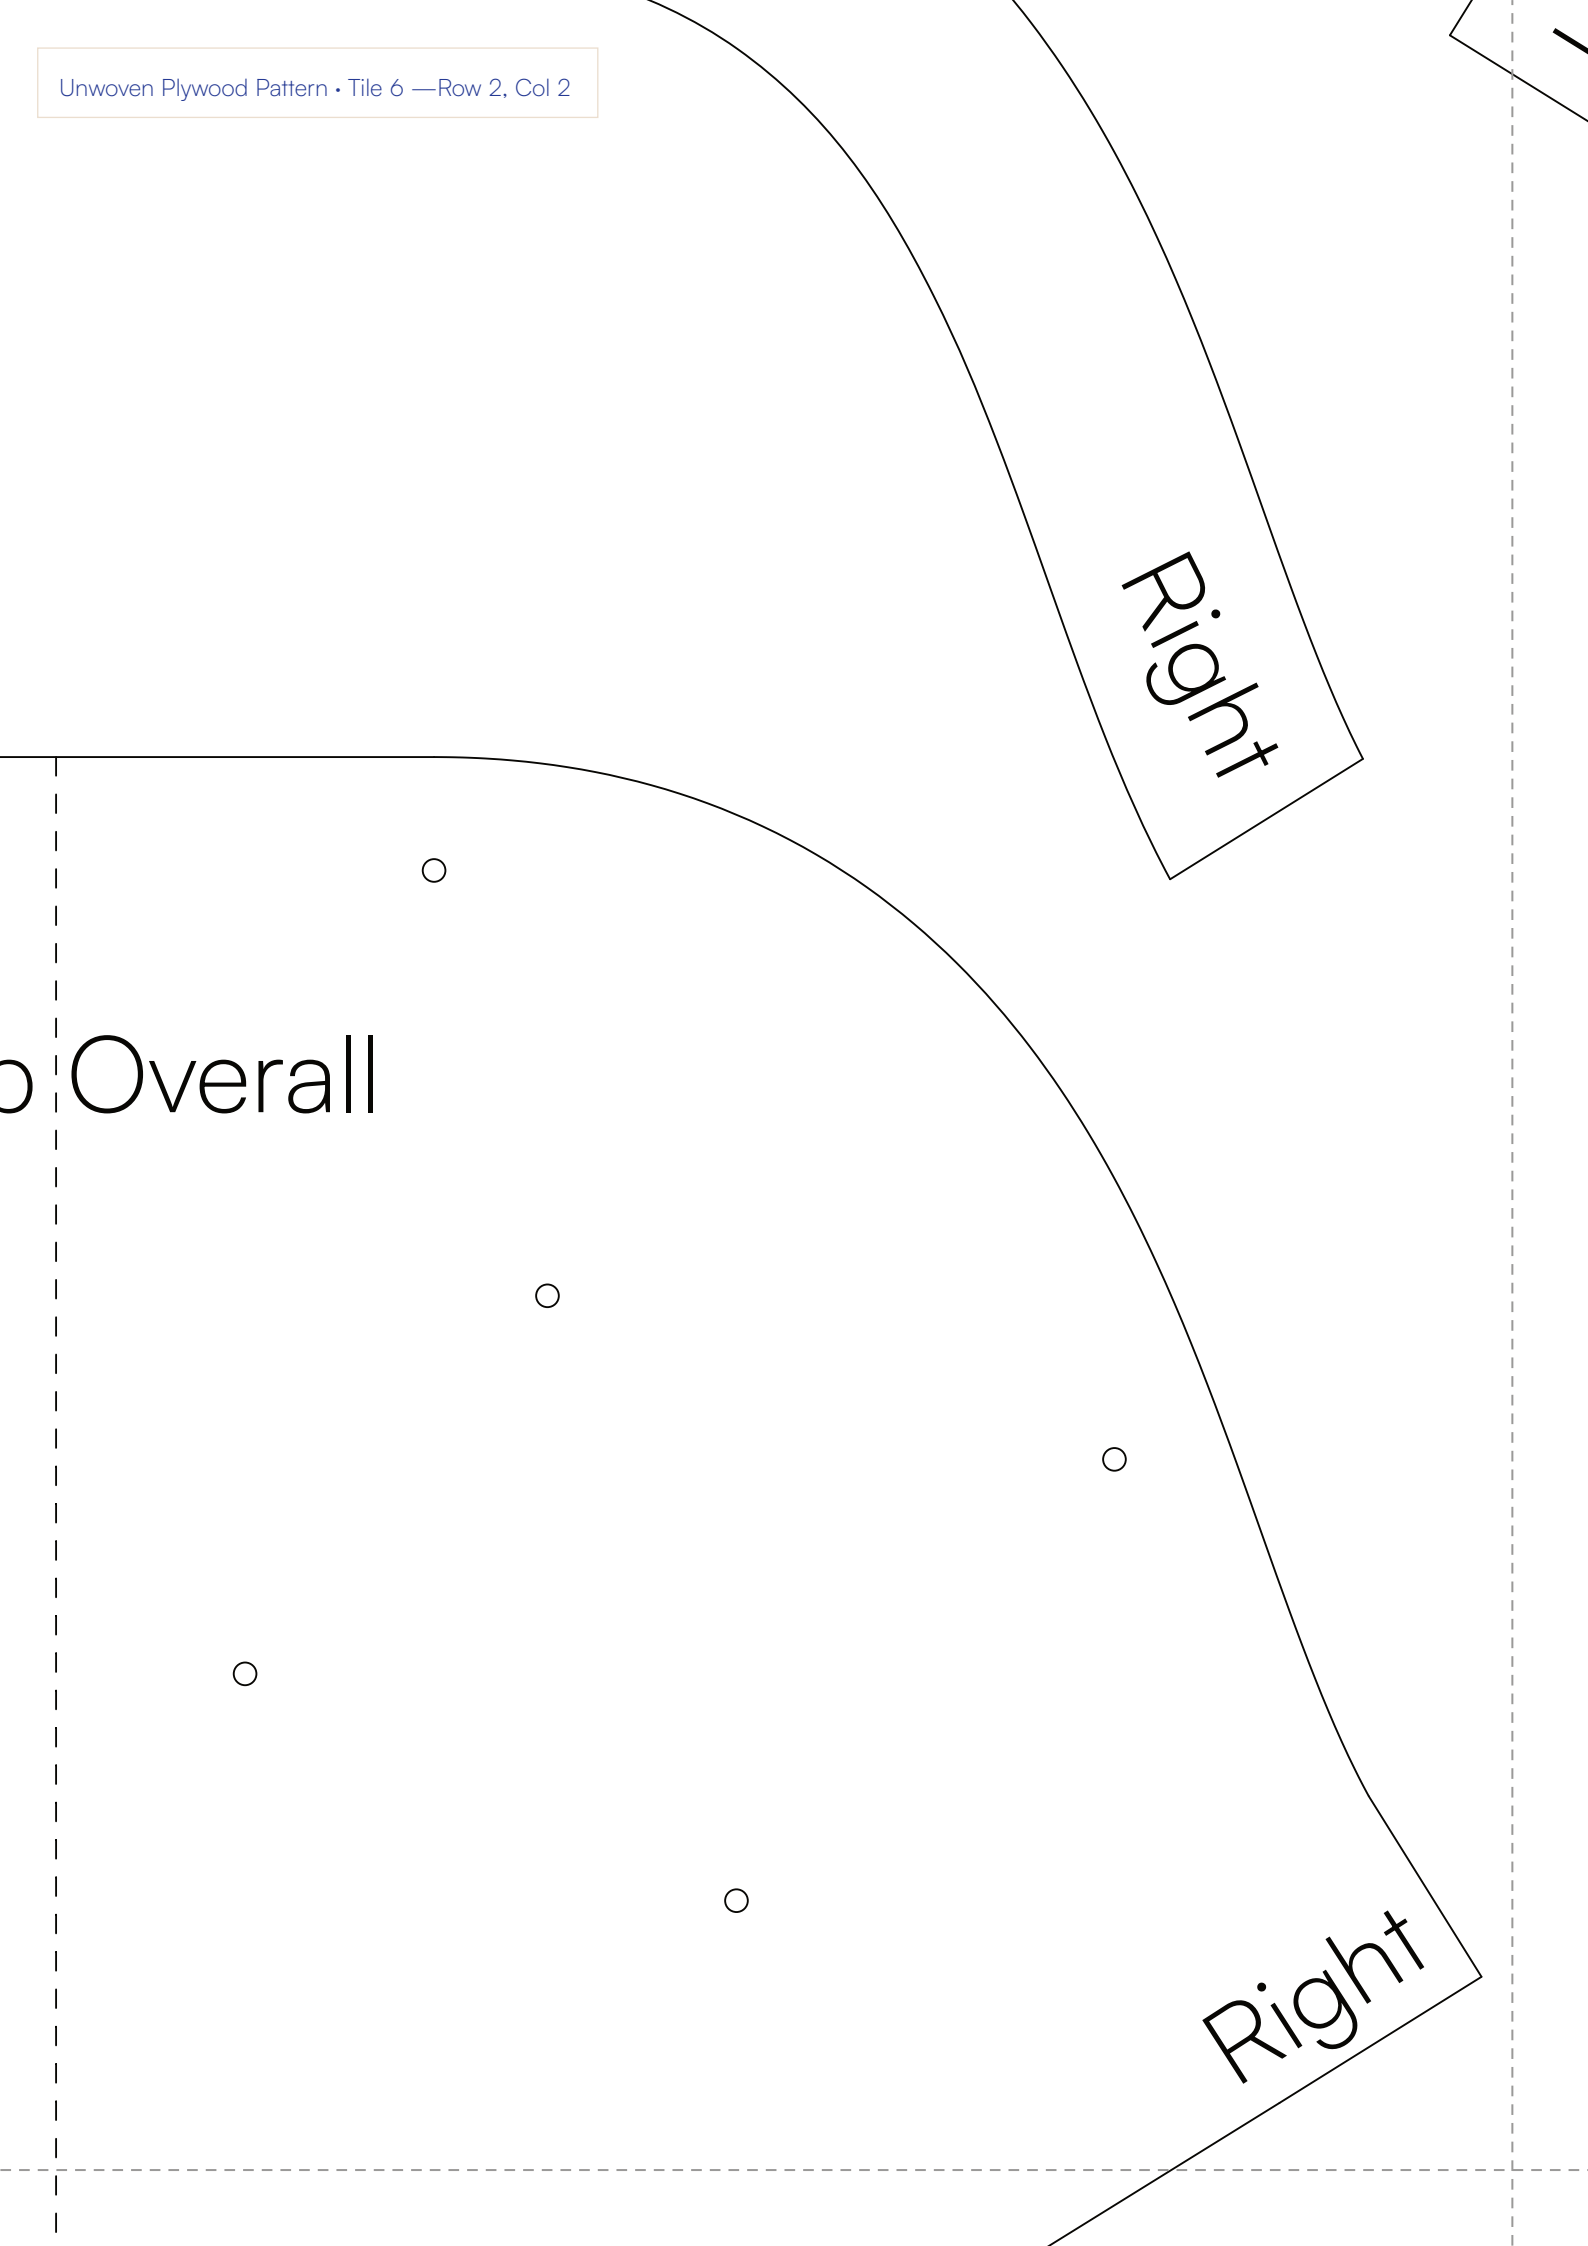

Outer

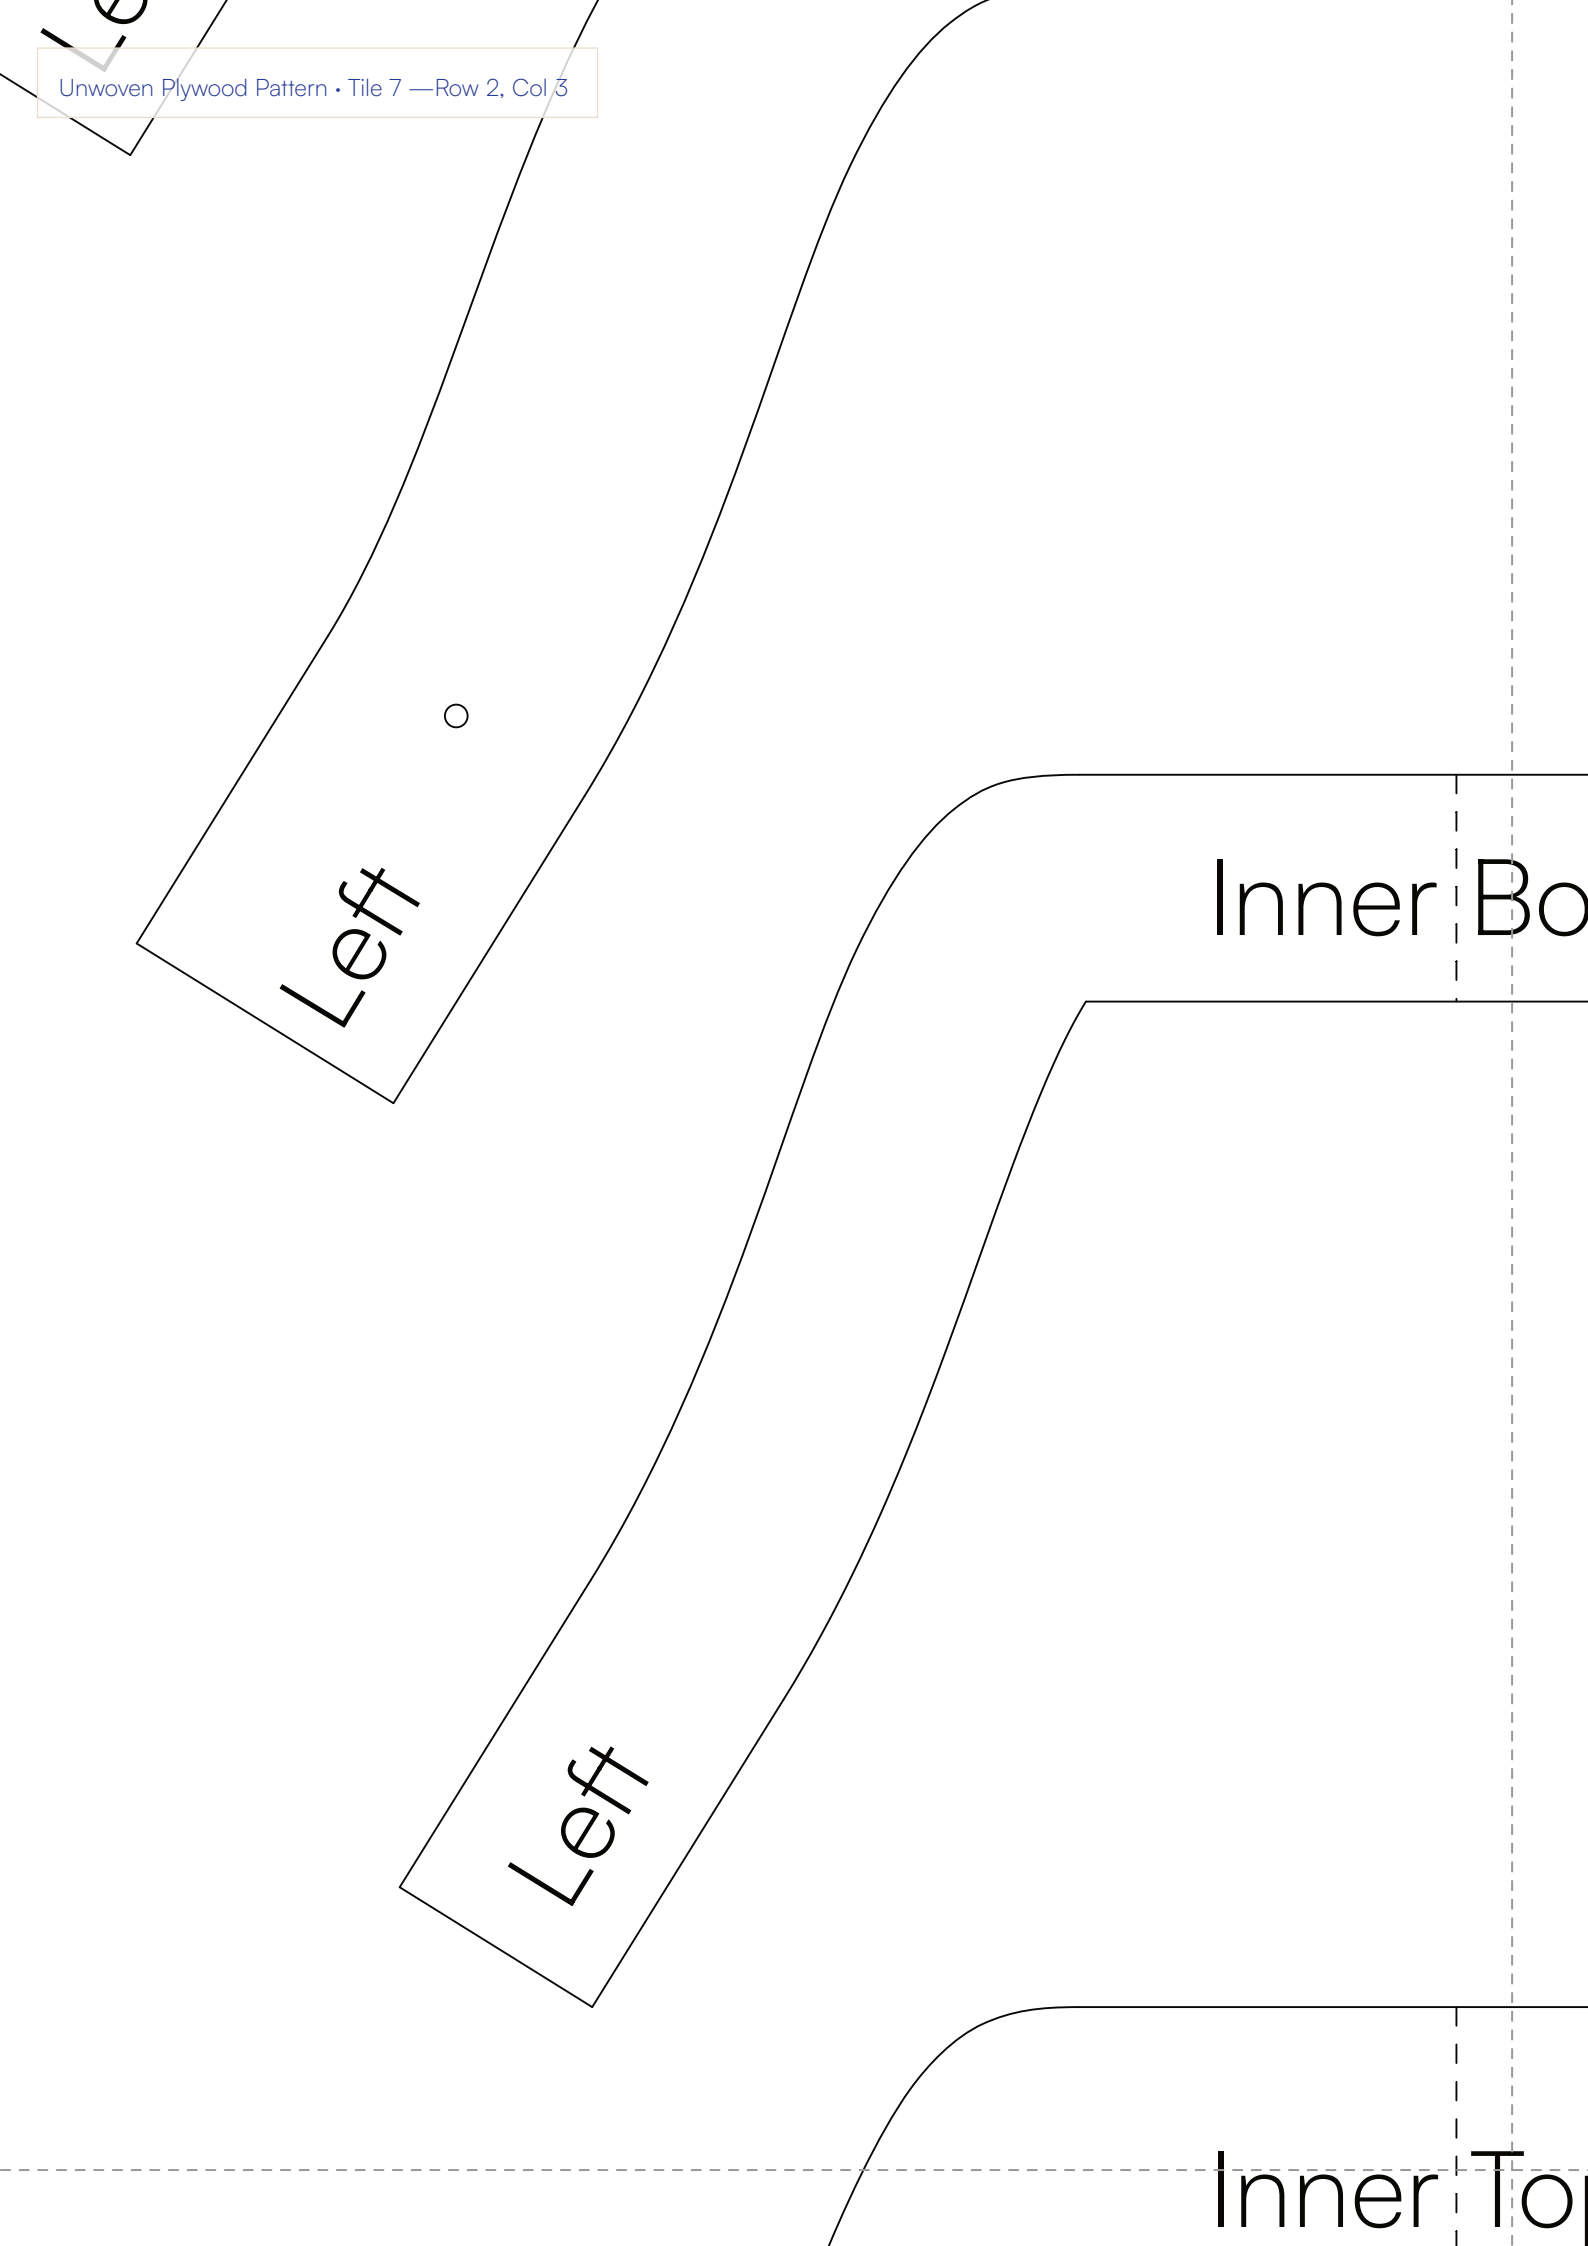

n Overall
Right
r Top

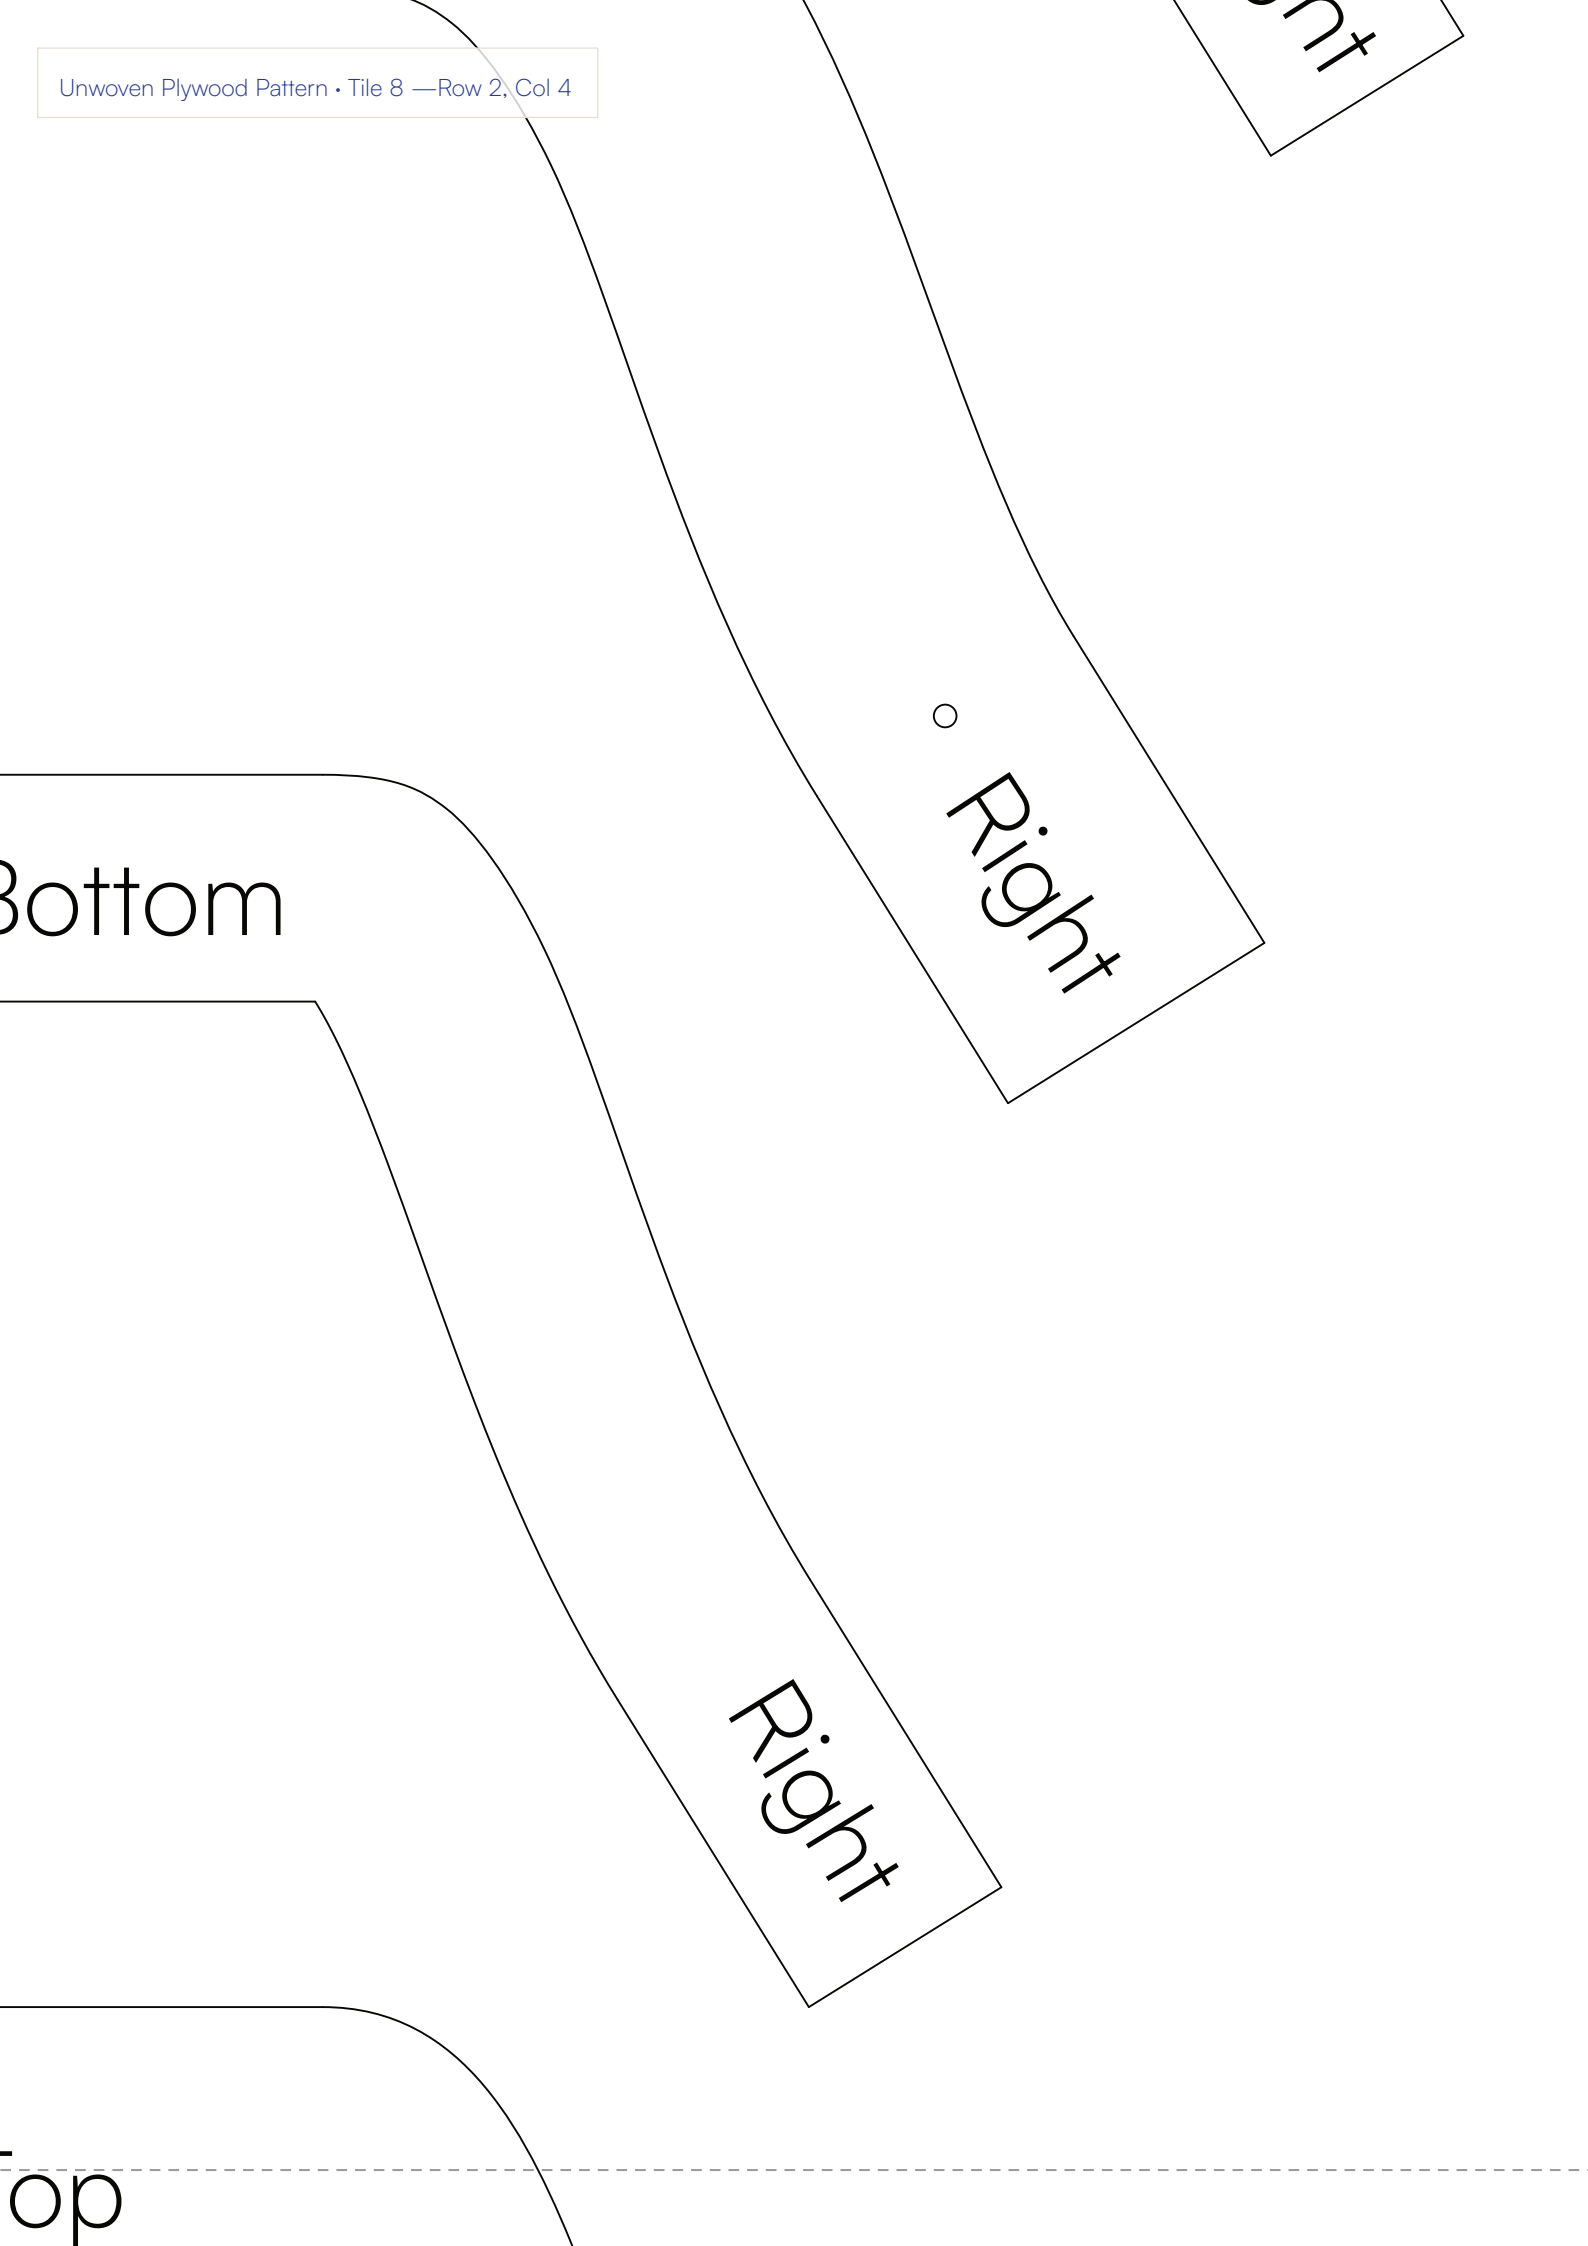

Outer Bo
Bottom Overa
Left

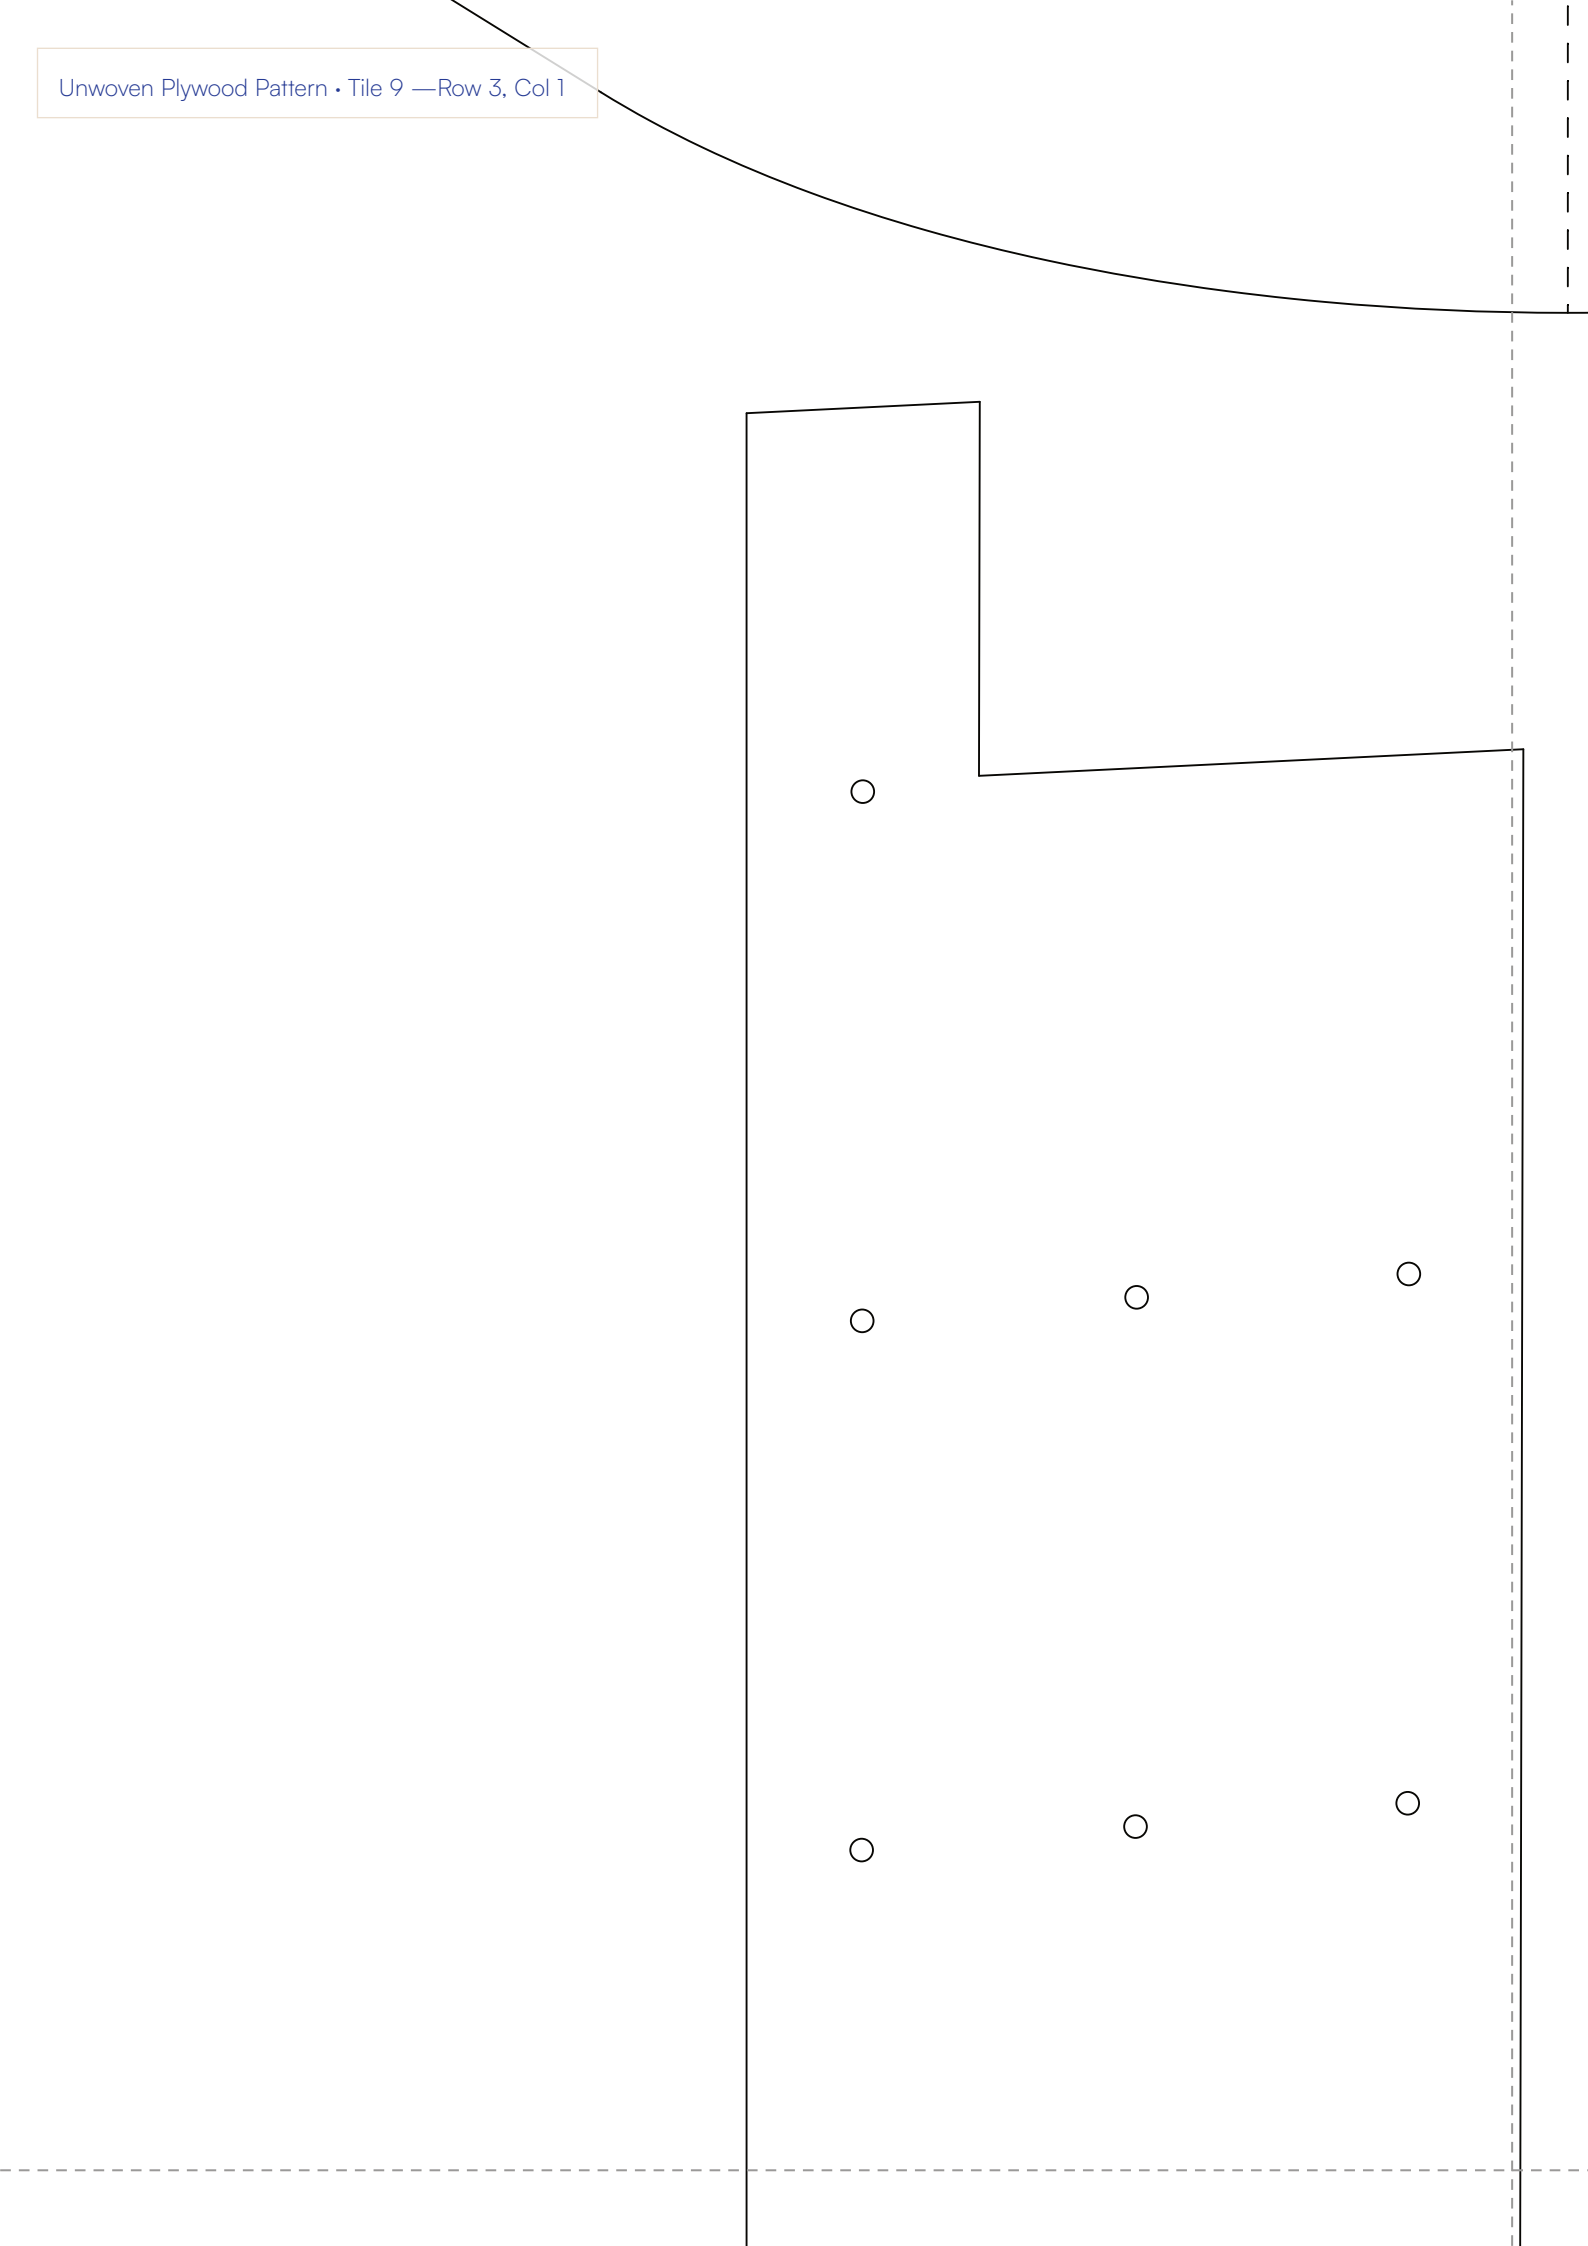

Bottom
rall Insert
Right

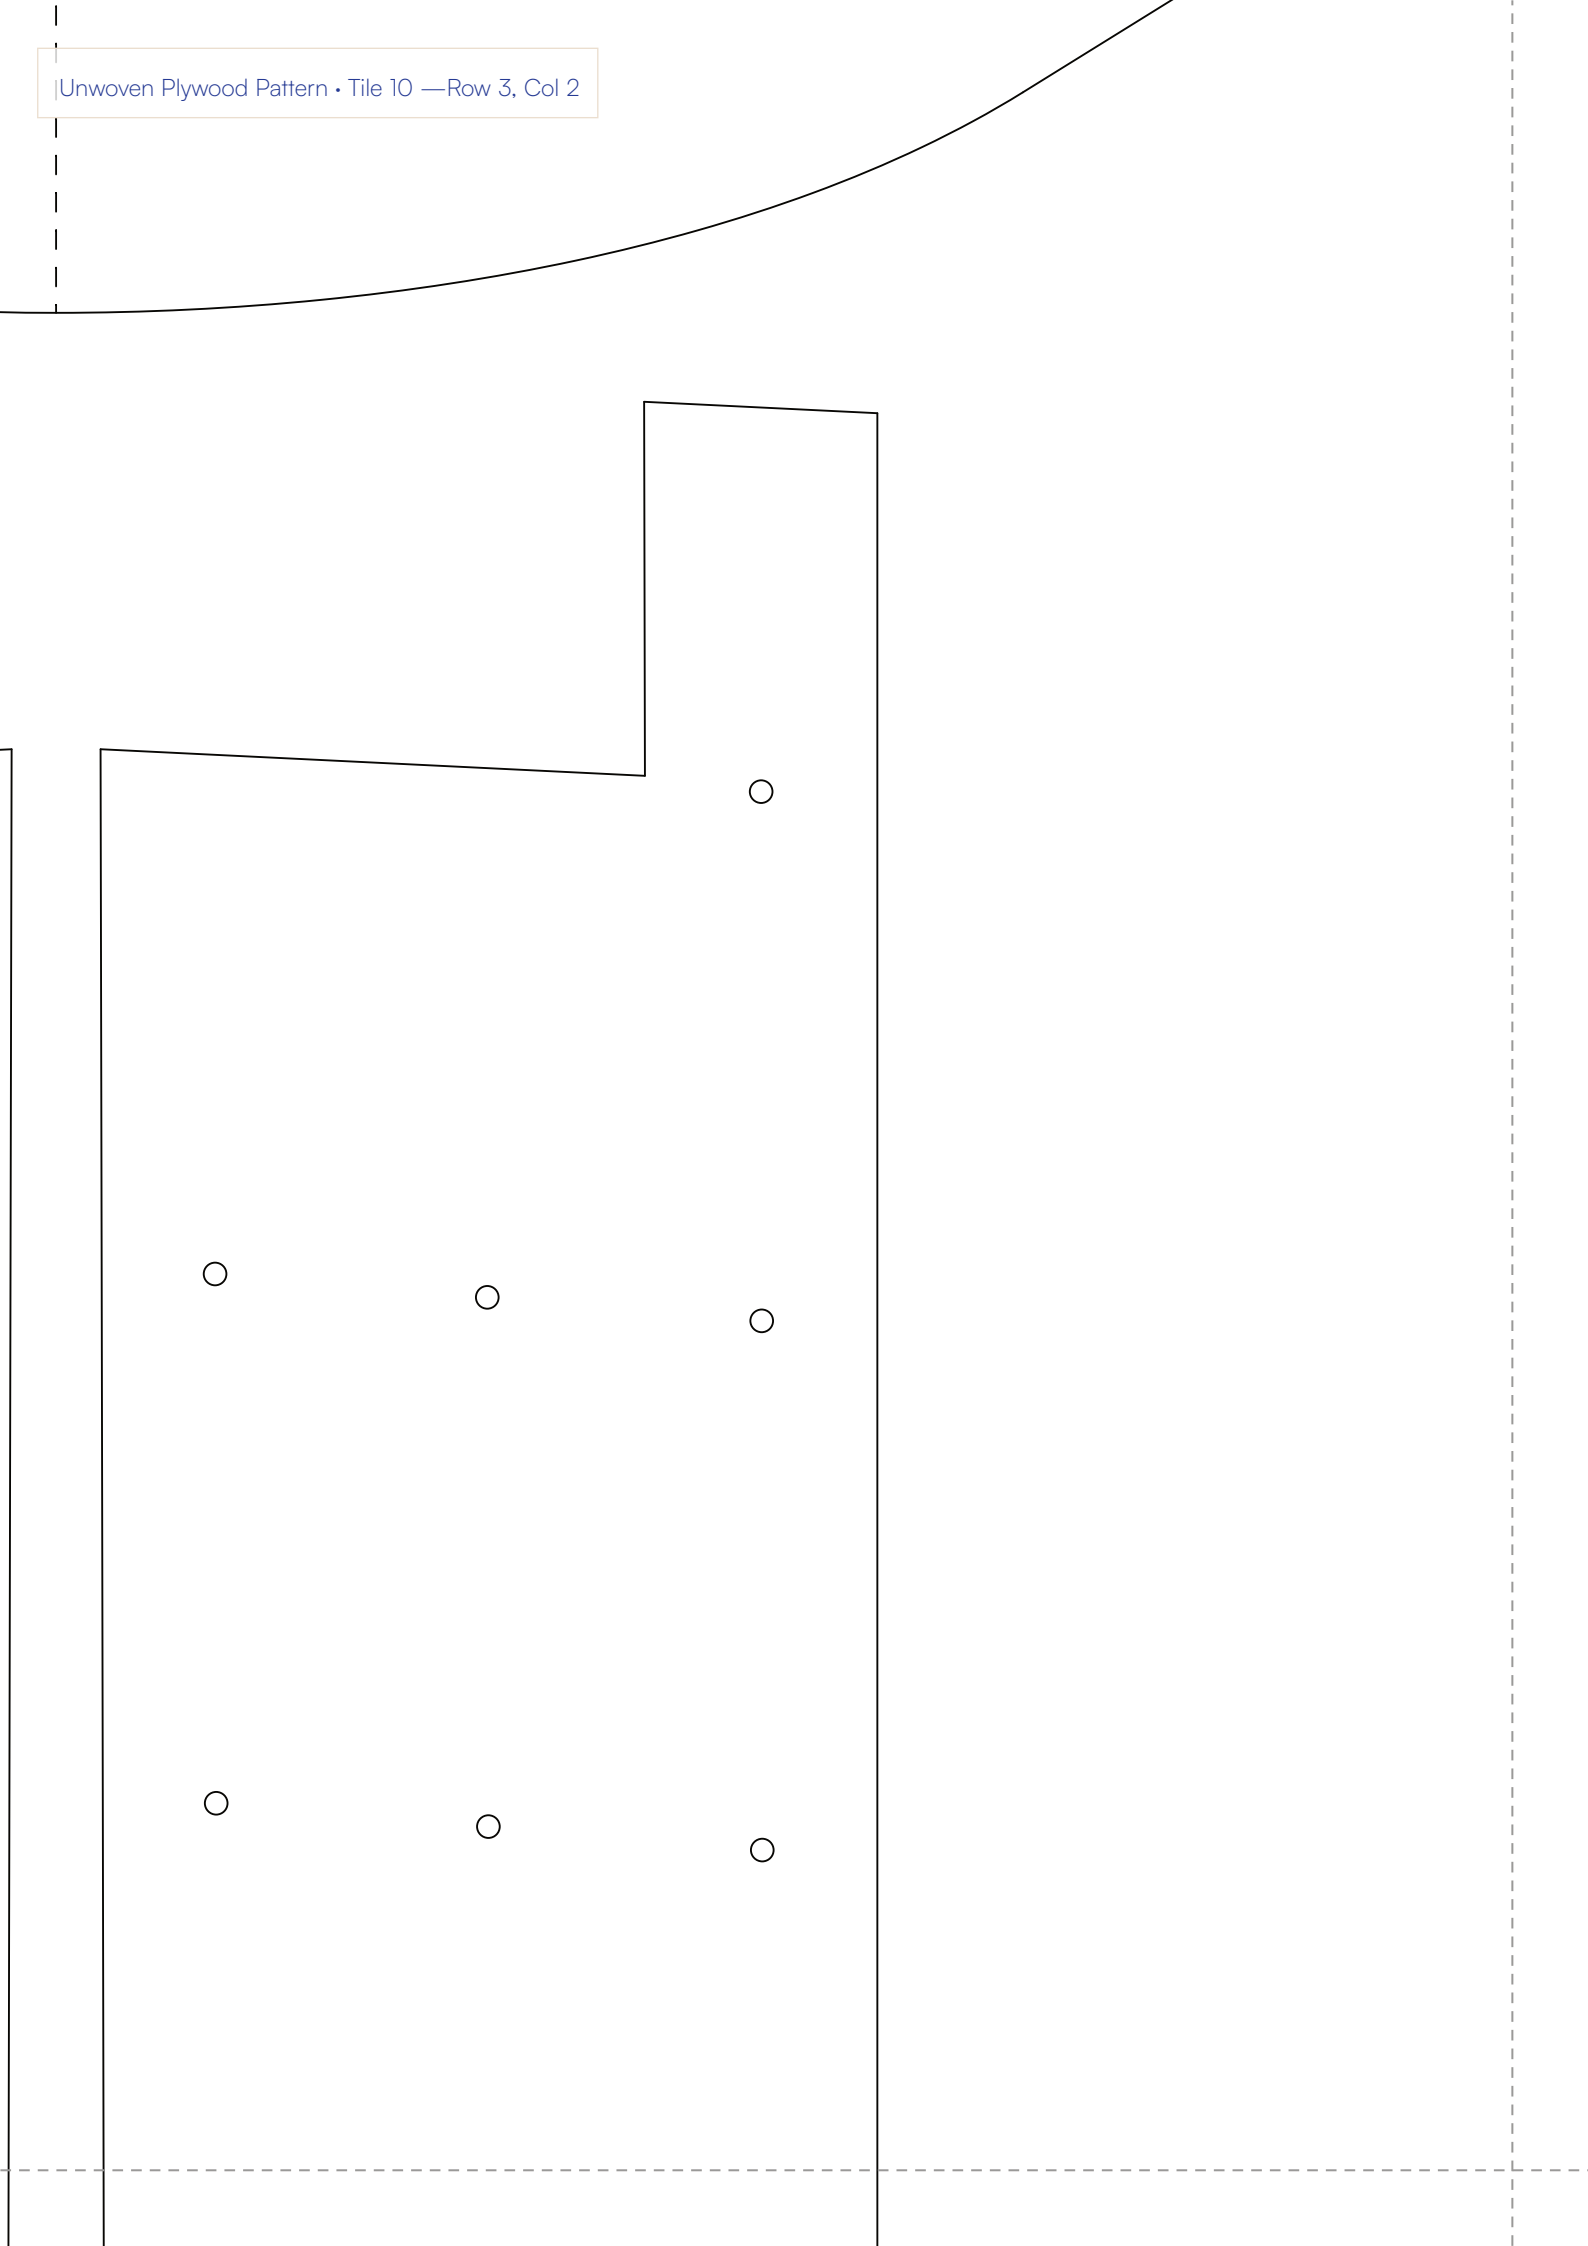

Left
Top
Left

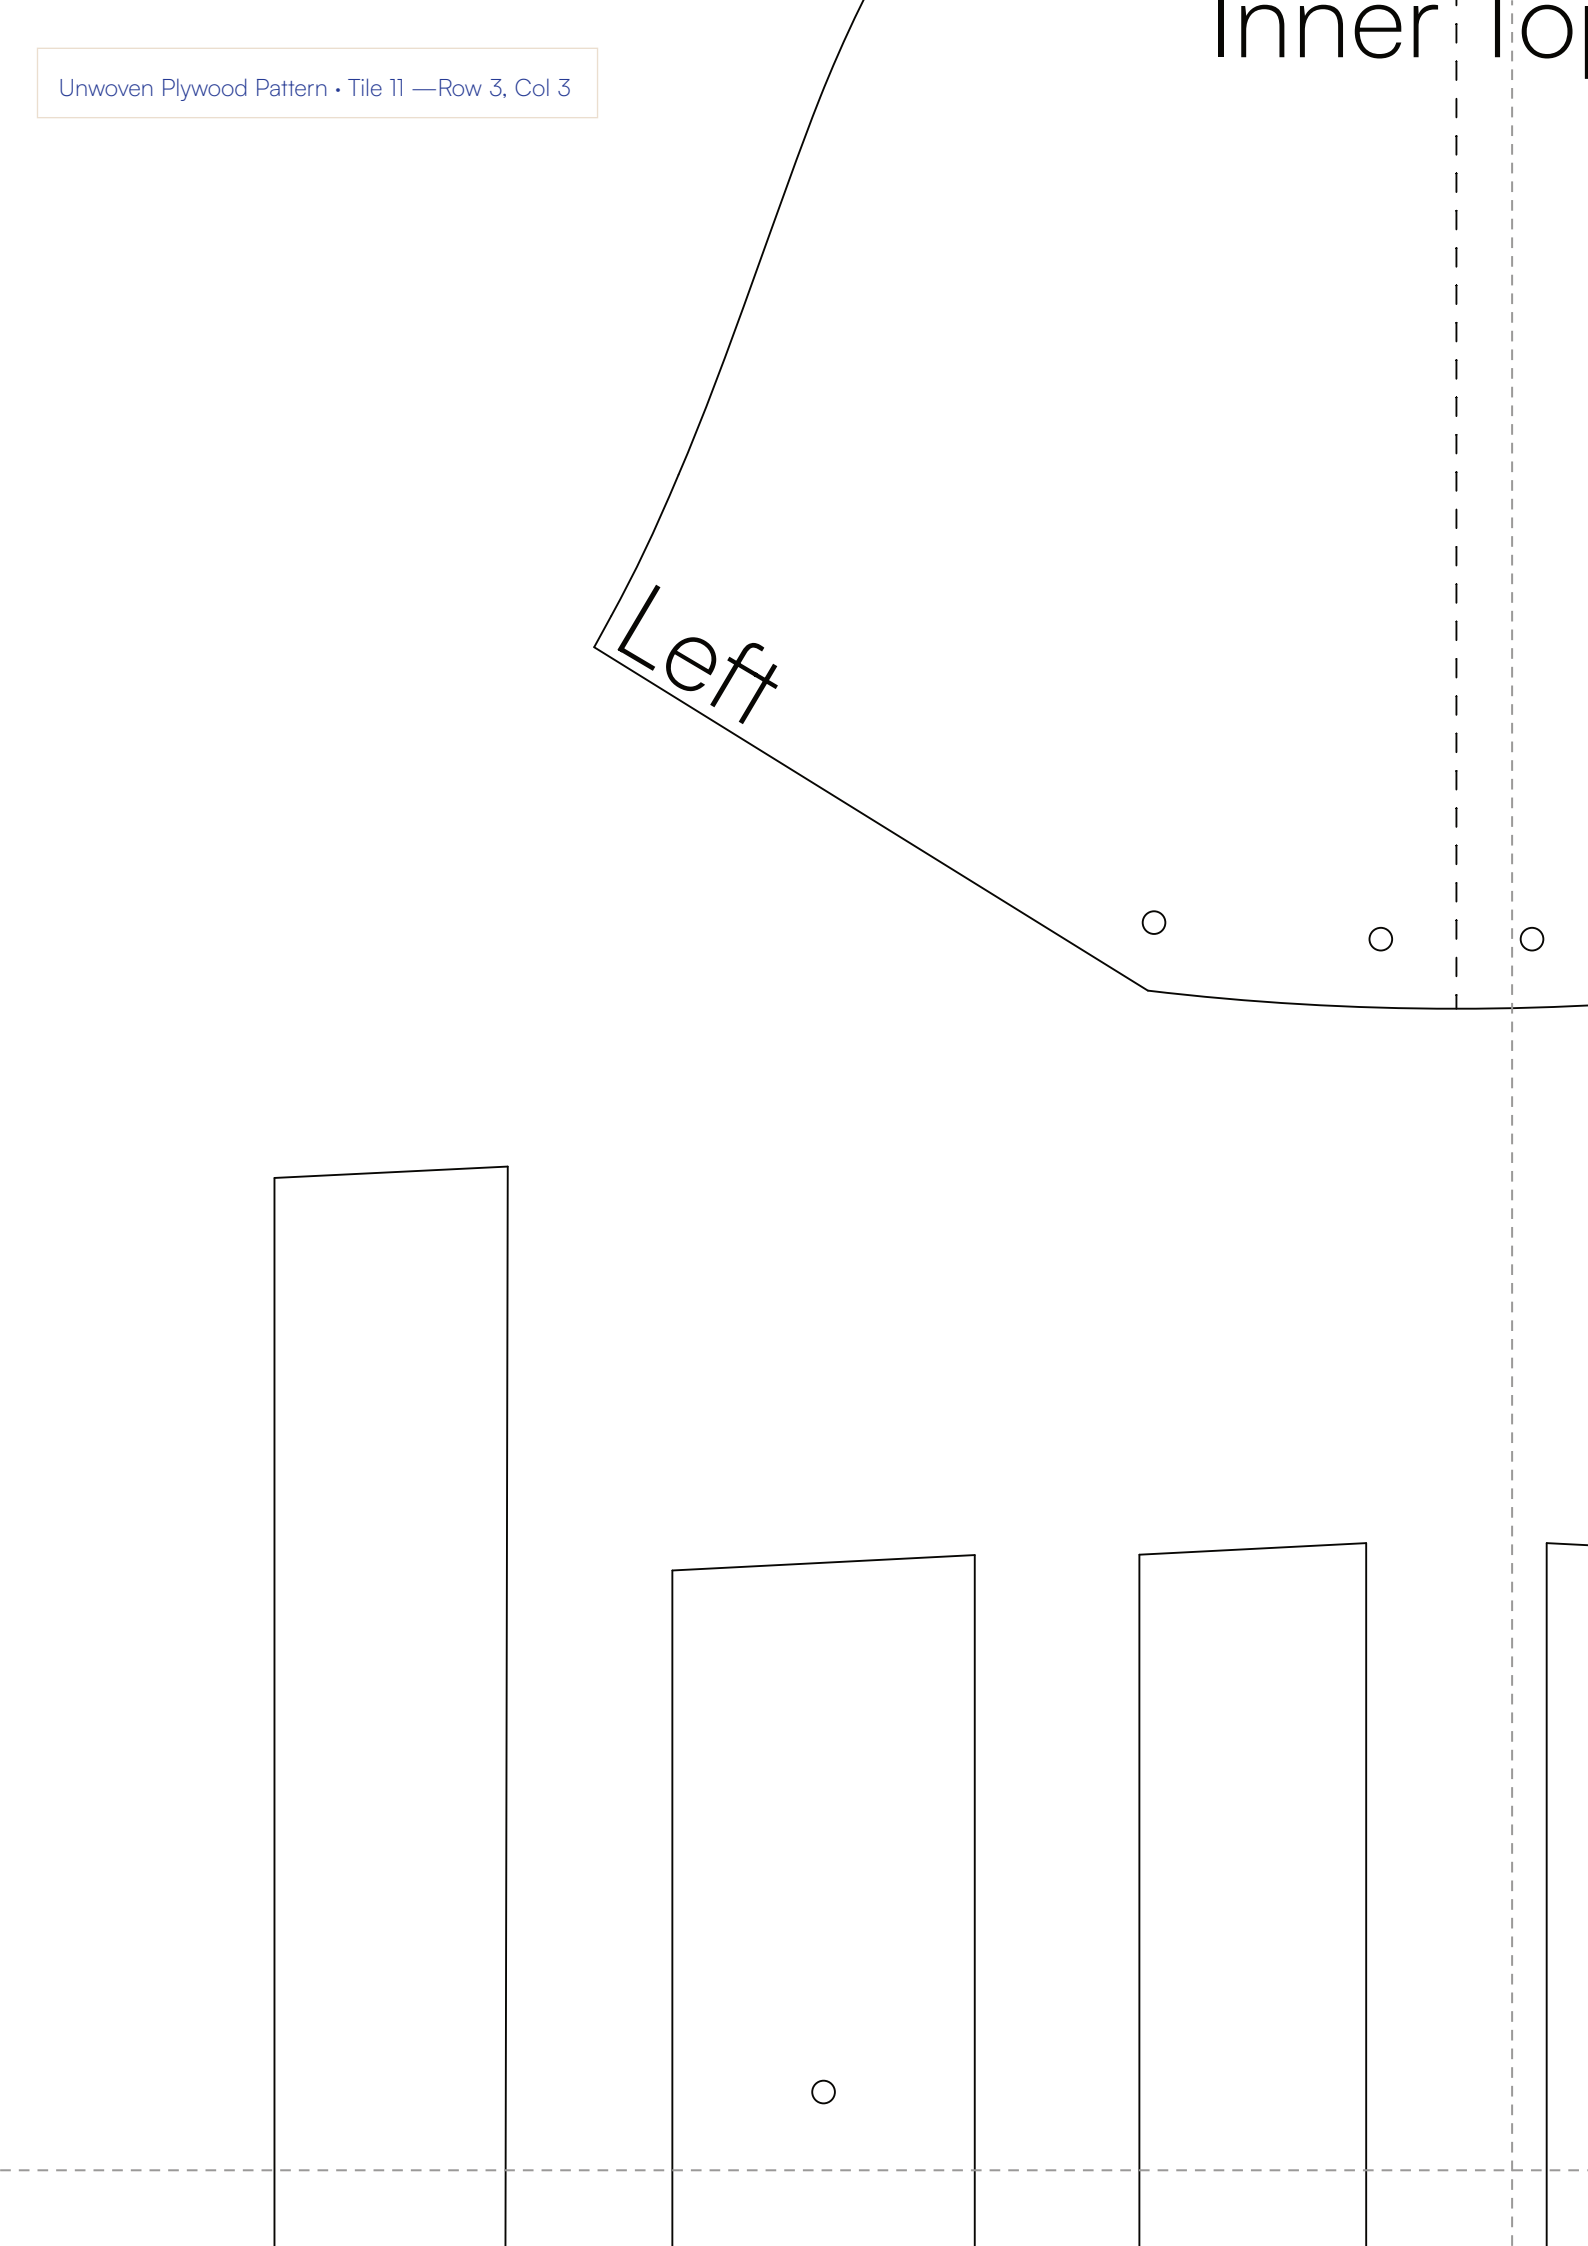

Right
o Overall
Right

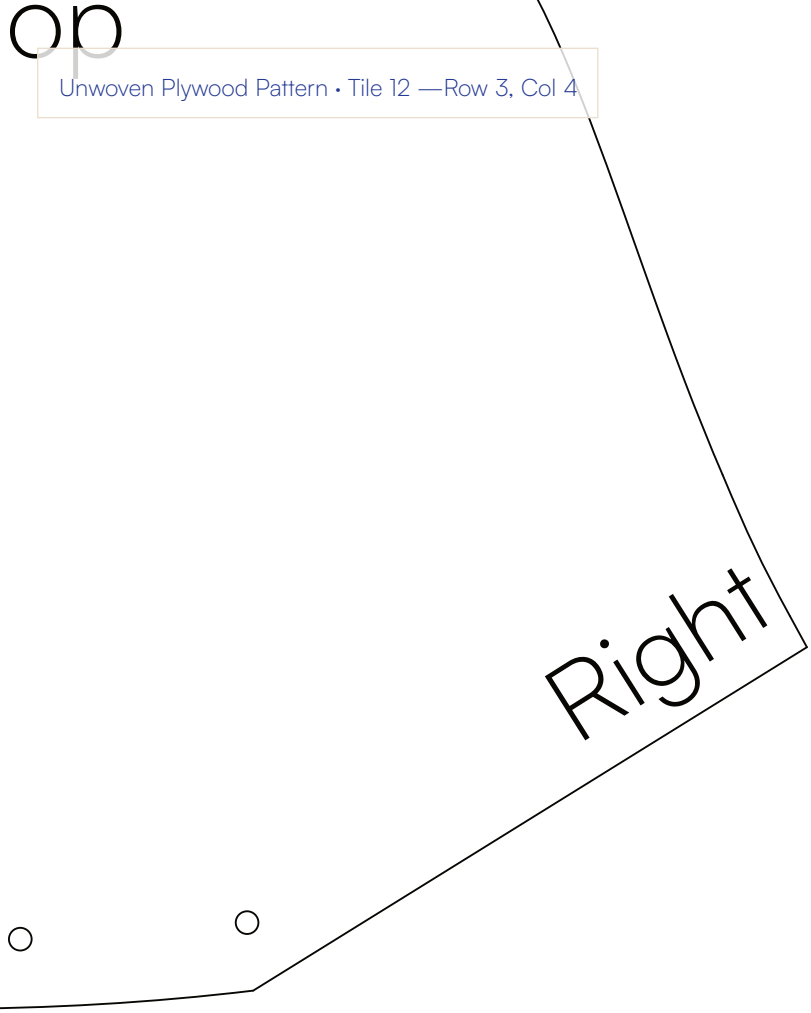

Left
Left
Inner Bo
Inner To

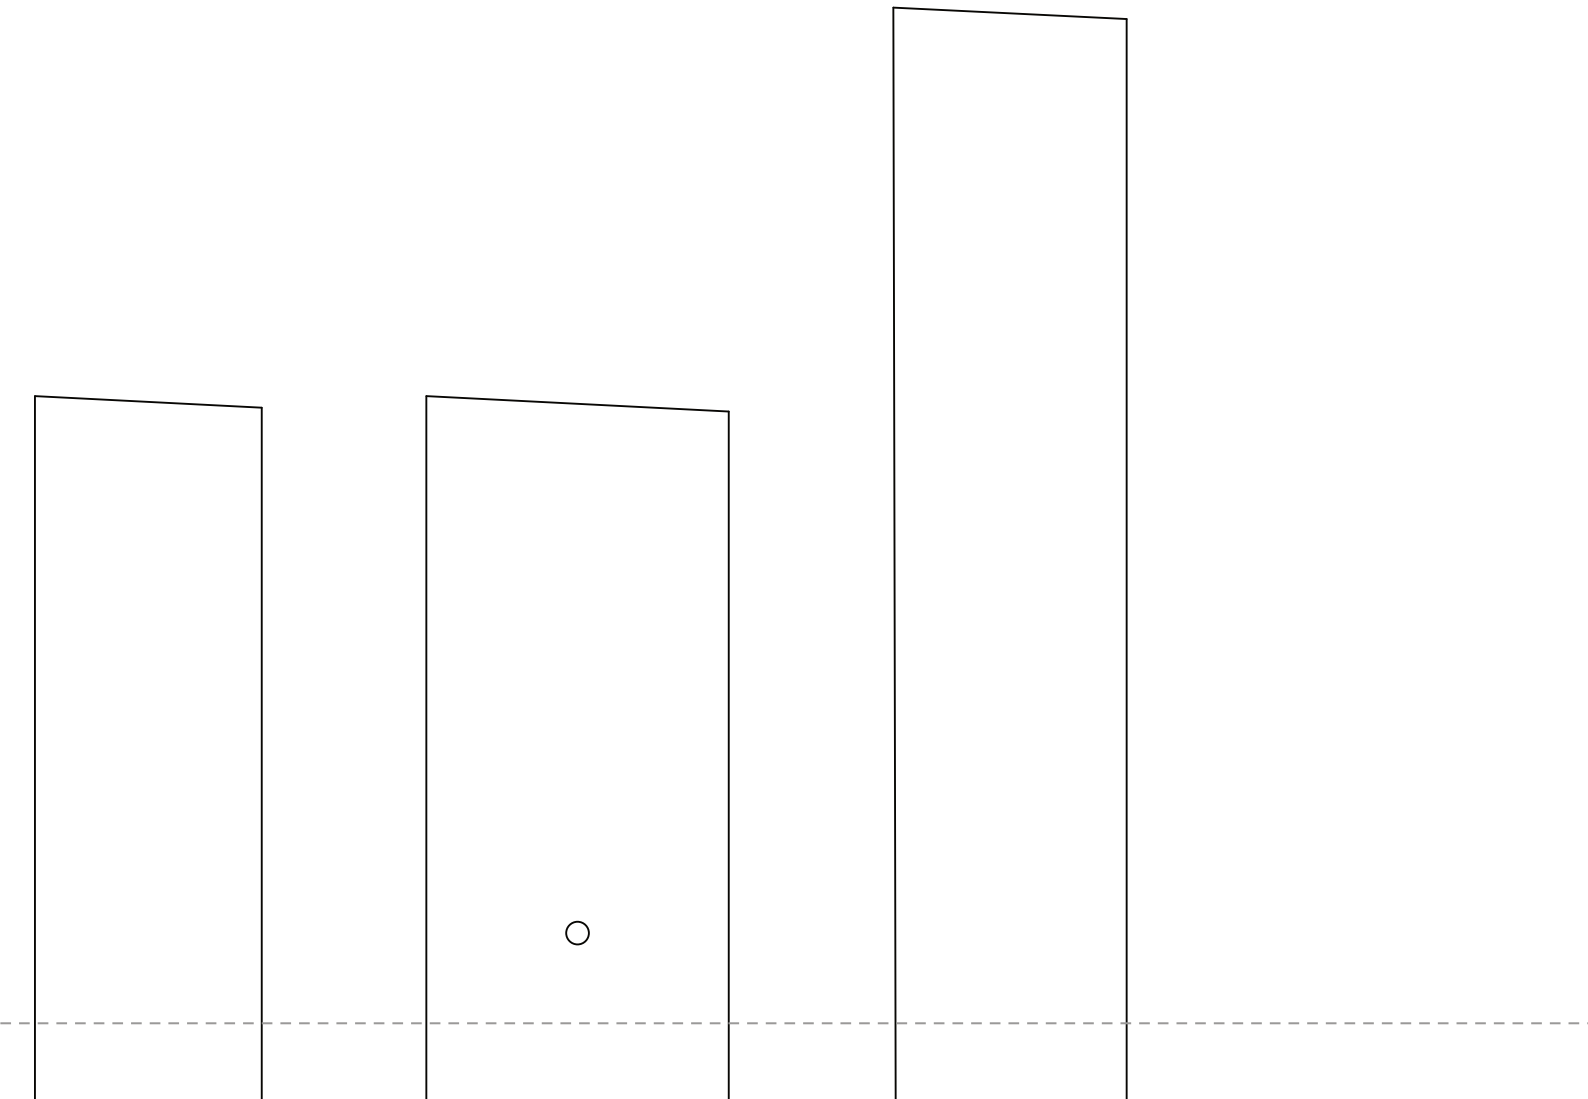

Right
Bottom
Right
op

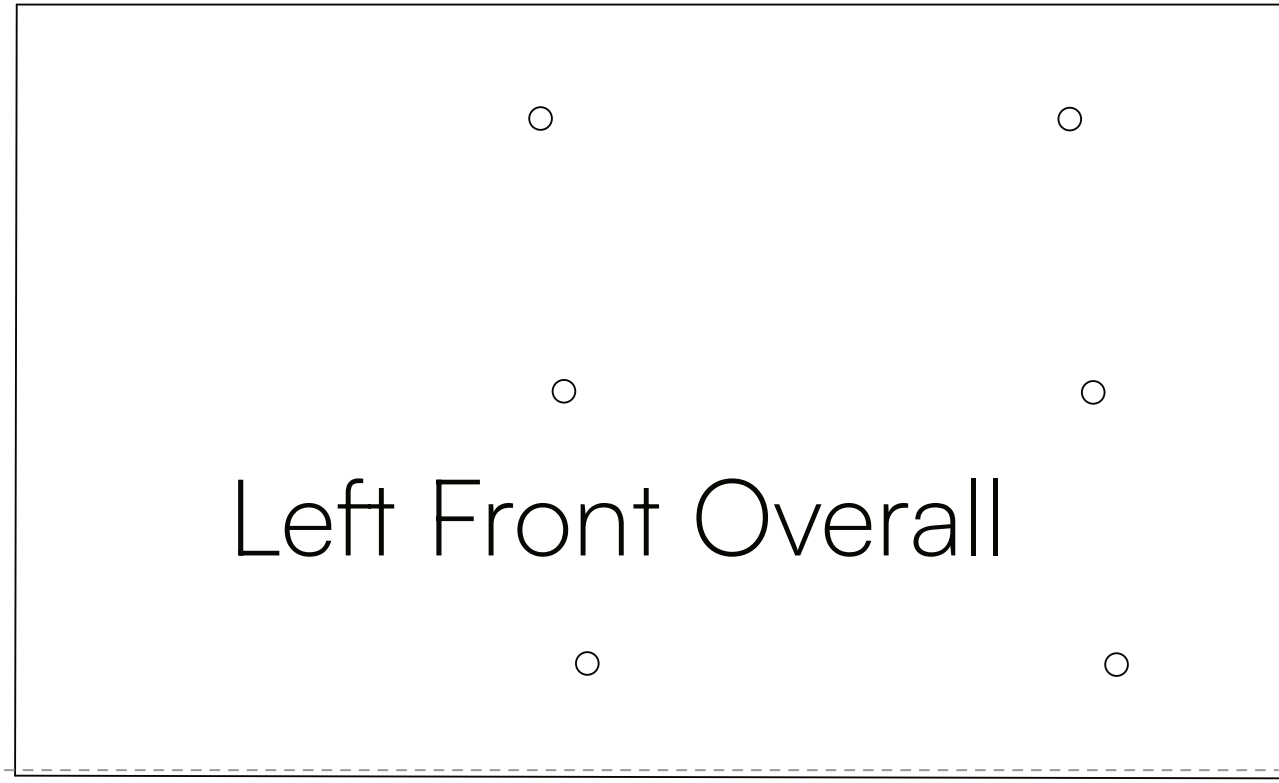


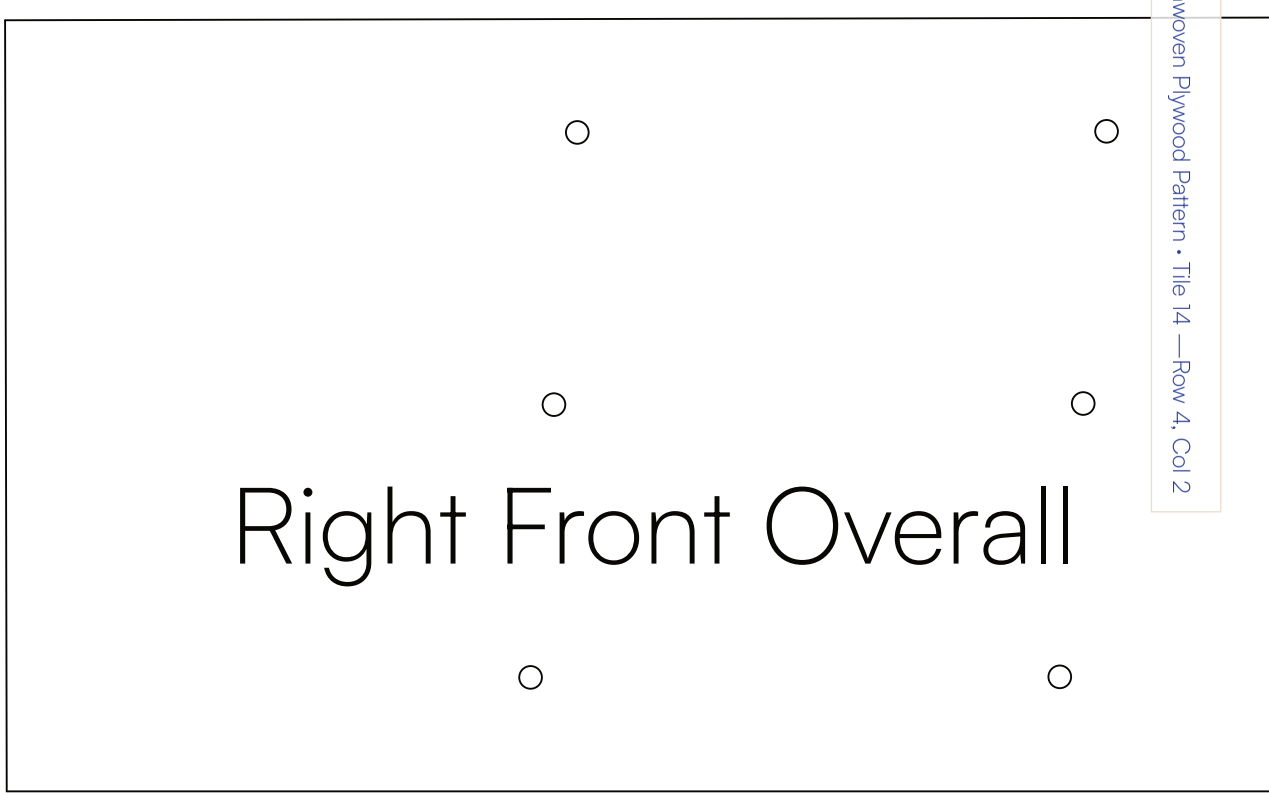



Inner Top
Left


Right




Left Front Overall


Right Front Overall

Left Outer Front

Left Front Overall Insert

Left Inner Front

Right Inner Front

Right Overall Front Insert

Right Outer Front

Unwoven

Plywood Pattern

Important Information:

This pattern is designed to be used in conjuction with the Unwoven Foam pattern for the purpose of building a mould for an Unwoven stool.

The pattern tiles should be taped together and attached to a 12mm sheet of plywood.

All indicated holes are 3mm in diameter and should be drilled all the way through the sheet. These are pilot holes that will make assembling the mould much easier later on.

It is recommended to score any centrelines (marked with a dashed line) with a knife and a ruler. This will make it easier to line up parts when assembling

Please refer to the instruction booklet (available on Github) for more detailed information.

