

Dreamcast GNUPro™ Toolkit Debugging Tool

Debugging with GDB GDB GUI GDBtk

Important Information

This documentation has been provided courtesy of CYGNUS. The contents are applicable to GNUPro $^{\text{TM}}$ Toolkit development, however, all references to development support offered by CYGNUS should be ignored.

Technical support for this product as it applies to the Sega Dreamcast™ development environment should be directed to Sega Third Party Developer Technical Support at 415/701-4060. Future updates and/or additional information may also be found at Sega's DTS Website at, http://www.dts.sega.com/NextGen

Copyright © 1991-1998 Cygnus.

All rights reserved.

GNUPro[™], the GNUPro[™] logo and the Cygnus logo are all trademarks of Cygnus.

All other brand and product names are trademarks of their respective owners.

Permission is granted to make and distribute verbatim copies of this documentation, provided the copyright notice and this permission notice are preserved on all copies.

Permission is granted to copy and distribute modified versions of this documentation under the conditions for verbatim copying, provided also that the entire resulting derived work is distributed under the terms of a permission notice identical to this one.

Permission is granted to copy and distribute translations of this documentation into another language, under the above conditions for modified versions.

This documentation has been prepared by Cygnus Technical Publications; contact the Cygnus Technical Publications staff: doc@cygnus.com.

Part #: 300-400-1010043

GNUPro warranty

The GNUPro Toolkit is free software, covered by the GNU General Public License, and you are welcome to change it and/or distribute copies of it under certain conditions. This version of GNUPro Toolkit is supported for customers of Cygnus.

For non-customers, GNUPro Toolkit software has NO WARRANTY.

Because this software is licensed free of charge, there are no warranties for it, to the extent permitted by applicable law. Except when otherwise stated in writing, the copyright holders and/or other parties provide the software "as is" without warranty of any kind, either expressed or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. The entire risk as to the quality and performance of the software is with you. Should the software prove defective, you assume the cost of all necessary servicing, repair or correction.

In no event, unless required by applicable law or agreed to in writing, will any copyright holder, or any other party who may modify and/or redistribute the program as permitted above, be liable to you for damages, including any general, special, incidental or consequential damages arising out of the use or inability to use the program (including but not limited to loss of data or data being rendered inaccurate or losses sustained by you or third parties or a failure of the program to operate with any other programs), even if such holder or other party has been advised of the possibility of such damages.

How to contact Cygnus

Use the following means to contact Cygnus.

```
Cygnus Headquarters
```

1325 Chesapeake Terrace

Sunnyvale, CA 94089 USA

Telephone (toll free): +1 800 CYGNUS-1 Telephone (main line): +1 408 542 9600 Telephone (hotline): +1 408 542 9601

FAX: +1-408 542 9699

(Faxes are answered 8 a.m.–5 p.m., Monday through Friday.)

email: info@cygnus.com Website: www.cygnus.com.

Cygnus United Kingdom

36 Cambridge Place Cambridge CB2 1NS

United Kingdom

Telephone: +44 1223 728728 FAX: +44 1223 728728

email: info@cygnus.co.uk/

Cygnus Japan

Nihon Cygnus Solutions Madre Matsuda Building 4-13 Kioi-cho Chiyoda-ku

Tokyo 102-0094

Telephone: +81 3 3234 3896 FAX: +81 3 3239 3300 email: info@cygnus.co.jp

Website: http://www.cygnus.co.jp/

Use the hotline (+1 408 542 9601) to get help, although the most reliable way to resolve problems with GNUPro Toolkit is by using email:

bugs@cygnus.com.

Contents

GNUPro warranty	iii
How to contact Cygnus	iv
Debugging with GDB	
Summary of the GNU Debugger, GDB	3
GDB as free software	5
Contributors to GDB	6
Installing GDB	
Compiling GDB in another directory	11
Specifying names for hosts and targets	
configure options	13
Getting In and Out of GDB	
Invoking GDB	16
Choosing files	
Choosing modes	19
Quitting GDB	
Shell commands	
GDB Commands	23
Command syntax	24
Command completion	
Getting help	

Running programs under GDB	31
Compiling for debugging	32
Starting your program	33
Your program's arguments	35
Your program's environment	36
Your program's working directory	38
Your program's input and output	39
Debugging an already-running process	40
Killing the child process	41
Additional process information	42
Debugging programs with multiple threads	43
Debugging programs with multiple processes	46
Stopping and continuing	47
Breakpoints, watchpoints, and exceptions	49
Setting breakpoints	
Setting watchpoints	
Breakpoints and exceptions	
Deleting breakpoints	
Disabling breakpoints	
Break conditions	
Breakpoint command lists	61
Breakpoint menus	
Continuing and stepping	64
Signals	67
Stopping and starting multi-thread programs	
Examining the stack	71
Stack frames	72
Backtraces	73
Selecting a frame	74
Information about a frame	76
Examining source files	79
Printing source lines	80
Searching source files	
Specifying source directories	83
Source and machine code	84
Examining data	87
Expressions	88
Program variables	
Artificial arrays	

Output formats	92
Examining memory	93
Automatic display	95
Print settings	97
Value history	102
Convenience variables	103
Registers	
Floating point hardware	107
Using GDB with different languages	119
Switching between source languages	120
List of filename extensions and languages	120
Setting the working language	121
Having GDB infer the source language	121
Displaying the language	122
Type and range checking	123
An overview of type checking	123
An overview of range checking	
Supported languages	126
Examining the symbol table	141
Altering execution	145
Assignment to variables	
Continuing at a different address	
Giving your program a signal	148
Returning from a function	
Calling program functions	150
Patching programs	151
GDB files	153
Commands to specify files	154
Errors reading symbol files	159
Specifying a debugging target	163
Active targets	164
Commands for managing targets	165
Choosing target byte order	
Remote debugging	169
The GDB remote serial protocol	170
What the stub can do for you	171
What you must do for the stub	
Putting it all together	174
Communication protocol	175

Using the gdbserver program	176
Using the gdbserve.nlm program	178
GDB with a remote i960 (Nindy)	
The UDI protocol for AMD29K	180
GDB with a Tandem ST2000	
GDB and VxWorks	184
GDB and SPARClet	186
Connecting to SPARClet	187
SPARClet download	187
GDB and Hitachi microprocessors	188
GDB and remote MIPS boards	189
Controlling GDB	193
Prompt	194
Command editing	
Command history	196
Screen size	198
Numbers	199
Optional warnings and messages	200
Canned sequences of commands	215
User-defined commands	216
User-defined command hooks	218
Command files	
Commands for controlled output	220
Using GDB under GNU Emacs	
Reporting Bugs in GDB	227
Have you found a bug?	
How to report bugs	
Command Line Editing	
Introduction to Line Editing	
Readline Interaction	
Readline Bare Essentials	
Readline Movement Commands	
Readline Killing Commands	
Readline Arguments	
Readline Init File	
Readline Init Syntax	
Letting Readline Type For You	
Readline vi Mode	

Using History Interactively	247
History Interaction	248
Event Designators	
Word Designators	248
Modifiers	249
Formatting Documentation	251
Btk	
Licensing for GDBtk	257
Introduction to GDBtk	259
Interface for GDBtk	261
Source Window	262
Menu bar for the Source Window	264
Toolbar buttons	267
Special display pane features	271
Using the mouse in the display pane	272
Below the horizontal scroll bar	274
Dialog boxes for the Source Window	276
Load New Executable dialog box for the Source Window	276
Page Setup dialog box for the Source Window	272
Print dialog box for the Source Window	278
Target selection from the Source Window	279
Global Preferences dialog box for the Source window	282
Source Preferences dialog box for the Source window	283
Stack window	284
Registers window	285
Register menu for the Register window	286
Memory window	287
Address menu for the Memory window	282
Watch Expressions window	290
Add Watch button for the Watch Expressions window	292
Watching registers with the Watch Expressions window	292
Casting pointers in the Watch Expressions window	
Local Variables window	
Breakpoints window	
Breakpoint menu for the Breakpoints window	
Global menu for the Breakpoints window	
Console window	
Help window	298

Contents

File menu for the Help window
Topics menu for the Help window
Procedures
Initializing a target executable file
Selecting a source file
Setting breakpoints and viewing local variables
· ·
••••••

Debugging with GDB

July, 1998 98r1 Copyright © 1991-1998 Cygnus.

All rights reserved.

GNUPro[™], the GNUPro[™] logo and the Cygnus logo are all trademarks of Cygnus.

All other brand and product names are trademarks of their respective owners.

Permission is granted to make and distribute verbatim copies of this documentation, provided the copyright notice and this permission notice are preserved on all copies.

Permission is granted to copy and distribute modified versions of this documentation under the conditions for verbatim copying, provided also that the entire resulting derived work is distributed under the terms of a permission notice identical to this one.

Permission is granted to copy and distribute translations of this documentation into another language, under the above conditions for modified versions.

This documentation has been prepared by Cygnus Technical Publications; contact the Cygnus Technical Publications staff: doc@cygnus.com.

2 Debugging with GDB



Summary of the GNU Debugger, **GDB**

The purpose of a debugger such as the GNU debugger, GDB, is to allow you to see what is going on *inside* another program while it executes—or what another program was doing at the moment it crashed. GDB can do four main kinds of things to help you catch bugs.

- Start your program, specifying anything that might affect its behavior.
- Make your program stop on specified conditions.
- Examine what has happened, when your program has stopped.
- Change things in your program, so you can experiment with correcting the effects of one bug and go on to learn about another problem affecting your program.

The following documentation provides more details about the GNU debugger, GDB.

- "Installing GDB" on page 9
- "Getting In and Out of GDB" on page 15
- "GDB Commands" on page 23
- "Running programs under GDB" on page 31
- "Stopping and continuing" on page 47
- "Examining the stack" on page 71
- "Examining source files" on page 79
- "Examining data" on page 87

- "Using GDB with different languages" on page 119
- "Examining the symbol table" on page 141
- "Altering execution" on page 145
- "GDB files" on page 153
- "Specifying a debugging target" on page 163
- "Controlling GDB" on page 193
- "Canned sequences of commands" on page 215
- "Using GDB under GNU Emacs" on page 223
- "Reporting Bugs in GDB" on page 227
- "Command Line Editing" on page 233
- "Using History Interactively" on page 247
- "Formatting Documentation" on page 251

See also the documentation for the integrated development environment, GDBtk.

- "Introduction to GDBtk" on page 259
- "Interface for GDBtk" on page 261

4 Debugging with GDB

GDB as free software

GDB is free software, protected by the GNU General Public License (GPL). The GPL gives you the freedom to copy or adapt a licensed program—but every person getting a copy also gets with it the freedom to modify that copy (which means that they must get access to the source code), and the freedom to distribute further copies. Typical software companies use copyrights to limit your freedoms; the Free Software Foundation uses the GPL to preserve these freedoms. Fundamentally, the General Public License is a license which says that you have these freedoms and that you cannot take these freedoms away from anyone else. To see the GNU General Public License, see Legal Notices in GNUPro Advanced Topics.

Contributors to GDB

Richard Stallman was the original author of GDB, and of many other GNU programs. Many others have contributed to its development. This section attempts to credit major contributors. One of the virtues of free software is that everyone is free to contribute to it; with regret, we cannot actually acknowledge everyone here. The file 'ChangeLog' in the GDB distribution approximates a blow-by-blow account. Changes much prior to version 2.0 are lost in the mists of time.

NOTE: Additions to this section are particularly welcome. If you or your friends (or enemies, to be evenhanded) have been unfairly omitted from this list, we would like to add your names!

So that they may not regard their long labor as thankless, we particularly thank those who shepherded GDB through major releases: Stan Shebs (release 4.14), Fred Fish (releases 4.13, 4.12, 4.11, 4.10, and 4.9), Stu Grossman and John Gilmore (releases 4.8, 4.7, 4.6, 4.5, and 4.4), John Gilmore (releases 4.3, 4.2, 4.1, 4.0, and 3.9); Jim Kingdon (releases 3.5, 3.4, and 3.3); and Randy Smith (releases 3.2, 3.1, and 3.0). As major maintainer of GDB for some period, each contributed significantly to the structure, stability, and capabilities of the entire debugger.

Richard Stallman, assisted at various times by Peter TerMaat, Chris Hanson, and Richard Mlynarik, handled releases through 2.8.

Michael Tiemann is the author of most of the GNU C++ support in GDB, with significant additional contributions from Per Bothner. James Clark wrote the GNU C++ demangler. Early work on C++ was by Peter TerMaat (who also did much general update work leading to release 3.0).

GDB 4 uses the BFD subroutine library to examine multiple object-file formats; BFD was a joint project of David V. Henkel-Wallace, Rich Pixley, Steve Chamberlain, and John Gilmore.

David Johnson wrote the original COFF support; Pace Willison did the original support for encapsulated COFF.

Adam de Boor and Bradley Davis contributed the ISI Optimum V support.

Per Bothner, Noboyuki Hikichi, and Alessandro Forin contributed MIPS support.

Jean-Daniel Fekete contributed Sun 386i support.

Chris Hanson improved the HP9000 support.

Noboyuki Hikichi and Tomoyuki Hasei contributed Sony/News OS 3 support.

David Johnson contributed Encore Umax support.

Jyrki Kuoppala contributed Altos 3068 support.

Jeff Law contributed HP PA and SOM support.

Keith Packard contributed NS32K support.

Doug Rabson contributed Acorn Risc Machine support.

Bob Rusk contributed Harris Nighthawk CXUX support.

Chris Smith contributed Convex support (and Fortran debugging).

Jonathan Stone contributed Pyramid support.

Michael Tiemann contributed SPARC support.

Tim Tucker contributed support for the Gould NP1 and Gould Powernode.

Pace Willison contributed Intel 386 support.

Jay Vosburgh contributed Symmetry support.

Rich Schaefer and Peter Schauer helped with support of SunOS shared libraries.

Jay Fenlason and Roland McGrath ensured that GDB and GAS agree about several machine instruction sets.

Patrick Duval, Ted Goldstein, Vikram Koka and Glenn Engel helped develop remote debugging.

Intel Corporation and Wind River Systems contributed remote debugging modules for their products.

Brian Fox is the author of the readline libraries providing command-line editing and command history.

Andrew Beers of SUNY Buffalo wrote the language-switching code, the Modula-2 support, and contributed the Languages chapter of Debugging with GDB.

Fred Fish wrote most of the support for Unix System Vr4. He also enhanced the command-completion support to cover C++ overloaded symbols.

Hitachi America, Ltd. sponsored the support for Hitachi microprocessors.

Kung Hsu, Jeff Law, and Rick Sladkey added support for hardware watchpoints.

Stu Grossman wrote gdbserver.

Jim Kingdon, Peter Schauer, Ian Taylor, and Stu Grossman made nearly innumerable bug fixes and cleanups throughout GDB.

8 Debugging with GDB

Installing GDB

GDB comes with a configure script that automates the process of preparing GDB for installation; you can then use make to build the gdb program.

The GDB distribution includes all the source code you need for GDB in a single directory, whose name is usually composed by appending the version number to 'gdb'.

For example, the GDB version 4.17-98r1 distribution is in the 'gdb-4.17-98r1' directory.

That directory contains the following files.

```
gdb-4.17-98r1/configure (and supporting files)
   Script for configuring GDB and all its supporting libraries
gdb-4.17-98r1/gdb
   The source specific to GDB itself
gdb-4.17-98r1/bfd
   Source for the Binary File Descriptor library
gdb-4.17-98r1/include
   GNU include files
gdb-4.17-98r1/libiberty
   Source for the '-liberty' free software library
gdb-4.17-98r1/opcodes
```

Source for the library of opcode tables and disassemblers

CYGNUS

```
gdb-4.17-98r1/readline
   Source for the GNU command-line interface
gdb-4.17-98r1/glob
   Source for the GNU filename pattern-matching subroutine
gdb-4.17-98r1/mmalloc
```

Source for the GNU memory-mapped malloc package

The simplest way to configure and build GDB is to run configure from the 'gdb-version-number' source directory, which in this example is the 'gdb-4.17-98r1' directory.

First switch to the 'gdb-version-number' source directory if you are not already in it; then run configure.

Pass the identifier for the platform on which GDB will run as an argument.

Consider the following, for example.

```
cd qdb-4.17-98r1
./configure host
```

host is an identifier such as 'sun4' or 'decstation', that identifies the platform where GDB will run. (You can often leave off host; configure tries to guess the correct value by examining your system.)

Running 'configure host' and then running make builds the 'bfd', 'readline', 'mmallog', and 'libiberty' libraries, then adb itself. The configured source files, and the binaries, are left in the corresponding source directories.

configure is a Bourne-shell (/bin/sh) script; if your system does not recognize this automatically when you run a different shell, you may need to run sh on it explicitly: sh configure host

If you run configure from a directory that contains source directories for multiple libraries or programs, such as the 'qdb-4.17-98r1' source directory for version 4.17-98r1, configure creates configuration files for every directory level underneath (unless you tell it not to, with the --norecursion option). You can run the configure script from any of the subordinate directories in the GDB distribution if you only want to configure that subdirectory, but be sure to specify a path to it. For example, with version 4.17-98r1, type the following to configure only the bfd subdirectory:

```
cd gdb-4.17-98r1/bfd
../configure host
```

You can install gdb anywhere; it has no hardwired paths. However, you should make sure that the shell on your path (named by the 'SHELL' environment variable) is publicly readable. Remember that GDB uses the shell to start your program—some systems refuse to let GDB debug child processes whose programs are not readable.

Compiling GDB in another directory

If you want to run GDB versions for several host or target machines, you need a different gdb compiled for each combination of host and target. configure is designed to make this easy by allowing you to generate each configuration in a separate subdirectory, rather than in the source directory. If your make program handles the 'VPATH' feature (GNU make does; for more on the VPATH option, see *GNU Make* in *GNUPro Advanced Topics*), running make in each of these directories builds the gdb program specified there.

To build gdb in a separate directory, run configure with the '--srcdir' option to specify where to find the source. (You also need to specify a path to find configure itself from your working directory. If the path to configure would be the same as the argument to '--srcdir', you can leave out the '--srcdir' option; it is assumed.) For example, with the current version, you can build GDB in a separate directory for your machine, using the following declaration (where <code>version</code> is the version which you have installed by default and <code>host</code> is the host machine with which you installed the tools).

```
cd gdb-version
mkdir ../gdb-host
cd ../gdb-host
../gdb-version/configure host
make
```

When configure builds a configuration using a remote source directory, it creates a tree for the binaries with the same structure (and using the same names) as the tree under the source directory. In the example, you'd find the *host* library, libiberty.a, in the directory 'gdb-host/libiberty', and GDB itself in 'gdb-host/gdb'.

One popular reason to build several GDB configurations in separate directories is to configure GDB for cross-compiling (where GDB runs on one machine—the *host*—while debugging programs that run on another machine—the *target*).

You specify a cross-debugging target by giving the '--target=target' option to configure.

When you run make to build a program or library, you must run it in a configured directory—whatever directory you were in when you called configure (or one of its subdirectories).

The Makefile that configure generates in each source directory also runs recursively.

If you type make in a source directory such as 'gdb-version' (or in a separate directory configured with '--srcdir=dirname/gdb-version'), you will build all the required libraries, and then build GDB.

When you have multiple hosts or targets configured in separate directories, you can run make on them in parallel (for example, if they are NFS-mounted on each of the hosts); they will not interfere with each other.

Specifying names for hosts and targets

The specifications used for hosts and targets in the configure script are based on a three-part naming scheme, but some short predefined aliases are also supported. The full naming scheme encodes three pieces of information in the following triplet pattern: architecture-vendor-os.

For example, use the alias, sun4, as a host argument, or as the value for target in a --target=target option.

The configure script accompanying GDB does not provide any query facility to list all supported host and target names or aliases. configure calls the Bourne shell script, config. sub, to map abbreviations to full names; you can read the script, if you wish, or you can use it to test your guesses on abbreviations, as in the following example.

```
% sh config.sub sun4
sparc-sun-sunos4.1.1
% sh config.sub sun3
m68k-sun-sunos4.1.1
% sh config.sub decstation
mips-dec-ultrix4.2
% sh config.sub hp300bsd
m68k-hp-bsd
% sh config.sub i386v
i386-unknown-sysv
% sh config.sub i786v
Invalid configuration 'i786v': machine 'i786v' not recognized
config. sub is also distributed in the GDB source directory.
```

^{&#}x27;sparc-sun-sunos4' is the equivalent full name.

configure options

The following example summarizes the configure options and arguments that are most often useful for building GDB. configure also has several other options not listed here. See 'configure.info'file, node 'What Configure Does', for a full explanation of configure.

```
configure [--help]
[--prefix=dir]
[--srcdir=dirname]
[--norecursion][--rm]
[--target=target] host
```

You may introduce options with a single '-' rather than '--' if you prefer; but you may abbreviate option names if you use '--'.

```
--help
```

Display a quick summary of how to invoke configure.

```
-prefix=dir
```

Configure the source to install programs and files under directory 'dir'.

```
--srcdir=dirname
```

Use this option to make configurations in directories separate from the GDB source directories. Among other things, you can use this to build (or maintain) several configurations simultaneously, in separate directories.

configure writes configuration specific files in the current directory, but arranges for them to use the source in the directory dirname.

configure creates directories under the working directory in parallel to the source directories below dirname.

WARNING: Using this option requires GNU make, or another make that implements the VPATH feature; for more on the VPATH option, see *GNU Make* in *GNUPro Advanced Topics*.

```
--norecursion
```

Configure only the directory level where configure is executed; do not propagate configuration to subdirectories.

```
--rm
```

Remove files otherwise built during configuration.

```
--target=target
```

Configure GDB for cross-debugging programs running on the specified *target*. Without this option, GDB is configured to debug programs that run on the same machine (*host*) as GDB itself. There is no convenient way to generate a list of all available targets.

```
host..
```

Configure GDB to run on the specified host. There is no convenient way to

generate a list of all available hosts.

configure accepts other options, for compatibility with configuring other GNU tools recursively; but these are the only options that affect GDB or its supporting libraries.

14 ■ Debugging with GDB GNUPro Toolkit



Getting In and Out of GDB

The following documentation discusses invoking the debugger, choosing files, choosing modes, stopping the debugger and some essential shell commands.

The essentials are starting gdb and quitting gdb.

- Type gdb to start the debugger in a graphical interface mode or use the command, gdb -nw, to start the debugger in a non-window interface mode.
- Type quit or use the keystroke sequence, Control-d, to exit.

The following documentation discusses the main essentials of working with GDB.

- "Invoking GDB" on page 16
- "Choosing files" on page 17
- "Choosing modes" on page 19
- "Quitting GDB" on page 21
- "Shell commands" on page 22

Invoking GDB

Invoke GDB by running the program gdb. Once started, GDB reads commands from the terminal until you tell it to quit.

You can also run gdb with a variety of arguments and options, to specify more of your debugging environment at the outset.

The command-line options described in the following discussions are designed to cover a variety of situations; in some environments, effectively, some of these options may be unavailable.

The most usual way to start GDB is with one argument, specifying an executable program, program, that you want to debug.

```
gdb program
```

You can also start with both an executable program and a core file specified as the following example's input and variables show, where the core file is signified as COTE.

```
gdb program core
```

You can, instead, specify a process ID as a second argument, if you want to debug a running process, for instance, as the following example's input and variables show.

```
gdb program 1234
```

Your machine hereby attaches GDB to process 1234 (unless you also have a file named '1234'; GDB does check for a core file first).

Taking advantage of the second command-line argument requires a fairly complete operating system; when you use GDB as a remote debugger attached to a bare board, there may not be any notion of *process*, and there is often no way to get a core dump.

You can run gdb without printing the front material, which describes GDB's nonwarranty, by specifying -silent:

```
gdb -silent
```

You can further control how GDB starts up by using command-line options. GDB itself can remind you of the options available.

To display all available options and briefly describe their use, use qdb -help as input ('gdb -h' is a shorter equivalent).

All options and command line arguments you give are processed in sequential order. The order makes a difference when using the '-x' option.

Choosing files

When GDB starts, it reads any arguments other than options as specifying an executable file and core file (or process ID). This is the same as if the arguments were specified by the '-se' and '-c' options respectively. (GDB reads the first argument that does not have an associated option flag as equivalent to the '-se' option followed by that argument; and the second argument that does not have an associated option flag, if any, as equivalent to the '-c' option followed by that argument.)

Many options have both long and short forms; both are shown in the following list. GDB also recognizes the long forms if you truncate them, so long as enough of the option is present to be unambiguous. (If you prefer, you can flag option arguments with '--' rather than '-', though we illustrate the more usual convention.)

```
-symbols file
-s file
Read symbol table from file, file.

-exec file
-e file
Use file, file, as the executable file to execute when appropriate, and for examining pure data in conjunction with a core dump.
```

Read symbol table from file, file, and use it as the executable file.

```
-core file
-c file
```

Use file, file, as a core dump to examine.

-c number

Connect to process ID number, as with the attach command (unless there is a file in coredump format named *number*, in which case '-c' specifies that file as a core dump to read).

```
-command file
-x file
```

Execute GDB commands from file, file. See "Command files" on page 219.

```
-directory directory
-d directory
```

Add directory to the path to search for source files.

-mapped

If memory-mapped files are available on your system through the mmap system call, you can use this option to have GDB write the symbols from your program into a reusable file in the current directory. If the program you are debugging is

called '/tmp/fred', the mapped symbol file is './fred.syms'. Future GDB debugging sessions notice the presence of this file, and can quickly map in symbol information from it, rather than reading the symbol table from the executable program.

The '.syms' file is specific to the host machine where GDB is run. It holds an exact image of the internal GDB symbol table. It cannot be shared across multiple host platforms.

WARNING: This option depends on operating system facilities that are not supported on all systems.

-r

-readnow

Read each symbol file's entire symbol table immediately, rather than the default, which is to read it incrementally as it is needed. This makes startup slower, but makes future operations faster.

The -mapped and -readnow options are typically combined in order to build a '. syms' file that contains complete symbol information. (See "Commands to specify files" on page 154 for information.

A '.syms' file for future use is what the following example shows.

qdb -batch -nx -mapped -readnow programname

Choosing modes

Run GDB in alternative modes—for example, in batch mode or quiet mode.

-nx

-n

Do not execute commands from any initialization files (normally called '.gdbinit'). Normally, the commands in these files are executed after all the command options and arguments have been processed. See "Command files" on page 219.

-quiet

-a

Quiet. Do not print the introductory and copyright messages. These messages are also suppressed in batch mode.

-batch

Run in batch mode. Exit with status o after processing all the command files specified with '-x' (and all commands from initialization files, if not inhibited with '-n'). Exit with non-zero status if an error occurs in executing the GDB commands in the command files.

Batch mode may be useful for running GDB as a filter, for example to download and run a program on another computer; in order to make this more useful, the following message does not issue when running in batch mode (ordinarily, the message issues whenever a program running under GDB control terminates).

Program exited normally.

-cd directory

Run GDB using *directory* as its working directory, instead of the current directory.

-fullname

-f

GNU Emacs sets this option when it runs GDB as a subprocess. It tells GDB to output the full file name and line number in a standard, recognizable fashion each time a stack frame is displayed (which includes each time your program stops). This recognizable format looks like two '\032' characters, followed by the file name, line number and character position separated by colons, and a newline. The Emacs/GDB interface program uses the two '\032' characters as a signal to display the source code for the frame.

-b bps

Set the line speed (baud rate or bits per second) of any serial interface used by GDB for remote debugging.

-tty device

Run using device for your program's standard input and output.

20 ■ Debugging with GDB GNUPro Toolkit

Quitting GDB

quit

To exit GDB, use the quit command (abbreviated q), or use an end-of-file character (usually **C-d**). If you do not supply *expression*, GDB will terminate normally; otherwise it will terminate using the result of *expression* as the error code.

An interrupt (often, **C-c**) does not exit from GDB, but rather terminates the action of any GDB command that is in progress and returns to GDB command level. It is safe to use the interrupt character at any time because GDB does not allow it to take effect until a time when it is safe.

If you have been using GDB to control an attached process or device, you can release it with the detach command (see "Debugging an already-running process" on page 40).

Shell commands

If you need to execute occasional shell commands during your debugging session, there is no need to leave or suspend GDB; you can just use the shell command.

shell command string

Invoke a the standard shell to execute command string. If it exists, the environment variable, SHELL, determines which shell to run.

Otherwise GDB uses /bin/sh.

The make utility is often needed in development environments. You do not have to use the shell command for this purpose in GDB.

make make-args

Execute the make program with the specified arguments, make-args. This is equivalent to 'shell make make-args'.

22 Debugging with GDB



GDB Commands

You can abbreviate a GDB command to the first few letters of the command name, if that abbreviation is unambiguous; and you can repeat certain GDB commands by using the Return key. You can also use the TAB key to get GDB to fill out the rest of a word in a command (or to show you the alternatives available, if there is more than one possibility).

The following documentation discusses more GDB commands.

- "Command syntax" on page 24
- "Command completion" on page 25
- "Getting help" on page 27

Command syntax

A GDB command is a single line of input. There is no limit on how long it can be. It starts with a command name, which is followed by arguments whose meaning depends on the command name. For example, the command, step, accepts an argument which is the number of times to step, as in 'step 5'. You can also use the step command with no arguments. Some command names do not allow any arguments.

GDB command names may always be truncated if that abbreviation is unambiguous. Other possible command abbreviations are listed in the documentation for individual commands. In some cases, even ambiguous abbreviations are allowed; for example, s is specially defined as equivalent to step even though there are other commands whose names start with s. You can test abbreviations by using them as arguments to the help command.

A blank line as input to GDB (using the Return key just once) means to repeat the previous command. Certain commands (for example, run) will not repeat this way; such commands have unintentional repetition which might cause trouble and which it is unlikely you want to repeat.

The list and x commands, when you repeat them with Return key actions, construct new arguments rather than repeating exactly as generated. This permits easy scanning of source or memory.

GDB can also use Return in another way: to partition lengthy output, in a way similar to the common utility, more (see "Screen size" on page 198). Since it is easy to use Return one too many times in this situation, GDB disables command repetition after any command that generates this sort of display.

Any text from a # to the end of the line is a comment; it does nothing. This is useful mainly in command files (see "Command files" on page 219).

24 Debugging with GDB GNUPro Toolkit

Command syntax

GDB can fill in the rest of a word in a command for you, if there is only one possibility; it can also show you, at any time, what the valid possibilities are for the next word in a command. This works for GDB commands, GDB subcommands, and the names of symbols in your program.

Use the TAB key whenever you want GDB to fill out the rest of a word. If there is only one possibility, GDB fills in the word, and waits for you to finish the command (or use Return to enter it). For example, if you type (gdb) info bre, and use the TAB key, GDB fills in the rest of the word 'breakpoints', since that is the only info subcommand beginning with 'bre'.

You can either use Return at this point, to run the info breakpoints command, or use the BACKSPACE key and enter something else, if 'breakpoints' does not look like the command you expected. (If you were sure you wanted info breakpoints in the first place, you might as well just use Return immediately after 'info bre', to exploit command abbreviations rather than command completion). If there is more than one possibility for the next word when you use the TAB key, GDB sounds a bell. You can either supply more characters and try again, or just use the TAB key a second time; GDB displays all the possible completions for that word. For example, you might want to set a breakpoint on a subroutine whose name begins with 'make_', but when you type b make_ and use the TAB key, GDB just sounds the bell. Using the TAB key again displays all the function names in your program that begin with those characters. For example, you type (gdb) b make_ and then use the TAB key. GDB sounds the bell; you use the TAB key again, to see the following display.

```
make_a_section_from_file make_environ
make_abs_section make_function_type
make_blockvector make_pointer_type
make_cleanup make_reference_type
make_command make_symbol_completion_list
(qdb) b make
```

After displaying the available possibilities, GDB copies your partial input (in the example, 'b make_') so you can finish the command. If you just want to see the list of alternatives in the first place, you can get help by using the command key sequence, M-? rather than using TAB twice.

IMPORTANT: M-? means using the META key (the diamond-marked key, or else, use ESC) and the '?' key as a command key sequence.

Sometimes the string you need, while logically a *word*, may contain parentheses or other characters that GDB normally excludes from its notion of a word. To permit word completion to work in this situation, you may enclose words in single quote

marks in GDB commands.

The most likely situation where you might need this is in typing the name of a C++ function. This is because C++ allows function overloading (multiple definitions of the same function, distinguished by argument type). For example, when you want to set a breakpoint you may need to distinguish whether you mean the version of name that takes an int parameter, name(int), or the version that takes a float parameter, name(float). To use the word-completion facilities in this situation, type a single quote, ', at the beginning of the function name. This alerts GDB that it may need to consider more information than usual when you use the TAB key or M-? to request word completion, as in the following example.

```
(gdb) b 'bubble(
```

Use the M-? command key sequence this point.

```
bubble(double,double) bubble(int,int)
(gdb) b 'bubble(
```

In some cases, GDB can tell that completing a name requires using quotes. When this happens, GDB inserts the quote for you (while completing as much as it can) if you do not type the quote in the first place, as in the following example's declaration.

```
(qdb) b bub
```

Use the TAB key at this point. GDB alters your input line then to the following declaration, and rings a bell.

```
(gdb) b 'bubble(
```

In general, GDB can tell that a quote is needed (and inserts it) if you have not yet started typing the argument list when you ask for completion on an overloaded symbol.

Getting help

You can always ask GDB itself for information on its commands, using the command, help.

help

h

You can use help (abbreviated 'h') with no arguments to display a short list of named classes of commands like the following output.

```
(gdb) help List of classes of commands:
```

```
running -- Running the program

stack -- Examining the stack

data -- Examining data

breakpoints -- Making program stop at certain points

files -- Specifying and examining files

status -- Status inquiries

support -- Support facilities

user-defined -- User-defined commands

aliases -- Aliases of other commands

obscure -- Obscure features
```

Type "help" followed by a class name for a list of commands in that class. Type "help" followed by command name for full documentation. Command name abbreviations are allowed if unambiguous. (gdb)

help class

Using one of the general help classes as an argument, you can get a list of the individual commands in that class. For example, the following output shows the help display for the class, status.

```
(gdb) help status Status inquiries.
```

```
List of commands:

show -- Generic command for showing things set with "set"
info -- Generic command for printing status

Type "help" followed by command name for full documentation.
Command name abbreviations are allowed if unambiguous.
(gdb)
```

help command

With a command name as help argument, GDB displays a short paragraph on how to use that command.

complete args

The complete args command lists all the possible completions for the beginning of a command. With args, specify the beginning of the command you want completed. For example, complete i results in the following output for info, inspect and ignore. This command is intentionally for use by GNU Emacs.

info inspect ignore

In addition to help, you can use the GDB commands info and show to inquire about the state of your program, or the state of GDB itself. Each command supports many topics of inquiry; this manual introduces each of them in the appropriate context. The listings under info and under show in the Index point to all the subcommands. See "Index" on page 309 for specific commands.

info

This command (abbreviated i) is for describing the state of your program. For example, you can list the arguments given to your program with info args, list the registers currently in use with info registers, or list the breakpoints you have set with info breakpoints. You can get a complete list of the info subcommands with help info.

set

You can assign the result of an expresson to an environment variable with set. For example, you can set the GDB prompt to a \$-sign with set prompt \$.

show

In contrast to info, show is for describing the state of GDB itself. You can change most of the things you can show, by using the related command, set; for example, you can control what number system is used for displays with set radix, or simply inquire which is currently in use with show radix.

To display all the settable parameters and their current values, you can use show with no arguments; you may also use info set. Both commands produce the same display.

The following are three miscellaneous show subcommands, all of which are exceptional in lacking corresponding set commands.

show version

Show what version of GDB is running. You should include this information in GDB bug reports. If multiple versions of GDB are in use at your site, you may occasionally want to determine which version of GDB you are running; as GDB evolves, new commands are introduced, and old ones may wither away. The version number is also announced when you start GDB.

show copying

Display information about permission for copying GDB.

show warranty

Display the GNU "NO WARRANTY" statement.

30 Debugging with GDB



Running programs under GDB

When you run a program under GDB, you must first generate debugging information when you compile it. You may start GDB with its arguments, if any, in an environment of your choice. You may redirect your program's input and output, debug an already running process, or kill a child process.

For more discussion, see the following topics.

- "Compiling for debugging" on page 32
- "Starting your program" on page 33
- "Your program's arguments" on page 35
- "Your program's environment" on page 36
- "Your program's working directory" on page 38
- "Your program's input and output" on page 39
- "Debugging an already-running process" on page 40
- "Killing the child process" on page 41
- "Additional process information" on page 42
- "Debugging programs with multiple threads" on page 43
- "Debugging programs with multiple processes" on page 46

Compiling for debugging

In order to debug a program effectively, you need to generate debugging information when you compile it. This debugging information is stored in the object file; it describes the data type of each variable or function and the correspondence between source line numbers and addresses in the executable code.

To request debugging information, specify the '-g' option when you run the compiler. Many C compilers are unable to handle the '-g' and '-o' options together. Using those compilers, you cannot generate optimized executables containing debugging information.

GCC, the GNU C compiler, supports '-g' with or without '-o', making it possible to debug optimized code. We recommend that you always use '-g' whenever you compile a program. You may think your program is correct, but there is no sense in pushing your luck.

When you debug a program compiled with '-g -o', remember that the optimizer is rearranging your code; the debugger shows you what is really there. Do not be too surprised when the execution path does not exactly match your source file! An extreme example: if you define a variable, but never use it, GDB never sees that variable—because the compiler optimizes it out of existence.

Some things do not work as well with '-g -o' as with just '-g', particularly on machines with instruction scheduling. If in doubt, recompile with '-g' alone, and if this fixes the problem, please report it to us as a bug (including a test case!).

Older versions of the GNU C compiler permitted a variant option '-gg' for debugging information. GDB no longer supports this format; if your GNU C compiler has this option, *do not use* it.

32 Debugging with GDB GNUPro Toolkit

Starting your program

run

r

Use the run command to start your program under GDB. You must first specify the program name (except on VxWorks) with an argument to GDB (see "Getting In and Out of GDB" on page 15), or using the file or exec-file command (see "Commands to specify files" on page 154).

If you are running your program in an execution environment that supports processes, run creates an inferior process and makes that process run your program. (In environments without processes, run jumps to the start of your program.)

The execution of a program is affected by certain information it receives from its superior. GDB provides ways to specify this information, which you must do *before* starting your program. (You can change it after starting your program, but such changes only affect your program the next time you start it.) This information may be divided into the following four categories.

Arguments

Specify the arguments to give your program as the arguments of the run command. If a shell is available on your target, the shell is used to pass the arguments, so that you may use normal conventions (such as wildcard expansion or variable substitution) in describing the arguments. In Unix systems, you can control which shell is used with the SHELL environment variable. See "Your program's arguments" on page 35.

Environment

Your program normally inherits its environment from GDB, but you can use the GDB commands set environment and unset environment to change parts of the environment that affect your program. See "Your program's environment" on page 36.

Working directory

Your program inherits its working directory from GDB. You can set the GDB working directory with the cd command in GDB. See "Your program's working directory" on page 38.

* Standard input and output

Your program normally uses the same device for standard input and standard output as GDB is using. You can redirect input and output in the run command line, or you can use the tty command to set a different device for your program. See "Your program's input and output" on page 39.

WARNING: While input and output redirection work, you cannot use pipes to pass the

output of the program you are debugging to another program; if you attempt this, GDB is likely to wind up debugging the wrong program.

When you issue the run command, your program begins to execute immediately. See "Stopping and continuing" on page 47 for discussion of how to arrange for your program to stop. Once your program has stopped, you may call functions in your program, using the print or call commands. See "Examining data" on page 87.

If the modification time of your symbol file has changed since the last time GDB read its symbols, GDB discards its symbol table, and reads it again. When it does this, GDB tries to retain your current breakpoints.

34 ■ Debugging with GDB GNUPro Toolkit

Your program's arguments

The arguments to your program can be specified by the arguments of the run command. They are passed to a shell, which expands wildcard characters and performs redirection of I/O, and thence to your program. Your SHELL environment variable (if it exists) specifies what shell GDB uses. If you do not define SHELL, GDB uses /bin/sh.

run with no arguments uses the same arguments used by the previous run, or those set by the set args command.

set args

Specify the arguments to be used the next time your program is run. If set args has no arguments, run executes your program with no arguments. Once you have run your program with arguments, using set args before the next run is the only way to run it again without arguments.

show args

Show the arguments to give your program when it is started.

Your program's environment

The *environment* consists of a set of environment variables and their values. Environment variables conventionally record such things as user name, home directory, terminal type, and the search path for programs to run.

Usually you set up environment variables with the shell and they are inherited by all the other programs you run.

When debugging, it can be useful to try running your program with a modified environment without having to start GDB over again.

```
path directory
```

Add directory to the front of the PATH environment variable (the search path for executables), for both GDB and your program. You may specify several directory names, separated by ':' or a whitespace. If directory is already in the path, it is moved to the front, so it is searched sooner.

You can use the string '\$cwd' to refer to whatever is the current working directory at the time GDB searches the path. If you use '.' instead, it refers to the directory where you executed the path command. GDB replaces '.' in the directory argument (with the current path) before adding directory to the search path.

Display the list of search paths for executables (the PATH environment variable).

```
show environment [varname]
```

Print the value of environment variable, varname, to be given to your program when it starts. If you do not supply varname, print the names and values of all environment variables to be given to your program. You can abbreviate environment as env.

```
set environment varname[=] value
```

Set environment variable, varname, to value. The value changes for your program only, not for GDB itself. value may be any string; the values of environment variables are just strings, and any interpretation is supplied by your program itself. The value parameter is optional; if it is eliminated, the variable is set to a null value. For example, the command, set env USER = foo, tells a Unix program, when run, that its user is named 'foo'. (The spaces around '=' are used for clarity here; they are not actually required.)

```
unset environment varname
```

Remove variable, *varname*, from the environment to be passed to your program. This is different from 'set env varname ='; unset environment removes the variable from the environment, rather than assigning it an empty value.

WARNING: GDB runs your program using the shell indicated by your SHELL environment

variable if it exists (or /bin/sh if not). If your SHELL variable names a shell that runs an initialization file—such as '.cshrc' for C-shell, or '.bashrc' for BASH-any variables you set in that file affect your program. You may wish to move setting of environment variables to files that are only run when you sign on, such as '.login' or '.profile'.

Your program's working directory

Each time you start your program with run, it inherits its working directory from the current working directory of GDB. The GDB working directory is initially whatever it inherited from its parent process (typically the shell), but you can specify a new working directory in GDB with the cd command.

The GDB working directory also serves as a default for the commands that specify files for GDB to operate on. See "Commands to specify files" on page 154.

cd directory

Set the GDB working directory to directory.

pwd

Print the GDB working directory.

38 ■ Debugging with GDB GNUPro Toolkit

Your program's input and output

By default, the program you run under GDB does input and output to the same terminal that GDB uses. GDB switches the terminal to its own terminal modes to interact with you, but it records the terminal modes your program was using and switches back to them when you continue running your program.

info terminal

Displays information recorded by GDB about the terminal modes your program is using.

You can redirect your program's input and/or output using shell redirection with the run command. For example, run > outfile starts your program, diverting its output to the file 'outfile'. Another way to specify where your program should do input and output is with the tty command. This command accepts a file name as argument, and causes this file to be the default for future run commands.

It also resets the controlling terminal for the child process, for future run commands. For example, tty/dev/ttyb directs that processes started with subsequent run commands default to do input and output on the terminal '/dev/ttyb' and have that as their controlling terminal.

An explicit redirection in run overrides the tty command's effect on the input/output device, but not its effect on the controlling terminal.

When you use the tty command or redirect input in the run command, only the input for your program is affected. The input for GDB still comes from your terminal.

Debugging an already-running process

attach process-id

This command attaches to a running process—one that was started outside GDB. (info files shows your active targets.) The command takes as argument a process ID. The usual way to find out the process-id of a Unix process is with the ps utility, or with the 'jobs -1' shell command.

attach does not repeat if you use the Return key a second time after executing the command.

To use attach, your program must be running in an environment which supports processes; for example, attach does not work for programs on bareboard targets that lack an operating system. You must also have permission to send the process a signal.

When using attach, you should first use the file command to specify the program running in the process and load its symbol table. See "Commands to specify files" on page 154.

The first thing GDB does after arranging to debug the specified process is to stop it. You can examine and modify an attached process with all the GDB commands that are ordinarily available when you start processes with run. You can insert breakpoints; you can step and continue; you can modify storage. If you would rather the process continue running, you may use the continue command after attaching GDB to the process.

detach

When you have finished debugging the attached process, you can use the detach command to release it from GDB control. Detaching the process continues its execution. After the detach command, that process and GDB become completely independent once more, and you are ready to attach another process or start one with run, detach does not repeat if you use the Return key again after executing the command.

If you exit GDB or use the run command while you have an attached process, you kill that process. By default, GDB asks for confirmation if you try to do either of these things; you can control whether or not you need to confirm by using the set confirm command (see "Optional warnings and messages" on page 200).

40 Debugging with GDB

Killing the child process

kill

Kill the child process in which your program is running under GDB.

This command is useful if you wish to debug a core dump instead of a running process. GDB ignores any core dump files while your program is running.

On some operating systems, a program cannot be executed outside GDB while you have breakpoints set on it inside GDB. You can use the kill command in this situation to permit running your program outside the debugger.

The kill command is also useful if you wish to recompile and relink your program, since on many systems it is impossible to modify an executable file while it is running in a process. In this case, when you next use run, GDB notices that the file has changed, and reads the symbol table again (while trying to preserve your current breakpoint settings).

Additional process information

Some operating systems provide a facility called '/proc' that can be used to examine the image of a running process using file system subroutines. If GDB is configured for an operating system with this facility, the command info proc is available to report on several kinds of information about the process running your program. info proc works only on SVR4 systems that support procfs.

info proc

Summarize available information about the process.

info proc mappings

Report on the address ranges accessible in the program, with information on whether your program may read, write, or execute each range.

Starting time, user CPU time, and system CPU time for your program and its children.

info proc id

Report on the process IDs related to your program: its own process ID, the ID of its parent, the process group ID, and the session ID.

info proc status

General information on the state of the process. If the process is stopped, this report includes the reason for stopping, and any signal received.

info proc all

Show all the above information about the process.

Debgging programs with multiple threads

In some operating systems, a single program may have more than one *thread* of execution.

The precise semantics of threads differ from one operating system to another, but in general the threads of a single program are akin to multiple processes—except that they share one address space (that is, they can all examine and modify the same variables). On the other hand, each thread has its own registers and execution stack, and perhaps private memory.

GDB provides the following facilities for debugging multi-thread programs.

- automatic notification of new threads
- 'thread threadno', a command to switch among threads
- 'info threads', a command to inquire about existing threads
- 'thread apply [threadno][all] args', a command to apply a command to a list of threads
- thread-specific breakpoints

The GDB thread debugging facility allows you to observe all threads while your program runs—but whenever GDB takes control, one thread in particular is always the focus of debugging. This thread is called the *current thread*. Debugging commands show program information from the perspective of the current thread.

WARNING: These facilities are not yet available on every GDB configuration where the operating system supports threads. If your GDB does not support threads, these commands have no effect. For instance, a system without thread support shows no output from 'info threads' and always rejects the thread command, like the following example shows.

```
(gdb) info threads
(gdb) thread 1
Thread ID 1 not known. Use the "info threads" command to see the IDs
of currently known threads.
```

Whenever GDB detects a new thread in your program, it displays the target system's identification for the thread with a message in the form '[New systag]'. systag is a thread identifier whose form varies depending on the particular system. For example, on LynxOS, you might see the following output when GDB notices a new thread.

```
[New process 35 thread 27]
```

In contrast, on an SGI system, the *systag* is simply something like 'process 368', with no further qualifier.

For debugging purposes, GDB associates its own thread number—always a single integer—with each thread in your program.

info threads

Display a summary of all threads currently in your program. GDB displays for each thread (in the following order):

- * the thread number assigned by GDB.
- the target system's thread identifier (systag).
- the current stack frame summary for that thread.

An asterisk '*' to the left of the GDB thread number indicates the current thread. Use the following example for clarity.

```
(gdb) info threads
  3 process 35 thread 27 0x34e5 in sigpause ()
  2 process 35 thread 23 0x34e5 in sigpause ()
* 1 process 35 thread 13 main (argc=1, argv=0x7ffffff8)
  at threadtest.c:68
```

thread threadno

Make thread number threadno the current thread. The command argument, threadno, is the internal GDB thread number, as shown in the first field of the 'info threads' display. GDB responds by displaying the system identifier of the thread you selected, and its current stack frame summary, as in the following output.

```
(gdb) thread 2
[Switching to process 35 thread 23]
0x34e5 in sigpause ()
```

As with the '[New ...]' message, the form of the text after 'switching to' depends on your system's conventions for identifying threads.

```
thread apply [threadno][all] args
```

The thread apply command allows you to apply a command to one or more threads. Specify the numbers of the threads that you want affected with the command argument *threadno*. *threadno* is the internal GDB thread number, as shown in the first field of the 'info threads' display. To apply a command to all threads, use thread apply all args.

Whenever GDB stops your program, due to a breakpoint or a signal, it automatically selects the thread where that breakpoint or signal happened. GDB alerts you to the context switch with a message of the form '[Switching to systag]' to identify the thread.

See "Stopping and starting multi-thread programs" on page 69 for more information about how GDB behaves when you stop and start programs with multiple threads.

See "Setting watchpoints" on page 54 for information about watchpoints in programs with multiple threads.

Debugging programs with multiple processes

GDB has no special support for debugging programs which create additional processes using the fork function. When a program forks, GDB will continue to debug the parent process and the child process will run unimpeded. If you have set a breakpoint in any code which the child then executes, the child will get a SIGTRAP signal which (unless it catches the signal) will cause it to terminate.

However, if you want to debug the child process there is a workaround which isn't too painful. Put a call to sleep in the code which the child process executes after the fork. It may be useful to sleep only if a certain environment variable is set, or a certain file exists, so that the delay need not occur when you don't want to run GDB on the child. While the child is sleeping, use the ps program to get its process ID. Then tell GDB (a new invocation of GDB if you are also debugging the parent process) to attach to the child process (see attach with "Debugging an already-running process" on page 40). From that point on you can debug the child process just like any other process to which you attached.

46 ■ Debugging with GDB GNUPro Toolkit



Stopping and continuing

The principal purposes of using a debugger are so that you can stop your program before it terminates; or so that, if your program runs into trouble, you can investigate and determine causes.

Inside GDB, your program may stop for any of several reasons, such as a signal, a breakpoint, or reaching a new line after a GDB command such as step. You may then examine and change variables, set new breakpoints or remove old ones, and then continue execution. The following documentation discusses these topics.

- "Breakpoints, watchpoints, and exceptions" on page 49
- "Setting breakpoints" on page 50
- "Setting watchpoints" on page 54
- "Breakpoints and exceptions" on page 55
- "Deleting breakpoints" on page 56
- "Disabling breakpoints" on page 57
- "Break conditions" on page 59
- "Breakpoint command lists" on page 61
- "Breakpoint menus" on page 63
- "Continuing and stepping" on page 64

- "Signals" on page 67
- "Stopping and starting multi-thread programs" on page 69

Usually, the messages shown by GDB provide ample explanation of the status of your program—but you can also explicitly request this information at any time. info program displays information about the status of your program: whether it is running or not, what process it is, and why it stopped.

48 ■ Debugging with GDB GNUPro Toolkit

Breakpoints, watchpoints, and exceptions

A *breakpoint* makes your program stop whenever a certain point in the program is reached. For each breakpoint, you can add conditions to control in finer detail whether your program stops. You can set breakpoints with the break command and its variants (see "Setting breakpoints" on page 50) to specify the place where your program should stop by line number, function name or exact address in the program.

In languages with exception handling (such as GNU C++), you can also set breakpoints where an exception is raised (see "Breakpoints and exceptions" on page 55).

In SunOS 4.x, SVR4, and Alpha OSF/1 configurations, you can set breakpoints in shared libraries before the executable is run.

A *watchpoint* is a special breakpoint that stops your program when the value of an expression changes. You must use a different command to set watchpoints (see "Setting watchpoints" on page 54), but aside from that, you can manage a watchpoint like any other breakpoint: you enable, disable, and delete both breakpoints and watchpoints using the same commands.

You can arrange to have values from your program displayed automatically whenever GDB stops at a breakpoint. See "Automatic display" on page 95.

GDB assigns a number to each breakpoint or watchpoint when you create it; these numbers are successive integers starting with one. In many of the commands for controlling various features of breakpoints, you use the breakpoint number to say which breakpoint you want to change. Each breakpoint may be *enabled* or *disabled*; if disabled, it has no effect on your program until you enable it again.

Setting breakpoints

Breakpoints are set with the break command (abbreviated b). The debugger convenience variable '\$bpnum' records the number of the breakpoints you've set most recently; see "Convenience variables" on page 103 for a discussion of what you can do with convenience variables.

You have several ways to say where the breakpoint should go.

break function

Set a breakpoint at entry to function, function. When using source languages that permit overloading of symbols, such as C++, function may refer to more than one possible place to break. See "Breakpoint menus" on page 63 for a discussion of that situation.

break +offset

break -offset

Set a breakpoint some number of lines forward or back from the position at which execution stopped in the currently selected frame.

break linenum

Set a breakpoint in the current source file at line, 1inenum. That file is the last file whose source text was printed. This breakpoint stops your program just before it executes any of the code on that line.

break filename: linenum

Set a breakpoint at line, linenum, in source file, filename.

break filename: function

Set a breakpoint at entry to function, function, found in file, filename. Specifying a file name as well as a function name is superfluous except when multiple files contain similarly named functions.

break *address

Set a breakpoint at address, address. You can use this to set breakpoints in parts of your program which do not have debugging information or source files.

break

When called without any arguments, break sets a breakpoint at the next instruction to be executed in the selected stack frame (see "Examining the stack" on page 71). In any selected frame but the innermost, this makes your program stop as soon as control returns to that frame.

50 Debugging with GDB

This is similar to the effect of a finish command in the frame inside the selected frame—except that finish doesn't leave an active breakpoint. If you use break without an argument in the innermost frame, GDB stops the next time it reaches the current location; this may be useful inside loops. GDB normally ignores breakpoints when it resumes execution, until at least one instruction has been executed. If it did not do this, you would be unable to proceed past a breakpoint without first disabling the breakpoint.

This rule applies whether or not the breakpoint already existed when your program stopped.

break...if cond

Set a breakpoint with condition, <code>cond</code>; evaluate the expression, <code>cond</code>, each time the breakpoint is reached, and stop only if the value is nonzero—that is, if <code>cond</code>, evaluates as true. '...' stands for one of the possible arguments described previously (or no argument) specifying where to break. See "Break conditions" on page 59 for more information on breakpoint conditions.

tbreak args

Set a breakpoint enabled only for one stop. <code>args</code> are the same as for the <code>break</code> command, and the breakpoint is set in the same way, but the breakpoint is automatically deleted after the first time your program stops there. See "Deleting breakpoints" on page 56.

hbreak args

Set a hardware-assisted breakpoint. <code>args</code> are the same as for the <code>break</code> command and the breakpoint is set in the same way, but the breakpoint requires hardware support and some target hardware may not have this support. The main purpose of this is EPROM/ROM code debugging, so you can set a breakpoint at an instruction without changing the instruction. This can be used with the new trapgeneration provided by SPARClite DSU. DSU will generate traps when a program accesses some date or instruction address that is assigned to the debug registers. However the hardware breakpoint registers can only take two data breakpoints, and GDB will reject this command if more than two are used. Delete or disable usused hardware breakpoints before setting new ones. See "Break conditions" on page 59.

thbreak args

Set a hardware-assisted breakpoint enabled only for one stop. args are the same as for the hbreak command and the breakpoint is set in the same way. However, like the tbreak command, the breakpoint is automatically deleted after the first time your program stops there. Also, like the hbreak command, the breakpoint requires hardware support and some target hardware may not have this support. See "Disabling breakpoints" on page 57 and "Break conditions" on page 59.

rbreak regex

Set breakpoints on all functions matching regular expression, regex. Sets an unconditional breakpoint on all matches, printing a list of all breakpoints it set. Once these breakpoints are set, they are treated just like the breakpoints set with the break command. You can delete them, disable them, or make them conditional the same way as any other breakpoint. When debugging C++ programs, rbreak is useful for setting breakpoints on overloaded functions that are not members of any special classes.

```
info breakpoints [n]
info break [n]
info watchpoints [n]
```

Print a table of all breakpoints and watchpoints set and not deleted, with the following place-settings for each breakpoint.

Breakpoint Numbers

Type

Breakpoint or watchpoint.

Disposition

Whether the breakpoint is marked to be disabled or deleted when hit.

Enabled or Disabled

Enabled breakpoints are marked with 'y'. 'n' marks breakpoints that are not enabled.

Address

Where the breakpoint is in your program, as a memory address

Where the breakpoint is in the source for your program, as a file and line

If a breakpoint is conditional, info break shows the condition on the line following the affected breakpoint; breakpoint commands, if any, follow.

info break with a breakpoint number n as argument lists only that breakpoint. The convenience variable \$\(\) and the default examining-address for the x command are set to the address of the last breakpoint listed (see "Examining memory" on page 93).

info break now displays a count of the number of times the breakpoint has been hit. This is especially useful in conjunction with the ignore command. You can ignore a large number of breakpoint hits, look at the breakpoint info to see how many times the breakpoint was hit, and then run again, ignoring one less than that number. This will get you quickly to the last hit of that breakpoint.

GDB allows you to set any number of breakpoints at the same place in your program. There is nothing silly or meaningless about this. When the breakpoints are conditional, this is even useful (see "Break conditions" on page Break conditions). GDB itself sometimes sets breakpoints in your program for special purposes, such as proper handling of longjmp (in C programs). These internal breakpoints are assigned negative numbers, starting with -1; 'info breakpoints' does not display them. You can see these breakpoints with the GDB maintenance command 'maint info breakpoints'.

maint info breakpoints

Using the same format as 'info breakpoints', display both the breakpoints you've set explicitly, and those GDB is using for internal purposes. Internal breakpoints are shown with negative breakpoint numbers. The type column identifies what kind of breakpoint is shown:

breakpoint

Normal, explicitly set breakpoint.

watchpoint

Normal, explicitly set watchpoint.

longjmp

Internal breakpoint, used to handle correctly stepping through longjmp calls.

longjmp resume

Internal breakpoint at the target of a longjmp.

until

Temporary internal breakpoint used by the GDB until command.

finich

Temporary internal breakpoint used by the GDB finish command.

Setting watchpoints

You can use a watchpoint to stop execution whenever the value of an expression changes, without having to predict a particular place where this may happen.

Watchpoints currently execute two orders of magnitude more slowly than other breakpoints, but this can be well worth it to catch errors where you have no clue what part of your program is the culprit.

watch expr

Set a watchpoint for an expression. GDB will break when expr is written into by the program and its value changes. This can be used with the new trap-generation provided by SPARClite DSU. DSU will generate traps when a program accesses some date or instruction address that is assigned to the debug registers. For the data addresses, DSU facilitates the watch command. However the hardware breakpoint registers can only take two data watchpoints, and both watchpoints must be the same kind. For example, you can set two watchpoints with watch commands, two with rwatch commands, or two with awatch commands, but you cannot set one watchpoint with one command and the other with a different command. {No value for "GBDN"} will reject the command if you try to mix watchpoints. Delete or disable unused watchpoint commands before setting new ones.

rwatch expr

Set a watchpoint that will break when watch args is read by the program. If you use both watchpoints, both must be set with the rwatch command.

awatch expr

Set a watchpoint that will break when args is read and written into by the program. If you use both watchpoints, both must be set with the awatch command.

info watchpoints

This command prints a list of watchpoints and breakpoints; it is the same as info

WARNING:

In multi-thread programs, watchpoints have only limited usefulness. With the current watchpoint implementation, GDB can only watch the value of an expression in a *single thread*. If you are confident that the expression can only change due to the current thread's activity (and if you are also confident that no other thread can become current), then you can use watchpoints as usual. However, GDB may not notice when a non-current thread's activity changes the expression.

54 Debugging with GDB

Breakpoints and exceptions

Some languages, such as GNU C++, implement exception handling. You can use GDB to examine what caused your program to raise an exception, and to list the exceptions your program is prepared to handle at a given point.

```
catch exceptions
```

You can set breakpoints at active exception handlers by using the catch command. exceptions is a list of names of exceptions to catch.

You can use info catch to list active exception handlers. See "Information about a frame" on page 76. There are currently some limitations to exception handling in GDB.

- If you call a function interactively, GDB normally returns control to you when the
 function has finished executing. If the call raises an exception, however, the call
 may bypass the mechanism that returns control to you and cause your program to
 simply continue running until it hits a breakpoint, catches a signal that GDB is listening for, or exits.
- You cannot raise an exception interactively.
- You cannot install an exception handler interactively.

Sometimes catch is not the best way to debug exception handling: if you need to know exactly where an exception is raised, it is better to stop *before* the exception handler is called, since that way you can see the stack before any unwinding takes place. If you set a breakpoint in an exception handler instead, it may not be easy to find out where the exception was raised.

To stop just before an exception handler is called, you need some knowledge of the implementation. In the case of GNU C++, exceptions are raised by calling a library function named __raise_exception which has the following ANSI C interface:

```
/* addr is where the exception identifier is stored.
   id is the exception identifier. */
void __raise_exception (void ** addr, void * id);
```

To make the debugger catch all exceptions before any stack unwinding takes place, set a breakpoint on __raise_exception (see "Breakpoints, watchpoints, and exceptions" on page 49).

With a conditional breakpoint (see "Break conditions" on page 59) that depends on the value of *id*, you can stop your program when a specific exception is raised. You can use multiple conditional breakpoints to stop your program when any of a number of exceptions are raised.

Deleting breakpoints

It is often necessary to eliminate a breakpoint or watchpoint once it has done its job and you no longer want your program to stop there. This is called *deleting* the breakpoint. A breakpoint that has been deleted no longer exists; it is forgotten.

With the clear command you can delete breakpoints according to where they are in your program. With the delete command you can delete individual breakpoints or watchpoints by specifying their breakpoint numbers.

It is not necessary to delete a breakpoint to proceed past it. GDB automatically ignores breakpoints on the first instruction to be executed when you continue execution without changing the execution address.

clear

Delete any breakpoints at the next instruction to be executed in the selected stack frame (see "Selecting a frame" on page 74). When the innermost frame is selected, this is a good way to delete a breakpoint where your program just stopped.

```
clear function
clear filename: function
```

Delete any breakpoints set at entry to the function, function.

```
clear linenum
clear filename: linenum
```

Delete any breakpoints set at or within the code of the specified line.

```
delete [breakpoints][bnums...]
```

Delete the breakpoints or watchpoints of the numbers specified as arguments. If no argument is specified, delete all breakpoints (GDB asks confirmation, unless you have set confirm off). You can abbreviate this command as d.

56 Debugging with GDB

Disabling breakpoints

Rather than deleting a breakpoint or watchpoint, you might prefer to *disable* it. This makes the breakpoint inoperative as if it had been deleted, but remembers the information on the breakpoint so that you can *enable* it again.

You disable and enable breakpoints and watchpoints with the enable and disable commands, optionally specifying one or more breakpoint numbers as arguments. Use info break or info watch to print a list of breakpoints or watchpoints if you do not know which numbers to use.

A breakpoint or watchpoint can have four different states of enablement.

Enabled

The breakpoint stops your program. A breakpoint set with the break command starts out in this state.

Disabled

The breakpoint has no effect on your program.

Enabled once

The breakpoint stops your program, but then becomes disabled. A breakpoint set with the tbreak command starts out in this state.

• Enabled for deletion

The breakpoint stops your program, but immediately after it does so it is deleted permanently.

You can use the following commands to enable or disable breakpoints and watchpoints.

```
disable [breakpoints][bnums ...]
```

Disable the specified breakpoints—or all breakpoints, if none are listed. A disabled breakpoint has no effect but is not forgotten. All options such as ignorecounts, conditions and commands are remembered in case the breakpoint is enabled again later. You may abbreviate disable as dis.

```
enable [breakpoints][bnums ...]
```

Enable the specified breakpoints (or all defined breakpoints). They become effective once again in stopping your program.

```
enable [breakpoints] once bnums...
```

Enable the specified breakpoints temporarily. GDB disables any of these breakpoints immediately after stopping your program.

```
enable [breakpoints] delete bnums...
```

Enable the specified breakpoints to work once, then die. GDB deletes any of these breakpoints as soon as your program stops there.

Except for a breakpoint set with tbreak (see "Setting breakpoints" on page Setting breakpoints), breakpoints that you set are initially enabled; subsequently, they become disabled or enabled only when you use one of the previously listed commands. (The command, until, can set and delete a breakpoint of its own, but it doesn't change the state of other breakpoints; see "Continuing and stepping" on page "Continuing and stepping" on page 64.)

58 ■ Debugging with GDB GNUPro Toolkit

Break conditions

The simplest sort of breakpoint breaks every time your program reaches a specified place. You can also specify a *condition* for a breakpoint. A condition is just a Boolean expression in your programming language (see "Expressions" on page 88). A breakpoint with a condition evaluates the expression each time your program reaches it, and your program stops only if the condition is *true*.

This is the converse of using assertions for program validation; in that situation, you want to stop when the assertion is violated—that is, when the condition is false. In C, if you want to test an assertion expressed by a condition, <code>assert</code>, you should set the condition '! <code>assert</code>' on the appropriate breakpoint (where <code>assert</code> signifies the condition to assert).

Conditions are also accepted for watchpoints; you may not need them, since a watchpoint is inspecting the value of an expression anyhow—but it might be simpler, say, to just set a watchpoint on a variable name, and specify a condition that tests whether the new value is an interesting one.

Break conditions can have side effects, and may even call functions in your program. This can be useful, for example, to activate functions that log program progress, or to use your own print functions to format special data structures. The effects are completely predictable unless there is another enabled breakpoint at the same address. (In that case, GDB might see the other breakpoint first and stop your program without checking the condition of this one.) Note that breakpoint commands are usually more convenient and flexible for the purpose of performing side effects when a breakpoint is reached (see "Breakpoint command lists" on page 61).

Break conditions can be specified when a breakpoint is set, by using 'if' in the arguments to the break command. See "Setting breakpoints" on page 50 for more discussion. They can also be changed at any time with the condition command. The watch command does not recognize the if keyword; condition is the only way to impose a further condition on a watchpoint.

condition bnum expression

Specify *expression* as the break condition for breakpoint or watchpoint number, *bnum*. After you set a condition, breakpoint *bnum* stops your program only if the value of *expression* is true (nonzero, in C). When you use condition, GDB checks *expression* immediately for syntactic correctness, and to determine whether symbols in it have referents in the context of your breakpoint. GDB does not actually evaluate *expression* at the time the condition command is given, however. See "Expressions" on page 88.

condition bnum

Remove the condition from breakpoint number bnum. It becomes an ordinary unconditional breakpoint.

A special case of a breakpoint condition is to stop only when the breakpoint has been reached a certain number of times. This is so useful that there is a special way to do it, using the *ignore count* of the breakpoint. Every breakpoint has an ignore count, which is an integer. Most of the time, the ignore count is zero, and therefore has no effect. But if your program reaches a breakpoint whose ignore count is positive, then instead of stopping, it just decrements the ignore count by one and continues. As a result, if the ignore count value is n, the breakpoint does not stop the next n times your program reaches it.

ignore bnum count

Set the ignore count of breakpoint number bnum to count. The next count times the breakpoint is reached, your program's execution does not stop; other than to decrement the ignore count, GDB takes no action.

To make the breakpoint stop the next time it is reached, specify a count of zero.

When you use continue to resume execution of your program from a breakpoint, you can specify an ignore count directly as an argument to continue, rather than using ignore. See "Continuing and stepping" on page 64.

If a breakpoint has a positive ignore count and a condition, the condition is not checked. Once the ignore count reaches zero, GDB resumes checking the condition.

Achieve the effect of the ignore count with a condition such as '\$foo-- <- 0' that uses a debugger convenience variable that is decremented each time. See "Convenience variables" on page 103.

60 Debugging with GDB

Breakpoint command lists

You can give any breakpoint (or watchpoint) a series of commands to execute when your program stops due to that breakpoint. For example, you might want to print the values of certain expressions, or enable other breakpoints.

```
commands [bnum]
...command-list...
end
```

Specify a list of commands for breakpoint number, <code>bnum</code>. The commands themselves appear on the following lines. Type a line containing just end to terminate the commands. To remove all commands from a breakpoint, type <code>commands</code> and follow it immediately with end; that is, give no commands. With no <code>bnum</code> argument, <code>commands</code> refers to the last breakpoint or watchpoint set (not to the breakpoint most recently encountered).

Using the Return key as a means of repeating the last GDB command is disabled within a *command-list*.

You can use breakpoint commands to start your program up again. Simply use the continue command, or step, or any other command that resumes execution. Any other commands in the command list are ignored, after a command that resumes execution. This is because any time you resume execution (even with a simple next or step), you may encounter another breakpoint—which could have its own command list, leading to ambiguities about which list to execute.

If the first command you specify in a command list is silent, the usual message about stopping at a breakpoint is not printed. This may be desirable for breakpoints that are to print a specific message and then continue. If none of the remaining commands print anything, you see no sign that the breakpoint was reached. silent is meaningful only at the beginning of a breakpoint command list.

The commands echo, output, and printf allow you to print precisely controlled output, and are often useful in silent breakpoints.

See "Commands for controlled output" on page 220.

For example, the following example shows how to use breakpoint commands to print the value of x at entry to foo whenever x is positive.

```
break foo if x>0
commands
silent
printf "x is %d\n",x
cont
end
```

One application for breakpoint commands is to compensate for one bug so you can

test for another. Put a breakpoint just after the erroneous line of code, give it a condition to detect the case in which something erroneous has been done, and give it commands to assign correct values to any variables that need them. End with the continue command so that your program does not stop, and start with the silent command so that no output is produced.

The following is an example.

break 403 commands silent setx=y +4cont end

Breakpoint menus

Some programming languages (notably C++) permit a single function name to be defined several times, for application in different contexts. This is called *overloading*. When a function name is overloaded, 'break function' is not enough to tell GDB where you want a breakpoint. If you realize this is a problem, you can use something like 'break function(types)' to specify which particular version of the function you want. Otherwise, GDB offers you a menu of numbered choices for different possible breakpoints, and waits for your selection with the prompt '>'. The first two options are always '[0] cancel' and '[1] all'. Typing 1 sets a breakpoint at each definition of function, and typing 0 aborts the break command without setting any new breakpoints.

For example, the following session excerpt shows an attempt to set a breakpoint at the overloaded symbol String::after. The following shows three particular definitions of that function name:

```
(gdb) b String::after
[0] cancel
[1] all
[2] file:String.cc; line number:867
[3] file:String.cc; line number:860
[4] file:String.cc; line number:875
[5] file:String.cc; line number:853
[6] file:String.cc; line number:846
[7] file:String.cc; line number:735
>2 4 6
Breakpoint 1 at 0xb26c: file String.cc, line 867.
Breakpoint 2 at 0xb344: file String.cc, line 875.
Breakpoint 3 at 0xafcc: file String.cc, line 846.
Multiple breakpoints were set.
Use the "delete" command to delete unwanted breakpoints.
(gdb)
```

Continuing and stepping

Continuing means resuming program execution until your program completes normally. In contrast, stepping means executing just one more "step" of your program, where "step" may mean either one line of source code, or one machine instruction (depending on what particular command you use). Either when continuing or when stepping, your program may stop even sooner, due to a breakpoint or a signal. (If due to a signal, you may want to use handle, or use 'signal 0' to resume execution. See "Signals" on page 67.)

```
continue [ignore-count]
c [ignore-count]
fg [ignore-count]
```

Resume program execution, at the address where your program last stopped; any breakpoints set at that address are bypassed. The optional argument, ignorecount, allows you to specify a further number of times to ignore a breakpoint at this location; its effect is like that of ignore (see "Break conditions" on page 59).

The argument, ignore-count, is meaningful only when your program stopped due to a breakpoint. At other times, the argument to continue is ignored.

The synonyms, c and fg, are provided purely for convenience, and have exactly the same behavior as continue.

To resume execution at a different place, you can use return (see "Returning from a function" on page 149) to go back to the calling function; or jump (see "Continuing at a different address" on page 147) to go to an arbitrary location in your program.

A typical technique for using stepping is to set a breakpoint (see "Breakpoints, watchpoints, and exceptions" on page 49 for more discussion) at the beginning of the function or the section of your program where a problem is believed to lie, run your program until it stops at that breakpoint, and then step through the suspect area, examining the variables that are interesting, until you see the problem happen.

step

Continue running your program until control reaches a different source line, then stop it and return control to GDB. This command is abbreviated s.

WARNING:

If you use the step command while control is within a function that was compiled without debugging information, execution proceeds until control reaches a function that does have debugging information. Likewise, it will not step into a function which is compiled without debugging information. To step through functions without debugging information, use the stepi command, described in the following discussion.

The step command now only stops at the first instruction of a source line. This prevents the multiple stops that used to occur in switch statements, for loops, etc. step continues to stop if a function that has debugging information is called within the line.

Also, the step command now only enters a subroutine if there is line number information for the subroutine. Otherwise it acts like the next command. This avoids problems when using cc-gl on MIPS machines. Previously, step entered subroutines if there was any debugging information about the routine.

step count

Continue running as in step, but do so *count* times. If a breakpoint is reached, or a signal not related to stepping occurs before *count* steps, stepping stops right away.

```
next [count]
```

Continue to the next source line in the current (innermost) stack frame. This is similar to step, but function calls that appear within the line of code are executed without stopping. Execution stops when control reaches a different line of code at the original stack level that was executing when you gave the next command. This command is abbreviated n.

An argument, count, is a repeat count, as for step.

The next command now only stops at the first instruction of a source line. This prevents the multiple stops that used to occur in swtch statements, for loops, etc.

finish

Continue running until just after function in the selected stack frame returns. Print the returned value (if any). Contrast this with the return command (see "Returning from a function" on page 149).

until

Continue running until a source line past the current line, in the current stack frame, is reached. This command is used to avoid single stepping through a loop more than once. It is like the next command, except that when until encounters a jump, it automatically continues execution until the program counter is greater than the address of the jump.

This means that when you reach the end of a loop after single stepping though it, until makes your program continue execution until it exits the loop. In contrast, a next command at the end of a loop simply steps back to the beginning of the loop, which forces you to step through the next iteration.

until always stops your program if it attempts to exit the current stack frame.

until may produce somewhat counter-intuitive results if the order of machine code does not match the order of the source lines. For instance, in the following example from a debugging session, the f (frame) command shows that execution is stopped at line 206; yet when we use until, we get to line 195:

```
(qdb) f
#0 main (argc=4, argv=0xf7fffae8) at m4.c:206
                             expand_input();
206
(gdb) until
                        for ( ; argc > 0; NEXTARG) {
195
```

This happened because, for execution efficiency, the compiler had generated code for the loop closure test at the end, rather than the start, of the loop—even though the test in a C for-loop is written before the body of the loop.

The until command appeared to step back to the beginning of the loop when it advanced to this expression; however, it has not really gone to an earlier statement—not in terms of the actual machine code.

until with no argument works by means of single instruction stepping, and hence is slower than until with an argument.

```
until location
u location
```

Continue running your program until either the specified location is reached, or the current stack frame returns. *location* is any of the forms of argument acceptable to break (see "Setting breakpoints" on page 50).

This form of the command uses breakpoints, and hence is quicker than until without an argument.

```
stepi
si
```

Execute one machine instruction, then stop and return to the debugger.

It is often useful to use 'display/i \$pc' when stepping by machine instructions. This makes GDB automatically display the next instruction to be executed, each time your program stops. See "Automatic display" on page 95.

An argument is a repeat count, as in step.

```
nexti
пi
```

Execute one machine instruction, but if it is a function call, proceed until the function returns.

An argument is a repeat count, as in next.

Signals

A *signal* is an asynchronous event that can happen in a program. The operating system defines the possible kinds of signals, and gives each kind a name and a number. For example, in Unix SIGINT is the signal a program gets when you use an interrupt (often **C-c**); SIGSEGV is the signal a program gets from referencing a place in memory far away from all the areas in use; SIGALRM occurs when the alarm clock timer goes off (which happens only if your program has requested an alarm).

Some signals, including SIGALRM, are a normal part of the functioning of your program. Others, such as SIGSEGV, indicate errors; these signals are *fatal* (kill your program immediately) if the program has not specified in advance some other way to handle the signal. SIGINT does not indicate an error in your program, but it is normally fatal so it can carry out the purpose of the interrupt: to kill the program.

GDB has the ability to detect any occurrence of a signal in your program. You can tell GDB in advance what to do for each kind of signal.

Normally, GDB is set up to ignore non-erroneous signals like SIGALRM (so as not to interfere with their role in the functioning of your program) but to stop your program immediately whenever an error signal happens. You can change these settings with the handle command.

info signals

Print a table of all the kinds of signals and how GDB has been told to handle each one. You can use this to see the signal numbers of all the defined types of signals.

info handle is the new alias for info signals.

handle signal keywords...

Change the way GDB handles signal, <code>signal</code>. <code>signal</code> can be the number of a signal or its name (with or without the 'SIG' at the beginning). The <code>keywords</code> say what change to make.

The keywords allowed by the handle command can be abbreviated. Their full names use the following functionality.

nostop

GDB should not stop your program when this signal happens. It may still print a message telling you that the signal has come in.

stop

GDB should stop your program when this signal happens. This implies the print keyword as well.

print

GDB should print a message when this signal happens.

noprint

GDB should not mention the occurrence of the signal at all. This implies the nostop keyword as well.

pass

GDB should allow your program to see this signal; your program can handle the signal, or else it may terminate if the signal is fatal and not handled.

nopass

GDB should not allow your program to see this signal.

When a signal stops your program, the signal is not visible until you continue. Your program sees the signal then, if pass is in effect for the signal in question at that time. In other words, after GDB reports a signal, you can use the handle command with pass or nopass to control whether your program sees that signal when you continue.

You can also use the signal command to prevent your program from seeing a signal, or cause it to see a signal it normally would not see, or to give it any signal at any time. For example, if your program stopped due to some sort of memory reference error, you might store correct values into the erroneous variables and continue, hoping to see more execution; but your program would probably terminate immediately as a result of the fatal signal once it saw the signal. To prevent this, you can continue with 'signal 0'. See "Giving your program a signal" on page 148.

68 Debugging with GDB

Stopping and starting multi-thread programs

When your program has multiple threads (see "Debugging programs with multiple threads" on page 43), you can choose whether to set breakpoints on all threads, or on a particular thread.

```
break linespec thread threadno break linespec thread threadno if...
```

linespec specifies source lines; there are several ways of writing them, but the effect is always to specify some source line.

Use the qualifier 'thread threadno' with a breakpoint command to specify that you only want GDB to stop the program when a particular thread reaches this breakpoint. threadno is one of the numeric thread identifiers assigned by GDB, shown in the first column of the 'info threads' display.

If you do not specify 'thread threadno' when you set a breakpoint, the breakpoint applies to all threads of your program.

You can use the thread qualifier on conditional breakpoints as well; in this case, place 'thread threadno' before the breakpoint condition, like the following example shows.


```
(gdb) break frik.c:13 thread 28 if bartab > lim
```

Whenever your program stops under GDB for any reason, all threads of execution stop, not just the current thread. This allows you to examine the overall state of the program, including switching between threads, without worrying that things may change underfoot.

Conversely, whenever you restart the program, *all* threads start executing. This is true *even when single-stepping* with commands like step or next.

In particular, GDB cannot single-step all threads in lockstep. Since thread scheduling is up to your debugging target's operating system (not controlled by GDB), other threads may execute more than one statement while the current thread completes a single step. Moreover, in general other threads stop in the middle of a statement, rather than at a clean statement boundary, when the program stops.

You might even find your program stopped in another thread after continuing or even single-stepping. This happens whenever some other thread runs into a breakpoint, a signal, or an exception before the first thread completes whatever you requested.



70 Debugging with GDB



Examining the stack

When your program has stopped, the first thing you need to know is where it stopped and how it got there. The following topics have more discussion on this subject.

- "Stack frames" on page 72
 Each time your program performs a function call, information about the call is generated. That information includes the location of the call in your program, the arguments of the call, and the local variables of the function being called. The information is saved in a block of data called a *stack frame*. The stack frames are allocated in a region of memory called the *call stack*. When your program stops, the GDB commands for examining the stack allow you to see all of this information. See also "Backtraces" on page 73.
- "Selecting a frame" on page 74
 One of the stack frames is *selected* by GDB and many GDB commands refer implicitly to the selected frame. In particular, whenever you ask GDB for the value of a variable in your program, the value is found in the selected frame. There are special GDB commands to select a particular frame.
- "Information about a frame" on page 76
 When your program stops, GDB automatically selects the currently executing frame and describes it briefly, similar to the frame command

Stack frames

The call stack is divided up into contiguous pieces called *stack frames*, or *frames* for short; each frame is the data associated with one call to one function. The frame contains the arguments given to the function, the function's local variables, and the address at which the function is executing.

When your program is started, the stack has only one frame, that of the function main. This is called the *initial frame* or the *outermost frame*. Each time a function is called, a new frame is made. Each time a function returns, the frame for that function invocation is eliminated. If a function is recursive, there can be many frames for the same function. The frame for the function in which execution is actually occurring is called the *innermost* frame. This is the most recently created of all the stack frames that still exist.

Inside your program, stack frames are identified by their addresses. A stack frame consists of many bytes, each of which has its own address; each kind of computer has a convention for choosing one byte whose address serves as the address of the frame. Usually this address is kept in a register called the *frame pointer register* while execution is going on in that frame.

GDB assigns numbers to all existing stack frames, starting with zero for the innermost frame, one for the frame that called it, and so on upward.

These numbers do not really exist in your program; they are assigned by GDB to give you a way of designating stack frames in GDB commands.

Some compilers provide a way to compile functions so that they operate without stack frames. (For example, the gcc option, -fomit-frame-pointer, generates functions without a frame.) This is occasionally done with heavily used library functions to save the frame setup time. GDB has limited facilities for dealing with these function invocations. If the innermost function invocation has no stack frame, GDB nevertheless regards it as though it had a separate frame, which is numbered zero as usual, allowing correct tracing of the function call chain. However, GDB has no provision for frameless functions elsewhere in the stack.

frame args

The frame command allows you to move from one stack frame to another, and to print the stack frame you select. args may be either the address of the frame of the stack frame number. Without an argument, frame prints the current stack frame.

select-frame

The select-frame command allows you to move from one stack frame to another without printing the frame. This is the silent version of frame.

Backtraces

A *backtrace* is a summary of how your program got where it is. It shows one line per frame, for many frames, starting with the currently executing frame (frame zero), followed by its caller (frame one), and on up the stack.

backtrace

bt.

Print a backtrace of the entire stack: one line per frame for all frames in the stack. You can stop the backtrace at any time by using the system interrupt character sequence, Ctrl-c.

```
backtrace n
bt n
    Similar, but print only the innermost n frames.
backtrace -n
bt -n
    Similar, but print only the outermost n frames.
```

The names where and info stack (abbreviated info s) are additional aliases for backtrace.

Each line in the backtrace shows the frame number and the function name. The program counter value is also shown—unless you use set print address off. The backtrace also shows the source file name and line number, as well as the arguments to the function. The program counter value is omitted if it is at the beginning of the code for that line number. The following is an example of a backtrace.

It was made with the command 'bt 3', showing the innermost three frames.

```
#0    m4_traceon (obs=0x24eb0, argc=1, argv=0x2b8c8)
    at builtin.c:993
#1    0x6e38 in expand_macro (sym=0x2b600) at macro.c:242
#2    0x6840 in expand_token (obs=0x0, t=177664, td=0xf7fffb08)
    at macro.c:71
(More stack frames follow...)
```

The display for frame zero does not begin with a program counter value, indicating that your program has stopped at the beginning of the code for line 993 of builtin.c.

Selecting a frame

Most commands for examining the stack and other data in your program work on whichever stack frame is selected at the moment. The following commands arefor selecting a stack frame; all of them finish by printing a brief description of the stack frame just selected.

```
frame n
f n
```

Select frame number n. Recall that frame zero is the innermost (currently executing) frame, frame one is the frame that called the innermost one, and so on. The highest-numbered frame is the one for main.

```
frame addr
f addr
```

Select the frame at address, addr. This is useful mainly if the chaining of stack frames has been damaged by a bug, making it impossible for GDB to assign numbers properly to all frames. In addition, this can be useful when your program has multiple stacks and switches between them.

On the SPARC architecture, frame needs two addresses to select an arbitrary frame: a frame pointer and a stack pointer.

On the MIPS and Alpha architecture, it needs two addresses: a stack pointer and a program counter.

On the 29k architecture, frame needs three addresses: a register stack pointer, a program counter, and a memory stack pointer.

```
up n
```

Move *n* frames up the stack. For positive numbers, *n*, this advances toward the outermost frame, to higher frame numbers, to frames that have existed longer. n defaults to one.

```
down n
```

Move n frames down the stack. For positive numbers, n, this advances toward the innermost frame, to lower frame numbers, to frames that were created more recently. n defaults to one. You may abbreviate down as do.

All of these commands end by printing two lines of output describing the frame. The first line shows the frame number, the function name, the arguments, and the source file and line number of execution in that frame. The second line shows the text of that source line. For instance, use the following as an example.

```
(qdb) up
       0x22f0 in main (argc=1, argv=0xf7fffbf4, env=0xf7fffbfc)
#1
     at env.c:10
10
                 read_input_file (argv[i]);
```

After such a printout, the list command with no arguments prints ten lines centered on the point of execution in the frame. See "Printing source lines" on page 80.

```
up-silently n
down-silently n
```

These two commands are variants of up and down, respectively; they differ in that they do their work silently, without causing display of the new frame. They are intended primarily for use in GDB command scripts, where the output might be unnecessary and distracting.

Information about a frame

There are several other commands to print information about the selected stack frame.

f

When used without any argument, this command does not change which frame is selected, but prints a brief description of the currently selected stack frame. It can be abbreviated f. With an argument, this command is used to select a stack frame. See "Selecting a frame" on page 74.

```
info frame
info f
```

This command prints a verbose description of the selected stack frame, including the following information.

- the address of the frame
- the address of the next frame down (called by this frame)
- the address of the next frame up (caller of this frame)
- the language in which the source code corresponding to this frame is written
- the address of the frame's arguments
- the program counter saved in it (the address of execution in the caller frame)
- which registers were saved in the frame

The verbose description is useful when something has gone wrong that has made the stack format fail to fit the usual conventions.

```
info frame addr
info f addr
```

Print a verbose description of the frame at address addr, without selecting that frame. The selected frame remains unchanged by this command. This requires the same kind of address (more than one for some architectures) that you specify in the frame command. See "Selecting a frame" on page 74.

info args

Print the arguments of the selected frame, each on a separate line.

info locals

Print the local variables of the selected frame, each on a separate line. These are all variables (declared either static or automatic) accessible at the point of execution of the selected frame.

info catch

Print a list of all the exception handlers that are active in the current stack frame at the current point of execution. To see other exception handlers, visit the

associated frame (using the up, down, or frame commands); then type: info catch

See "Breakpoints and exceptions" on page 55.

MIPS machines and the function stack

MIPS based computers use an unusual stack frame, which sometimes requires GDB to search backward in the object code to find the beginning of a function.

To improve response time (especially for embedded applications, where GDB may be restricted to a slow serial line for this search) you may want to limit the size of this search, using one of these commands:

These commands are available *only* when GDB is configured for debugging programs on MIPS processors.

```
set heuristic-fence-post limit
```

Restrict GDB to examining at most *limit* bytes in its search for the beginning of a function.

A value of 0 (the default) means there is no limit. However, except for 0, the larger the limit the more bytes heuristic-fence-post must search and therefore the longer it takes to run.

show heuristic-fence-post

Display the current limit.

78 Debugging with GDB



Examining source files

GDB can print parts of your program's source, since the debugging information recorded in the program tells GDB what source files were used to build it. See the following documentation for more discussion on these subjects.

- "Printing source lines" on page 80
- "Searching source files" on page 82
- "Specifying source directories" on page 83
- "Source and machine code" on page 84

When your program stops, GDB spontaneously prints the line where it stopped. Likewise, when you select a stack frame (see "Selecting a frame" on page 74), GDB prints the line where execution in that frame has stopped. You can print other portions of source files by explicit command.

If you use GDB through its GNU Emacs interface, you may prefer to use Emacs facilities to view source; see "Using GDB under GNU Emacs" on page 223 for details of using Emacs with GDB.

Printing source lines

To print lines from a source file, use the list command (abbreviated 1). By default, ten lines are printed. There are several ways to specify what part of the file you want to print. The following are the forms of the list command most commonly used:

list linenum

Print lines centered around line number, *linenum*, in the current source file.

list function

Print lines centered around the beginning of function, function.

list

Print more lines. If the last lines printed were printed with a list command, this prints lines following the last lines printed; however, if the last line printed was a solitary line printed as part of displaying a stack frame (see "Examining the stack" on page 71), this prints lines centered around that line.

list -

Print lines just before the lines last printed.

By default, GDB prints ten source lines with any of these forms of the list command. You can change this functionality by using set listsize as the following discussions describe.

```
set listsize count
```

Make the list command display *count* source lines (unless the list argument explicitly specifies some other number).

show listsize

Display the number of lines that list prints.

Repeating a list command using the Return key discards the argument, so it is equivalent to typing list. This is more useful than listing the same lines again. An exception is made for an argument of '-'; that argument is preserved in repetition so that each repetition moves up in the source file.

In general, the list command expects you to supply zero, one or two *linespecs*. Linespecs specify source lines; there are several ways of writing them but the effect is always to specify some source line. The following is a complete description of the possible arguments for list.

list linespec

Print lines centered around the line specified by linespec.

list first, last

Print lines from first to last. Both arguments specify source lines.

list ,last

Print lines ending with last.

list first,

Print lines starting with first.

list -

Print lines just after the lines last printed.

list -

Print lines just before the lines last printed.

list

As described for list on page list Print more lines. If the last lines printed were printed with a list command, this prints lines following the last lines printed; however, if the last line printed was a solitary line printed as part of displaying a stack frame (see "Examining the stack" on page 71), this prints lines centered around that line..

The following are the ways of specifying a single source line—all the kinds of linespec.

number

Specifies line *number* of the current source file. When a list command has two linespecs, this refers to the same source file as the first linespec.

+offset

Specifies the line offset lines after the last line printed. When used as the second linespec in a list command that has two, this specifies the line offset lines down from the first linespec.

-offset

Specifies the line offset lines before the last line printed.

filename:number

Specifies line *number* in the source file, *filename*.

function

Specifies the line that begins the body of the function, *function*. For instance, in C, this is the line with the open brace.

filename: function

Specifies the line of the open-brace that begins the body of the function <code>function</code> in the file, <code>filename</code>. You only need the file name with a function name to avoid ambiguity when there are identically named functions in different source files.

*address

Specifies the line containing the program address, address may be any expression.

Searching source files

There are two commands for searching through the current source file for a regular expression.

forward-search regexp
search regexp

The command, 'forward-search regexp', checks each line, starting with the one following the last line listed, for a match for regexp. It lists the line that is found. You can use the synonym, 'search regexp', or abbreviate the command name as fo.

reverse-search regexp

The command, 'reverse-search regexp', checks each line, starting with the one before the last line listed and going backward, for a match for regexp. It lists the line that is found. You can abbreviate this command as rev.

82 ■ Debugging with GDB GNUPro Toolkit

Specifying source directories

Executable programs sometimes do not record the directories of the source files from which they were compiled, just the names. Even when they do, the directories could be moved between the compilation and your debugging session. GDB has a list of directories to search for source files; this is called the *source path*. Each time GDB wants a source file, it tries all the directories in the list, in the order they are present in the list, until it finds a file with the desired name.

NOTE: The executable search path is *not* used for this purpose. Neither is the current working directory, unless it happens to be in the source path.

If GDB cannot find a source file in the source path, and the object program records a directory, GDB tries that directory too. If the source path is empty, and there is no record of the compilation directory, GDB looks in the current directory as a last resort.

Whenever you reset or rearrange the source path, GDB clears out any information it has cached about where source files are found and where each line is in the file.

When you start GDB, its source path is empty. To add other directories, use the directory command.

```
directory dirname ...
dir dirname ...
```

Add directory, dirname, to the front of the source path. Several directory names may be given to this command, separated by ':' or whitespace. You may specify a directory that is already in the source path; this moves it forward, so GDB searches it sooner. You can use the string, '\$cdir', to refer to the compilation directory (if one is recorded), and '\$cwd' to refer to the current working directory. '\$cwd' is not the same as '.'—the former tracks the current working directory as it changes during your GDB session, while the latter is immediately expanded to the current directory at the time you add an entry to the source path.

directory

Reset the source path to empty again. This requires confirmation.

show directories

Print the source path; show which directories it contains.

If your source path is cluttered with directories that are no longer of interest, GDB may sometimes cause confusion by finding the wrong versions of source. You can correct the situation with the following method.

- 1. Use directory with no argument to reset the source path to empty.
- 2. Use directory with suitable arguments to reinstall the directories you want in the source path. You can add all the directories in one command.

Source and machine code

You can use the command, info line, to map source lines to program addresses (and vice versa), and the command, disassemble, to display a range of addresses as machine instructions. When run under GNU Emacs mode, the info line command now causes the arrow to point to the line specified. Also, info line prints addresses in symbolic form as well as hex.

```
info line linespec
```

Print the starting and ending addresses of the compiled code for source line linespec. Specify source lines in any of the ways understood by the list command (see "Printing source lines" on page 80).

For instance, we can use info line to discover the location of the object code for the first line of function, m4_changequote, as in the following example.

```
(gdb) info line m4_changecom
Line 895 of "builtin.c" starts at pc 0x634c and ends at 0x6350.
```

We can also inquire (using *addras, the form for linespec) what source line covers a particular address, as in the following example.

```
(gdb) info line *0x63ff
Line 926 of "builtin.c" starts at pc 0x63e4 and ends at 0x6404.
```

After info line, the default address for the x command is changed to the starting address of the line, so that 'x/i' is sufficient to begin examining the machine code (see "Examining memory" on page 93). Also, this address is saved as the value of the convenience variable, \$\(\xi\) (see "Convenience variables" on page 103).

disassemble

This specialized command dumps a range of memory as machine instructions. The default memory range is the function surrounding the program counter of the selected frame. A single argument to this command is a program counter value; GDB dumps the function surrounding this value. Two arguments specify a range of addresses (first inclusive, second exclusive) to dump.

We can use disassemble to inspect the object code range shown in the last info line example (the example shows SPARC machine instructions):

```
(gdb) disas 0x63e4 0x6404
Dump of assembler code from 0x63e4 to 0x6404:
0x63e4 <builtin_init+5340>: ble 0x63f8 <builtin_init+5360>
0x63e8 <builtin_init+5344>:
                             sethi %hi(0x4c00), %o0
0x63ec <builtin init+5348>:
                             ld [%i1+4], %o0
0x63f0 <builtin_init+5352>:
                             0x63fc <builtin_init+5364>
0x63f4 <builtin_init+5356>:
                             ld [%o0+4], %o0
0x63f8 <builtin_init+5360>:
                             or %00, 0x1a4, %00
0x63fc <builtin_init+5364>:
                              call 0x9288 <path_search>
```

0x6400 <builtin_init+5368>: nop End of assembler dump.

set assembly-language instruction-set

This command selects the instruction set to use when disassembling the program via the disassemble or $\ensuremath{\text{x/i}}$ com-mands. It is useful for architectures that have more than one native instruction set. Currently, it is only defined for the Intel x86 family. You can set instruction-set to either i386 or i8086. The default is 1386.

86 Debugging with GDB



Examining data

The usual way to examine data in your program is with the print command (abbreviated p), or its synonym, inspect. It evaluates and prints the value of an expression of the language your program is written in (see "Using GDB with different languages" on page 119).

```
print exp
print /f exp
```

exp is an expression (in the source language). By default the value of exp is printed in a format appropriate to its data type; you can choose a different format by specifying 'f', where f is a letter specifying the format; see "Output formats" on page 92.

```
print
print /f
```

If you omit *exp*, GDB displays the last value again (from the *value history*; see "Value history" on page 102). This allows you to conveniently inspect the same value in an alternative format.

A more low-level way of examining data is with the \times command. It examines data in memory at a specified address and prints it in a specified format. See "Examining memory" on page 93.

If you are interested in information about types, or about how the fields of a struct or class are declared, use the ptype exp command rather than print. See "Examining the symbol table" on page 141.

Expressions

print and many other GDB commands accept an expression and compute its value. Any kind of constant, variable or operator defined by the programming language you are using is valid in an expression in GDB. This includes conditional expressions, function calls, casts and string constants. It unfortunately does not include symbols defined by preprocessor #define commands. GDB now supports array constants in expressions input by the user. element, element ... is the syntax to use. For example, you can now use the command, print {1 2 3} to build up an array in memory that is memory allocated in the target program.

NOTE:

Because C is so widespread, most of the expressions shown in examples in this documentation are in C. See "Using GDB with different languages" on page 119 for information on how to use expressions in other languages.

In the following documentation, we discuss operators that you can use in GDB expressions regardless of your programming language. See also the introduction to "Examining data" on page 87.

Casts are supported in all languages, not just in C, because it is so useful to cast a number into a pointer in order to examine a structure at that address in memory.

GDB supports the following operators, in addition to those common to programming languages.

- '@' is a binary operator for treating parts of memory as arrays. See "Artificial arrays" on page 91 for more information.
- ":: allows you to specify a variable in terms of the file or function where it is defined. See "Program variables" on page 89 for more information.

{type} addr

Refers to an object of type, type, stored at address, addr, in memory. addr may be any expression whose value is an integer or pointer (but parentheses are required around binary operators, just as in a cast). This construct is allowed regardless of what kind of data is normally supposed to reside at addr.

88 Debugging with GDB

Program variables

The most common kind of expression to use is the name of a variable in your program. Variables in expressions are understood in the selected stack frame (see "Selecting a frame" on page "Selecting a frame" on page 74); they must be either *global* (sometimes referred to as *static*) or they must be *visible* (according to the scope rules of the programming language from the point of execution in that frame). Consider the following function example.

```
foo (a)
        int a;
{
   bar (a);
   {
   int b = test ();
   bar (b);
}
```

This means that you can examine and use the variable, a, whenever your program is executing within the function, foo; however, you can only use or examine the variable, b, while your program is executing inside the block where b is declared. There is an exception: you can refer to a variable or function whose scope is a single source file even if the current execution point is not in this file. But it is possible to have more than one such variable or function with the same name (in different source files). If that happens, referring to that name has unpredictable effects. If you wish, you can specify a static variable in a particular function or file, using the colon-colon notation (::) as in the following example.

```
file::variable
function::variable
```

In the previous example, file or function refer to the name of the context for the static input, variable. In the case of file names, you can use quotes to make sure GDB parses the file name as a single word—for example, to print a global value of x defined in 'f2.c', use (gdb) p 'f2.c'::x.

This use of '::' is very rarely in conflict with the very similar use of the same notation in C++. GDB also supports use of the C++ scope resolution operator in GDB expressions.

WARNING:

Occasionally, a local variable may appear to have the wrong value at certain points in a function—just after entry to a new scope, and just before exit.

You may see this problem when you are stepping by machine

instructions. This is because, on most machines, it takes more than one instruction to set up a stack frame (including local variable definitions); if you are stepping by machine instructions, variables may appear to have the wrong values until the stack frame is completely built. On exit, it usually also takes more than one machine instruction to destroy a stack frame; after you begin stepping through that group of instructions, local variable definitions may be gone.

90 ■ Debugging with GDB GNUPro Toolkit

Artificial arrays

It is often useful to print out several successive objects of the same type in memory; a section of an array, or an array of dynamically determined size for which only a pointer exists in the program.

You can do this by referring to a contiguous span of memory as an *artificial array*, using the binary operator, '②'. The left operand of '③' should be the first element of the desired array and be an individual object. The right operand should be the desired length of the array. The result is an array value whose elements are all of the type of the left argument. The first element is actually the left argument; the second element comes from bytes of memory immediately following those holding the first element, and so on.

If a program says int *array = (int *) malloc (len * sizeof (int));, you can print the contents of array with p *array@len.

The left operand of '@' must reside in memory. Array values made with '@' in this way behave just like other arrays in terms of subscripting, and are coerced to pointers when used in expressions. Artificial arrays most often appear in expressions via the value history (see "Value history" on page Value history), after printing one out.

Another way to create an artificial array is to use a cast. This re-interprets a value as if it were an array. The value need not be in memory:

```
(gdb) p/x (short[2])0x12345678
$1 = {0x1234, 0x5678}
```

As a convenience, if you leave the array length out, as in '(type)[])value', GDB calculates the size to fill the value, as 'sizeof(value)/sizeof(type)' as the following example shows.

```
(gdb) p/x (short[])0x12345678
$2 = {0x1234, 0x5678}
```

Sometimes the artificial array mechanism is not quite enough; in moderately complex data structures, the elements of interest may not actually be adjacent—for example, if you are interested in the values of pointers in an array. One useful work-around in this situation is to use a convenience variable (see "Convenience variables" on page 103) as a counter in an expression that prints the first interesting value, and then repeat that expression using Return. For instance, suppose you have an array, dtab, of pointers to structures, and you are interested in the values of a field, fv, in each structure. The following is an example of what you might type, after which use the Return key twice.

```
set $i = 0
p dtab[$i++]->fv
```

Output formats

By default, GDB prints a value according to its *data type*. Sometimes this is not what you want. For example, you might want to print a number in hex, or a pointer in decimal. Or you might want to view data in memory at a certain address as a character string or as an instruction. To do these things, specify an *output format* when you print a value.

The simplest use of output formats is to say how to print a value already computed. This is done by starting the arguments of the print command with a slash and a format letter. The format letters supported are:

Regard the bits of the value as an integer, and print the integer in hexadecimal.

d Print as integer in signed decimal.

Print as integer in unsigned decimal.

Print as integer in octal.

Print as integer in binary. The letter 't' stands for "two". 1

Print as an address, both absolute in hexadecimal and as an offset from the nearest preceding symbol. You can use this format used to discover where (in what function) an unknown address is located:

```
(gdb) p/a 0x54320
$3 = 0x54320 <_initialize_vx+396>
```

Regard as an integer and print it as a character constant.

Regard the bits of the value as a floating point number and print using typical floating point syntax.

For example, to print the program counter in hex (see "Registers" on page 105), type $p/x \ pc$. No space is required before the slash because command names in GDB cannot contain a slash. To reprint the last value in the value history with a different format, you can use the print command with just a format and no expression. For example, 'p/x' reprints the last value in hex.

.

С

b' cannot be used because these format letters are also used with the x command, where 'b' stands for "byte"; see "Examining memory" on page 93.

Examining memory

You can use the x command (for "examine") to examine memory in any of several formats, independently of your program's data types.

```
x/ nfu addr
x addr
x
```

Use the x command to examine memory.

n, f, and u are all optional parameters that specify how much memory to display and how to format it; addr is an expression giving the address where you want to start displaying memory. If you use defaults for nfu, you need not type the slash, '/'. Several commands set convenient defaults for addr.

n, the repeat count

The repeat count is a decimal integer; the default is 1. It specifies how much memory (counting by units, *u*) to display.

f, the display format

The display format is one of the formats used by print,'s' (null-terminated string), or 'i' (machine instruction). The default is 'x' (hexadecimal) initially. The default changes each time you use either x or print.

u, the unit size

The unit size uses any of the following variables.

```
b
Bytes.
```

Halfwords (two bytes).

Words (four bytes). This is the initial default.

Giant words (eight bytes).

Each time you specify a unit size with x, that size becomes the default unit the next time you use x. (For the 's' and 'i' formats, the unit size is ignored and is normally not written.)

addr, starting display address

<code>addr</code> is the address where you want GDB to begin displaying memory. The expression need not have a pointer value (though it may); it is always interpreted as an integer address of a byte of memory. See "Expressions" on page 88 for more information on expressions. The default for <code>addr</code> is usually just after the last address examined—but several other commands also set the default address: <code>info</code> <code>breakpoints</code> (to the address of the last breakpoint listed), <code>info</code> <code>line</code> (to the

starting address of a line), and print (if you use it to display a value from memory).

For example, 'x/3uh 0x54320' is a request to display three halfwords (h) of memory, formatted as unsigned decimal integers (u), starting at address 0x54320. 'x/4xw \$sp' prints the four words (w) of memory above the stack pointer (here, '\$sp'; see "Registers" on page 105) in hexadecimal (x).

Since the letters indicating unit sizes are all distinct from the letters specifying output formats, you do not have to remember whether unit size or format comes first; either order works. The output specifications '4xw' and '4wx' mean exactly the same thing. (However, the count n must come first; 'wx4' does not work.)

Even though the unit size u is ignored for the formats 's' and 'i', you might still want to use a count n; for example, '3i' specifies that you want to see three machine instructions, including any operands. The command disassemble gives an alternative way of inspecting machine instructions; see "Source and machine code" on page 84.

All the defaults for the arguments to x are designed to make it easy to continue scanning memory with minimal specifications each time you use x. For example, after you have inspected three machine instructions with 'x/3i addr', you can inspect the next seven with just 'x/7'. If you use Return to repeat the x command, the repeat count n is used again; the other arguments default as for successive uses of x.

The addresses and contents printed by the x command are not saved in the value history because there is often too much of them and they would get in the way. Instead, GDB makes these values available for subsequent use in expressions as values of the convenience variables \$\(\) and \$\(\). After an x command, the last address examined is available for use in expressions in the convenience variable \$_. The contents of that address, as examined, are available in the convenience variable, \$__.

If the x command has a repeat count, the address and contents saved are from the last memory unit printed; this is not the same as the last address printed if several units were printed on the last line of output.

Automatic display

If you find that you want to print the value of an expression frequently (to see how it changes), you might want to add it to the *automatic display list* so that GDB prints its value each time your program stops. Each expression added to the list is given a number to identify it; to remove an expression from the list, you specify that number. The automatic display looks like the following.

```
2: foo = 38
3: bar[5] = (struct hack *) 0x3804
```

This display shows item numbers, expressions and their current values. As with displays you request manually, using x or print, you can specify the output format you prefer; in fact, display decides whether to use print or x depending on how elaborate your format specification is—it uses x if you specify a unit size, or one of the two formats ('i' and 's') that are only supported by x; otherwise it uses print.

```
display exp
```

Add the expression, *exp*, to the list of expressions to display each time your program stops. See "Expressions" on page 88.

display does not repeat if you press Return again after using it.

```
display/fmt exp
```

For f_{mt} specifying only a display format and not a size or count, add the expression exp to the auto-display list but arrange to display it each time in the specified format, f_{mt} . See "Output formats" on page 92.

```
display/fmt addr
```

For fmt 'i' or 's', or including a unit-size or a number of units, add the expression, addr, as a memory address to be examined each time your program stops. Examining means in effect doing 'x/fmt addr'. See "Examining memory" on page 93.

For example, 'display/i \$pc' can be helpful, to see the machine instruction about to be executed each time execution stops ('\$pc' is a common name for the program counter; see "Registers" on page 105).

```
undisplay dnums ...
delete display dnums ...
```

Remove item numbers dnums from the list of expressions to display.

undisplay does not repeat if you use Return after using it. (Otherwise you would just get the error, 'No display number...'.)

```
disable display dnums ...
```

Disable the display of item numbers, *dnums*. A disabled display item is not printed automatically, but is not forgotten. It may be enabled again later.

enable display dnums ...

Enable display of item numbers, dnums. It becomes effective once again in auto display of its expression, until you specify otherwise.

display

Display the current values of the expressions on the list, just as is done when your program stops.

info display

Print the list of expressions previously set up to display automatically, each one with its item number, but without showing the values. This includes disabled expressions, which are marked as such. It also includes expressions which would not be displayed right now because they refer to automatic variables not currently available.

If a display expression refers to local variables, then it does not make sense outside the lexical context for which it was set up. Such an expression is disabled when execution enters a context where one of its variables is not defined. For example, if you give the command, display last_char, while inside a function with an argument, last_char, GDB displays this argument while your program continues to stop inside that function. When it stops elsewhere—where there is no variable, last_char, the display is disabled automatically. The next time your program stops where last_char is meaningful, you can enable the display expression once again.

96 Debugging with GDB

Print settings

GDB provides the following ways to control how *arrays*, *structures*, and *symbols* are printed. These settings are useful for debugging programs in any language:

```
set print address
set print address on
```

GDB prints memory addresses showing the location of stack traces, structure values, pointer values, breakpoints, and so forth, even when it also displays the contents of those addresses. The default is on.

For example, the following is what a stack frame display looks like with set print address on:

Do not print addresses when displaying their contents. For example, the following is the same stack frame displayed with set print address off:

```
(gdb) set print addr off
(gdb) f
#0 set_quotes (lq="<<", rq=">>") at input.c:530
530 if (lquote != def_lquote)
```

You can use 'set print address off' to eliminate all machine dependent displays from the GDB interface. For example, with print address off, you should get the same text for backtraces on all machines—whether or not they involve pointer arguments.

```
show print address
```

Show whether or not addresses are to be printed.

When GDB prints a symbolic address, it normally prints the closest earlier symbol plus an offset.

If that symbol does not uniquely identify the address (for example, it is a name whose scope is a single source file), you may need to clarify.

One way to do this is with info line, for example 'info line *0x4537'.

Alternately, you can set GDB to print the source file and line number when it prints a symbolic address:

```
set print symbol-filename on
```

Tell GDB to print the source file name and line number of a symbol in the symbolic form of an address.

```
set print symbol-filename off
```

Do not print source file name and line number of a symbol. This is the default.

```
show print symbol-filename
```

Show whether or not GDB will print the source file name and line number of a symbol in the symbolic form of an address.

Another situation where it is helpful to show symbol filenames and line numbers is when disassembling code; GDB shows you the line number and source file that corresponds to each instruction.

Also, you may wish to see the symbolic form only if the address being printed is reasonably close to the closest earlier symbol:

```
set print max-symbolic-offset max-offset
```

Display the symbolic form of an address if the offset between the closest earlier symbol and the address is less than max-offset. The default is 0, which tells GDB to always print the symbolic form of an address if any symbol precedes it.

```
show print max-symbolic-offset
```

Ask how large the maximum offset is that GDB prints in a symbolic address.

If you have a pointer and you are not sure where it points, try 'set print symbolfilename on'. Then you can determine the name and source file location of the variable where it points, using 'p/a pointer'. This interprets the address in symbolic form. For instance, the following shows that a variable, ptt, points at another variable, t, defined in 'hi2.c':

```
(qdb) set print symbol-filename on
(qdb) p/a ptt
$4 = 0xe008 < t in hi2.c>
```

WARNING:

For pointers that point to a local variable, 'p/a' does not show the symbol name and filename of the referent, even with the appropriate set print options turned on.

Other settings control how different kinds of objects are printed:

```
set print array
set print array on
```

Pretty print arrays. This format is more convenient to read, but uses more space. The default is off.

```
set print array off
```

Return to compressed format for arrays.

```
show print array
```

Show whether compressed or pretty format is selected for displaying arrays.

```
set print elements number-of-elements
```

Set a limit on how many elements of an array GDB will print. If GDB is printing a

large array, it stops printing after it has printed the number of elements set by the set print elements command. This limit also applies to the display of strings. Setting number-of-elements to zero means that the printing is unlimited.

```
show print elements
```

Display the number of elements of a large array that GDB will print. If the number is 0, then the printing is unlimited.

```
set print null-stop
```

Cause GDB to stop printing the characters of an array when the first NULL is encountered. This is useful when large arrays actually contain only short strings.

```
set print pretty on
```

Cause GDB to print structures in an indented format with one member per line, like the following example.

```
$1 = {
    next = 0x0,
    flags = {
        sweet = 1,
        sour = 1
    },
    meat = 0x54 "Pork"
}
```

set print pretty off

Cause GDB to print structures in a compact format, like the following example.

```
$1 = {next = 0x0, flags = {sweet = 1, sour = 1}, \\meat = 0x54 "Pork"}
```

This is the default format.

```
show print pretty
```

Show which format GDB is using to print structures.

```
set print sevenbit-strings on
```

Print using only seven-bit characters; if this option is set, GDB displays any eight-bit characters (in strings or character values) using the notation, \nnn. This setting is best if you are working in English (ASCII) and you use the high-order bit of characters as a marker or "meta" bit.

```
set print sevenbit-strings off
```

Print full eight-bit characters. This allows the use of more international character sets, and is the default.

```
show print sevenbit-strings
```

Show whether or not GDB is printing only seven-bit characters.

```
set print union on
```

Tell GDB to print unions which are contained in structures. This is the default setting.

```
set print union off
```

Tell GDB not to print unions which are contained in structures.

```
show print union
```

Ask GDB whether or not it will print unions which are contained in structures. For instance, consider the following example's declarations.

```
typedef enum {Tree, Bug} Species;
typedef enum {Big_tree, Acorn, Seedling} Tree_forms;
typedef enum {Caterpillar, Cocoon, Butterfly} Bug_forms;
struct thing {
     Species it;
     union {
      Tree_forms tree;
      Bug_forms bug;
     } form;
};
struct thing foo = {Tree, {Acorn}};
```

The example has set print union on having, in effect, 'p foo' printing the following result.

```
$1 = {it = Tree, form = {tree = Acorn, bug = Cocoon}}
With set print union off in effect, it would print the following result.
```

```
$1 = \{ it = Tree, form = {...} \}
```

The following settings are of interest when debugging C++ programs.

```
set print demangle
set print demangle on
```

Print C++ names in their source form rather than in the encoded ("mangled") form passed to the assembler and linker for type-safe linkage. The default is 'on'.

```
show print demangle
```

Show whether C++ names are printed in mangled or demangled form.

```
set print asm-demangle
set print asm-demangle on
```

Print C++ names in their source form rather than their mangled form, even in assembler code printouts such as instruction disassemblies. The default is off.

```
show print asm-demangle
```

Show whether C++ names in assembly listings are printed in mangled or demangled form.

```
set demangle-style style
```

Choose among several encoding schemes used by different compilers to represent C++ names. The choices for *style* are currently:

```
auto
        Allow GDB to choose a decoding style by inspecting your program.
    gnu
        Decode based on the GNU C++ compiler (g++) encoding algorithm. This is
        the default.
    lucid
        Decode based on the Lucid C++ compiler (1cc) encoding algorithm.
    arm
        Decode using the algorithm in the Annotated C++ Reference Manual
        (Margaret A. Ellis & Bjarne Stroustrup, Addison Wesley, 1990).
WARNING:
               This setting alone is not sufficient to allow debugging cfront-
               generated executables. GDB would require further enhancement to
               permit that functionality.
    foo
        Show the list of formats.
show demangle-style
    Display the encoding style currently in use for decoding C++ symbols.
set print object
set print object on
    When displaying a pointer to an object, identify the actual (derived) type of the
    object rather than the declared type, using the virtual function table.
set print object off
    Display only the declared type of objects, without reference to the virtual function
    table. This is the default setting.
show print object
    Show whether actual, or declared, object types are displayed.
set print static-members
set print static-members on
    Print static members when displaying a C++ object. The default is on.
set print static-members off
    Do not print static members when displaying a C++ object.
show print static-members
    Show whether C++ static members are printed, or not.
set print vtbl
set print vtbl on
    Pretty print C++ virtual function tables. The default is off.
```

set print vtbl off

show print vtbl

Do not pretty print C++ virtual function tables.

Show whether C++ virtual function tables are pretty printed, or not.

Value history

Values printed by the print command are saved in the GDB *value history*, allowing you to refer to them in other expressions. Values are kept until the symbol table is reread or discarded (for example with the file or symbol-file commands). When the symbol table changes, the value history is discarded, since the values may contain pointers back to the types defined in the symbol table.

The values printed are given history numbers by which you can refer to them. These are successive integers starting with one. print shows you the history number assigned to a value by printing '\$num=' before the value; num is the history number.

To refer to any previous value, use '\$' followed by the value's history number. The way print labels its output is designed to remind you of this. Just \$ refers to the most recent value in the history, and \$\$ refers to the value before that. \$\$ n refers to the nth value from the end; \$\$2 is the value just prior to \$\$, \$\$1 is equivalent to \$\$, and \$\$0 is equivalent to \$.

For example, suppose you have just printed a pointer to a structure and want to see the contents of the structure. It suffices to type p *\$.

If you have a chain of structures where the component next points to the next one, you can print the contents of the next one with p *\$.next.

You can print successive links in the chain by repeating this command, using the Return key.

NOTE:

The history records values, not expressions. Consider, for instance, if the value of x is 4 and you type the following example's commands.

```
print x
set x=5
```

Then the value recorded in the value history by the print command remains 4 even though the value of x has changed.

show values

Print the last ten values in the value history, with their item numbers. This is like 'p \$\$9' repeated ten times, except that show values does not change the history.

show values n

Print ten history values centered on history item number, n.

show values +

Print ten history values just after the values last printed. If no more values are available, show values + produces no display.

Using the Return key to repeat show values n has exactly the same effect as 'show values +'.

Convenience variables

GDB provides *convenience variables* that you can use within GDB to hold on to a value and refer to it later. These variables exist entirely within GDB; they are not part of your program, and setting a convenience variable has no direct effect on further execution of your program. That is why you can use them freely.

Convenience variables are prefixed with '\$'. Any name preceded by '\$' can be used for a convenience variable, unless it is one of the predefined machine-specific register names (see "Registers" on page 105). Value history references, in contrast, are *numbers* preceded by '\$'. See "Value history" on page 102.

You can save a value in a convenience variable with an assignment expression, just as you would set a variable in your program. For example, set \$foo = *object_ptr would save in \$foo the value contained in the object pointed to by object_ptr.

Using a convenience variable for the first time creates it, but its value is void until you assign a new value. You can alter the value with another assignment at any time. Convenience variables have no fixed types. You can assign a convenience variable any type of value, including structures and arrays, even if that variable already has a value of a different type. The convenience variable, when used as an expression, has the type of its current value.

```
show convenience
```

Print a list of convenience variables used so far, and their values. Abbreviated show con.

One of the ways to use a convenience variable is as a counter to be incremented or a pointer to be advanced. For instance, to print a field from successive elements of an array of structures, use the following as an example.

```
set $i = 0
print bar[$i++]->contents
```

Repeat that command by using the Return key.

The following convenience variables are created automatically by GDB and given values likely to be useful.

The variable, \$_, is automatically set by the x command to the last address examined (see "Examining memory" on page 93). Other commands which provide a default address for x to examine also set \$_ to that address; these commands include info line and info breakpoint. The type of \$_ is void *, except when set by the x command, in which case it is a pointer to the type of \$_._.

The variable, \$__, is automatically set by the \times command to the value found in the

last address examined. Its type is chosen to match the format in which the data was printed.

\$_exitcode

The variable, \$_exitcode, is automatically set to the exit code when the program being debugged terminates.

104 ■ Debugging with GDB

Registers

You can refer to machine register contents, in expressions, as variables with names starting with '\$'. The names of registers are different for each machine; use info registers to see the names used on your machine.

info registers

Print the names and values of all registers except floating-point registers (in the selected stack frame).

info all-registers

Print the names and values of all registers, including floating-point registers.

info registers regname...

Print the *relativized* value of each specified register, *regname*. As discussed in the following, register values are normally relative to the selected stack frame. *regname* may be any register name valid on the machine you are using, with or without the initial '\$'.

GDB has four "standard" register names that are available (in expressions) on most machines—whenever they do not conflict with an architecture's canonical mnemonics for registers. The register names, \$pc and \$sp, are used for the program counter register and the stack pointer. \$fp is used for a register that contains a pointer to the current stack frame, and \$ps is used for a register that contains the processor status. For example, you could print the program counter in hex with p/x \$pc, or print the instruction to be executed next with x/i \$pc, or add four to the stack pointer² with set \$sp += 4.

Whenever possible, these four standard register names are available on your machine even though the machine has different canonical mnemonics, so long as there is no conflict. The info registers command shows the canonical names. For example, on the SPARC, info registers displays the processor status register as \$psr but you can also refer to it as \$ps.

GDB always considers the contents of an ordinary register as an integer when the register is examined in this way. Some machines have special registers which can hold nothing but floating point; these registers are considered to have floating point values. There is no way to refer to the contents of an ordinary register as floating point value (although you can *print* it as a floating point value with 'print/f \$regname').

Some registers have distinct "raw" and "virtual" data formats. This means that the

.

This is a way of removing one word from the stack, on machines where stacks grow downward in memory (most machines, nowadays). This assumes that the innermost stack frame is selected; setting \$sp is not allowed when other stack frames are selected. To pop entire frames off the stack, regardless of machine architecture, use the **Return** key; see "Returning from a function" on page 149.

data format in which the register contents are saved by the operating system is not the same one that your program normally sees. For example, the registers of the 68881 floating point coprocessor are always saved in "extended" (raw) format, but all C programs expect to work with "double" (virtual) format. In such cases, GDB normally works with the virtual format only (the format that makes sense for your program), but the info registers command prints the data in both formats.

Normally, register values are relative to the selected stack frame (see "Selecting a frame" on page 74). This means that you get the value that the register would contain if all stack frames farther in were exited and their saved registers restored. In order to see the true contents of hardware registers, you must select the innermost frame (with 'frame 0').

However, GDB must deduce where registers are saved, from the machine code generated by your compiler. If some registers are not saved, or if GDB is unable to locate the saved registers, the selected stack frame makes no difference.

set rstack_high_address address

On AMD 29K family processors, registers are saved in a separate register stack. There is no way for GDB to determine the extent of this stack. Normally, GDB just assumes that the stack is large enough to result in GDB referencing memory locations that do not exist. If necessary, you can get around this problem by specifying the ending address of the register stack with the set rstack_high_address command. The argument should be an address, which you probably want to precede with '0x' to specify in hexadecimal.

show rstack_high_address

Display the current limit of the register stack, on AMD 29000 family processors.

Floating point hardware

Depending on the configuration, GDB may be able to give you more information about the status of the floating point hardware.

info float

Display hardware-dependent information about the floating point unit. The exact contents and layout vary depending on the floating point chip. Currently, 'info float' is supported on the ARM and x86 machines.

108 Debugging with GDB

110 ■ Debugging with GDB

112 Debugging with GDB

114 Debugging with GDB

116 ■ Debugging with GDB

118 Debugging with GDB



Using GDB with different languages

Although programming languages generally have common aspects, they are rarely expressed in the same manner. For instance, in ANSI C, dereferencing a pointer p is accomplished by *p, but in Modula-2, it is accomplished by p^. Values can also be represented (and displayed) differently. Hex numbers in C appear as '0x1ae', while in Modula-2 they appear as '1AEH'.

Language-specific information is built into GDB for some languages, allowing you to express operations like the previous in your program's native language, and allowing GDB to output values in a manner consistent with the syntax of your program's native language. The language you use to build expressions is called the *working language*.

The following documentation provides more discussion on language-specific issues.

- "Switching between source languages" on page 120
- "Displaying the language" on page 122
- "Type and range checking" on page 123
- "Supported languages" on page 126

Switching between source languages

There are two ways to control the working language—either have GDB set it automatically, or select it manually yourself. You can use the set language command for either purpose. On startup, GDB defaults to setting the language automatically. The working language is used to determine how expressions you type are interpreted, how values are printed, and so forth. The following discussions address the source language usage.

- "List of filename extensions and languages" on page 120
- "Setting the working language" on page 121
- "Having GDB infer the source language" on page 121

In addition to the working language, every source file that GDB knows about has its own working language. For some object file formats, the compiler might indicate which language a particular source file is in. However, most of the time GDB infers the language from the name of the file. The language of a source file controls whether C++ names are demangled—this way backtrace can show each frame appropriately for its own language. There is no way to set the language of a source file from within GDB. This is most commonly a problem when you use a program, such as cfront or f2c, that generates C but is written in another language. In that case, make the program use #line directives in its C output; that way GDB will know the correct language of the source code of the original program, and will display that source code, not the generated C code.

List of filename extensions and languages

If a source file name ends in one of the following extensions, then GDB infers that its language is the one indicated.

```
.mod
    Modula-2 source file
.c
    C source file
.c
.cc
.cxx
.cpp
.cp
.c++
```

```
.ch
.c186
.c286
CHILL source file.
```

Assembler source file. This actually behaves almost like C, but GDB does not skip over function prologues when stepping.

Setting the working language

If you allow GDB to set the language automatically, expressions are interpreted the same way in your debugging session and your program. If you wish, you may set the language manually. To do this, issue the command 'set language lang', where lang is the name of a language, such as c or modula-2. For a list of the supported languages, type 'set language'.

Setting the language manually prevents GDB from updating the working language automatically. This can lead to confusion if you try to debug a program when the working language is not the same as the source language, when an expression is acceptable to both languages—but means different things. For instance, if the current source file were written in C, and GDB was parsing Modula-2, a command such as print a =b +c might not have the effect you intended. In C, this means to add b and c and place the result in a. The result printed would be the value of a. In Modula-2, this means to compare a to the result of b+c, yielding a BOOLEAN value.

Having GDB infer the source language

To have GDB set the working language automatically, use 'set language local' or 'set language auto'. GDB then infers the working language. That is, when your program stops in a frame (usually by encountering a breakpoint), GDB sets the working language to the language recorded for the function in that frame. If the language for a frame is unknown (that is, if the function or block corresponding to the frame was defined in a source file that does not have a recognized extension), the current working language is not changed, and GDB issues a warning.

This may not seem necessary for most programs, which are written entirely in one source language. However, program modules and libraries written in one source language can be used by a main program written in a different source language. Using 'set language auto' in this case frees you from having to set the working language manually.

Displaying the language

The following commands help you find out which language is the working language, and also what language in which source files were written.

show language

Display the current working language. This is the language you can use with commands such as print to build and compute expressions that may involve variables in your program.

info frame

Display the source language for this frame. This language becomes the working language if you use an identifier from this frame. See "Information about a frame" on page 76 to identify the other information about the language in the source files.

info source

Display the source language of this source file. See "Examining the symbol table" on page 141 to identify the other information about the language in the source files.

122 ■ Debugging with GDB GNUPro Toolkit

Type and range checking

Some languages are designed to guard against you making seemingly common errors through a series of compile- and run-time checks. These include checking the type of arguments to functions and operators, and making sure mathematical overflows are caught at run time. Checks such as these help to ensure a program's correctness once it has been compiled by eliminating type mismatches, and providing active checks for range errors when your program is running. For more details, see "An overview of type checking" on page 123 and "An overview of range checking" on page 124.L

GDB can check for conditions. Although GDB does not check the statements in your program, it can check expressions entered directly into GDB for evaluation, using the print command, for example. As Lwith the working language, GDB can also decide whether or not to check automatically based on your program's source language. See "Supported languages" on page 126 for the default settings of supported languages.

WARNING:

In some cases, the GDB commands for type and range checking are included and do not yet have any effect. The following discussion documents the intent of such commands.

An overview of type checking

Some languages, such as Modula-2, are strongly typed, meaning that the arguments to operators and functions have to be of the correct type, otherwise an error occurs. These checks prevent type mismatch errors from ever causing any run-time problems. Consider the following examples.

Compare with the following example.

The second example fails because the CARDINAL 1 is not type-compatible with the REAL 2.3.

For the expressions you use in GDB commands, you can tell the GDB type checker to skip checking; to treat any mismatches as errors and abandon the expression; or to only issue warnings when type mismatches occur, but evaluate the expression anyway. When you choose the last of these, GDB evaluates expressions like the second example, but also issues a warning.

Even if you turn type checking off, there may be other reasons related to type that prevent GDB from evaluating an expression. For instance, GDB does not know how to add an int and a struct foo. These particular type errors have nothing to do with

the language in use, and usually arise from expressions, such as the one described which make little sense to evaluate anyway.

Each language defines to what degree it is strict about type. For instance, both Modula-2 and C require the arguments to arithmetical operators to be numbers. In C, enumerated types and pointers can be represented as numbers, so that they are valid arguments to mathematical operators. See "Supported languages" on page Supported languages for further details on specific languages.

GDB provides the following additional commands for controlling the type checker.

```
set check type auto
```

Set type checking on or off based on the current working language. See "Supported languages" on pageSupported languages, for the default settings for each language.

```
set check type on
set check type off
```

Set type checking on or off, overriding the default setting for the current working language. Issue a warning if the setting does not match the language default. If any type mismatches occur in evaluating an expression while typechecking is on, GDB prints a message and aborts evaluation of the expression.

```
set check type warn
```

Cause the type checker to issue warnings, but to always attempt to evaluate the expression. Evaluating the expression may still be impossible for other reasons. For example, GDB cannot add numbers and structures.

Show the current setting of the type checker, and whether or not GDB is setting it automatically.

An overview of range checking

In some languages (such as Modula-2), it is an error to exceed the bounds of a type; this is enforced with run-time checks. Such range checking is meant to ensure program correctness by making sure computations do not overflow, or indices on an array element access do not exceed the bounds of the array. For expressions you use in GDB commands, you can tell GDB to treat range errors in one of three ways: ignore them, always treat them as errors and abandon the expression, or issue warnings but evaluate the expression anyway. A range error can result from numerical overflow, from exceeding an array index bound, or when you type a constant that is not a member of any type. Some languages, however, do not treat overflows as an error. In many implementations of C, mathematical overflow causes the result to "wrap around" to lower values—for example, if m is the largest integer value, and s is the smallest, then the following input is congruent.

```
m +1 \Rightarrow s
```

This, too, is specific to individual languages, and in some cases specific to individual compilers or machines. See "Supported languages" on page Supported languages, for further details on specific languages. GDB provides the following additional commands for controlling the range checker.

```
set check range auto
```

Set range checking on or off based on the current working language. See "Supported languages" on page Supported languages for the default settings for each language.

```
set check range on set check range off
```

Set range checking on or off, overriding the default setting for the current working language. A warning is issued if the setting does not match the language default. If a range error occurs, then a message is printed and evaluation of the expression is aborted.

```
set check range warn
```

Output messages when the GDB range checker detects a range error, but attempt to evaluate the expression anyway. Evaluating the expression may still be impossible for other reasons, such as accessing memory that the process does not own (a typical example from many Unix systems).

```
show range
```

Show the current setting of the range checker, and whether or not it is being set automatically by GDB.

Supported languages

GDB 4 supports C, C++, and Modula-2. Some GDB features may be used in expressions regardless of the language you use: the GDB @ and :: operators, and the '{type}addr' construct (see "Expressions" on page 88) can be used with the constructs of any supported language. The following documentation details to what degree each source language is supported by GDB. These sections are not meant to be language tutorials or references, but serve only as a reference guide to what the GDB expression parser accepts, and what input and output formats should look like for different languages. There are many good books written on each of these languages; feel free to use them as a language reference or tutorial in addition to these discussions.

C and C++

Since C and C++ are so closely related, many features of GDB apply to both languages. Whenever this is the case, we discuss those languages together.

The C++ debugging facilities are jointly implemented by the GNU C++ compiler and GDB. Therefore, to debug your C++ code effectively, you must compile your C++ programs with the GNU C++ compiler, 9++.

For best results when debugging C++ programs, use the stabs debugging format. You can select that format explicitly with the G++ command-line options '-gstabs' or '-gstabs+'. See "Options for Debugging Your Program or GNU CC" in Using GNU *CC* in *GNUPro Compiler Tools* for more information.

C and C++ operators

Operators must be defined on values of specific types. For instance, + is defined on numbers and not on structures. Operators are often defined on groups of types. For the purposes of C and C++, the following definitions hold.

- Integral types include int with any of its storage-class specifiers; char; and enum.
- Floating-point types include float and double.
- Pointer types include all types defined as (type*).
- Scalar types include all of the previous types.

The following operators are supported. They are listed in order of increasing precedence.

The comma or sequencing operator. Expressions in a comma-separated list are

126 Debugging with GDB

```
evaluated from left to right, with the result of the entire expression being the last
    expression evaluated.
    Assignment. The value of an assignment expression is the value assigned. Defined
    on scalar types.
op=
    Used in an expression of the form a \circ p=b, and translated to a=a \circ pb. op= and =
    have the same precendence. Op is any one of the operators |, \hat{,} \&, <<, >>, +, -, *, /,
?:
    The ternary operator. a? b: c can be thought of as: if a, then b, else, c. a should
    be of an integral type.
Logical OR. Defined on integral types.
    Logical AND. Defined on integral types.
    Bitwise OR. Defined on integral types.
    Bitwise exclusive-OR. Defined on integral types.
&
    Bitwise AND. Defined on integral types.
! =
    Equality and inequality. Defined on scalar types. The value of these expressions is
    0 for false and non-zero for true.
>
<=
    Less than, greater than, less than or equal, greater than or equal. Defined on scalar
    types. The value of these expressions is 0 for false and non-zero for true.
<<
>>
    Left shift, and right shift. Defined on integral types.
```

Addition and subtraction. Defined on integral types, floating-point types and pointer types.

The GDB "artificial array" operator (see "Expressions" on page 88).

```
Multiplication, division, and modulus. Multiplication and division are defined on
    integral and floating-point types. Modulus is defined on integral types.
    Increment and decrement. When appearing before a variable, the operation is
    performed before the variable is used in an expression; when appearing after it,
    the variable's value is used before the operation takes place.
    Pointer dereferencing. Defined on pointer types. Same precedence as ++.
&
    Address operator. Defined on variables. Same precedence as ++.
    For debugging C++, GDB implements a use of '&' beyond what is allowed in the
    C++ language itself: you can use '&(&ref)' (or, if you prefer, '&&ref') to examine
    the address where a C++ reference variable (declared with '&ref') is stored.
    Negative. Defined on integral and floating-point types. Same precedence as ++.
    Logical negation. Defined on integral types. Same precedence as ++.
    Bitwise complement operator. Defined on integral types. Same precedence as ++.
    Structure member, and pointer-to-structure member. For convenience, GDB
    regards the two as equivalent, choosing whether to dereference a pointer based on
    the stored type information. Defined on struct and union data.
[]
    Array indexing. a[i] is defined as *(a+i). Same precedence as ->.
( )
    Function parameter list. Same precedence as ->.
    C++ scope resolution operator. Defined on struct, union, and class types.
    Doubled colons also represent the GDB scope operator (see "Expressions"
    on page 88) with the same precedence as the C++ scope resolution operator
    functionality.
```

C and C++ constants

GDB allows you to express the constants of C and C++ in the following ways.

- Integer constants are a sequence of digits. Octal constants are specified by a leading '0' (i.e., zero), and hexadecimal constants by a leading '0x' or '0x'. Constants may also end with a letter, '1', specifying that the constant should be treated as a long value.
- Floating point constants are a sequence of digits, followed by a decimal point, followed by a sequence of digits, and optionally followed by an exponent. An exponent is of the form: 'e[[+]|-]nnn', where nnn is another sequence of digits. The '+' is optional for positive exponents.
- Enumerated constants consist of enumerated identifiers, or their integral equivalents.
- Character constants are a single character surrounded by single quotes ('), or a number—the ordinal value of the corresponding character (usually its ASCII value). Within quotes, the single character may be represented by a letter or by escape sequences, which are of the form '\nnn', where nnn is the octal representation of the character's ordinal value; or of the form '\x', where 'x' is a predefined special character—for example, '\n' for newline.
- String constants are a sequence of character constants surrounded by double quotes (" ").
- Pointer constants are an integral value. You can also write pointers to constants using the C operator, '&'.
- Array constants are comma-separated lists surrounded by braces '{' and '}'; for example, '{"1,2,3}' is a three-element array of integers, '{{1,2}, {3,4}, {5,6}}' is a three-by-two array, and '{&"hi", &"there", &"fred"}' is a three-element array of pointers.

C++ expressions

GDB expression handling has a number of extensions to interpret a significant subset of C++ expressions.

WARNING:

GDB can only debug C++ code if you compile with the GNU C++ compiler. Moreover, C++ debugging depends on the use of additional debugging information in the symbol table, and thus requires special support. GDB has this support only with the stabs debug format. In particular, if your compiler generates a.out, MIPS ECOFF,

RS/6000 XCOFF, or ELF with stabs extensions to the symbol table, these facilities are all available. (With GNU CC, you can use the '-gstabs' option to request stabs debugging extensions explicitly.) Where the object code format is standard COFF or DWARF in ELF, on the other hand, most of the C++ support in GDB does not work.

Member function calls are allowed; you can use expressions like

```
count = aml->GetOriginal(x, y)
```

- While a member function is active (in the selected stack frame), your expressions have the same namespace available as the member function; that is, GDB allows implicit references to the class instance pointer, this, following the same rules as C++.
- You can call overloaded functions; GDB resolves the function call to the right definition, with one restriction—you must use arguments of the type required by the function that you want to call. GDB does not perform conversions requiring constructors or user-defined type operators.
- GDB understands variables declared as C++ references; you can use them in expressions just as you do in C++ source—they are automatically dereferenced. In the parameter list shown when GDB displays a frame, the values of reference variables are not displayed (unlike other variables); this avoids clutter, since references are often used for large structures. The address of a reference variable is always shown, unless you have specified 'set print address off'.
- GDB supports the C++ name resolution operator ::-your expressions can use it just as expressions in your program do. Since one scope may be defined in another, you can use :: repeatedly if necessary, for example in an expression like 'scope1::scope2::name'. GDB also allows resolving name scope by reference to source files, in both C and C++ debugging (see "Program variables" on page 89).

C and C++ defaults

If you allow GDB to set type and range checking automatically, they both default to off whenever the working language changes to C or C++. This happens regardless of whether you or GDB selects the working language.

If you allow GDB to set the language automatically, it recognizes source files whose names end with '.c', '.C', or '.cc', and when GDB enters code compiled from one of these files, it sets the working language to C or C++. See "Having GDB infer the source language" on page Having GDB infer the source language for further details.

C and C++ type and range checks

By default, when GDB parses C or C++ expressions, type checking is not used. However, if you turn type checking on, GDB considers two variables type equivalent if:

- The two variables are structured and have the same structure, union, or enumerated tag.
- The two variables have the same type name, or types that have been declared equivalent through typedef.

Range checking, if turned on, is done on mathematical operations. Array indices are not checked, since they are often used to index a pointer that is not itself an array.

GDB and C

The set print union and show print union commands apply to the union type. When set to 'on', any union that is inside a struct or class is also printed. Otherwise, it appears as '{...}'.

The @ operator aids in the debugging of dynamic arrays, formed with pointers and a memory allocation function. See "Expressions" on page 88.

GDB features for C++

Some GDB commands are particularly useful with C++, and some are designed specifically for use with C++. The following is a summary of the commands.

breakpoint menus

When you want a breakpoint in a function whose name is overloaded, GDB breakpoint menus help you specify which function definition you want. See "Breakpoint menus" on page 63.

rbreak regex

Setting breakpoints using regular expressions is helpful for setting breakpoints on overloaded functions that are not members of any special classes. See "Setting breakpoints" on page 50.

catch exceptions

info catch

Debug C++ exception handling using these commands. See "Breakpoints and exceptions" on page 55.

ptype typename

Print inheritance relationships as well as other information for type typename. See "Examining the symbol table" on page 141.

```
set print demangle
show print demangle
set print asm-demangle
show print asm-demangle
```

Control whether C++ symbols display in their source form, both when displaying code as C++ source and when displaying disassemblies. See "Print settings" on page 97.

```
set print object
show print object
```

Choose whether to print derived (actual) or declared types of objects. See "Print settings" on page 97.

```
set print vtbl
show print vtbl
```

Control the format for printing virtual function tables. See "Print settings" on page 97.

Overloaded symbol names

You can specify a particular definition of an overloaded symbol, using the same notation that is used to declare such symbols in C++: type 'symbol (types)' rather than just symbol. You can also use the GDB command-line word completion facilities to list the available choices, or to finish the type list for you. See "Command completion" on page 25 for details.

Modula-2

The extensions made to GDB to support Modula-2 only support output from the GNU Modula-2 compiler (which is currently in development). Other Modula-2 compilers are not currently supported, and attempting to debug executables produced by them is most likely to give an error as GDB reads in the executable's symbol table.

Modula 2 Operators

Operators must be defined on values of specific types. For instance, + is defined on numbers and not on structures. Operators are often defined on groups of types. For the purposes of Modula-2, the following definitions hold.

- Integral types consist of INTEGER, CARDINAL, and their subranges.
- Character types consist of CHAR and its subranges.
- *Floating-point* types consist of REAL.
- *Pointer* types consist of anything declared as POINTER TO type.
- Scalar types consist of all of the previous types.
- Set types consist of SET and BITSET types.

```
• Boolean types consist of BOOLEAN.
```

The following operators are supported, and appear in order of increasing precedence.

```
Function argument or array index separator.
```

Assignment. The value of var :=value is value.

<

Less than, greater than on integral, floating-point, or enumerated types.

. –

Less than, greater than, less than or equal to, greater than or equal to on integral, floating-point and enumerated types, or set inclusion on set types. Same precedence as <.

-<>

Equality and two ways of expressing inequality, valid on scalar types. Same precedence as <. In GDB scripts, only <> is available for inequality, since # conflicts with the script comment character.

IN

Set membership. Defined on set types and the types of their members. Same precedence as <.

OR

Boolean disjunction. Defined on boolean types.

AND

&

Boolean conjuction. Defined on boolean types.

[®] The GDB "artificial array" operator (see "Expressions" on page 88).

_

Addition and subtraction on integral and floating-point types, or union and difference on set types.

M

Multiplication on integral and floating-point types, or set intersection on set types.

Division on floating-point types, or symmetric set difference on set types. Same precedence as \star .

DIV

```
MOD
       Integer division and remainder. Defined on integral types. Same precedence as *.
       Negative. Defined on INTEGER and REAL data.
       Pointer dereferencing. Defined on pointer types.
   NOT
       Boolean negation. Defined on boolean types. Same precedence as ^.
       RECORD field selector. Defined on RECORD data. Same precedence as ^.
   []
       Array indexing. Defined on ARRAY data. Same precedence as ^.
   ()
       Procedure argument list. Defined on PROCEDURE objects. Same precedence as ^.
       GDB and Modula-2 scope operators.
   WARNING:
                   Sets and their operations are not yet supported, so GDB treats the use
                   of the operator, IN, or the use of operators, +, -, *, /, =,<>, \#, <=, and
                   >= on sets as an error.
Modula-2 built-in functions and procedures
   Modula-2 also makes available several built-in procedures and functions. In
   describing these, the following meta-variables are used:
```

- а Represents an ARRAY variable.
- С Represents a CHAR constant or variable.
- Represents a variable or constant of integral type.
- Represents an identifier that belongs to a set. Generally used in the same function with the metavariable, s. The type of s should be SET OF mtype (where mtype is the type of m).
- n Represents a variable or constant of integral or floating-point type.
- Represents a variable or constant of floating-point type.

```
t
    "Represents a type.
    Represents a variable.
    Represents a variable or constant of one of many types. See the explanation of the
    function for details.
All Modula-2 built-in procedures also return a result, discussed by the following
descriptions.
ABS(n)
    Returns the absolute value of n.
    If c is a lower case letter, it returns its upper case equivalent, otherwise it returns
    its argument
CHR(i)
    Returns the character whose ordinal value is i.
DEC(v)
    Decrements the value in the variable v. Returns the new value.
DEC(v, i)
    Decrements the value in the variable v by i. Returns the new value.
EXCL(m, s)
    Removes the element m from the set s. Returns the new set.
    Returns the floating point equivalent of the integer i.
    Returns the index of the last member of a.
INC(v)
    Increments the value in the variable v. Returns the new value.
    Increments the value in the variable v by i. Returns the new value.
INCL(m, s)
    Adds the element m to the set s if it is not already there. Returns the new set.
MAX(t)
    Returns the maximum value of the type t.
MIN(t)
    Returns the minimum value of the type t.
    Returns boolean TRUE if i is an odd number.
ORD(x)
    Returns the ordinal value of its argument. For example, the ordinal value of a
```

character is its ASCII value (on machines supporting the ASCII character set). *x* must be of an ordered type, which include integral, character and enumerated types.

SIZE(x)

Returns the size of its argument. x can be a variable or a type.

TRUNC(r)

Returns the integral part of r.

VAL(t, i)

Returns the member of the type t whose ordinal value is i.

WARNING: Sets and their operations are not yet supported, so GDB treats the use of procedures INCL and EXCL as an error.

Modula-2 Constants

GDB allows you to express the constants of Modula-2 in the following ways.

- Integer constants are simply a sequence of digits. When used in an expression, a constant is interpreted to be type-compatible with the rest of the expression. Hexadecimal integers are specified by a trailing 'H', and octal integers by a trailing 'B'.
- Floating point constants appear as a sequence of digits, followed by a decimal point and another sequence of digits. An optional exponent can then be specified, in the form 'E[+|-]nnn', where '[+|-]nnn' is the desired exponent. All of the digits of the floating point constant must be valid decimal (base 10) digits.
- Character constants consist of a single character enclosed by a pair of like quotes, either single (') or double ("). They may also be expressed by their ordinal value (their ASCII value, usually) followed by a 'c'.
- String constants consist of a sequence of characters enclosed by a pair of like quotes, either single (') or double ("). Escape sequences in the style of C are also allowed. See "C and C++ constants" on page C and C++ constants or a brief explanation of escape sequences.
- Enumerated constants consist of an enumerated identifier.
- Boolean constants consist of the identifiers TRUE and FALSE.
- Pointer constants consist of integral values only.
- Set constants are not yet supported.

Modula-2 defaults

If type and range checking are set automatically by GDB, they both default to on

whenever the working language changes to Modula-2. This happens regardless of whether you, or GDB, selected the working language.

If you allow GDB to set the language automatically, then entering code compiled from a file whose name ends with '.mod' sets the working language to Modula-2. See "Setting the working language" on page 121 for further details.

Deviations from standard Modula-2

A few changes have been made to make Modula-2 programs easier to debug. This is done primarily by loosening its type strictness.

- Unlike in standard Modula-2, pointer constants can be formed by integers. This allows you to modify pointer variables during debugging. (In standard Modula-2, the actual address contained in a pointer variable is hidden from you; it can only be modified through direct assignment to another pointer variable or expression that returned a pointer.)
- C escape sequences can be used in strings and characters to represent non-printable characters. GDB prints out strings with these escape sequences embedded. Single non-printable characters are printed using the 'CHR(nnn)' format.
- The assignment operator (:=) returns the value of its right-hand argument.
- All built-in procedures both modify and return their argument.

Modula-2 type and range checks

WARNING: In this release, GDB does not yet perform type or range checking. GDB considers two Modula-2 variables type equivalent if the following conditions apply.

- They are of types that have been declared equivalent, using a TYPE t1-t2 statement.
- They have been declared on the same line.

NOTE: This is true of the GNU Modula-2 compiler, but it may not be true of other compilers.)

As long as type checking is enabled, any attempt to combine variables whose types are not equivalent is an error. Range checking is done on all mathematical operations, assignment, array index bounds, and all built-in functions and procedures.

Modula-2 scope operator (.), the GDB scope operator (..)

There are a few subtle differences between the Modula-2 scope operator (.) and the GDB scope operator (::). The two have similar syntax, as in the following example.

```
module . id
 scope :: id
```

scope is the name of a module or a procedure. module is the name of a module. id is any declared identifier within your program, except another module. Using the :: operator makes GDB search the scope specified by scope, for the identifier, id.. If it is not found in the specified scope, then GDB searches all scope occurrences, enclosing the one specified by scope.

Using the Modula-2 operator, ., makes GDB search the current scope for the identifier specified by id that was imported from the definition module specified by module. With this operator, it is an error if the identifier, id, was not imported from definition module, module, or if id is not an identifier in module.

GDB and Modula-2

Some GDB commands have little use when debugging Modula-2 programs. Five subcommands of set print and show print apply specifically to C and C++: 'vtbl', 'demangle', 'asm-demangle', 'object', and 'union'. The first four apply to C++, and the last to the C union type, which has no direct analogue in Modula-2.

The @ operator (see "Expressions" on page 88), while available while using any language, is not useful with Modula-2. Its intent is to aid the debugging of dynamic arrays, which cannot be created in Modula-2 as they can in C or C++. However, because an address can be specified by an integral constant, the construct '{type}adrexp' is still useful. (see "Expressions" on page 88)

In GDB scripts, the Modula-2 inequality operator, #, is interpreted as the beginning of a comment. Use '<>' instead.

140 Debugging with GDB



Examining the symbol table

The commands described in this section allow you to inquire about the symbols (names of variables, functions and types) defined in your program. This information is inherent in the text of your program and does not change as your program executes. GDB finds it in your program's symbol table, in the file indicated when you started GDB (see "Choosing files" on page 17), or by one of the file-management commands (see "Commands to specify files" on page 13GDBfiles).

Occasionally, you may need to refer to symbols that contain unusual characters, which GDB ordinarily treats as word delimiters. The most frequent case is in referring to static variables in other source files (see "Program variables" on page 89). File names are recorded in object files as debugging symbols, but GDB would ordinarily parse a typical file name, like 'foo.c', as the three words 'foo' '.' 'c'. To allow GDB to recognize 'foo.c' as a single symbol, enclose it in single quotes; for example, p 'foo.c'::x looks up the value of x in the scope of the file, foo.c.

info address symbol

Describe where the data for <code>symbol</code> is stored. For a register variable, this says which register it is kept in. For a non-register local variable, this prints the stackframe offset at which the variable is always stored.

NOTE: The contrast with 'print &symbol' does not work at all for a register variable, and for a stack local variable prints the exact address of the current instantiation of the variable.

```
whatis exp
```

Print the data type of expression, exp. exp is not actually evaluated, and any sideeffecting operations (such as assignments or function calls) inside it do not take place. See "Expressions" on page 88.

whatis

Print the data type of \$, the last value in the value history.

```
ptype typename
```

Print a description of data type typename. typename may be the name of a type, or for C code it may have the form 'class class-name', 'struct struct-tag', 'union union-tag' Or 'enum enum-tag'.

ptype exp ptype

> Print a description of the type of expression, exp. ptype differs from whatis by printing a detailed description, instead of just the name of the type. For instance, consider the following variable declaration example.

```
struct complex {double real; double imag;} v;
```

The declaration's two commands give the following output.

```
(qdb) whatis v
type = struct complex
(qdb) ptype v
type = struct complex {
     double real;
     double imag;
```

As with whatis, using ptype without an argument refers to the type of \$, the last value in the value history.

```
info types regexp
info types
```

Print a brief description of all types whose name matches regexp (or all types in your program, if you supply no argument). Each complete typename is matched as though it were a complete line; thus, 'i type value' gives information on all types in your program whose name includes the string value, but 'i type 'value\$' gives information only on types whose complete name is value.

This command differs from ptype in two ways: first, like whatis, it does not print a detailed description; second, it lists all source files where a type is defined.

```
info source
```

Show the name of the current source file—that is, the source file for the function containing the current point of execution—and the language it was written in.

info sources

Print the names of all source files in your program for which there is debugging

information, organized into two lists: files whose symbols have already been read, and files whose symbols will be read when needed.

info functions

Print the names and data types of all defined functions.

info functions regexp

Print the names and data types of all defined functions whose names contain a match for regular expression, regexp. Thus, 'info fun step' finds all functions whose names include step; 'info fun 'step' finds those whose names start with step.

info variables

Print the names and data types of all variables that are declared outside of functions (i.e., excluding local variables).

```
info variables regexp
```

Print the names and data types of all variables (except for local variables) whose names contain a match for regular expression <code>regexp</code>.

Some systems allow individual object files that make up your program to be replaced without stopping and restarting your program. For example, in VxWorks you can simply recompile a defective object file and keep on running. If you are running on one of these systems, you can allow GDB to reload the symbols for the following automatically relinked modules:

```
set symbol-reloading on
```

Replace symbol definitions for the corresponding source file when an object file with a particular name is seen again.

```
set symbol-reloading off
```

Do not replace symbol definitions when re-encountering object files of the same name. This is the default state; if you are not running on a system that permits automatically relinking modules, you should leave symbol-reloading off, since otherwise GDB may discard symbols when linking large programs, that may contain several modules (from different directories or libraries) with the same name.

```
show symbol-reloading
```

Show the current on or off setting.

```
maint print symbols filename
maint print psymbols filename
maint print msymbols filename
```

Write a dump of debugging symbol data into the file, <code>filename</code>. These commands are used to debug the GDB symbol-reading code. Only symbols with debugging data are included.

If you use 'maint print symbols', GDB includes all the symbols for which it has already collected full details: that is, <code>filename</code> reflects symbols for only those files whose symbols GDB has read.

You can use the command, info sources, to find out which files these are. If you use 'maint print psymbols' instead, the dump shows information about symbols that GDB only knows partially—that is, symbols defined in files that GDB has skimmed, but not yet read completely.

Finally, 'maint print msymbols' dumps just the minimal symbol information required for each object file from which GDB has read some symbols. See "Commands to specify files" on page 154 for a discussion of how GDB reads symbols (in the description of symbol-file).

144 Debugging with GDB



Altering execution

Once you think you have found an error in your program, you might want to find out for certain whether correcting the apparent error would lead to correct results in the rest of the run. You can find the answer by experiment, using the GDB features for altering execution of the program. For example, you can store new values into variables or memory locations, give your program a signal, restart it at a different address, or even return prematurely from a function.

For more information, see the following documentation.

- "Assignment to variables" on page 146
- "Continuing at a different address" on page 147
- "Giving your program a signal" on page 148
- "Returning from a function" on page 149
- "Calling program functions" on page 150
- "Patching programs" on page 151

Assignment to variables

To alter the value of a variable, evaluate an assignment expression. See "Expressions" on page 88. For example, print x=4 stores the value 4 into the variable, x, and then prints the value of the assignment expression (which is 4). See "Using GDB with different languages" on page 119 for more information on operators in supported languages.

If you are not interested in seeing the value of the assignment, use the set command instead of the print command. set is really the same as print except that the expression's value is not printed and is not put in the value history (see "Value history" on page 102). The expression is evaluated only for its effects.

If the beginning of the argument string of the set command appears identical to a set subcommand, use the set variable command instead of only set. This command is identical to set except for its lack of subcommands. For example, if your program has a variable, width, you get an error if you try to set a new value with just 'set width=13', because GDB has the command set width:

```
(qdb) whatis width
type = double
(gdb) p width
$4 = 13
(qdb) set width=47
Invalid syntax in expression.
```

The invalid expression, of course, is '=47'. In order to actually set the program's variable, width, use (gdb) set var width=47.

GDB allows more implicit conversions in assignments than C; you can freely store an integer value into a pointer variable or vice versa, and you can convert any structure to any other structure that is the same length or shorter.

To store values into arbitrary places in memory, use the '{...}' construct to generate a value of specified type at a specified address (see "Expressions" on page 88). For example, {int}0x83040 refers to memory location 0x83040 as an integer (which implies a certain size and representation in memory), and set {int}0x83040 = 4 stores the value 4 into that memory location.

Continuing at a different address

Ordinarily, when you continue your program, you do so at the place where it stopped, with the continue command. You can instead continue at an address of your own choosing, with the following commands.

jump linespec

Resume execution at a specified line, <code>linespec</code>. Execution stops again immediately if there is a breakpoint there. See "Printing source lines" on page 80 for a description of the different forms of <code>linespec</code>.

The jump command does not change the current stack frame, or the stack pointer, or the contents of any memory location or any register other than the program counter. If line, <code>linespec</code>, is in a different function from the one currently executing, the results may be bizarre if the two functions expect different patterns of arguments or of local variables. For this reason, the <code>jump</code> command requests confirmation if the specified line is not in the function currently executing. However, even bizarre results are predictable if you are well acquainted with the machine-language code of your program.

jump *address

Resume execution at the instruction at address, address.

You can get much the same effect as the jump command by storing a new value into the register, \$pc. The difference is that this does not start your program running; it only changes the address of where it will run when you continue. For example, set \$pc = 0x485 makes the next continue command or stepping command execute at address, 0x485, rather than at the address where your program stopped. See "Continuing and stepping" on page 64.

The most common occasion to use the jump command is to back up, perhaps with more breakpoints set, over a portion of a program that has already executed, in order to examine its execution in more detail.

Giving your program a signal

signal signal

Resume execution where your program stopped, but immediately give it the signal signal signal can be the name or the number of a signal. For example, on many systems signal 2 and signal SIGINT are both ways of sending an interrupt signal.

Alternatively, if signal is zero, continue execution without giving a signal. This is useful when your program stopped on account of a signal and would ordinary see the signal when resumed with the continue command; 'signal 0' causes it to resume without a signal.

signal does not repeat when you use Return a second time after executing the command.

Invoking the signal command is not the same as invoking the kill utility from the shell. Sending a signal with kill causes GDB to decide what to do with the signal depending on the signal handling tables (see "Signals" on page 67). The signal command passes the signal directly to your program.

148 ■ Debugging with GDB GNUPro Toolkit

Returning from a function

return

return expression

You can cancel execution of a function call with the return command. If you give an *expression* argument, its value is used as the function's return value.

When you use return, GDB discards the selected stack frame (and all frames within it). You can think of this as making the discarded frame return prematurely. If you wish to specify a value to be returned, give that value as the argument to return.

This pops the selected stack frame (see "Selecting a frame" on page 74), and any other frames inside of it, leaving its caller as the innermost remaining frame. That frame becomes selected. The specified value is stored in the registers used for returning values of functions.

The return command does not resume execution; it leaves the program stopped in the state that would exist if the function had just returned.

In contrast, the finish command (see "Continuing and stepping" on page 64) resumes execution until the selected stack frame returns naturally.

Calling program functions

You can use this variant of the print command if you want to execute a function from your program, but without cluttering the output with void returned values. If the result is not void, it is printed and saved in the value history.

call expr

Evaluate the expression, *expr*, without displaying void returned values.

The user-controlled variable, <code>call_scratch_address</code>, specifies the location of a scratch area to be used when GDB calls a function in the target. This is necessary because the usual method of putting the scratch area on the stack does not work in systems that have separate instruction and data spaces.

150 ■ Debugging with GDB GNUPro Toolkit

Patching programs

By default, GDB opens the file containing your program's executable code (or the corefile) read-only. This prevents accidental alterations to machine code; but it also prevents you from intentionally patching your program's binary.

If you'd like to be able to patch the binary, you can specify that explicitly with the set write command. For example, you might want to turn on internal debugging flags, or even to make emergency repairs.

```
set write on
set write off
```

If you specify 'set write on', GDB opens executable and core files for both reading and writing; if you specify 'set write off' (the default), GDB opens them read-only. If you have already loaded a file, you must load it again (using the exec-file or core-file commands) after changing set write, for your new setting to take effect.

```
show write
```

Display whether executable files and core files are opened for writing as well as reading.

152 Debugging with GDB



GDB files

GDB needs to know the file name of the program to be debugged, both in order to read its symbol table and in order to start your program. To debug a core dump of a previous run, you must also tell GDB the name of the core dump file.

The following documentation discusses more of GDB files.

- "Commands to specify files" on page 154
- "Errors reading symbol files" on page 159

Commands to specify files

You may want to specify executable and core dump file names. The usual way to do this is at start-up time, using the arguments to GDB's start-up commands (see "Getting In and Out of GDB" on page 15).

Occasionally it is necessary to change to a different file during a GDB session. Or you may run GDB and forget to specify a file you want to use. In these situations the GDB commands to specify new files are useful.

file filename

Use <code>filename</code> as the program to be debugged. It is read for its symbols and for the contents of pure memory. It is also the program executed when you use the <code>run</code> command. If you do not specify a directory and the file is not found in the GDB working directory, GDB uses the environment variable, <code>PATH</code>, as a list of directories to search, just as the shell does when looking for a program to run. You can change the value of this variable, for both GDB and your program, using the <code>path</code> command.

On systems with memory-mapped files, an auxiliary file, <code>filename.syms</code>, may hold symbol table information for <code>filename</code>. If so, GDB maps in the symbol table from '<code>filename.syms</code>', starting up more quickly. See the descriptions of the file options, <code>-mapped</code> and <code>-readnow</code> (available on the command line, and with the commands, <code>file</code>, <code>symbol-file</code>, or <code>add-symbol-file</code>, described in the following), for more information.

file

file with no argument makes GDB discard any information it has on both executable file and the symbol table.

exec-file [filename]

Specify that the program to be run (but not the symbol table) is found in filename. GDB searches the environment variable, PATH, if necessary to locate your program. Omitting filename means to discard information on the executable file.

symbol-file [filename]

Read symbol table information from file, <code>filename</code>. PATH is searched when necessary. Use the <code>file</code> command to get both symbol table and program to run from the same file.

symbol-file with no argument clears out GDB information on your program's symbol table. The symbol-file command causes GDB to forget the contents of its convenience variables, the value history, and all breakpoints and auto-display expressions. This is because they may contain pointers to the internal data recording symbols and data types, which are part of the old symbol table data

being discarded inside GDB.

symbol-file does not repeat if you use Return again after executing it once.

When GDB is configured for a particular environment, it understands debugging information in whatever format is the standard generated for that environment; you may use either a GNU compiler, or other compilers that adhere to the local conventions. Best results are usually obtained from GNU compilers; for example, using gcc you can generate debugging information for optimized code.

On some kinds of object files, the symbol-file command does not normally read the symbol table in full right away. Instead, it scans the symbol table quickly to find which source files and which symbols are present. The details are read later, one source file at a time, as they are needed.

The purpose of this two-stage reading strategy is to make GDB start up faster. For the most part, it is invisible except for occasional pauses while the symbol table details for a particular source file are being read. (The set verbose command can turn these pauses into messages if desired. See "Optional warnings and messages" on page 200.)

We have not implemented the two-stage strategy for COFF yet. When the symbol table is stored in COFF format, symbol-file reads the symbol table data in full right away.

```
symbol-file filename[-readnow][-mapped]
file filename[-readnow][-mapped]
```

You can override the GDB two-stage strategy for reading symbol tables by using the '-readnow' option with any of the commands that load symbol table information, if you want to be sure GDB has the entire symbol table available.

If memory-mapped files are available on your system through the mmap system call, you can use another option, '-mapped', to cause GDB to write the symbols for your program into a reusable file. Future GDB debugging sessions map in symbol information from this auxiliary symbol file (if the program has not changed), rather than spending time reading the symbol table from the executable program.

Using the '-mapped' option has the same effect as starting GDB with the '-mapped' command-line option.

You can use both options together, to make sure the auxiliary symbol file has all the symbol information for your program. The auxiliary symbol file for a program called <code>myprog</code> is called '<code>myprog</code>. syms'. Once this file exists (so long as it is newer than the corresponding executable), GDB always attempts to use it when you debug <code>myprog</code>; no special options or commands are needed.

The '.syms' file is specific to the host machine where you run GDB. It holds an

exact image of the internal GDB symbol table. It cannot be shared across multiple host platforms.

```
core-file [filename]
```

Specify the whereabouts of a core dump file to be used as the "contents of memory". Traditionally, core files contain only some parts of the address space of the process that generated them; GDB can access the executable file itself for other parts.

core-file with no argument specifies that no core file is to be used.

NOTE:

The core file is ignored when your program is actually running under GDB. So, if you have been running your program and you wish to debug a core file instead, you must kill the subprocess in which the program is running. To do this, use the kill command (see "Killing the child process" on page 41).

load filename

Depending on what remote debugging facilities are configured into GDB, the load command may be available. Where it exists, it is meant to make filename (an executable) available for debugging on the remote system—by downloading, or dynamic linking, for example. load also records the filename symbol table in GDB, like the add-symbol-file command.

If your GDB does not have a load command, attempting to execute it gets the error message, You can't do that when your target is

The file is loaded at whatever address is specified in the executable. For some object file formats, you can specify the load address when you link the program; for other formats, like a.out, the object file format specifies a fixed address.

On VxWorks, load links filename dynamically on the current target system as well as adding its symbols in GDB.

With the Nindy interface to an Intel 960 board, load downloads filename to the 960 as well as adding its symbols in GDB.

When you select remote debugging to a Hitachi SH, H8/300, or H8/500 board (see "GDB and Hitachi microprocessors" on page 188), the load command downloads your program to the Hitachi board and also opens it as the current executable target for GDB on your host (like the file command).

load does not repeat if you use Return again after using it.

```
add-symbol-file filename address
add-symbol-file filename address[-readnow][-mapped]
```

The add-symbol-file command reads additional symbol table information from the file, filename. You would use this command when filename has been

dynamically loaded (by some other means) into the program that is running. address should be the memory address at which the file has been loaded; GDB cannot figure this out for itself. You can specify address as an expression.

The symbol table of the file, <code>filename</code>, is added to the symbol table originally read with the <code>symbol-file</code> command. You can use the command, <code>add-symbol-file</code>, any number of times; the new symbol data thus read keeps adding to the old. To discard all old symbol data instead, use the <code>symbol-file</code> command.

add-symbol-file does not repeat if, after using it, you use Return.

You can use the '-mapped' and '-readnow' options, just as with the symbol-file command, to change how GDB manages the symbol table information for filename.

```
add-shared-symbol-file
```

The add-shared-symbol-file command can be used only under Harris' CXUX operating system for the Motorola 88k. GDB automatically looks for shared libraries, however if GDB does not find yours, you can run add-shared-symbol-file. It takes no arguments.

section

The section command changes the base address of section, SECTION, of the exec file to ADDR. This can be used if the exec file does not contain section addresses (such as in the a.out format), or when the addresses specified in the file itself are wrong. Each section must be changed separately. The info files command lists all the sections and their addresses.

```
info files
info target
```

info files and info target are synonymous; both print the current target (see "Specifying a debugging target" on page 163), including the names of the executable and core dump files currently in use by GDB, and the files from which symbols were loaded. The help target command lists all possible targets rather than current ones.

All file-specifying commands allow both absolute and relative file names as arguments. GDB always converts the file name to an absolute file name and remembers it that way.

GDB supports SunOS, SVr4, Irix 5, and IBM RS/6000 shared libraries. GDB automatically loads symbol definitions from shared libraries when you use the run command, or when you examine a core file. (Before you issue the run command, remember that GDB does not understand references to a function in a shared library, *unless* you are debugging a core file).

info share

info sharedlibrary

Print the names of the shared libraries which are currently loaded.

sharedlibrary regex

share regex

Load shared object library symbols for files matching a Unix regular expression. As with files loaded automatically, it only loads shared libraries required by your program for a core file or after using run. If regex is omitted, all shared libraries required by your program are loaded.

158 Debugging with GDB

Errors reading symbol files

While reading a symbol file, GDB occasionally encounters problems, such as symbol types it does not recognize, or known bugs in compiler output. By default, GDB does not notify you of such problems, since they are relatively common and primarily of interest to people debugging compilers.

If you are interested in seeing information about ill-constructed symbol tables, you can either ask GDB to print only one message about each such type of problem, no matter how many times the problem occurs; or you can ask GDB to print more messages, to see how many times the problems occur, with the set complaints command (see "Optional warnings and messages" on page 200).

The messages currently printed, and their meanings, include the following.

```
inner block not inside outer block in symbol
```

The symbol information shows where symbol scopes begin and end (such as at the start of a function or a block of statements). This error indicates that an inner scope block is not fully contained in its outer scope blocks.

GDB circumvents the problem by treating the inner block as if it had the same scope as the outer block. In the error message, <code>symbol</code> may be shown as "(don't know)" if the outer block is not a function.

```
block at address out of order
```

The symbol information for symbol scope blocks should occur in order of increasing addresses. This error indicates that it does not do so.

GDB does not circumvent this problem, and has trouble locating symbols in the source file whose symbols it is reading. You can often determine what source file is affected by specifying set verbose on. See "Optional warnings and messages" on page 200.

```
bad block start address patched
```

The symbol information for a symbol scope block has a start address smaller than the address of the preceding source line. This is known to occur in the SunOS 4.1.1 (and earlier) C compiler.

GDB circumvents the problem by treating the symbol scope block as starting on the previous source line.

```
bad string table offset in symbol n
```

Symbol number n contains a pointer into the string table which is larger than the size of the string table. GDB circumvents the problem by considering the symbol to have the name, foo, which may cause other problems if many symbols end up with this name.

```
unknown symbol type 0 \times nn
```

The symbol information contains new data types that GDB does not yet know

how to read. 0xnn is the symbol type of the misunderstood information, in hexadecimal.

GDB circumvents the error by ignoring this symbol information. This usually allows you to debug your program, though certain symbols are not accessible. If you encounter such a problem and feel like debugging it, you can debug gdb with itself, breakpoint on complain, then go up to the function, read_dbx_symtab, and examine *bufp to see the symbol.

stub type has NULL name

GDB could not find the full definition for a struct or class.

const/volatile indicator missing (ok if using q++ v1.x), got ...

The symbol information for a C++ member function is missing some information that recent versions of the compiler should have output for it.

info mismatch between compiler and debugger

GDB could not parse a type specification output by the compiler.

160 Debugging with GDB

162 Debugging with GDB



Specifying a debugging target

A target is the execution environment occupied by your program. Often, GDB runs in the same host environment as your program; in that case, the debugging target is specified as a side effect when you use the file or core commands. When you need more flexibility—for example, running GDB on a physically separate host, or controlling a standalone system over a serial port or a realtime system over a TCP/IP connection—you can use the target command to specify one of the target types configured for GDB

See the following documentation for more discussion of debugging targets.

- "Active targets" on page 164
- "Commands for managing targets" on page 165
- "Choosing target byte order" on page 168
- "Remote debugging" on page 169
- "The GDB remote serial protocol" on page 170

Active targets

There are three classes of targets: processes, core files, and executable files.

GDB can work concurrently on up to three active targets, one in each class. This allows you to (for example) start a process and inspect its activity without abandoning your work on a core file.

For example, if you execute 'gdb a.out', then the executable file, a.out, is the only active target. If you designate a core file as well—presumably from a prior run that crashed and coredumped—then GDB has two active targets and uses them in tandem, looking first in the corefile target, then in the executable file, to satisfy requests for memory addresses. (Typically, these two classes of target are complementary, since core files contain only a program's read-write memory—variables and so on—plus machine status, while executable files contain only the program text and initialized data.)

When you type run, your executable file becomes an active process target as well. When a process target is active, all GDB commands requesting memory addresses refer to that target; addresses in an active core file or executable file target are obscured while the process target is active.

Use the core-file and exec-file commands to select a new core file or executable target (see "Commands to specify files" on page 154). To specify as a target a process that is already running, use the attach command (see "Debugging an already-running process" on page 40).

164 ■ Debugging with GDB GNUPro Toolkit

Commands for managing targets

The following are some commands for targets.

target type parameters

Connects the GDB host environment to a target machine or process. A target is typically a protocol for talking to debugging facilities. You use the argument, *type*, to specify the type or protocol of the target machine.

Further parameters are interpreted by the target protocol, but typically include things like device names or host names to connect with, process numbers, and baud rates.

The target command does not repeat if you use Return again after executing the command.

help target

Displays the names of all targets available. To display targets currently selected, use either info target or info files (see "Commands to specify files" on page 154).

help target name

Describe a particular target, including any parameters (using name for the specific target) necessary to select it.

set qnutarget args

GDB uses its own library, BFD, to read your files. GDB knows whether it is reading an *executable*, a *core*, or a .o file; however you can specify the file format with the set gnutarget command.

Unlike most target commands, with gnutarget, the target refers to a program, not a machine.

WARNING: To specify a file format with set gnutarget, you must know the actual BFD name.

See "Commands to specify files" on page 154.

show qnutarget

Use the show gnutarget command to display what file format gnutarget is set to read. If you have not set gnutarget, GDB will determine the file format for each file automatically and show gnutarget displays the following output.

The current BDF target is "auto".

The following are some common targets (available, or not, depending on the GDB configuration). Different targets are available on different configurations of GDB; your configuration may have more or fewer targets.

target exec program

An executable file. 'target exec program' is like 'exec-file program'.

target core filename

A core dump file. 'target core filename' is like 'core-file filename'.

target remote dev

Remote serial target in GDB-specific protocol. The argument, <code>dev</code>, specifies what serial device to use for the connection (e.g., '/dev/ttya'). See "Remote debugging" on page 169. target remote now supports the load command. This is only useful if you have some other way of getting the stub to the target system, and you can put it somewhere in memory where it won't get clobbered by the download.

target sim

CPU simulator. See "Simulated CPU target" on page 191.

target udi keyword

Remote AMD29K target, using the AMD UDI protocol. The *keyword* argument specifies which 29K board or simulator to use. See "The UDI protocol for AMD29K" on page 180.

target amd-eb dev speed PROG

Remote PC-resident AMD EB29K board, attached over serial lines. *dev* is the serial device, as for target remote; *speed* allows you to specify the linespeed; and *PROG* is the name of the program to be debugged, as it appears to DOS on the PC. See "The EBMON protocol for AMD29K" on page 180.

target hms dev

A Hitachi SH, H8/300, or H8/500 board, attached using a serial line to a host. Use special commands, device and speed, to control the serial line and the communications speed used. See "GDB and Hitachi microprocessors" on page 188.

target nindy devicename

An Intel 960 board controlled by a Nindy Monitor. <code>device-name</code> is the name of the serial device to use for the connection, e.g. '<code>/dev/ttya</code>'. See "GDB with a remote i960 (Nindy)" on page 179.

target st2000 dev speed

A Tandem ST2000 phone switch, running Tandem's STD-BUG protocol. dev is the name of the device attached to the ST2000 serial line; speed is the communication line speed. The arguments are not used if GDB is configured to connect to the ST2000, using TCP or Telnet. See "GDB with a Tandem ST2000" on page 183.

target vxworks machinename

A VxWorks system, attached using TCP/IP. The argument, machinename, is the

target system's machine name or IP address. See "GDB and VxWorks" on page 184.

target cpu32bug dev

CPU32BUG monitor, running on a CPU32 (M68K) board.

target op50n dev

OP50N monitor, running on an OKI HPPA board.

target w89k dev

W89K monitor, running on a Winbond HPPA board.

target est dev

EST-300 ICE monitor, running on a CPU32 (M68K) board.

target rom68k dev

ROM 68K monitor, running on an IDP board.

target array dev

Array Tech LSI33K RAID controller board.

target sparclite dev

Fujitsu SPARClite boards, used only for the purpose of loading. You must use an additional command to debug the program like, for example, target remote dev, using GDB standard remote protocol.

Choosing target byte order

You can now choose which byte order to use with a target system. Use the set endian big and set endian little commands. Use the set endian auto command to instruct GDB to use the byte order associated with the executable. You can see the current setting for byte order with the show endian command.

WARNING: Currently, only embedded MIPS configurations support dynamic

selection of target byte order.

168 ■ Debugging with GDB GNUPro Toolkit

Remote debugging

If you are trying to debug a program running on a machine that cannot run GDB in the usual way, it is often useful to use remote debugging. For example, you might use remote debugging on an operating system kernel, or on a small system which does not have a general purpose operating system powerful enough to run a full-featured debugger.

Some configurations of GDB have special serial or TCP/IP interfaces to make this work with particular debugging targets. In addition, GDB comes with a generic serial protocol (specific to GDB, but not specific to any particular target system) which you can use if you write the remote stubs—the code that runs on the remote system to communicate with GDB.

Other remote targets may be available in your configuration of GDB; use help target to list them.

The GDB remote serial protocol

The following documentation discusses the GDB remote serial protocol. You must link with your program using a few special-purpose subroutines called *stubs* that implement the GDB remote serial protocol.

- "What the stub can do for you" on page 171
- "What you must do for the stub" on page 172
- "Putting it all together" on page 174
- "Communication protocol" on page 175
- "Using the gdbserver program" on page 176
- "Using the gdbserve.nlm program" on page 178
- "GDB with a remote i960 (Nindy)" on page 179
- "The UDI protocol for AMD29K" on page 180
- "GDB with a Tandem ST2000" on page 183
- "GDB and VxWorks" on page 184
- "GDB and SPARClet" on page 186
- "Connecting to SPARClet" on page 187
- "SPARClet download" on page 187
- "GDB and Hitachi microprocessors" on page 188
- "GDB and remote MIPS boards" on page 189

To debug a program running on another machine (the debugging *target* machine), you must use the following directions.

- 1. Arrange for all the usual prerequisites for the program to run by itself. For example, for a C program, you need the following three prerequisites.
 - * A startup routine to set up the C runtime environment; these usually have a name like 'crt0'. The startup routine may be supplied by a hardware supplier, so you may have to write your own.
 - * You probably need a C subroutine library to support your program's subroutine calls, notably managing input and output.
 - * A way of getting your program to the other machine—for example, a download program. These are often supplied by manufacturers, so you may have to write your own from hardware documentation.
- 2. Arrange for your program to use a serial port to communicate with the machine

where GDB is running (the *host* machine). In general terms, the scheme follows a standard protocol.

On the host

GDB already understands how to use this protocol; when everything else is set up, you can simply use the 'target remote' command (see "Commands for managing targets" on page 165).

On the target

You must link with your program using a few special-purpose subroutines that implement the GDB remote serial protocol. The file containing these subroutines is called a debugging stub.

On certain remote targets, you can use an auxiliary program, gdbserver, instead of linking a stub into your program. See "Using the gdbserver program" on page 176 for details.

The debugging stub is specific to the architecture of the remote machine; for example, use 'sparc-stub.c' to debug programs on SPARC boards. The following working remote stubs are distributed with GDB.

```
sparc-stub.c
```

For SPARC architectures.

m68k-stub.c

For Motorola 680x0 architectures.

i386-stub.c

For Intel 386 and compatible architectures.

The 'README' file in the GDB distribution may list other recently added stubs.

What the stub can do for you

The debugging *stub* for your architecture is what supplies the following three subroutines.

```
set_debug_traps
```

This routine arranges for handle_exception to run when your program stops. You must call this subroutine explicitly near the beginning of your program.

```
handle_exception
```

This is the central workhorse, but your program never calls it explicitly—the setup code arranges for handle_exception to run when a trap is triggered.

handle_exception takes control when your program stops during execution (for example, on a breakpoint), and mediates communications with GDB on the host machine. This is where the communications protocol is implemented; handle_ exception acts as the GDB representative on the target machine; it begins by sending summary information on the state of your program, then continues to execute, retrieving and transmitting any information GDB needs, until you execute a GDB command that makes your program resume; at that point, handle_exception returns control to your own code on the target machine.

breakpoint

Use this auxiliary subroutine to make your program contain a breakpoint. Depending on the particular situation, this may be the only way for GDB to get control. For instance, if your target machine has some sort of interrupt button, you won't need to call this; pressing the interrupt button transfers control to handle_exception-in effect, to GDB. On some machines, simply receiving characters on the serial port may also trigger a trap; again, in that situation, you don't need to call breakpoint from your own program—simply running 'target remote' from the host GDB session gets control.

Call breakpoint if none of these is true, or if you simply want to make certain your program stops at a predetermined point for the start of your debugging session.

What you must do for the stub

The debugging stubs that come with GDB are set up for a particular chip architecture, having no information about the rest of the target machine being debugged.

First of all, you need to tell the stub how to communicate with the serial port with the following subroutines.

```
int getDebugChar()
```

Write this subroutine to read a single character from the serial port. It may be identical to getchar for your target system; a different name is used to allow you to distinguish the two if you wish.

```
void putDebugChar(int)
```

Write this subroutine to write a single character to the serial port. It may be identical to putchar for your target system; a different name is used to allow you to distinguish the two if you wish.

If you want GDB to be able to stop your program while it is running, you need to use an interrupt-driven serial driver, and arrange for it to stop when it receives a ^c ('\003', the Control-C character). That is the character which GDB uses to tell the remote system to stop.

Getting the debugging target to return the proper status to GDB probably requires changes to the standard stub; one quick and dirty way is to just execute a breakpoint instruction (the "dirty" part is that GDB reports a SIGTRAP instead of a SIGINT).

Other routines you need to supply are the following.

```
void exceptionHandler (int exception_number, void *exception_address)
Write this function to install exception_address in the exception handling tables.
```

You need to do this because the stub does not have any way of knowing what the exception handling tables on your target system are like (for example, the processor's table might be in ROM, containing entries which point to a table in RAM). <code>exception_number</code> is the exception number which should be changed; its meaning is architecture-dependent (for example, different numbers might represent divide by zero, misaligned access, etc). When this exception occurs, control should be transferred directly to <code>exception_address</code>, and the processor state (stack, registers, and so on) should be just as it is when a processor exception occurs. So if you want to use a jump instruction to reach <code>exception_address</code>, it should be a simple jump, not a jump to subroutine.

For the 386, <code>exception_address</code> should be installed as an interrupt gate so that interrupts are masked while the handler runs. The gate should be at privilege level 0 (the most privileged level). The SPARC and 68k stubs are able to mask interrup themselves without help from <code>exceptionHandler</code>.

```
void flush_i_cache()
```

(sparc and sparclite only) Write this subroutine to flush the instruction cache, if any, on your target machine. If there is no instruction cache, this subroutine may be a no-op.

On target machines that have instruction caches, GDB requires this function to make certain that the state of your program is stable.

You must also make sure the following library routine is available.

```
void *memset(void *, int, int)
```

This is the standard library function, memset, which sets an area of memory to a known value. If you have one of the free versions of libc.a, memset can be found there; otherwise, you must either obtain it from your hardware manufacturer, or write your own.

If you do not use the GNU C compiler, you may need other standard library subroutines as well; this varies from one stub to another, but in general the stubs are likely to use any of the common library subroutines which gcc generates as inline code.

Putting it all together

In summary, when your program is ready to debug, you must use the following steps.

- 1. Make sure you have the supporting low-level routines (see Section "What you must do for the stub" on page What you must do for the stub): getDebugChar, putDebugChar, flush_i_cache, memset, exceptionHandler.
- **2.** Insert these lines near the top of your program:

```
set_debug_traps();
breakpoint();
```

- 3. For the 680x0 stub only, you need to provide a variable called exceptionHook. Normally you just use void (*exceptionHook)() = 0;, but if before calling set_debug_traps, you set it to point to a function in your program, that function is called when GDB continues after stopping on a trap (for example, bus error). The function indicated by exceptionHook is called with one parameter: an int which is the exception number.
- **4.** Compile and link together: your program, the GDB debugging stub for your target architecture, and the supporting subroutines.
- **5.** Make sure you have a serial connection between your target machine and the GDB host, and identify the serial port on the host.
- **6.** Download your program to your target machine (or get it there by whatever means the manufacturer provides), and start it.
- 7. To start remote debugging, run GDB on the host machine, and specify as an executable file the program that is running in the remote machine. This tells GDB how to find your program's symbols and the contents of its pure text.

Then establish communication using the target remote command. Its argument specifies how to communicate with the target machine—either via a devicename attached to a direct serial line, or a TCP port (usually to a terminal server which in turn has a serial line to the target). For example, to use a serial line connected to the device named '/dev/ttyb', use target remote /dev/ttyb.

To use a TCP connection, use an argument of the form <code>host:port</code>. For example, to connect to port 2828 on a terminal server named <code>manyfarms</code>, use the following command.

```
target remote manyfarms:2828.
```

Now you can use all the usual commands to examine and change data and to step and continue the remote program.

To resume the remote program and stop debugging it, use the detach command.

Whenever GDB is waiting for the remote program, if you use the interrupt character sequence (often, Ctrl-C), GDB attempts to stop the program. This may or may not

succeed, depending in part on the hardware and the serial drivers the remote system uses. If you type the interrupt character once again, GDB displays the following prompt:

```
Interrupted while waiting for the program.
Give up (and stop debugging it)? (y or n)
```

If you press the y key, GDB abandons the remote debugging session. (If you decide you want to try again later, you can use target remote again to connect once more.) If you press the n key, GDB goes back to waiting.

Communication protocol

The stub files provided with GDB implement the target side of the communication protocol, and the GDB side is implemented in the GDB source file 'remote.c'. Normally, you can simply allow these subroutines to communicate, and ignore the details. (If you're implementing your own stub file, you can still ignore the details: start with one of the existing stub files. 'sparc-stub.c' is the best organized, and therefore the easiest to read.)

However, there may be occasions when you need to know something about the protocol—for example, if there is only one serial port to your target machine, you might want your program to do something special if it recognizes a packet meant for GDB.

All GDB commands and responses (other than acknowledgements, which are single characters) are sent as a packet which includes a check-sum. A packet is introduced with the character, '\$', and ends with the character, '#', followed by a two-digit checksum: \$packet info#checksum.

checksum is computed as the modulo 256 sum of the packet info characters.

When either the host or the target machine receives a packet, the first response expected is an acknowledgement: a single character, either '+' (to indicate the package was received correctly) or '-' (to request retransmission). The host (GDB) sends commands, and the target (the debugging stub incorporated in your program) sends data in response. The target also sends data when your program stops.

Command packets are distinguished by their first character, which identifies the kind of command. The following are some of the commands currently supported (for a complete list of commands, look in 'gdb/remote.c.'):

```
Requests the values of CPU registers.
```

Sets the values of CPU registers.

G

```
maddr, count
```

Read countbytes at location addr.

```
Maddr, count:...
```

Write count bytes at location, addr.

C c addr

Resume execution at the current address (or at addr, if supplied).

s s addr

Step the target program for one instruction, from either the current program counter or from addr, if supplied.

k

Kill the target program.

?

Report the most recent signal. To allow you to take advantage of the GDB signal handling commands, one of the functions of the debugging stub is to report CPU traps as the corresponding POSIX signal values.

Т

Allows the remote stub to send only the registers that GDB needs to make a quick decision about single-stepping or conditional breakpoints. This eliminates the need to fetch the entire register set for each instruction being stepped through.

The GDB remote serial protocol now implements a write-through cache for registers. GDB only re-reads the registers if the target has run.

If you have trouble with the serial connection, you can use the command, set remotedebug. This makes GDB report on all packets sent back and forth across the serial line to the remote machine. The packet-debugging information is printed on the GDB standard output stream. set remotedebug off turns it off, and show remotedebug shows you its current state.

Using the gdbserver program

gdbserver is a control program for Unix-like systems, allowing you to connect your program with a remote GDB using target remote, without linking in the usual debugging stub.

gdbserver is not a complete replacement for the debugging stubs, because it requires essentially the same operating-system facilities that GDB itself does. In fact, a system that can run gdbserver to connect to a remote GDB could also run GDB locally! gdbserver is sometimes useful nevertheless, because it is a much smaller program than GDB itself. It is also easier to port than all of GDB, so you may be able to get started more quickly on a new system by using gdbserver. Finally, if you develop code for real-time systems, you may find that the tradeoffs involved in real-time

operation make it more convenient to do as much development work as possible on another system, for example by cross-compiling. You can use gdbserver to make a similar choice for debugging.

GDB and gdbserver communicate using either a serial line or a TCP connection, using the standard GDB remote serial protocol. The following discussions detail the connections of the target machine and the host machine.

On the target machine

You need to have a copy of the program you want to debug. gdbserver does not need your program's symbol table, so you can strip the program if necessary to save space. GDB on the host system does all the symbol handling. To use the server, you must tell it how to communicate with GDB; the name of your program; and the arguments for your program. The syntax is: target> gdbserver comm program [args...].

comm is either a device name (to use a serial line) or a TCP hostname and portnumber. For example, to debug Emacs with the argument, foo.txt, and communicate with GDB over the serial port, /dev/com1, use the following.

```
target> gdbserver /dev/com1 emacs foo.txt.
```

gdbserver waits passively for the host GDB to communicate with it. To use a TCP connection instead of a serial line, use the following.

```
target> qdbserver host:2345 emacs foo.txt.
```

The only difference from the previous example is the first argument, specifying that you are communicating with the host GDB via TCP. The 'host:2345' argument means that gdbserver is to expect a TCP connection from machine 'host' to local TCP port 2345. (Currently, the 'host' part is ignored.) You can choose any number you want for the port number as long as it does not conflict with any TCP ports already in use on the target system (for example, 23 is reserved for telnet).

You must use the same port number with the host GDB target remote command.

On the GDB host machine

You need an unstripped copy of your program, since GDB needs symbols and debugging information.

Start up GDB as usual, using the name of the local copy of your program as the first argument. (You may also need the '--baud' option if the serial line is running at anything other than 9600 bps.)

After that, use target remote to establish communications with gdbserver.

_

¹ If you choose a port number that conflicts with another service, gdbserver prints an error message and exits.

Its argument is either a device name (usually a serial device like /dev/ttyb) or a TCP port descriptor in the form, host: PORT. For example, (qdb) target remote /dev/ttyb communicates with the server via serial line, /dev/ttyb.

(gdb) target remote the-target:2345 communicates via a TCP connection to port 2345 on host, the-target. For TCP connections, you must start up qdbserver prior to using the target remote command. Otherwise you may get an error whose text depends on the host system, but which usually looks something like 'Connection refused' in the declaration.

Using the gdbserve.nlm program

gdbserve.nlm is a control program for NetWare systems, allowing you to connect your program with a remote GDB via target remote.

GDB and gdbserve.nlm communicate using a serial line, with the standard GDB remote serial protocol. The following discussions detail the connections of the target machine and the host machine.

On the target machine

You need to have a copy of the program you want to debug. gdbserve.nlm does not need your program's symbol table, so you can strip the program if necessary to save space. GDB on the host system does all the symbol handling. To use the server, you must tell it: how to communicate with GDB, the name of your program, and the arguments for your program. The syntax is the following.

```
load gdbserve
                 [ BOARD=board ] [ PORT=port ]
                        [ BAUD=baud ] program [ args ... ]
```

board and port specify the serial line; baud specifies the baud rate used by the connection. port and node default to 0, baud defaults to 9600 bps. For example, to debug Emacs with the argument, foo.txt, in orfer to communicate with GDB over serial port number 2 or board 1 using a 19200 bps connection, use the following declaration.

```
load gdbserve BOARD=1 PORT=2 BAUD=19200 emacs foo.txt
```

On the GDB host machine, you need an unstripped copy of your program, since GDB needs symbols and debugging information. Start up GDB as usual, using the name of the local copy of your program as the first argument. (You may also need the '--baud' option if the serial line is running at anything other than 9600 bps.

After that, use target remote to establish communications with gdbserve.nlm. Its argument is a device name (usually a serial device, like /dev/ttyb). For example, (gdb) target remote /dev/ttyb communicates with the server via serial line, /dev/ttyb.

GDB with a remote i960 (Nindy)

Nindy is a ROM Monitor program for Intel 960 target systems. When GDB is configured to control a remote Intel 960 using Nindy, you can tell GDB how to connect to the 960 in the following ways.

- Through command line options specifying serial port, version of the Nindy protocol, and communications speed;
- By responding to a prompt on startup;
- By using the target command at any point during your GDB session. See "Commands for managing targets" on page Commands for managing targets.

Startup with Nindy

If you simply start gdb without using any command-line options, you are prompted for what serial port to use, *before* you reach the ordinary GDB prompt:

```
attach /dev/ttyNN -- specify NN, or "quit" to quit:
```

Respond to the prompt with whatever suffix (after /dev/tty) to identify the serial port that you want to use. You can, if you choose, simply start up with no Nindy connection by responding to the prompt with an empty line. If you do this and later wish to attach to Nindy, use target (see "Commands for managing targets" on page 165).

Nindy reset command

reset

For a Nindy target, this command sends a "break" to the remote target system; this is only useful if the target has been equipped with a circuit to perform a hard reset (or some other interesting action) when a break is detected.

Options for Nindy

The following are the startup options for beginning your GDB session with a Nindy-960 board attached.

-r port

Specify the serial port name of a serial interface to be used to connect to the target system. This option is only available when GDB is configured for the Intel 960 target architecture. You may specify port as any of: a full pathname (e.g., -r /dev/ttya), a device name in '/dev' (e.g., -r ttya), or simply the unique suffix for a specific tty (e.g., -r a).

(An uppercase letter "O", not a zero.) Specify that GDB should use the "old"

Nindy monitor protocol to connect to the target system. This option is only available when GDB is configured for the Intel 960 target architecture.

WARNING: If you specify '-o', but are actually trying to connect to a target

> system that expects the newer protocol, the connection fails, appearing to be a speed mismatch. GDB repeatedly attempts to reconnect at several different line speeds. You can abort this process

with an interrupt.

-brk

Specify that GDB should first send a BREAK signal to the target system, in an attempt to reset it, before connecting to a Nindy target.

WARNING: Many target systems do not have the hardware that this requires; it only works with a few boards.

The standard '-b' option controls the line speed used on the serial port.

The UDI protocol for AMD29K

GDB supports AMD's UDI ("Universal Debugger Interface") protocol for debugging the A29K processor family. To use this configuration with AMD targets running the MiniMON monitor, you need the program, MONTIP, available from AMD at no charge. You can also use GDB with the UDI-conformant A29K simulator program, ISSTIP, also available from AMD.

target udi keyword

Select the UDI interface to a remote 29K board or simulator, where keyword is an entry in the AMD configuration file 'udi_soc'. This file contains keyword entries which specify parameters used to connect to A29K targets. If the 'udi_soc' file is not in your working directory, you must set the environment variable 'UDICONF' to its pathname.

The EBMON protocol for AMD29K

AMD distributes a 29K development board meant to fit in a PC, together with a DOS-hosted monitor program called EBMON. As a shorthand term, we use "EB29K" as a name for this development system.

To use GDB from a Unix system to run programs on the EB29K board, you must first connect a serial cable between the PC (which hosts the EB29K board) and a serial port on the Unix system.

In the following, we assume you've hooked the cable between the PC's 'com1' port and '/dev/ttya' on the Unix system.

Communications setup

The next step is to set up the PC's port, using something like the following in DOS on the PC:

```
C:\> MODE com1:9600,n,8,1,none
```

This example—run on an MS DOS 4.0 system—sets the PC port to 9600 bps, no parity, eight data bits, one stop bit, and no "retry" action; you must match the communications parameters when establishing the Unix end of the connection as well.

To give control of the PC to the Unix side of the serial line, at the c:\> prompt, type: CTTY com1.

(Later, if you wish to return control to the DOS console, you can use the command CTTY con—but you must send it over the device that had control, in the example, over the 'COM1' serial line). From the Unix host, use a communications program such as tip or cu to communicate with the PC; for example, cu -s 9600 -1 /dev/ttya.

The cu options shown specify, respectively, the linespeed and the serial port to use. If you use tip instead, your command line may look something like: tip -9600 /dev/ttya.

Your system may require a different name where we show /dev/ttya as the argument to tip. The communications parameters, including which port to use, are associated with the tip argument in the "remote" descriptions file—normally the system table, /etc/remote.

Using the tip or cu connection, change the DOS working directory to the directory containing a copy of your 29K program, then start the PC program, EBMON (an EB29K control program supplied with your board by AMD).

You should see an initial display from EBMON similar to the one that follows, ending with the EBMON prompt, #.

Example 1: PC program, EBMON (an EB29K control program

```
C:\> G:
G:\> CD \usr\joe\work29k

G:\USR\JOE\WORK29K> EBMON Am29000 PC Coprocessor Board Monitor,
version 3.0-18 Copyright 1990 Advanced Micro Devices, Inc. Written
by Gibbons and Associates, Inc.

Enter '?' or 'H' for help

PC Coprocessor Type = EB29K

I/O Base = 0x208
```

```
Memory Base
                        = 0xd0000
Data Memory Size
                       = 2048KB
Available I-RAM Range
                       = 0x8000 to 0x1ffffff
Available D-RAM Range
                        = 0x80002000 to 0x801fffff
PageSize
                        = 0x400
Register Stack Size
                      = 0x800
Memory Stack Size
                       = 0x1800
CPU PRL
                        = 0x3
Am29027 Available
                       = No
Byte Write Available
                       = Yes
# ~.
```

Then exit the cu or tip program (the previous example shows the use of ~. at the EBMON prompt, #). EBMON keeps running, ready for GDB to take over.

For this example, we've assumed what is probably the most convenient way to make sure the same 29K program is on both the PC and the Unix system: a PC/NFS connection that establishes "drive g:" on the PC as a file system on the Unix host. If you do not have PC/NFS or something similar connecting the two systems, you must arrange some other way—perhaps floppy-disk transfer—of getting the 29K program from the Unix system to the PC; GDB does not download it over the serial line.

EB29K cross-debugging

Finally, cd to the directory containing an image of your 29K program on the Unix system, and start GDB—specifying as argument the name of your 29K program, as in the following example.

```
cd /usr/joe/work29k
gdb myfoo
```

Now, use the target command, as in the following declaration.

```
target amd-eb /dev/ttya 9600 MYF00
```

In this example, we've assumed your program is in a file called 'myfoo'.

NOTE:

The filename given as the last argument to target amd-eb should be the name of the program as it appears to DOS. In our example this is simply MYFOO, but in general it can include a DOS path, and, depending on your transfer mechanism, may not resemble the name on the Unix side. At this point, you can set any breakpoints you wish;

when you are ready to see your program run on the 29K board, use the GDB command, run.

To stop debugging the remote program, use the GDB detach command.

To return control of the PC to its console, use tip or cu once again, after your GDB session has concluded, to attach to EBMON. You can then type the command q to shut down EBMON, returning control to the DOS command-line interpreter. Type CTTY con to return command input to the main DOS console, and type ~ . to leave tip or cu. See Example 1:"PC program, EBMON (an EB29K control program" on page 181.

Remote log

The target amd-eb command creates a file, 'eb.log', in the current working directory, to help debug problems with the connection. 'eb.log' records all the output from EBMON, including echoes of the commands sent to it. Running 'tail -f' on this file in another window often helps to understand trouble with EBMON, or unexpected events on the PC side of the connection.

GDB with a Tandem ST2000

To connect your ST2000 to the host system, see the manufacturer's manual. Once ST2000 is physically attached, you can run target st2000 dev speed to establish it as your debugging environment.

dev is normally the name of a serial device, such as /dev/ttya, connected to the ST2000 via a serial line. You can instead specify dev as a TCP connection (for example, to a serial line attached via a terminal concentrator) using the syntax, hostname:portnumber.

The load and attach commands are not defined for this target; you must load your program into the ST2000 as you normally would for standalone operation. GDB reads debugging information (such as symbols) from a separate, debugging version of the program available on your host computer.

The following auxiliary GDB commands are available to help you with the ST2000 environment:

st2000 command

Send a *command* to the STDBUG monitor. See the manufacturer's manual for available commands.

connect

Connect the controlling terminal to the STDBUG command monitor. When you are done interacting with STDBUG, typing either of two keystroke sequences gets you back to the GDB command prompt: using the Return key, then the tilde key

(*), and then the period (.) key; or the Return key, the tilde key, and then, simultaneously, the Control and uppercase D keys).

GDB and VxWorks

GDB enables developers to spawn and debug tasks running on networked VxWorks targets from a Unix host. Already-running tasks spawned from the VxWorks shell can also be debugged. GDB uses code that runs on both the Unix host and on the VxWorks target. The qdb program is installed and executed on the Unix host. (It may be installed with the name, vxgdb, to distinguish it from gdb for debugging programs on the host itself.)

```
VxWorks-timeout args
```

All VxWorks-based targets now support the option vxworks-timeout. This option is set by the user, and args represents the number of seconds GDB waits for responses to rpc's. You might use this if your VxWorks target is a slow software simulator or is on the far side of a thin network line.

The following information on connecting to VxWorks was current when this manual was produced; newer releases of VxWorks may use revised procedures. To use GDB with VxWorks, you must rebuild your VxWorks kernel to include the remote debugging interface routines in the VxWorks library 'rdb.a'. To do this, define INCLUDE RDB in the VxWorks configuration file 'configAll.h' and rebuild your VxWorks kernel. The resulting kernel contains 'rdb.a', and spawns the source debugging task, tRdbTask, when VxWorks is booted. For more information on configuring and remaking VxWorks, see the manufacturer's manual. Once you have included 'rdb.a' in your VxWorks system image and set your Unix execution search path to find GDB, you are ready to run GDB. From your Unix host, run gdb (or vxgdb, depending on your installation). GDB comes up showing the prompt, (vxgdb).

Connecting to VxWorks

The GDB command target lets you connect to a VxWorks target on the network. To connect to a target whose host name is "tt", use something like the following example's declaration.

```
(vxgdb) target vxworks tt
```

GDB then displays messages like the following declarations.

```
Attaching remote machine across net...
Connected to tt.
```

GDB then attempts to read the symbol tables of any object modules loaded into the VxWorks target since it was last booted. GDB locates these files by searching the

directories listed in the command search path (see "Your program's environment" on page 36); if it fails to find an object file, it displays a message such as:

```
prog.o: No such file or directory.
```

When this happens, add the appropriate directory to the search path with the GDB command path, and execute the target command again.

VxWorks download

If you have connected to the VxWorks target and you want to debug an object that has not yet been loaded, you can use the GDB load command to download a file from Unix to VxWorks incrementally.

The object file given as an argument to the load command is actually opened twice: first by the VxWorks target in order to download the code, then by GDB in order to read the symbol table. This can lead to problems if the current working directories on the two systems differ.

If both systems have had NFS mount the same filesystems, you can avoid these problems by using absolute paths. Otherwise, it is simplest to set the working directory on both systems to the directory in which the object file resides, and then to reference the file by its name, without any path.

For instance, a program 'prog.o' may reside in 'vxpath/vw/demo/rdb' in VxWorks and in 'hostpath/vw/demo/rdb' on the host.

To load this program on VxWorks, type: -> cd "vxpath/vw/demo/rdb"

Then, in GDB, type:

```
(vxgdb) cd hostpath/vw/demo/rdb
(vxgdb) load prog.o
```

GDB displays a response similar to this:

```
Reading symbol data from wherever/vw/demo/rdb/prog.o... done.
```

You can also use the load command to reload an object module after editing and recompiling the corresponding source file.

NOTE:

This makes GDB delete all currently-defined breakpoints, autodisplays, and convenience variables, and clears the value history. (This is necessary in order to preserve the integrity of debugger data structures that reference the target system's symbol table.)

Running tasks

You can also attach to an existing task using the attach command as follows:

```
(vxgdb) attach task
```

task is the VxWorks hexadecimal task ID. The task can be running or suspended when you attach to it. Running tasks are suspended at the time of attachment.

GDB and SPARClet

GDB enables developers to debug tasks running on SPARClet targets from a Unix host. GDB uses code that runs on both the Unix host and on the SPARClet target. The program, gdb, is installed and executed on the Unix host.

```
timeout args
```

GDB now supports the option, remotetimeout. This option is set by the user; args represents the number of seconds GDB waits for responses.

When compiling for debugging, include the option, -g, to get debug information and the option, -Ttext, to relocate the program to where you wish to load it on the target. You may also want to add the option, -n, or the option, -N, in order to reduce the size of the sections. Use the following command input as an example.

```
sparclet-aout-gcc prog.c -Ttext 0x12010000 -g -o prog -N
```

You can use objdump to verify that the addresses are what you intended.

```
sparclet-aout-objdump --headers --syms prog
```

Once you have set your Unix execution search path to find GDB, you are ready to run GDB. From your Unix host, run gdb (or sparclet-aout- gdb, depending on your installation). GDB shows its prompt (gdbslet)

Setting file to debug

The GDB command, file, lets you choose which program to debug as the following example shows. GDB then attempts to read the symbol table of prog.

```
(gdbslet) file prog
```

GDB locates the file by searching the directories listed in the command search path. If the file was compiled with debug information (using the option, -q), source files will be searched as well. GDB locates the source files by searching the directories listed in the directory search path (see "Your program's environment" on page 36). If it fails to find a file, it displays a message such as: prog: No such file or directory.

When this happens, add the appropriate directories to the search paths with the GDB commands, path and dir, and execute the target command again.

Connecting to SPARClet

The GDB command, target, lets you connect to a SPARClet target. To connect to a target on serial port called ttya, use the following command at the SPARClet GDB prompt, gdbslet.

```
target sparclet /dev/ttya
```

GDB displays messages like the following output.

```
Remote target sparclet connected to /dev/ttya main () at ../prog.c:3
Connected to ttya.
```

SPARClet download

Once connected to the SPARClet target, you can use the GDB load command to download the file from the host to the target. The file name and load offset should be given as arguments to the load command. Since the file format is a .out, the program must be loaded to the starting address. You can use the binary utility, objdump, to find out what this value is. The load offset is an offset which is added to the vma (virtual memory address) of each of the file's sections. For instance, if the program, prog, was linked to text address, 0x1201000, with data at 0x12010160 and bss at 0x12010170, in GDB, use the command, load prog 0x12010000, at the prompt, (gdbslet).

You'll then see the following output.

Loading section .text, size 0xdb0 vma 0x12010000

If the code is loaded at a different address than that to which the program was linked, you may need to use the section and add-symbol-file commands to tell GDB where to map the symbol table.

Running and debugging

Now begin debugging the task using any of GDB's commands: b, step, run, and so on (for help with GDB commands, use the command, help). The following example shows what you'd do and see for execution control.

```
(gdbslet) b main
Breakpoint 1 at 0x12010000: file prog.c, line 3.
```

The previous insturction sets a breakpoint at line 3 for the file. Then you use the command, run. The following is an example of what you'd then see.

```
(gdbslet) run
```

The following is an example of the output from GDB you'd then see.

```
Starting program: prog
Breakpoint 1, main (argc=1, argv=0xeffff21c) at prog.c:3
                   char *symarg = 0;
```

Then, at your prompt, use the command, step, and set the next breakpoint at 4. The following is an example of what you'd then see.

```
(gdbslet) step
                  char *execarg = "hello!";
(gdbslet)
```

GDB and Hitachi microprocessors

GDB needs to know the following things to talk to your Hitachi SH, H8/300, or H8/500.

- That you want to use 'target hms', the remote debugging interface for Hitachi microprocessors, or 'target e7000', the in-circuit emulator for the Hitachi SH and the Hitachi 300H. ('target hms' is the default when GDB is configured specifically for the Hitachi SH, H8/300, or H8/500.)
- What serial device connects your host to your Hitachi board (the first serial device available on your host is the default).
- What speed to use over the serial device.

Connecting to Hitachi boards

Use the special qdb command 'device port' if you need to explicitly set the serial device. The default, port, is the first available port on your host. This is only necessary on Unix hosts, where it is typically something like /dev/ttya.

qdb has another special command to set the communications speed: 'speed bps'. This command also is only used from Unix hosts; on DOS hosts, set the line speed as usual from outside GDB with the DOS mode command (for instance, 'mode com2:9600, n, 8, 1, p' for a 9600 bps connection).

The 'device' and 'speed' commands are available only when you use a Unix host to debug your Hitachi microprocessor programs. If you use a DOS host, GDB depends on an auxiliary terminate-and-stay-resident program called asynctsr to communicate with the development board through a PC serial port. You must also use the DOS mode command to set up the serial port on the DOS side.

Using the e7000 in-circuit emulator

You can use the e7000 in-circuit emulator to develop code for either the Hitachi SH or the H8/300H. Use one of these forms of the 'target e7000' command to connect GDB to your H7000:

```
target e7000 port speed
```

Use this form if your e7000 is connected to a serial port. The port argument identifies what serial port to use (for example, 'com2'). The third argument is the line speed in bits per second (for example, '9600').

```
target e7000 hostname
```

If your e7000 is installed as a host on a TCP/IP network, you can just specify its hostname; GDB uses telnet to connect.

Special GDB commands for Hitachi micros

Some GDB commands are available only on the H8/300 or the H8/500 configurations:

```
set machine h8300 set machine h8300h
```

Condition GDB for one of the two variants of the H8/300 architecture with 'set machine'. You can use 'show machine' to check which variant is currently in

```
set memory mod show memory
```

effect.

Specify which H8/500 memory model (mod) you are using with 'set memory'; check which memory model is in effect with 'show memory'. The accepted values for mod are small, big, medium, and compact.

GDB and remote MIPS boards

GDB can use the MIPS remote debugging protocol to talk to a MIPS board attached to a serial line.

This is available when you configure GDB with --target=mips-idt-ecoff.

Use the following GDB commands to specify the connection to your target board.

```
target mips port
```

To run a program on the board, start up gdb with the name of your program as the argument. To connect to the board, use the command 'target mips port', where port is the name of the serial port connected to the board. If the program has not already been downloaded to the board, you may use the load command to download it. You can then use all the usual GDB commands.

For example, the following sequence connects to the target board through a serial port, and loads and runs a program called *prog* through the debugger.

```
host$ gdb prog
      GDB is free software and ...
       (gdb) target mips /dev/ttyb
       (gdb) load prog
       (gdb) run
target mips hostname:portnumber
```

On some GDB host configurations, you can specify a TCP connection (for instance, to a serial line managed by a terminal concentrator) instead of a serial port, using the syntax 'hostname:portnumber'.

GDB also supports the following special commands for MIPS targets.

```
set processor args
show processor
```

Use the set processor command to set the type of MIPS processor when you want to access processor-type-specific registers. For example, set processor x3041 tells GDB to use the CPO registers appropriate for the 3041 chip. Use the show processor command to see what MIPS processor GDB is using. Use the info reg command to see what registers GDB is using.

```
set mipsfpu double
set mipsfpu single
set mipsfpu none
show mipsfpu
```

If your target board does not support the MIPS floating point coprocessor, you should use the command 'set mipsfpu none' (if you need this, you may wish to put the command in your .gdbinit file). This tells GDB how to find the return value of functions which return floating point values. It also allows GDB to avoid saving the floating point registers when calling functions on the board. If you are using a floating point coprocessor with only single precision floating point support, as on the R4650 processor, use the command 'set mipsfpu single'. The default double precision floating point coprocessor may be selected using 'set mipsfpu double'.

In previous versions the only choices were double precision or no floating point, so 'set mipsfpu on' will select double precision and 'set mipsfpu off' will select no floating point. As usual, you can inquire about the mipsfpu variable with 'show mipsfpu'.

```
set remotedebug n
show remotedebug
```

You can see some debugging information about communications with the board by setting the remotedebug variable. If you set it to 1 using 'set remotedebug 1', every packet is displayed. If you set it to 2, every character is displayed. You can check the current value at any time with the command, show remotedebug.

```
set timeout seconds
set retransmit-timeout seconds
show timeout
show retransmit-timeout
```

You can control the timeout used while waiting for a packet, in the MIPS remote protocol, with the set timeout seconds command. The default is 5 seconds. Similarly, you can control the timeout used while waiting for an acknowledgement of a packet with the set retransmit-timeout seconds command. The default is 3 seconds. You can inspect both values with show timeout and show retransmit-timeout.

NOTE: These commands are available *only* when GDB is configured for '--target=mips-idt-ecoff'.

The timeout set by set timeout does not apply when GDB is waiting for your program to stop. In that case, GDB waits forever because it has no way of knowing how long the program is going to run before stopping.

Simulated CPU target

For some configurations, GDB includes a CPU simulator that you can use instead of a hardware CPU to debug your programs. Currently, a simulator is available when GDB is configured to debug Zilog Z8000 or Hitachi microprocessor targets. For the Z8000 family, 'target sim' simulates either the Z8002 (the unsegmented variant of the Z8000 architecture) or the Z8001 (the segmented variant). The simulator recognizes which architecture is appropriate by inspecting the object code.

```
target sim
```

Debug programs on a simulated CPU (which CPU depends on the GDB configuration)

After specifying this target, you can debug programs for the simulated CPU in the same style as programs for your host computer; use the file command to load a new program image, the run command to run your program, and so on.

As well as making available all the usual machine registers (see info reg), this debugging target provides three additional items of information as specially named registers:

```
Counts clock-ticks in the simulator.

insts

Counts instructions run in the simulator.

time

Execution time in 60ths of a second.
```

You can refer to these values in GDB expressions with the usual conventions; for example, 'b fputc if \$cycles>5000' sets a conditional breakpoint that suspends only after at least 5000 simulated clock ticks.

192 ■ Debugging with GDB GNUPro Toolkit



Controlling GDB

You can alter the way GDB interacts with you by using the set command. For commands controlling how GDB displays data, see "Print settings" on page 97; other settings are described in the following documentation.

- "Prompt" on page 194
- "Command editing" on page 195
- "Command history" on page 196
- "Screen size" on page 198
- "Numbers" on page 199
- "Optional warnings and messages" on page 200

Prompt

GDB indicates its readiness to read a command by printing a string called the *prompt*. This string is normally '(gdb)'. You can change the prompt string with the set prompt command. For instance, when debugging GDB with GDB, it is useful to change the prompt in one of the GDB sessions so that you can always tell which one you are talking to.

NOTE:

set prompt no longer adds a space for you after the prompt you set. This allows you to set a prompt which ends in a space or a prompt that does not.

set prompt newprompt

Directs GDB to use newprompt as its prompt string henceforth.

show prompt

Prints a line of the form: 'Gdb's prompt is: your-prompt'.

Command editing

GDB reads its input commands via the *readline* interface. This GNU library provides consistent behavior for programs which provide a command line interface to the user. Advantages are GNU Emacs-style or *vi*-style inline editing of commands, csh-like history substitution, and a storage and recall of command history across debugging sessions. You may control the behavior of command line editing in GDB with the command, set.

```
set editing
set editing on
Enable command line editing (enabled by default).
set editing off
Disable command line editing.
show editing
Show whether command line editing is enabled.
```

Command history

GDB can keep track of the commands you type during your debugging sessions, so that you can be certain of precisely what happened. Use the following commands to manage the GDB command history facility.

```
set history filename fname
```

Set the name of the GDB command history file to fname. This is the file where GDB reads an initial command history list, and where it writes the command history from this session when it exits. You can access this list through history expansion or through the history command editing characters listed in the following. This file defaults to the value of the environment variable GDBHISTFILE, or to './.gdb_history' if this variable is not set.

```
set history save
set history save on
```

Record command history in a file, whose name may be specified with the set history filename command. By default, this option is disabled.

```
set history save off
```

Stop recording command history in a file.

```
set history size size
```

Set the number of commands which GDB keeps in its history list. This defaults to the value of the environment variable HISTSIZE, or to 256 if this variable is not set.

History expansion assigns special meaning to the character, 1.

Since ! is also the logical not operator in C, history expansion is off by default. If you decide to enable history expansion with the set history expansion on command, you may sometimes need to follow! (when it is used as logical not, in an expression) with a space or a tab to prevent it from being expanded. The readline history facilities do not attempt substitution on the strings != and ! (, even when history expansion is enabled.

The commands to control history expansion are the following.

```
set history expansion on
set history expansion
```

Enable history expansion. History expansion is off by default.

```
set history expansion off
```

Disable history expansion.

The readline code comes with more complete documentation of editing and history expansion features. Users unfamiliar with GNU Emacs or vi may wish to read it.

```
show history filename show history save show history size show history expansion
```

These commands display the state of the GDB history parameters. show history by itself displays all four states.

show commands

Display the last ten commands in the command history.

show commands n

Print ten commands centered on command number, n.

show commands +

Print ten commands just after the commands last printed.

Screen size

Certain commands to GDB may produce large amounts of information output to the screen. To help you read all of it, GDB pauses and asks you for input at the end of each page of output. Use the Return key when you want to continue the output, or type q to discard the remaining output. Also, the screen width setting determines when to wrap lines of output. Depending on what is being printed, GDB tries to break the line at a readable place, rather than simply letting it overflow onto the following line.

Normally, GDB knows the size of the screen from the termcap data base together with the value of the TERM environment variable and the stty rows and stty cols settings. If this is not correct, you can override it with the set height and set width commands:

```
set height 1pp
show height
set width cpl
show width
```

These set commands specify a screen height of 1pp lines and a screen width of cpl characters. The associated show commands display the current settings. If you specify a height of zero lines, GDB does not pause during output no matter how long the output is. This is useful if output is to a file or to an editor buffer.

Likewise, you can specify 'set width 0' to prevent GDB from wrapping its output.

Numbers

You can always enter numbers in octal, decimal, or hexadecimal in GDB by the usual conventions: octal numbers begin with '0', decimal numbers end with '.', and hexadecimal numbers begin with '0x'. Numbers that begin with none of these are, by default, entered in base 10; likewise, the default display for numbers—when no particular format is specified—is base 10. You can change the default base for both input and output with the set radix command.

```
set input-radix base
```

Set the default base for numeric input. Supported choices for base are decimal 8, 10, or 16. base must itself be specified either unambiguously or using the current default radix; for example, any of set radix 012, set radix 10., or set radix 0xa set the base to decimal. On the other hand, 'set radix 10' leaves the radix unchanged no matter what it was.

```
set output-radix base
```

Set the default base for numeric display. Supported choices for base are decimal 8, 10, or 16. base must itself be specified either unambiguously or using the current default radix.

```
show input-radix
```

Display the current default base for numeric input.

```
show output-radix
```

Display the current default base for numeric display.

Optional warnings and messages

By default, GDB is silent about its inner workings. If you are running on a slow machine, you may want to use the set verbose command. This makes GDB tell you when it does a lengthy internal operation, so you will not think it has crashed.

Currently, the messages controlled by set verbose are those announcing that the symbol table for a source file is being read; see symbol-file in "Commands to specify files" on page 154.

```
set verbose on
```

Enables GDB output of certain informational messages.

```
set verbose off
```

Disables GDB output of certain informational messages.

show verbose

Displays whether set verbose is on or off.

By default, if GDB encounters bugs in the symbol table of an object file, it is silent; but if you are debugging a compiler, you may find this information useful (see "Errors reading symbol files" on page 159).

```
set complaints limit
```

Permits GDB to output <code>limit</code> complaints about each type of unusual symbols before becoming silent about the problem. Set <code>limit</code> to zero to suppress all complaints; set it to a large number to prevent complaints from being suppressed.

```
show complaints
```

Displays how many symbol complaints GDB is permitted to produce.

By default, GDB is cautious, and asks what sometimes seems to be a lot of stupid questions to confirm certain commands. For example, if you try to run a program which is already running:

```
(gdb) run
The program being debugged has been started already.
Start it from the beginning? (y or n)
```

If you are willing to unflinchingly face the consequences of your own commands, you can disable this "feature" with the following commands.

```
set confirm off
```

Disables confirmation requests.

```
set confirm on
```

Enables confirmation requests (the default).

show confirm

Displays state of confirmation requests.

202 Debugging with GDB

204 Debugging with GDB

206 Debugging with GDB



Canned sequences of commands

Aside from breakpoint commands (see "Breakpoint command lists" on page 61), GDB provides two ways to store sequences of commands for execution as a unit: user-defined commands and command files. The following documentation provides these discussions for this subject.

- "User-defined commands" on page 216
- "User-defined command hooks" on page 218
- "Command files" on page 219
- "Commands for controlled output" on page 220

User-defined commands

A user-defined command is a sequence of GDB commands to which you assign a new name as a command. This is done with the define command. User commands may accept up to 10 arguments separated by whitespace. Arguments are accessed within the user command with \$\sigma_{arg0}\$...\$\sigma_{arg9}\$. A trivial example is the following.

```
define adder
    print $arg0 + $arg1 + $arg2
```

To execute the command use the following declaration.

```
adder 1 2 3
```

This defines the command, adder, printing the sum of its three arguments.

NOTE: The arguments are text substitutions, so they may reference variables, use complex expressions, or even perform inferior functions calls.

define commandname

Define a command named *commandname*. If there is already a command by that name, you are asked to confirm that you want to redefine it.

The definition of the command is made up of other GDB command lines, which are given following the define command. The end of these commands is marked by a line containing end.

if

Takes a single argument, which is an expression to evaluate. It is followed by a series of commands that are executed only if the expression is true (nonzero). There can then optionally be a line else, followed by a series of commands that are only executed if the expression was false. The end of the list is marked by a line containing end.

while

The syntax is similar to if: the command takes a single argument, which is an expression to evaluate, and must be followed by the commands to execute, one per line, terminated by an end. The commands are executed repeatedly as long as the expression evaluates to true.

document commandname

Document the user-defined command, <code>commandname</code>, so that it can be accessed by help. The command, <code>commandname</code>, must already be defined. This command reads lines of documentation just as <code>define</code> reads the lines of the command definition, ending with <code>end</code>. After the <code>document</code> command is finished, <code>help</code> on command, <code>commandname</code>, displays the documentation you have written. You may use the <code>document</code> command again to change the documentation of a command. Redefining the command with <code>define</code> does not change the documentation.

help user-defined

List all user-defined commands, with the first line of the documentation (if any) for each.

show user

show user commandname

Display the GDB commands used to define *commandname* (but not its documentation). If no *commandname* is given, display the definitions for all user-defined commands.

When user-defined commands are executed, the commands of the definition are not printed. An error in any command stops execution of the user-defined command. If used interactively, commands that would ask for confirmation proceed without asking when used inside a user-defined command. Many GDB commands that normally print messages to say what they are doing omit the messages when used in a user-defined command.

User-defined command hooks

You may define hooks, which are a special kind of user-defined command. Whenever you run the command 'foo', if the user-defined command 'hook-foo' exists, it is executed (with no arguments) before that command. In addition, a pseudo-command, 'stop' exists. Defining 'hook-stop' makes the associated commands execute every time execution stops in your program: before breakpoint commands are run, displays are printed, or the stack frame is printed. For example, to ignore SIGALRM signals while single-stepping, but treat them normally during normal execution, you could define the following debugging input.

```
define hook-stop
handle SIGALRM nopass
end
define hook-run
handle SIGALRM pass
end
define hook-continue
handle SIGLARM pass
end
```

You can define a hook for any single-word command in GDB, but not for command aliases; you should define a hook for the basic command name, e.g., backtrace rather than bt. If an error occurs during the execution of your hook, execution of GDB commands stops and GDB issues a prompt (before the command that you actually used had a chance to run).

If you try to define a hook which does not match any known command, you get a warning from the define command.

Command files

A command file for GDB is a file of lines that are GDB commands.

Comments (lines starting with #) may also be included. An empty line in a command file does nothing; it does not mean to repeat the last command, as it would from the terminal. When you start GDB, it automatically executes commands from its *init files*. These are files named '.gdbinit'. GDB reads the init file (if any) in your home directory, then processes command line options and operands, and then reads the init file (if any) in the current working directory. This is so the init file in your home directory can set options (such as set complaints) which affect the processing of the command line options and operands. The init files are not executed if you use the '-nx' option; see "Choosing modes" on page 19. On some configurations of GDB, the init file is known by a different name (these are typically environments where a specialized form of GDB may need to coexist with other forms, hence a different name for the specialized version's init file). These are the environments with special init file names:

- VxWorks (Wind River Systems real-time OS): '.vxgdbinit'
- OS68K (Enea Data Systems real-time OS): '.os68qdbinit'
- ES-1800 (Ericsson Telecom AB M68000 emulator): '.esgdbinit'

You can also request the execution of a command file with the source command.

source filename

Execute the command file filename.

The lines in a command file are executed sequentially. They are not printed as they are executed. An error in any command terminates execution of the command file.

Commands that would ask for confirmation if used interactively proceed without asking when used in a command file. Many GDB commands that normally print messages to say what they are doing omit the messages when called from command files.

Commands for controlled output

During the execution of a command file or a user-defined command, normal GDB output is suppressed; the only output that appears is what is explicitly printed by the commands in the definition.

The following documentation describes three commands that are useful for generating exactly the output that you want.

```
echo text
```

Print text. Nonprinting characters can be included in text using C escape sequences, such as '\n' to print a newline.

NOTE: No newline is printed unless you specify one.

In addition to the standard C escape sequences, a backslash followed by a space stands for a space. This is useful for displaying a string with spaces at the beginning or the end, since leading and trailing spaces are otherwise trimmed from all arguments.

To print a 'and foo - ' fragment statement, use 'echo \ and foo - \' as a command with a backslash at the end of the declaration. As in C, this command continues the declaration onto subsequent lines.

```
gdb -batch -nx -mapped -readnow programname
```

Consider the following example.

```
echo This is some text\n\
which is continued\n\
onto several lines.\n
```

The previous example shows output that produces the same output as the following declaration.

```
echo This is some text\n echo which is continued\n echo onto several lines.\n
```

output expression

Print the value of expression and nothing but that value: no newlines, no '\$ nn-'. The value is not entered in the value history either. See "Expressions" on page 88 for more information on expressions.

```
output/ fmt expression
```

Print the value of expression in format, fmt. You can use the same formats as for print. See "Output formats" on page 92 for more information.

```
printf string, expressions \dots
```

Print the values of the *expressions* under the control of *string*. The expressions are separated by commas and may be either numbers or pointers. Their values are

printed as specified by *string*, exactly as if your program were to execute the C subroutine, as in the following example.

```
printf (string, expressions...);
```

For example, you can print two values in hex like the following declaration.

```
printf "foo, bar-foo = 0x%x, 0x%x\n", foo, bar-foo
```

The only backslash-escape sequences that you can use in the format string are the simple ones that consist of backslash followed by a letter.



Using GDB under GNU Emacs

A special interface, GNU Emacs, allows you to use, to view and to edit the source files for the program you are debugging with GDB.

Using GDB under Emacs is just like using GDB normally except for the following considerations.

• All "terminal" input and output goes through the Emacs buffer. This applies both to GDB commands and their output, and to the input and output done by the program you are debugging. This is useful because it means that you can copy the text of previous commands and input them again; you can even use parts of the output in this way.

Some of the following material uses the convention laid out in *GNU Emacs Manual*, the documentation from the Free Software Foundation. Meta-signifies using the Meta key (or the diamond ' \spadesuit ' key) on a Unix keyboard and the Alt key on a Windows keyboard in sequence followed by the specified letter. Ctrl-signifies using the Ctrl key in sequence followed by a specified letter. Any other input will be signified by code (as in something typed onscreen like a "gdb" command.

To use the Emacs interface, use the command Meta-x gdb. Give the executable file you want to debug as an argument. This command starts GDB as a subprocess of Emacs, with input and output through a newly created Emacs buffer.

All the facilities of Emacs' Shell mode are available for interacting with your program. In particular, you can send signals the usual way—for example, Ctrl-c, Ctrl-c for an interrupt, Ctrl-c, Ctrl-z for a stop.

GDB displays source code through Emacs.

Each time GDB displays a stack frame, Emacs automatically finds the source file for that frame and puts an arrow (' >') at the left margin of the current line. Emacs uses a separate buffer for source display, and splits the screen to show both your GDB session and the source.

Explicit GDB list or search commands still produce output as usual, but you probably have no reason to use them from Emacs.

WARNING:

If the directory where your program resides is not your current directory, it can be easy to confuse Emacs about the location of the source files, in which case the auxiliary display buffer does not appear to show your source.

GDB can find programs by searching your environment's PATH variable, so the GDB input and output session proceeds normally; but Emacs does not get enough information back from GDB to locate the source files in this situation.

To avoid this problem, either start GDB mode from the directory where your program resides, or specify an absolute file name when prompted for the Meta-x gdb argument.

Asimilar confusion can result if you use the GDB file command to switch to debugging a program in some other location, from an existing GDB buffer in Emacs.

By default, using the keystroke sequence, Meta-x gdb calls the program, gdb. If you need to call GDB by a different name (for example, if you keep several configurations with different names) you can set the Emacs variable, gdb-command-name.

For example, make Emacs instead call the "mygdb" program,

setq gdb-command-name "mygdb" (preceded by the keystroke sequence of using the Esc key twice cosecutively, or by typing in the *scratch* buffer, or in your '.emacs' file).

In the GDB I/O buffer, you can use the following keystroke sequences of Emacs commands in addition to the standard Shell mode commands.

Ctrl-h. m

Describe the features of Emacs' GDB Mode.

Meta-s

Execute to another source line, like the GDB step command; also update the display window to show the current file and location.

Meta-n

Execute to next source line in this function, skipping all function calls, like the GDB $_{\rm next}$ command. Then update the display window to show the current file and location.

Meta-i

Execute one instruction, like the GDB stepi command; update display window accordingly.

Meta-x, gdb-nexti

Execute to next instruction, using the GDB nexti command; update display window accordingly.

Ctrl-c, Ctrl-f

Execute until exit from the selected stack frame, like the GDB finish command.

Meta-c

Continue execution of your program, like the GDB continue command.

WARNING: In Emacs version 19, this command uses the keystroke sequence, Ctrl-c, Ctrl-p.

Meta-u

Go up the number of frames indicated by the numeric argument (see "Numeric Arguments" in *GNU Emacs Manual*), like the GDB up command.

WARNING: In Emacs version 19, this command uses the keystroke sequence, Ctrl-c. Ctrl-u.

Meta-d

Go down the number of frames indicated by the numeric argument, like the GDB down command.

WARNING: In Emacs version 19, this command uses the keystroke sequence, Ctrl-c, Ctrl-d.

Ctrl-x, &

Read the number where the cursor is positioned, and insert it at the end of the GDB I/O buffer. For example, if you wish to disassemble code around an address that was displayed earlier, type disassemble; then move the cursor to the address display, and pick up the argument for disassemble by using the keystroke sequence, Ctrl-x, &.

You can customize this further by defining elements of the list gdb-print-command; once it is defined, you can format or otherwise process numbers picked up by using the keystroke sequence, Ctrl-x, & before they are inserted. A numeric argument to Ctrl-x, & indicates that you wish special formatting, and also acts as an index to pick an element of the list. If the list element is a string, the number to

be inserted is formatted using the Emacs function format; otherwise the number is passed as an argument to the corresponding list element.

In any source file, the Emacs command using the keystroke sequence, Ctrl-x, SPACEBAR, and typing (gdb-break), which tells GDB to set a breakpoint on the source line point.

If you accidentally delete the source-display buffer, an easy way to get it back is to type the command, ε , in the GDB buffer, to request a frame display; when you run under Emacs, this recreates the source buffer if necessary to show you the context of the current frame.

The source files displayed in Emacs are in ordinary Emacs buffers which are visiting the source files in the usual way. You can edit the files with these buffers if you wish; but keep in mind that GDB communicates with Emacs in terms of line numbers.

If you add or delete lines from the text, the line numbers that GDB knows cease to correspond properly with the code.



Reporting Bugs in GDB

Your bug reports play an essential role in making GDB reliable.

Reporting a bug may help you by bringing a solution to your problem, or it may not. In any case, the principal function of a bug report is to help the entire community by making the next version of GDB work better. Bug reports are your contribution to the maintenance of GDB.

In order for a bug report to serve its purpose, you must include the information that enables us to fix the bug.

Have you found a bug?

If you are not sure whether you have found a bug, here are some guidelines:

- If the debugger gets a fatal signal, for any input whatever, that is a GDB bug. Reliable debuggers never crash.
- If GDB produces an error message for valid input, that is a bug.
- If GDB does not produce an error message for invalid input, that is a bug. However, you should note that your idea of "invalid input" might be our idea of "an extension" or "support for traditional practice".
- If you are an experienced user of debugging tools, your suggestions for improvement of GDB are welcome in any case.

228 ■ Debugging with GDB GNUPro Toolkit

How to report bugs

A number of companies and individuals offer support for GNU products. If you obtained GDB from a support organization, we recommend you contact that organization first.

You can find contact information for many support companies and individuals in the file 'etc/SERVICE' in the GNU Emacs distribution.

In any event, we also recommend that you send bug reports for GDB to one of these addresses:

```
bug-gdb@prep.ai.mit.edu
{ucbvax|mit-eddie|uunet}!prep.ai.mit.edu!bug-gdb
```

Do not send bug reports to 'info-gdb' or to 'help-gdb' or to any newsgroups. Most users of GDB do not want to receive bug reports. Those who do have arranged to receive 'bug-gdb'.

The mailing list 'bug-gdb' has a newsgroup 'gnu.gdb.bug' which serves as a repeater. The mailing list and the newsgroup carry exactly the same messages. Often people think of posting bug reports to the newsgroup instead of mailing them. This appears to work, but it has one problem which can be crucial: a newsgroup posting often lacks a mail path back to the sender. Thus, if we need to ask for more information, we may be unable to reach you. For this reason, it is better to send bug reports to the mailing list. As a last resort, send bug reports on paper to:

GNU Debugger Bugs

Free Software Foundation Inc.

59 Temple Place Suite 330

Boston, MA 02111-1307 USA

The fundamental principle of reporting bugs usefully is this: *report all the facts*. If you are not sure whether to state a fact or leave it out, state it!

Often people omit facts because they think they know what causes the problem and assume that some details do not matter. Thus, you might assume that the name of the variable you use in an example does not matter. Well, probably it does not, but one cannot be sure. Perhaps the bug is a stray memory reference which happens to fetch from the location where that name is stored in memory; perhaps, if the name were different, the contents of that location would fool the debugger into doing the right thing despite the bug. Play it safe and give a specific, complete example. That is the easiest thing for you to do, and the most helpful.

Keep in mind that the purpose of a bug report is to enable us to fix the bug if it is new to us. Therefore, always write your bug reports on the assumption that the bug has not

been reported previously.

Sometimes people give a few sketchy facts and ask, "Does this ring a bell?" Those bug reports are useless, and we urge everyone *to refuse to respond to them* except to chide the sender to *report bugs properly*.

To enable us to fix the bug, you should include all the following things.

- The version of GDB. GDB announces it if you start with no arguments; you can also print it at any time using show version.
 - Without this, we will not know whether there is any point in looking for the bug in the current version of GDB.
- The type of machine you are using, and the operating system name and version number.
- What compiler (and its version) was used to compile GDB—such as "gcc-2.8".
- What compiler (and its version) was used to compile the program you are debugging—such as "gcc-2.8".
- The command arguments you gave the compiler to compile your example and observe the bug. For example, did you use '-o'? To guarantee you will not omit something important, list them all. A copy of the Makefile (or the output from make) is sufficient.
 - If we were to try to guess the arguments, we would probably guess wrong and then we might not encounter the bug.
- A complete input script, and all necessary source files, that will reproduce the bug.
- A description of what behavior you observe that you believe is incorrect. For example, "It gets a fatal signal." Of course, if the bug is that GDB gets a fatal signal, then we will certainly notice it. But if the bug is incorrect output, we might not notice unless it is glaringly wrong. You might as well not give us a chance to make a mistake.
 - Even if the problem you experience is a fatal signal, you should still say so explicitly. Suppose something strange is going on, such as, your copy of GDB is out of synch, or you have encountered a bug in the C library on your system. (This has happened!) Your copy might crash and ours would not. If you told us to expect a crash, then when ours fails to crash, we would know that the bug was not happening for us. If you had not told us to expect a crash, then we would not be able to draw any conclusion from our observations.
- If you wish to suggest changes to the GDB source, send us context diffs. If you

even discuss something in the GDB source, refer to it by context, not by line number.

The line numbers in our development sources will not match those in your sources. Your line numbers would convey no useful information to us.

The following are some things that are not necessary.

• A description of the envelope of the bug.

Often people who encounter a bug spend a lot of time investigating which changes to the input file will make the bug go away and which changes will not affect it.

This is often time consuming and not very useful, because the way we will find the bug is by running a single example under the debugger with breakpoints, not by pure deduction from a series of examples. We recommend that you save your time for something else. Of course, if you can find a simpler example to report *instead* of the original one, that is a convenience for us. Errors in the output will be easier to spot, running under the debugger will take less time, and so on.

However, simplification is not vital; if you do not want to do this, report the bug anyway and send us the entire test case you used.

• A patch for the bug.

A patch for the bug does help us if it is a good one. But do not omit the necessary information, such as the test case, on the assumption that a patch is all we need. We might see problems with your patch and decide to fix the problem another way, or we might not understand it at all.

Sometimes with a program as complicated as GDB it is very hard to construct an example that will make the program follow a certain path through the code.

If you do not send us the example, we will not be able to construct one, so we will not be able to verify that the bug is fixed.

And if we cannot understand what bug you are trying to fix, or why your patch should be an improvement, we will not install it. A test case will help us to understand.

• A guess about what the bug is or what it depends on.

Such guesses are usually wrong.

Even we cannot guess right about such things without first using the debugger to find the facts.



Command Line Editing

The following text describes GNU's command line editing interface.

- "Introduction to Line Editing" on page 234
- "Readline Interaction" on page 235
- "Readline Init File" on page 238

Introduction to Line Editing

The following paragraphs describe the notation we use to represent keystrokes.

The text, C-K, is read as "Control K" and describes the command to produce when using the Control and the K keys together. The text, M-K, is read as "Meta K" and describes the command to produce when using the Meta key (the key with a diamond), and the K key. If you do not have a meta key, the identical keystroke can be generated by using the Esc key, and then, K. Either process is known as "meta-fying the K key." The text, M-C-K, is read as 'Meta Control K' and describes the command to produce when asked to "meta-fy C K."

IMPORTANT:

The hyphen characters and the comma characters are not a part of the keystroke sequence to type.

All uppercase letters require using the shift key, of course, since all commands are specific.

In addition, several keys have their own names. Specifically, Delete, Esc, LFD (linefeed), SPACEBAR, Return, and TAB all stand for themselves when seen in this text, or in an init file (see "Readline Init File" on page Readline Init File for more information).

Readline Interaction

Often during an interactive session you type in a long line of text, only to notice that the first word on the line is misspelled. The Readline library gives you a set of commands for manipulating the text as you type it in, allowing you to just fix your typo, and not forcing you to retype the majority of the line. Using these editing commands, you move the cursor to the place that needs correction, and delete or insert the text of the corrections. Then, when you are satisfied with the line, you simply use Return. You do not have to be at the end of the line to use Return; the entire line is accepted regardless of the location of the cursor within the line.

See the following documentation for more details.

- "Readline Bare Essentials" on this page
- "Readline Movement Commands" on page 236
- "Readline Killing Commands" on page 236
- "Readline Arguments" on page 237
- "Readline Init Syntax" on page 238
- "Letting Readline Type For You" on page 242
- "Readline vi Mode" on page 243

Readline Bare Essentials

In order to enter characters into the line, simply type them. The typed character appears where the cursor was, and then the cursor moves one space to the right. If you mistype a character, you can use Delete to back up, and delete the mistyped character.

Sometimes you may miss typing a character that you wanted to type, and not notice your error until you have typed several other characters. In that case, you can use C-B to move the cursor to the left, and then correct your mistake. Aftwerwards, you can move the cursor to the right with C-F.

When you add text in the middle of a line, you will notice that characters to the right of the cursor get 'pushed over' to make room for the text that you have inserted. Likewise, when you delete text behind the cursor, characters to the right of the cursor get 'pulled back' to fill in the blank space created by the removal of the text. A list of the basic bare essentials for editing the text of an input line follows.

C-B

Move back one character.

C-F

Move forward one character.

Delete

Delete the character to the left of the cursor.

C-D

Delete the character underneath the cursor.

Printing characters

Insert itself into the line at the cursor.

C-_

Undo the last thing that you did. You can undo all the way back to an empty line.

Readline Movement Commands

The previous commands are the most basic possible keystrokes that you need in order to do editing of the input line. For your convenience, many other commands have been added in addition to C-B, C-F, C-D, and Delete.

Here are some commands for moving more rapidly about the line.

C-A

Move to the start of the line.

C-E

Move to the end of the line.

M-F

Move forward a word.

M-B

Move backward a word.

C-L

Clear the screen, reprinting the current line at the top.

Notice how C-F moves forward a character, while M-F moves forward a word. It is a loose convention that control keystrokes operate on characters while meta keystrokes operate on words.

Readline Killing Commands

Killing text means to delete the text from the line, but to save it away for later use, usually by yanking it back into the line. If the description for a command says that it 'kills' text, then you can be sure that you can get the text back in a different (or the same) place later. The following is the list of commands for killing text.

C-K

Kill the text from the current cursor position to the end of the line.

M-D

Kill from the cursor to the end of the current word, or if between words, to the end of the next word.

M-Delete

Kill from the cursor to the start of the previous word, or if between words, to the start of the previous word.

C-W

Kill from the cursor to the previous whitespace.

This is different than M-Delete because the word boundaries differ.

And, here is how to yank the text back into the line.

C-Y

Yank the most recently killed text back into the buffer at the cursor.

M-Y

Rotate the kill-ring, and yank the new top. You can only do this if the prior command is C-Y or M-Y.

When you use a kill command, the text is saved in a *kill-ring*. Any number of consecutive kills save all of the killed text together, so that when you yank it back, you get it in one clean sweep. The kill ring is not line specific; the text that you killed on a previously typed line is available to be yanked back later, when you are typing another line.

Readline Arguments

You can pass numeric arguments to Readline commands. Sometimes the argument acts as a repeat count, other times it is the *sign* of the argument that is significant. If you pass a negative argument to a command which normally acts in a forward direction, that command will act in a backward direction. For example, to kill text back to the start of the line, you might use M-- C-K.

The general way to pass numeric arguments to a command is to type meta digits before the command. If the first 'digit' you type is a minus sign (-), then the sign of the argument will be negative. Once you have typed one meta digit to get the argument started, you can type the remainder of the digits, and then the command. For example, to give the C-D command an argument of 10, you could use the keystroke sequence, M-1, 0, C-D.

Readline Init File

Although the Readline library comes with a set of GNU Emacs-like keybindings, it is possible that you would like to use a different set of keybindings. You can customize programs that use Readline by putting commands in an *init* file in your home directory. The name of this file is '~/.inputrc'.

When a program which uses the Readline library starts up, the '~/.inputrc' file is read, and the keybindings are set.

In addition, the C-X, C-R command re-reads this init file, thus incorporating any changes that you might have made to it.

Readline Init Syntax

There are only four constructs allowed in the '~/.inputrc' file.

Variable Settings

You can change the state of a few variables in Readline. You do this by using the set command within the init file. Here is how you would specify that you wish to use vi line editing commands:

```
set editing-mode vi
```

Right now, there are only a few variables which can be set; so few, in fact, that we just iterate them here:

```
editing-mode
```

The editing-mode variable controls which editing mode you are using. By default, GNU Readline starts up in Emacs editing mode, where the keystrokes are most similar to Emacs. This variable can either be set to emacs or vi.

```
horizontal-scroll-mode
```

This variable can either be set to on or off. Setting it to on means that the text of the lines that you edit will scroll horizontally on a single screen line when they are larger than the width of the screen, instead of wrapping onto a new screen line. By default, this variable is set to off.

```
mark-modified-lines
```

This variable when set to on, says to display an asterisk, '*', at the starts of history lines which have been modified. This variable is off by default.

```
prefer-visible-bell
```

If this variable is set to on it means to use a visible bell if one is available, rather than simply ringing the terminal bell. By default, the value is Off.

Key Bindings

The syntax for controlling keybindings in the '~/.inputrc' file is simple. First you have to know the name of the command that you want to change. The following pages contain tables of the command name, the default keybinding, and a short description of what the command does.

Once you know the name of the command, simply place the name of the key you wish to bind the command to, a colon, and then the name of the command on a line in the '~/.inputrc' file. The name of the key can be expressed in different ways, depending on which is most comfortable for you.

```
keyname: function-name Or macro
```

keyname is the name of a key spelled out in English. For example:

```
Control-u: universal-argument
Meta-Rubout: backward-kill-word
Control-o: ">&output"
```

In the example, C-U is bound to the function, universal-argument, and C-O is bound to run the macro expressed on the right hand side (that is, to insert the text '>&output' into the line).

```
"keyseg": function-name Of macro
```

keyseq differs from *keyname* in that strings denoting an entire key sequence can be specified. Simply place the key sequence in double quotes.

GNU Emacs style key escapes can be used, as in the following example:

```
"\C-u": universal-argument
"\C-x\C-r": re-read-init-file
"\e[11~": "Function Key 1"
```

In the example, C-U is bound to the function universal-argument (just as it was in the first example), C-X, C-R is bound to the function reread-init-file, and Esc-[, 1, 1, ~ is bound to insert the text 'Function Key 1'.

Commands For Moving

```
beginning-of-line (C-A)

Move to the start of the current line.
```

Move to the end of the line.

```
forward-char (C-F)
```

end-of-line (C-E)

Move forward a character.

```
backward-char (C-B)
```

Move back a character.

```
forward-word (M-F)
```

Move forward to the end of the next word.

```
backward-word (M-B)
```

Move back to the start of this, or the previous, word.

```
clear-screen (C-L)
```

Clear the screen leaving the current line at the top of the screen.

Commands For Manipulating The History

```
accept-line (Newline, Return)
```

Accept the line regardless of where the cursor is. If this line is non-empty, add it to the history list. If this line was a history line, then restore the history line to its original state.

```
previous-history (C-P)
```

Move 'up' through the history list.

```
next-history (C-N)
```

Move 'down' through the history list.

```
beginning-of-history (M-<)
```

Move to the first line in the history.

```
end-of-history (M->)
```

Move to the end of the input history, i.e., the line you are entering.

```
reverse-search-history (C-R)
```

Search backward starting at the current line and moving 'up' through the history as necessary. This is an incremental search.

```
forward-search-history (C-S)
```

Search forward starting at the current line and moving 'down' through the the history as necessary.

Commands For Changing Text

```
delete-char (C-D)
```

Delete the character under the cursor. If the cursor is at the beginning of the line, and there are no characters in the line, and the last character typed was not C-D, then return EOF.

```
backward-delete-char (Rubout)
```

Delete the character behind the cursor. A numeric argument says to kill the characters instead of deleting them.

```
quoted-insert (C-Q, C-V)
```

Add the next character that you type to the line verbatim. This is how to insert things like C-Q for example.

```
tab-insert (M-TAB)
```

Insert a tab character.

```
self-insert (a, b, A, 1, !, ...)
```

Insert yourself.

```
transpose-chars (C-T)
```

Drag the character before point forward over the character at point. Point moves forward as well. If point is at the end of the line, then transpose the two characters before point. Negative arguments don't work.

```
transpose-words (M-T)
```

Drag the word behind the cursor past the word in front of the cursor moving the cursor over that word as well.

```
upcase-word (M-U)
```

Uppercase all letters in the current (or following) word. With a negative argument, do the previous word, but do not move point.

```
downcase-word (M-L)
```

Lowercase all letters in the current (or following) word. With a negative argument, do the previous word, but do not move point.

```
capitalize-word (M-C)
```

Uppercase the first letter in the current (or following) word. With a negative argument, do the previous word, but do not move point.

Killing And Yanking

```
kill-line (C-K)
```

Kill the text from the current cursor position to the end of the line.

```
backward-kill-line()
```

Kill backward to the beginning of the line. This is normally unbound.

```
kill-word (M-D)
```

Kill from the cursor to the end of the current word, or if between words, to the end of the next word.

```
backward-kill-word (M-Delete)
```

Kill the word behind the cursor.

```
unix-line-discard (C-U)
```

Kill the whole line the way C-U used to in Unix line input. The killed text is saved on the kill-ring.

```
unix-word-rubout (C-W)
```

Kill the word the way C-W used to in Unix line input. The killed text is saved on the kill-ring. This is different than backward-kill-word because the word boundaries differ.

```
yank (C-Y)
```

Yank the top of the kill ring into the buffer at point.

```
yank-pop(M-Y)
```

Rotate the kill-ring, and yank the new top. You can only do this if the prior command is yank or yank-pop.

Specifying Numeric Arguments

```
digit-argument (M-0, M-1, ... M--)
```

Add this digit to the argument already accumulating, or start a new argument. M-starts a negative argument.

```
universal-argument ()
```

Do what C-U does in GNU Emacs. By default, this is not bound.

Letting Readline Type For You

```
complete (TAB)
```

Attempt to do completion on the text before point. This is implementation defined. Generally, if you are typing a filename argument, you can do filename completion; if you are typing a command, you can do command completion, if you are typing in a symbol to GDB, you can do symbol name completion, if you are typing in a variable to Bash, you can do variable name completion.

```
possible-completions (M-?)
```

List the possible completions of the text before point.

Some Miscellaneous Commands

```
reread-init-file (C-X, C-R)
```

Read in the contents of your '~/.inputrc' file, and incorporate any bindings found there.

```
abort (C-G)
```

Stop running the current editing command.

```
prefix-meta (Esc)
```

Make the next character that you type be metafied. This is for people without a meta key. Typing ESC F is equivalent to typing M-F.

```
undo (C-_)
```

Incremental undo, separately remembered for each line.

```
revert-line (M-R)
```

Undo all changes made to this line. This is like typing the 'undo' command enough times to get back to the beginning.

Readline vi Mode

While the Readline library does not have a full set of vi editing functions, it does contain enough to allow simple editing of the line.

In order to switch interactively between GNU Emacs and vi editing modes, use the command M-C-J (toggle-editing-mode). When you enter a line in vi mode, you are already placed in 'insertion' mode, as if you had typed an 'i'. Using Esc switches you into 'edit' mode, where you can edit the text of the line with the standard vi movement keys, move to previous history lines with 'k', and following lines with 'j', and so forth.

244 Debugging with GDB

246 Debugging with GDB



Using History Interactively

The following documentation describes how to use the GNU History Library interactively, from a user's standpoint.

- "History Interaction" on page 248
- "Event Designators" on page 248
- "Word Designators" on page 248
- "Modifiers" on page 249

History Interaction

The History library provides a history expansion feature similar to the history expansion in csh. The following text describes the syntax you use to manipulate history information.

History expansion takes two parts. In the first part, determine which line from the previous history will be used for substitution. This line is called the *event*. In the second part, select portions of that line for inclusion into the current line. These portions are called *words*. GDB breaks the line into words in the same way that the Bash shell does, so that several English (or Unix) words surrounded by quotes are considered one word.

Event Designators

```
An event designator is a reference to a command line entry in the history list.

!

Start a history substitution, except when followed by a space, tab, or the end of the line... = or (.
```

Refer to the previous command. This is a synonym for !-1.

In Refer to command line n.

!-n

Refer to the command line n lines back.

Refer to the most recent command starting with string.

Refer to the most recent command containing string.

Word Designators

A: separates the event designator from the *word designator*. It can be omitted if the word designator begins with a ^, \$, * or %. Words are numbered from the beginning of the line, with the first word being denoted by a 0 (zero).

```
0 (zero)
```

The zero'th word. For many applications, this is the command word.

The n'th word.

The first argument. that is, word 1.

\$
The last argument.

The word matched by the most recent ?string? search.

x-y

A range of words; -y abbreviates 0-y.

*

All of the words, excepting the zero'th. This is a synonym for 1-\$. It is not an error to use * if there is just one word in the event. The empty string is returned in that case.

Modifiers

After the optional word designator, you can add a sequence of one or more of the following modifiers, each preceded by a :.

The entire command line typed so far. This means the current command, not the previous command.

h Remove a trailing pathname component, leaving only the head.

Remove a trailing suffix of the form '.' suffix, leaving the basename.

Remove all but the suffix.

Remove all leading pathname components, leaving the tail.

Print the new command but do not execute it.

250 ■ Debugging with GDB



Formatting Documentation

The GDB 4 release includes an already-formatted reference card, ready for printing with PostScript or Ghostscript, in the 'gdb' subdirectory of the main source directory. If you can use PostScript or Ghostscript with your printer, you can print the reference card immediately with 'refeard.ps'.

The release also includes the source for the reference card. You can format it, using TEX, by typing: make refcard.dvi.

The GDB reference card is designed to print in landscape mode on US "letter" size paper; that is, on a sheet 11 inches wide by 8.5 inches high. You will need to specify this form of printing as an option to your DVI output program. All the documentation for GDB comes as part of the machine-readable distribution. The documentation is written in Texinfo format, which is a documentation system that uses a single source file to produce both online information and a printed manual. You can use one of the Info formatting commands to create the online version of the documentation and TEX (or texi2roff) to typeset the printed version. GDB includes an already formatted copy of the online Info version of this manual in the 'gdb' subdirectory. The main Info file is 'gdb-version-number/gdb/gdb.info', and it refers to subordinate files matching 'gdb.info*' in the same directory. If necessary, you can print out these files, or read them with any editor; but they are easier to read using the info subsystem in GNU Emacs or the standalone info program, available as part of the GNU Texinfo distribution. If you want to format these Info files yourself, you need one of the Info formatting programs, such as texinfo-format-buffer or makeinfo.

If you have makeinfo installed, and are in the top level GDB source directory, you can make the Info file by typing:

```
cd gdb
make gdb.info
```

If you want to typeset and print copies of this manual, you need TEX, a program to print its DVI output files, and 'texinfo.tex', the Texinfo definitions file. TEX is a typesetting program; it does not print files directly, but produces output files called dvi files. To print a typeset document, you need a program to print dvi files. If your system has TEX installed, chances are it has such a program. The precise command to use depends on your system; <code>lpr -d</code> is common; another (for PostScript devices) is <code>dvips</code>. The DVI print command may require a file name without any extension or a '.dvi' extension. TEX also requires a macro definitions file called 'texinfo.tex'. This file tells TEX how to typeset a document written in Texinfo format. On its own, TEX cannot either read or typeset a Texinfo file. 'texinfo.tex' is distributed with GDB and is located in the 'gdb- version-number/texinfo' directory. If you have TEX and a dvi printer program installed, you can typeset and print this manual. First switch to the the 'gdb' subdirectory of the main source directory and then type: <code>makegdb.dvi</code>.

252 ■ Debugging with GDB GNUPro Toolkit

254 ■ Debugging with GDB GNUPro Toolkit

GNUPRO™ TOOLKIT

GDBtk

98r1 July, 1998

GDBtk

Copyright © 1991-1998 Cygnus.

All rights reserved.

GNUPro[™], the GNUPro[™] logo and the Cygnus logo are all trademarks of Cygnus.

All other brand and product names are trademarks of their respective owners.

Permission is granted to make and distribute verbatim copies of this documentation, provided the copyright notice and this permission notice are preserved on all copies.

Permission is granted to copy and distribute modified versions of this documentation under the conditions for verbatim copying, provided also that the entire resulting derived work is distributed under the terms of a permission notice identical to this one.

Permission is granted to copy and distribute translations of this documentation into another language, under the above conditions for modified versions.

This documentation has been prepared by Cygnus Technical Publications; contact the Cygnus Technical Publications staff: doc@cygnus.com.

Licensing for GDBtk

The Tcl/Tk software, used in building the graphical user interface for the debugging tools, is copyrighted by the Regents of the University of California, Sun Microsystems, Inc., and other parties. The following terms apply to all files associated with the software unless explicitly disclaimed in individual files.

The authors hereby grant permission to use, copy, modify, distribute, and license this software and its documentation for any purpose, provided that existing copyright notices are retained in all copies and that this notice is included verbatim in any distributions. No written agreement, license, or royalty fee is required for any of the authorized uses. Modifications to this software may be copyrighted by their authors and need not follow the licensing terms described here, provided that the new terms are clearly indicated on the first page of each file where they apply.

IN NO EVENT SHALL THE AUTHORS OR DISTRIBUTORS BE LIABLE TO ANY PARTY FOR DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OF THIS SOFTWARE, ITS DOCUMENTATION, OR ANY DERIVATIVES THEREOF, EVEN IF THE AUTHORS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

THE AUTHORS AND DISTRIBUTORS SPECIFICALLY DISCLAIM ANY WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, AND NON-INFRINGEMENT. THIS SOFTWARE IS PROVIDED ON AN "AS IS" BASIS, AND THE AUTHORS AND DISTRIBUTORS HAVE NO OBLIGATION TO PROVIDE MAINTENANCE, SUPPORT, UPDATES, ENHANCEMENTS, OR MODIFICATIONS.

RESTRICTED RIGHTS: Use, duplication or disclosure by the government is subject to the restrictions as set forth in subparagraph (c) (1) (ii) of the Rights in Technical Data and Computer Software Clause as DFARS 252.227-7013 and FAR 52.227-19.

CYGNUS GDBtk 257

Introduction to GDBtk

GDBTk is a graphical user interface for GDB, the GNUPro Debugger. GDBTk has the same look and feel on both Windows and Unix operating systems. GDBTk offers the ease of a GUI and access to all the power of the GDB's command-line interface.

See the descriptions for the basic user interface with the documentation with "Interface for GDBtk" on page 261. See "Procedures" on page 301 for step by step procedures to specify an executable, to indicate a source file, to set break points within a function and to view the changing values of local variables.

CYGNUS GDBtk ■ 259



Interface for GDBtk

This documentation outlines the functions of the GDBTk user interface.

- "Source Window" on page 262
- "Dialog boxes for the Source Window" on page 276
- "Stack window" on page 284
- "Registers window" on page 285
- "Memory window" on page 287
- "Watch Expressions window" on page 290
- "Local Variables window" on page 293
- "Breakpoints window" on page 295
- "Console window" on page 297
- "Help window" on page 298

When GDBTk first opens, it displays the Source Window. The other windows that are invoked from the Source Window, through View menu selections or tool bar buttons have documentation in the order that they appear in the Source Window's View menu. The Help window, for instance, is invoked from the Source Window's Help menu.

The documentation discusses what occurs during an actual debugging session, after running the executable up to a single breakpoint set in 'main.c' of our example executable program.

CYGNUS GDBtk ■ 261

Source Window

When GDBTk first opens, it displays the Source Window, as shown in Figure 1: "Source Window" on page 263.

The following documentation describes the Source Window attributes and its correlating functionality.

- "Menu bar for the Source Window" on page 264
- "Toolbar buttons" on page 267
- "Special display pane features" on page 271
- "Using the mouse in the display pane" on page 272
- "Below the horizontal scroll bar" on page 274
- "Load New Executable dialog box for the Source Window" on page 276
- "Page Setup dialog box for the Source Window" on page 277
- "Print dialog box for the Source Window" on page 278
- "Target selection from the Source Window" on page 279
- "Global Preferences dialog box for the Source window" on page 282
- "Source Preferences dialog box for the Source window" on page 283

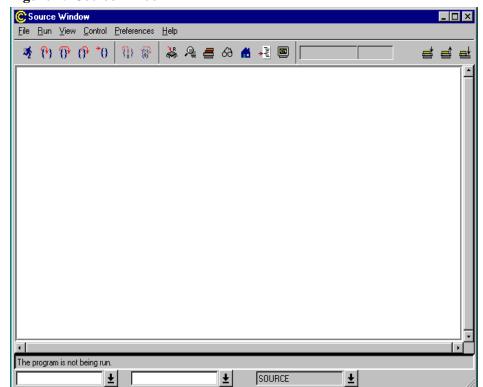


Figure 1: Source Window

CYGNUS GDBtk ■ 263

Menu bar for the Source Window

There are six menu item selections: File, Run, View, Control, Preferences and Help. The following documentation discusses the Source Window menus.

- "File" on page 264
- "Run" on page 265
- "View" on page 265
- "Control" on page 266
- "Preferences" on page 266
- "Help" on page 267

File

Figure 2: File menu



Open

Brings up the Load New Executable dialog box. See "Load New Executable dialog box for the Source Window" on page 276.

Page Setup

Brings up the Page Setup dialog box. See "Page Setup dialog box for the Source Window" on page 277. This option is not currently available on the Unix version.

Print Source

Brings up the Print dialog box. See "Print dialog box for the Source Window" on page 278. This option is not currently available on the Unix version.

Target Settings

Brings up the Target Settings dialog box. See "Target selection from the Source Window" on page 279.

Exit

Closes the GDBTk program.

Run

Figure 3: Run menu

<u>D</u> ownload	Ctrl+D
<u>R</u> un	R

Download


Downloads a program to a board (if connected).

Run

Runs the executable program.

View

Figure 4: View menu

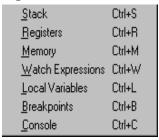

Stack

Displays Stack window. See "Stack window" on page 284.

Registers

Displays Registers window. See "Registers window" on page 285.

Memory

Displays Memory window. See "Memory window" on page 287.

Watch Expressions

Displays Watch Expressions window. See "Watch Expressions window" on page 290.

Local Variables

Displays Local Variables window. See "Local Variables window" on page 293.

Breakpoints

Displays Breakpoints window. See "Breakpoints window" on page 295.

Console

Displays Console window. See "Console window" on page 297.

CYGNUS GDBtk 265

Control

Figure 5: Control menu



Step

Steps to next executable line of source code. Steps into called functions.

Next

Steps to next executable line of source code in current file. Steps over called functions.

Finish

Finishes execution of the current frame. If clicked while in a function, it finishes the function and returns to the line that called the function.

Continue

Continues execution until a breakpoint, watchpoint or other exception is encountered; or execution is complete.

Step Asm Inst

Steps to next assembler instruction. Steps into subroutines.

Next Asm Inst

Steps to next assembler instruction. Executes subroutines and steps to the subsequent instruction.

Preferences

Figure 6: Preferences menu



Globa

Displays Global Preferences dialog box. See "Global Preferences dialog box for the Source window" on page 282.

Source

Displays Source Preferences dialog box. See "Source Preferences dialog box for the Source window" on page 283.

Help

Figure 7: Help menu



Help Topics

Displays Help Window. See "Help window" on page 298.

Cygnus on the Web

Links to the "GNUPro Tools" web page.

About GDB

Displays About GDBTk window, containing product version number, copyright and Cygnus contact information.

Toolbar buttons

Run / Stop

Figure 8: Run button



The Run button runs the executable. During execution the button turns into the Stop button. If you click on the Run button with no executable loaded, you invoke the Target Selection dialog box. See "Target selection from the Source Window" on page 279.

Figure 9: Stop button



The Stop button will interrupt the program, provided that the underlying hardware and protocol support such interruptions. Many monitors that are connected to boards cannot interrupt programs on those boards, so the Stop button has no functionality.

Step

Figure 10: Step button



Steps to next executable line of source code. Steps into called functions.

CYGNUS GDBtk ■ 267

Next

Figure 11: Next button



Steps to next executable line of source code in the current file. Steps over called functions.

Finish

Figure 12: Finish button



Finishes execution of the current frame.

If clicked while in a function, it finishes the function and returns to the line that called the function.

Continue

Figure 13: Continue button



Continues execution until a breakpoint, watchpoint or other exception is encountered; or execution is complete.

Step Assembler instruction

Figure 14: Step assembler instruction button



Invokes Step assembler instruction. Steps into subroutines.

Next Assembler instruction

Figure 15: Next assembler instruction button



Steps to Next assembler instruction. Executes subroutines and steps to the following instruction.

Registers

Figure 16: Registers button



The Registers button brings up the Registers window. See "Registers window" on page 285.

Memory

Figure 17: Memory button



The Memory button brings up the Memory window. See "Memory window" on page 287.

Stack

Figure 18: Stack button



The Stack button brings up the Stack window. See "Stack window" on page 284.

Watch Expressions

Figure 19: Watch Expressions button



The Watch Expressions button brings up the Watch Expressions Window. See "Watch Expressions window" on page 290.

Local Variables

Figure 20: Local Variables button



The Local Variables button brings up the Local Variables Window. See "Local Variables window" on page 293.

CYGNUS GDBtk 269

Breakpoints

Figure 21: Breakpoints button



The Breakpoints button brings up the Breakpoints window. See "Breakpoints window" on page 295.

Console

Figure 22: Console button



The Console button brings up the Console window. The Console window features a command line interface to GDB, the GNUPro debugger. See "Console window" on page 297.

Line address / Line number display

Figure 23: Program counter display frame and line number display frame



The left-hand read-only frame displays the program counter (pc) of the current frame, while the program is running.

The right-hand read-only frame displays the line number, which contains the pc, while the program is running.

Down stack frame

Figure 24: Down stack frame button



Moves down the stack frame one level.

Up stack frame

Figure 25: Up stack frame button



Moves up the stack frame one level.

Go to bottom of stack

Figure 26: Go to bottom of stack frame button



Moves to the bottom of the stack frame.

Special display pane features

The following discussion details some special features to the display panes.


- When the executable is running, the location of the current program counter is displayed as a line with a green background
- When the executable has finished running, the background color changes to violet (browsing mode).
- When looking at a stack backtrace, the background color changes to golden yellow

CYGNUS GDBtk 271

Using the mouse in the display pane

There are various uses of the mouse within the main display pane of the Source Window. The display pane is divided into two columns, as shown in **Figure 27**. The left column extends from the left edge of the display pane to the last character of the line number. The right column extends from the last character of the line number to the right edge of the display pane. Within each column, the mouse has a different set of effects.


Figure 27: Using the mouse in the window

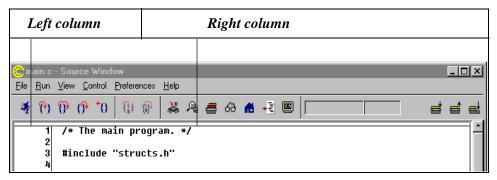

Right display column

- By holding the cursor over a global or local variable, the current value of that variable is displayed.
- By holding the cursor over a pointer to a structure or class, the type of structure or class is displayed and the address of the structure or class is displayed.
- By double clicking an expression, it is selected.
- By right clicking while an expression is selected, a pop-up menu appears. The selected expression appears in both menu selections. In **Figure 28**, the selected variable was the 'lis' expression.

Figure 28: Pop-up window for expressions



Add lis to Watch

Brings up the Watch Expressions window and adds a variable expression (the 'lis' variable, in this instance) to the list of expressions in the window.

Dump Memory at lis

Brings up the Memory window, which displays a memory dump at an expression, in this instance, the 'lis' expression.

Left display column

When the cursor is in the left column and it is over an executable line (marked on the far left by a minus sign), it changes into a circle. When the cursor is in this state:

- A left click sets a breakpoint at the current line. The breakpoint appears as a red square in place of the minus sign.
- A left click on any existing breakpoint or temporary breakpoint removes that breakpoint.
- A right click brings up another pop-up menu, as shown in **Figure 29**.

Figure 29: Pop-up menu for setting breakpoints

Continue to Here Set Breakpoint Set Temporary Breakpoint

Continue to here

This causes the program to run up to this location, ignoring any breakpoints. Like the temporary breakpoint, this menu selection is displayed as an orange square. This selection disables all other breakpoints. When a breakpoint has been disabled, it turns from red or orange to black.

WARNING: The debugger might be expected to execute to a given location, stopping at all encountered breakpoints. This menu item currently forces execution to this location without stopping at any encountered breakpoints.


Set breakpoint here

This sets a breakpoint on the current executable line. This has the same action as left clicking on the minus sign.

Set temporary breakpoint here

This sets a temporary breakpoint on the current executable line. A temporary breakpoint is displayed as an orange square. The temporary breakpoint is automatically removed when it is hit.

Figure 30: Pop-up menu for deleting breakpoints



Delete Breakpoint

This deletes the breakpoint on the current executable line. This has the same action as left clicking on the red square.

Continue to Here


See the description for Continue to Here for **Figure 29**.

CYGNUS GDBtk ■ 273

Below the horizontal scroll bar


There are four display and selection fields below the horizontal scroll bar: the status text box, the file drop-down combo box, the function drop-down combo box and the code display drop-down list box.

Figure 31: Status text box




In **Figure 31**, in the area immediately below the scroll bar, a text box displays the current status of the debugger.

Figure 32: Drop-down list box

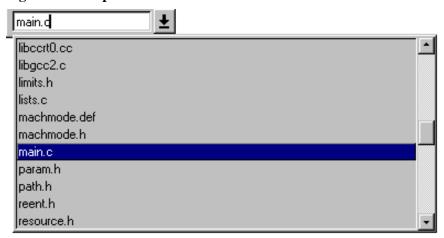


The drop-down list box, as shown in **Figure 32**, displays all the source and header files associated with the executable. Files may be selected by clicking in the list box, or by typing into the text field above the list.

Figure 33: Function drop-down combo box

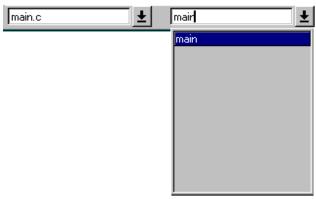

The drop-down list box displays all the functions in the currently selected source or header file. A function may be selected by clicking in the list box, or by typing into the text field above. In **Figure 33**, the 'main.c' file only contains the one 'main' function.

Figure 34: Code display drop-down list box



Select how the code in the Source Window is displayed, as shown with the selectable formats in **Figure 34**.

SOURCE

The source code is displayed in the Source Window.

ASSEMBLY

The assembly code is displayed in the Source Window.

MIXED

The source code and the assembly code are both displayed, interspersed in the Source Window.

SRC+ASM

The source code and the assembly code are both displayed in a double paned window. The source code is displayed in the Source Window and, in a pane below the source code pane, the assembly code is displayed.

CYGNUS GDBtk ■ 275


Dialog boxes for the Source Window

The following documentation describes the dialog boxes that are invoked from the Source Window, through the File and Preferences menu selections.

Load New Executable dialog box for the Source Window

The Load New Executable dialog box, as shown in **Figure 35**, is invoked by clicking the Open menu item in the File drop-down menu of the Source Window. This dialog box allows you to navigate through directories and select an executable file to be opened in the Source Window.


Figure 35: Load New Executable dialog box window

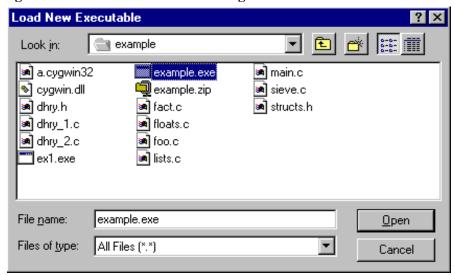

Page Setup dialog box for the Source Window

The Page Setup dialog box, as shown in **Figure 36**, is invoked by clicking the Page Setup menu item in the File drop-down menu of the Source Window. This standard dialog box allows you to make page layout selections before printing a source file.

Figure 36: Page Setup dialog box window

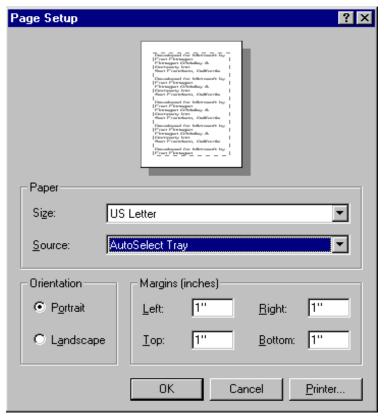

CYGNUS GDBtk 277

Print dialog box for the Source Window

The Print dialog box, as shown in **Figure 37**, is invoked by clicking the Print Source menu item in the File drop-down menu of the Source Window. This dialog box allows you to select a printer and make other print specific selections, before printing a source file.


Figure 37: Print dialog box window



Target selection from the Source Window

The Target Selection dialog box is invoked by clicking the Target Settings menu item in the File drop-down menu of the Source Window. This dialog box allows you to select the target you wish to run the executable on, and make other run-specific selections.

Figure 38: Target selection dialog box window

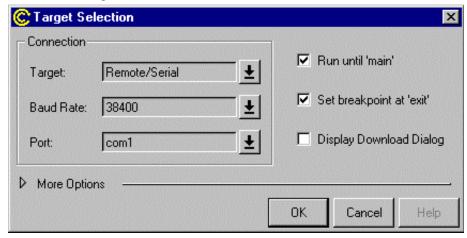

Connection

The Connection group contains the Target drop-down list box for target selection and two other fields for setting target-specific parameters.

Target

The contents of this list box depend upon the specific GDB debugger configuration you have received. For a native configuration, the list contains Exec (for native execution), Remote/Serial (serial connection to a remote target) and Remote/TCP (TCP connection to a remote target).

If GDB has been configured to include a specific hardware simulator, the target Exec will be replaced by target sim. The names of specific hardware targets may also be included in the list, with serial, TCP or both methods of connection, depending upon the hardware.

Baud Rate/Hostname

When a serial connection to a remote target is selected the baud rate may be set. When a TCP connection to a remote target is selected, this list box turns into a text edit field, renamed "Hostname," allowing for specifying of a host name.

Port

For both serial and TCP connections to remote targets, the port must be designated. For serial connection, port specifies the serial port on the host

machine. For TCP connections, port specifies the port number on the remote target.

Run until 'main'

Set a breakpoint at 'main' and run until that breakpoint is reached. This is checked by default.

Set breakpoint at 'exit'

Set a breakpoint at the call to the 'exit' routine. This is checked by default.


Display Download Dialog

In addition to using the status-bar, display more extensive download status information in a dialog box. This is particularly useful when doing a serial download to a remote target. This is unchecked by default.

More Options/Fewer Options

Toggles to display or hide the Run Options at the bottom of the dialog box, as contrasted and shown in **Figure 39**.

Figure 39: Target Selection window's Run Options features

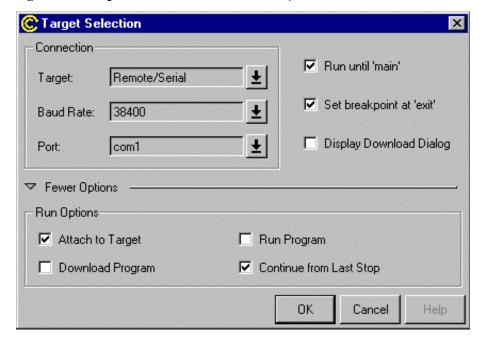

Run Options

The four check boxes in this group set-up the actions taken, when the Run button is clicked.

Attach to Target

Connects to a remote target.

Download Program

Downloads an executable to a remote target.

Continue from Last Stop

Continues execution from wherever the executable, on a remote target, left off.


Run Program

Begins execution of an executable.

Global Preferences dialog box for the Source window

The Global Preferences dialog box, as shown in **Figure 40**, is invoked by clicking the Global menu item in the Preferences drop-down menu of the Source Window. This dialog box allows you to select the font and the type size, for displaying text.

Figure 40: Global Preferences dialog box window

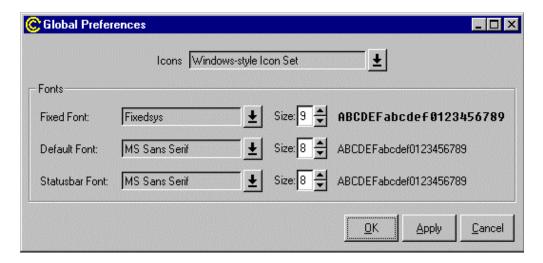

Icons

This drop-down list box allows for choosing between the default *Windows-style icon set* as shown in **Figure 41** and the *basic icon set* as shown in **Figure 42**.

Figure 41: Windows-style icon set



Fonts

The fields in this group allow for custom selection of font family and size.

Fixed Font

This drop-down list box allows you to select the font for the source code display panes

Default Font

This drop-down list box allows you to select the font for use in list boxes, buttons and other controls.


Status bar Font

This drop-down list box allows you to select the font for the statusbar.

Source Preferences dialog box for the Source window

The Source Preferences dialog box, as shown in **Figure 43**, is invoked by clicking the Source menu item in the Preferences drop-down menu of the Source Window.

Figure 43: Source Preferences dialog box

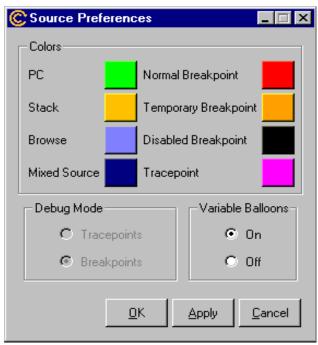

Colors

Single left-clicking any of the colored squares opens the Choose color dialog box. The Choose color dialog box allows the display colors to be modified by the user.

Debug Mode

Unless GDB has been configured to enable the setting of tracepoints, this radio button has no effect.

Variable Balloons

If Variable Balloons is on, a balloon appears displaying the value of a variable, when the mouse is placed over the variable in the Source Window. The default is on.

Stack window


The Stack window displays the current state of the call Stack, as shown by **Figure 44**, where *each line represents a stack frame*.

Figure 44: Stack window

```
#8 main () at main.c:30
#1 0x1000c3df in dll_crt0_1 (uptr=0x402004) at ../../devo/winsup/dcrt0.cc:592
#2 0x1000c3f3 in dll_crt0 (uptr=0x402004) at ../../devo/winsup/dcrt0.cc:604
#3 0x401431 in cygwin_crt0 () at ../../devo/winsup/libccrt0.cc:97
```

Clicking a frame selects that frame, which is indicated by the background of the frame turning yellow, as shown in **Figure 45**. The Source Window automatically updates to display the line, corresponding to the selected frame. If the frame points to an assembly instruction, the Source Window changes to display assembly code. The background of the corresponding line in the Source Window also changes to yellow.


Figure 45: Clicking a stack frame

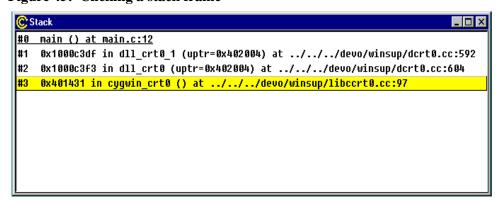

Registers window

The Registers window, as shown in **Figure 46**, dynamically displays the registers and their content. The documentation for "Register menu for the Register window" on page 286 discusses changing the properties of registers.


Figure 46: Registers window

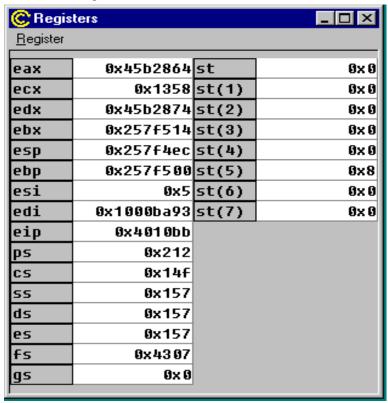

- A single left click on a register will select it.
- A double click on a register allows the content of the register to be edited. Hitting the Escape Key (Esc) will abort the editing.

Register menu for the Register window

Figure 47: Register menu



Edit

This menu item has the same effect as double clicking a register. The content of the selected register may be changed. This menu item is only active when a register has been selected.

Format

This menu item calls another pop-up menu, as shown in **Figure 48**, allowing the content of the selected register to be displayed in Hexadecimal, Decimal, Natural, Binary, Octal, and Raw formats.

Figure 48: Register format menu



Hexadecimal is the default display format.

Remove from Display

This menu item removes the selected register from the window. All registers are displayed if the window is closed and reopened. This menu item is only active when a register has been selected.


Display All Registers

This menu item displays all the registers. This menu item is only active when one or more registers have been removed from display.

Memory window

The Memory window, as shown in **Figure 49**, dynamically displays the state of memory.

Figure 49: Memory window

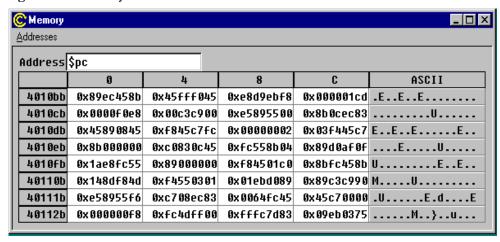


A memory location can be selected by double clicking the left mouse button with the cursor in the window. The contents of a selected memory location can be edited.

Figure 50 shows the Address menu.

Address menu for the Memory window

Figure 50: Address menu for the Memory window



Auto Update

The contents of the Memory window are automatically updated whenever the target's state changes. This is the default setting.

Update Now

Forces the immediate update of the Memory window's view of the target's memory.


Preferences

This menu item brings up the Memory Preferences dialog box.

Memory Preferences dialog box for the Memory window

The Memory Preferences dialog box, as shown in **Figure 51**, makes it possible to set memory options.

Figure 51: Memory Preferences dialog box for the Memory window

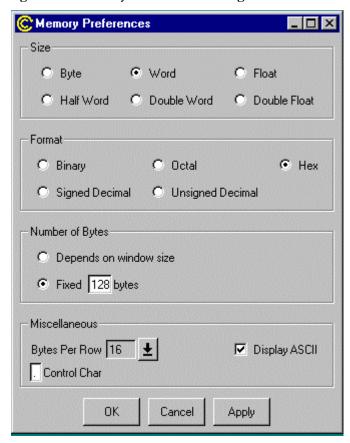

Size

Selection of the size of the individual cells displayed.

Format

Selection of the format of the memory display.

Number of Bytes

Sets the number of bytes displayed in the Memory window.

Bytes Per Row

Sets the number of bytes displayed per row.

Display ASCII

Choose to display a string representation of the memory.

Control Char

Choose the character used to display non-ASCII characters. The default character is the period.

Watch Expressions window

The Watch Expressions window, as shown in **Figure 52**, displays the name and current value of user-specified expressions.

Figure 52: Watch Expressions window



- Single clicking on an expression selects that expression.
- Right clicking in the display pane, while an expression is selected, calls an expression-specific Watch menu, as shown and described with

Figure 53: "Watch menu in the Watch Expressions window" on page 291.

Watch Expressions
Watch

Name
Ualue
avar
Format
Remove
Edit

Figure 53: Watch menu in the Watch Expressions window

Figure 54: Watch menu for the Watch Expressions window

Add Watch



Edit

Allows the value in the expression to be edited.

Hitting the Escape key (Esc) will abort the editing.

Format

This menu item brings up another pop-up menu, as shown in **Figure 55**, allowing the value of the selected expression to be displayed in Hexadecimal, Decimal, Binary, and Octal formats.

Figure 55: Value formats for the Watch Expressions window



By default, pointers are displayed in hexadecimal and all other expressions are displayed as decimal.


Remove

Removes the selected expression from the watch list.

Add Watch button for the Watch Expressions window

An expression can be typed into the text edit field at the bottom of the dialog box, as shown in the screen on the left in **Figure 56**. By pressing the Add Watch button or hitting the Enter key, the expression is added to the list, as shown in the resulting addition to the window on the right in **Figure 56**. Invalid expressions are ignored.

Figure 56: Using the Add Watch button for the Watch Expressions window

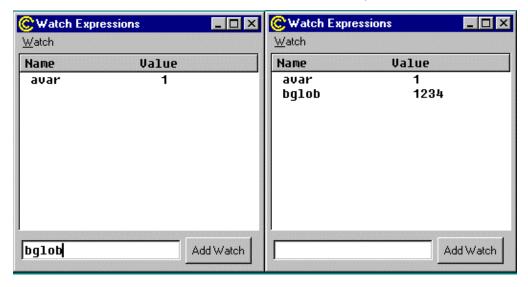

Watching registers with the Watch Expressions window

GDB allows registers to be added to the Watch Expressions window, by typing register "convenience variables" into the text edit field. Every register has a corresponding convenience variable. The register convenience variables consist of a dollar sign followed by the register name. The convenience variable for the program counter is '\$pc', for example. The convenience variable for the frame pointer is '\$pc'.


Casting pointers in the Watch Expressions window

Pointer values may be cast to other types and watched, represented as the type to which the pointer was cast. For example, by typing '(struct _foo *) bar' in the text edit field, the 'bar' pointer is cast as a 'struct _foo' pointer.

Local Variables window


The Local Variables window displays the current value of all local variables.

Figure 57: Local Variables window

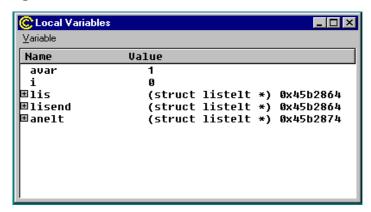

- Single clicking the mouse with the cursor over a variable selects the variable.
- Double clicking the mouse with the cursor in the Local Variables window puts the variable into edit mode.
- Single clicking the mouse with the cursor on the plus sign to the left of a structure variable displays the elements of that structure. Compare the variable structure in the window in **Figure 57** with the results in **Figure 58**.
- Single clicking the mouse with the cursor on the minus sign to the left of an open structure closes the display of the structure elements.

Figure 58: Displaying the elements of a variable structure

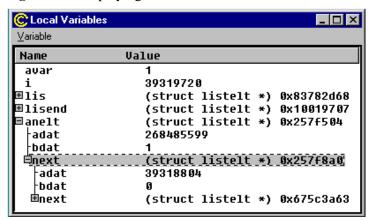

Variable menu for the Local Variables window

Figure 59: Variable menu for the Local Variables window



Edit

Allows the value of a selected variable to be edited.

Hitting the Escape key (Esc) will abort the editing.

Format

This menu item brings up another pop-up menu, as shown in **Figure 60**, allowing the value of the selected variable to be displayed in the Hexadecimal, Decimal, Binary and Octal *formats*.

Figure 60: Variable format menu




By default, pointers are displayed in hexadecimal and all other expressions are displayed as decimal.

Breakpoints window

The Breakpoints window, as shown in **Figure 61**, displays all breakpoints that are currently set.

Figure 61: Breakpoints window

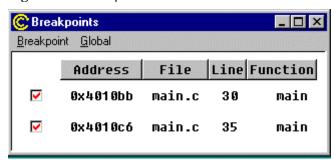

- Single clicking with the mouse with the cursor over a check-box for the information displayed for a breakpoint selects that breakpoint.
- Single clicking with the mouse with the cursor over a checked check box of a breakpoint disables the breakpoint. The check disappears and the red square in the Source Window turns black.
- Single clicking with the mouse with the cursor over an empty check box of a disabled breakpoint re-enables the breakpoint. The check reappears and the black square in the Source Window turns red.

Breakpoint menu for the Breakpoints window

Figure 62: Breakpoint menu for the Breakpoints window



Normal Temporary


This pair of menu items toggles between the normal and temporary setting of the selected breakpoint. A normal breakpoint remains valid no matter how many times it is hit. A temporary breakpoint is removed automatically the first time it is

hit. A single check mark for either setting shows the state of the selected breakpoint.

When a breakpoint is set to temporary the red check mark in the check box and the red square in the Source Window turn orange, as shown by comparing

Figure 61: "Breakpoints window" on page 295 with Figure 63.

Figure 63: Results of setting breakpoints

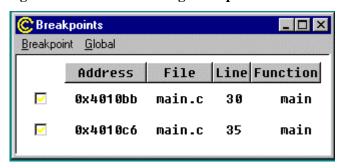

Enabled

Disabled

This pair of menu items toggles the enabled or disabled state of the selected breakpoint. The single check mark between them shows the state of the selected breakpoint.

Remove

This menu item removes the selected breakpoint.

Global menu for the Breakpoints window

Figure 64: Global menu for the Breakpoints window



Disable All

Disables all breakpoints.

Enable All

Enables all breakpoints.


Remove All

Removes all breakpoints.

Console window

The Console window contains the command prompt for GDB, the GNUPro debugger. This window, as shown in **Figure 65**, allows access to the debugger through the command-line interface. (gdb) is the prompt for the debugger.


Figure 65: Console window

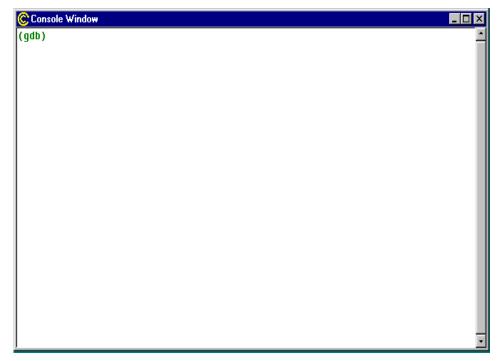

Help window

The Help window, as shown in **Figure 66**, is invoked by clicking the Help Topics menu selection in the Help drop-down menu of the Source Window. The Help windowoffers HTML based navigable help by topic.

Figure 66: Help window

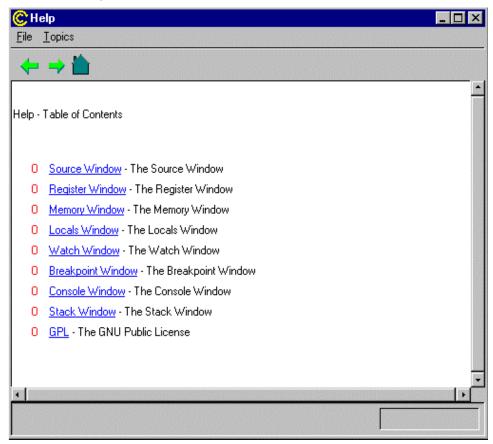

See also the discussions for Figure 67: "File menu for the Help window" on page 299 and Figure 68: "Topics menu for the Help window" on page 299.

File menu for the Help window

Figure 67: File menu for the Help window



Back

Moves back one HTML help page, relative to previous forward page movements.

Forward

Moves forward one HTML help page, relative to previous back page movement.

Home

Returns to the HTML help "Table of Contents" home page.


Close

Closes the Help Window.

Topics menu for the Help window

Selecting a menu item invokes the Help topic's contents, as shown in Figure 68.

Figure 68: Topics menu for the Help window

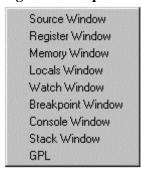

Each menu item represents a help topic. When a menu item is selected, the content of the Help window changes to reflect the listed topic.

2

Procedures

The following documentation contains an example debugging session with step by step procedures for using GDBTk.

- "Initializing a target executable file" on page 302
- "Selecting a source file" on page 304
- "Setting breakpoints and viewing local variables" on page 306

Initializing a target executable file

Initializing a target executable file with GDBTk means opening a specific executable file.

There are two ways to open an executable file in GDBTk.

The first means using the Open menu item in the File drop-down menu from the Source Window.

The second means using the following initialization procedure, entering commands at the '(gdb)' prompt in the Console window.


- 1. Open the Console window; either from the View menu, or with the Console button (see Figure 22: "Console button" on page 270).
- 2. With the Console window active, determine if the target file is in the same directory as GDBTk. If not, change to the target directory, using the 'cd' command.

In our example procedures, the syntax uses the forward slash as the path delimiter on all platforms. Windows, though, requires using two forward slashes after the drive designation.

NOTE: If the source files are not in the same directory as the executable file, use the GDB 'dir' command to add a path to them, using the same syntax as in Step 2 of initializing a target file. This was not needed in our example.

3. Use the command 'file example', to specify the target executable file.

See Figure 69: "Console window with initial commands" on page 303 for the results of these procedures.





Selecting a source file

To select a source file and specify a function within that file, use the following procedure.

1. Select the 'foo.c' source file in the file drop-down combo box, at the bottom of the Source Window.


Figure 70 represents the lower left corner of the Source Window, showing the Source window *file menu drop-down combo box* on the left and the *function drop-down combo box* on the right of the window. See also "Below the horizontal scroll bar" on page 274.


Figure 70: Source file and function selection



2. Select the function 'foo' in the function drop-down combo box, at the bottom of the Source Window.

Now the 'foo.c' source file is displayed in the Source Window with a colored bar, indicating the current position, as shown in **Figure 71**, on the first executable line (line 6) in the 'foo' function. Once again, the colored bar is violet, indicating graphically that the program is not running.



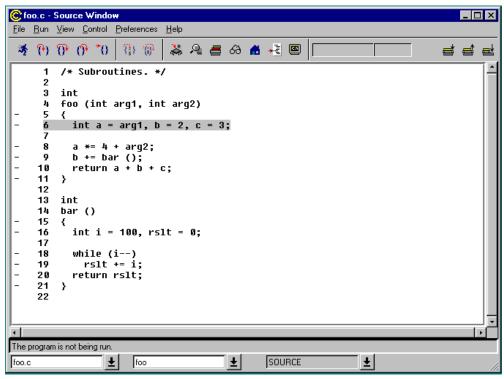

Setting breakpoints and viewing local variables

A breakpoint can be set at any executable line. Executable lines are marked by a minus sign in the left margin of the Source Window. When the cursor is in the left column and it is over an executable line, it changes into a circle. When the cursor is in this state, a breakpoint can be set.

The following exercise steps you through setting four breakpoints in a function, as well as running the program and viewing the changing values in the local variables.

- 1. With the Source Window active, having opened the 'foo.c' source file, place the cursor over the minus sign on line 6.
- **2.** When the minus sign changes into a circle, click the left mouse button; this sets the breakpoint, signified as a red square.

NOTE: A second single click on a breakpoint will remove the breakpoint.

- 3. Repeat the process to set breakpoints at lines 8, 9 and 10. See Figure 72: "Results of setting breakpoints at lines 6, 7, 8, and 9" on page 307.
- 4. Open the Breakpoints window, by clicking the Breakpoints button on the tool bar (see Figure 21: "Breakpoints button" on page 270 and Figure 73: "Breakpoints window" on page 307).
- 5. Click the check box for line 6. The red checkmark disappears and the red square in the Source Window changes to black. This color change indicates that the breakpoint has been disabled. Re-enable the breakpoint at line 6 by clicking the check box.
- 6. Click the Run button on the tool bar to start the executable (see "Run button" on page 267). The program runs until it hits the first breakpoint on line 6. The color bar on line 6 is green, indicating that the program is running (see Figure 72: "Results of setting breakpoints at lines 6, 7, 8, and 9" on page 307 and Figure 73: "Breakpoints window" on page 307).


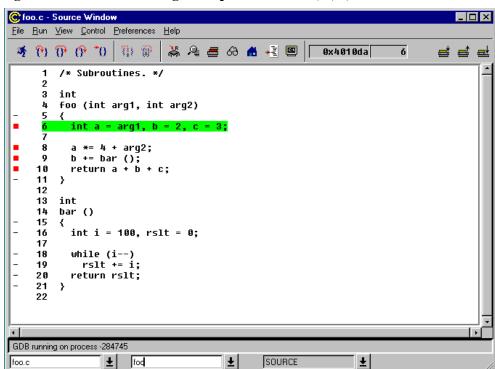



Figure 72: Results of setting breakpoints at lines 6, 7, 8, and 9


Figure 73: Breakpoints window

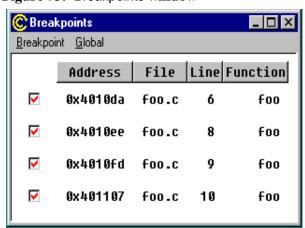

- 7. Open the Local Variables window, by clicking the Local Variables button in the tool bar (see Figure 20: "Local Variables button" on page 269 and Figure 57: "Local Variables window" on page 293). The window displays the initial values of the variables.
- 8. Click the Continue button in the tool bar (see Figure 13: "Continue button" on page 268), to move to the next breakpoint. The variables that have changed value turn blue in the Local Variables window (see Figure 74).

Figure 74: Local Variables window after setting breakpoints

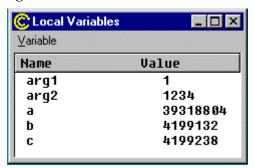

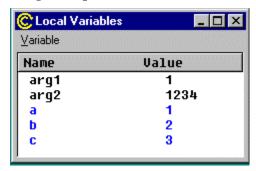

9. Click the Continue button two more times, to step through the next two breakpoints and notice the changing values of the local variables.

Index

Symbols

!, as not operator 196

!, as operator for integral types 128

#, in GDB command files 219

#, in Modula-2 133

#define commands 88

\$ 102, 103

\$, as variable for registers 105

\$, variable 103

\$___, variable 103

\$_exitcode, variable 104

\$cdir 83

\$cwd 36

&&, as logical AND operator 127

&, address operator 128

&, bitwise AND operator 127

(), as operators 128

(), Modula-2 operator for PROCEDURE

objects 134

(gdb) prompt string 194

(gdb-break) 226

*, /, %, as operators 128

*, as dereferencing operator 128

*, current thread 44

*, Modula-2 operator 133

scratch buffer in Emacs 224

++, --, as increment and decrement operators 128

+, -, as operators 127

+, -, Modula-2 operators 133

, , Modula-2 operator 133

,, sequencing operator 126

, =, as operators 127

, as array indexing operators 128

-, as operator, for integral and floating-point

types 128

-, in options 17

--, in options 17

, Modula-2 array indexing operator 134

-, Modula-2 operator 134

, Modula-2 operators 133

, print a newline 220

., Modula-2 scope operator 138

., ->, as operators 128 .C 120 .c 120 .c++ 120 .c186 121 .c286 121 .cc 120 .ch 121	{type}, operator 88 , bitwise OR operator 127 , as logical OR operator 127 ^, bitwise exclusive-OR operator 127 ^, Modula-2 dereferencing operator 134 ~, as bitwise complement operator 128 ~/.inputrc 238
.cp 120 .cxx 120 .esgdbinit 219 .gdb_history 196 .gdbinit 219 .mod 120, 137 .o file 165 .os68gdbinit 219 .s 121 .s 121 .syms 18 .vxgdbinit 219 /, Modula-2 operator 133 /proc 42 :, word designator 248 ::, ., GDB and Modula-2 scope operators 134 ::, as C++ scope resolution operator 128 ::, GDB scope operator 138 ::, operator 88 ::, Modula-2 operator 133 =, , #, Modula-2 operators 133 =, as operator 127 =, Modula-2 operators 133 =, as operator 127 =, Modula-2 operators 133 ==, != , as equality and inequality operator 127	a, Modula-2 variable 134 a.out, with stabs extensions 129 ABS, Modula-2 135 active targets, classes 164 addr 93 address ranges 42 address, locating 92 add-shared-symbol-file 157 add-symbol-file 156 AMD EB29K boards 166 AMD UDI protocol 166 AND, &, Modula-2 operators 133 argument, ignore-count 64 arithmetical operators 124 array constants 129 Array Tech LSI33K RAID controller board 167 array, arificial 91 arrays 97 artificial array 91 assembler instruction 266 Assembler source file 121 attach 40 attach command 164 automatic display list 95 awatch 54
>, as operators 127 ?: , ternary operator 127 @, a binary operator 88 @, artificial array operator 127 @, Modula-2 artificial array operator 133	B -b 19 backslash-escape sequences 221
raise_exception 55	BACKSPACE key 25 backtrace 73, 271

-batch 19	-cd 19
batch mode 19	cd 38
baud option 177	Character types 132
BFD 165	checksum 175
57	child process 31,46
Boolean types 133	child process, killing 41
bottom of stack frame button 271	CHILL source file 121
break 69	CHR, Modula-2 135
break command 50	clear command 56
breakif 51	-command 17
breakpoint 49, 53, 172, 266, 273, 296	command history file 196
deleting 56	command syntax 24
menus 63	commands 61
breakpoint condition 59	comments (lines starting with #) 219
breakpoint menus 131	compilation directory 83
breakpoint with condition, cond 51	compile- and run-time checks 123
breakpoint, enabled or disabled 49	complete 28
breakpoints 43, 295	condition 59
printing a table 52	confirmation requests 200
enable 57	connect 183
Breakpoints button 270	Console button 270
bt 73	continue 64
bug reports 227	Continue button 268
	continuing 64
C	convenience variables 103
	-core 17
-c 17	core dump files 166
c 64	core-file 156
C and C++ 126	core-file commands 164
C source file 120	cpl 198
C++ expressions 129	CPU simulator 166
C++ source file 120	CPU time 42
c, Modula-2 variable 134	CPU32 (M68K) boards 167
call stack 71	CPU32BUG monitor 167
call_scratch_address 150	current thread 43
called functions 266	current uncau 15
calling overloaded functions 130	D
CAP, Modula-2 135	D
catch 55, 131	-d 17
cc -gl on MIPS machines 65	d, for deleting breakpoints, watchpoints 56
C-d 15	data type 92

debugger GUI (GDBTk) 261 debugging a29k family 180 in a running process 40	down, frame 74 down-silently, frame 75 drop-down list box 275 drop-down lists 274 dynamic arrays 138
remote serial protocol 170 specifying a target 163 stub 171 symbol file errors 159 VxWorks targets 184 with C++ 126 with GNU C++ compiler, g++ 126 debugging stub 176 debugging, when compiling 32	echo 61,220 Emacs buffer 223 shell mode 224 Emacs interface 223 enable and disable commands 57 enable display 96
declared type 101 define 216	end 61 end-of-file character, C-d 21 Enea Data Systems real-time OS 219
delete 50 delete bnums 57 delete display 95 derived type 101 detach 40 detach command 183 dialog boxes 276–??, 276	environment 36 EPROM/ROM code debugging 51 Ericsson Telecom AB M68000 emulator 219 ESC, and the '?' key 25 EST-300 ICE monitor 167 event designator 248 examining memory 93
directories, specifying 83 -directory 17 directory 83 disable commands 57 disable display, with expressions 95 disassemble 84	examining the stack 74 exception handling 55 exception handling tables 173 exceptionHandler 174 EXCL, Modula-2 135 -exec 17
disassemblies 132 display 95 display panes 271 display/ 95 DIV, MOD, Modula-2 operator 134 document 216	exec-file 154 exec-file commands 164 executable 165 executable files 166 expression 272 expression, regex 52 expressions 88

F	command completion with TAB 25
-f 19	command file 219
f 74,76	command history facility 196
fatal signals 67	command line editing interface 234
fg 64	command names, truncated 24
file 154, 186	commands 175
file-specifying commands 157	commands for a selected frame 71
finish 53, 65	controlled output 220
Finish button 268	convenience variables 103
finish command 149	converting file names to absolute file names 157
FLOAT, Modula-2 135	core dump 16
floating-point registers 105	core dump files 41
Floating-point types 132	CPU simulator 191
flush_i_cache 174	debugging Modula-2 138
-fomit-frame-pointer 72	decimal numbers 199
fork 46	delimiters 141
forward-search 82	EBMON protocol 180
frame 74, 76, 270	environment 33
Alpha architecture 74	executable files, core files 17
MIPS architecture 74	exiting 21
SPARC architecture 74	expression handling 129
frame commands 77	formatting documentation 251
frame pointer register 72	gdbserver 177
frames 72, 266	GNU Emacs 223
Fujitsu SPARClite boards 167	GUI 297
-fullname 19	hexadecimal numbers 199
functions 266	Hitachi SH, H8/300, or H8/500 188
Tunctions 200	Hitachi SH, H8/300, or H8/500 board 156
•	input and output 39
G	Intel 960 156
-g option 32	Intel 960 using Nindy 179
GDB	keystroke sequences of Emacs commands 224
altering execution 145	language-specific information 119
AMD's 180	limit complaints 200
assignment 146	list or search commands 224
automatic display 95	MIPS remote debugging protocol 189
Bash shell 248	Motorola 88k 157
batch mode 19	octal numbers 199
C, C++ constants 129	operator warning 134
changing to a different file 154	operators 88
checksum 175	operators of

	22.20
output formats 92	working directory 33, 38
parentheses 25	your program's symbol table 141
patch the binary 151	Z8000 family 191
path searches 36	GDB as a subprocess 19
print source file and line number 97	GDB commands, command-line options 16
quotes 26	gdb -help 16
readline interface 195	GDB remote serial protocol 177
read-only 151	GDB, as a filter 19
remote serial protocol 170	GDB, invoking 16
reporting bugs 227	gdb, starting 15
scope operator, differences with Modula-2 138	gdb/remote.c 175
searches 36	gdbserve.nlm 178
sequences for command files 215	gdbserver 176
setting language automatically 121	GDBTk
shared libraries 157	assembler instruction 266
IBM RS/6000 157	assembly code, displaying 275
Irix 5 157	Bottom of stack frame button 271
SunOS 157	breakpoint 266, 273
SVr4 157	Breakpoints button 270
specify a file 154	Breakpoints window 295
ST2000 environment 183	called functions 266
standard input and output 33	Console button 270
starting 17	Console window 297
starting with run 33	Continue button 268
start-up commands 154	Control menu 266
stop and continue a process 47	dialog boxes 276
stopping a running program 172	display panes 271
symbol file errors 159	Down stack frame button 270
terminal modes 39	expressions 272
type and range checking 123	file drop-down combo box 274
user-defined commands 215	File drop-down menu 276, 277
value history 102	File menu 264, 276
variables 130	File menu for the Help window 299
variables, assignment expressions 146	Finish button 268
VxWorks 219	frame 266, 270
VxWorks targets 184	frame button 271
warnings and messages 200	function drop-down combo box 274
with C 126	<u> </u>
with C++ 126	•
with Modula-2 126	
with TCPconnection 177	
with C 126 with C++ 126 with Modula-2 126	Help menu 267 Help topics 299 Help window 298 line address 270

11 1 11 1 270	
line number display 270	-gg, for debugging 32
line number display frame 270	global or local variable 272
lists 274	-gstabs 130
Local Variables button 269	GUI 261
Memory button 269	
menus 264	Н
mouse, using 272	h 27
navigating 276	handle command 67
Next assembler instruction button 268	handle_exception 171
Next button 268	hbreak 51
Open menu 276	help 27
Page Setup menu 277	help target 165
Preferences menu 266, 276	help user-defined 217
Print dialog box 278	HIGH, Modula-2 135
printing 278	history expansion in csh 248
program counter 270	history numbers 102
Registers button 269	history references 103
Run button 267	Hitachi SH, h8/300, or h8/500 boards 166
Run menu 265	hooks, user-defined 218
scroll bar 274	nooks, user defined 210
source code, displaying 275	1
Source window 262	· ·
stack backtrace 271	i, Modula-2 variable 134
Stack button 269	i386-stub.c 171
stack frame 271	id 138
status text box 274	identifier 138
	identifier 138 IDP board 167
status text box 274	identifier 138 IDP board 167 if 216
status text box 274 Step assembler instruction 268 Step assembler instruction button 268 Step button 267	identifier 138 IDP board 167 if 216 IN, Modula-2 operator 133
status text box 274 Step assembler instruction 268 Step assembler instruction button 268 Step button 267 stepping 266	identifier 138 IDP board 167 if 216 IN, Modula-2 operator 133 INC, Modula-2 135
status text box 274 Step assembler instruction 268 Step assembler instruction button 268 Step button 267 stepping 266 Stop button 267	identifier 138 IDP board 167 if 216 IN, Modula-2 operator 133 INC, Modula-2 135 INCL, Modula-2 135
status text box 274 Step assembler instruction 268 Step assembler instruction button 268 Step button 267 stepping 266 Stop button 267 subroutines 266	identifier 138 IDP board 167 if 216 IN, Modula-2 operator 133 INC, Modula-2 135 INCL, Modula-2 135 info 28
status text box 274 Step assembler instruction 268 Step assembler instruction button 268 Step button 267 stepping 266 Stop button 267	identifier 138 IDP board 167 if 216 IN, Modula-2 operator 133 INC, Modula-2 135 INCL, Modula-2 135 info 28 info address 141
status text box 274 Step assembler instruction 268 Step assembler instruction button 268 Step button 267 stepping 266 Stop button 267 subroutines 266	identifier 138 IDP board 167 if 216 IN, Modula-2 operator 133 INC, Modula-2 135 INCL, Modula-2 135 info 28 info address 141 info all-registers 105
status text box 274 Step assembler instruction 268 Step assembler instruction button 268 Step button 267 stepping 266 Stop button 267 subroutines 266 toolbar buttons 267 Up stack frame button 271 Variable format menu 294	identifier 138 IDP board 167 if 216 IN, Modula-2 operator 133 INC, Modula-2 135 INCL, Modula-2 135 info 28 info address 141 info all-registers 105 info args 76
status text box 274 Step assembler instruction 268 Step assembler instruction button 268 Step button 267 stepping 266 Stop button 267 subroutines 266 toolbar buttons 267 Up stack frame button 271 Variable format menu 294 variables 272	identifier 138 IDP board 167 if 216 IN, Modula-2 operator 133 INC, Modula-2 135 INCL, Modula-2 135 info 28 info address 141 info all-registers 105 info args 76 info break 52
status text box 274 Step assembler instruction 268 Step assembler instruction button 268 Step button 267 stepping 266 Stop button 267 subroutines 266 toolbar buttons 267 Up stack frame button 271 Variable format menu 294 variables 272 View menu 265	identifier 138 IDP board 167 if 216 IN, Modula-2 operator 133 INC, Modula-2 135 INCL, Modula-2 135 info 28 info address 141 info all-registers 105 info args 76 info break 52 info breakpoints 25, 52
status text box 274 Step assembler instruction 268 Step assembler instruction button 268 Step button 267 stepping 266 Stop button 267 subroutines 266 toolbar buttons 267 Up stack frame button 271 Variable format menu 294 variables 272 View menu 265 Watch Expressions button 269	identifier 138 IDP board 167 if 216 IN, Modula-2 operator 133 INC, Modula-2 135 INCL, Modula-2 135 info 28 info address 141 info all-registers 105 info args 76 info break 52 info breakpoints 25, 52 info catch 55, 76, 131
status text box 274 Step assembler instruction 268 Step assembler instruction button 268 Step button 267 stepping 266 Stop button 267 subroutines 266 toolbar buttons 267 Up stack frame button 271 Variable format menu 294 variables 272 View menu 265 Watch Expressions button 269 watchpoint 266	identifier 138 IDP board 167 if 216 IN, Modula-2 operator 133 INC, Modula-2 135 INCL, Modula-2 135 info 28 info address 141 info all-registers 105 info args 76 info break 52 info breakpoints 25, 52 info catch 55, 76, 131 info display 96
status text box 274 Step assembler instruction 268 Step assembler instruction button 268 Step button 267 stepping 266 Stop button 267 subroutines 266 toolbar buttons 267 Up stack frame button 271 Variable format menu 294 variables 272 View menu 265 Watch Expressions button 269	identifier 138 IDP board 167 if 216 IN, Modula-2 operator 133 INC, Modula-2 135 INCL, Modula-2 135 info 28 info address 141 info all-registers 105 info args 76 info break 52 info breakpoints 25, 52 info catch 55, 76, 131

'	
info float, on ARM and x86 machines 107 info frame 76, 122	L
info functions 143	language, displaying source 122
info line 84	line address 270
info locals 76	line number 270
	line number display frame 270
info proc 42	linespecs 80
info proc all 42	list 80
info proc id 42	list - 81
info proc mappings 42	list + 81
info proc status 42	list box 274
info proc times 42	list commands 24
info program 48	list function 80
info registers 105	load 156
info share 157	Load New Executable dialog box 276
info sharedlibrary 158	load using Return 156
info signals 67	load, Nindy to Intel 960 156
info source 122, 142	load, VxWorks 156
info sources 142	local variable 272
info terminal 39	local variables 89
info threads 43	Local Variables button 269
info variables 143	longjmp 53
info watchpoints 52, 54	longjmp resume 53
init files 219	lpp 198
initial frame 72	
initialization files, '.gdbinit' 19	М
int getDebugChar() 172	-m 17
Integral types 132	m, Modula-2 variable 134
Intel 960 boards 166	m68k-stub.c 171
internal breakpoints 53	machine instructions 84
interrupt, C-c 21	machine registers 105
_	main function 275
J	main.c file 275
jobs -1 shell command 40	
jump command 147	maint info breakpoints 53 maint print msymbols 143
	maint print hisymbols 143
K	maint print psymbols 143
	make 22
keybindings 238	make 22 make refcard.dvi 251
kill 41, 148	-mapped 17
killing 236	**
	MAX, Modula-2 135

member function calls 130 Memory button 269 memory, examining 93 memory, examining with x command 93 memory-mapped files 17 memset 173, 174 META key 25 MIN, Modula-2 135 MIPS function stack 77 mmap 17 mode command 188 Modula-2 119, 132 built-in procedures and functions 134 C escape sequences 137 changes 137 constants 136 range and type checking 137 variables 137	O-O option 32 object_ptr 103 ODD, Modula-2 135 OKI HPPA board 167 once bnums 57 op=, as operator 127 OP50N monitor 167 operators 88 operators for C and C++ 126 OR, Modula-2 operator 133 ORD, Modula-2 135 outermost frame 72 output 61 output format 92 output, controlled 220 overloaded symbol 132 overloading 63
Modula-2 operators, definitions of types 132 Modula-2, pointer constants 137 module 138 multiple processes 43 multi-thread programs 43	Page Setup dialog box 277 parent process 46 pass 68 path 36
n, Modula-2 variable 134 newline 220 next 65 Next assembler instruction 268 Next assembler instruction button 268 Next button 268 nopass 68 noprint 68 nostop 67 NOT, Modula-2 boolean type operator 134 numbers 199 -nx 19	pointer constants 129 Pointer types 132 print 67 print commands 87 print settings 97 print structures 99 printf 61, 220 printing with Ghostscript 251 printing with PostScript 251 procedure 138 PROCEDURE objects 134 process 31 process group ID 42 process, stopped 42 process-id 40

Program counter 270 program counter 74 prompt 194 ps utility 40 ptype 131, 142 putDebugChar 174 pwd 38	S -s 17 Scalar types 132 scope 130, 138 screen size 198 scroll bar 274 -se 17
Q -q 19 -quiet 19 quit 21	search 82 searching through a source file 82 section 157 session ID 42 set 28 set args 35
R -r 18 r 33 r, Modula-2 variable 134 range checking 124 rbreak 52, 131 readline 235 readline init file 238 -readnow 18 register relativized value 105 register stack 106 Registers button 269 remote debugging 169 remotedebug variable 190 reporting a bug 227 return command 149 Return key 23 reverse-search 82 ROM 68K monitor 167 RS/6000 xcoff, or elf with stabs extensions 130 run 33 Run button 267	set args 35 set check range auto 125 set check range off 125 set check range on 125 set check range warn 125 set check type auto 124 set check type off 124 set check type on 124 set check type warn 124 set complaints 200 set confirm 200 set demangle-style 100 set editing 195 set gnutarget 165 set height 198 set heuristic-fence-post, on MIPS processors 77 set history 196 set history filename 196 set input-radix 199 set language 121 set language auto 121 set language command 120 set language local 121 set listsize 80 set machine h8300 189
run gdb 16 running process 40 rwatch 54	set machine h8300h 189 set memory 189 set mipsfpu 190

07	. 11 171
set print address 97	set_debug_traps 171
set print address off 97	share 158
set print address on 97	shared libraries 157
set print array 98	sharedlibrary 158
set print array off 98	shell 22
set print array on 98	shell commands 22
set print asm-demangle 100, 132	SHELL environment variable 37
set print asm-demangle on 100	show 28
set print demangle 100, 132	show args 35
set print demangle on 100	show complaints 200
set print elements, printing arrays 98	show convenience 103
set print null-stop 99	show copying 29
set print object 101, 132	show directories 83
set print object off 101	show editing 195
set print object on 101	show gnutarget 165
set print pretty off 99	show height 198
set print pretty on 99	show history 197
set print sevenbit-strings off 99	show language 122
set print sevenbit-strings on 99	show listsize 80
set print symbol-filename off 98	show memory 189
set print symbol-filename on 97	show mipsfpu 190
set print union 131	show print address 97
set print union off 100	show print array 98
set print union on 99	show print asm-demangle 100, 132
set print vtbl 101, 132	show print demangle 100, 132
set print vtbl off 101	show print max-symbolic-offset 98
set print vtbl on 101	show print object 101, 132
set processor 190	show print pretty 99
set prompt command 194	show print sevenbit-strings 99
set remotedebug 190	show print symbol-filename 98
set retransmit-timeout 191	show print union 100, 131
set symbol-reloading off 143	show print vtbl 101, 132
set symbol-reloading on 143	show processor 190
set timeout 191	show prompt 194
Set types 132	show range 125
set variable command 146	show remotedebug 190
set verbose 200	show retransmit-timeout 191
set width 198	show symbol-reloading 143
set write off 151	show timeout 191
set write on 151	show type 124
	O.L.

show user 217 show values 102 show verbose 200 show version 28 show warranty 29 show width 198 show write 151 SIGALRM 67 SIGINT 67 signal 0 68 signal command 148 signal, an asynchronous event 67 signals fatal 67 SIGISEGV 67 SIGTRAP signal 46 -silent 61 silent 61 silent 61 source filename 219 source files 79 source files 79 source files 79 source path 83 SPARClet connecting to 187 loading from a host to debug 187 running and debugging 187 running and debugging 187 running on 186 SPARClet sonecting to 17 stack frame 71, 271 stack frame, selecting 74 step button 267 stepi 66 strong file for string constants 129 structures 97 stubs SPARC, M68K, Intel 171 style 100 subroutines 266 symbol definitions 157 symbol file errors 159 symbol file errors 159 symbol file errors 159 symbol file 154, 155 -symbols 17 symbols 97 systag, thread identifier 43 T t, Modula-2 variable 135 TAB key 23 Tandem's STD-BUG protocol 166 target amd-eb 166 target amd-eb 166 target array 167 target exe 166 target mins 189, 190 target nindy 166 target remote command 174 target remote command 174 target remote command 174 target remote command 174 target sparclite 167 target siz 100 Stop button 267 step 166		
show verbose 200 show version 28 show version 28 show warranty 29 show width 198 show with 198 show with 151 SIGALRM 67 SIGINT 67 signal 0 68 signal command 148 signal, an asynchronous event 67 signals fatal 67 SIGSEGV 67 SIGTRAP signal 46 -silent 16 silent 61 silent 61 single-stepping 69 SIZE, Modula-2 136 source filename 219 source filename 219 source filename 219 source path 83 SPARClet connecting to 187 loading from a host to debug 187 running and debugging 186 target armay 167 target core 166 target armay 167 target exec 166 target exec 166 target miss 189, 190 target sim 191 target sparclite 167 target sim 191 target sparclite 167 target sizooo 166	show user 217	stop 67
show version 28 show warranty 29 show width 198 show with 151 SIGALRM 67 SIGINT 67 signal 0 68 signal command 148 signal, an asynchronous event 67 signals fatal 67 SIGSEGV 67 SIGTRAP signal 46 silent 61 single-stepping 69 SIZE, Modula-2 136 source filename 219 source filename 219 source files 79 source files 81 source path 83 SPARClet connecting to 187 tandem's STD-BUG protocol 166 target array 167 target core 166 target array 167 target exec 166 target mindy 166 target remote command 174 target sim 191 target sparclite 167 target sim 191 target symclic 167 target siz2000 166	show values 102	Stop button 267
show warranty 29 show width 198 show with 198 show with 191 show write 151 SIGALRM 67 SIGALRM 67 SIGINT 67 signal 0 68 signal command 148 signal, an asynchronous event 67 signals fatal 67 SIGSEGV 67 SIGTRAP signal 46silent 16 silent 61 single-stepping 69 SIZE, Modula-2 136 source filename 219 source files 79 source files 79 source line 81 source path 83 SPARCLet connecting to 187 loading from a host to debug 187 running and debugging 187 running on 186 SPARClite DSU 51 sparc-stub.c 171 st2000 183 Stack button 269 stack frame 71, 271 stack frame, selecting 74 step 24, 64 Step button 267 SIGTRAP signal 46silent 16 T t, Modula-2 variable 135 TAB key 23 Tandem ST2000 phone switch 166 target amd-eb 166 target amd-eb 166 target amd-eb 166 target amd-eb 166 target exce 166 target exce 166 target protocol 165 target protocol 165 target ming 189, 190 target remote command 174 target romote 166 target remote command 174 target sign 191 target sign 191 starget sign 191 starget sign 191 starget sign 191 starget sign 196	show verbose 200	string constants 129
show width 198 show write 151 SIGALRM 67 SIGINT 67 signal 0 68 signal command 148 signal, an asynchronous event 67 signal of 67 SIGINT 67 signal of 68 signal, an asynchronous event 67 signal of 68 signal, an asynchronous event 67 signal of 67 SIGSEGV 67 SIGSEGV 67 SIGTRAP signal 46 -silent 16 silent 61 single-stepping 69 SIZE, Modula-2 136 source files 79 source files 79 source files 79 source files 81 source path 83 SPARClet connecting to 187 loading from a host to debug 187 running and debugging 187 running on 186 SPARClite DSU 51 spare-stub.c 171 st2000 183 Stack button 269 stack frame 71, 271 stack frame, selecting 74 step 24, 64 Step button 267 symbol file errors 159 symbol filenames 98 symbol table 18, 141 symbol-file 154, 155 -symbols 97 systag, thread identifier 43 T t, Modula-2 variable 135 TAB key 23 Tandem ST2000 phone switch 166 target 163, 166 target array 167 target array 167 target array 167 target array 167 target exc 166 target mind 166 target mind 166 target mind 166 target mind 166 target protocol 165 target remote 166 target protocol 165 target remote 166 target saget nindy 166 target remote 166 target saget 167	show version 28	structures 97
show write 151 SIGALRM 67 SIGINT 67 signal 0 68 signal command 148 signals, an asynchronous event 67 signals fatal 67 SIGSEGV 67 SIGTRAP signal 46 -silent 16 silent 61 single-stepping 69 SIZE, Modula-2 136 source filename 219 source files 79 source path 83 SPARClet connecting to 187 loading from a host to debug 187 running and debugging 187 running on 186 SPARClite DSU 51 sparc-stub.c 171 stack frame 71, 271 stack frame, selecting 74 step 24, 64 Step batton 267 symbol definitions 157 symbol file errors 159 symbol file arrors 259 symbol definitions 157 symbol file errors 159 symbol file errors 167 that 18 target error 200 phone switch 166 target array 167 target error 166 target array 167 target exec 166 target error 166 t	show warranty 29	stubs
SIGALRM 67 SIGINT 67 signal 0 68 signal command 148 signal, an asynchronous event 67 signals fatal 67 SIGSEGV 67 SIGTRAP signal 46 -silent 16 silent 61 single-stepping 69 SIZE, Modula-2 136 source filename 219 source files 79 source line 81 source path 83 SPARClet connecting to 187 loading from a host to debug 187 running and debugging 187 running on 186 SPARCliet DSU 51 spare-stub.c 171 st2000 183 Stack button 269 stack frame, selecting 74 stack pointer 74 step 24, 64 Step assembler instruction button 268 Step button 267 signal 0 68 symbol definitions 157 symbols 17 symbol file arrors 159 symbol filenames 98 symbol table 18, 141 symbol-file 154, 155 -symbols 97 systag, thread identifier 43 T t, Modula-2 variable 135 TAB key 23 Tandem ST2000 phone switch 166 target array 167 target core 166 target array 167 target est 167 target est 167 target exec 166 target mips 189, 190 target nindy 166 target remote 166 target remote command 174 target rom68k 167 target sim 191 target sparclite 167 target st2000 166	show width 198	SPARC, M68K, Intel 171
SIGINT 67 signal 0 68 signal command 148 signal, an asynchronous event 67 signals fatal 67 SIGSEGV 67 SIGTRAP signal 46 -silent 16 silent 61 silent 61 silent 61 single-stepping 69 SIZE, Modula-2 136 source filename 219 source files 79 source files 81 source path 83 SPARClet connecting to 187 loading from a host to debug 187 running and debugging 187 running on 186 SPARClite DSU 51 spare-stub.c 171 st2000 183 Stack button 269 stack frame 71, 271 stack frame, selecting 74 stack pointer 74 step 24, 64 Step button 267 signal 0 68 symbol file errors 159 symbol file error 167 symbol file refer by symbol apple 154 for a file file file file file file file file	show write 151	style 100
signal 0 68 signal command 148 signal, an asynchronous event 67 signals fatal 67 SIGSEGV 67 SIGTRAP signal 46 -silent 16 silent 61 silent 61 silent 61 source filename 219 source filename 219 source files 79 source line 81 source path 83 SPARClet connecting to 187 loading from a host to debug 187 running and debugging 187 running and debugging 187 running on 186 SPARClite DSU 51 sparc-stub.c 171 st2000 183 Stack button 269 stack frame 71, 271 stack frame, selecting 74 stack pointer 74 step 24, 64 Step assembler instruction button 268 Signal command 148 symbol file errors 159 symbol file errors 150 fate 154, 155 TAB key 23 Tandem ST2000 phone switch 166 target amd-eb 166 target aray 167 target core 166 ta	SIGALRM 67	subroutines 266
signal command 148 signal, an asynchronous event 67 signals fatal 67 SIGSEGV 67 SIGTRAP signal 46 -silent 16 silent 61 single-stepping 69 SIZE, Modula-2 136 source filename 219 source files 79 source line 81 source path 83 SPARClet connecting to 187 loading from a host to debug 187 running and debugging 187 running on 186 SPARClite DSU 51 spare-stub.c 171 st2000 183 Stack button 269 stack frame 71, 271 stack frame, selecting 74 step 24, 64 Step assembler instruction button 268 Step button 267 symbol table 18, 141 symbol-file 154, 155 -symbols 17 symbols 97 systag, thread identifier 43 T, Modula-2 variable 135 TAB key 23 Tandem ST2000 phone switch 166 Tandem's STD-BUG protocol 166 target amd-eb 166 target array 167 target core 166 target exec 166 target exec 166 target mips 189, 190 target nindy 166 target protocol 165 target remote 166 target remote command 174 target sparclite 167 target sim 191 target sparclite 167 target symbol-file 154, 155 -symbols 17 symbols 17 symbol-file 154, 155 -symbols 17 symbols 17 symbols 17 symbol-file 154, 155 -symbols 17 symbol-file 154, 155 -symbols 17 symbols 97 systag, thread identifier 43 Tandem ST2000 phone switch 166 target array 167 target array 167 target core 166 target array 167 target exec 166 target mips 189, 190 target protocol 165 target remote 166 target remote command 174 target sparclite 167 target sim 191 target sparclite 167 target signal 46 symbol table 18, 141 symbol-file 154, 155 -symbols 17 symbols 17 sytag, thread identifier 43 Tandem ST2000 phone switch 166 target array 167 target sid 166 target array 167 target core 166 target array 167 target sid 167 target sparclite 167	SIGINT 67	symbol definitions 157
signal command 148 signal, an asynchronous event 67 signals fatal 67 SIGSEGV 67 SIGTRAP signal 46 -silent 16 silent 61 single-stepping 69 SIZE, Modula-2 136 source filename 219 source files 79 source line 81 source path 83 SPARClet connecting to 187 loading from a host to debug 187 running and debugging 187 running and debugging 187 running on 186 SPARClite DSU 51 sparc-stub.c 171 st2000 183 Stack button 269 stack frame 71, 271 stack frame, selecting 74 step 24, 64 Step assembler instruction button 268 Step button 267 step i 66	signal 0 68	symbol file errors 159
signal, an asynchronous event 67 signals fatal 67 SIGSEGV 67 SIGTRAP signal 46 -silent 16 silent 61 single-stepping 69 SIZE, Modula-2 136 source filename 219 source files 79 source line 81 source path 83 SPARClet connecting to 187 loading from a host to debug 187 running and debugging 187 running and debugging 187 running on 186 SPARClite DSU 51 sparc-stub.c 171 st2000 183 Stack button 269 stack frame 71, 271 stack frame, selecting 74 step 24, 64 Step assembler instruction button 268 Step button 267 step i 66		symbol filenames 98
signals fatal 67 SIGSEGV 67 SIGTRAP signal 46 -silent 61 silent 61 single-stepping 69 SIZE, Modula-2 136 source filename 219 source files 79 source line 81 source path 83 SPARClet connecting to 187 loading from a host to debug 187 running and debugging 187 running on 186 SPARClite DSU 51 sparc-stub.c 171 st2000 183 Stack button 269 stack frame 71, 271 stack frame, selecting 74 step 24, 64 Step assembler instruction button 268 Step button 267 symbols 17 symbols 97 systag, thread identifier 43 T, Modula-2 variable 135 TAB key 23 Tandem ST2000 phone switch 166 Tandem's STD-BUG protocol 166 target array 167 target array 167 target core 166 target exec 166 target exec 166 target mips 189, 190 target mips 189, 190 target remote 166 target remote 166 target remote command 174 target rom68k 167 target sim 191 target sparclite 167 target siz2000 166	- -	symbol table 18, 141
fatal 67 SIGSEGV 67 SIGTRAP signal 46 -silent 16 silent 61 Signel-stepping 69 SIZE, Modula-2 136 source filename 219 source line 81 source path 83 SPARClet connecting to 187 loading from a host to debug 187 running and debugging 187 running on 186 SPARClite DSU 51 sparc-stub.c 171 st2000 183 Stack button 269 stack frame 71, 271 stack frame, selecting 74 step 24, 64 Step assembler instruction button 268 Step button 267 SIGTRAP signal 46 symbols 97 systag, thread identifier 43 T t, Modula-2 variable 135 TAB key 23 Tandem ST2000 phone switch 166 target 163, 166 target array 167 target exec 166 target errou 189 target exec 166 target mips 189, 190 target mips 189, 190 target remote 166 target remote command 174 target rom68k 167 target remote 166 target symbol 165 target remote 166 target protocol 165 target remote 166 target protocol 165 target remote 166 target protocol 165 target remote 166 target remote 166		symbol-file 154, 155
SIGTRAP signal 46 -silent 16 silent 61 silent 60 SIZE, Modula-2 136 source filename 219 source files 79 source line 81 source path 83 SPARClet connecting to 187 loading from a host to debug 187 running and debugging 187 running on 186 SPARClite DSU 51 sparc-stub.c 171 st2000 183 Stack button 269 stack frame 71, 271 stack frame, selecting 74 stack pointer 74 step 24, 64 Step assembler instruction button 268 Step button 267 stepi 66 Tt, Modula-2 variable 135 TAB key 23 Tandem ST2000 phone switch 166 target 163, 166 target array 167 target core 166 target errou 166 target errou 166 target exec 166 target exec 166 target mips 189, 190 target nindy 166 target remote 166 target mips 189, 190 target remote 166 target remote 166 target silent 167 target silent 174 target remote 2000 166		-symbols 17
-silent 16 silent 61 silent 61 silent 61 single-stepping 69 SIZE, Modula-2 136 source filename 219 source files 79 source line 81 source path 83 SPARClet connecting to 187 loading from a host to debug 187 running and debugging 187 running on 186 SPARClite DSU 51 sparc-stub.c 171 st2000 183 Stack button 269 stack frame 71, 271 stack frame, selecting 74 step 24, 64 Step assembler instruction button 268 Step button 267 steni 66	SIGSEGV 67	symbols 97
silent 61 single-stepping 69 SIZE, Modula-2 136 source filename 219 source files 79 source line 81 source path 83 SPARClet connecting to 187 loading from a host to debug 187 running and debugging 187 running on 186 SPARClite DSU 51 sparc-stub.c 171 st2000 183 Stack button 269 stack frame 71, 271 stack frame, selecting 74 step 24, 64 Step assembler instruction button 268 Step button 267 Step i 66 t, Modula-2 variable 135 TAB key 23 Tandem ST2000 phone switch 166 Tandem's STD-BUG protocol 166 target 163, 166 target amd-eb 166 target array 167 target core 166 target exc 166 target exc 166 target mips 189 target mips 189, 190 target nindy 166 target remote 166 target remote 166 target remote command 174 target rom68k 167 target sparclite 167 target st2000 166	SIGTRAP signal 46	systag, thread identifier 43
single-stepping 69 SIZE, Modula-2 136 source filename 219 source files 79 source line 81 source path 83 SPARClet connecting to 187 loading from a host to debug 187 running and debugging 187 running on 186 SPARClite DSU 51 sparc-stub.c 171 st2000 183 Stack button 269 stack frame 71, 271 stack frame, selecting 74 step 24, 64 Step assembler instruction button 268 Step button 267 Step ii 66 t, Modula-2 variable 135 TAB key 23 Tandem ST2000 phone switch 166 Tandem's STD-BUG protocol 166 target 163, 166 target arnd-eb 166 target arnay 167 target core 166 target er000 189 target exec 166 target hms 166 target mips 189, 190 target nindy 166 target remote 166 target remote command 174 target remote command 174 target sparclite 167 target st2000 166	-silent 16	
single-stepping 69 SIZE, Modula-2 136 source filename 219 source files 79 source line 81 source path 83 SPARClet connecting to 187 loading from a host to debug 187 running and debugging 187 running on 186 SPARClite DSU 51 sparc-stub.c 171 st2000 183 Stack button 269 stack frame 71, 271 stack frame, selecting 74 step 24, 64 Step assembler instruction button 268 Step button 267 Step i 66 t, Modula-2 variable 135 TAB key 23 Tandem ST2000 phone switch 166 Tandem's STD-BUG protocol 166 target 163, 166 target array 167 target array 167 target evec 166 target evoo 189 target mips 189 target mips 189, 190 target nindy 166 target protocol 165 target remote 166 target remote command 174 target remote command 174 target sparclite 167 target st2000 166	silent 61	Т
SIZE, Modula-2 136 source filename 219 source files 79 source line 81 source path 83 SPARClet connecting to 187 loading from a host to debug 187 running and debugging 187 running on 186 SPARClite DSU 51 sparc-stub.c 171 stack button 269 stack frame 71, 271 stack frame, selecting 74 step 24, 64 Step assembler instruction button 268 Step button 267 Surce filename 219 TAB key 23 Tandem ST2000 phone switch 166 Tandem's STD-BUG protocol 166 target 163, 166 target amd-eb 166 target array 167 target core 166 target excore 166 target excore 166 target excore 166 target mips 189 target mips 189, 190 target nindy 166 target remote 166 target st2000 166	single-stepping 69	-
source filename 219 source files 79 source line 81 source path 83 SPARClet connecting to 187 loading from a host to debug 187 running and debugging 187 running on 186 SPARClite DSU 51 sparc-stub.c 171 stack frame 71, 271 stack frame, selecting 74 step 24, 64 Step assembler instruction button 268 Surce filename 219 Tandem ST2000 phone switch 166 Tandem's STD-BUG protocol 166 target 163, 166 target amd-eb 166 target array 167 target e7000 189 target e8 167 target exec 166 target mins 166 target remote 166 target remote 2000 189 target nindy 166 target remote 166 target remote 2000 165 target remote 2000 165 target remote 2000 166		
source files 79 source line 81 source path 83 SPARClet connecting to 187 loading from a host to debug 187 running and debugging 187 running on 186 SPARClite DSU 51 sparc-stub.c 171 stack frame, selecting 74 step 24, 64 Step assembler instruction button 268 Source files 79 Tandem's STD-BUG protocol 166 target 163, 166 target amd-eb 166 target array 167 target core 166 target e7000 189 target est 167 target exec 166 target mins 166 target mins 166 target mins 166 target remote 166 target array 167 target e7000 189 target exiles 167 target exec 166 target mins 166 target mins 166 target remote 166 target array 167 target eriotool 189 target remote 166 target remote 166 target array 167 target exiles 167 target exiles 167 target remote command 174 target sparclite 167 target siz000 166		•
source line 81 source path 83 SPARClet connecting to 187 loading from a host to debug 187 running and debugging 187 running on 186 SPARClite DSU 51 sparc-stub.c 171 st2000 183 Stack button 269 stack frame 71, 271 stack frame, selecting 74 step 24, 64 Step assembler instruction button 268 SPARClite BSI target 163, 166 target amd-eb 166 target array 167 target core 166 target exc 166 target exec 166 target mips 189, 190 target nindy 166 target remote 166 target remote 166 target remote command 174 target remote command 174 target sim 191 target sparclite 167 target st2000 166		=
source path 83 SPARClet connecting to 187 loading from a host to debug 187 running and debugging 187 running on 186 SPARClite DSU 51 spare-stub.c 171 st2000 183 Stack button 269 stack frame 71, 271 stack frame, selecting 74 steep 24, 64 Step assembler instruction button 268 SPARClite DSU 57 starget erron 166 target array 167 target core 166 target erron 189 target exec 166 target mips 189, 190 target nindy 166 target remote 166 target remote 166 target remote 268 target remote command 174 target remote command 174 target sim 191 target siz 2000 166	source line 81	
SPARClet connecting to 187 loading from a host to debug 187 running and debugging 187 running on 186 SPARClite DSU 51 sparc-stub.c 171 st2000 183 Stack button 269 stack frame 71,271 stack frame, selecting 74 step 24,64 Step assembler instruction button 268 Step button 267 steni 66 target array 167 target core 166 target e7000 189 target est 167 target exec 166 target mips 189, 190 target mips 189, 190 target nindy 166 target remote 166 target remote 166 target remote 166 target remote 268 target remote 20mmand 174 target sim 191 target sparclite 167 target st2000 166		
loading from a host to debug 187 running and debugging 187 running on 186 SPARClite DSU 51 sparc-stub.c 171 st2000 183 Stack button 269 stack frame 71, 271 stack frame, selecting 74 stack pointer 74 step 24, 64 Step assembler instruction button 268 Step button 267 stepi 66 target core 166 target e7000 189 target exec 166 target mips 166 target mips 189, 190 target nindy 166 target protocol 165 target remote 166 target remote 166 target remote 268 target remote 268 target remote 268 target sparclite 167 target st2000 166		
loading from a host to debug 187 running and debugging 187 running on 186 SPARClite DSU 51 sparc-stub.c 171 st2000 183 Stack button 269 stack frame 71, 271 stack frame, selecting 74 step 24, 64 Step assembler instruction button 268 Step button 267 stepi 66 starget core 166 target core 166 target e7000 189 target exec 166 target mips 189, 190 target nindy 166 target protocol 165 target remote 166 target remote 166 target remote command 174 target sim 191 target sparclite 167 target st2000 166	connecting to 187	=
running on 186 SPARClite DSU 51 sparc-stub.c 171 st2000 183 Stack button 269 stack frame 71, 271 stack frame, selecting 74 step 24, 64 Step assembler instruction button 268 Step button 267 steni 66 target est 167 target exec 166 target mips 189, 190 target nindy 166 target protocol 165 target remote 166 target remote 166 target remote 268 target sparclite 167 target st2000 166		•
running on 186 SPARClite DSU 51 sparc-stub.c 171 st2000 183 Stack button 269 stack frame 71, 271 stack frame, selecting 74 stack pointer 74 step 24, 64 Step assembler instruction button 268 SPARClite DSU 51 target exc 166 target hms 166 target mips 189, 190 target nindy 166 target protocol 165 target remote 166 target sparclite 167 target sparclite 167 target st2000 166	running and debugging 187	
sparc-stub.c 171 sparc-stub.c 171 st2000 183 Stack button 269 stack frame 71, 271 stack frame, selecting 74 stack pointer 74 step 24, 64 Step assembler instruction button 268 Step button 267 stepi 66 target exec 166 target hms 166 target mips 189, 190 target nindy 166 target protocol 165 target remote 166 target sparclite 167 target sparclite 167 target st2000 166		
space-stuble 171 st2000 183 Stack button 269 stack frame 71, 271 stack frame, selecting 74 stack pointer 74 step 24, 64 Step assembler instruction button 268 Step button 267 stepi 66 target mips 189, 190 target nindy 166 target remote 165 target remote 166 target remote command 174 target sim 191 target sparclite 167 target st2000 166	_	
st2000 183 Stack button 269 stack frame 71, 271 stack frame, selecting 74 stack pointer 74 step 24, 64 Step assembler instruction button 268 Step button 267 stepi 66 stack button 269 target mips 189, 190 target nindy 166 target protocol 165 target remote 166 target remote command 174 target sim 191 target sparclite 167 target st2000 166	spare-stub.c 171	•
stack frame 71, 271 stack frame, selecting 74 stack pointer 74 step 24, 64 Step assembler instruction button 268 Step button 267 stepi 66 target protocol 165 target remote 166 target remote command 174 target sim 191 target sparclite 167 target st2000 166		
stack frame, selecting 74 stack pointer 74 step 24, 64 Step assembler instruction button 268 Step button 267 stepi 66 target remote 166 target remote command 174 target rom68k 167 target sim 191 target sparclite 167 target st2000 166	Stack button 269	
stack frame, selecting 74 stack pointer 74 step 24, 64 Step assembler instruction button 268 Step button 267 stepi 66 stack frame, selecting 74 target remote 166 target remote 2011 target sim 191 target sparclite 167 target st2000 166	stack frame 71, 271	
stack pointer 74 step 24, 64 Step assembler instruction button 268 Step button 267 stepi 66 target remote command 1/4 target rom68k 167 target sim 191 target sparclite 167 target st2000 166		
step 24, 64 target rom68k 167 Step assembler instruction button 268 Step button 267 step i 66 target sim 191 target sparclite 167 target st2000 166		
Step assembler instruction button 268 Step button 267 step i 66 target sim 191 target sparclite 167 target st2000 166		=
Step button 267 target sparclite 167 stepi 66 target st2000 166		•
stepi 66 target st2000 166		
± 166 190		•
stepping 64 target uni 100, 180	1	target udi 166, 180

target vxworks 166	VAL, Modula-2 136
target w89k 167	value history 92, 102
target, byte order (MIPS) 168	values, history numbers 102
targets, active classes 164	variable, \$bpnum 50
tbreak 51,58	variable, varname 36
TCP port descriptor 178	variables 130, 272
Texinfo 251	variables in expressions 89
thbreak 51	virtual function table 101
thread 43, 69	virtual function tables 132
thread apply 43	void *memset(void *, int, int) 173
thread command, rejected 43	void exceptionHandler 173
thread identifier, systag 44	void flush_i_cache() 173
threads 43	void putDebugChar(int) 172
timeout 186	VxWorks system 166
toolbar buttons for GDBTk 267	VxWorks-timeout 184
TRUNC, Modula-2 136	
-tty 20	W
type	
actual (derived) 101	W89K monitor 167
declared 101	warnings and messages 159
type checking, as for Modula-2 123	Watch Expressions button 269
types	watchpoint 49, 53, 266 deleting 56
Modula-2 132	
	setting 54 watchpoints
U	printing a table 52
u 65	whatis 142
UDI (Universal Debugger Interface) protocol 180	while 216
undisplay 95	Winbond HPPA board 167
union type 131	Wind River Systems real-time OS 219
unset environment 36	
until 53, 65	X
Up stack frame button 271	
up, frame 74	-x 17
up-silently, frame 75	x command, examine 93
user-defined command 216	x commands 24
user-defined hooks 218	x, Modula-2 variable 135
using the Return key 23	V
	Υ
V	yanking 236
v, Modula-2 variable 135	