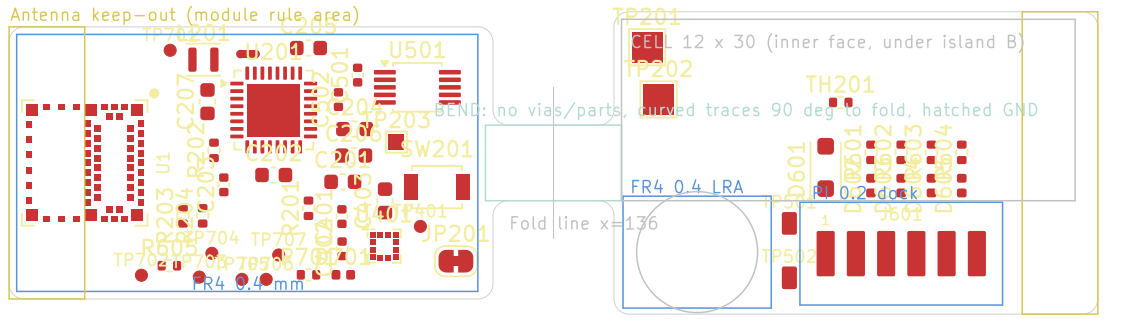

WakeBand flex rev A, layout hand-off (step 8). Unfolded view, all parts top side.
Stackup: 2-layer adhesiveless PI 25 um, 18 um Cu, coverlay, ENIG, about 0.12 mm.
Stiffeners on the bottom (User.2): FR4 0.4 under island A and the LRA pad, PI 0.2 behind the dock pads.
No steel stiffeners. Bend zone (User.3): no vias or parts, R >= 1.2 mm.
Vias only on stiffened areas, >= 0.5 mm from a stiffener edge. Trace/space >= 0.1 mm.
Confirm with JLCPCB which User layers they read for stiffeners before ordering.