

### **COMPUTER ORGANIZATION**


### Lecture 12 Memory Hierarchy (2)

2024 Spring

This PowerPoint is for internal use only at South University of Science and Technology. Please do not repost it on other platforms without permission from the instructor.



## Recap

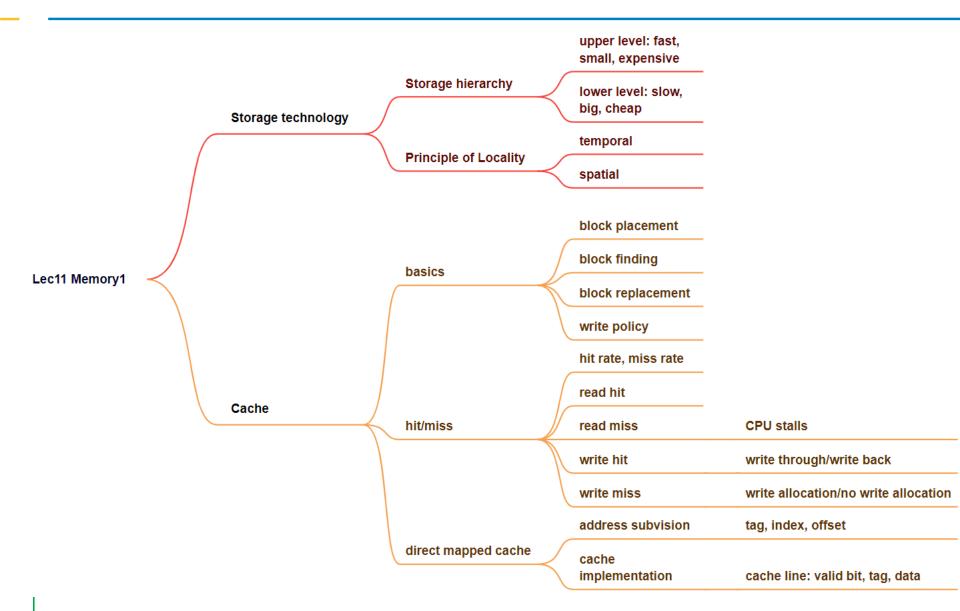



### **Outline**

- Measuring cache performance
- Improving performance Associative cache
  - Fully associative
  - n-ways Set associative
- Improving performance Multilevel Caches



## **Measuring Cache Performance**

- Components of CPU time
  - Program execution cycles
    - · Includes cache hit time
  - Memory stall cycles
    - Mainly from cache misses
- With simplifying assumptions:

Memory stall cycles

$$= \frac{\text{Memory accesses}}{\text{Program}} \times \text{Miss rate} \times \text{Miss penalty}$$

$$= \frac{\text{Instructions}}{\text{Program}} \times \frac{\text{Misses}}{\text{Instruction}} \times \text{Miss penalty}$$



## Cache Performance Example

### Given

- I-cache miss rate = 2%
- D-cache miss rate = 4%
- Miss penalty = 100 cycles
- Base CPI (ideal cache) = 2
- Load & stores are 36% of instructions
- Miss cycles per instruction
  - I-cache:  $2\% \times 100 = 2$
  - D-cache:  $36\% \times 4\% \times 100 = 1.44$
- Effective CPI = 2 + 2 + 1.44 = 5.44
  - Ideal CPU is 5.44/2 =2.72 times faster



## **Average Access Time**

- Hit time is also important for performance
- Average memory access time (AMAT)

 $AMAT = Hit time + Miss rate \times Miss penalty$ 

- Example
  - CPU with 1ns clock, hit time = 1 cycle, miss penalty = 20 cycles,
     I-cache miss rate = 5%
  - AMAT =  $1 + 0.05 \times 20 = 2$ ns
    - 2 cycles per instruction



## **Performance Summary**

- When CPU performance increased
  - Miss penalty becomes more significant
- Decreasing base CPI
  - Greater proportion of time spent on memory stalls
- Increasing clock rate
  - Memory stalls account for more CPU cycles
- Can't neglect cache behavior when evaluating system performance




### **Outline**

- Measuring cache performance
- Improving performance Associative cache
  - Fully associative
  - n-ways Set associative
- Improving performance Multilevel Caches



# **Recall: Direct Mapped Cache**

- Direct mapped cache:
  - Location determined by address
  - One data in memory is mapped to only one location in cache
  - Capacity of cache is not fully exploited
  - Miss rate is high

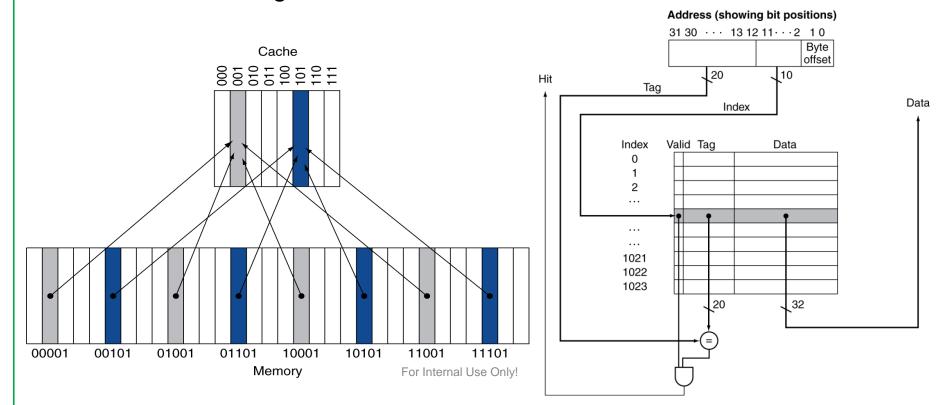



# **Recall: Direct Mapped Cache**

16	10 000	Miss	000
3	00 011	Miss	011
16	10 000	Hit	000

Index	٧	Tag	Data
000	Υ	10	Mem[10000]
001	N		
010	Υ	11	Mem[11010]
011	Υ	00	Mem[00011]
100	N		
101	N		
110	Υ	10	Mem[10110]
111	N		

18	10 010	Miss	010
16	10 000	Hit	000

Index	V	Tag	Data
000	Y	10	Mem[10000]
001	Ν		
010	Y	10	Mem[10010]
011	Υ	00	Mem[00011]
100	N		
101	N		
110	Υ	10	Mem[10110]
111	N		




### **Associative Caches**

- Fully associative
  - Allow a given block to go in any cache entry
  - Requires all entries to be searched at once
  - Comparator per entry (expensive)
- n-way set associative
  - Each set contains n entries
  - Block number determines which set
    - (Block number) modulo (#Sets in cache)
  - Search all entries in a given set at once
  - n comparators (less expensive)



# **Associative Cache Example**


Example: Placement of a block whose address is 12:

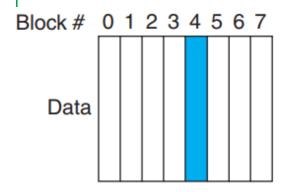




**Direct mapped** 


12 mod 1 = set 0, can be in either way of the set

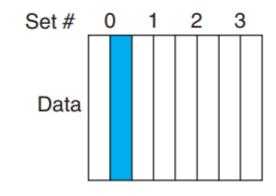


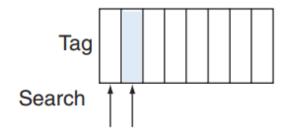

Set associative

can appear in any of the eight cache blocks

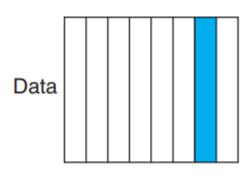

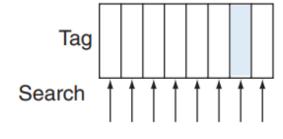

Fully associative



# **Spectrum of Associativity**

• An eight-block cache configured as direct mapped, two-way set associative, four-way set associative, and fully associative.

### One-way set associative (direct mapped)

(an co	way <sub>ı</sub> 0											
Block	Tag	Data										
0												
1												
2												
3												
4												
5												
6												
7												

### Two-way set associative

	wa	y U	wayı	1
Set	Tag	Data	Tag	Data
0				
1				
2				
3				

#### Four-way set associative

	wąy 0		way <sub>l</sub> 1		wą	y 2	way <sub>t</sub> 3	
Set	Tag	Data	Tag	Data	Tag	Data	Tag	Data
0								
1								

#### **Eight-way set associative (fully associative)**

	way	y 0	way <sub>ı</sub>	1	wa	y 2	way <sub>l</sub>	3	wą	y 4	way	.5	wa	<u>y 6</u>	way	7
Γ	Tag	Data	Tag	Data	Tag	Data	Tag	Data	Tag	Data	Tag	Data	Tag	Data	Tag	Data
							F	or Interr	ial Use	Only!						



## **Associativity Example**

- 4-block caches, 1byte/block
  - Direct mapped, 2-way set associative, fully associative
  - Block access sequence: 0, 8, 0, 6, 8
- Direct mapped
  - index = (Block address) mod (#Blocks)

### needs 2 bit for index

Block	Cache	Hit/miss	Cache content after access way 1						
address	index		block 0	block 1	block 2	block 3			
0	0	miss	Mem[0]						
8	0	miss	Mem[8]						
0	0	miss	Mem[0]						
6	2	miss	Mem[0]		Mem[6]				
8	0	miss	Mem[8]		Mem[6]				



# **Associativity Example (cont.)**

2-way set associative

Block access sequence: 0, 8, 0, 6, 8

index = (Block address) mod (#Sets)

### needs 1 bit for index

Block	Cache	Hit/miss	Cache content after access					
address	index		way,0 Se	t 0 way,1	way,0 Se	et 1 way,1		
0	0	miss	Mem[0]					
8	0	miss	Mem[0]	Mem[8]				
0	0	hit	Mem[0]	Mem[8]				
6	0	miss	Mem[0]	Mem[6]				
8	0	miss	Mem[8]	Mem[6]				

### Fully associative (no index)

### needs 0 bit for index

Block address	Hit/miss	Cache content after access  way, 0 way, 1 way, 2 way, 3 way, 3						
0	miss	Mem[0]						
8	miss	Mem[0]	Mem[8]					
0	hit	Mem[0]	Mem[8]					
6	miss	Mem[0]	Mem[8]	Mem[6]				
8	hit	Mem[0]	Mem[8]	Mem[6]				



## **How Much Associativity**

- Increased associativity decreases miss rate
  - But with diminishing returns
- Miss rate simulation of a system with 64KB D-cache, 16-word blocks, SPEC2000
  - 1-way: 10.3%
  - 2-way: 8.6%
  - 4-way: 8.3%
  - 8-way: 8.1%




### **Address Subdivision**

- 4K blocks cache, 4-word/block, 32-bit address
- offset =  $log_2 16 = 4bits \rightarrow 28bits$  for index + tag for all types
- direct mapped (1-way set associative)
  - same number of sets as blocks → 4096 blocks(sets)
  - index =  $\log_2 4096 = 12$  bits
  - tag = 32 4 12 = 16 bits
- 2-way set associative
  - 2 blocks/set → 2048 sets
  - index =  $log_2 2048 = 11 bits$
  - tag = 32 4 11 = 17 bits
- 4-way set associative
  - 4 blocks/set → 1024 sets
  - index =  $\log_2 1024 = 10$  bits
  - tag = 32 4 11 = 18 bits
- fully associative
  - just 1 set → no index
  - tag = 32 4 = 28



# **Set Associative Cache Organization**

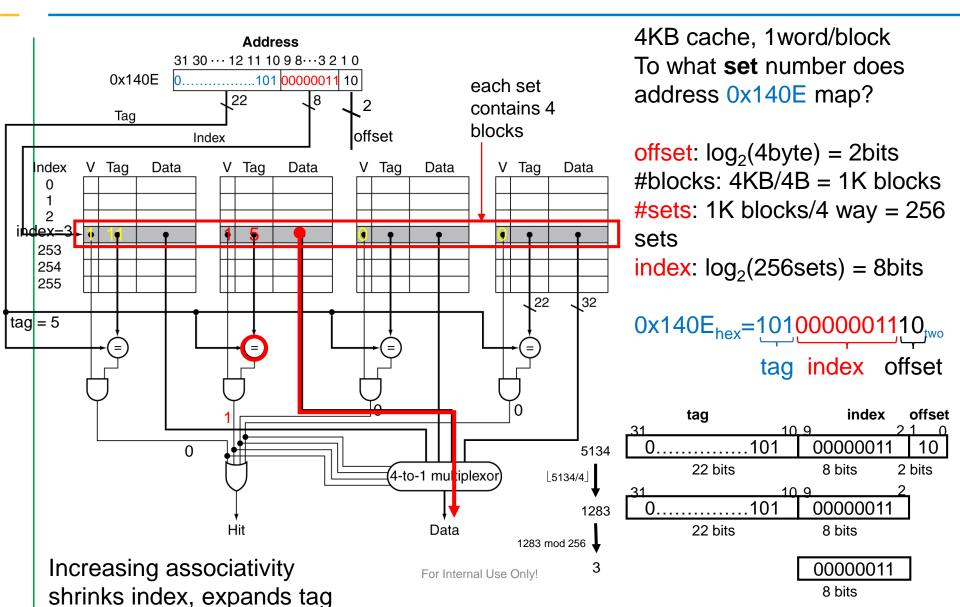



## Replacement Policy

- Direct mapped: no choice
- Set associative
  - Prefer non-valid entry, if there is one
  - Otherwise, choose among entries in the set
- Least-recently used (LRU)
  - Choose the one unused for the longest time
    - Simple for 2-way, manageable for 4-way, too hard beyond that
- Random
  - Gives approximately the same performance as LRU for high associativity




### **Outline**

- Measuring cache performance
- Improving performance Associative cache
  - Fully associative
  - n-ways Set associative
- Improving performance Multilevel Caches



### **Multilevel Caches**

- Primary cache attached to CPU
  - Small, but fast
- Level-2 cache services misses from primary cache
  - Larger, slower, but still faster than main memory
- Main memory services L-2 cache misses
- Some high-end systems include L-3 cache

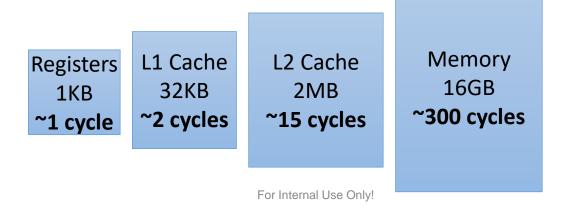



# Multilevel Cache Example

- Given
  - CPU base CPI = 1, clock rate = 4GHz
  - Primary cache Miss rate/instruction = 2%
  - Main memory access time = 100ns
- Solution: With just primary cache
  - Miss penalty = 100ns/0.25ns = 400 cycles
  - Effective CPI = Base CPI + miss penalty/instruction =  $1 + 2\% \times 400 = 9$

Registers

L1 Cache
1 cycle

miss 2%

Memory **400 cycles** 



## **Example (cont.)**

- Given: After adding L-2 cache
  - L2 cache Access time = 5ns
  - L2 global miss rate/instruction = 0.5%
- Solution 1, calculate based on Global miss rate (The fraction of references that miss in all levels):
  - L-1 miss (2%) first need to access the L2 cache
    - Penalty = 5ns/0.25ns = 20 cycles
  - L-1 miss with L-2 also miss (0.5%)
    - Extra penalty = 400 cycles
  - Effective CPI =  $1 + \frac{2\%}{20} \times 20 + \frac{0.5\%}{20} \times 400 = 3.4$
  - Speedup = 9/3.4 = 2.6
- Solution 2, calculate based on Local miss rate (The fraction of references to one level of a cache that miss)
  - L2 local miss rate/instruction = 0.5%/2% = 25%
  - Effect CPI =  $1 + 2\% \times (20 + 25\% \times 400) = 3.4$

Registers

L1 Cache

1 cycle

Leyele

global miss 2%

L2 Cache

20 cycles

global miss 0.5%

Memory **400 cycles** 



### **Multilevel Cache Considerations**

- Primary cache
  - Focus on minimal hit time
- L-2 cache
  - Focus on low miss rate to avoid main memory access
  - Hit time has less overall impact
- Results
  - L-1 cache usually smaller than a single cache
  - L-1 block size smaller than L-2 block size