
# **ESC201T : Introduction to Electronics**

**Lecture 20: Diodes** 

B. Mazhari Dept. of EE, IIT Kanpur

# Doping

# N-Type Semiconductor

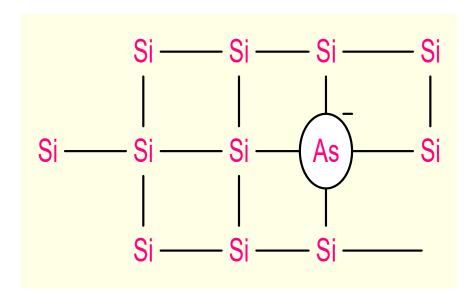

$$N_D \longrightarrow N_D^+ + e^{-\frac{1}{2}}$$

In equilibrium:  $n \times p = n_i^2$ 

$$n_i = 1.45 \times 10^{10} \text{cm}^{-3} atT = 300^{\circ} K$$

$$N_D = 10^{16} \text{cm}^{-3}$$

$$n \approx N_D = 10^{16} \text{cm}^{-3}$$

$$p = \frac{n_i^2}{n} = n_i^2 / N_D \approx 2 \times 10^4 \text{cm}^{-3}$$

Positively charged donor atoms

n

n >> p


# Small amount of impurity results in large change in resistivity!

No. of Silicon atoms / volume =  $5 \times 10^{22} \text{ cm}^{-3}$ 

$$\frac{10^{16}}{5 \times 10^{22}} = 2 \times 10^{-7} \tag{0.2PPM}$$

$$N_D = 10^{16} \text{ cm}^{-3}$$
  
 $\rho : 2 \times 10^5 \Omega \text{ cm} \xrightarrow{} 1.5 \Omega \text{ cm}$ 

# P-Type Semiconductor

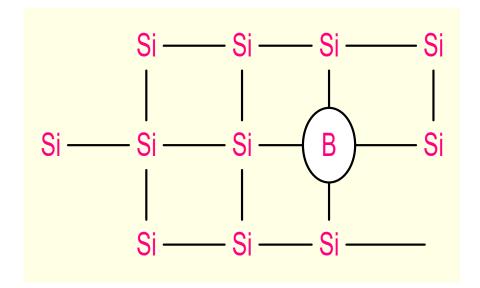

$$N_A + e^- \rightarrow N_A^- + h^+$$


$$N_A = 10^{16} \text{cm}^{-3}$$

$$p \approx N_A = 10^{16} \text{cm}^{-3}$$

$$n = \frac{n_i^2}{p} = n_i^2/N_A = 2 \times 10^4 \text{cm}^{-3}$$

Negatively charged acceptor atoms

# Number of carriers is dependent on temperature!

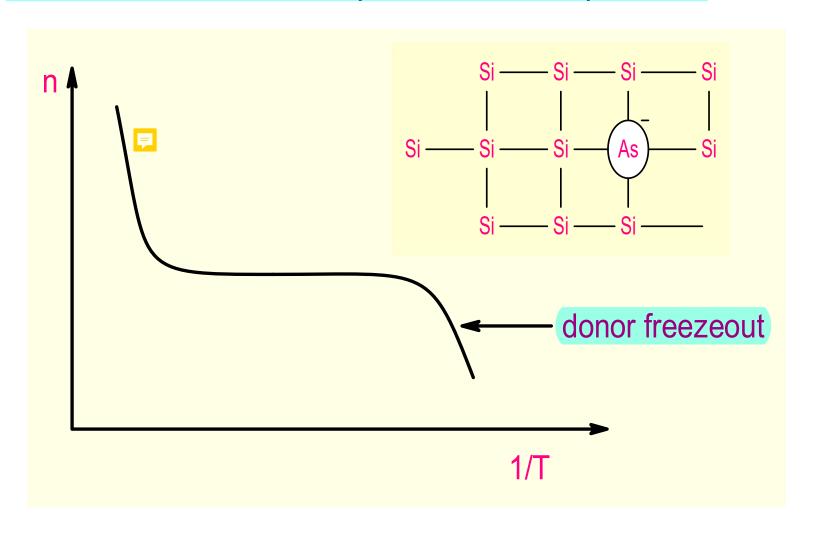


## **Current flow**


#### Drift current due to Electric field

# h<sup>+</sup> o e

# Diffusion to concentration gradient

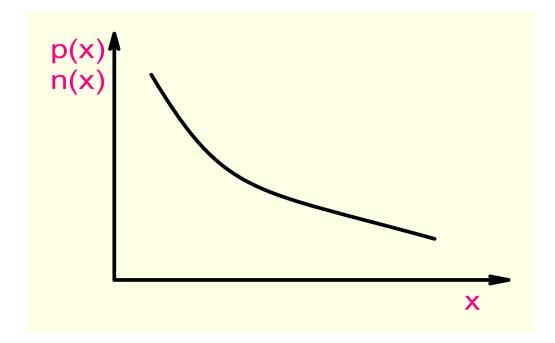


# RecombinationGeneration

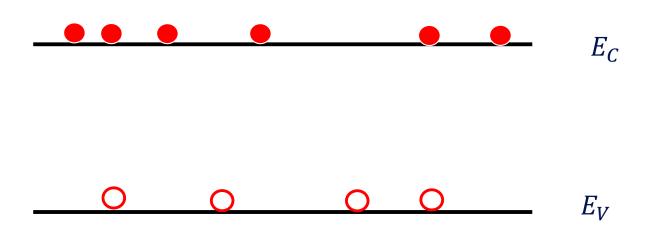


# **PN Junction Diode**

## **PN Junction Diode**

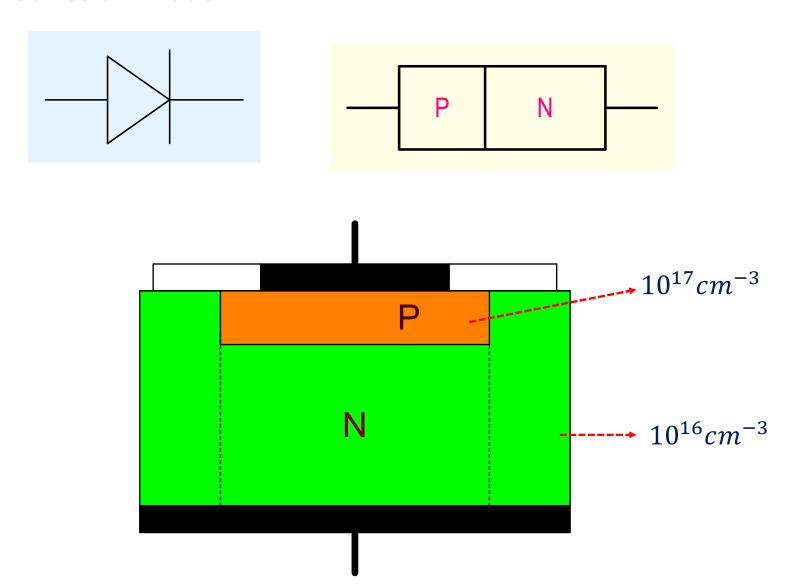


# **Basic Operation**

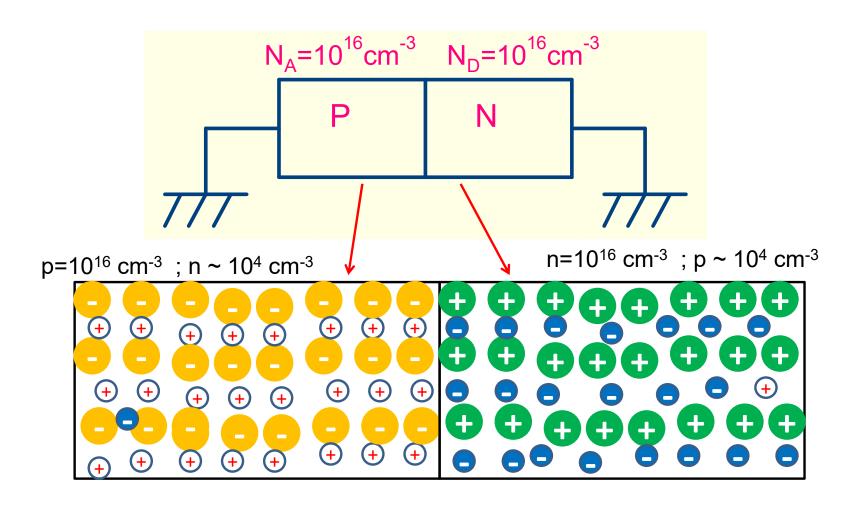


Holes will tend to diffuse from p  $\rightarrow$ n and electrons from n $\rightarrow$ p


Electric field opposes flow of carriers

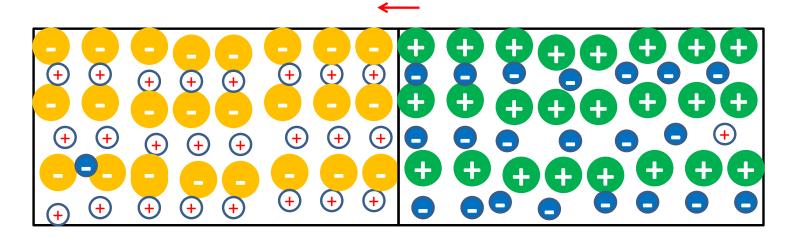


Eventually equilibrium is reached and there is no net flow of carriers across the junction

#### **PN Junction Under Equilibrium**

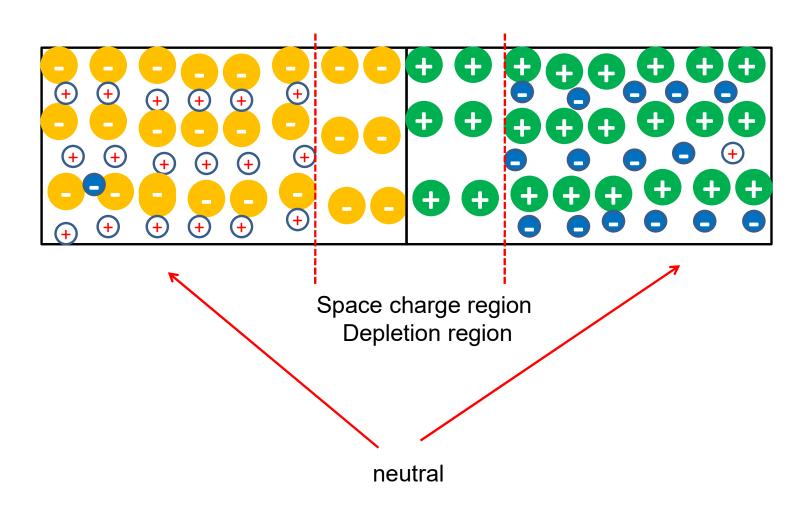

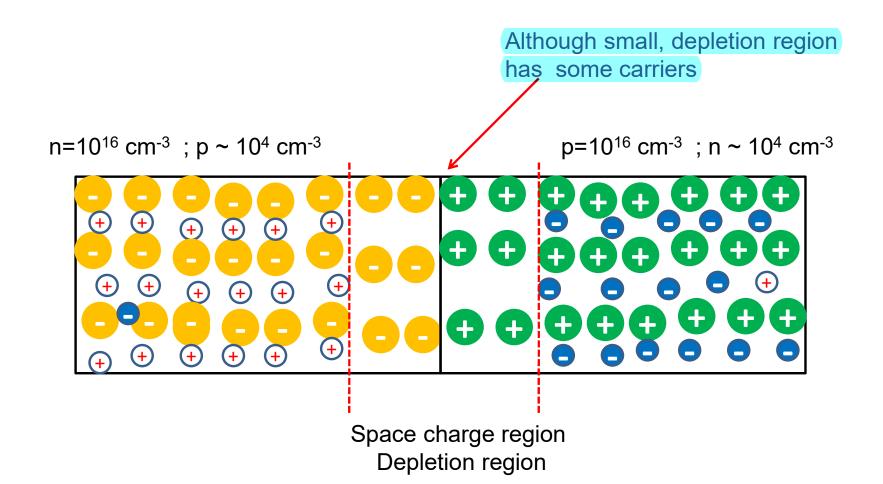


# Built-in Potential V<sub>bi</sub>

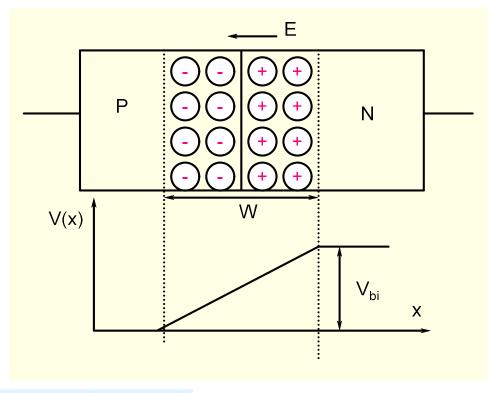

$$V_{bi} = \frac{kT}{q} \ln \left[ \frac{N_A N_D}{n_i^2} \right]$$
  $N_A = N_D = 10^{16} \text{ cm}^{-3}, T = 300^{\circ} \text{K}$   
 $V_{bi} = 0.86 \text{ V}$ 

Anytime you put two different materials into contact, a potential develops between them.

# **Depletion region**

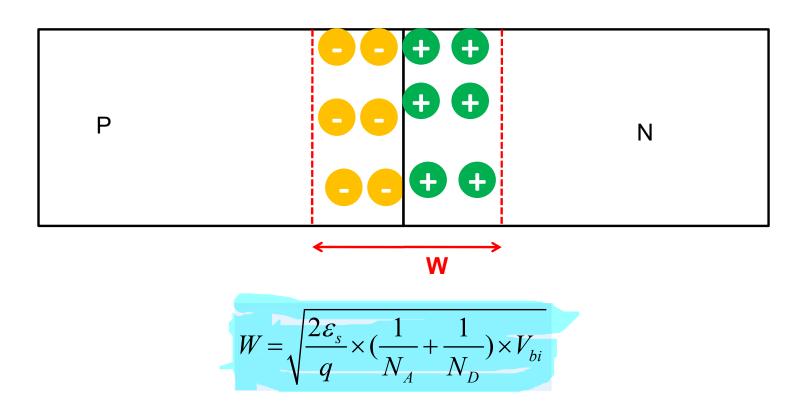


$$\varepsilon_s = 11.7 \times 8.85 \times 10^{-14} F / cm; q = 1.6 \times 10^{-19} C$$

$$N_A = N_D = 10^{16} \text{ cm}^{-3}, \quad T = 300^{\circ} \text{K}$$


$$V_{bi} = 0.86 \text{ V}$$
 $W = 4300 A^{\circ}$ 

 $1A^{\circ} = 10^{-8} cm$ 


#### **Forward and Reverse Bias**

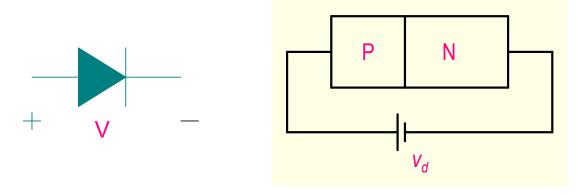


Forward Bias: P is biased at a higher voltage compared to N

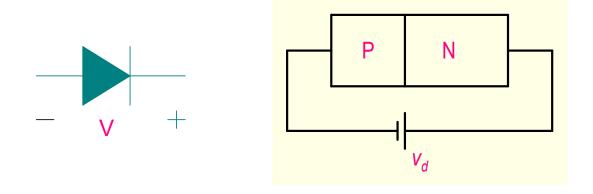


Reverse Bias: N is biased at a higher voltage compared to P

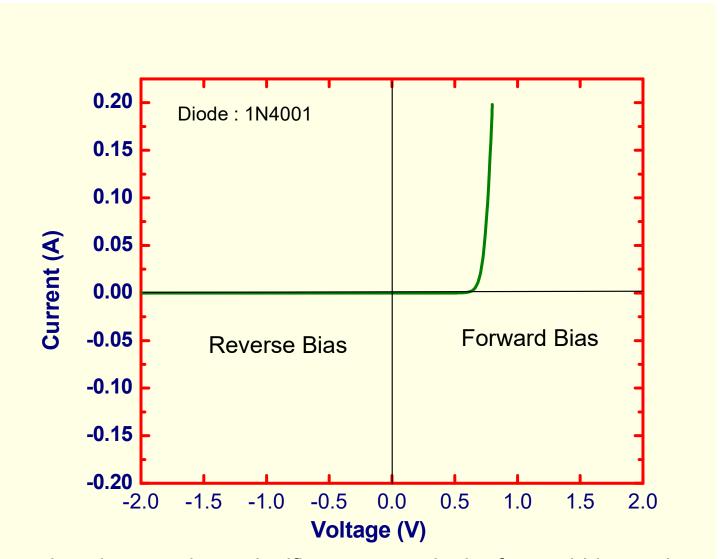


The p-n junction conducts significant current in the forward-bias region.

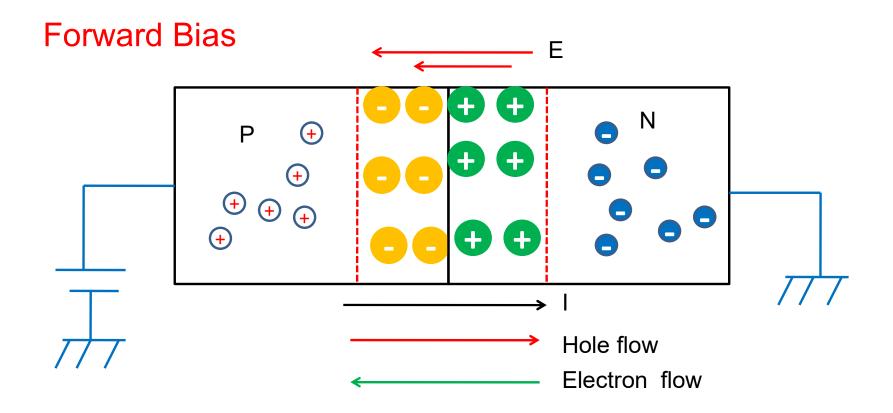


Application of forward bias lowers the built-in potential and allows holes and electrons to cross the junction and result in current flow

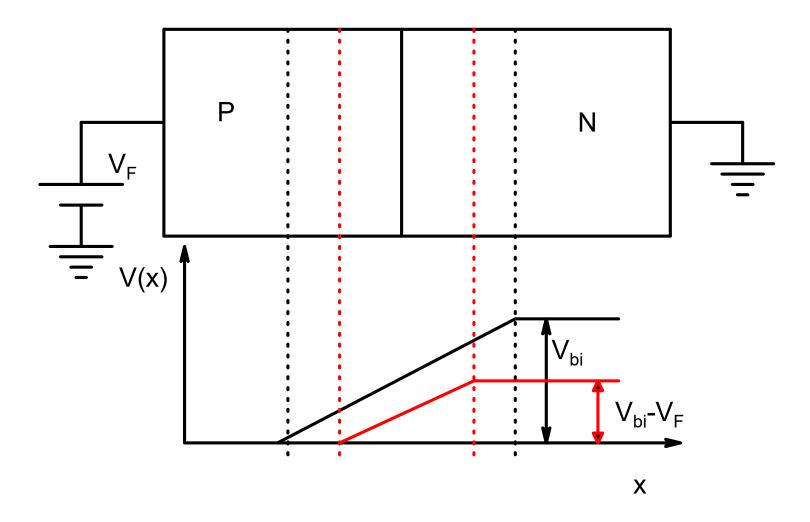

#### **Mechanism of Current flow**

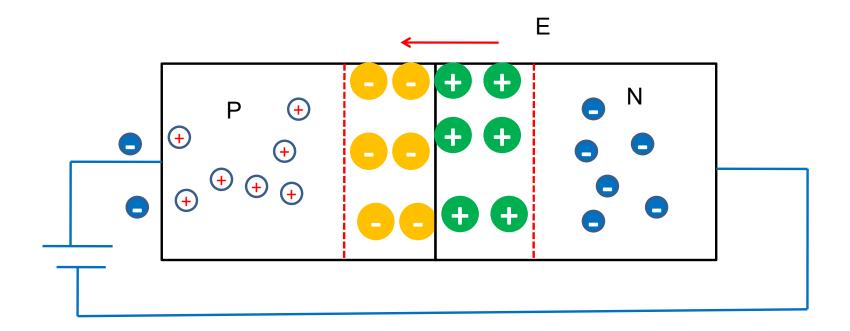


Current flows through carrier injection and recombination

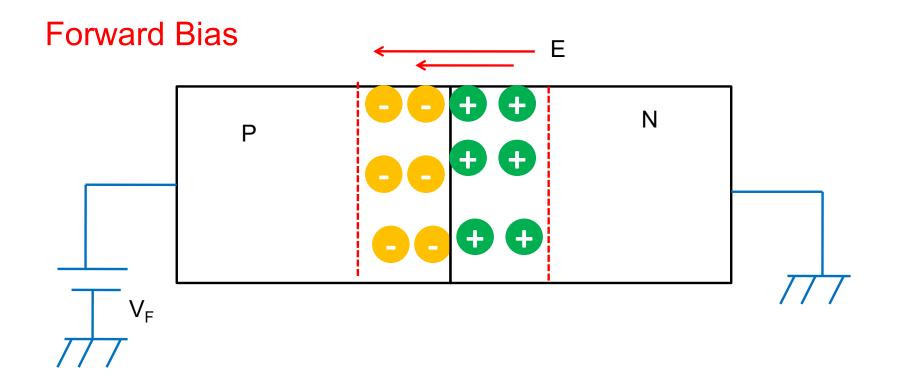



Application of forward bias reduces depletion width.

Change in depletion charge with voltage gives rise to junction capacitance (also called depletion capacitance) C<sub>J</sub>

# **Excess carriers in P and N regions**

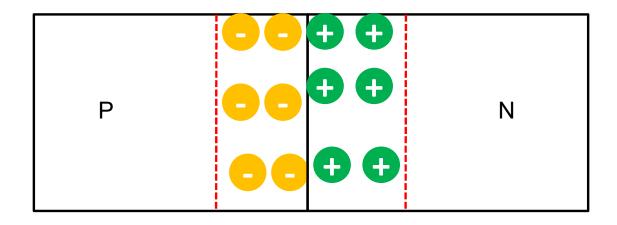

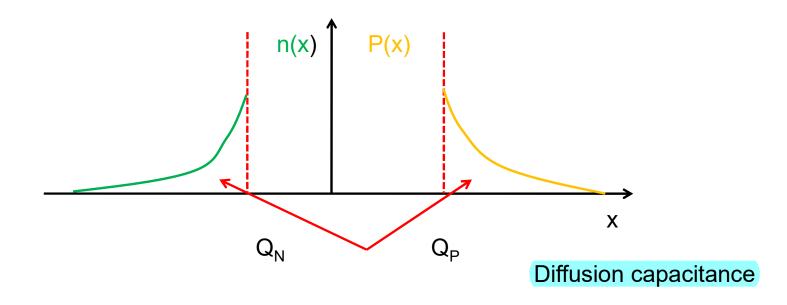


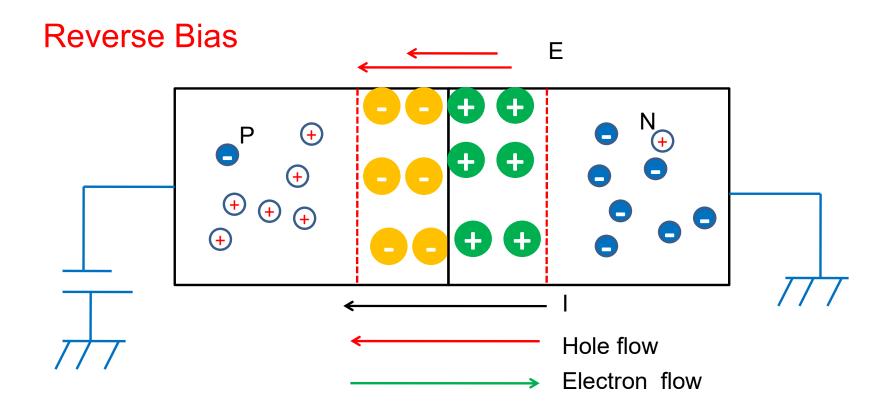


Because of very few electrons in p-type and holes in N-type current is very small!

Application of reverse bias increases the built-in potential

# Reverse Bias

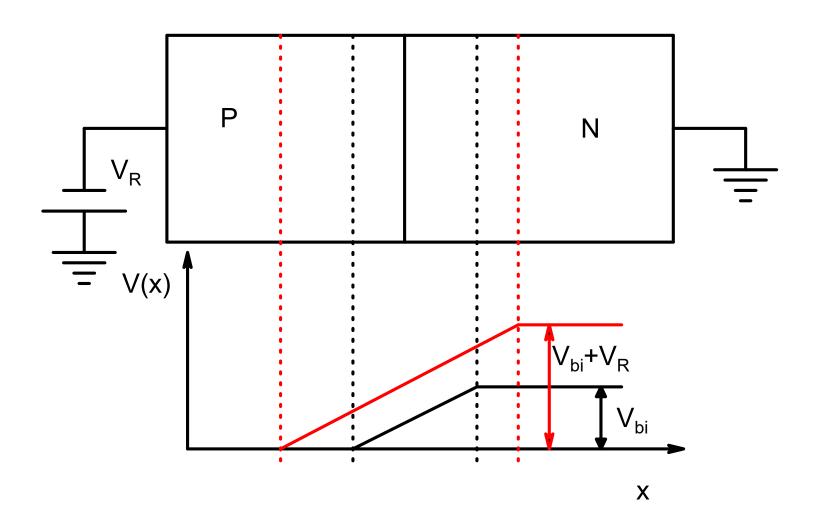

# Diode: I-V Characteristics

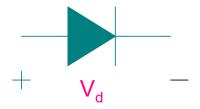

$$I = I_S \times \{ \exp(\frac{V_D}{nV_T}) - 1 \}$$
  
 $I_S : \text{Reverse Saturation Current}$   
 $V_T = kT/q \cong 26mV \text{ at T} = 300 \text{ K}$ 

n is called ideality factor and is equal to 1 for ideal diodes


#### **Forward Bias**

$$I = I_S \times \{ e \times p \left( \frac{v_d}{V_T} \right) - 1 \}$$

$$v_d >> V_T = 26 m V$$

$$I \cong I_S \times \operatorname{exp}\left(\frac{v_d}{V_T}\right)$$

$$\ln(I) = \ln(I_S) + \frac{v_d}{V_T}$$

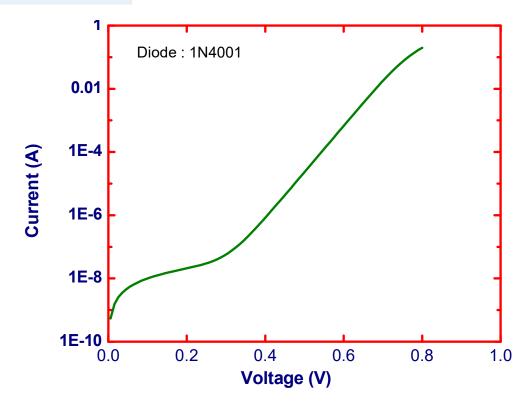


#### **Reverse Bias**


$$I = I_S \times \{ e \times p \left( \frac{v_d}{V_T} \right) - 1 \}$$

$$v_d = -v_R$$


$$I = I_S \times \{ e \times p \left( -\frac{v_R}{V_T} \right) - 1 \} \cong -I_S$$

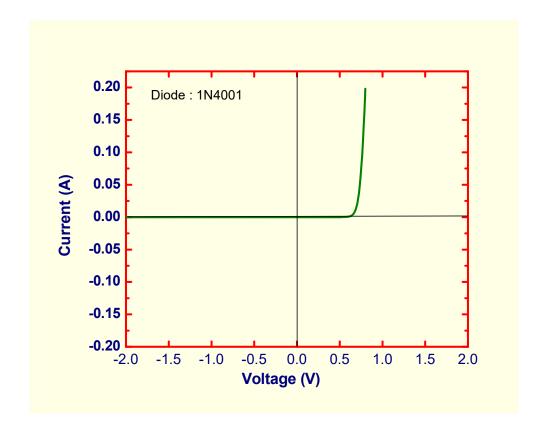


# **Breakdown**

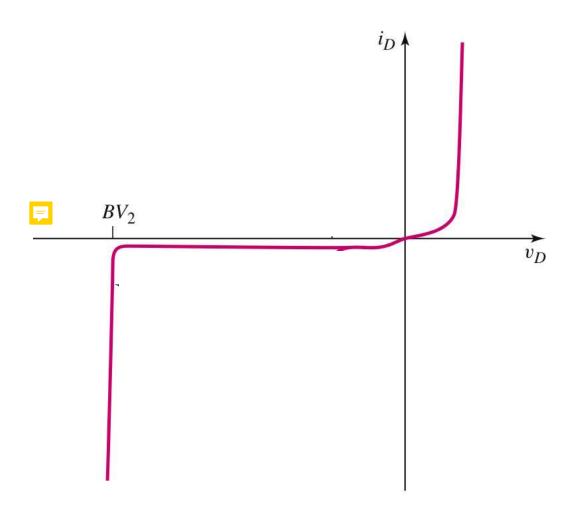

# **Impact Ionization**

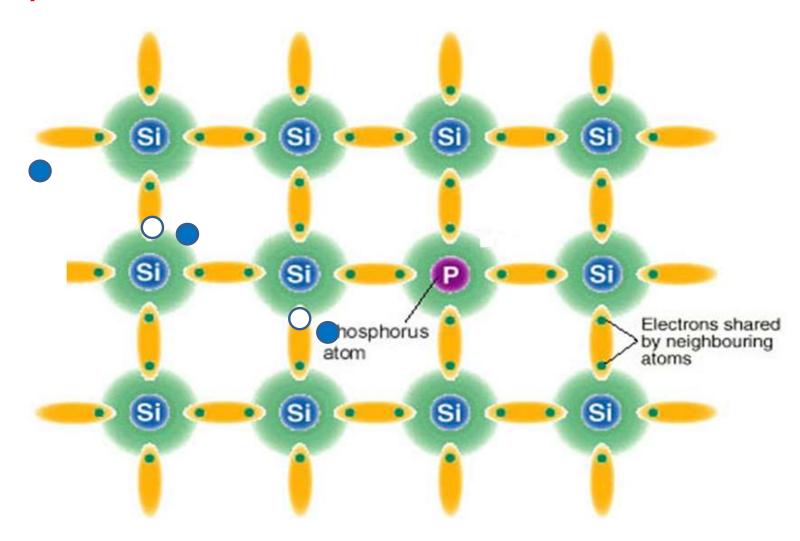

#### **Breakdown Mechanism: Avalanche**

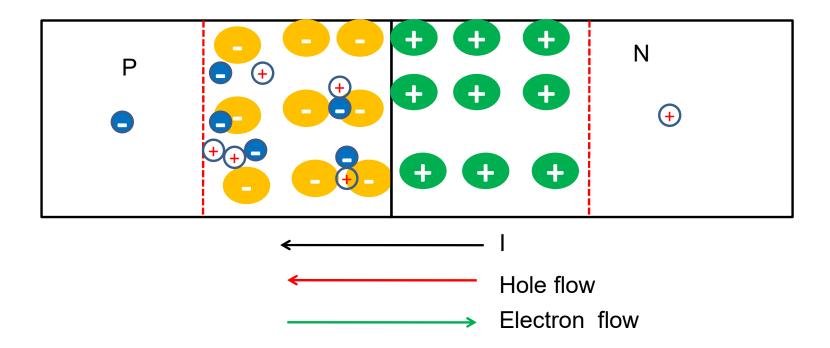


A multiplication of carriers takes place due to impact ionization in the depletion region, as a result of which large current begins to flow.


# **Avalanche**




#### Ionization can also occur due to electric field

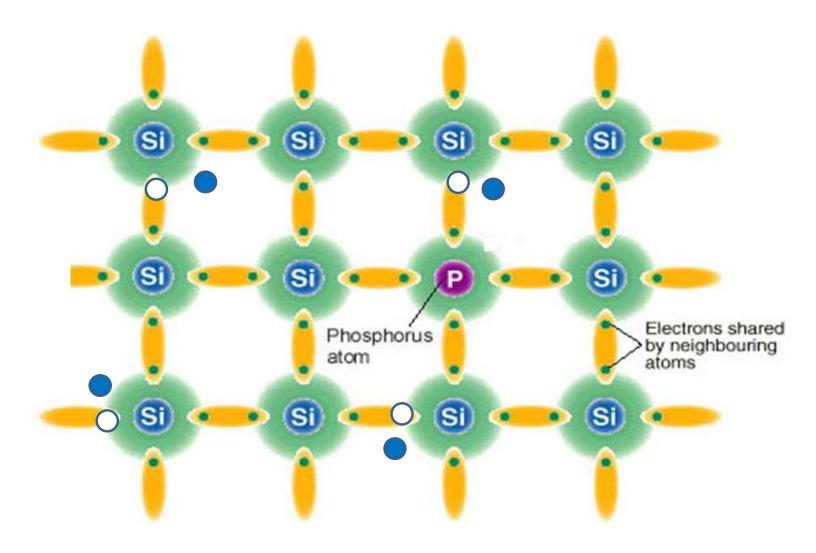

## **Electric Arc**

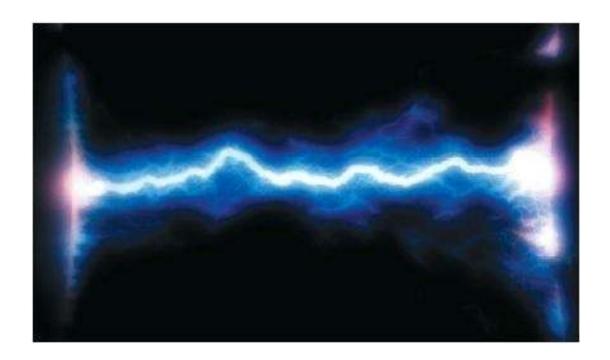

#### Breakdown: Zener Heavily doped junctions

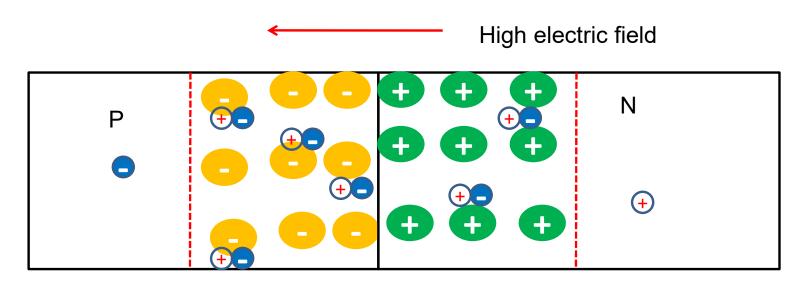

Electric field "breaks the bond" creating electron and hole pairs. These carriers move to give rise to large current.

Most of the common pn junction diodes breakdown due to avalanche mechanism. Even diodes which are called zener diodes have avalanche breakdown