



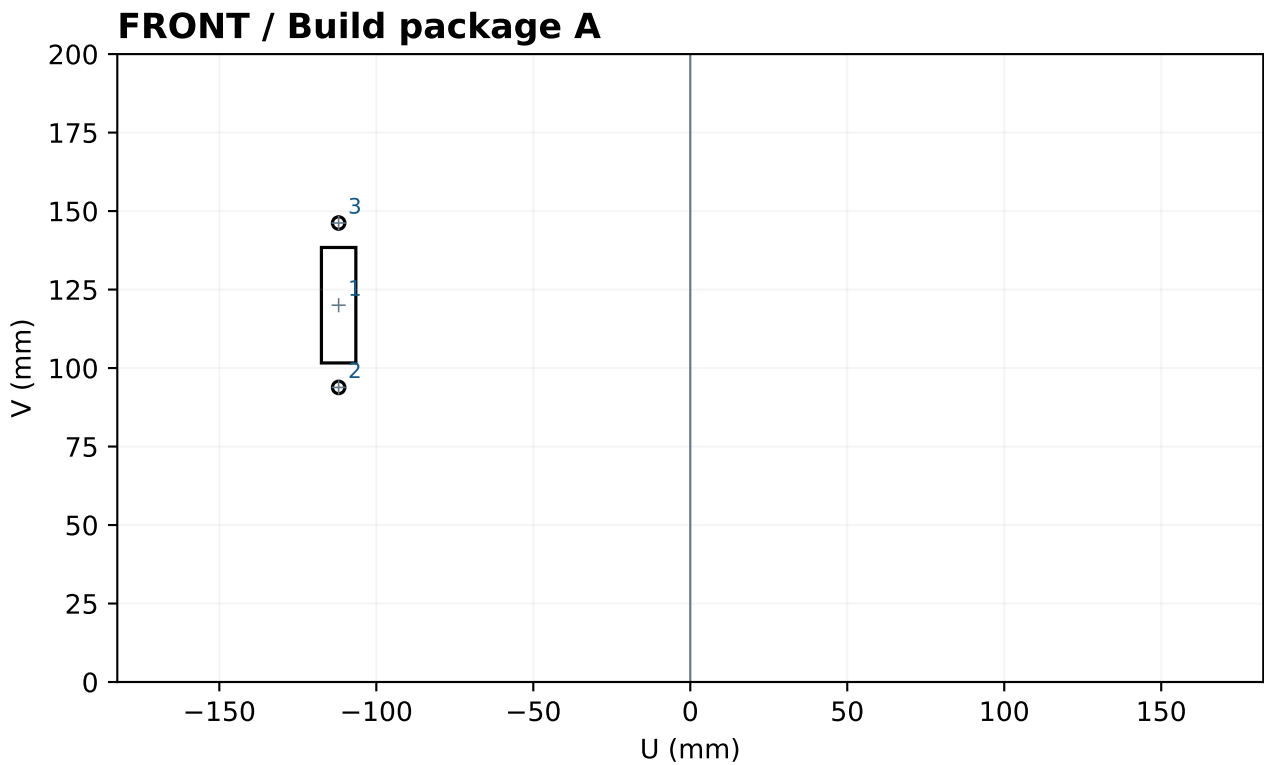

| # | Feature      | U       | V      | Cut size      |
|---|--------------|---------|--------|---------------|
| 1 | Q0 toggle    | -112.00 | 120.02 | 10.97 x 36.78 |
| 2 | Q0 fixing -1 | -112.00 | 93.83  | D3.96         |
| 3 | Q0 fixing +1 | -112.00 | 146.20 | D3.96         |


Outside face view.  $U = X$ ;  $V = Y / \cos(0.937 \text{ deg})$ , measured up along wall.  
Origin: wall plane at  $Y=0$  and case centerline.  $Y=0$  is the mounting-panel underside plane; use STEP datums to fixture.  
CUT layer only. REFERENCE/TEXT are not cuts. Drawing not to scale; DXF units = mm.  
Position tolerance  $\pm 0.5 \text{ mm}$ ; Q0 relative pattern  $\pm 0.12 \text{ mm}$ ; XA bore  $\pm 0.15 \text{ mm}$ ; other bores  $\pm 0.1 \text{ mm}$ .  
Review against received parts before machining. Do not machine with equipment or supply connected.

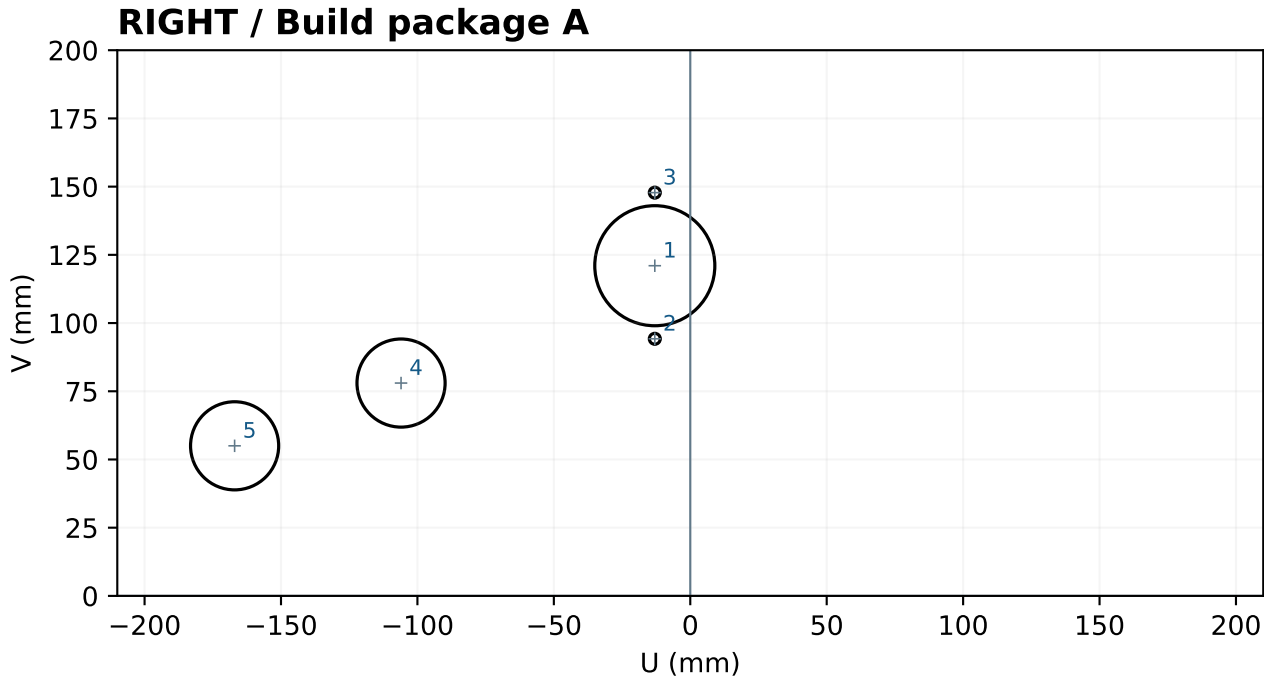

| # | Feature      | U       | V      | Cut size |
|---|--------------|---------|--------|----------|
| 1 | XA outlet    | -13.00  | 121.02 | D44.00   |
| 2 | XA fixing -1 | -13.00  | 94.23  | D4.00    |
| 3 | XA fixing +1 | -13.00  | 147.80 | D4.00    |
| 4 | DC           | -106.00 | 78.01  | D32.30   |
| 5 | USB          | -167.00 | 55.01  | D32.30   |


Outside face view.  $U = -Z$ ;  $V = Y / \cos(0.937 \text{ deg})$ , measured up along wall.  
Origin: wall plane at  $Y=0$  and case centerline.  $Y=0$  is the mounting-panel underside plane; use STEP datums to fixture.  
CUT layer only. REFERENCE/TEXT are not cuts. Drawing not to scale; DXF units = mm.  
Position tolerance  $\pm 0.5 \text{ mm}$ ; Q0 relative pattern  $\pm 0.12 \text{ mm}$ ; XA bore  $\pm 0.15 \text{ mm}$ ; other bores  $\pm 0.1 \text{ mm}$ .  
Review against received parts before machining. Do not machine with equipment or supply connected.

| # | Feature | U      | V     | Cut size |
|---|---------|--------|-------|----------|
| 1 | SUPPLY  | 128.00 | 43.01 | D21.00   |

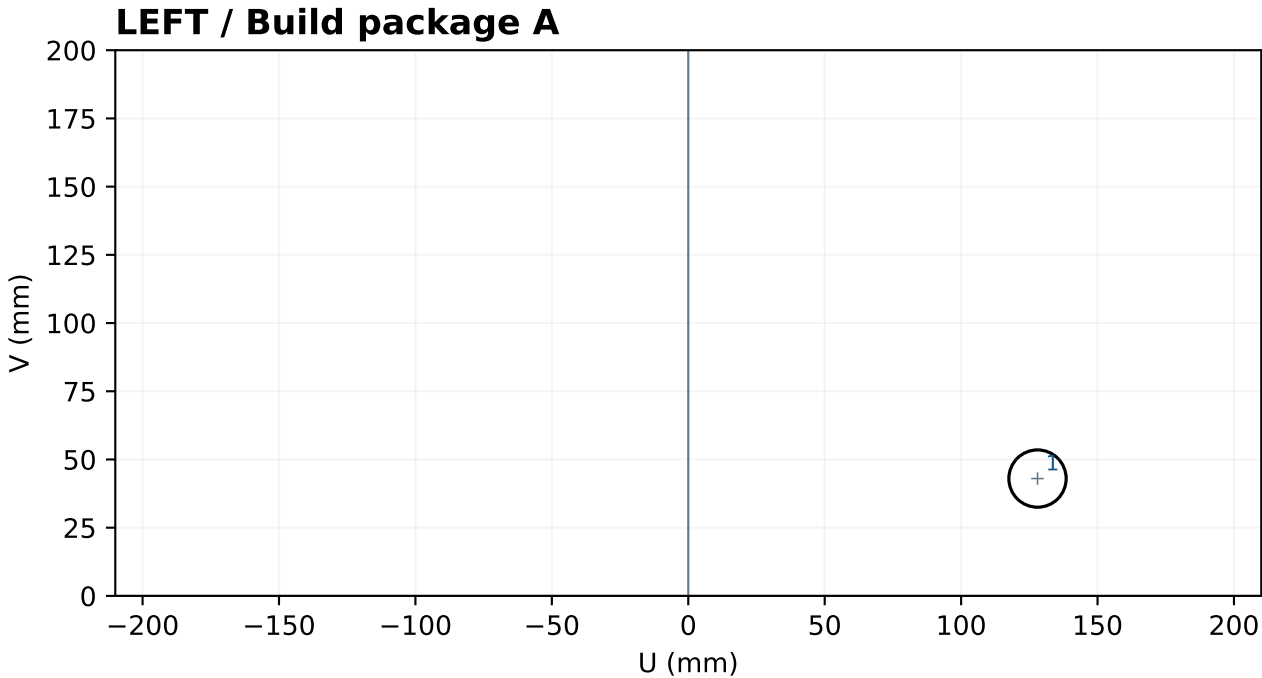


Outside face view.  $U = Z$ ;  $V = Y / \cos(0.937 \text{ deg})$ , measured up along wall.  
Origin: wall plane at  $Y=0$  and case centerline.  $Y=0$  is the mounting-panel underside plane; use STEP datums to fixture.  
CUT layer only. REFERENCE/TEXT are not cuts. Drawing not to scale; DXF units = mm.  
Position tolerance  $\pm 0.5 \text{ mm}$ ; Q0 relative pattern  $\pm 0.12 \text{ mm}$ ; XA bore  $\pm 0.15 \text{ mm}$ ; other bores  $\pm 0.1 \text{ mm}$ .  
Review against received parts before machining. Do not machine with equipment or supply connected.

| # | Feature | U     | V     | Cut size |
|---|---------|-------|-------|----------|
| 1 | OUTPUT  | -0.00 | 36.00 | D21.00   |

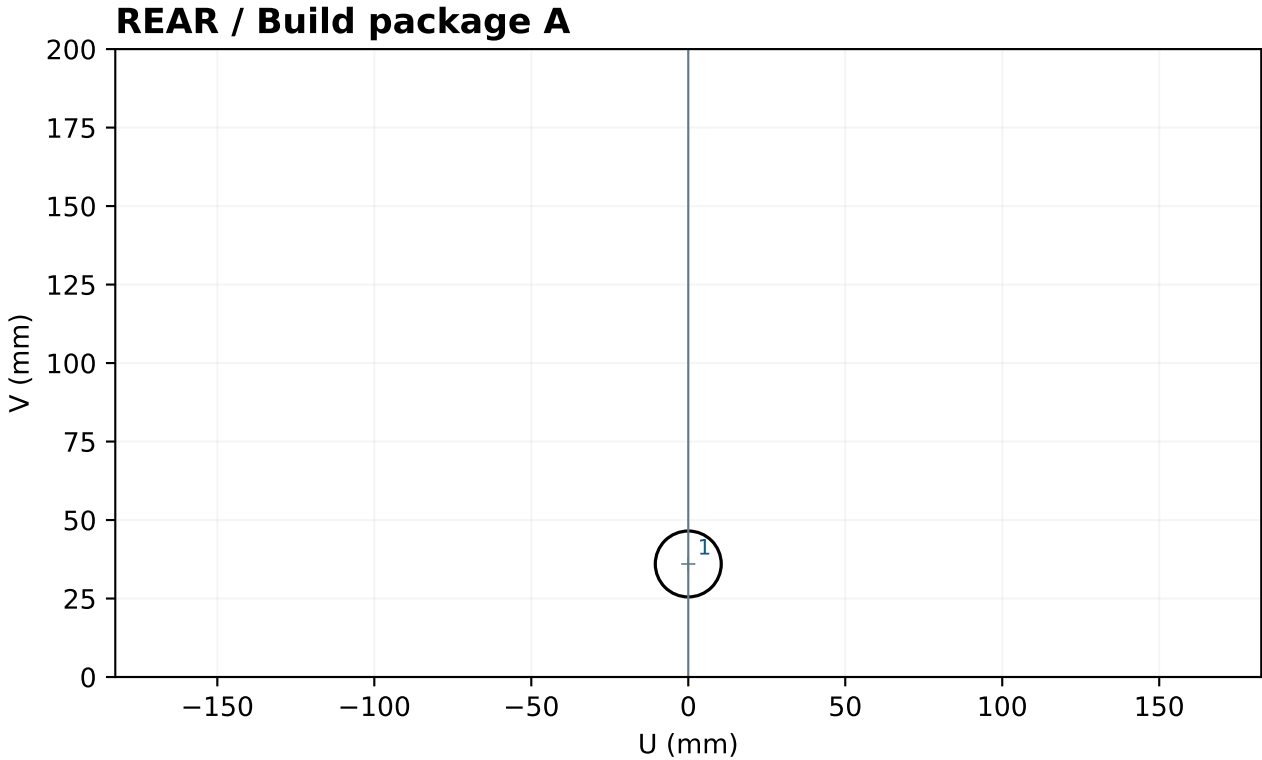

Outside face view.  $U = -X$ ;  $V = Y / \cos(0.937 \text{ deg})$ , measured up along wall.  
Origin: wall plane at  $Y=0$  and case centerline.  $Y=0$  is the mounting-panel underside plane; use STEP datums to fixture.  
CUT layer only. REFERENCE/TEXT are not cuts. Drawing not to scale; DXF units = mm.  
Position tolerance  $\pm 0.5 \text{ mm}$ ; Q0 relative pattern  $\pm 0.12 \text{ mm}$ ; XA bore  $\pm 0.15 \text{ mm}$ ; other bores  $\pm 0.1 \text{ mm}$ .  
Review against received parts before machining. Do not machine with equipment or supply connected.

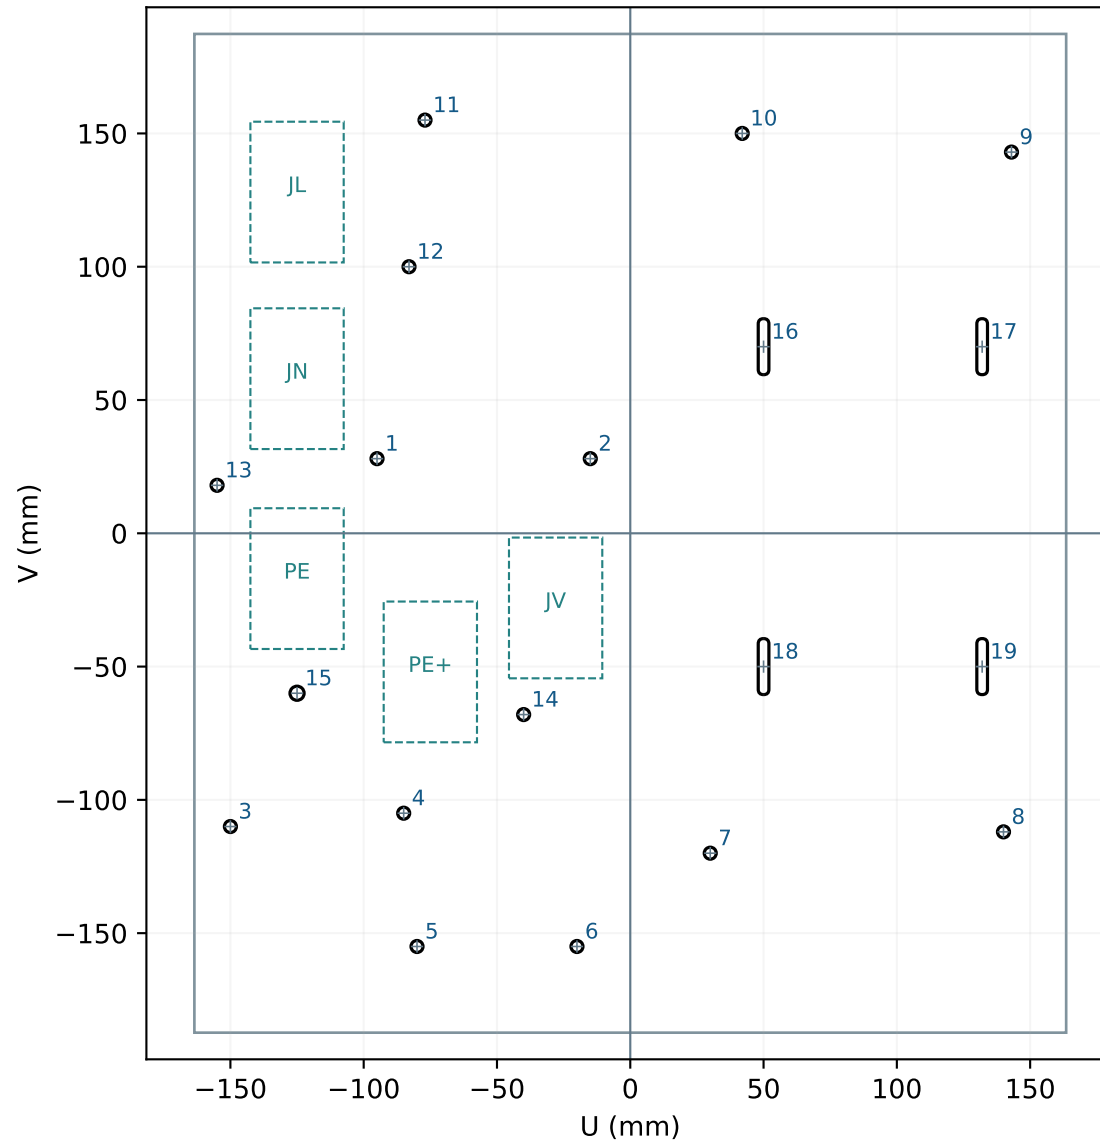**PANEL / Build package A**

| #  | Feature       | U       | V       | Cut size       |
|----|---------------|---------|---------|----------------|
| 1  | Rail fixing 1 | -95.00  | 28.00   | D4.50          |
| 2  | Rail fixing 2 | -15.00  | 28.00   | D4.50          |
| 3  | Tie anchor 1  | -150.00 | -110.00 | D4.50          |
| 4  | Tie anchor 2  | -85.00  | -105.00 | D4.50          |
| 5  | Tie anchor 3  | -80.00  | -155.00 | D4.50          |
| 6  | Tie anchor 4  | -20.00  | -155.00 | D4.50          |
| 7  | Tie anchor 5  | 30.00   | -120.00 | D4.50          |
| 8  | Tie anchor 6  | 140.00  | -112.00 | D4.50          |
| 9  | Tie anchor 7  | 143.00  | 143.00  | D4.50          |
| 10 | Tie anchor 8  | 42.00   | 150.00  | D4.50          |
| 11 | Tie anchor 9  | -77.00  | 155.00  | D4.50          |
| 12 | Tie anchor 10 | -83.00  | 100.00  | D4.50          |
| 13 | Tie anchor 11 | -155.00 | 18.00   | D4.50          |
| 14 | Tie anchor 12 | -40.00  | -68.00  | D4.50          |
| 15 | Panel PE bond | -125.00 | -60.00  | D5.30          |
| 16 | Strap slot 1  | 50.00   | 70.00   | 21 x 4 slot R2 |
| 17 | Strap slot 2  | 132.00  | 70.00   | 21 x 4 slot R2 |
| 18 | Strap slot 3  | 50.00   | -50.00  | 21 x 4 slot R2 |
| 19 | Strap slot 4  | 132.00  | -50.00  | 21 x 4 slot R2 |

View from lid. U = X; V = -Z. Origin: center of 14R1513 blank. Rear = +V. Retain factory fixing holes.

Dashed WAGO carrier envelopes: locate as shown, then transfer-drill two D3.3 holes per actual carrier; do not cut outlines.

CUT layer only. REFERENCE/TEXT are not cuts. Drawing not to scale; DXF units = mm.

Position tolerance +/-0.5 mm; Q0 relative pattern +/-0.12 mm; XA bore +/-0.15 mm; other bores +/-0.1 mm.

Review against received parts before machining. Do not machine with equipment or supply connected.