



#	Feature	U	V	Cut size
1	Q0 toggle	-93.00	75.01	18.60 x 46.00
2	Q0 fixing -1	-131.00	75.01	D3.30
3	Q0 fixing +1	-55.00	75.01	D3.30

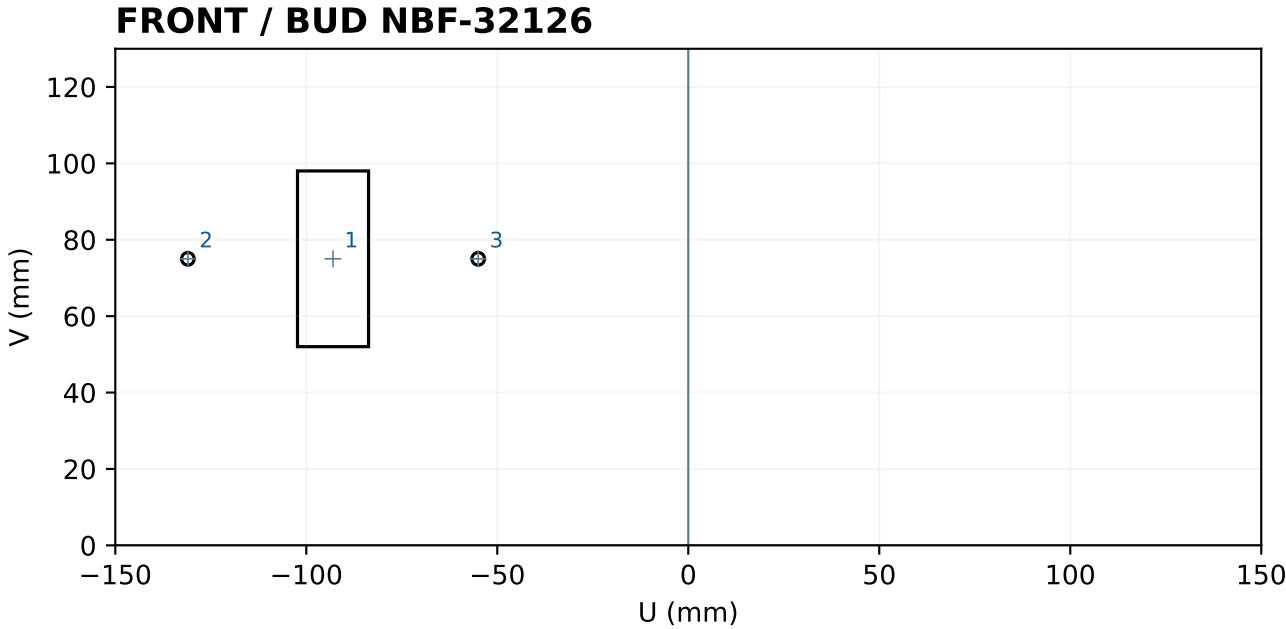


Outside face view. $U = X$; $V = Y / \cos(1 \text{ deg})$, measured up along wall.
Origin: wall plane at $Y=0$ and case centerline. $Y=0$ is the mounting-panel underside plane; use STEP datums to fixture.
CUT layer only. REFERENCE/TEXT are not cuts. Drawing not to scale; DXF units = mm.
Position tolerance $\pm 0.5 \text{ mm}$; Q0 relative pattern $\pm 0.12 \text{ mm}$; other bores $\pm 0.1 \text{ mm}$.
Review against received parts before machining. Do not machine with equipment or supply connected.

#	Feature	U	V	Cut size
1	USB cable exit	-167.00	55.01	D22.20

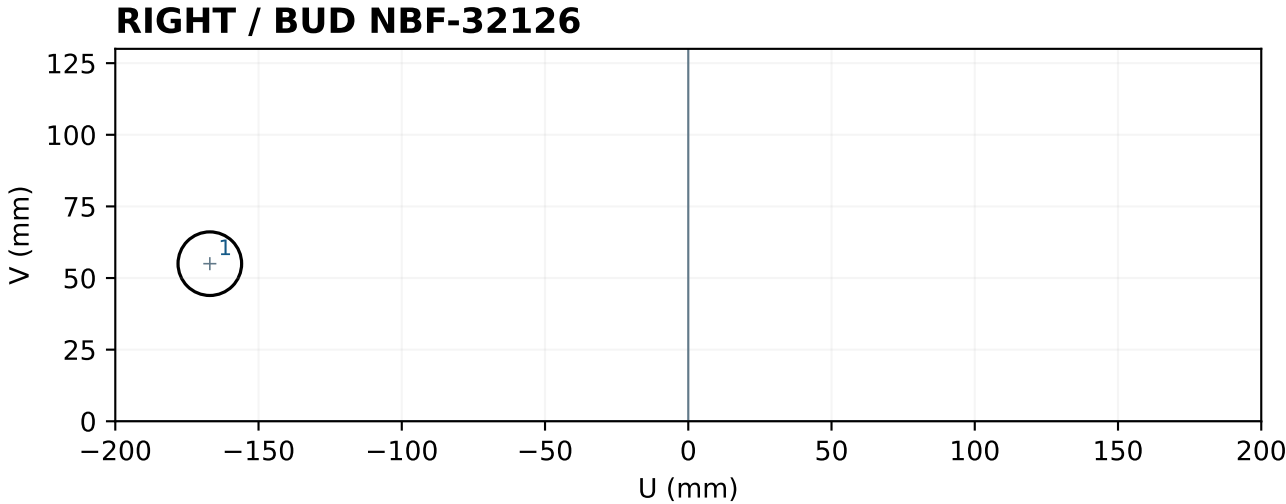


Outside face view. $U = -Z$; $V = Y / \cos(1 \text{ deg})$, measured up along wall.
Origin: wall plane at $Y=0$ and case centerline. $Y=0$ is the mounting-panel underside plane; use STEP datums to fixture.
CUT layer only. REFERENCE/TEXT are not cuts. Drawing not to scale; DXF units = mm.
Position tolerance $\pm 0.5 \text{ mm}$; Q0 relative pattern $\pm 0.12 \text{ mm}$; other bores $\pm 0.1 \text{ mm}$.
Review against received parts before machining. Do not machine with equipment or supply connected.

#	Feature	U	V	Cut size
1	SUPPLY	128.00	43.01	D21.00

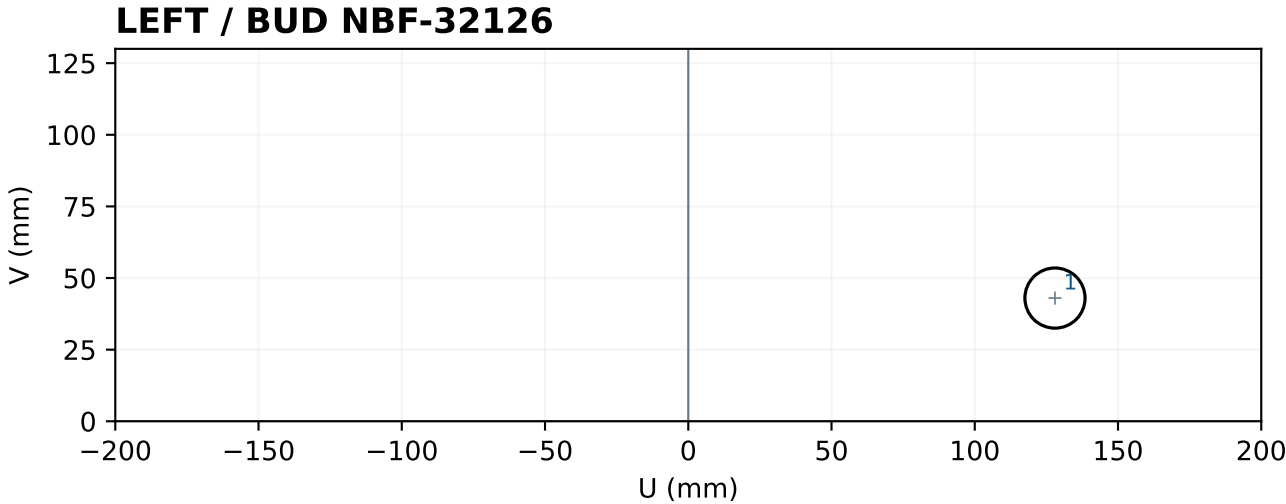


Outside face view. $U = Z$; $V = Y / \cos(1 \text{ deg})$, measured up along wall.
Origin: wall plane at $Y=0$ and case centerline. $Y=0$ is the mounting-panel underside plane; use STEP datums to fixture.
CUT layer only. REFERENCE/TEXT are not cuts. Drawing not to scale; DXF units = mm.
Position tolerance ± 0.5 mm; Q0 relative pattern ± 0.12 mm; other bores ± 0.1 mm.
Review against received parts before machining. Do not machine with equipment or supply connected.

#	Feature	U	V	Cut size
1	OUTPUT	-0.00	36.01	D21.00

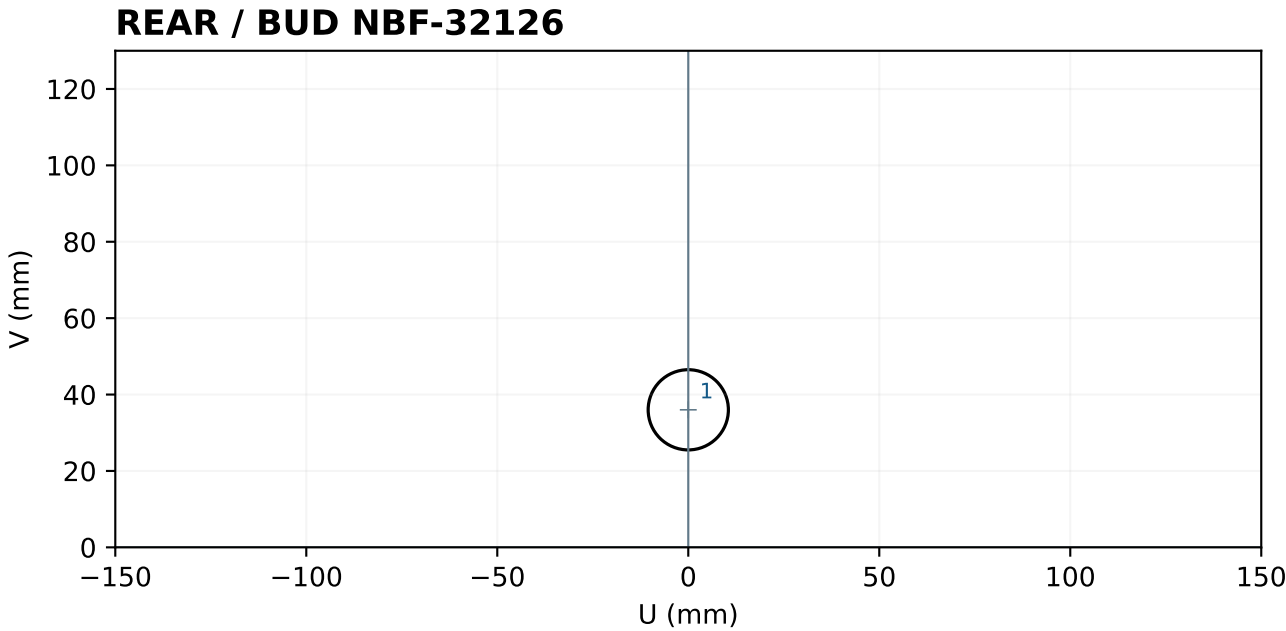

Outside face view. $U = -X$; $V = Y / \cos(1 \text{ deg})$, measured up along wall.
Origin: wall plane at $Y=0$ and case centerline. $Y=0$ is the mounting-panel underside plane; use STEP datums to fixture.
CUT layer only. REFERENCE/TEXT are not cuts. Drawing not to scale; DXF units = mm.
Position tolerance $\pm 0.5 \text{ mm}$; Q0 relative pattern $\pm 0.12 \text{ mm}$; other bores $\pm 0.1 \text{ mm}$.
Review against received parts before machining. Do not machine with equipment or supply connected.

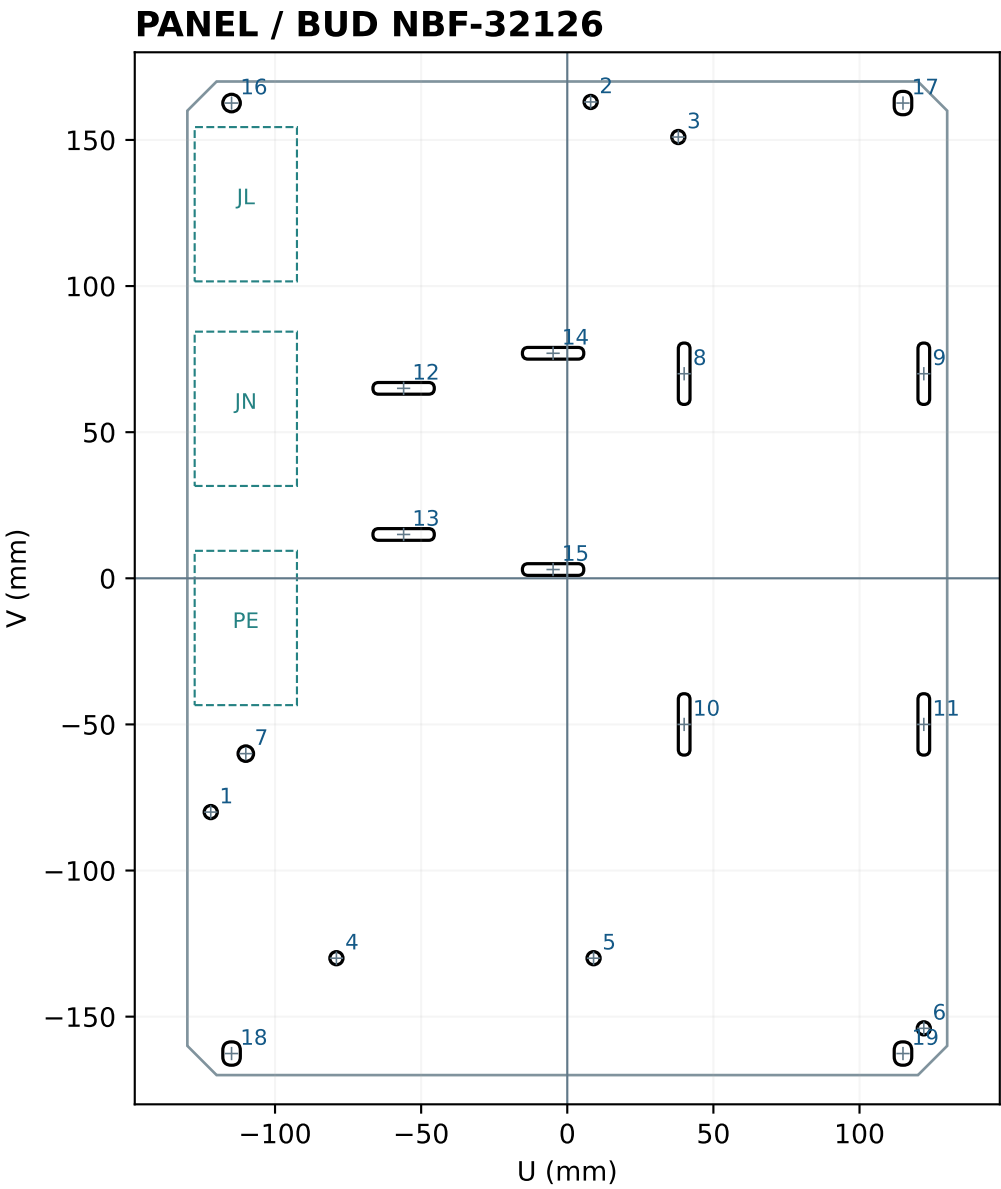


#	Feature	U	V	Cut size
1	Tie anchor 1	-122.00	-80.00	D4.50
2	Tie anchor 2	8.00	163.00	D4.50
3	Tie anchor 3	38.00	151.00	D4.50
4	Tie anchor 4	-79.00	-130.00	D4.50
5	Tie anchor 5	9.00	-130.00	D4.50
6	Tie anchor 6	122.00	-154.00	D4.50
7	Panel PE bond	-110.00	-60.00	D5.30
8	Strap slot 1	40.00	70.00	21 x 4 slot R2
9	Strap slot 2	122.00	70.00	21 x 4 slot R2
10	Strap slot 3	40.00	-50.00	21 x 4 slot R2
11	Strap slot 4	122.00	-50.00	21 x 4 slot R2
12	Power strap slot 1	-56.00	65.00	21 x 4 slot R2
13	Power strap slot 2	-56.00	15.00	21 x 4 slot R2
14	Power strap slot 3	-4.85	77.00	21 x 4 slot R2
15	Power strap slot 4	-4.85	3.00	21 x 4 slot R2
16	Panel mounting 1	-114.88	162.62	D6.00
17	Panel mounting 2	114.88	162.62	8 x 6 slot R3
18	Panel mounting 3	-114.88	-162.62	8 x 6 slot R3
19	Panel mounting 4	114.88	-162.62	8 x 6 slot R3

View from lid. U = X; V = -Z. Origin: center of aluminum template. Rear = +V. 260 x 340 mm blank; four 10 mm corner chamfers. Confirm M5 support pattern.
Dashed WAGO carrier envelopes: locate as shown, then transfer-drill two D3.3 holes per actual carrier; do not cut outlines.
CUT layer only. REFERENCE/TEXT are not cuts. Drawing not to scale; DXF units = mm.
Position tolerance +/-0.5 mm; Q0 relative pattern +/-0.12 mm; other bores +/-0.1 mm.
Review against received parts before machining. Do not machine with equipment or supply connected.

Q0 METAL BRACKET / PROVISIONAL FLAT DEVELOPMENT

Blank 210.55 × 40 mm; t=1.89738 mm; inside R2; K=0.4. Four 90° bends; B1/B4 oppose B2/B3.

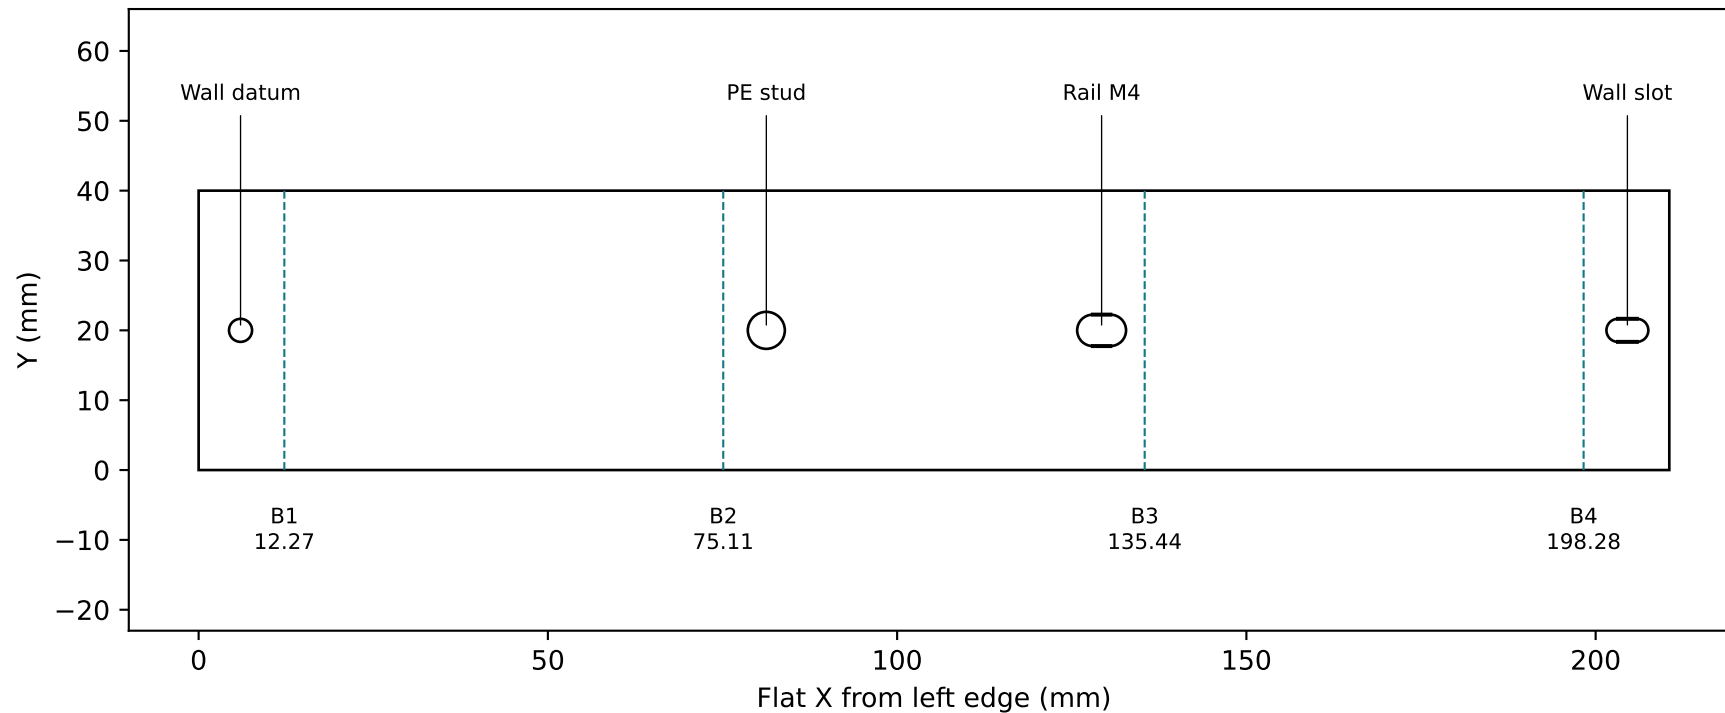

Feature	Flat X	Y	Cut
Wall datum	6.00	20.00	Ø3.3
PE stud	81.27	20.00	Ø5.3
Rail M4	129.27	20.00	7 × 4.5 slot
Wall slot	204.55	20.00	6 × 3.3 slot

SHOP TRIAL REQUIRED: measure stock and make a bend coupon; adjust the flat pattern for actual tooling/springback.
Form to STEP: 88 mm overall width, 60 mm arm opening, 64.40 mm inner web depth, 40 mm height; wall holes 76 mm apart.
Rail holes are 48 mm apart on the web. Cut 60 mm of purchased 250 mm rail; deburr and transfer-drill away from Q0/stops.
CUT contains only outline and holes; BEND_REFERENCE/TEXT must not be cut. Accept both metal bonds and operator fit.