



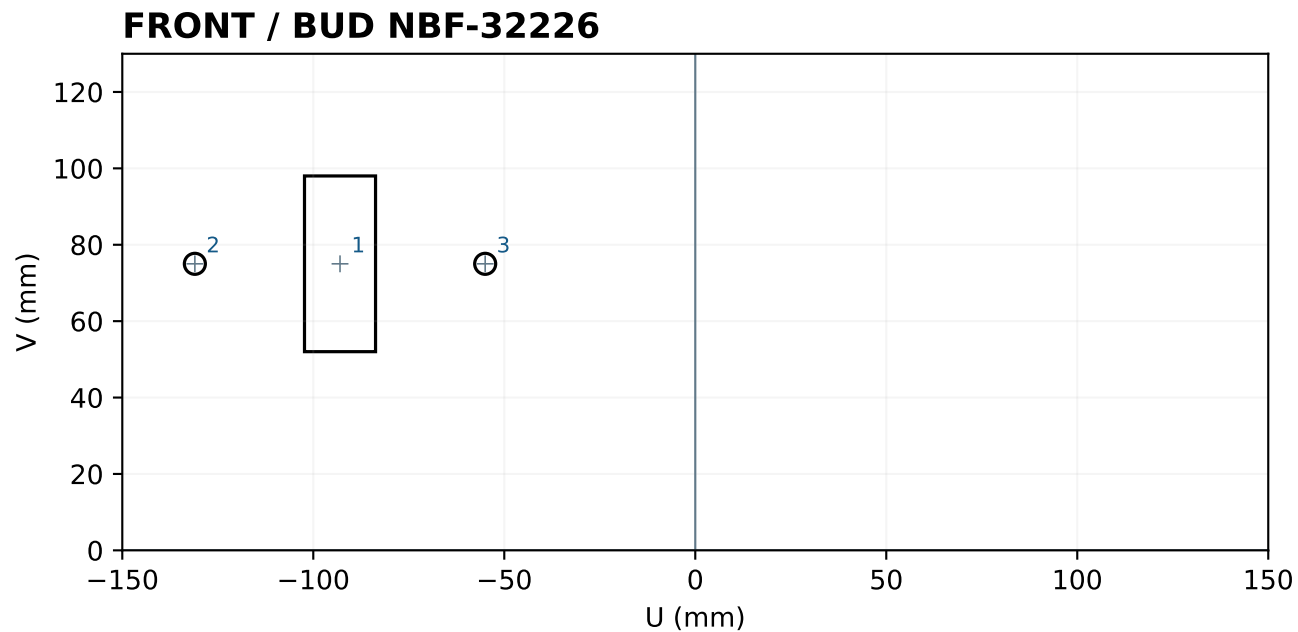

#	Feature	U	V	Cut size
1	Q0 toggle	-93.00	75.01	18.60 x 46.00
2	Q0 fixing -1	-131.00	75.01	D5.50
3	Q0 fixing +1	-55.00	75.01	D5.50


Outside face view. $U = X$; $V = Y / \cos(1 \text{ deg})$, measured up along wall.
Origin: wall plane at $Y=0$ and case centerline. $Y=0$ is the mounting-panel underside plane; use STEP datums to fixture.
CUT layer only. REFERENCE/TEXT are not cuts. Drawing not to scale; DXF units = mm.
Position tolerance ± 0.5 mm; Q0 relative pattern ± 0.12 mm; other bores ± 0.1 mm.
Review against received parts before machining. Do not machine with equipment or supply connected.

#	Feature	U	V	Cut size
1	USB cable exit	-167.00	55.01	D22.20

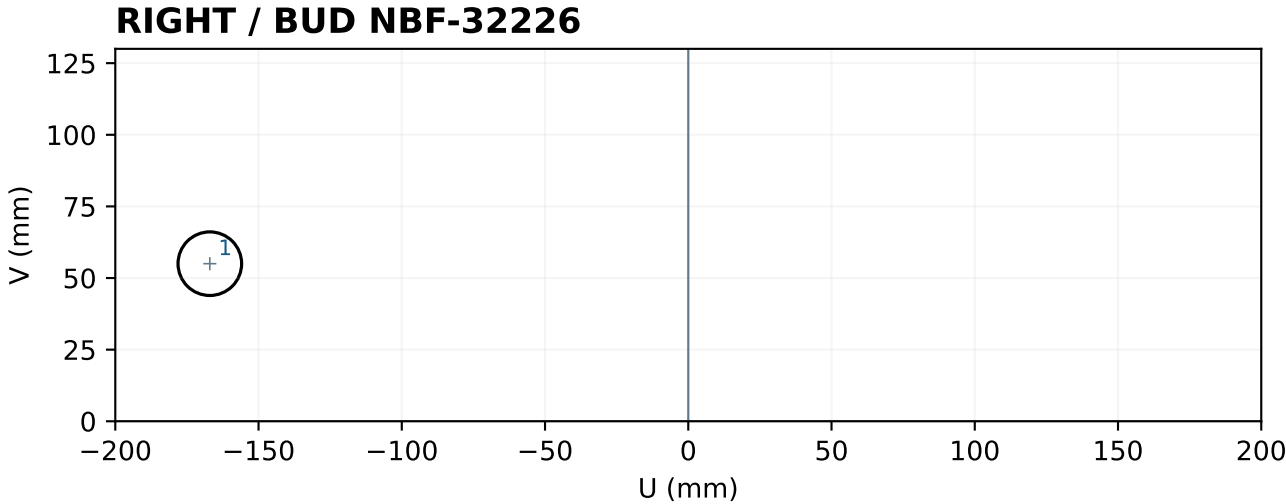


Outside face view. $U = -Z$; $V = Y / \cos(1 \text{ deg})$, measured up along wall.
Origin: wall plane at $Y=0$ and case centerline. $Y=0$ is the mounting-panel underside plane; use STEP datums to fixture.
CUT layer only. REFERENCE/TEXT are not cuts. Drawing not to scale; DXF units = mm.
Position tolerance $\pm 0.5 \text{ mm}$; Q0 relative pattern $\pm 0.12 \text{ mm}$; other bores $\pm 0.1 \text{ mm}$.
Review against received parts before machining. Do not machine with equipment or supply connected.

#	Feature	U	V	Cut size
1	SUPPLY	128.00	43.01	D22.20

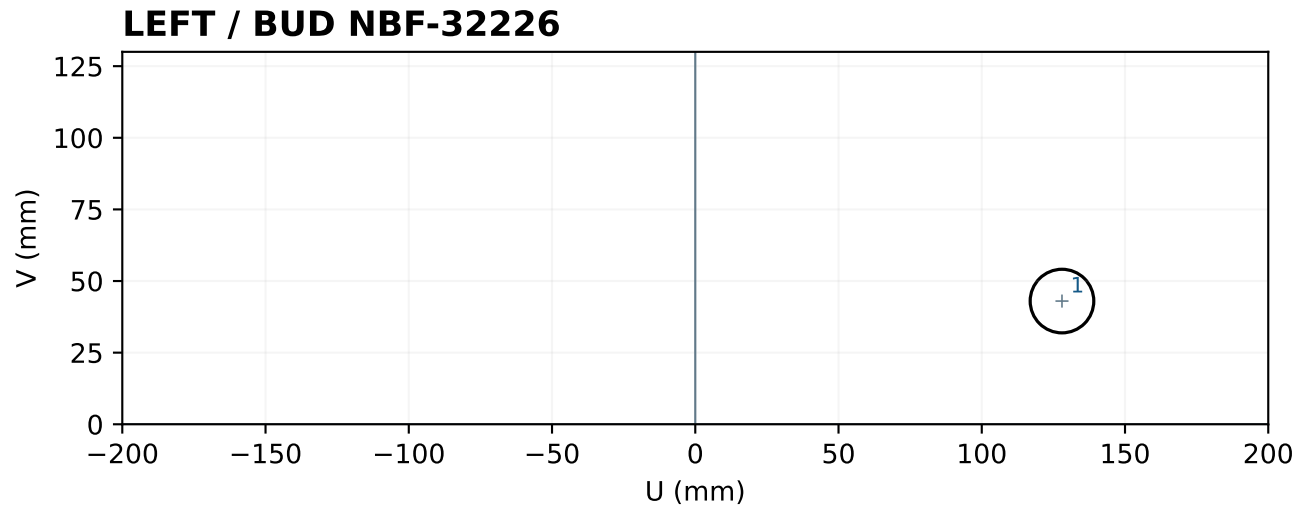


Outside face view. $U = Z$; $V = Y / \cos(1 \text{ deg})$, measured up along wall.
Origin: wall plane at $Y=0$ and case centerline. $Y=0$ is the mounting-panel underside plane; use STEP datums to fixture.
CUT layer only. REFERENCE/TEXT are not cuts. Drawing not to scale; DXF units = mm.
Position tolerance ± 0.5 mm; Q0 relative pattern ± 0.12 mm; other bores ± 0.1 mm.
Review against received parts before machining. Do not machine with equipment or supply connected.

#	Feature	U	V	Cut size
1	OUTPUT	-0.00	36.01	D22.20

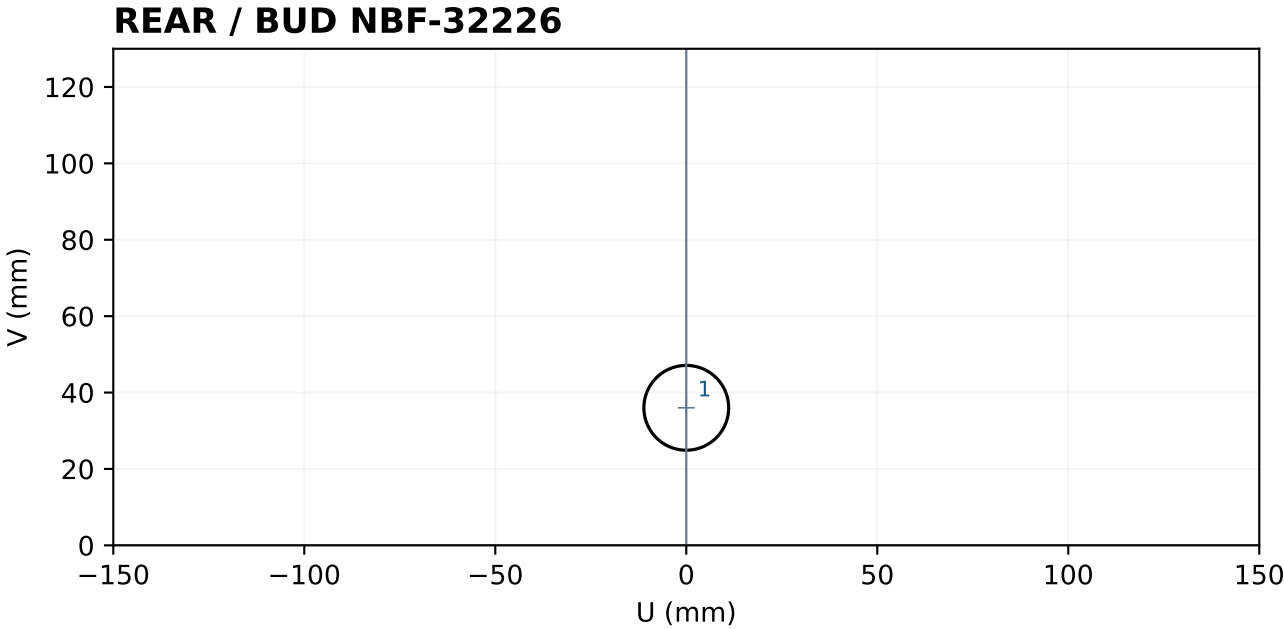

Outside face view. $U = -X$; $V = Y / \cos(1 \text{ deg})$, measured up along wall.
Origin: wall plane at $Y=0$ and case centerline. $Y=0$ is the mounting-panel underside plane; use STEP datums to fixture.
CUT layer only. REFERENCE/TEXT are not cuts. Drawing not to scale; DXF units = mm.
Position tolerance $\pm 0.5 \text{ mm}$; Q0 relative pattern $\pm 0.12 \text{ mm}$; other bores $\pm 0.1 \text{ mm}$.
Review against received parts before machining. Do not machine with equipment or supply connected.

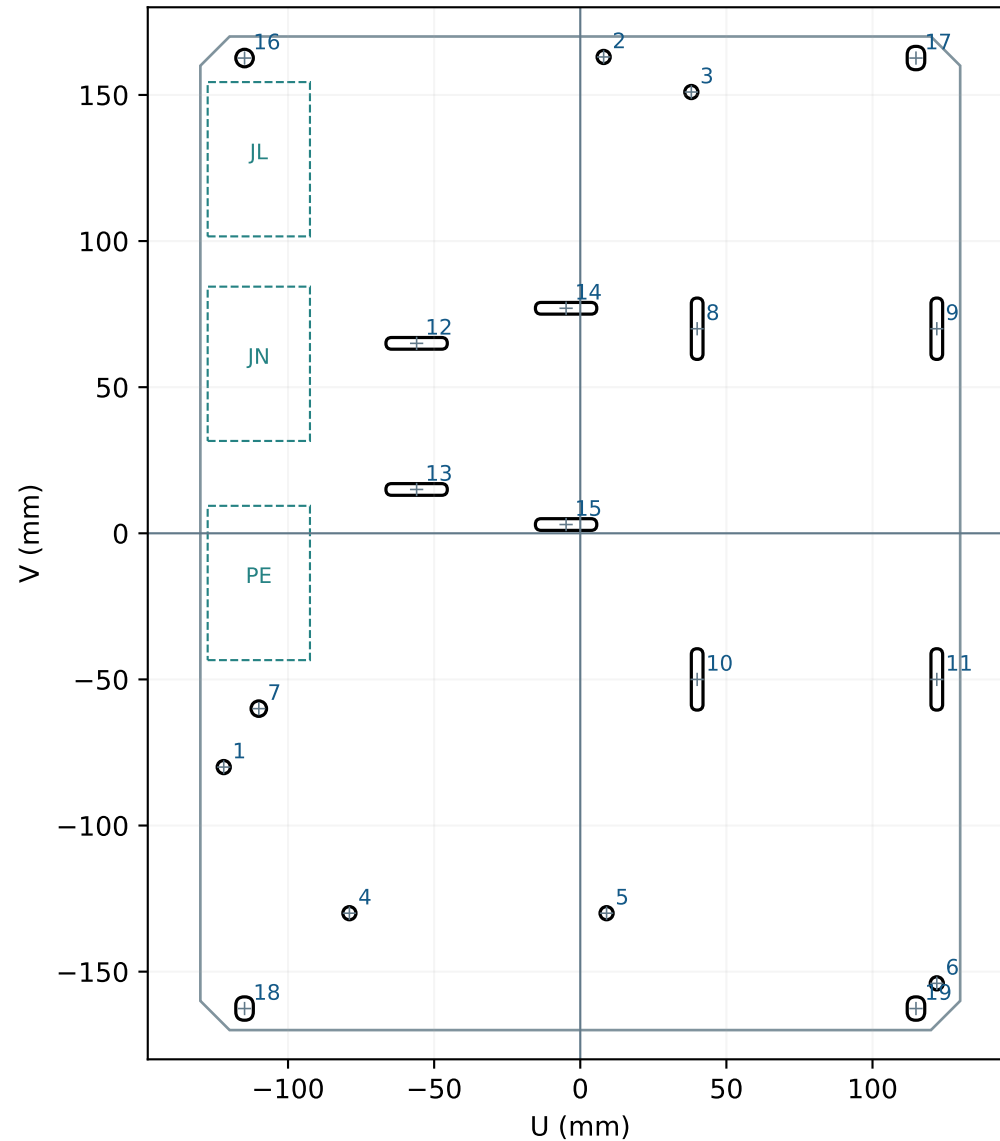PANEL / BUD NBF-32226

#	Feature	U	V	Cut size
1	Tie anchor 1	-122.00	-80.00	D4.50
2	Tie anchor 2	8.00	163.00	D4.50
3	Tie anchor 3	38.00	151.00	D4.50
4	Tie anchor 4	-79.00	-130.00	D4.50
5	Tie anchor 5	9.00	-130.00	D4.50
6	Tie anchor 6	122.00	-154.00	D4.50
7	Panel PE bond	-110.00	-60.00	D5.30
8	Strap slot 1	40.00	70.00	21 x 4 slot R2
9	Strap slot 2	122.00	70.00	21 x 4 slot R2
10	Strap slot 3	40.00	-50.00	21 x 4 slot R2
11	Strap slot 4	122.00	-50.00	21 x 4 slot R2
12	Power strap slot 1	-56.00	65.00	21 x 4 slot R2
13	Power strap slot 2	-56.00	15.00	21 x 4 slot R2
14	Power strap slot 3	-4.85	77.00	21 x 4 slot R2
15	Power strap slot 4	-4.85	3.00	21 x 4 slot R2
16	Panel mounting 1	-114.88	162.62	D6.00
17	Panel mounting 2	114.88	162.62	8 x 6 slot R3
18	Panel mounting 3	-114.88	-162.62	8 x 6 slot R3
19	Panel mounting 4	114.88	-162.62	8 x 6 slot R3

View from lid. U = X; V = -Z. Origin: center of aluminum template. Rear = +V. 260 x 340 mm blank; four 10 mm corner chamfers. Confirm M5 support pattern.

Dashed WAGO carrier envelopes: locate as shown, then transfer-drill two D3.3 holes per actual carrier; do not cut outlines.


CUT layer only. REFERENCE/TEXT are not cuts. Drawing not to scale; DXF units = mm.

Position tolerance +/-0.5 mm; Q0 relative pattern +/-0.12 mm; other bores +/-0.1 mm.

Review against received parts before machining. Do not machine with equipment or supply connected.

Q0 FLAT ALUMINUM BRIDGE / CUT AND DRILL

Blank 88 × 40 mm; nominal t=1.89738 mm. Two purchased 65 mm M5 posts. No bends or tapped holes.

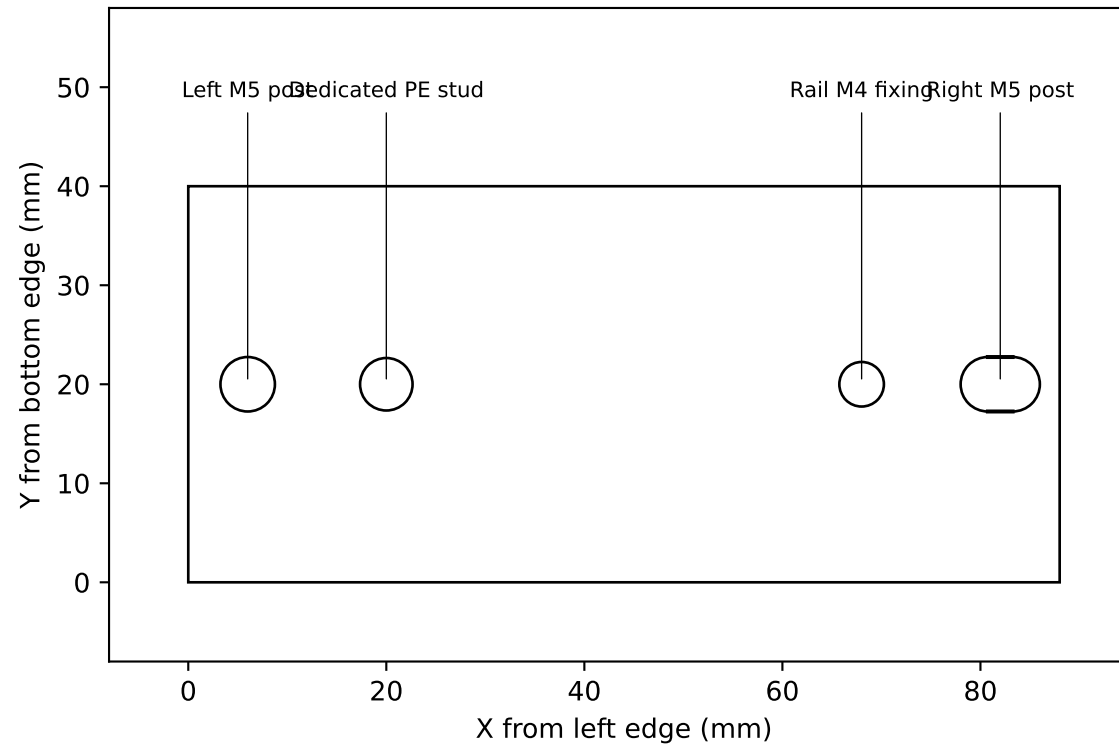

Feature	X	Y	Cut
Left M5 post	6.00	20.00	Ø5.5
Dedicated PE stud	20.00	20.00	Ø5.3
Rail M4 fixing	68.00	20.00	Ø4.5
Right M5 post	82.00	20.00	8 × 5.5 slot

Measure offered aluminum before cutting; update sheet thickness and screw engagement if needed. Deburr all edges.
Right slot: drill two Ø5.5 bores 2.5 mm apart and join; final centers span 76 mm. Hole position ±0.12 mm.
Cut 60 mm from purchased 250 mm rail; transfer-drill at ±24 mm away from Q0 and end stops.
CUT layer contains only the outline and holes. Confirm operator travel, post retention and accepted PE contact stack.