



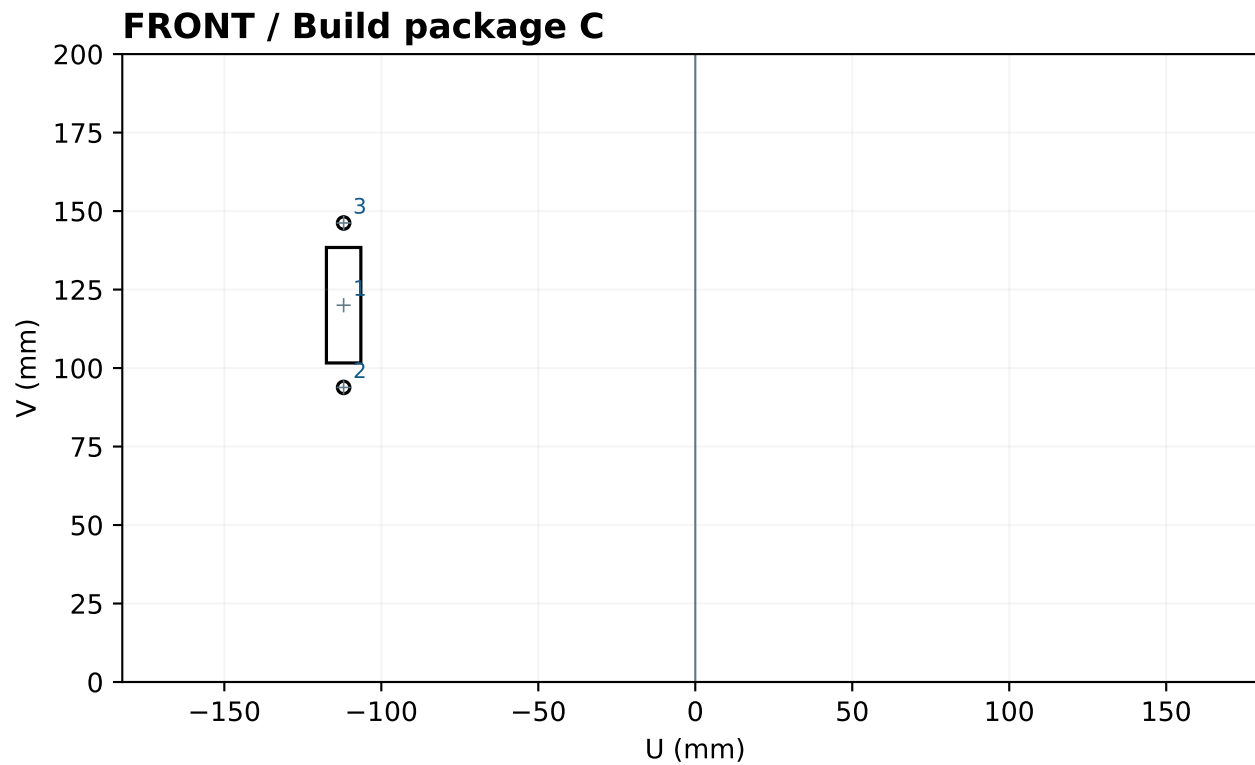

#	Feature	U	V	Cut size
1	Q0 toggle	-112.00	120.02	10.97 x 36.78
2	Q0 fixing -1	-112.00	93.83	D3.96
3	Q0 fixing +1	-112.00	146.20	D3.96


Outside face view. $U = X$; $V = Y / \cos(0.937 \text{ deg})$, measured up along wall.
Origin: wall plane at $Y=0$ and case centerline. $Y=0$ is the mounting-panel underside plane; use STEP datums to fixture.
CUT layer only. REFERENCE/TEXT are not cuts. Drawing not to scale; DXF units = mm.
Position tolerance ± 0.5 mm; Q0 relative pattern ± 0.12 mm; USB relative pattern ± 0.1 mm; other bores ± 0.1 mm.
Review against received parts before machining. Do not machine with equipment or supply connected.

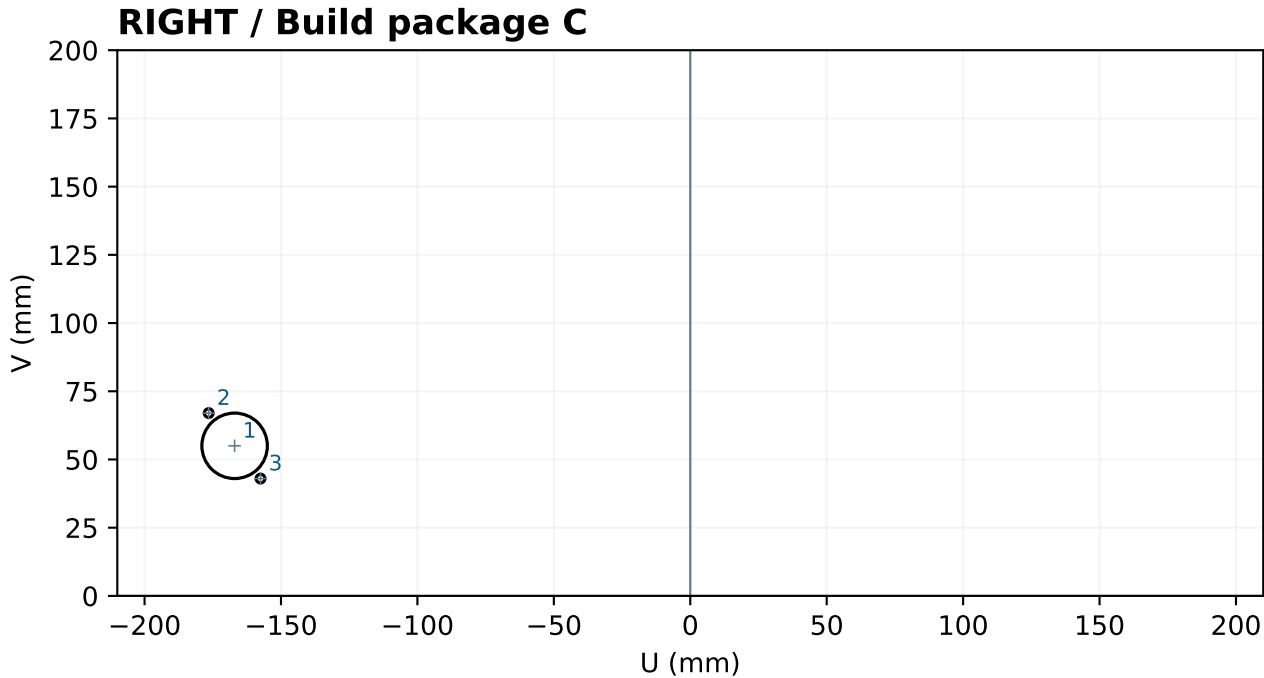

#	Feature	U	V	Cut size
1	USB service	-167.00	55.01	D24.00
2	USB fixing 1	-176.50	67.01	D3.20
3	USB fixing 2	-157.50	43.01	D3.20


Outside face view. $U = -Z$; $V = Y / \cos(0.937 \text{ deg})$, measured up along wall.
Origin: wall plane at $Y=0$ and case centerline. $Y=0$ is the mounting-panel underside plane; use STEP datums to fixture.
CUT layer only. REFERENCE/TEXT are not cuts. Drawing not to scale; DXF units = mm.
Position tolerance $\pm 0.5 \text{ mm}$; Q0 relative pattern $\pm 0.12 \text{ mm}$; USB relative pattern $\pm 0.1 \text{ mm}$; other bores $\pm 0.1 \text{ mm}$.
Review against received parts before machining. Do not machine with equipment or supply connected.

#	Feature	U	V	Cut size
1	SUPPLY	128.00	43.01	D21.00

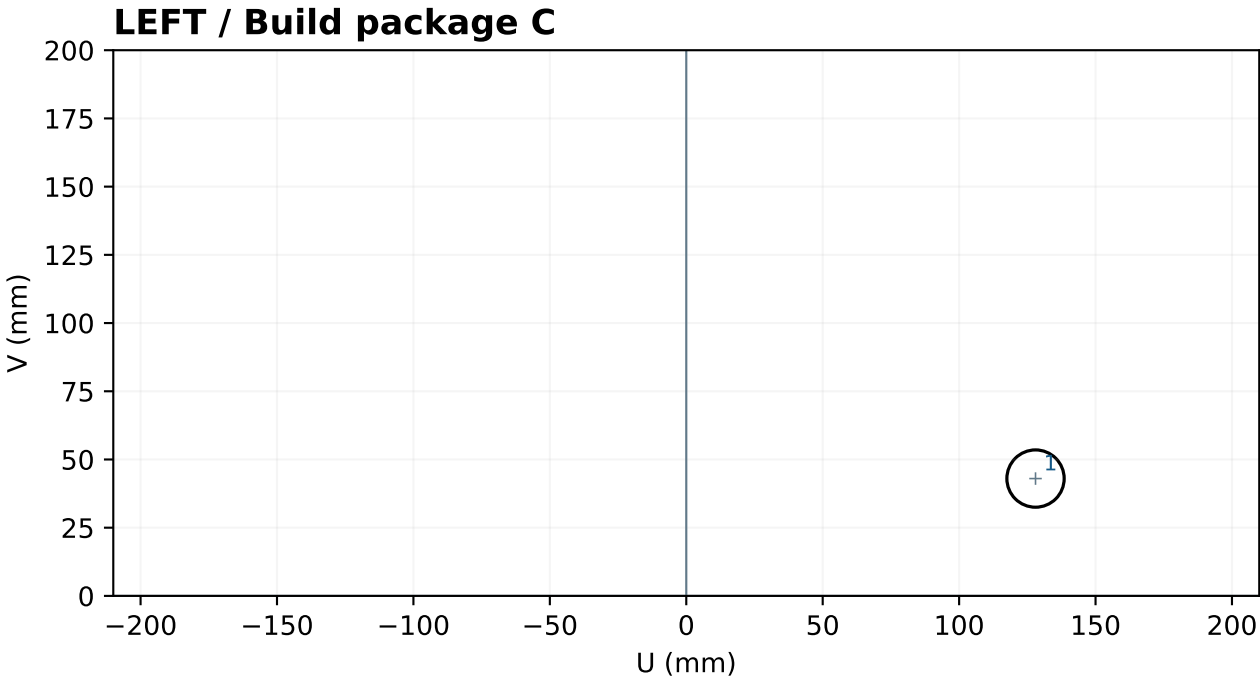


Outside face view. $U = Z$; $V = Y / \cos(0.937 \text{ deg})$, measured up along wall.
Origin: wall plane at $Y=0$ and case centerline. $Y=0$ is the mounting-panel underside plane; use STEP datums to fixture.
CUT layer only. REFERENCE/TEXT are not cuts. Drawing not to scale; DXF units = mm.
Position tolerance $\pm 0.5 \text{ mm}$; Q0 relative pattern $\pm 0.12 \text{ mm}$; USB relative pattern $\pm 0.1 \text{ mm}$; other bores $\pm 0.1 \text{ mm}$.
Review against received parts before machining. Do not machine with equipment or supply connected.

#	Feature	U	V	Cut size
1	OUTPUT	-0.00	36.00	D21.00

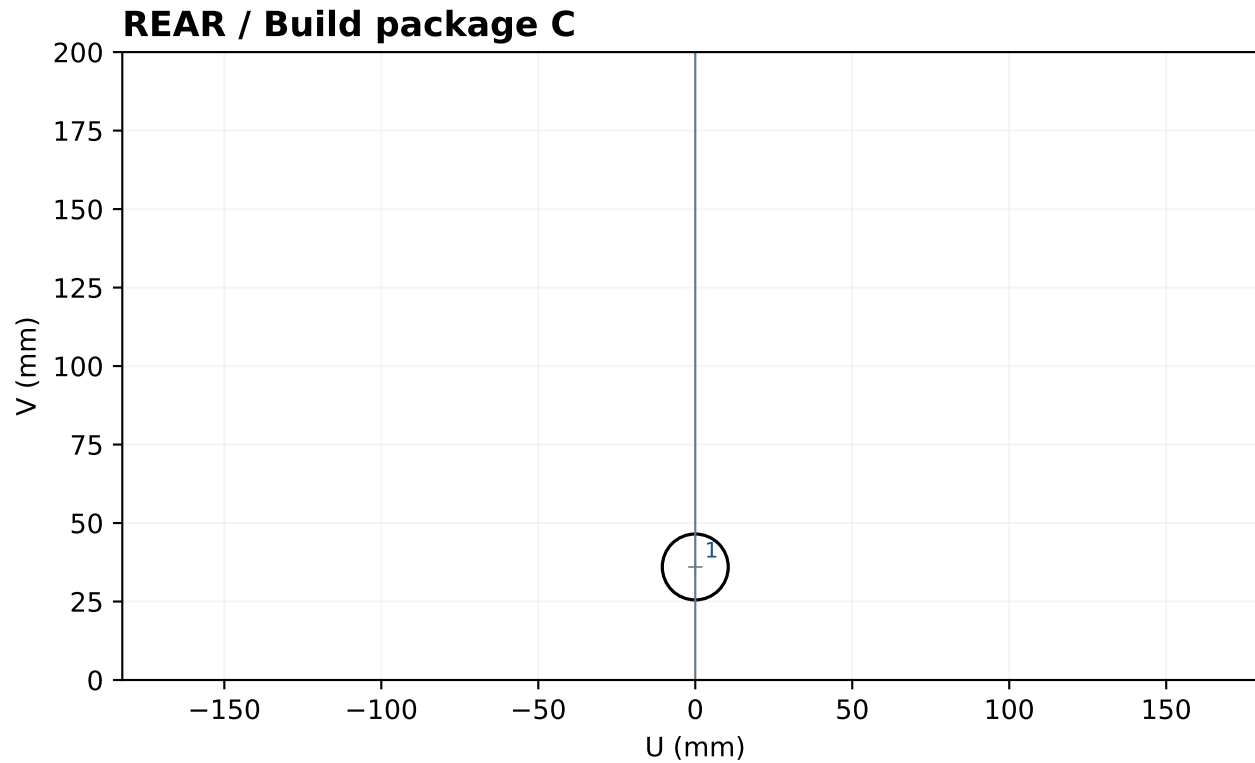

Outside face view. $U = -X$; $V = Y / \cos(0.937 \text{ deg})$, measured up along wall.
Origin: wall plane at $Y=0$ and case centerline. $Y=0$ is the mounting-panel underside plane; use STEP datums to fixture.
CUT layer only. REFERENCE/TEXT are not cuts. Drawing not to scale; DXF units = mm.
Position tolerance ± 0.5 mm; Q0 relative pattern ± 0.12 mm; USB relative pattern ± 0.1 mm; other bores ± 0.1 mm.
Review against received parts before machining. Do not machine with equipment or supply connected.

PANEL / Build package C

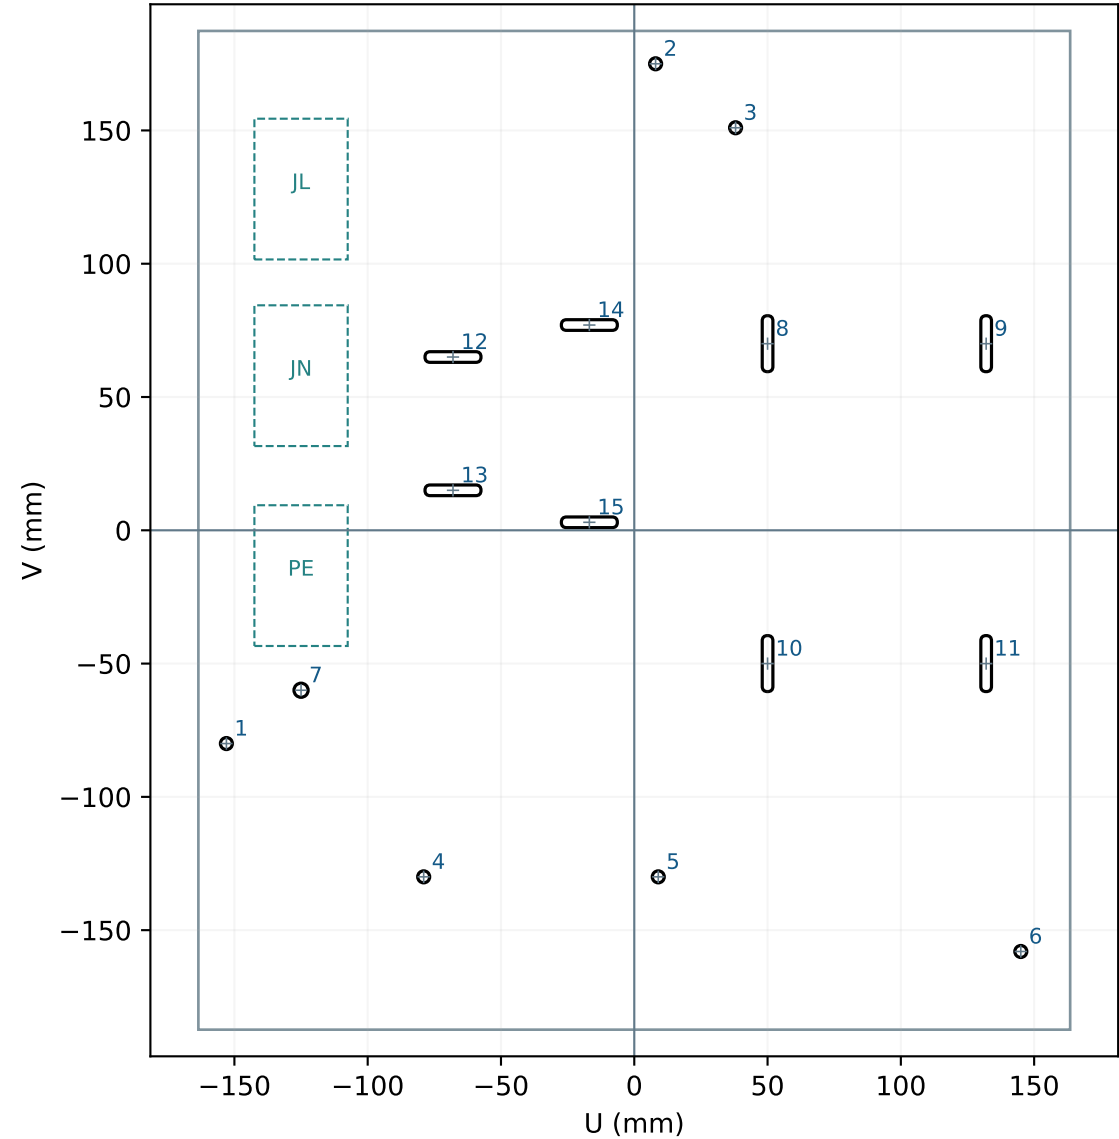

#	Feature	U	V	Cut size
1	Tie anchor 1	-153.00	-80.00	D4.50
2	Tie anchor 2	8.00	175.00	D4.50
3	Tie anchor 3	38.00	151.00	D4.50
4	Tie anchor 4	-79.00	-130.00	D4.50
5	Tie anchor 5	9.00	-130.00	D4.50
6	Tie anchor 6	145.00	-158.00	D4.50
7	Panel PE bond	-125.00	-60.00	D5.30
8	Strap slot 1	50.00	70.00	21 x 4 slot R2
9	Strap slot 2	132.00	70.00	21 x 4 slot R2
10	Strap slot 3	50.00	-50.00	21 x 4 slot R2
11	Strap slot 4	132.00	-50.00	21 x 4 slot R2
12	Power strap slot 1	-68.00	65.00	21 x 4 slot R2
13	Power strap slot 2	-68.00	15.00	21 x 4 slot R2
14	Power strap slot 3	-16.85	77.00	21 x 4 slot R2
15	Power strap slot 4	-16.85	3.00	21 x 4 slot R2

View from lid. U = X; V = -Z. Origin: center of aluminum template. Rear = +V. Measure stock; transfer enclosure-support pattern.
Dashed WAGO carrier envelopes: locate as shown, then transfer-drill two D3.3 holes per actual carrier; do not cut outlines.
CUT layer only. REFERENCE/TEXT are not cuts. Drawing not to scale; DXF units = mm.
Position tolerance +/-0.5 mm; Q0 relative pattern +/-0.12 mm; USB relative pattern +/-0.1 mm; other bores +/-0.1 mm.
Review against received parts before machining. Do not machine with equipment or supply connected.