



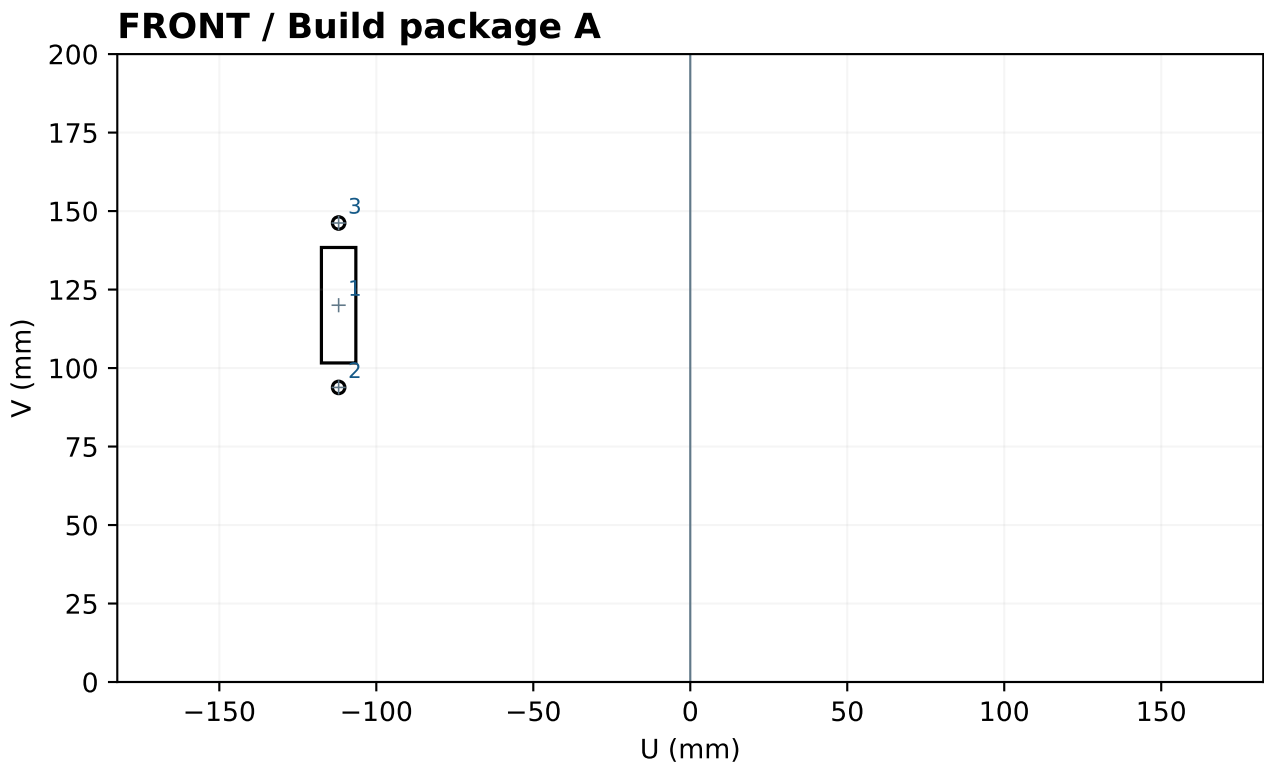

#	Feature	U	V	Cut size
1	Q0 toggle	-112.00	120.02	10.97 x 36.78
2	Q0 fixing -1	-112.00	93.83	D3.96
3	Q0 fixing +1	-112.00	146.20	D3.96


Outside face view. $U = X$; $V = Y / \cos(0.937 \text{ deg})$, measured up along wall.
Origin: wall plane at $Y=0$ and case centerline. $Y=0$ is the mounting-panel underside plane; use STEP datums to fixture.
CUT layer only. REFERENCE/TEXT are not cuts. Drawing not to scale; DXF units = mm.
Position tolerance $\pm 0.5 \text{ mm}$; Q0 relative pattern $\pm 0.12 \text{ mm}$; XA bore $\pm 0.15 \text{ mm}$; other bores $\pm 0.1 \text{ mm}$.
Review against received parts before machining. Do not machine with equipment or supply connected.

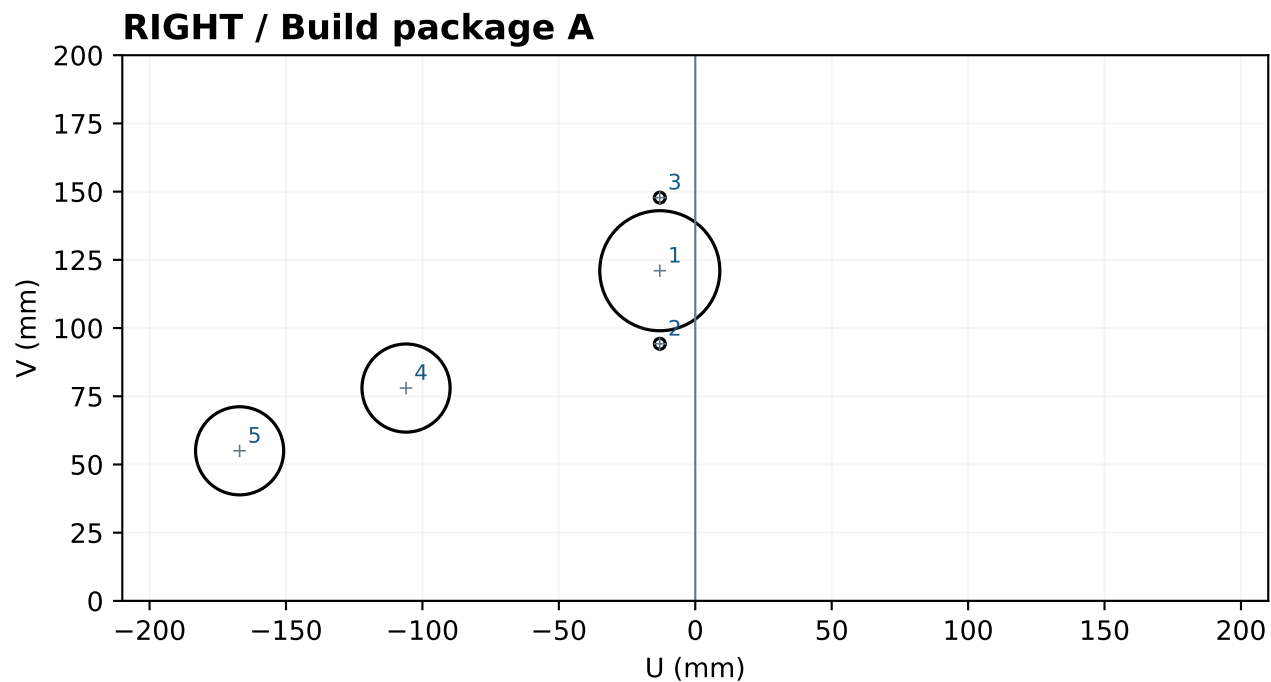

#	Feature	U	V	Cut size
1	XA outlet	-13.00	121.02	D44.00
2	XA fixing -1	-13.00	94.23	D4.00
3	XA fixing +1	-13.00	147.80	D4.00
4	DC	-106.00	78.01	D32.30
5	USB	-167.00	55.01	D32.30


Outside face view. $U = -Z$; $V = Y / \cos(0.937 \text{ deg})$, measured up along wall.
Origin: wall plane at $Y=0$ and case centerline. $Y=0$ is the mounting-panel underside plane; use STEP datums to fixture.
CUT layer only. REFERENCE/TEXT are not cuts. Drawing not to scale; DXF units = mm.
Position tolerance ± 0.5 mm; Q0 relative pattern ± 0.12 mm; XA bore ± 0.15 mm; other bores ± 0.1 mm.
Review against received parts before machining. Do not machine with equipment or supply connected.

#	Feature	U	V	Cut size
1	SUPPLY	128.00	43.01	D21.00

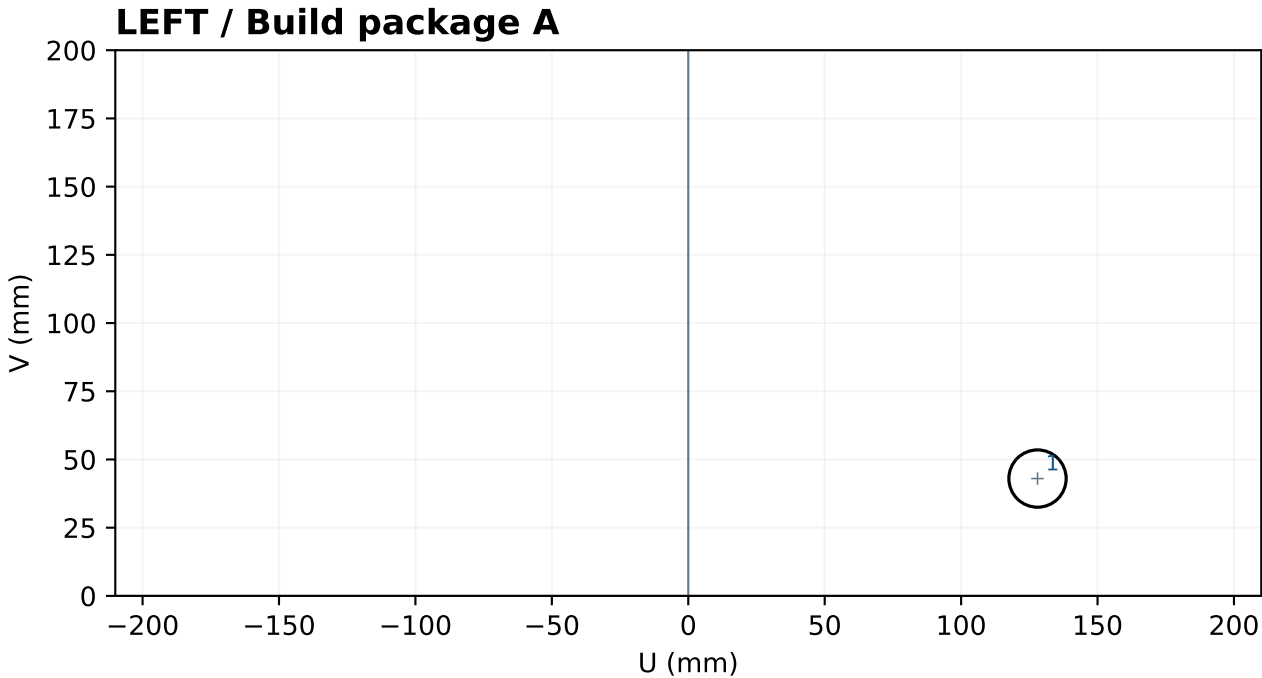


Outside face view. $U = Z$; $V = Y / \cos(0.937 \text{ deg})$, measured up along wall.
Origin: wall plane at $Y=0$ and case centerline. $Y=0$ is the mounting-panel underside plane; use STEP datums to fixture.
CUT layer only. REFERENCE/TEXT are not cuts. Drawing not to scale; DXF units = mm.
Position tolerance $\pm 0.5 \text{ mm}$; Q0 relative pattern $\pm 0.12 \text{ mm}$; XA bore $\pm 0.15 \text{ mm}$; other bores $\pm 0.1 \text{ mm}$.
Review against received parts before machining. Do not machine with equipment or supply connected.

#	Feature	U	V	Cut size
1	OUTPUT	-0.00	36.00	D21.00

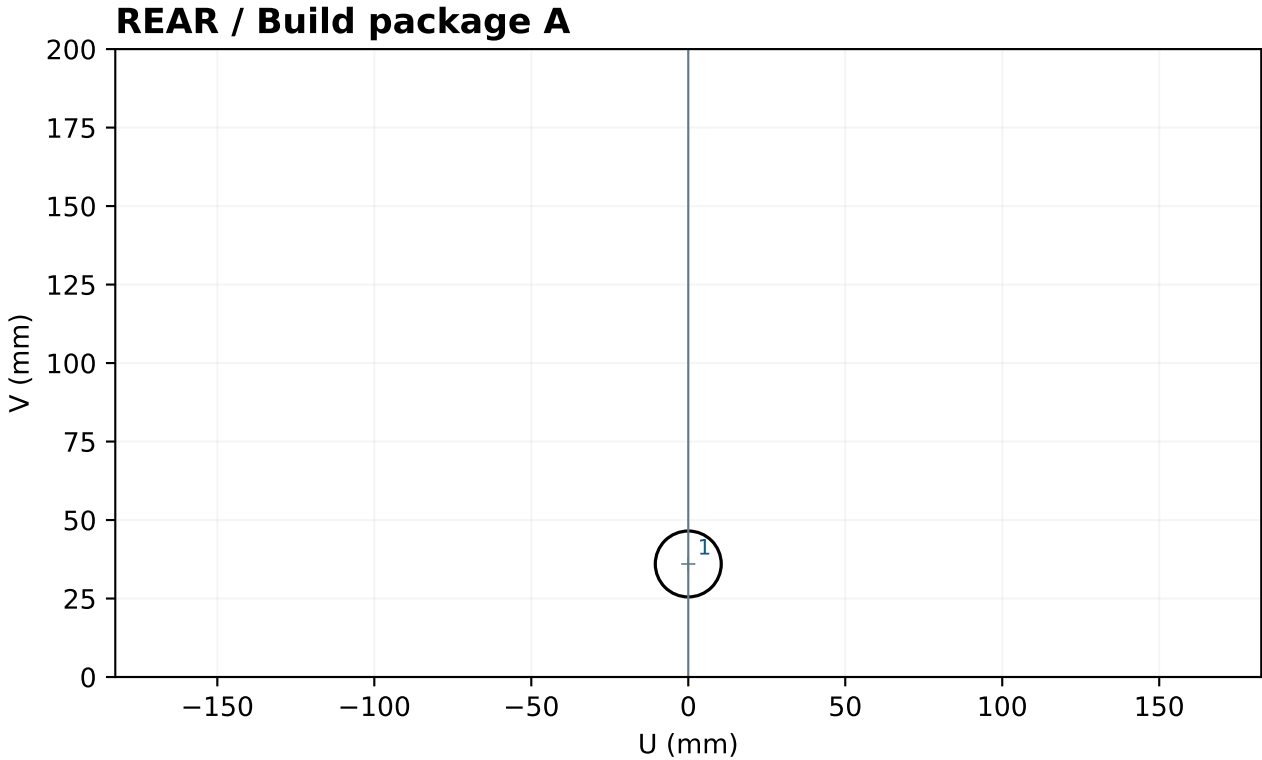

Outside face view. $U = -X$; $V = Y / \cos(0.937 \text{ deg})$, measured up along wall.
Origin: wall plane at $Y=0$ and case centerline. $Y=0$ is the mounting-panel underside plane; use STEP datums to fixture.
CUT layer only. REFERENCE/TEXT are not cuts. Drawing not to scale; DXF units = mm.
Position tolerance $\pm 0.5 \text{ mm}$; Q0 relative pattern $\pm 0.12 \text{ mm}$; XA bore $\pm 0.15 \text{ mm}$; other bores $\pm 0.1 \text{ mm}$.
Review against received parts before machining. Do not machine with equipment or supply connected.

PANEL / Build package A

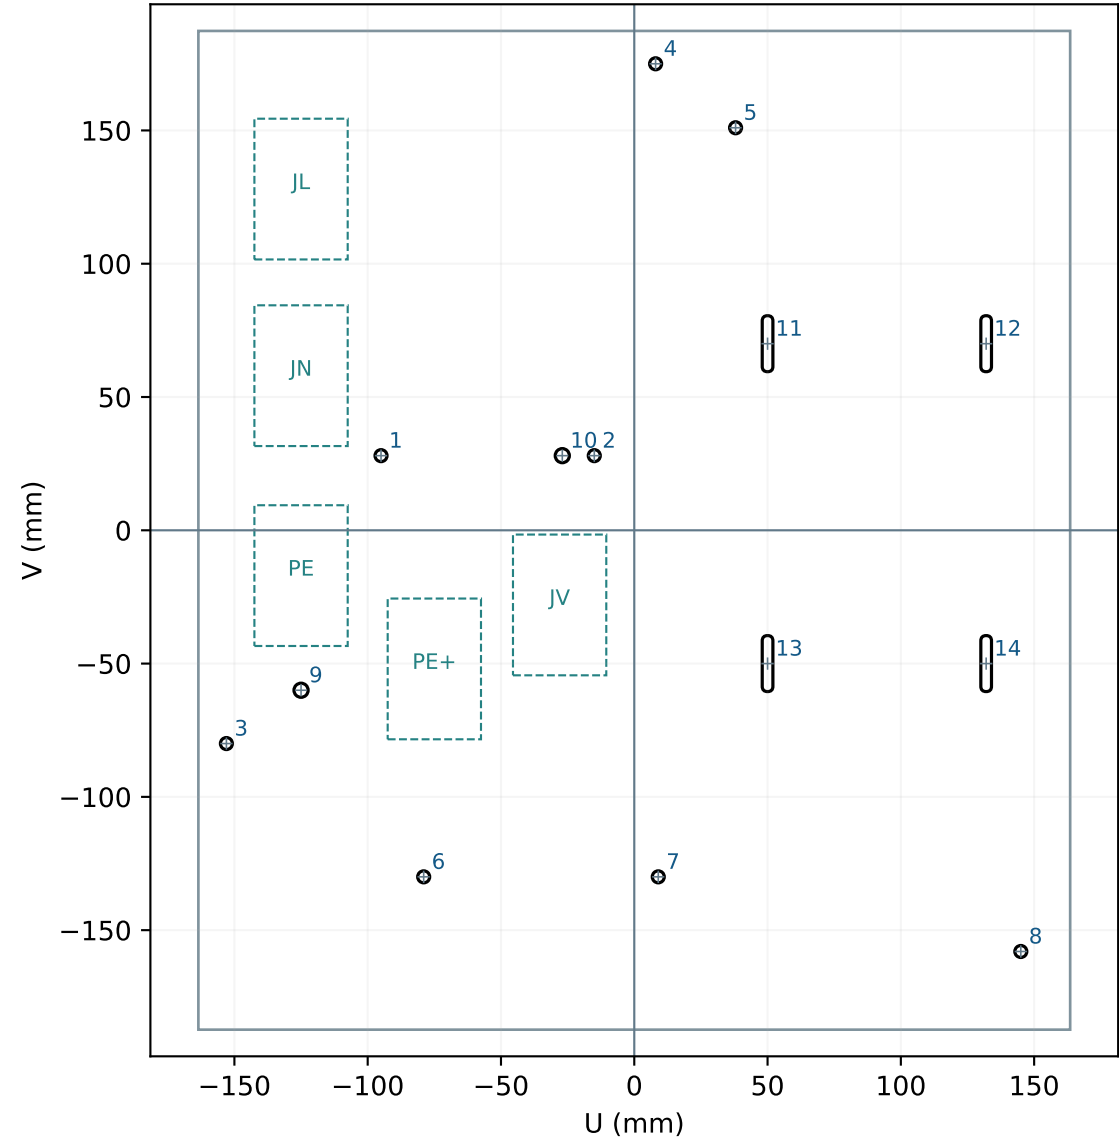

#	Feature	U	V	Cut size
1	Rail fixing 1	-95.00	28.00	D4.50
2	Rail fixing 2	-15.00	28.00	D4.50
3	Tie anchor 1	-153.00	-80.00	D4.50
4	Tie anchor 2	8.00	175.00	D4.50
5	Tie anchor 3	38.00	151.00	D4.50
6	Tie anchor 4	-79.00	-130.00	D4.50
7	Tie anchor 5	9.00	-130.00	D4.50
8	Tie anchor 6	145.00	-158.00	D4.50
9	Panel PE bond	-125.00	-60.00	D5.30
10	Rail PE through panel	-27.00	28.00	D5.30
11	Strap slot 1	50.00	70.00	21 x 4 slot R2
12	Strap slot 2	132.00	70.00	21 x 4 slot R2
13	Strap slot 3	50.00	-50.00	21 x 4 slot R2
14	Strap slot 4	132.00	-50.00	21 x 4 slot R2

View from lid. U = X; V = -Z. Origin: center of 14R1513 blank. Rear = +V. Retain factory fixing holes.
Dashed WAGO carrier envelopes: locate as shown, then transfer-drill two D3.3 holes per actual carrier; do not cut outlines.
CUT layer only. REFERENCE/TEXT are not cuts. Drawing not to scale; DXF units = mm.
Position tolerance +/-0.5 mm; Q0 relative pattern +/-0.12 mm; XA bore +/-0.15 mm; other bores +/-0.1 mm.
Review against received parts before machining. Do not machine with equipment or supply connected.