
SIDE GARNISH REMOVAL
id091600453500

Front

1. Insert a tape-wrapped flathead screwdriver in the position shown in the figure, move it in the direction of the arrow (1) to remove the clip A.

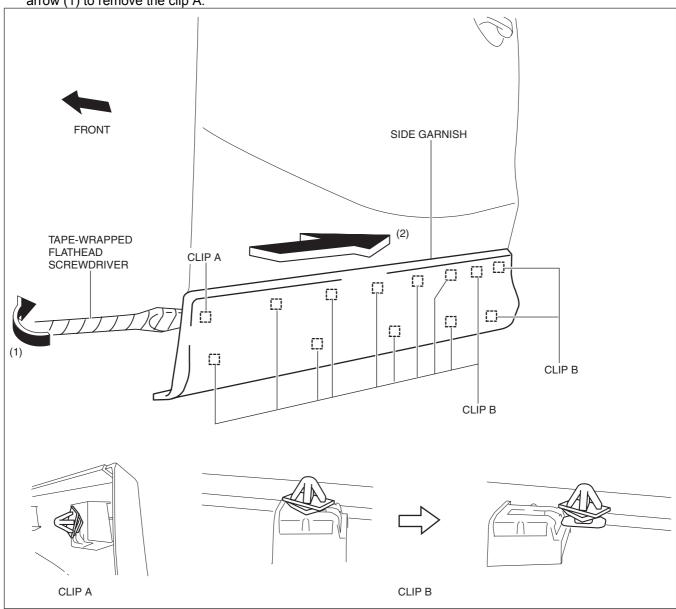


2. Slide the side garnish in the direction of the arrow (2) shown in the figure and remove clips B from side garnish.


- 3. Remove the side garnish.
- 4. Detach clips B from the body.
- 5. When reusing the side garnish, install clips A and B, that wear detached from the body, to the side garnish.

Rear

1. Insert a tape-wrapped flathead screwdriver in the position shown in the figure, move it in the direction of the arrow (1) to remove the clip A.

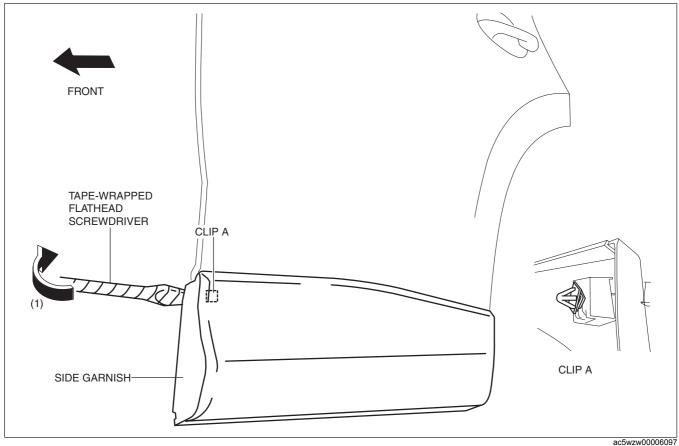


2. Insert a tape-wrapped flathead screwdriver in the position shown in the figure, move it in the direction of the arrow (2) to remove the clip B.

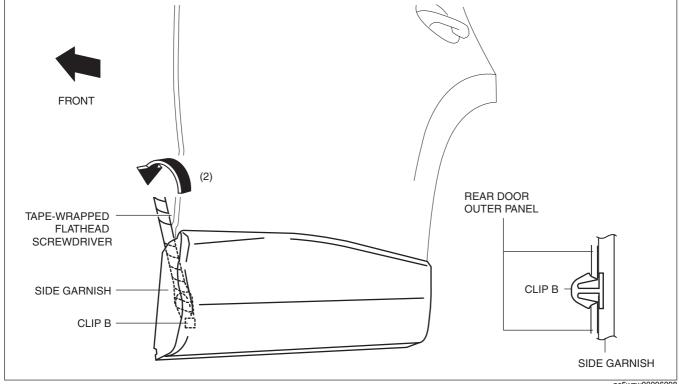

ac5wzw00006098

3. Slide the side garnish in the direction of arrow (4) with it pulled in the direction of arrow (3) shown in the figure and detach clips C from the side garnish.

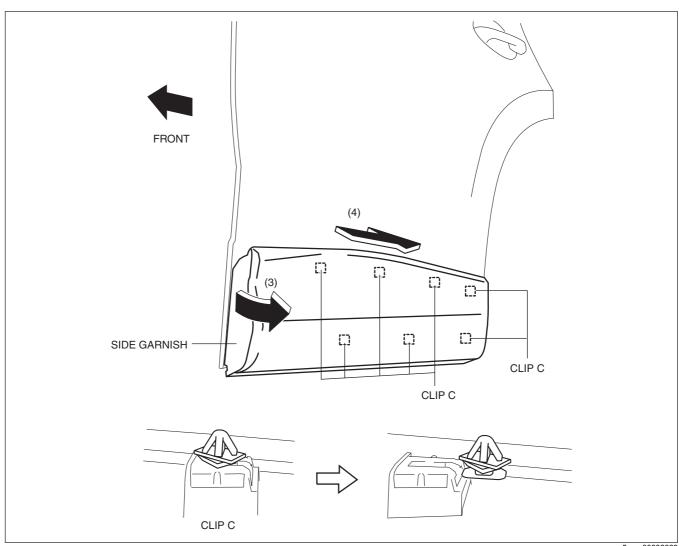

ac5wzw00006099

- 4. Remove the side garnish.
 5. Detach clips C from the body.
 6. When reusing the side garnish, install clips A, B and C, that wear detached from the body, to the side garnish.