PLANETARY GEAR [FW6A-EL, FW6AX-EL]


id0517h2351800

Purpose/Function

• The planetary gear is a mechanism which shifts the drive force from the engine. The planetary gear consists of multiple gears which rotate individually while revolving. By controlling the individual rotation and revolving of the gears, the transaxle performs gear shifting at the optimum gear speed according to the driving conditions.


Construction

• The planetary gear is positioned in the order of the front planetary gear, rear planetary gear, and reduction planetary gear from the torque converter side. The planetary gear is a single planetary gear type. For the component parts of each planetary gear, refer to the following figure.

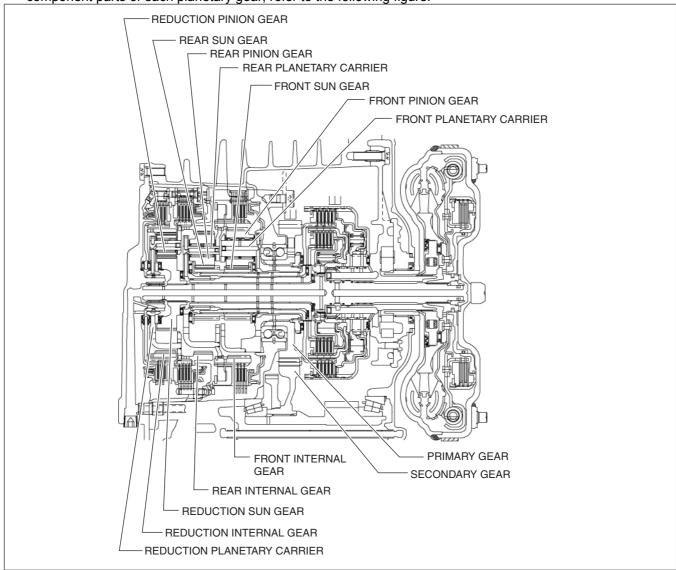

am3uun00002450

 The planetary gear is composed of the sun gear, pinion gear, planetary carrier, and internal gear as shown in the figure.

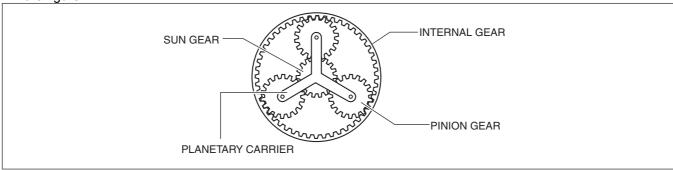


am3uun00002239

- · There are two types of pinion gear rotation, rotation (rotation) on an axis of the center for each pinion gear and rotation (revolution) on an axis of center for the planetary carrier. The planetary gear operates shifting function by switching the input, fixed, or output of the internal gear, pinion gear, and planetary carrier.
- The relation of rotation speed of each element for the planetary gear set is generally indicated as follows:

 $(Z_R + Z_S) N_C = Z_R N_R + Z_S N_S: (1)$

Meaning of symbols


- Z: Number of teeth
- N: Rotation speed
- Additional character R: Internal gear
- Additional character S: Sun gear
- Additional character C: Planetary carrier (pinion gear)

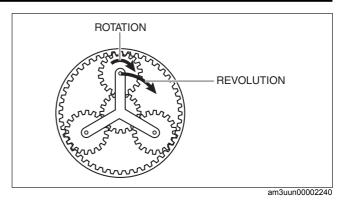

Number of teeth and symbols for each gear


	Planetary gear unit	Number of teeth	Symbols
	Internal gear	97	Z _{RFr}
Front	Planetary carrier (part of pinion gear)	29	ZCFr
	Sun gear	38	Z _{SFr}
	Internal gear	95	Z _{RRr}
Rear	Planetary carrier (part of pinion gear)	27	ZCRr
	Sun gear	40	Z _{SRr}
	Internal gear	109	Z_{RRed}
Reduction	Planetary carrier (part of pinion gear)	21	ZCRed
	Sun gear	68	ZSRed

Meaning of symbols

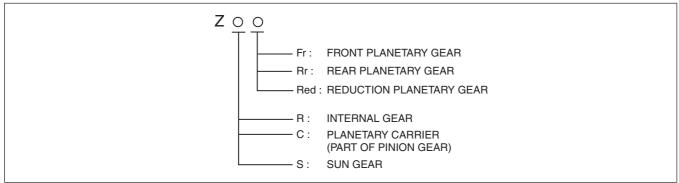

am3uun00002334

Operation 1GR

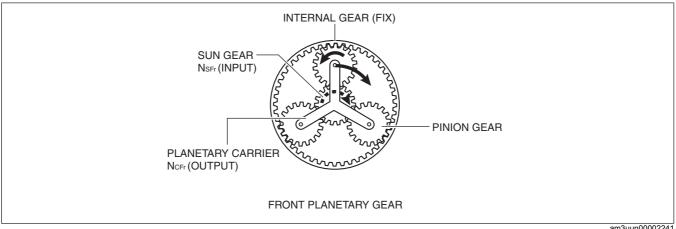


am3uun00002241

Rotation speed for each gear

Planetary gear unit	Front planetary gear
Internal gear	0 (Fix)
Planetary carrier (part of pinion gear)	N _{CFr} (Output)
Sun gear	NSFr (Input)


2GR

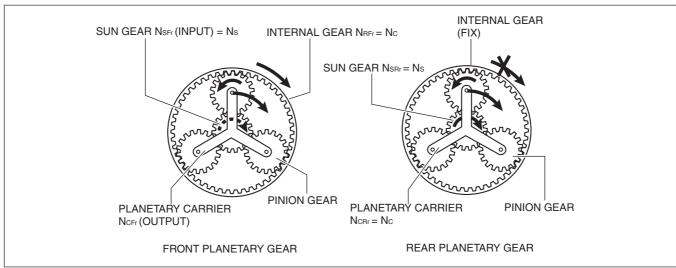

am3uun00002242

Planetary gear unit	Front planetary gear	Rear planetary gear
Internal gear	N _{RFr} =N _C	0 (Fix)
Planetary carrier (part of pinion gear)	N _{CFr} (Output)	N _{CRr} =N _c
Sun gear	NSFr (Input)=NS	N _{SRr} =N _S


3GR

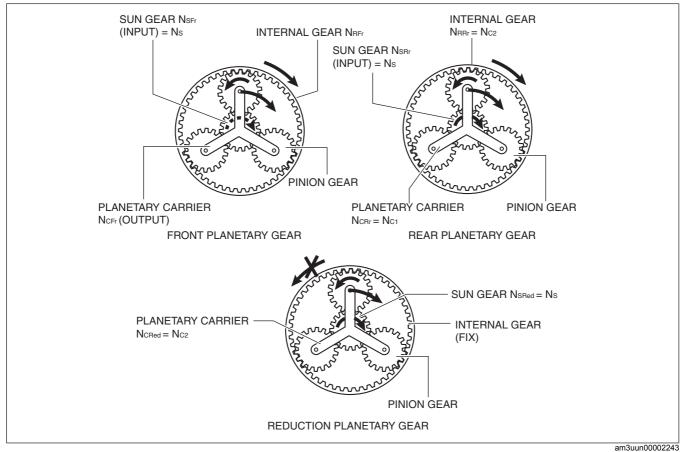

Rotation speed for each gear

Rotation speed for each gear				
Planetary gear unit	Front planetary gear	Rear planetary gear	Reduction	
Internal gear	NRFr=NC1	NRRr=Nc2	0 (Fix)	
Planetary carrier (part of pinion gear)	N _{CFr} (Output)	NCRr=Nc1	NCRed=Nc2	
Sun gear	NSFr (Input)=NS	NSRr=NS	NSRed=NS	

4GR

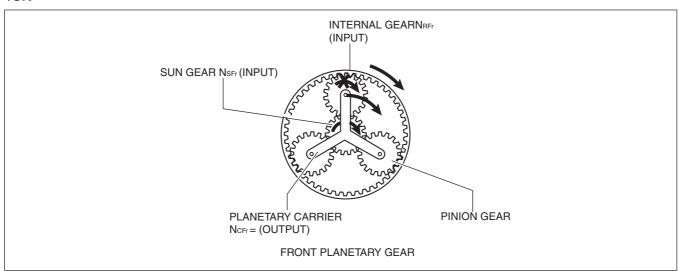


am3uun00002248

Planetary gear unit	Front planetary gear	
Internal gear	N _{RFr} (Input)	
Planetary carrier	NCFr (Output)	
(part of pinion gear)	MOF! (Output)	

Planetary gear unit	Front planetary gear	
Sun gear	NSFr (Input)	

5GR

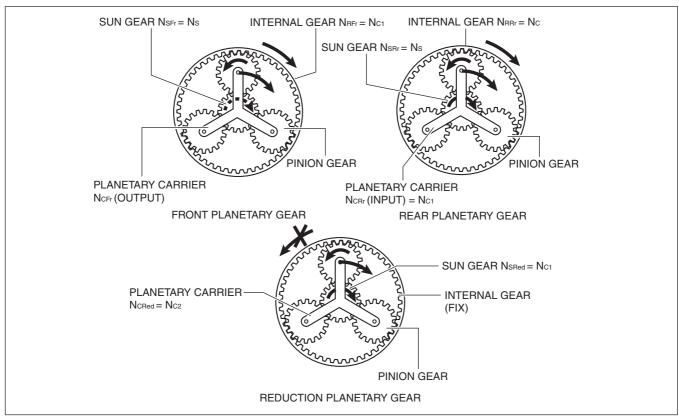


am3uun00002245

Rotation speed for each gear

Notation speed for each t	y tai		
Planetary gear unit	Front planetary gear	Rear planetary gear	Reduction
Internal gear	N _{RFr} =N _{C1}	N _{RR} r=N _{c2}	0 (Fix)
Planetary carrier (part of pinion gear)	N _{CFr} (Output)	N _{CRr} (Input)=N _{c1}	N _{CRed} =N _{c2}
Sun gear	N _{SFr} =N _S	N _{SRr} =N _S	N _{SRed} =N _{c1}

6GR

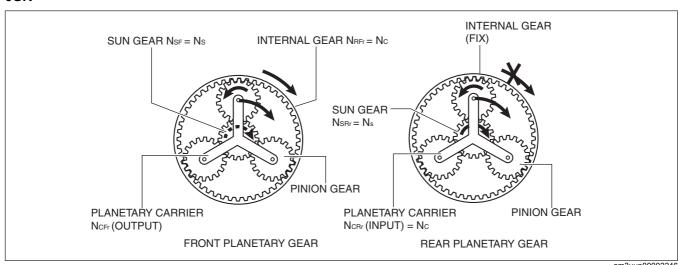


am3uun00002246

Planetary gear unit	Front planetary gear	Rear planetary gear
Internal gear	N _{RFr} =N _C	0 (Fix)

Planetary gear unit	Front planetary gear	Rear planetary gear
Planetary carrier (part of pinion gear)	N _{CFr} (Output)	N _{CRr} (Input)=N _C
Sun gear	N _{SFr} =N _S	N _{SRr} =N _S

Reverse

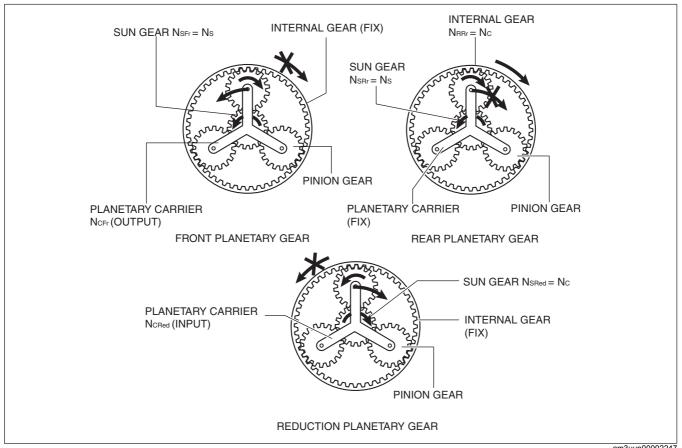

am3uun00002247

Notation opour for outin gour			
Planetary gear unit	Front planetary gear	Rear planetary gear	Reduction
Internal gear	N _{RFr} (Fix)	N _{RRr} =N _c	0 (Fix)
Planetary carrier (part of pinion gear)	N _{CFr} (Output)	N _{CRr} (Fix)	N _{CRed} =N _c
Sun gear	NSFr=NS	NSRr=NS	NSRed (Input)