


Caution



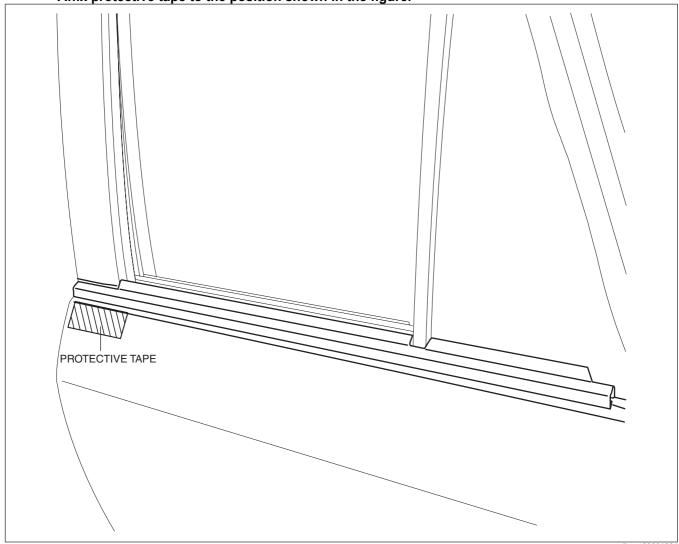

ac5wzw00001281

- 1. Fully open the rear door glass.
- 2. Insert a tape-wrapped flathead screwdriver and then detach the clip A in the direction of arrow (1) shown in the
- 3. Pull up the rear belt line molding in the direction of arrow (2) shown in the figure.
 4. Rotate the rear beltline molding in the direction of the arrow (3) shown in the figure and remove it while detaching tabs B.

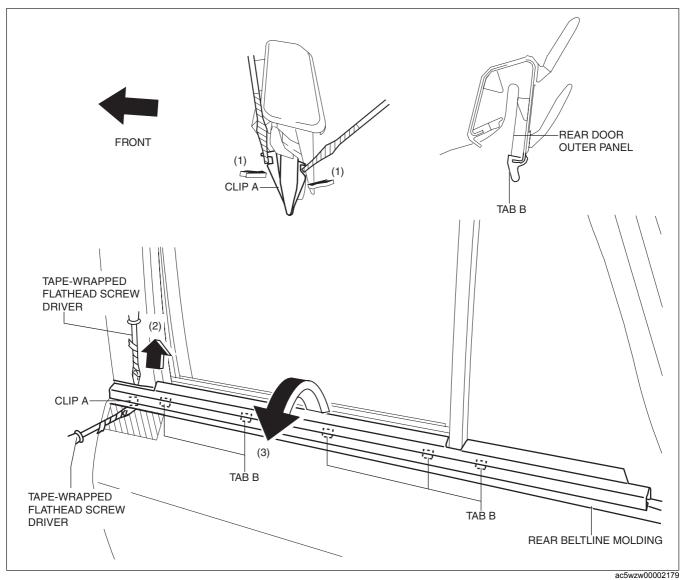

5. Install in the reverse order of removal.