REAR SHOCK ABSORBER DISPOSAL


id021400801500

Warning

- Whenever drilling into a rear shock absorber, wear protective eye wear. The gas in the rear shock absorber is pressurized, and could spray metal chips into the eyes and face when drilling.
- 1. Clamp a rear shock absorber on a flat surface or with the piston pointing downwards.
- Drill a 2—3 mm {0.08—0.11 in} hole at a point A from the bottom of the tube, so that the gas can escape.

Point A: 40—50 mm {1.6—1.8 in}

- 3. Turn the hole downwards.
- 4. The oil can be collected by moving the piston rod several times up and down and cutting the tube at the end.
- 5. Dispose of waste oil according to the waste disposal law.

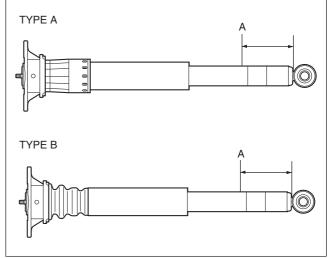

ac5wzw00002427