
## HIGH-MOUNT BRAKE LIGHT REMOVAL/INSTALLATION

id091800802000


- 1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)

  Remove the liftgate upper trim. (See LIFTGATE UPPER TRIM REMOVAL/INSTALLATION.)
- Remove the rear spoiler. (See REAR SPOILER REMOVAL/INSTALLATION.)
- Disconnect the connector.

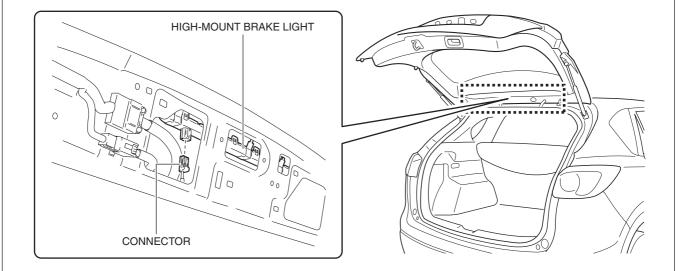

ac5wzw00000118

While pressing the high-mount brake light tab in the direction of arrow (1) shown in the figure, press the highmount brake light in the direction of arrow (2) to detach the high-mount brake light and liftgate.

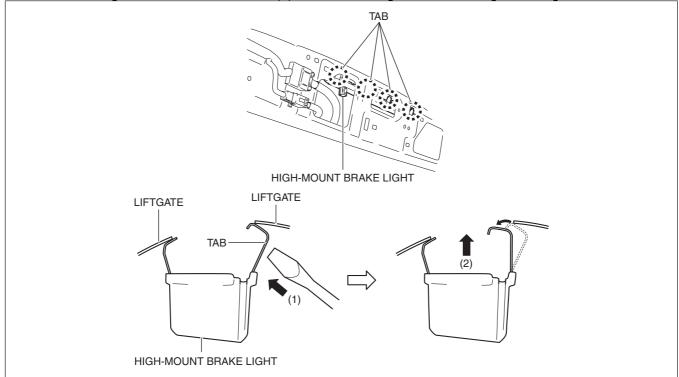

ac5wzw00003349

6. Detach all the high-mount brake light tabs and liftgate and remove the high-mount brake light from the liftgate.

## Caution

- If the high-mount brake light is removed from the liftgate, the high-mount brake light may fall off and be damaged. When removing the high-mount brake light from the liftgate, hold the high-mount brake light on the lens side with a hand during servicing.
- 7. Install in the reverse order of removal.

