## CHARCOAL CANISTER REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5]


id0116zb096400

1. Remove the floor under cover. (See FLOOR UNDER COVER REMOVAL/INSTALLATION.)

2. Remove in the order indicated in the table.


1	Evaporative hose (See Evaporative Hose Installation Note.)
	Charcoal canister (See Charcoal Canister Removal Note.)

3. Install in the reverse order of removal.

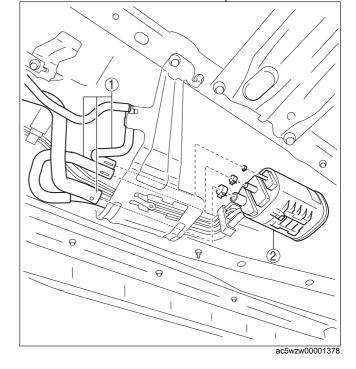

## **Charcoal Canister Removal Note**

- 1. Release the lock as shown in the figure.
- 2. Remove the charcoal canister.

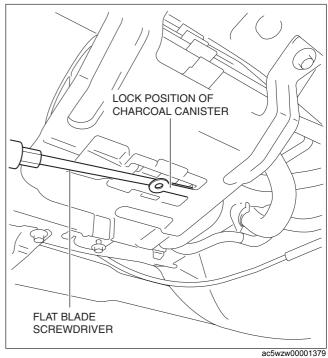

Evaporative Hose Installation Note1. Connect the evaporative hose as shown in the figure.

