
Warning

• Using a utility knife with bare hands can cause injury. Always wear gloves when using a utility knife.


Note

- Double-sided adhesive tape has already been attached to the new rear sash molding.
- 1. When installing a new rear sash molding, follow the procedure below:
 - (1) Carefully remove the adhesive remaining on the body using a razor blade.
 - (2) Remove any grease or dirt from the adhesion surface of the body.
- 2. Remove the adhesive remaining on the rear sash molding and the body using a razor blade.
 - (1) Remove any grease or dirt from the adhesion surface of the rear sash molding and the body.
 - (2) Apply primer to the bonding area of the rear sash molding.
 - (3) Affix double-sided adhesive tape to the rear sash molding as shown in the figure.

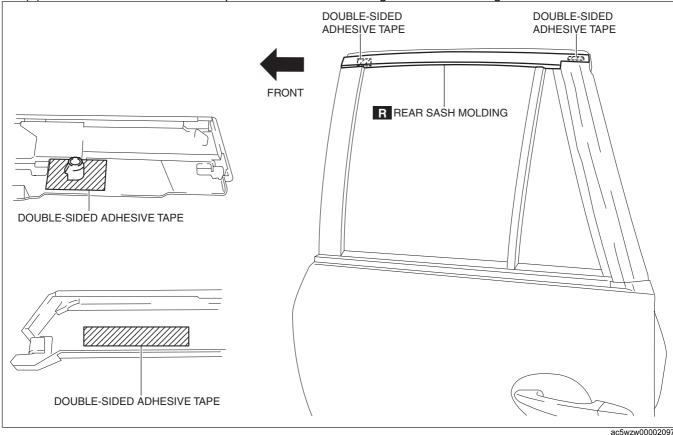

Note

- As for the double-sided adhesive tape, use 3M GT7120 or equivalent.
- 3. Peel off the backing of the double-sided adhesive tape.
- 4. Hook tab A to the body in the position where clip B aligns with the sash holes.

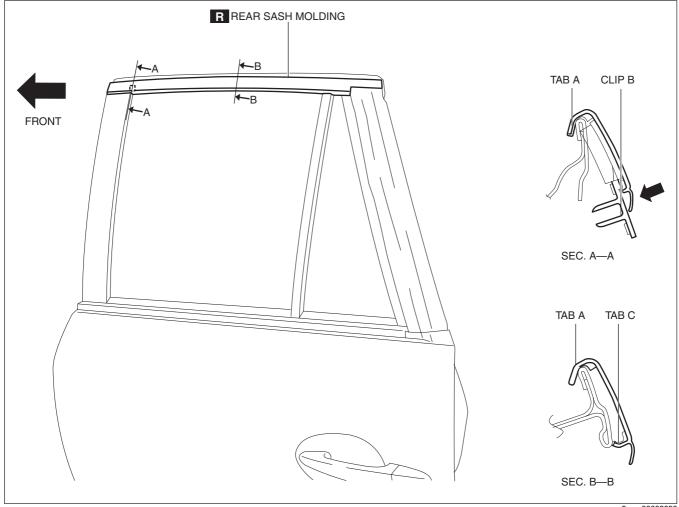

ac5wzw00002098

5. Press the rear sash molding in the direction of the arrow and install clip B to the body.

Caution

- Do not press the rear sash molding in any place other than the rubber areas.
- 6. Press the rear sash molding from the vehicle front in the direction of the arrow and install tab C.

Note

• After installing the rear sash molding, verify that tabs A and C are connected properly to the body.