FRONT FRAME (REAR) INSTALLATION [PANEL REPLACEMENT]

id098008742600


Symbol Mark

SYMBOL MARK	MEANING
	PLUG WELDING (ARC WELDING)

ac5wzb00000219

Installation Procedure

- 1. When installing new parts, measure and adjust the body as necessary to conform with standard dimensions.
- 2. Drill holes for the plug welding before installing the new parts.
- After temporarily installing new parts, make sure the related parts fit properly.
 Plug weld the 33 locations shown in the figure, then install the front frame (rear).

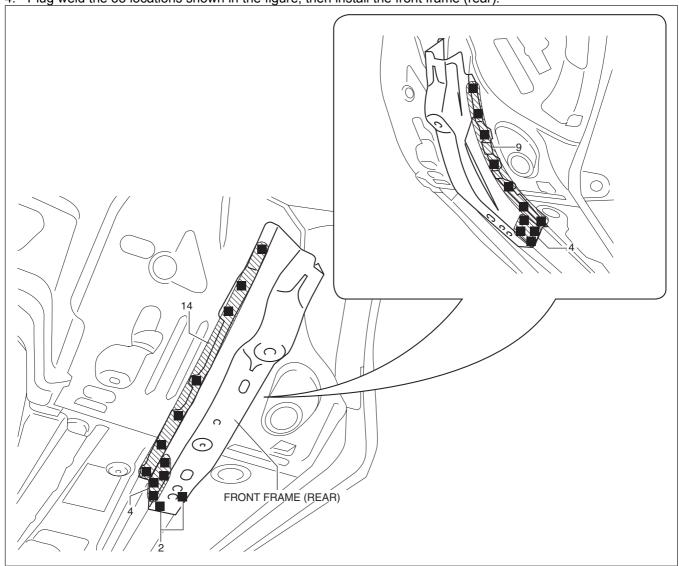

ac5uub00000053