
REFRIGERANT SYSTEM GENERAL PROCEDURES

id071000800300

 Fully close the valves of the manifold gauge.
Connect the charging hoses to the high- and low-pressure side joints of the manifold gauge. MANIFOLD GAUGE

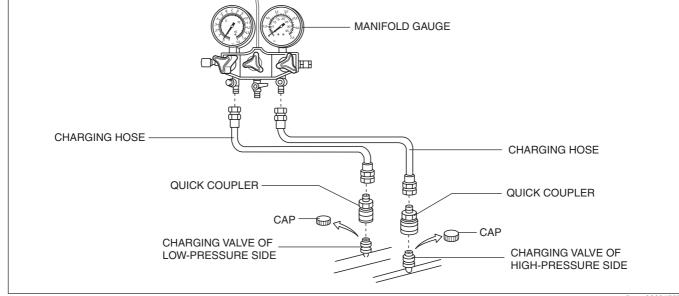

ac5wzw00001757

- 3. Connect the quick couplers to the ends of the charging hoses.
- 4. Connect the quick couplers to the charging valves.