
GLASS PANEL ADJUSTMENT

id091500800600


- 1. Fully close the glass panel.
- 2. Measure the gap and height between the glass panel and body.
- 3. Loosen the installation screws and adjust the glass panel.

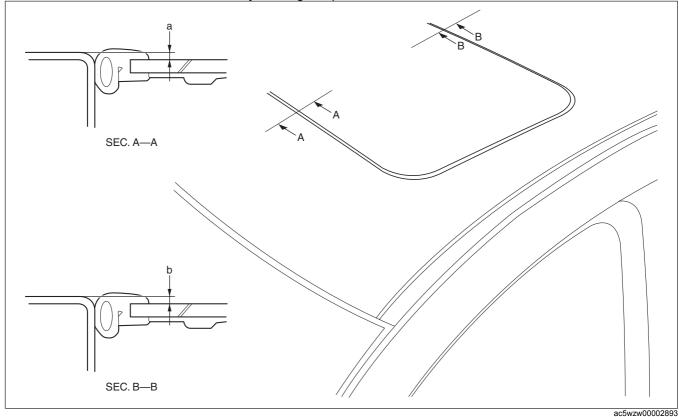

Standard clearance

a: -2.3—0.3 mm {-0.09—0.01 in} b: -2.3—0.3 mm {-0.09—0.01 in}

- 4. Tighten the installation screws. (See GLASS PANEL REMOVAL/INSTALLATION.)
- 5. Insert a plastic card between the weatherstrip and the body of the vehicle. Verify that the sunroof is shut tightly (there is resistance when the plastic card is moved).

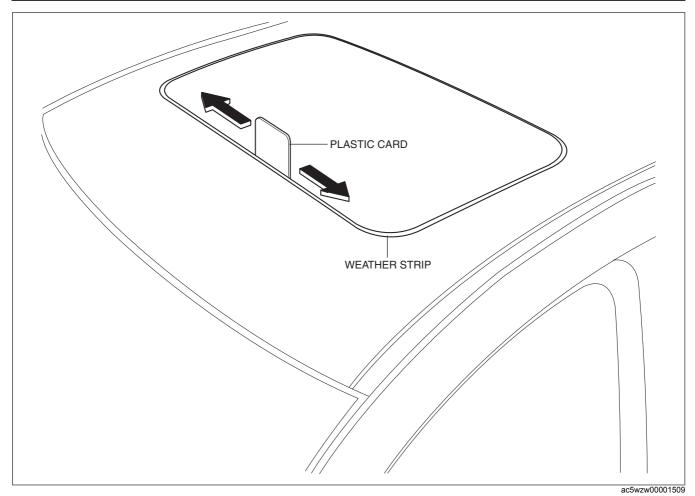

• If the sunroof is not shut tightly, readjust by performing Steps 3 and 4.