
## REAR SEAT CENTER ARMREST REMOVAL/INSTALLATION

id091300812200


1. Operate the push knob (RH) and lower the rear seat back (RH).

2. Remove screw A.

3. Remove the rear seat center armrest hinge cover (RH) in the direction of the arrow (1) shown in the figure while setting hook A aside.

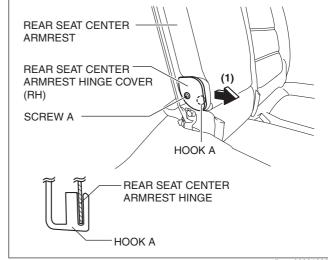


4. Remove bolt B.

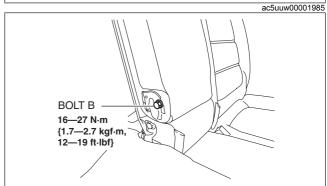


ac5wzw00003117

5. Remove the rear seat center armrest in the direction of the arrow (2) shown in the figure while setting the pins aside.

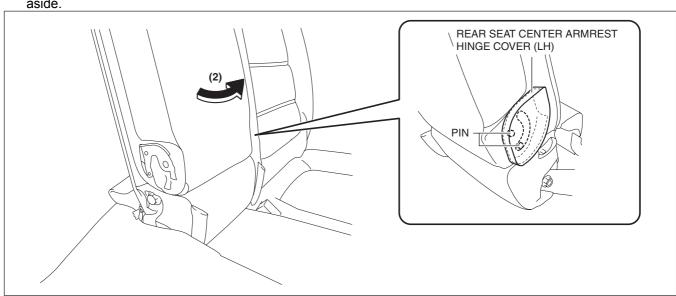


ac5uuw00001987

 Using a flathead screwdriver wrapped in protective tape, insert it in the gap between the cup holder and the rear seat center armrest in the direction of the arrow (3) shown in the figure, and disengage tabs

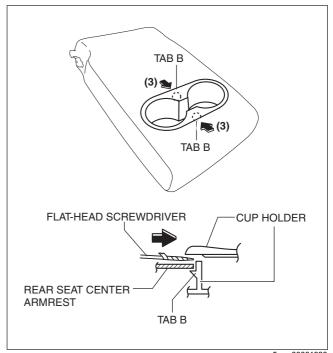

7. Using a flathead screwdriver wrapped in protective tape, insert it in the gap between the cup holder and the rear seat center armrest in the direction of the arrow (4) shown in the figure, and disengage tabs

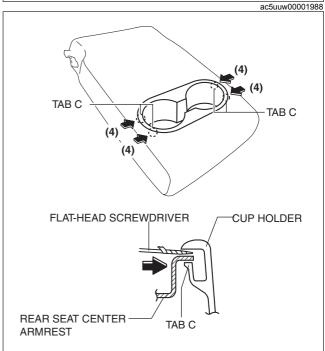

- 8. Remove the cup holder in the direction of the arrow (5) shown in the figure.
- 9. Install in the reverse order of removal.

