
FILAMENT REPAIR


id091200003700


- 1. Clean the filament using isopropyl alcohol.
- 2. Attach tape to both sides of the filament.
- 3. Using a small brush or marking pen, apply silver paint.
- 4. After **2—3 min**, carefully remove the tape without damaging the applied area.

Caution

- Do not operate the rear window defroster until the paint is completely dry. It may cause other malfunctions if it is used before the paint is dry.
- 5. Dry the repaired part according to the following procedure.





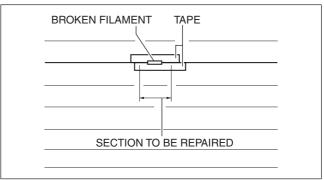

ac5wzw00001349