

ENERGY-ABSORBING FORM REMOVAL/INSTALLATION

- 1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
 Remove the seal board upper. (See SEAL BOARD UPPER REMOVAL/INSTALLATION.)
- Remove the front bumper. (See FRONT BUMPER REMOVAL/INSTALLATION.)
- 4. Insert the flathead screwdriver shown in the figure, push fasteners A for back side of front bumper reinforcement.

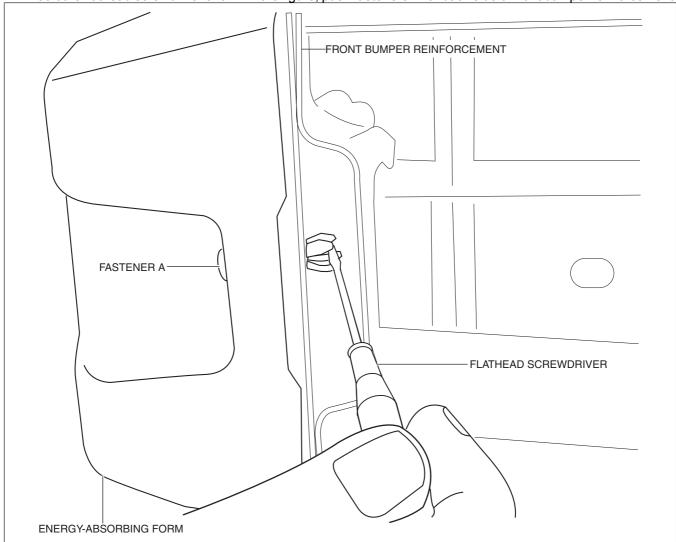

5. Pull the energy-absorbing form in the direction of the arrow shown in the figure while detaching guides B

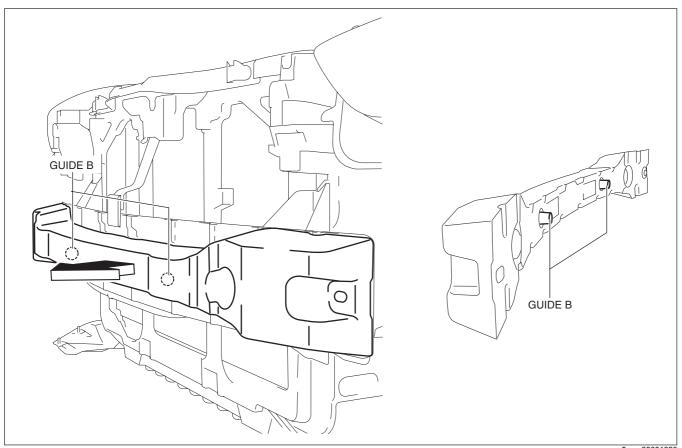

ac5wzw00001320

- Install in the reverse order of removal.
 Adjust the headlight aiming. (See HEADLIGHT AIMING.)
 Adjust the front fog light aiming. (with front fog lights) (See FRONT FOG LIGHT AIMING.)