REAR SPOILER REMOVAL/INSTALLATION

id091600801600


Removal

Warning

• Using a utility knife with bare hands can cause injury. Always wear gloves when using a utility knife.

Note


- Remove the rear spoiler and the garnish as a single unit.
- 1. Remove the liftgate upper trim (See LIFTGATE UPPER TRIM REMOVAL/INSTALLATION.)
- Remove caps A.

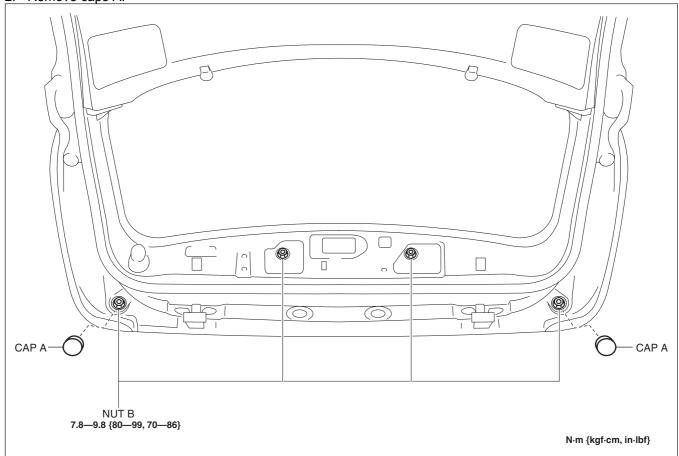

3. Remove nuts B.


4. Attach a piece of wire between the liftgate striker and liftgate latch to hold the liftgate in the half-opened position as shown below.

ac5uuw00002038

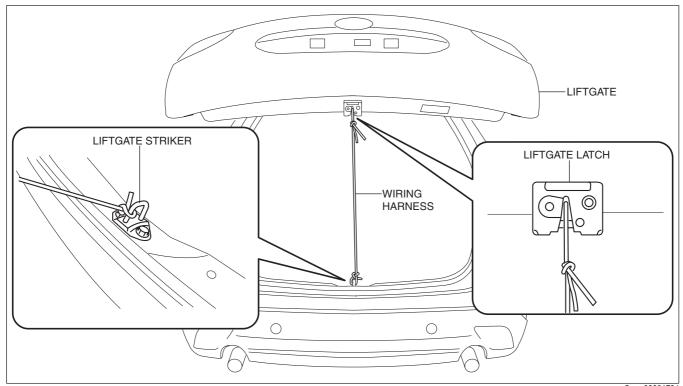

ac5uuw00001734

5. Insert a tape-wrapped flathead screwdriver in the locations shown below to remove clips C and D in the direction of the arrow (1).

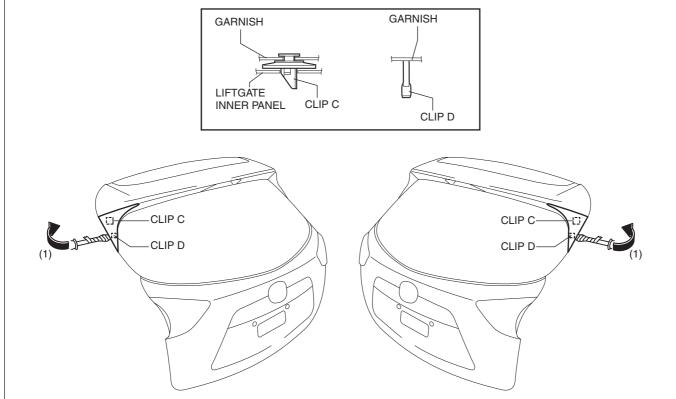


ac5wzw00006034

6. Using a utility knife, carefully remove the double-sided adhesive tape in the locations shown below.

Caution

• Be careful not the damage the vehicle's paint during tape removal.

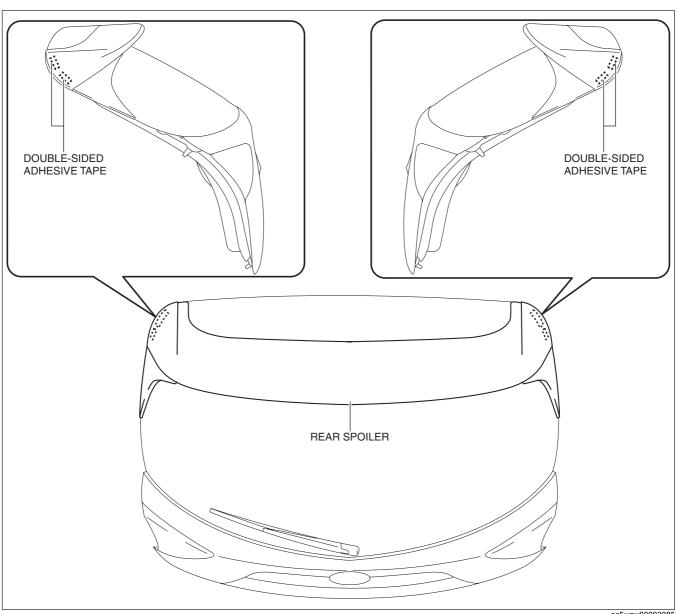


ac5wzw00002085

7. Pull the rear spoiler in the direction of the arrows in the order of (1), (2) and remove it while detaching clips E.

• When removing the rear spoiler clips E, the rear spoiler may fall and be damaged. Perform the rear spoiler clip removal using two people.

Note

• Install the rear spoiler and the garnish as a single unit.

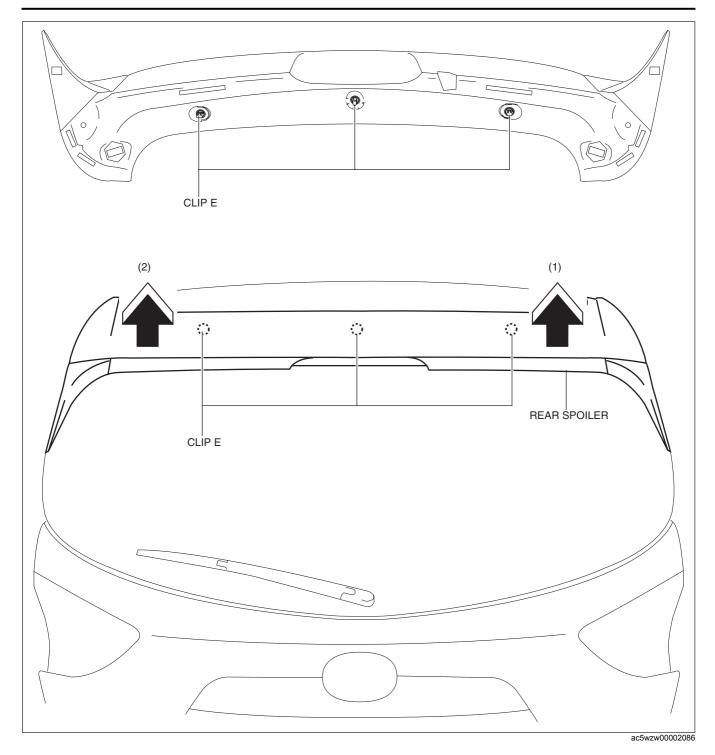


Installation

Note


- To facilitate the procedure after rear spoiler installation, peel the protective tape adhered during removal before installing the rear spoiler.
- 1. When a rear spoiler is to be reused, perform the following procedure:
 - (1) Remove the packing and protector remaining on the rear spoiler after removal.
 - (2) Remove any grease and dirt from the packing and protector affixing area.

 - (3) Affix packing and protector to the position shown in the figure.(4) If the protector is damaged, replace the part that is damaged with a new protector.

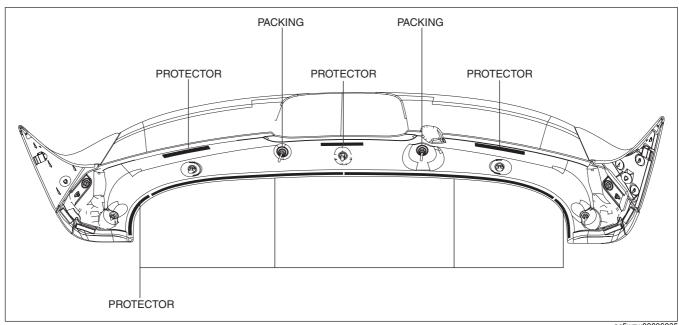


ac5wzw00006035

Push the rear spoiler in the direction of the arrows in the order of (1), (2), (3), (4), (5) and install the rear spoiler while install clips C, D and E.

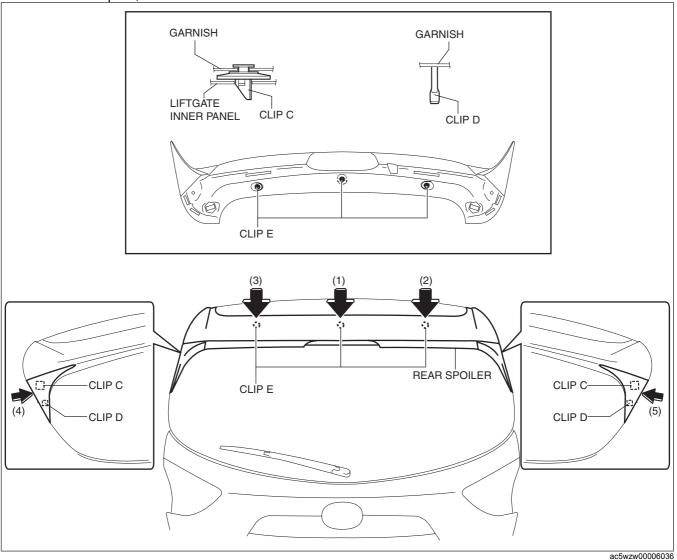

3. Install nuts B.

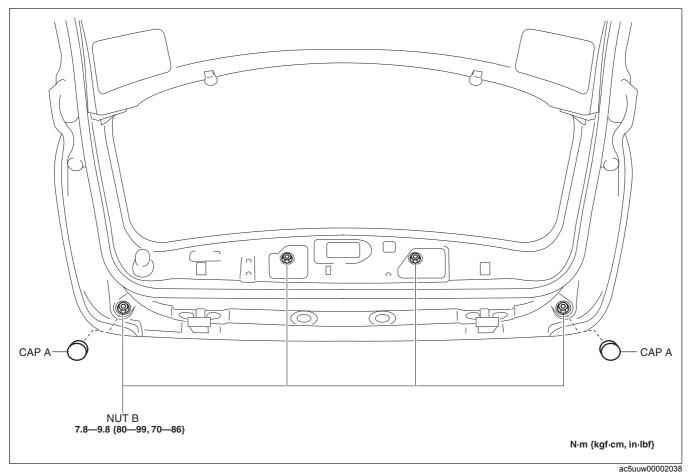

Install caps A.
 Install the following parts:

 (1) Liftgate upper trim (See LIFTGATE UPPER TRIM REMOVAL/INSTALLATION.)
 (2) Liftgate side trim (See LIFTGATE SIDE TRIM REMOVAL/INSTALLATION.)