CONNECTING ROD INSPECTION


1. Inspect the connecting rod for bending and distortion using the connecting rod aligner.

• If it exceeds the maximum specification, replace the connecting rod.

Maximum connecting rod bending 0.050 mm {0.0020 in}

Maximum connecting rod distortion 0.050 mm {0.0020 in}

Connecting rod center-to-center distance SKYACTIV-G 2.0: 155.2 mm {6.110 in} SKYACTIV-G 2.5: 154.8 mm {6.094 in}

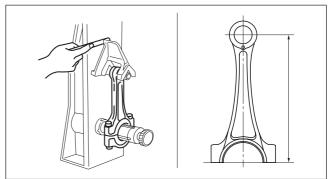

bpe2ue00000036

id011000502800