
### Warning

Using a utility knife with bare hands can cause injury. Always wear gloves when using a utility knife.

# Note


- Double-sided adhesive tape has already been attached to the new front sash molding.
- 1. When installing a new front sash molding, follow the procedure below:
  - (1) Carefully remove the adhesive remaining on the body using a razor blade.
  - (2) Remove any grease or dirt from the adhesion surface of the body.
- 2. Remove the adhesive remaining on the front sash molding and the body using a razor blade.
  - (1) Remove any grease or dirt from the adhesion surface of the front sash molding and the body.
  - (2) Apply primer to the bonding area of the front sash molding.
  - (3) Affix double-sided adhesive tape to the front sash molding as shown in the figure.

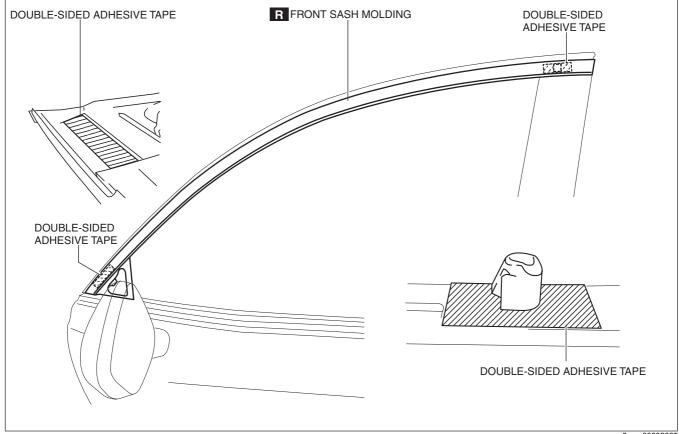

ac5wzw00002095

# Note

- As for the double-sided adhesive tape, use 3M GT7120 or equivalent.
- 3. Peel off the backing of the double-sided adhesive tape.
- 4. Hook tab A to the body in the position where clip B aligns with the sash holes.

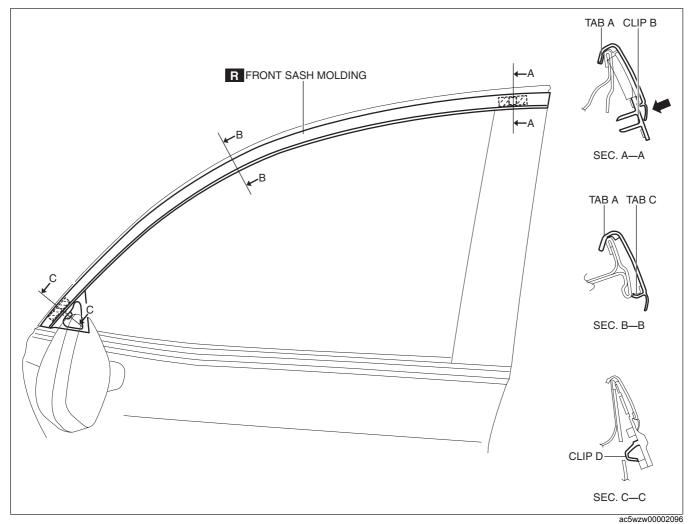

5. Press the front sash molding in the direction of the arrow and install clip B to the body.

### Caution

- Do not press the front sash molding in any place other than the rubber areas.
- 6. Press the front sash molding from the vehicle front in the direction of the arrow and install tab C.
- 7. Press the front sash molding in the direction of the arrow and install clip D to the body.

### Note

• After installing the front sash molding, verify that tabs A and C are connected properly to the body.