
METER HOOD REMOVAL/INSTALLATION

id091700800900


- Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
- 2. Remove the upper column cover (See COLUMN COVER REMOVAL/INSTALLATION.)
- 3. Remove the switch panel (See SWITCH PANEL REMOVAL/INSTALLATION.)
- 4. Using a phillips screwdriver, remove fasteners.

Note

When pulling up the shaft of fasteners using a phillips screwdriver, the shaft will not be pulled up if it is
rotated by pressing the driver. To pull up the shaft of fastener, use the phillips screwdriver to lightly contact
fasteners.

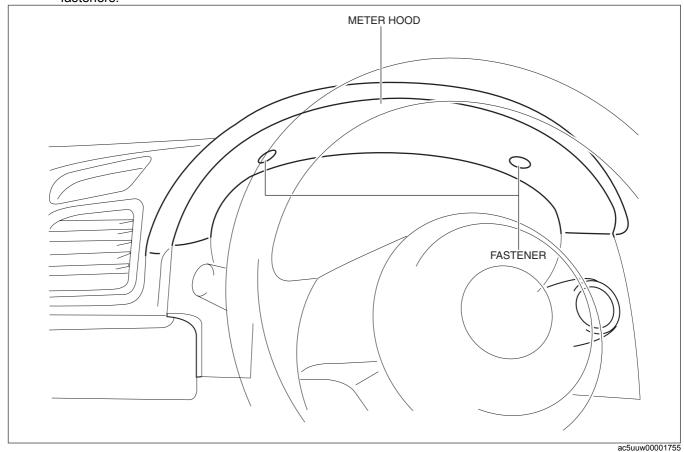

5. Take the shaded area shown in the figure, and remove the meter hood in the direction of the arrow in the order of (1), (2) while detaching the clips A, pins B.

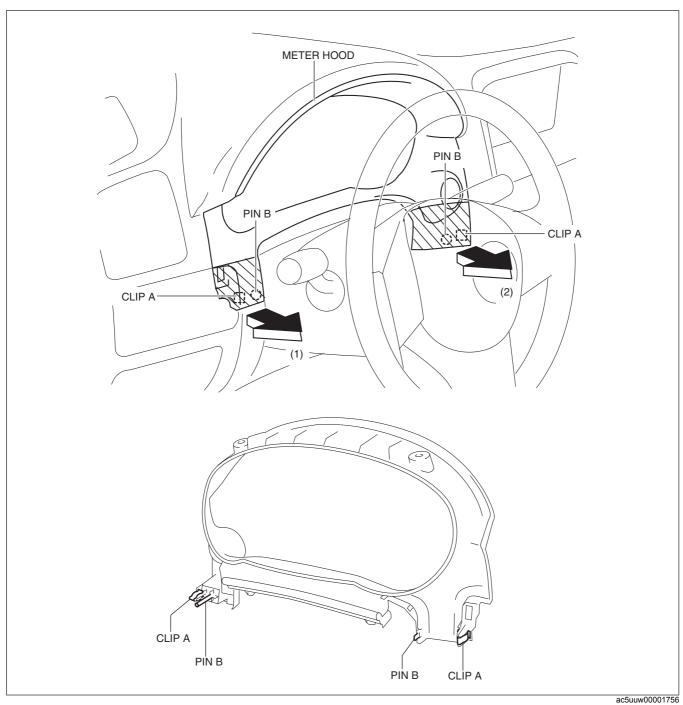

6. Disconnect the start switch connector7. Install in the reverse order of removal.