
## FRONT SHOCK ABSORBER AND COIL SPRING REMOVAL/INSTALLATION


id021300800200

## Caution

- Performing the following procedures without first removing the front ABS wheel-speed sensor may
  possibly cause an open circuit in the wiring harness if it is pulled by mistake. Before performing
  the following procedures, disconnect the front ABS wheel-speed sensor wiring harness (axle side)
  and fix the wiring harness to an appropriate place where it will not be pulled by mistake while
  servicing the vehicle.
- Disconnect the front ABS wheel-speed sensor wiring harness installed to the steering knuckle and set it aside. (See FRONT ABS WHEEL-SPEED SENSOR REMOVAL/INSTALLATION.)
- 2. Remove in the order indicated in the table.
- 3. Install in the reverse order of removal.
- 4. Inspect the wheel alignment. (See FRONT WHEEL ALIGNMENT.)

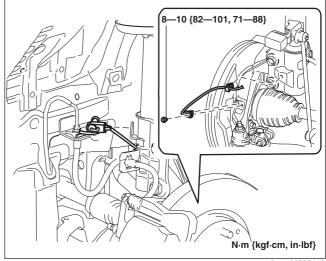

ac5uuw00000113

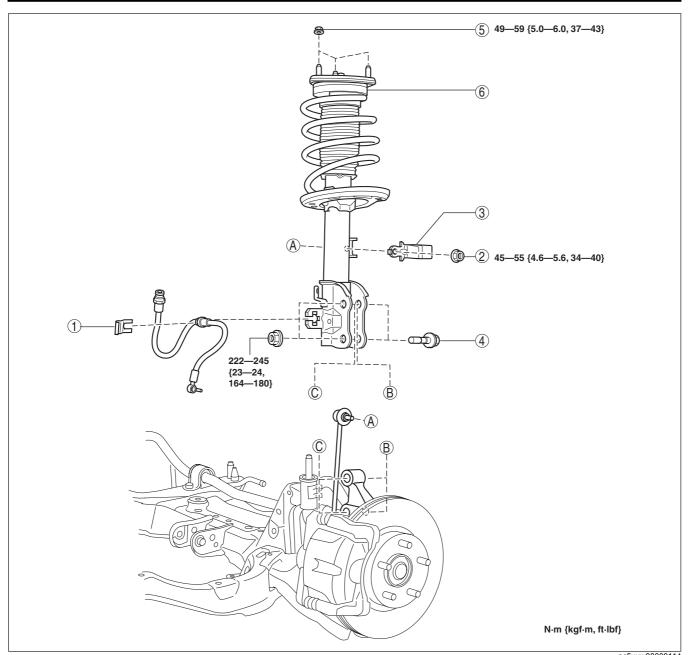

1	Front brake hose clip
	(See BRAKE HOSE (FRONT) REMOVAL/
	INSTALLATION.)
2	Front stabilizer control link upper nut
	(See FRONT STABILIZER REMOVAL/
	INSTALLATION.)
3	Dynamic damper (if equipped)

	ac5uuw0000011
	Front shock absorber lower bolt
	(See Front Shock Absorber Lower Bolt Installation
	Note.)
5	Front shock absorber upper nut
6	Front shock absorber and coil spring

## Front Shock Absorber Lower Bolt Installation Note

- 1. Install the steering knuckle to the front shock absorber, insert the bolts from the direction shown as follows, then tighten them to the specified torque.
  - Vehicle right side: Insert the bolts from the vehicle front.
  - Vehicle left side: Insert the bolts from the vehicle rear.