
DISC PAD (FRONT) REPLACEMENT

id041100800700

- 1. Remove in the order indicated in the table.
- 2. Install in the reverse order of removal.
- 3. After installation, depress the brake pedal a few times, rotate the wheel by hand, and verify that the brake does not drag.

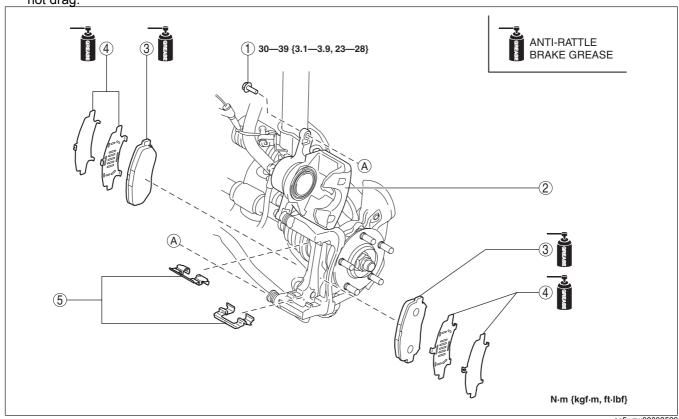


	1	Bolt
	2	Caliper
	3	Disc pad
		(See Disc Pad Installation Note.)

	ac5wzw0000252
4	Shim
5	Guide plate

Disc Pad Installation Note

- 1. Clean the exposed area of the piston.
- 2. Push the piston in using the commercially available disc brake expand tool.
- 3. Install the disc pads to the mounting support.

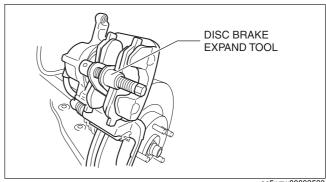

ac5wzw00002523