

A-PILLAR TRIM REMOVAL/INSTALLATION

id091700801900


- Partially peel back the seaming welt.
 Take the shaded area shown in the figure, and pull the A-pillar trim in the direction of the arrow (1) while detaching clip A, clips B.

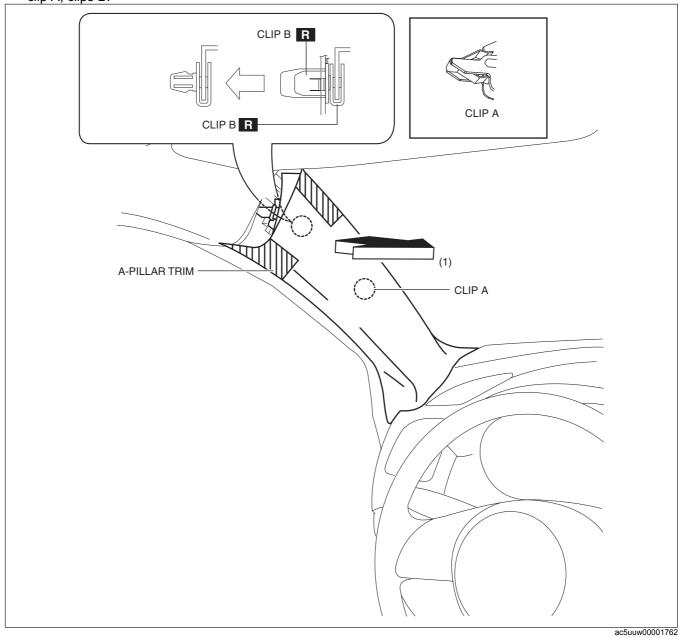


3. Cut the lead wire connecting clips B and grommet using a nipper.

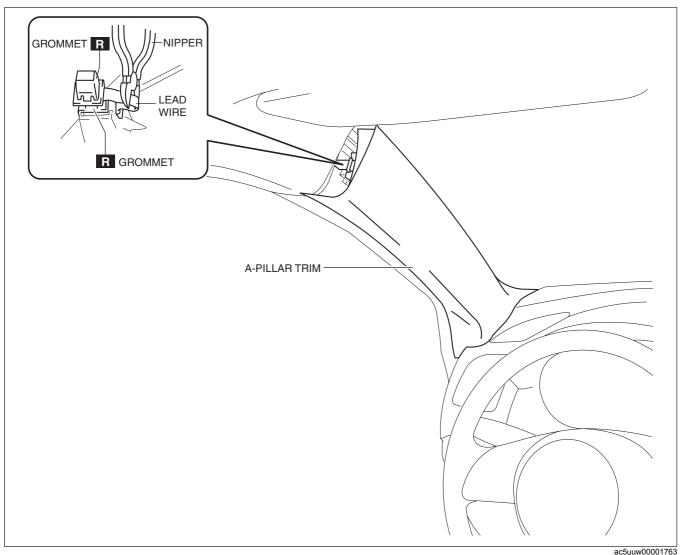

4. Pull the A-pillar trim in the direction of the arrow in the order of (2) and remove the A-pillar trim while detaching guides C.

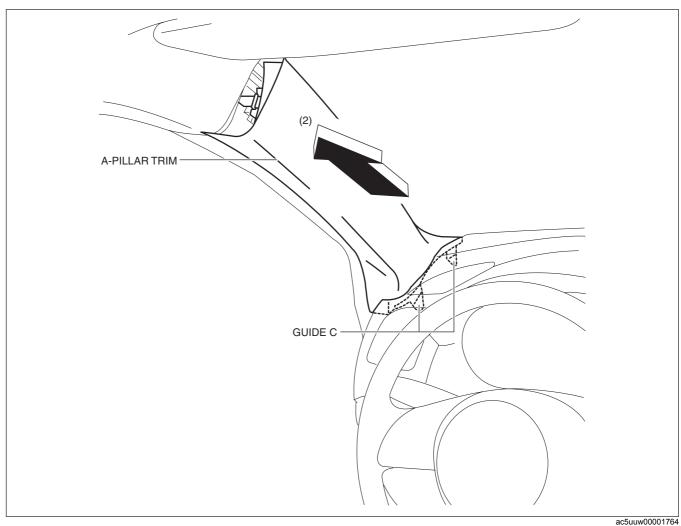

Move the hook in the direction of arrows (3) and (4) shown in the figure using a tape-wrapped flathead screwdriver and detach it from the front pillar inner panel.

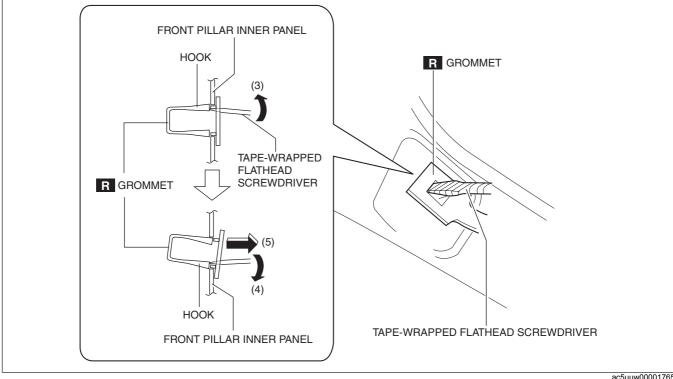

6. Remove the grommet in the direction of the arrow (5) shown in the figure.

ac5uuw00001765

- 7. When installing the A-pillar, install new clips B and grommet to the A-pillar trim in advance.8. Install in the reverse order of removal.