
1 PANEL DESCRIPTION

Touch screen

This section describes the icons, screens, dialogs, readouts and so on that are displayed on the IC-7300 screen. Refer to the pages posted beside each item for details.

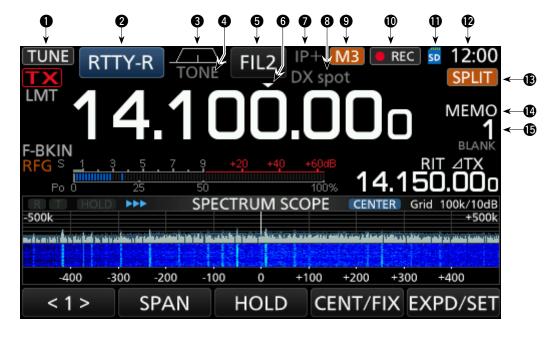

- **1** TUNE ICON TUNE (p. 11-2)
 Appears while tuning the antenna.
- **2 MODE INDICATOR** RTTY-R (p. 3-3) Displays the selected operating mode.
- 3 PASSBAND WIDTH INDICATOR (p. 4-5)

Graphically displays the passband width for twin PBT operation and the center frequency for IF shift operation.

- **4 TONE INDICATOR TONE** (p. 4-29) Displays the selected tone type in the tone operation mode.
- **5** IF FILTER INDICATOR FIL2 (p. 4-6) Displays the selected IF filter.
- 6 QUICK TUNING ICON (p. 3-4) Appears when the Quick Tuning Step function is ON.
- **7** IP PLUS ICON (p. 4-7)
 Appears when the IP Plus function is ON.
- **3 MEMORY NAME READOUT/AUTO TUNE ICON** Displays the memory name if entered (p. 9-5), or displays the "AUTOTUNE" icon when the Auto Tuning function is ON (p. 4-16).

9 M1~M8/T1~T8/OVF ICON M3

Displays "M1"~"M8" while "External Keypad" on the CONNECTORS screen is set to ON and using the Memory Keyer function (p. 4-18). Displays "T1"~"T8" while using the Voice TX memory. (p. 7-4) Displays "OVF" when an excessively strong signal is received.

- **(b. 6-2)** Appears while recording.
- ♠ SD CARD ICON (p. 8-2)
 Appears when an SD card is inserted, or blinks while accessing the SD card.
- CLOCK READOUT 23:00 (p. 12-11)
 Displays the current local time.
 Touch the readout to display both the current local time and UTC time.
- (p. 4-13)
 Appears when the Split function is ON.
- ****OVEROORY ICON MEMO** (p. 3-2)** "VFO A" or "VFO B" appears when the VFO mode is selected, and "MEMO" appears when the Memory mode is selected.
- MEMORY CHANNEL READOUT (p. 3-2)
 Displays the selected memory channel number.