12 SET MODE


Set mode description

You can use the Set mode to set infrequently changed values or function settings.

TIP: The Set mode is constructed in a tree structure. You may go to the next tree level, or go back a level, depending on the selected item.

Entering the Set mode

- 1. Push MENU.
 - · Opens the MENU screen.

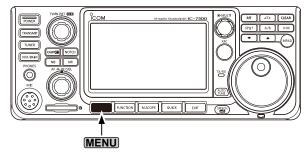

- 2. Touch [SET].
 - · Opens the SET screen.



Rotate (MULTI) to select the desired item. ①You can also select the item by touching [▲] or [▼] in the screen.



- 4. Push (MULTI) to go to the next tree level. You can also go to the next tree level by directly touching the desired item in the screen.
- 5. Repeat steps 3 and 4 to open the desired item's setting screen.
 - To go back the previous tree level, push **EXIT**.



6. Rotate MULTI to select the desired option, and then push (MULTI) to set it.

(i)Information

- · You can also select the option by directly touching the option or [▲] or [▼] in the screen.
- · When you continuously set other items in the same tree level, repeat step 6.
- · When you continuously set other item in the different tree level, push **EXIT** to go back the previous tree level.



TIP: How to reset to the default setting

Touching the item or its option for 1 second displays the Quick menu, and then touch "Default" to reset to the default setting.



To close the Quick menu, push **EXIT**.

7. To close the SET screen, push **EXIT** several times.