Prime Block Straight Pull Assembly

Overview

Follow the same fastening and reinforcement sequence as bolt action unless your printed variant has geometry-specific differences.

Steps

Step 1: Complete common assembly

- Finish all steps in Common Assembly.

Step 2: Install front and rear anchor hardware

- Install front and rear 6-32 hex nuts and 6-32 Phillips screws through pump bars on both sides.

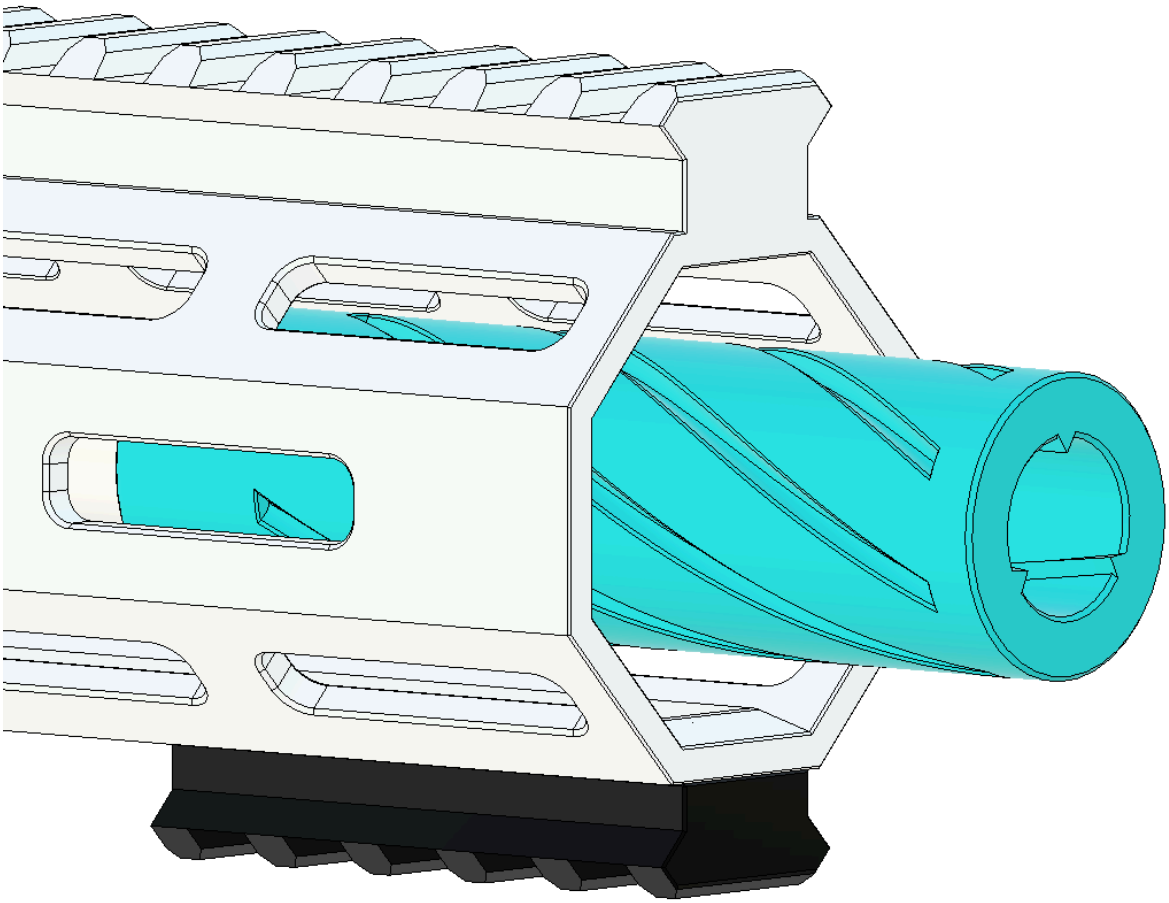

Step 3: Install reinforcement screws

- Install top rear 6-32 socket head screws, then handle reinforcement screws.
- Keep torque moderate to avoid thread damage in printed parts.

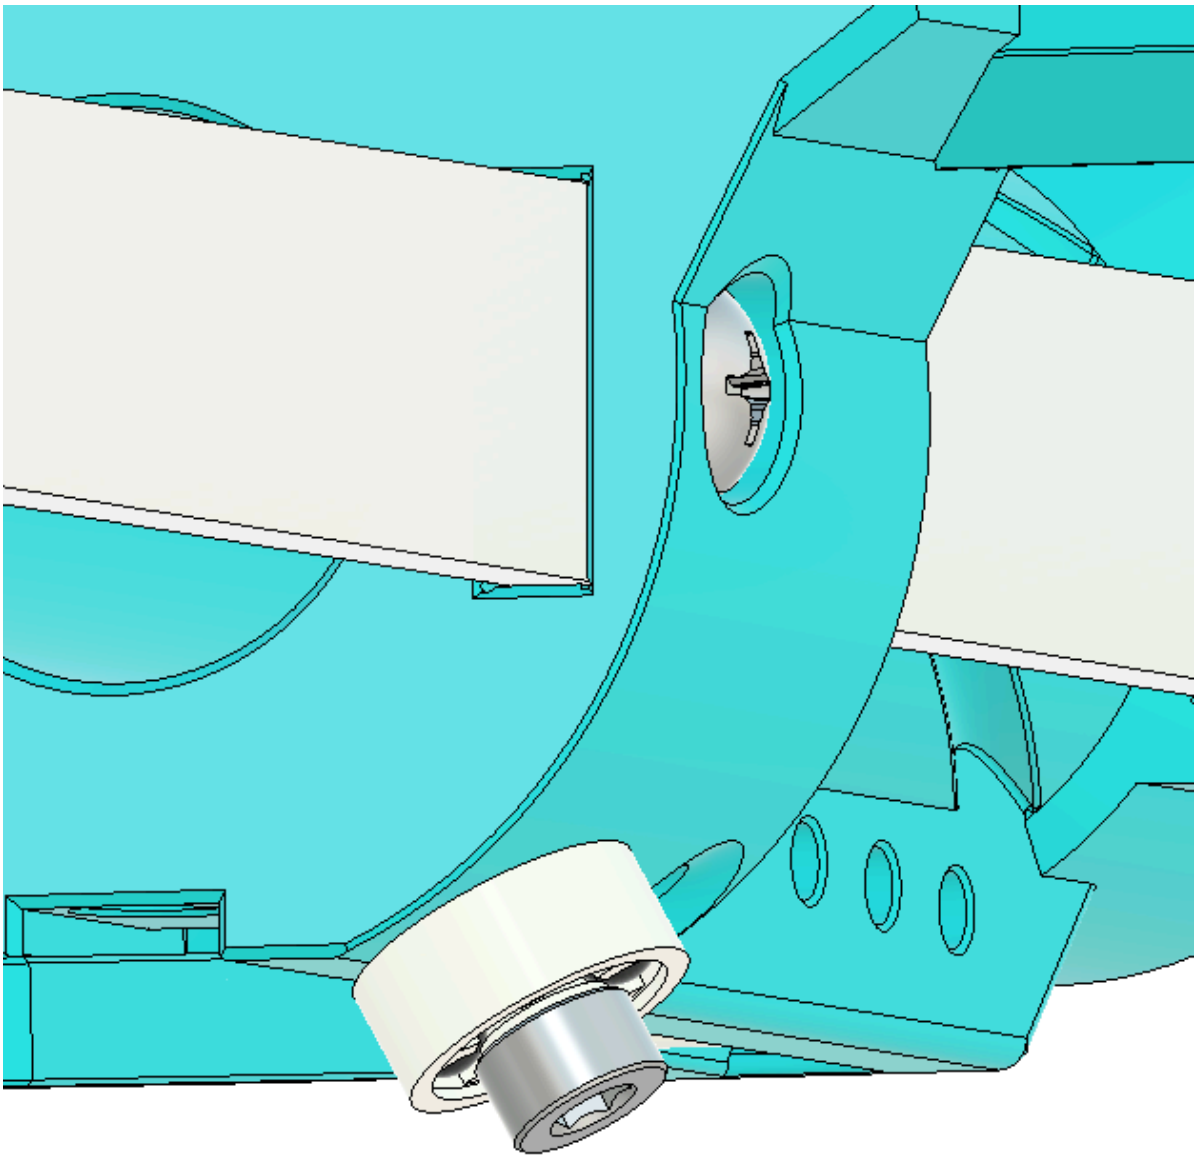

Step 4: Install handle heads and bottom bearings
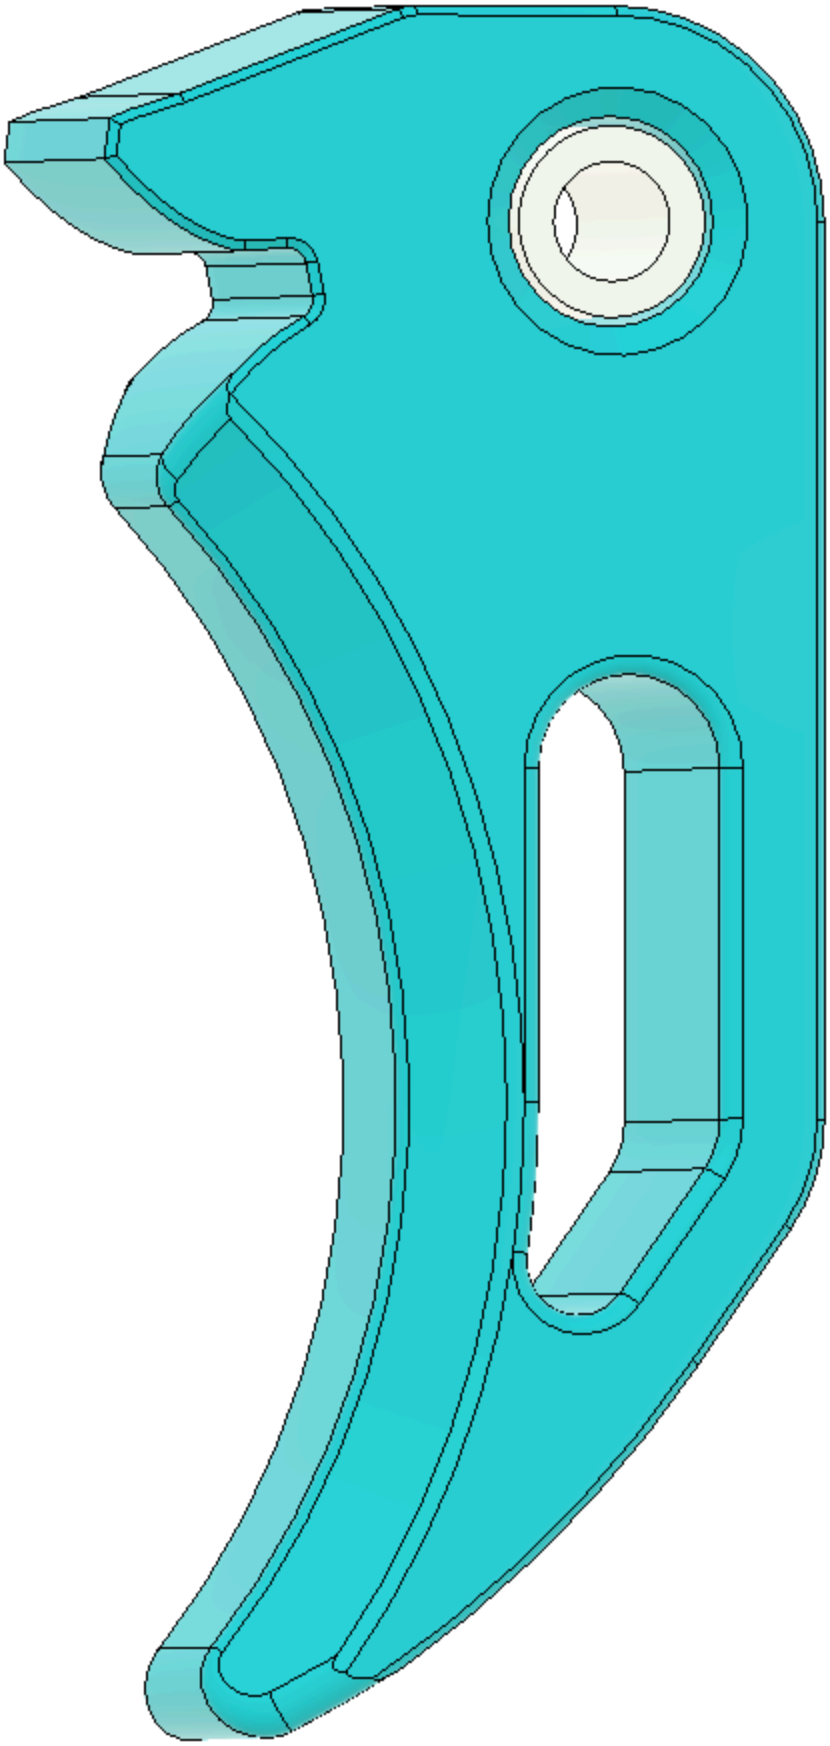
- Install handle heads with 6-32 socket head screws.
- Install bottom 623 bearings with 8 mm M3 socket head screws.