Bipod Variant

Overview

This variant adds the integrated locking bipod and uses the bipod shroud body components.

Steps

Step 1: Install Heat Set Insert

Install 1x 6-32 heat set insert into `RGB_Insert`, flush to the part surface. Insert `RGB_Insert` into `RGB_MainBody` with the flat side up.

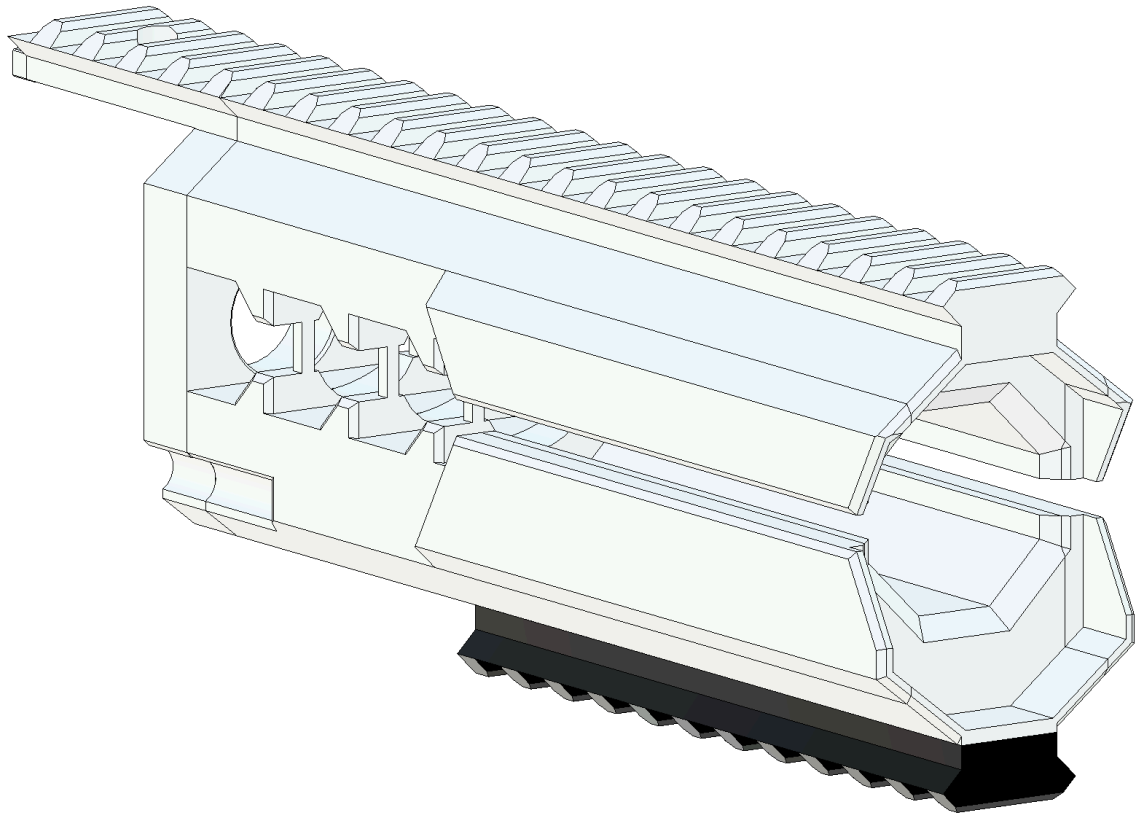

Step 2: Insert Support Bars and Lock Insert

Insert the longer `RGB_TopSupportBar` and shorter `RGB_BottomSupportBar` into the rear slots. Install 1x 6-32 Phillips screw into the bottom of `RGB_MainBody` to lock the insert and bottom support bar.

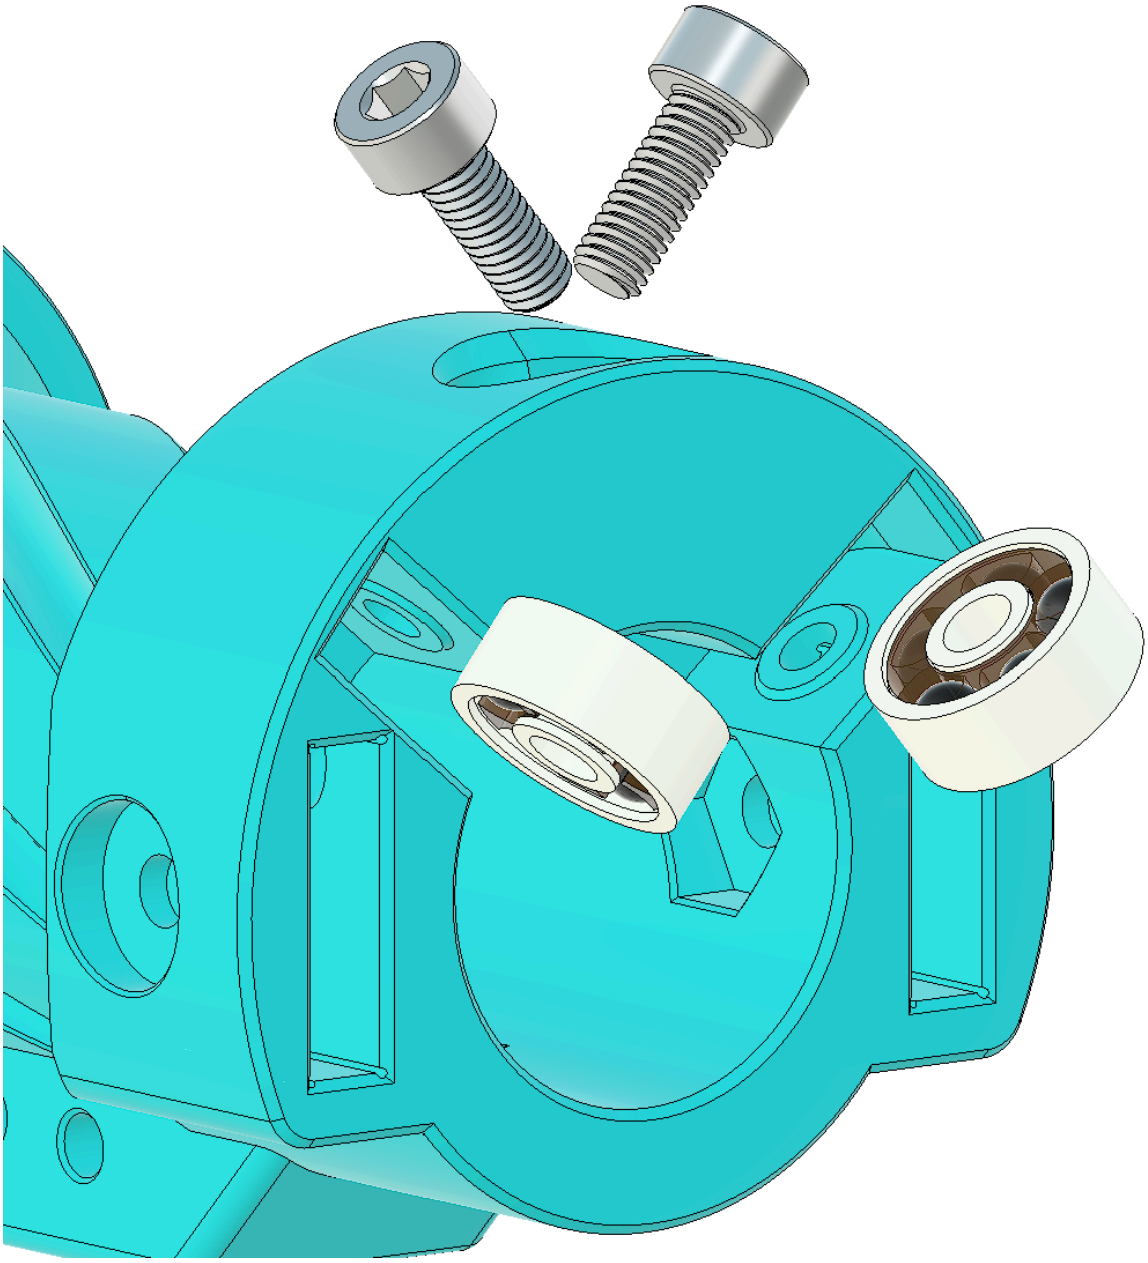

Step 3: Attach Base
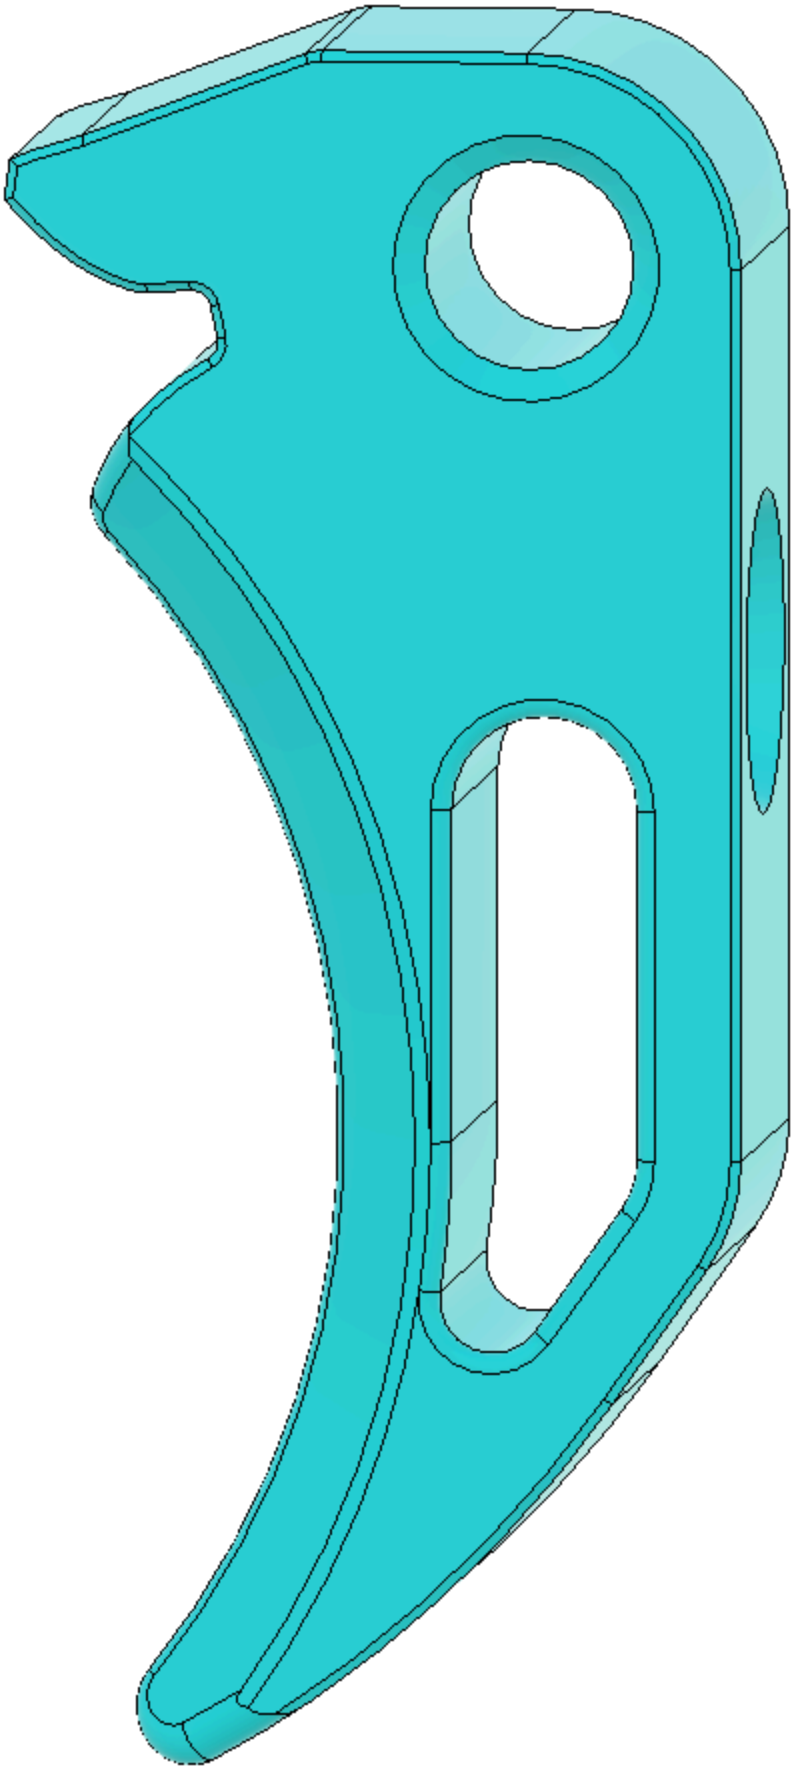
Install `RGB_Base` to `RGB_MainBody` and secure with 5x 6-32 socket head screws. Do not overtighten.