Bipod Sub Assembly

Steps

Step 1
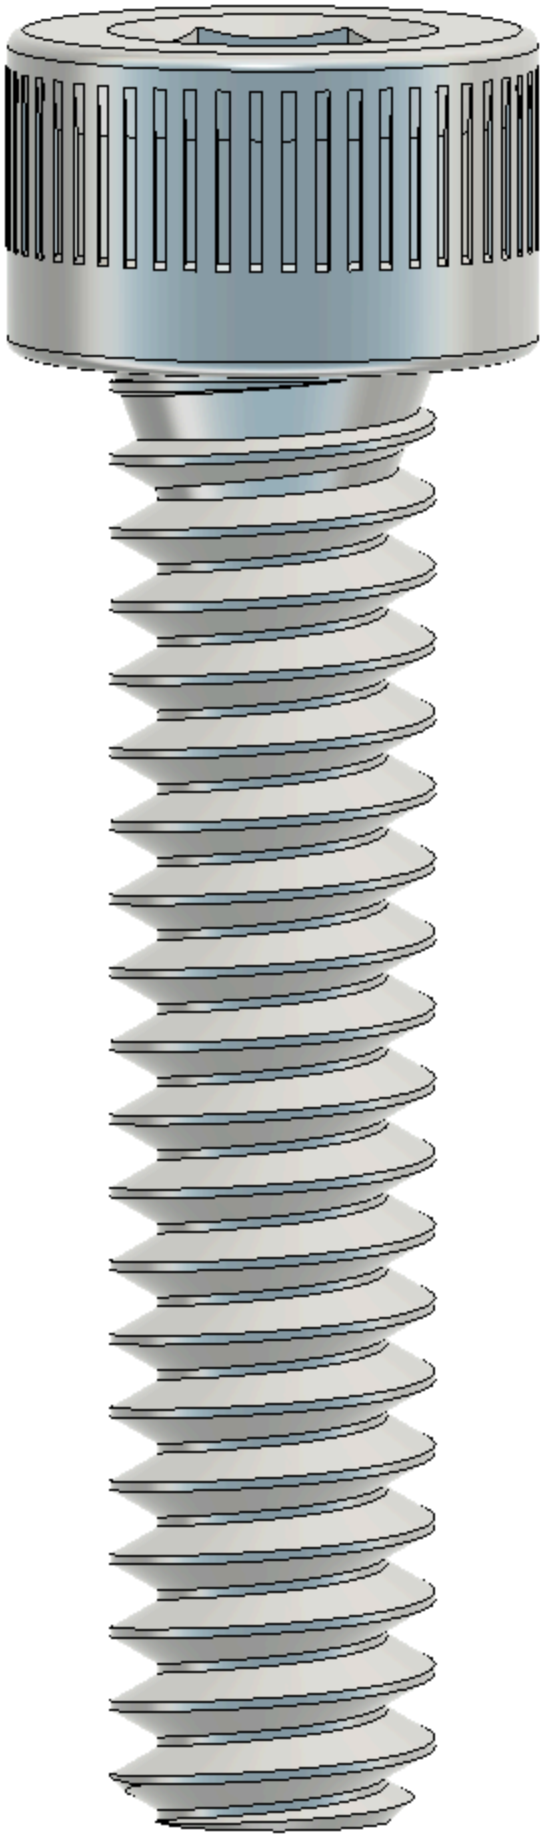
Insert the RightLeg into the right side of the Core, then secure it with a 6-32 ⅝“ Socket Head Screw. Make sure the indent in the RightLeg faces inwards, otherwise you may have put it on the wrong side.