Railgun Bipod Variant Final Assembly

Steps

Step 1
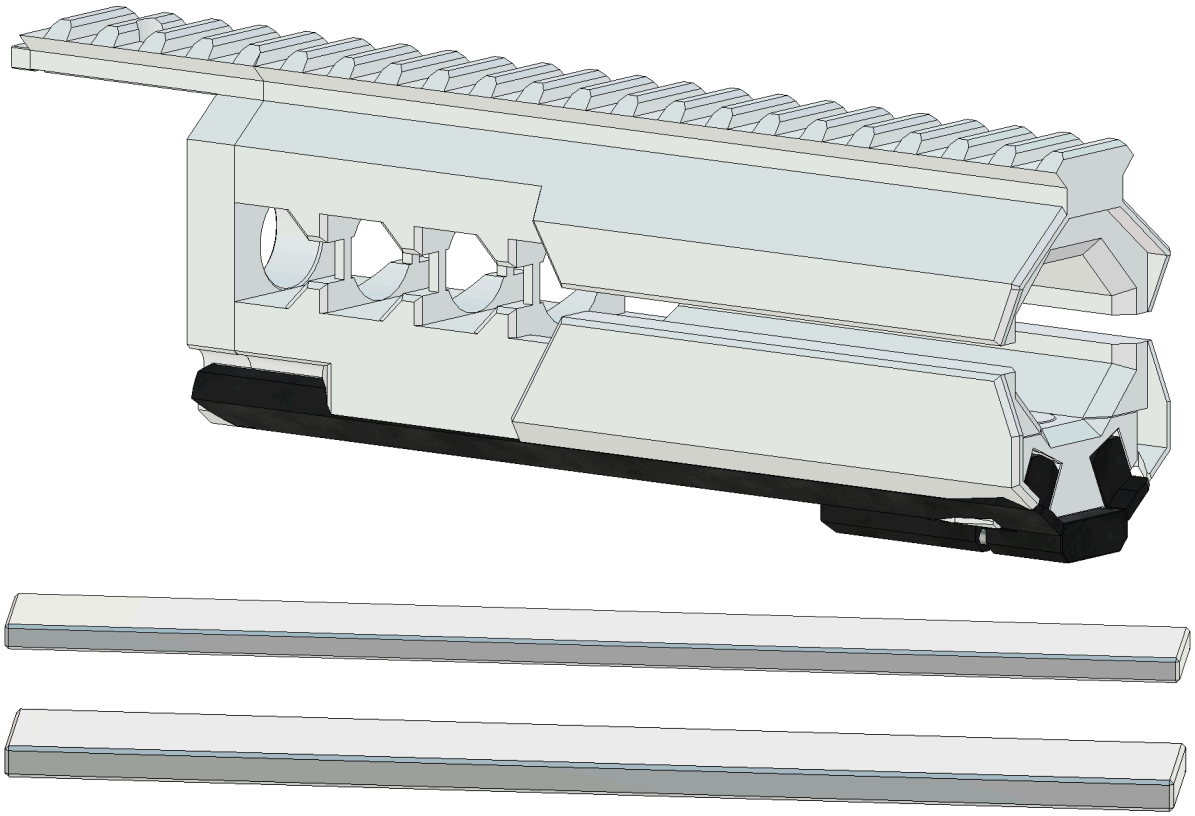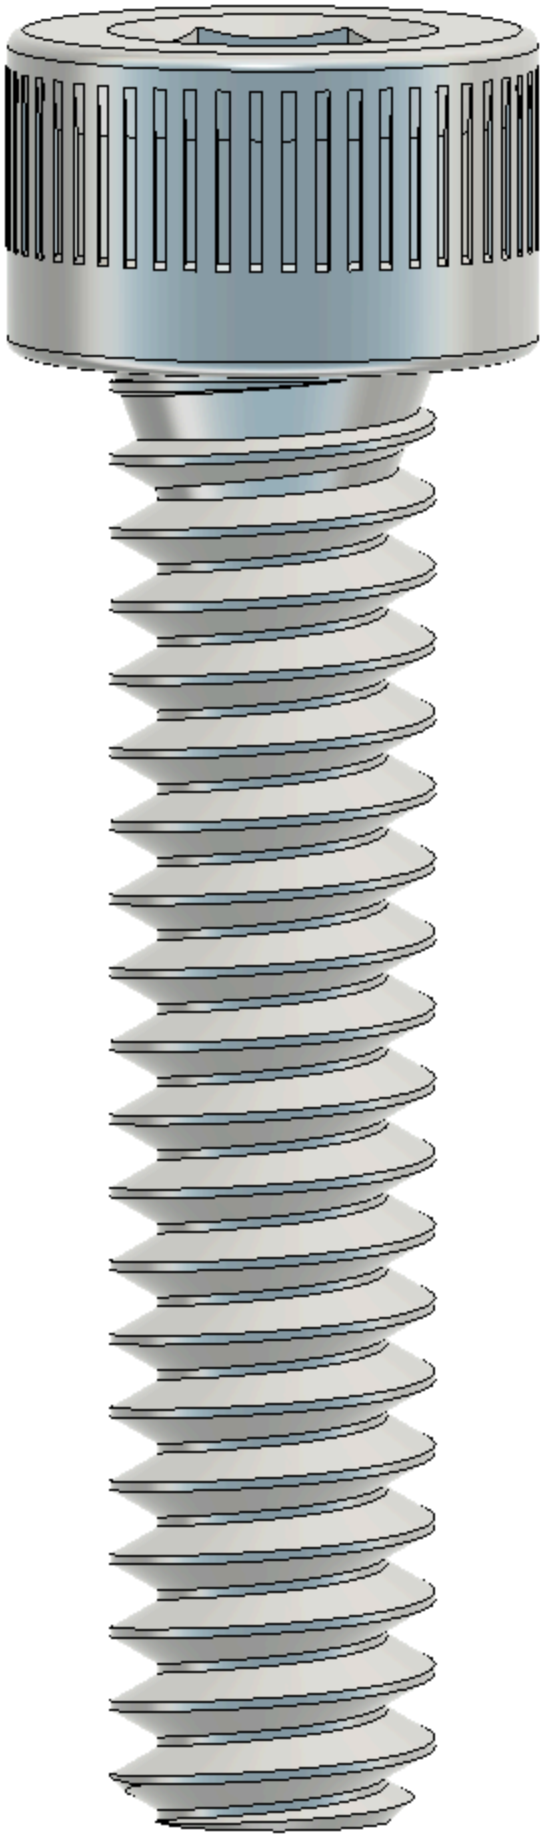
Install a 6-32 ¼” Heat Set Insert into RGB_Insert, making sure it sits flush and does not protrude. Insert the RGB_Insert flat side up into the RGB_MainBody, pushing it in as far as it will go.