


GMS 10.8 Tutorial

MODFLOW - Conceptual Model Approach 4

An introduction to GMS

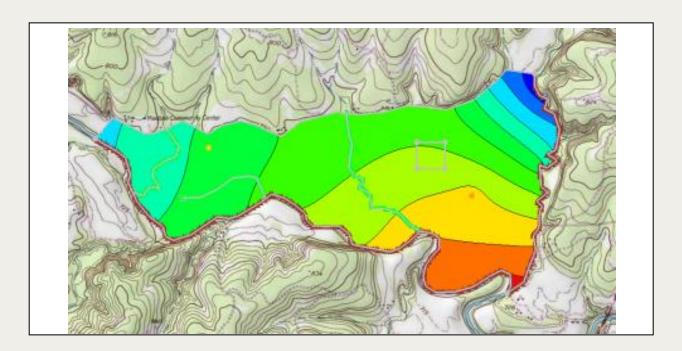

Objectives

The conceptual model approach involves using the GIS tools in the Map module to develop a conceptual model of the site being modeled. The location of sources/sinks, layer parameters such as hydraulic conductivity, model boundaries, and all other data necessary for the simulation can be defined at the conceptual model level without a grid.

Prerequisite Tutorials

- MODFLOW Conceptual Model Approach 1
- MODFLOW Conceptual Model Approach 3

Required Components

- GMS Core
- Geostatistics
- MODFLOW Interface

Time

15–25 minutes



1	- Ir	ntroduction	
•	1.1	Getting Started3	
2		mporting the Project4	
3		Saving the Project4	
4		Redefining the Recharge4	
•	4.1	Creating the Landfill Boundary Polygon5	
	4.2	Assigning the Recharge Values	
5		Redefining the Hydraulic Conductivity6	
J	5.1	Turning on Vertical Anisotropy6	
	5.2	Specifying the Horizontal K	
6		Modifying the Wells and Drains Coverages7	
U	6.1	Turn on MNW27	
	6.2	Modifying the Existing Well	
	6.3	Assigning the Drain Elevation8	
7		Converting the Conceptual Model8	
0			
8		Checking and Saving the Simulation8	
9		Running MODFLOW9	
10	10 Viewing the Flow Budget		
11	C	Conclusion10	

1 Introduction

This tutorial builds on the "MODFLOW – Conceptual Model Approach 3" tutorial. In that tutorial, a one-layer grid was expanded to include multiple layers, and elevations were interpolated to the grid layers.

This tutorial starts with the same model and makes it more complex and realistic. One of the wells will be switched to use the MNW2 package with a well screen that partially penetrates both layers. An imported shapefile will be used to define multiple recharge polygons to simulate a landfill.

The problem being solved in this tutorial is a site in East Texas as illustrated in Figure 1. This tutorial evaluates the suitability of a proposed landfill site with respect to potential groundwater contamination. The results of this simulation are used as the flow field for a particle tracking and a transport simulation in the MODPATH and MT3DMS tutorials.

The tutorial models the groundwater flow in the valley sediments bounded by the hills to the north and the two converging rivers to the south. A typical north-south cross section through the site is shown in Figure 1b. The site is underlain by limestone bedrock which outcrops to the hills at the north end of the site. There are two primary sediment layers: an upper layer modeled as unconfined, and a lower layer modeled as confined.

The boundary to the north is a no-flow boundary, and the remaining boundary is a specified head boundary corresponding to the average stage of the rivers. The influx into the system is primarily through recharge due to rainfall. Creek beds in the area are sometimes dry, but occasionally flow due to influx from the groundwater. The tutorial represents these creek beds using drains. Two production wells in the area are included in the model.

Although the site modeled in this tutorial is an actual site, the landfill and the hydrogeological conditions at the site have been fabricated. The stresses and boundary conditions used in the simulation were selected to provide a simple—yet broad—sampling of the options available for defining a conceptual model.

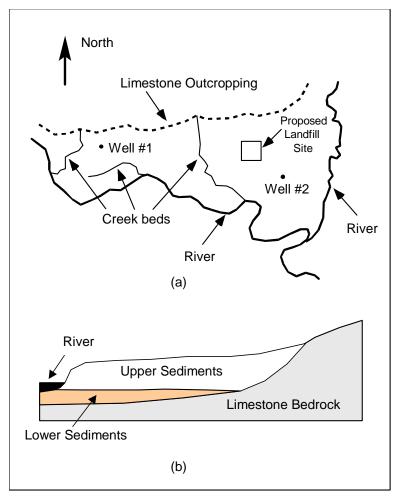


Figure 1 Site to be modeled in this tutorial. (a) Plan view of site. (b) Typical north-south cross section through site

This tutorial discusses and demonstrates:

- Defining a recharge polygon by importing a shapefile and converting it to feature objects.
- Defining well screens in the conceptual model.
- Assigning drain elevations using a raster.
- Mapping the conceptual model to MODFLOW.
- Checking the simulation and running MODFLOW.
- · Viewing the results.

1.1 Getting Started

Do the following to get started:

- 1. If necessary, launch GMS.
- 2. If GMS is already running, select *File* | **New** to ensure that the program settings are restored to their default state.

2 Importing the Project

The first step is to import the East Texas project. This will read in the MODFLOW model, the solution, and all other files associated with the model.

To import the project, do as follows:

- 1. Click **Open** if to bring up the *Open* dialog.
- 2. Select "Project Files (*.gpr)" from the Files of type drop-down.
- Browse to the modfmap4 directory and select "start.gpr".
- 4. Click **Open** to import the project and close the *Open* dialog.

The Main Graphics Window will appear as in Figure 2.

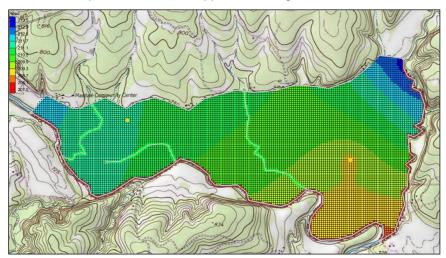


Figure 2 After importing the project

3 Saving the Project

Before making any changes, save the project under a new name.

- 1. Select File | Save As... to bring up the Save As dialog.
- 2. Select "Project Files (*.gpr)" from the Save as type drop-down.
- 3. Enter "EastTexas4.gpr" as the File name.
- 4. Click Save to save the file under the new name and close the Save As dialog.

Be sure to **Save** be periodically throughout the tutorial.

4 Redefining the Recharge

Assume the recharge over the area being modeled is uniform except for at the landfill. The recharge in the area of the landfill will be reduced due to the landfill liner system.

4.1 Creating the Landfill Boundary Polygon

The first step is to create the arc delineating the boundary of the landfill. For this tutorial, import the boundary from an existing landfill shapefile.

- 1. Select the " GIS Layers" folder in the Project Explorer to make it active.
- 2. Select GIS | Add Shapefile Data... to bring up the Select shapefile dialog.
- 3. Select "Shapefile (*.shp)" from the Files of type drop-down.
- 4. Select "landfill_arcs.shp" and click **Open** to import the shapefile and close the *Select shapefile* dialog.

Now that the shapefile is imported, convert it into feature objects in the "Recharge" coverage.

- 5. Expand the " Map Data" folder, including the " East Texas" conceptual model within it.
- 6. Select the " Recharge" coverage to make it active.
- 7. Select " landfill_arcs.shp" under " GIS Layers" in the Project Explorer.
- 8. Select *GIS* / **Shapes** → **Feature Objects**. The *Step 1 of 3* page of the *GIS to Feature Objects Wizard* dialog will appear.
- 9. Click **Next** to go to the *Step 2 of 3* page of the *GIS to Feature Objects Wizard* dialog.
- 10. On the *Mapping* row of the *Mapping preview* section, select "Elevation" from the drop-down in the *ARC_ELEV* column.
- 11. Click **Next** to go to the *Step 3 of 3* page of the *GIS to Feature Objects Wizard* dialog.
- 12. Click Finish to close the GIS to Feature Objects Wizard dialog.

The landfill is now created and visible in the Graphics Window (Figure 3). With the landfill boundary defined, it is necessary to rebuild the polygons.

13. Click the **Build Polygons** Harron.

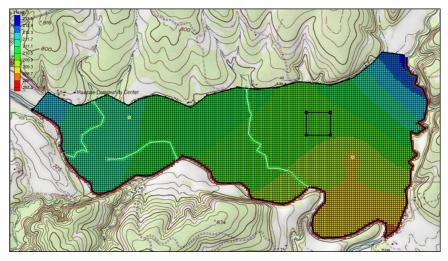


Figure 3 The landfill is outlined as a black square

4.2 Assigning the Recharge Values

Now that the recharge zones are redefined, it is possible to assign the recharge values for the landfill polygon.

- 1. Select the " Recharge" coverage to make it active.
- 2. Using the **Select Polygons** tool, double-click on the landfill polygon to bring up the *Attribute Table* dialog.
- 3. Enter "0.00006" as the Recharge rate.

Note: This recharge rate is small relative to the rate assigned to the other polygons. The landfill will be capped and lined and thus will have a small recharge value. The recharge essentially represents a small amount of leachate that escapes from the landfill.

4. Click **OK** to close the *Attribute Table* dialog.

5 Redefining the Hydraulic Conductivity

As in the "MODFLOW – Conceptual Model Approach 3" tutorial, a two-layer model will be used here. Thus, it is necessary to define the hydraulic conductivity for the second layer and the vertical anisotropy for both layers. Constant values will be used for the second layer.

5.1 Turning on Vertical Anisotropy

- 1. Right-click on the " Aquifer Layer 1" coverage and select **Coverage Setup...** to bring up the *Coverage Setup* dialog.
- 2. In the Areal Properties column, turn on Vertical anis.
- 3. Click **OK** to close the *Coverage Setup* dialog.
- 4. Select " Aquifer Layer 1" to make it active.
- 5. Double-click on the polygon to bring up the Attribute Table dialog.
- 6. Enter "4.0" in the Vertical anis. column.

This makes the vertical hydraulic conductivity one fourth of the horizontal conductivity.

7. Click **OK** to close the *Attribute Table* dialog.

5.2 Specifying the Horizontal K

For the new layer, do the following:

- 1. Select "Aguifer Layer 2" in the Project Explorer to make it active.
- 2. Using the **Select Polygons** tool, double-click on the polygon to bring up the *Attribute Table* dialog.
- 3. Enter "10.0" for the Horizonal K.
- 4. Click **OK** to close the *Attribute Table* dialog.

6 Modifying the Wells and Drains Coverages

Since our model has two layers, it is necessary to specify in which grid layer the wells should be placed when mapping the conceptual model to the grid. There are three ways to do this.

The simplest way is to specify the grid layer in the conceptual model, but that requires knowing how many grid layers will be in the project and where they will be when building the conceptual model. The conceptual model would also need to be changed if grid layers were later added or subtracted.

The second way is to use a well screen with the WEL package. This allows for specifying the top and bottom of the screened interval of the well. When the conceptual model is mapped to the grid, the well will be placed automatically in the appropriate grid layer (or layers) based on which grid layers intersect the well screen. If multiple grid layers are intersected by the well screen, multiple wells will be created.

The third way is to use the MNW2 package and define the screened interval. The MNW2 package is a more realistic well package that better models partially penetrating wells and wells that have more than one screened interval and/or draw from multiple grid layers. This tutorial will use this option.

The conceptual model will be modified so it uses real terrain data for elevations. The terrain elevations will come from a raster. The raster will also be used to define the drain elevations. When the drain arcs are discretized onto the model grid, the cells that intersect the arcs will be found. Then the drain elevation is interpolated from the raster to the cell centers.

This method is particularly helpful with large models where the elevation for each drain at the arc nodes would otherwise have to be manually determined and entered.

6.1 Turn on MNW2

It is necessary to make the MNW2 properties available in the coverage.

- 1. Right-click the " Wells" coverage in the Project Explorer and select **Coverage Setup...** to bring up the *Coverage Setup* dialog.
- 2. In the Sources/Sinks/BCs column, turn on Wells (MNW2).
- 3. Click **OK** to close the Coverage Setup dialog.

6.2 Modifying the Existing Well

Now edit the eastern well.

- 1. Select the " Wells" coverage in the Project Explorer to make it active.
- 2. Using the **Select Points\Nodes** \(\strict{\kappa} \) tool, select the well on the eastern (right) side of the model.
- 3. Click **Properties** ** to bring up the *Attribute Table* dialog.
- 4. In the table, select "well (MNW2)" from the drop-down in the *Type* column.
- 5. Scroll to the right and enter "-300.0" in the Qdes (m^3/d) field.
- 6. Select "THIEM" from the drop-down in the LOSSTYPE column.
- 7. Check the box in the Vertical Boreline column.

- 8. Click on the button in the Boreline column to bring up the Table dialog.
- 9. In the row marked with a star *, enter "180.0" in the *Z screen begin* column and "165.0" in the *Z screen end* column.

These values make the well screen go through both layers 1 and 2.

- 10. In the row 1, enter "0.05" in the Rw column.
- 11. Click **OK** to exit the *Table* dialog.
- 12. Click **OK** to exit the *Attribute Table* dialog.

6.3 Assigning the Drain Elevation

It is now possible to assign drain elevation using these data.

- 1. Select " Drains" in the Project Explorer to make it active.
- 2. Click on the **Select Points/Nodes** / tool, then select *Edit |* **Select All**.
- 3. Click **Properties f** to bring up the *Attribute Table* dialog.
- 4. At the top right, select "drain" from the BC type drop-down.
- 5. In the *All* row, select "<Raster>" from the *Bot. Elev. (m)* drop-down to bring up the *Select Raster* dialog.
- 6. Select "elev_10.tif" and click **OK** to close the Select Raster dialog.
- 7. Click **OK** to exit the *Attribute Table* dialog.

7 Converting the Conceptual Model

It is now possible to convert the conceptual model from the feature object-based definition to a grid-based MODFLOW numerical model.

- Right-click on the "Seast Texas" conceptual model and select Map To |
 MODFLOW / MODPATH to bring up the Map → Model dialog.
- 2. Select All applicable coverages and click **OK** to close the Map → Model dialog.

The cells underlying the drains, wells, and general head boundaries were all identified and assigned the appropriate sources/sinks. The heads and elevations of the cells were determined by linearly interpolating along the general head and drain arcs. The conductance of the drain cells were determined by computing the length of the drain arc overlapped by each cell and multiplying that length by the conductance value assigned to the arc. In addition, the recharge and hydraulic conductivity values were assigned to the appropriate cells.

8 Checking and Saving the Simulation

At this point, the MODFLOW data has been completely defined, and it is possible to run the simulation. First run the Model Checker again to see if GMS can identify any mistakes that may have been made.

1. Select the " 3D Grid Data" folder in the Project Explorer to switch to the 3D Grid module.

- 2. Select MODFLOW | Check Simulation... to bring up the Model Checker dialog.
- Click Run Check. There should be no errors.
- 4. Click **Done** to exit the *Model Checker* dialog.
- 5. Click Save .

Saving the project not only saves the MODFLOW files but also saves all data associated with the project, including the feature objects and scatter points.

9 Running MODFLOW

It is now possible to run MODFLOW.

- 1. Select *MODFLOW* | **Run MODFLOW** to bring up the *MODFLOW* model wrapper dialog. The process should be completed quickly.
- When the solution is completed, turn on Read solution on exit and Turn on contours (if not on already) and click Close to exit the MODFLOW model wrapper dialog.

The Graphics Window should appear similar to Figure 4. To view the contours for the second layer, do as follows:

- 3. Click the up arrow in the Ortho Grid Toolbar.
- 4. After viewing the contours, return to the top layer by clicking the down arrow.

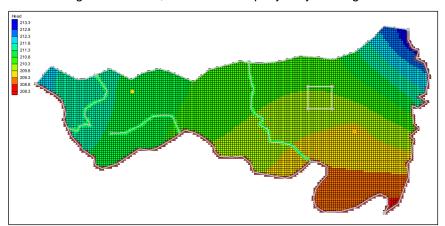


Figure 4 Contours of layer 1 after the model run

10 Viewing the Flow Budget

The MODFLOW solution consists of both a head file and a cell-by-cell flow (CCF) file. GMS can use the CCF file to display flow budget values. For example, to know if any water exited from the drains, do the following:

- 1. Select "O Drains" to make it active.
- 2. Using the **Select Arcs** \mathcal{N} tool, select on the rightmost drain arc.

Notice that the total flow through the arc is displayed in the strip at the bottom of the window. Next, view the flow to the river.

- Select " Rivers" to make it active.
- Using the Select Arcs tool, select the head arc at the bottom and view the flow.
- 5. Using the **Select Arcs** tool while holding down the *Shift* key, select the other general head arc.

Notice that the total flow shown is for all selected arcs. Flow for a set of selected cells can be displayed as follows:

- 6. Select the " 3D Grid Data" folder in the Project Explorer to switch to the 3D Grid module.
- 7. Using the **Select Cell** tool, select a group of cells by dragging a box around the cells.
- 8. Select MODFLOW | Flow Budget... to bring up the Flow Budget dialog.

This dialog shows a comprehensive flow budget for the selected cells.

- 9. Click **OK** to exit the *Flow Budget* dialog.
- 10. Click anywhere outside the model to unselect the cells.

11 Conclusion

This concludes the "MODFLOW – Conceptual Model Approach 4" tutorial. The following topics were discussed and demonstrated:

- It is possible to import shapefiles and convert them to feature objects for use in the conceptual model.
- Well screens can be used to automatically locate the correct 3D grid layer in which the wells are located.
- The MNW2 package more accurately models wells that are screened across multiple layers.
- Elevations for boundary conditions, such as drains, can be specified using a raster.