


GMS 10.8 Tutorial

MODFLOW-USG Transport - Grid Approach

Creating a MODFLOW-USG Transport model using the grid approach

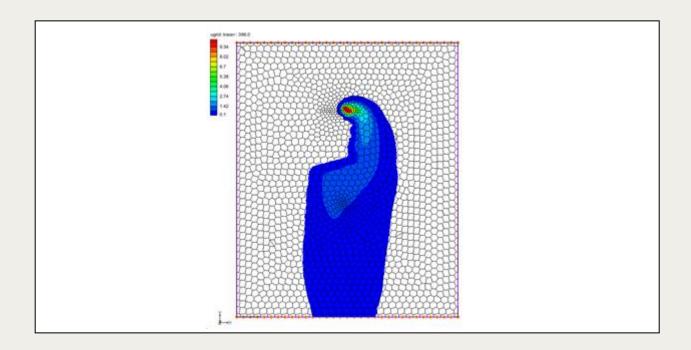

Objectives

Construct a MODFLOW-USG Transport model using the grid approach. Values are manually assigned to the grid. Simple models can be easily constructed using the grid approach.

Prerequisite Tutorials

• MT3DMS – Grid Approach

Required Components

- GMS Core
- MODFLOW-USG Transport

Time

15–25 minutes



1	I Introduction2			
2	Getting Started3			
	2.1 The MT3DMS Model	}		
	2.2 Saving With a New Name4	Ļ		
3	Switching to MODFLOW-USG Transport4	Ļ		
	3.1 Switching from Steady State to Transient5	;		
	3.2 Saving and Running the Model			
4	Enabling Transport6	;		
5	BCT Package Inputs7	•		
6	6 Injecting Contaminant at the Well9			
7	7 Output Control			
8	8 Saving and Running MODFLOW-USG Transport11			
9				
10				
11	Conclusion			

1 Introduction

This tutorial describes how to perform a MODFLOW-USG Transport simulation within GMS. It builds on the MT3DMS – Grid Approach tutorial, and converts the MT3DMS model created in that tutorial into a MODFLOW-USG Transport model. The MT3DMS and the MODFLOW-USG Transport models are then compared to see how closely they match.

The problem in this tutorial (Figure 1) corresponds to a sample problem described in the MT3DMS documentation. The problem consists of a low K zone inside a larger zone. The sides of the region are no flow boundaries. The top and bottom are constant head boundaries that cause the flow to move from the top to the bottom of the region. An injection well with a specified concentration provides the source of the contaminants. A pumping well serves to withdraw contaminated water migrating from the injection well. A steady-state flow solution will be computed and a transient transport simulation will be performed over a one-year period.

Page 2 of 14

¹ Zheng, Chunmiao and Wang, P. Patrick (December 1999). "A Two-Dimensional Application Sample" in *MT3DMS: A Modular Three-Dimensional Multispecies Transport Model for Simulation of Advection, Dispersion, and Chemical Reactions of Contaminants in Groundwater Systems; Documentation and User's Guide*, Strategic Environmental Research and Development Program (SERDP), U.S. Army Corps of Engineers, Contract Report SERDP-99-1, pp. 152-154. http://hydro.geo.ua.edu/mt3d/mt3dmanual.pdf

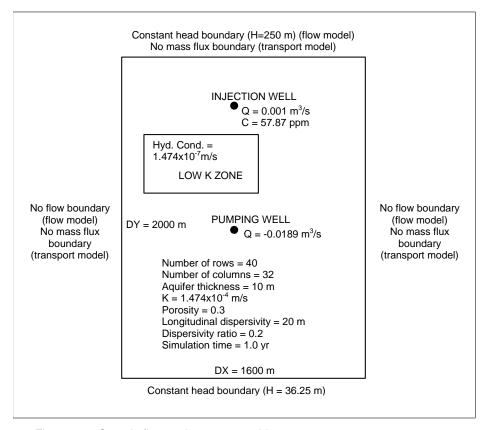


Figure 1 Sample flow and transport problem

2 Getting Started

Do the following to get started:

- 1. If necessary, launch GMS.
- 2. If GMS is already running, select *File* | **New** to ensure that the program settings are restored to their default state.

2.1 The MT3DMS Model

Start with reading the MT3DMS model into GMS.

- 1. Click **Open** if to bring up the *Open* dialog.
- 2. Select "Project Files (*.gpr)" from the Files of type drop-down.
- 3. Browse to the \text{MODFLOW-USG-Transport\mt3dgrid} directory and select \text{"mt3dgrid.gpr".}
- 4. Click **Open** to import the project and exit the *Open* dialog.
- 5. In the Project Explorer, under the "mt3dgrid (MT3DMS)" solution folder, select the "tracer" dataset.
- 6. In the *Time Steps* window, scroll to the bottom and select the last time step (13. 365.0).

The model should appear similar to Figure 2. Notice the contaminant injected at the well in the top of the model flows around the low conductivity area towards the bottom of the model. If desired, select different time steps to see how the plume changes over time.

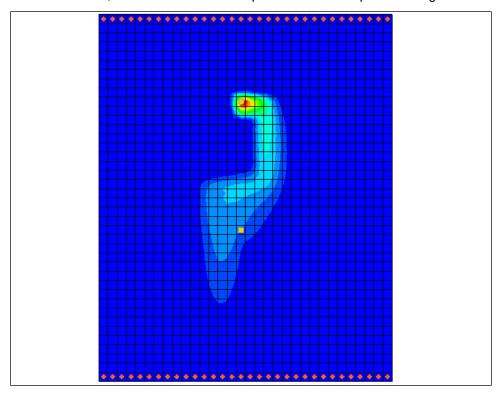


Figure 2 MT3D solution

2.2 Saving With a New Name

Now to save the project under a new name:

- 1. Select File | Save As... to bring up the Save As dialog.
- 2. Select "Project Files (*.gpr)" from the Save as type drop-down.
- 3. Enter "usg-transport.gpr" as the File name.
- 4. Click **Save** to save the project with a new name and close the Save As dialog.

3 Switching to MODFLOW-USG Transport

Now to switch the model from using MODFLOW 2000 to MODFLOW-USG Transport, then to create a flow solution.

- 1. Select MODFLOW | **Global Options** to open the MODFLOW Global/Basic Package dialog.
- 2. In the MODFLOW version section, select the USG Transport option.

3.1 Switching from Steady State to Transient

Contaminant transport modeling requires a transient simulation. The MT3DMS model used a steady state MODFLOW flow solution with a transient MT3DMS model. For this example, it is necessary to change the MODFLOW-USG Transport model to be transient.

Stress Periods

Start with setting the stress period for the model.

- 1. Set the Model type to Transient.
- 2. Click on Stress Periods to open the Stress Periods dialog.
- 3. Change the Number of stress periods to "2".
- 4. Change the *Length* of the second stress period to "365.0".
- 5. Change the *Num Time Steps* on the second stress period to "20".
- Click **OK** to exit the Stress Periods dialog.
- 7. Click **OK** to exit the MODFLOW Global/Basic Package dialog.
- 8. Click **Yes** on the warning dialog about switching to USG Transport, if it appears.
- 9. Click **OK** on the warning dialog about the SMS solver, if it appears.

Specific Yield

Now to set the specific yield parameters:

- Select MODFLOW | LPF Layer Property Flow to open the LPF Package dialog.
- 2. Click **Specific Storage** to open the *Specific Storage* dialog.
- 3. Click **Constant** → **Grid** to open the *Grid Value* dialog.
- 4. Enter "1e-4" for the Constant value for grid.
- 5. Click **OK** to close the *Grid Values* dialog.
- 6. Click **OK** to close the *Specific Storage* dialog.
- 7. Click **OK** to close the *LPF Package* dialog.

3.2 Saving and Running the Model

- 1. Click the **Save** macro.
- When the model finishes, click Close to import the solution.

The flow solution should appear as shown in Figure 3.

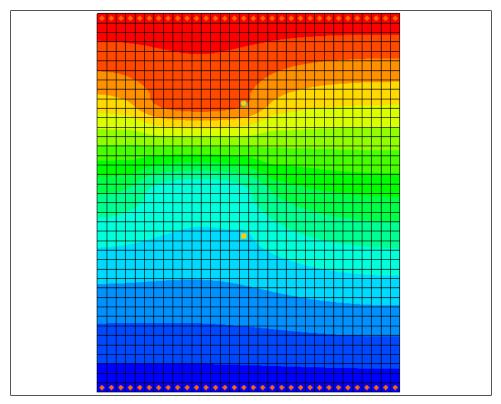


Figure 3 Model contours after MODFLOW-USG Transport run

4 Enabling Transport

Now start adding contaminant transport to the model. The first process is to enable the main transport package in MODFLOW-USG Transport.

- 1. Select MODFLOW | Global Options to open the MODFLOW Global/Basic Package dialog.
- 2. Click **Packages** to open the *MODFLOW Packages / Processes* dialog.
- 3. Under *Optional packages / processes*, turn on the *BCT Block Centered Transport* option.

The BCT process is needed if transport or density dependent flow is to be included in the model. The packages/processes that only come with MODFLOW-USG Transport are:

- BCT Block Centered Transport
- DDF Density Driven Flow
- DPT Dual Porosity Transport
- PCB Prescribed Concentration Boundary

The DDF package only consists of a few values so it is included with the BCT package and is not listed in the *MODFLOW Packages / Processes* dialog. The other packages/processes are listed.

For this model, only the BCT process needs to be added.

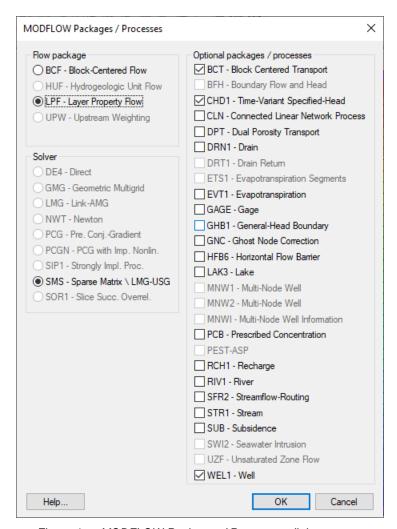


Figure 4 MODFLOW Packages / Processes dialog

- 4. Click **OK** to close the MODFLOW Packages / Processes dialog.
- 5. Click **OK** to close the MODFLOW Global/Basic Package dialog.

5 BCT Package Inputs

Next to look at the BCT package:

1. Select MODFLOW | Optional Packages | BCT – Block Centered Transport to open the BCT Process dialog.

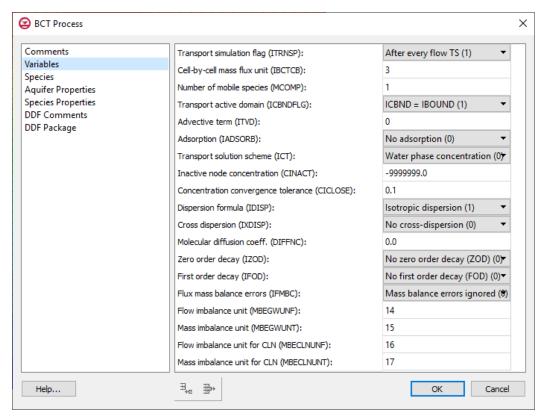


Figure 5 BCT Package dialog

The dialog is divided into two parts: one on the left which shows the main sections, and one on the right which shows the inputs for the current section. Here's a brief explanation of each section:

Section	Description
Comments	Comment lines can be added and will appear at the top of the BCT file.
Variables	Variables corresponding to item 1a in the BCT input file.
Species	The list of species. The number of species equals MCOMP in the Variables section. GMS allows the user to give each species a name.
Aquifer Properties	Cell-by-cell inputs independent of species such as porosity.
Species Properties	Cell-by-cell inputs that depend on the species, such as adsorption.
DDF Comments	Comment lines can be added and will appear at the top of the DDF file.
DDF Package	Inputs corresponding to the DDF (Density Driven Flow) package.

Variables

It is necessary to turn on the dispersion option.

- 1. Select the Variables item on the left.
- 2. Change the Dispersion formula (IDISP) to "Isotropic dispersion (1)".

Species

- 1. Select the Species item on the left.
- 2. Under Species Name, change the name to "tracer".

MODFLOW-USG Transport does not save the species name but GMS does.

Aquifer Properties

1. Select the Aguifer Properties item on the left.

By default, the aquifer properties use a constant value for the entire grid, but values can be specified on a cell-by-cell basis. The ICBUND array, which specifies which cells will be active when modeling transport, will be ignored based on the *ICBNDFLG* value in the *Variables* section.

The value for bulk density (BULKD) is 0.0 which means that no sorption is being modeled. Now to change the dispersion parameters:

- 2. Change the Constant Value for DL (longitudinal dispersivity) to "20.0".
- 3. Change the Constant Value for DT (transverse dispersivity) to "0.2".

Species Properties

1. Select Species Properties on the left.

Due to an issue in MODFLOW-USG Transport, the starting concentration cannot be 0.0. Therefore, change the concentration to a small number for this model.

2. For CONC, enter a Constant Value of "0.001".

The values for adsorption (ADSORB), and the reaction terms (ZODRW, ZODRS) are all 0.0 which is correct for our simple model.

DDF

The *DDF Comments* and *DDF Package* sections are for the Density Driven Flow package and are included in the *BCT Process* dialog in GMS. This example is not modeling density flow, so ignore these sections.

1. Click **OK** to close the *BCT Process* dialog.

6 Injecting Contaminant at the Well

In this model, a contaminant is injected into the aquifer via the well at the top of the model. To set this up:

- Select MODFLOW | Optional Packages | WEL Well to open the MODFLOW Well Package dialog.
- 2. Click Edit AUX to open the AUX Variables dialog.

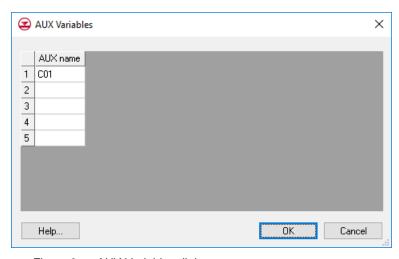


Figure 6 AUX Variables dialog

This dialog allows defining up to five auxiliary variables (or AUX variables) to be included in the well package. With MODFLOW-USG Transport, AUX variables can be used with the WEL, RIV, CHD, and GHB packages to specify a concentration for water entering the model via these boundary conditions. If multiple species are used, the concentration can be specified for each species (up to 5) using additional AUX variables. The AUX variables must be named following a specific pattern, which is a "C" followed by a two-digit number with a leading zero. For example, species 1 would use an AUX variable named "C01", species 2 would use an AUX variable named "C02" etc.

- 3. In the first row, enter "C01".
- 4. Click **OK** to close the *AUX Variables* dialog.
- 5. For the well in *cell ID "*304", enter "57.87" in the *C01* column.
- 6. Click **OK** to close the MODFLOW Well Package dialog.

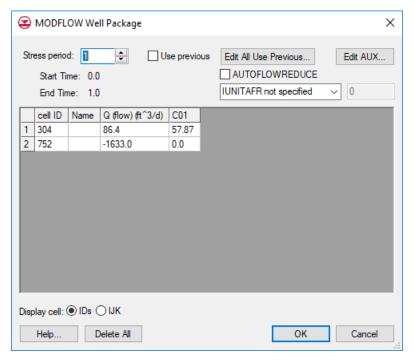


Figure 7 MODFLOW Well Package dialog

7 Output Control

Next to specify the output options by doing the following:

- Select MODFLOW | OC Output Control... to open the MODFLOW Output Control dialog.
- 2. Turn on Save concentrations to *.con file.
- 3. Click **OK** to exit the MODFLOW Output Control dialog.

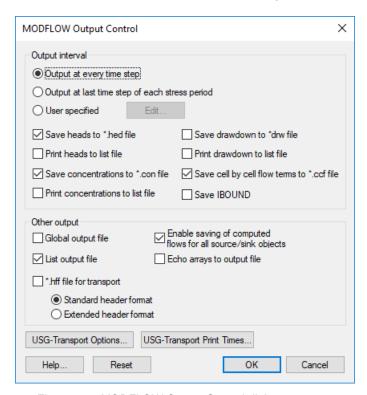


Figure 8 MODFLOW Output Control dialog

8 Saving and Running MODFLOW-USG Transport

Now to save the simulation and run MODFLOW-USG Transport:

- 1. Save the project.
- 2. Click **Run MODFLOW** to bring up the *MODFLOW* model wrapper dialog.
- 3. When the simulation is finished, turn on Read solution on exit.
- 4. Click Close to import the solution and close the MODFLOW dialog.
- 5. In the Project Explorer, under the " usg-transport (MODFLOW)" solution, select the " tracer" dataset.
- 6. In the *Time Steps* window, select the last time step.

The model should appear similar to Figure 9.

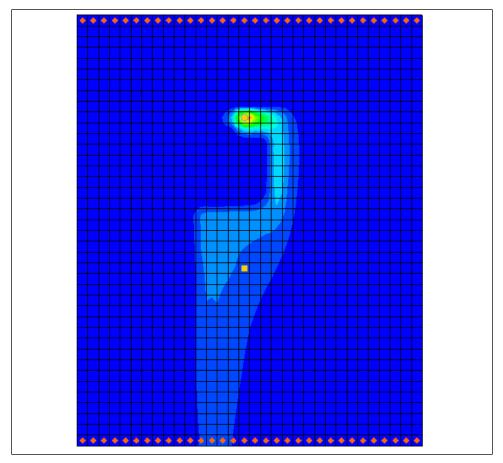


Figure 9 Contaminant plume from the MODFLOW-USG Transport solution

9 Setting Up an Animation

Generating an animation facilitates observing how the solution changes over the oneyear simulation. Do the following to set up the animation:

- 1. Select *Display* | **Animate...** to bring up the *Options* page of the *Animation Wizard* dialog.
- 2. Turn on *Dataset* and click **Next** to go to the *Datasets* page of the *Animation Wizard* dialog.
- 3. Below Run simulation from time, select Use constant interval and enter "36.5" as the Time interval.

This will result in 11 frames.

- 4. Turn on Display clock.
- 5. Click **Finish** to generate the animation and close the *Animation Wizard* dialog.

Now the animation can be opened in an external media player and viewed. If desired, outside of GMS, navigate to the directory for the animation and open the generated MP4 file in the desired media player. The directory where the animation was saved can be found, and adjusted, on the *Options* page of the *Animation Wizard* under the *File type* section.

10 Using a Voronoi Grid

MODFLOW-USG Transport works with unstructured grids. To demonstrate this, open a project that models the same scenario but uses a Voronoi grid.

- 1. Select File | New. Save the current project if prompted.
- 2. Click **Open** \overrightarrow{b} to bring up the *Open* dialog.
- 3. Select "Project Files (*.gpr)" from the Files of type drop-down.
- 4. Browse to *WODFLOW-USG-Transport\mt3dgrid* directory and select "voronoi.gpr".
- 5. Click **Open** to import the project and exit the *Open* dialog.

Notice that this model uses an unstructured grid which contains Voronoi grid cells.

- 6. In the Project Explorer, under the "voronoi (MODFLOW)" solution folder, select the "tracer" dataset.
- 7. In the *Time Steps* window, scroll to the bottom and select the last time step.

Notice that the contours of contaminant concentration are similar to those in the previous project (Figure 10).

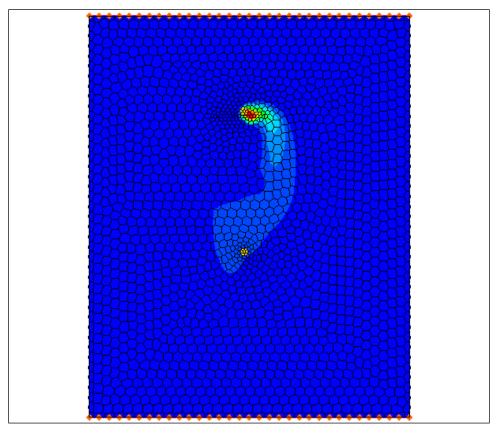


Figure 10 MODFLOW-USG Transport model using a Voronoi UGrid

11 Conclusion

This concludes the "MODFLOW-USG Transport – Grid Approach" tutorial. The following key concepts were discussed and demonstrated in this tutorial:

- MODFLOW-USG Transport can solve for flow only, or coupled flow and transport.
- The main process used for transport is the BCT process. Other packages that can be used for transport include:
 - DDF Density Driven Flow
 - DPT Dual Porosity Transport
 - PCB Prescribed Concentration Boundary
- It is possible to use the Animation Wizard to create an animation in GMS.
- Contaminant concentration can be added to the model by using AUX variables in the WEL, RIV, CHD, and GHB packages.
- The model will generate a cell-by-cell concentration file for each species if the option is turned on in the *Output Control* package.