


GMS 10.8 Tutorial

# HydroGeoSphere - Porous Media Domain

Build a HydroGeoSphere model in GMS

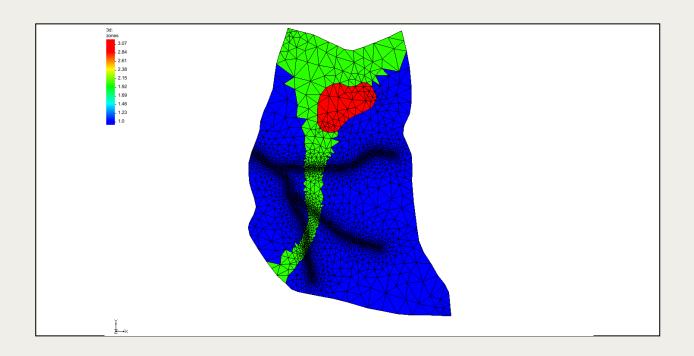

### Objectives

This tutorial demonstrates how to set up a HydroGeoSphere model with a porous media domain in GMS.

### **Prerequisite Tutorials**

Getting Started

### **Required Components**

- GMS Core
- HydroGeoSphere Model & Interface

#### Time

25–45 minutes



1	1 Introduction			
2	Basic Workflow3			
3				
3	3.1	Domains		
4	Cre	ate a HydroGeoSphere Simulation	5	
5	5 Simulation Control6			
5	5.1	Time Stepping	6	
5	5.2	Output	7	
5	5.3	Initial Conditions		
6				
6	3.1	Use a Polygon to Create Zone 3	9	
6	5.2	Set the Porous Media Zone	11	
7	7 Material Properties11			
7	7.1	Create the "Medium Sand" material	12	
7	7.2	Create the "Coarse Sand" material	12	
7	7.3	Create the "Clay" material	13	
8	8 Boundary Conditions13			
9	Sav	e the Project and Simulation	14	
10	10 Run Grok			
11	1 Run Phgs15			
12				
13	Cor	nclusion	15	

#### 1 Introduction

This tutorial demonstrates how to build a HydroGeoSphere (HGS) model in GMS. It is based off of *the Intro to HydroGeoSphere*<sup>1</sup> tutorial from Aquanty. Refer to that tutorial and the *HydroGeoSphere Reference Manual* as needed.

In the *Intro to HydroGeoSphere* tutorial, the "R5 Catchment" model is developed. From that tutorial:

The model is quite simple compared to many 'real world' models, that you may build. But it contains sufficient complexity that it is perfectly suited to demonstrate the overall HydroGeoSphere workflow. The intention of this tutorial is not to perfectly recreate the catchment, but to teach the process of creating a small watershed model in HGS. In fact, several of the inputs for the R5 model are completely arbitrary (e.g. the delineation of soil types and associated hydraulic properties, boundary condition values, etc.).

The R5 catchment covers a small (approximately 0.1 km2) rangeland catchment near Oklahoma City (Figure 3). The defined model includes basic flow in the porous medium and surface/overland flow domains, and includes evapotranspiration.<sup>2</sup>

The *Intro to HydroGeoSphere* tutorial includes groundwater flow, evapotranspiration, and surface flow, but this tutorial only covers groundwater flow. Evapotranspiration and surface flow are covered in the *HydroGeoSphere – Surface Flow and Evapotranspiration* tutorial.

Note: the HGS executables should be downloaded from Aquanty's website before running the HGS simulation: https://www.aquanty.com/hgs-download.

\_

<sup>&</sup>lt;sup>1</sup> Aquanty Guide for New Users, Intro to HydroGeoSphere Tutorial download at https://www.aquanty.com/s/HGS\_Intro\_Tutorial.zip

<sup>&</sup>lt;sup>2</sup> HydroGeoSphere Intro Tutorial, pg 13

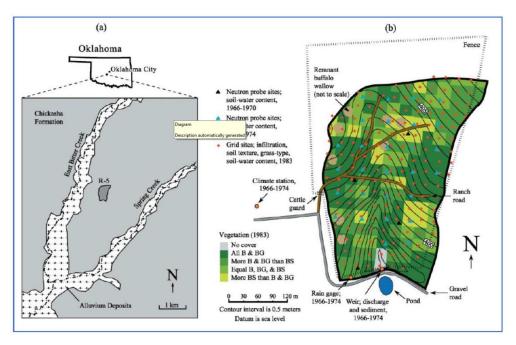


Figure 1 HydroGeoSphere Intro Tutorial, figure 3, pg 14

### 2 Basic Workflow

From the Intro to HydroGeoSphere tutorial, the basic HGS workflow consists of 5 steps:

- 1. Data inputs are prepared (e.g. various GIS files, 2D grid/mesh files, etc.)
- 2. Configure an input data file (the GROK file) for the model pre-processor...
- Use executables (\*.exe) to generate the model input files and solve the simulation...
  - a. Grok.exe compiles the GROK file, generates input files for the numerical simulator
  - b. Phgs.exe reads model input files, performs the numerical simulation (i.e. it 'solves' the model)
  - c. Hsplot.exe OR hgs2vtu.exe reformats model outputs for visualization
- 4. Visualize, analyze and interpret model results...
- 5. Iterate on the model to add complexity, perform scenario analysis, calibrate, etc. <sup>3</sup>

Note that a GROK file is prepared and then the grok.exe runs. During the run, grok.exe reads the GROK file and prepares the actual model input files. Only then can the model (phgs.exe) be run.

The HydroGeoSphere workflow is followed pretty closely when using GMS. The basic steps to build an HGS model in GMS, and how these steps relate to the HydroGeoSphere workflow, are as follows:

1. Create the conceptual model (HGS step 1)

<sup>&</sup>lt;sup>3</sup> HydroGeoSphere Intro Tutorial, pg 13

- 2. Create a 3D UGrid for the porous media domain (HGS step 1)
- 3. Create a 2D UGrid for the 2D domains: surface flow, ET (HGS step 1)
- 4. Save the simulation, which creates the GROK file (HGS step 2)
- 5. Run grok.exe on the GROK file to prepare input files for phgs.exe (HGS step 3a)
- 6. Run phgs.exe (HGS step 3b)
- 7. Read the solution and visualize the results (HGS step 4)
- 8. Iterate on the model to add complexity, perform scenario analysis, calibrate, etc... (HGS step 5, not covered in this tutorial)

### 3 Getting Started

Do as follows to get started:

- 1. If necessary, launch GMS.
- 2. If GMS is already running, select *File* | **New** command to ensure that the program settings are restored to their default state.
- 3. Click **Open** if to bring up the *Open* dialog.
- 4. Select "Project Files (\*.gpr)" from the Files of type drop-down.
- 5. Browse to the *hgs-pm\* folder and select "start.gpr".
- 6. Click **Open** to import the project and exit the *Open* dialog.

The project should be visible in the Graphics Window (Figure 2). The project contains a 3D UGrid, a couple map coverages, and a raster.

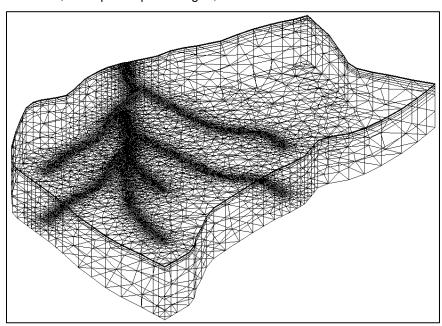


Figure 2 The initial project

Before continuing, it is recommended to save the project with a new name.

- 1. Select File | Save As... to bring up the Save As dialog.
- 2. Browse to the directory for this tutorial.

- 3. Select "Project Files (\*.gpr)" from the Save as type drop-down.
- 4. Enter "hgs\_pm.gpr" as the File name.
- 5. Click **Save** to save the project and close the *Save As* dialog.

#### 3.1 Domains

HydroGeoSphere uses "domains" to describe the different parts of the hydrosphere. The domains currently supported by GMS are:

- 1. Porous media ("pm"): variably-saturated flow in the subsurface.
- 2. Surface flow (or overland flow "olf"): fluid flow on the surface.
- 3. ET ("et"): evapotranspiration.

Only the porous media domain is used in this tutorial.

### 4 Create a HydroGeoSphere Simulation

Now to create the HGS simulation in GMS, do the following:

- 1. In the Project Explorer, right-click and select *New Simulation* | **HydroGeoSphere**.
- 2. Right-click on "Sim" and select Rename.
- 3. Enter "R5" for the new name.

The UGrid needs to be added to the simulation. To do that, drag and drop it below the simulation.

4. Drag the "\$\square\$ 3d" UGrid below the "\$\sum R5" simulation.

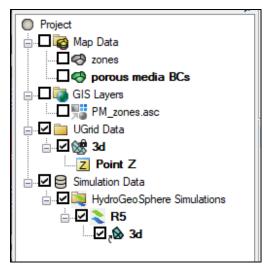


Figure 3 HydroGeoSphere simulation in the Project Explorer

#### 5 Simulation Control

With the simulation created, simulation parameters can now be assigned.

1. Right-click the "
R5" simulation and select **Simulation Control** to open the Simulation Control dialog.

Many HydroGeoSphere inputs are set in the *Simulation Control* dialog. Besides parameters that are traditionally associated with HydroGeoSphere simulation control, this dialog also includes time stepping, output, zones, and initial conditions.

- 2. Select the General tab and enter the following:
  - a. For the Description enter "R5 model from 'Intro to HGS' tutorial".
  - b. Turn on the following options:
    - i. Transient flow
    - ii. Unsaturated
    - iii. Finite difference mode
- 3. Select the Units tab.
- 4. Ensure Units are set to "kilogram-metre-second".
- 5. Select the Saturated flow tab.
- 6. Turn on Flow solver maximum iterations and enter "1000".
- 7. Select the Variably saturated flow tab.
- 8. Make certain the No nodal flow check option is on.

#### 5.1 Time Stepping

- 1. Select the *Time stepping* tab.
- 2. In the *General time step settings* section, turn on the following options and set them to the correct value:
  - a. Initial time step: "0.5"
  - b. Maximum time step: "4000"
  - c. Minimum time step multiplier: "0.5"
  - d. Maximum time step multiplier: "1.2"
  - e. Jacobian epsilon: "1e-6"
  - f. Newton maximum iterations: "12"
  - g. Newton absolute convergence criteria: "5e-3"
  - h. Newton residual convergence criteria: "1e-3"
- 3. In the *Adaptive time step settings* section, turn on the following options and set them to correct value:
  - a. Head control: "10"
  - b. Saturation control: "0.5"
  - c. Newton iteration control: "8"

#### 5.2 Output

- 1. Select the Output tab.
- 2. Click the **Add row** =+ button to add a row in the table.
- 3. Enter or copy/paste the following times (in seconds) into the *Output Times* table:

#### 5.3 Initial Conditions

- 1. Select the Initial conditions tab.
- 2. In the Head section, select Initial head depth to water table and enter "1.0".
- 3. Click the **OK** button to close the *Simulation Control* dialog.

#### 6 Zones

HydroGeoSphere uses the idea of "zones" to divide the model domain into different areas. Properties such as hydraulic conductivity are associated with one or more zones and thus can vary spatially. Each model domain (e.g. porous media, surface/overland flow, evapotranspiration) must have its own zonation associated with it.


In GMS, zones are defined using cell-based datasets. These datasets can be created in a variety of ways. Hydraulic conductivity and other properties are defined on "materials", and materials are assigned to one or more zones.

This tutorial will demonstrate zone datasets for the porous media domain.

The porous media domain will have three zones. Most cells will be in zone 1 and will be assigned to the "Medium Sand" material. Zone 2 consists of a narrow band of cells in the middle, which widens at the top. These cells will be assigned to the "Coarse Sand" material. Zone 3 will be some cells in the middle of layer five and assigned to the "Clay" material. A dataset with values of 1, 2, and 3 where 1 indicates zone 1, 2 indicates zone 2 etc will be created in this section.

Use a raster to create zones 1 and 2:

- 1. Switch to Plan View ...
- 2. In the Project Explorer, turn on the "PM zones.asc" raster.

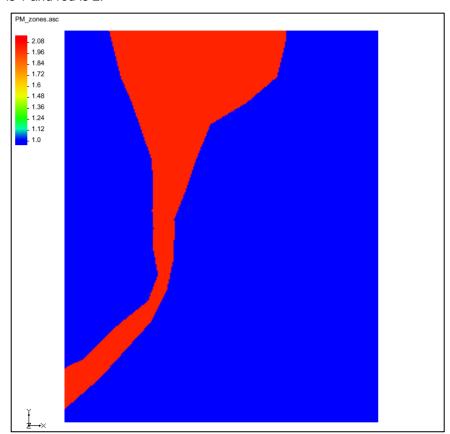

The raster should appear similar to Figure 4. The raster consists of only two values: blue is 1 and red is 2.

Figure 4 Imported raster

Now to run a tool that will interpolate the raster to the UGrid and create a new dataset.

3. Right-click on the "S 3d" UGrid and select **Z Values** → **Cell Dataset**.

A new cell-based dataset named " elevation" will appear in the Project Explorer.

- 4. Right-click the "PM\_zones.asc" raster and select *Interpolate To* | **UGrid** to open the *Interpolate Priority Rasters* tool dialog.
- 5. In the Interpolate Priority Rasters tool, set the following options:
  - a. Grid: "UGrid Data/3d"
  - b. Default dataset: "UGrid Data/3d/elevation"
  - c. Output dataset name: "zones"
  - d. Resample algorithm: "nearest\_neighbor"
  - e. Raster 1 (highest priority): "GIS Layers/PM\_zones.asc"
  - f. Leave Raster 2 as "None Selected"
- 6. Click **OK** to run the *Interpolate Priority Rasters* tool.
- 7. When the tool finishes, click **OK** to close the *Interpolate Priority Rasters* dialog.
- 8. In the Project Explorer, turn off the "PM\_zones.asc" raster.

To see how the elevation values were interpolated, turn on UGrid face contours.

- 9. Select the "\$\square\$ 3d" UGrid to make it active.
- 10. Click the **Contour Options** macro to open the *Contour Options* dialog.
- 11. Change the Contour method to "Block Fill".
- 12. Click **OK** to close the *Contour Options* dialog.
- 13. Click Yes at the message to turn on contours.
- 14. Select the " zones" dataset to make it active.

The contour colors indicate that the zone dataset matches the raster. Moving the mouse around the grid will show the F values at the bottom of the Graphics Window. Note that the blue contours are where the dataset values are 1 and the red is where the values are 2. The interpolation is the same for all layers of the grid. If desired, turn on "Single layer" view and switch layers to see that the zonation is the same in every layer.

#### 6.1 Use a Polygon to Create Zone 3

The example currently has two zones. Using a different method, this tutorial will show how to add a third zone to the HGS simulation.

Start with assigning the cells in a polygon to be zone 3.

- 1. Right-click on the " 3d" UGrid and select Lock / Unlock Editing.
- 2. Select the " zones" dataset to make it active.
- 3. Turn on Single layer above the Graphics Window.
- 4. Change the Layer to "5".
- 5. Select the " zones" coverage to make it active.
- 6. Click the **Display Options**  $\blacksquare$  macro to open the *Display Options* dialog.
- 7. For the Objects row, click the button to open the Line Properties dialog.
- 8. Change the Width to "3".
- 9. Click **OK** to close the *Line Properties* dialog.
- 10. Click **OK** to close the *Display Options* dialog.
- 11. Using the **Select Polygons** tool, select the clay lens polygon (Figure 5).

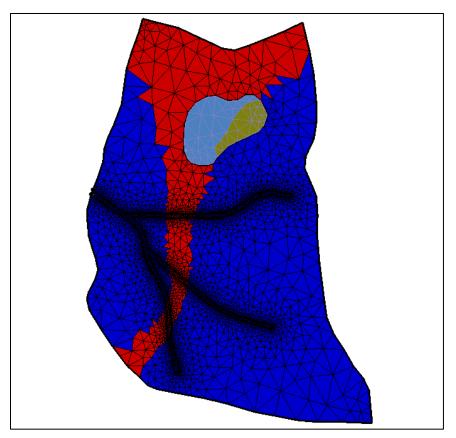


Figure 5 The clay lens polygon selected

- 12. Right-click and select the **Select Intersecting Objects...** command to open the *Select Objects of Type* dialog.
- 13. Select the Active UGrid cells option and click **OK** to close Select Objects of Type dialog.
- 14. Above the Graphics Window, change dataset value S to "3".
- 15. Deselect the polygon.

Now the zones dataset has values of 3 for the all of cells inside the polygon in layer 5 (Figure 6).

16. Turn off Single layer.

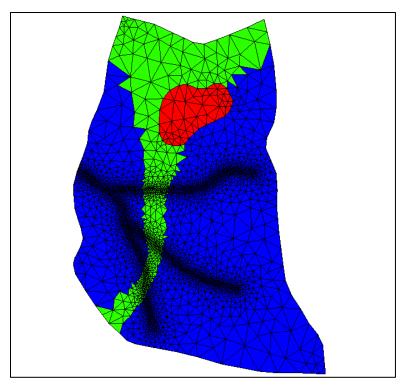


Figure 6 Set zone values on layer 5 of the UGrid

#### 6.2 Set the Porous Media Zone

- 1. In the Project Explorer, double-click on the "R5" simulation to open the Simulation Control dialog.
- 2. Select the Zones tab.
- 3. Turn on the Read porous media zones from file option.
- 4. Click the **Select Dataset** button to open the *Select Dataset* dialog.
- 5. Select the "zones" dataset under the 3d UGrid.
- 6. Click **OK** to close the Select Dataset dialog.
- 7. Click **OK** to close the Simulation Control dialog.

# 7 Material Properties

Properties such as hydraulic conductivity are associated with HydroGeoSphere materials. This idea is similar to traditional GMS materials, but HydroGeoSphere materials are completely separate from the traditional GMS materials. Multiple HydroGeoSphere materials can be defined, and materials are assigned to domains and to one or more zones. Note that if material property values are not assigned, then a default value will be applied. This example will create three materials. In this case, each material will be assigned to one zone, but a material can be assigned to multiple zones.

Start with defining three materials with a porous media domain.

1. Right-click on the "R5" simulation and select **Materials** to open the *Materials* dialog.

#### 7.1 Create the "Medium Sand" material

- 1. Click Add Row =+ to add a material.
- Change the material name to "Medium Sand".
- 3. Leave Domain at "Porous media" and Zones at "1".
- 4. Select the K isotropic option and enter "1e-5".
- 5. Turn on the Specific storage option and enter "1.2e-7".
- 6. Turn on Porosity and set it to "0.34".
- Make sure Unsaturated tables or functions is set to "Tables".
- 8. Turn on *Saturation-relative k* and click the **Table** button to open the *XY Series Editor* dialog.
- 9. Click the **Import** button to bring up an *Open* dialog.
- 10. Change the filter list to "CSV (Comma delimited) Files (\*.csv)".
- 11. Browse to the directory for the tutorial files (*hgs-pm*) and select the "medium-sand-sat-krw.csv' file.
- 12. Click **Open** to close the *Open* file.
- 13. Click **OK** to close the XY Series Editor dialog.
- 14. Turn on *Pressure-saturation* and click the **Table** button to open the *XY Series Editor* dialog.
- 15. Click the **Import** button to bring up an *Open* dialog.
- 16. Browse to the directory for the tutorial files and select the "medium-sand-p-sat.csv' file.
- 17. Click **Open** to close the *Open* dialog.
- 18. Click **OK** to close the XY Series Editor dialog.

#### 7.2 Create the "Coarse Sand" material

- 1. Click Add Row =+ to add a new material.
- 2. Change the new material name to "Coarse Sand".
- 3. Leave *Domain* at "Porous media" and change *Zones* to "2".
- 4. Select the K isotropic option and enter "5e-5".
- 5. Turn on the Specific storage option and enter "1.2e-7".
- 6. Turn on Porosity and set it to "0.34".
- 7. Turn on Saturation-relative k and click the **Table** button to open the XY Series Editor dialog.
- 8. Click **Import** button to bring up an *Open* dialog.
- 9. Browse to the directory for the tutorial files and select the "coarse-sand-sat-krw.csv' file.
- 10. Click **Open** to close the *Open* file.
- 11. Click **OK** to close the XY Series Editor dialog.

- 12. Turn on *Pressure-saturation* and click the **Table** button to open the *XY Series Editor* dialog.
- 13. Click **Import** button to bring up an *Open* dialog.
- Browse to the directory for the tutorial files and select the "coarse-sand-p-sat.csv' file.
- 15. Click **Open** to close the *Open* dialog.
- 16. Click **OK** to close the XY Series Editor dialog.

#### 7.3 Create the "Clay" material

- 1. Click Add Row =+ to add a new material.
- 2. Change the new material name to "Clay".
- 3. Leave Domain at "Porous media" and change Zones to "3".
- 4. Select the K isotropic option and enter "1e-6".
- 5. Turn on the Specific storage option and enter "1.2e-7".
- 6. Turn on Porosity and set it to "0.51".
- 7. Switch Unsaturated tables or functions to "Functions".
- 8. Ensure "brooks-corey" is selected in the drop-down in the *Unsaturated functions* section.
- 9. Turn on Residual saturation and enter "0.183".
- 10. Turn on Air entry pressure and enter "-0.016".
- 11. Turn on Exponent and enter "2.12".
- 12. Click **OK** to close the *Materials* dialog.

# 8 Boundary Conditions

Boundary conditions are defined on feature objects in GMS coverages. When the model is saved, GMS intersects the features with the UGrid to find the grid components (nodes, cells, faces, or segments) that should be associated with the boundary conditions, and writes the boundary conditions to the GROK file.

The boundary conditions in the porous media domain consist of four wells. The well points are defined in the " porous media BCs" coverage.

- 1. Turn off the "₩ 3d" UGrid and the "♥ zones" coverage.
- 2. Turn on the "Oporous media BCs" coverage and select it to make it active.
- 3. Right-click on the "Operation porous media BCs" coverage and select Coverage Type | HydroGeoSphere | Boundary Conditions.

To assign the well boundary conditions:

- 4. Using the **Select Nodes** \*\( \int \) tool, drag a box to select all four points representing wells.
- 5. Right-click and select **Assign Properties...** to open the *Point Properties* dialog.
- 6. From the list on the left, turn on Flux nodal.

7. Change the name to "Well".

The wells will all be assigned to node sheet 2. A node sheet is the layer of nodes between two cell layers.

- 8. Set Minimum sheet to "2".
- 9. Set Maximum sheet to "2".
- 10. Change Input type to "Time series".
- 11. Click the **Edit XY Series...** button to open the XY Series Editor dialog.
- 12. Enter the following:

Time	Flux
0	-0.0000277778
21600	0
43200	-0.0000277778
64800	0

- 13. Click **OK** to close the XY Series Editor dialog.
- 14. Click **OK** to close the *Point Properties* dialog.

The boundary conditions for the porous media domain are now defined.

15. Drag the "♥ porous media BCs" coverage below the "₹ R5" simulation.

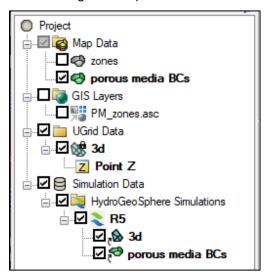


Figure 7 HydroGeoSphere simulation in the Project Explorer

## 9 Save the Project and Simulation

Before continuing, complete the following:

1. Save 🖥 the project.

This saves the GMS project files, but not the HydroGeoSphere simulation files. To create the files for the HydroGeoSphere simulation, the simulation needs to be saved.

- 2. Right-click on the "R5" simulation and select **Save Simulation** to open the Saving HydroGeoSphere Simulation dialog.
- 3. When finished, click **OK** to close the Saving HydroGeoSphere simulation dialog.

Saving the simulation creates the GROK file and the other files that it refers to. The data in the files is based on the parameters set for the simulation in GMS. To view these files:

4. Right-click on the "S R5" simulation and select **Open Containing Folder** to open a Windows File Explorer.

The opened file explorer shows the directory where GMS saved the model files.

#### 10 Run Grok

1. Right-click the "SR5" simulation and select the **Run grok** command to open a run dialog.

The "Run grok.exe" dialog appears. The output from grok.exe is displayed. It should only take a few seconds for grok.exe to finish. When it is done, there may be some warnings at the bottom of the output but there should not be any errors.

2. When the process finishes, click OK.

# 11 Run Phgs

Now that the input files have been prepared by running grok.exe, the model is ready to be run.

1. Right-click the " R5" simulation and select the Run phgs command.

The "Run phgs.exe" dialog appears. The progress dialog shows a plot of the residual error versus time, and the output from phgs.exe. It will take a few minutes for phgs.exe to finish.

2. When the process finishes, click **OK**.

#### 12 Read the Solution

1. Right-click the "R5" simulation and select **Read Solution** to start the *Read Solution* progress dialog.

When GMS is done reading the solution, the *Read Solution* progress dialog should disappear automatically if there are no errors.

A new Solution folder was added under the R5 simulation with links to datasets that were added under a "R5 (HydroGeoSphere)" folder under the "3d" UGrid. The *HydroGeoSphere – Post-Processing* tutorial has more information about how to examine the solution.

#### 13 Conclusion

This concludes the "HydroGeoSphere – Porous Media Domain" tutorial. Note that this tutorial only demonstrates the process of defining domains for a HydroGeoSphere model. It does not demonstrate a finished model. See additional GMS tutorials for more information on creating a complete HydroGeoSphere model.