# ECE 551 Project Spec



Spring '19 Audio Equalizer

#### Grading Criteria: (Project is 28% of final grade)

- Project Grading Criteria:
  - Quantitative Synthesis Element 15% (yes this could result in extra credit)

**Note:** The design has to be functionally correct for this to apply

**Note:** Minimum synthesized frequency to the TSMC library is 400MHz. No benefit to faster than 400MHz.

- Project Demo (85%)
  - ✓ Code Review (10%)
  - ✓ Testbench Method/Completeness (15%)
  - ✓ Synthesis Script review (10%)
  - ✓ Post-synthesis Test run results (12.5%)
  - ✓ Results when placed in EricFego Testbench (22.5%)
  - ✓ Test of equalizer to Audio input signals (15%)

#### **Extra Credit Opportunity:**

Appendix C of ModelSim tutorial instructs you how to run code coverage

- Run code coverage on a single test and get 1.25% extra credit
- Run code coverage across your test suite and get a cumulative coverage number and get another 1.25% extra credit.
- Run code coverage across your test suite and give concrete example of how you used the results to improve your test suite and get another 1.25% extra credit.

## Project Due Date

- Project Demos will be held in B555:
  - Wednesday (5/1/19) from 1:00PM till evening.
    - ✓ 1.5% Extra Credit for demoing on Wednesday
  - Thursday (5/2/19) from 1:00PM till evening.
    - ✓ 0.75% Extra Credit for demoing on Thursday
  - Friday (5/3/19) from 1:00PM till evening.
- Project Demo Involves:
  - ✓ Code Review
  - ✓ Testbench Method/Completeness
  - ✓ Synthesis Script & Results review
  - ✓ Post-synthesis Test run results
  - ✓ Results when placed in EricFego testbench
  - ✓ Run of your code on the Equalizer Audio Platform.

### **Test Platform Board**

Slide Potentiometer for volume control


2A capable USB charge port for phone or ipod

Electrolytic caps on 24V supply for peak demand 40W Class D amplifier circuits "live" underneath the DE0-Nano

DC-barrel connector for external power (re-charge batteries)

This large power resistor is part of the battery recharge circuit

RN-52 Bluetooth audio module "lives" underneath board on this side.

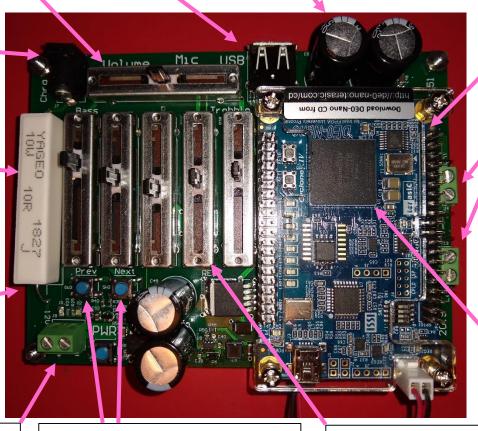


Hook your speakers up here

DEO Nano. The "intellectual property" of this design.

12V to 24V DC input from batteries


Play previous song or skip to next song via button pushes Slide pots for scaling of the 5-bands bass thru treble

## Block Diagram of Digital Portion

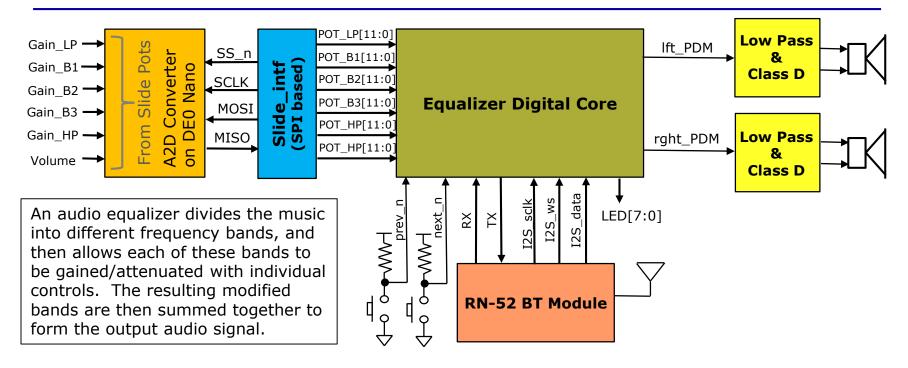

The audio processing will be done in the digital domain. The incoming audio stream will come from a Bluetooth module on the I2S protocol. The stream broken into 5 bands via DSP FIR filters. Each band will have a different gain term (as read via an A2D from a slide potentiometer) applied, and the resulting modified digital bands will be summed to form a new left/right audio signal. That resulting audio signal will be converted to PDM bits streams that will in turn go to low pass filters and then a class D amps to drive the speakers. Volume control is also performed by multiplying the summed audio signal for left/right channel by a gain number controlled by a sixth slide potentiometer. Finally there are two buttons on the board that can be used to skip to the next song, or repeat the previous song.

## What is synthesized DUT vs modeled?

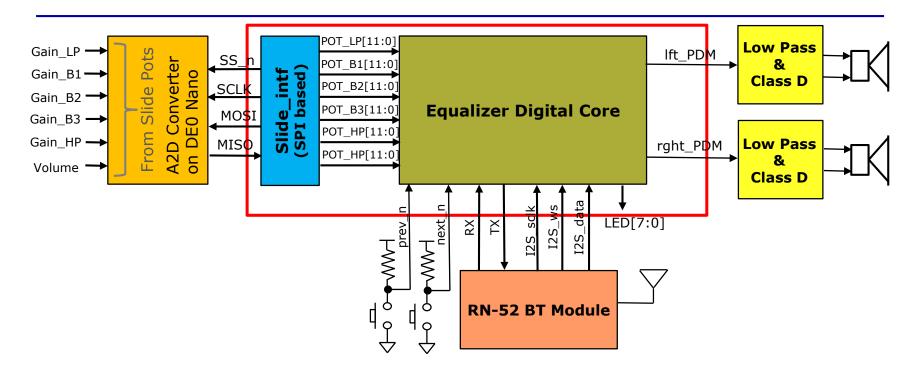


The blocks outlined in red above are pure digital blocks, and will be coded with the intent of being synthesized via Synopsys to our standard cell library. For practical purposes we will also map that logic to FPGA so we can run the demos.

You Must have a block called **Equalizer.v** which is top level of what will be the synthesized DUT.

#### RN-52 BT Audio Module


- The RN-52 is a high resolution stereo Bluetooth audio module. It is capable of pairing with phones and ipods using the A2DP profile.
- The RN-52 has a few different output formats for audio, including analog. However we wish to use a serial streaming digital format called I2S (Inter IC Sound)
- The default audio output format is not I2S, so we have to configure the RN-52. This is done via a UART interface, and is covered in the follow slides. There are also a few commands we send to the RN-52 during normal operation to replay, pause, or skip the song.
- When the RN-52 starts steaming audio it is the master of the I2S bus and is driving sclk, ws, and data. We are the slave and have to receive and decode the serial stream into 24-bit left channel and 24-bit right channel data.

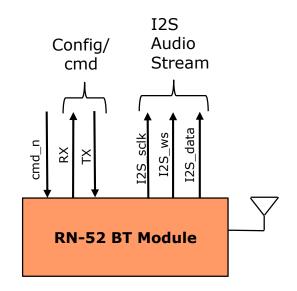

**ws** = **w**ord **s**elect (differentiates left/right data)


## RN-52 BT Audio Module (configuration)

- The RN-52 is configured via a 8-bit serial protocol called UART. Code for an 8-bit UART transceiver is provided on the Canvas page (UART.sv)
- We need to send a few ASCII strings to the RN-52 after power up to configure it as we desire. Each string we send the RN-52 will be acknowledged by the RN-52 responding with a 0x0A.

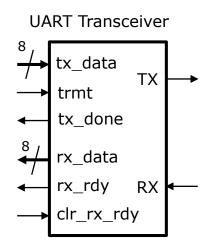

String:	Length:	Description:
First thing is to hold the <b>cmd_n</b> pin to the RN-52 high for 2^16 clocks after <b>rst_n</b> deasserts. Then raise <b>cmd_n</b> and wait for a 0x0A response from the RN-52. Then configuration strings can be sent.		
"S ,01\r"	6	A send of: S ,01 with carriage return switches output mode of RN-52 to I2S. Wait for 0x0A.
"SN,ECE551\r"	10	This sets the advertising name to "ECE551" wait for 0x0A
At this point configuration is done and the SM controlling the UART interface to the RN-52 should go into a loop waiting for either a <i>next</i> , <i>prev</i> , or <i>pause</i> song from the button interface. If one of these signals is received it will send "AT+\r" "AT-\r" or "AP\r" respectively.		

## RN-52 BT Audio Module (configuration)

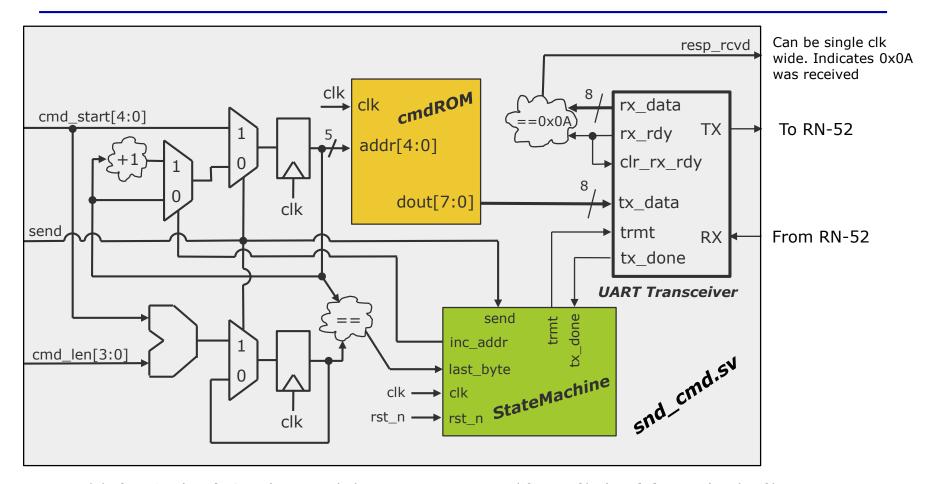


- A model of a ROM (cmdROM.v) is provided. Its contents are read from a file (cmd\_hex.txt). This file contains the arbitrary characters that make up the commands we need to send to the RN-52.
- One asserts cmd\_start to be the address of the first character of the command to send. At the same time cmd\_len will hold the length of the command in bytes. The send signal is asserted. The SM sends the bytes waiting for tx\_done between each. When it gets to the last\_byte it is done. The block provides detection of 0x0A reception.

#### RN-52 BT Audio Module (next & prev buttons)

After reset **cmd\_n** is held high until a 17-bit timer expires. Then **cmd\_n** is lowered. The lowering of **cmd\_n** will produce a response from the RN-52.

Next the two initialization commands should be sent with a wait for a response for each one.


Finally if a rise on either button is detected the associated command string should be sent.

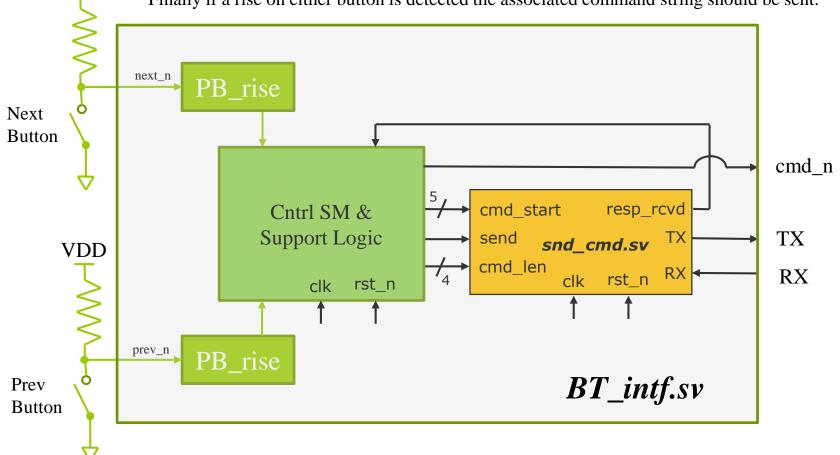

**VDD** 


## What is I2S (Inter IC Sound)


• I2S is the protocol the RN-52 BT Module will use to output audio. It is quite similar to SPI in many ways, except this time we are the slave and the RN-52 is the master.

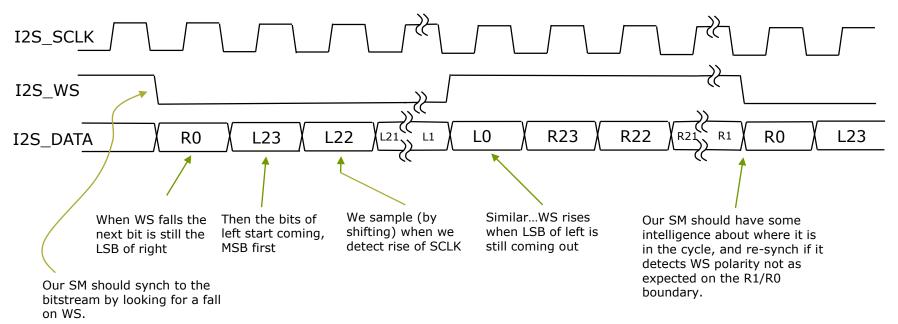

- The protocol is 24-bit left/right audio data at 44.1kHz...**SCLK** freq is: 24\*2\*44.1k = 2.11MHz
- The WS line is generally low during left data, and high during right...except it leads by 1 bit.
- We would sample the data by shifting our shift register(s) when we detect SCLK rise.
- We initially synched to the stream by looking for the fall of WS then ignoring the next SCLK rise, and then start shifting in left data on SCLK rise.
- When we know we are at **R1** we should check that **WS** is still high. When we know we are at **R0** we should check that **SCLK** is low. If this is not true we should re-synch. Otherwise we would go right back to sampling left data after **R0**.


## Possible Architecture of I2S\_Slave

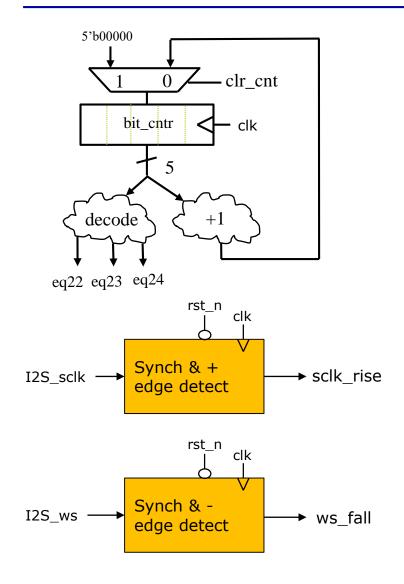

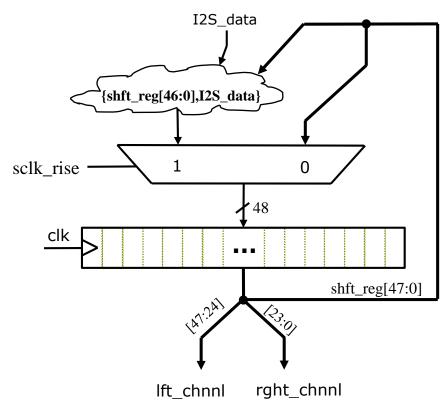


Also need a SM to control it, and assert when the data {Ift\_chnnl,rght\_chnnl} is vId. vId can be a single system clock cycle wide. Ift\_chnnl and rght\_chnnl will get buffered (captured) in registers) elsewhere.


#### Filtering our Left/Right Audio Signal Into Bands

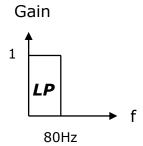

Bass is a low pass with a 80Hz cutoff. All frequencies below 80Hz are passed with little to no attenuation. All frequencies above are attenuated

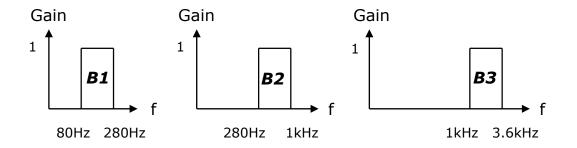


The 3 mid band filters are bandpass filters which pass signals unattenuated in their bands, and attenuate outside their bands.

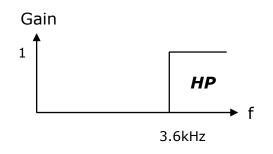


Treble is a high pass with a 3.6kHz cutoff. All frequencies above 3.6kHz are passed with little to no attenuation. All frequencies below are attenuated.

## What We Want to Build (Digital Core)

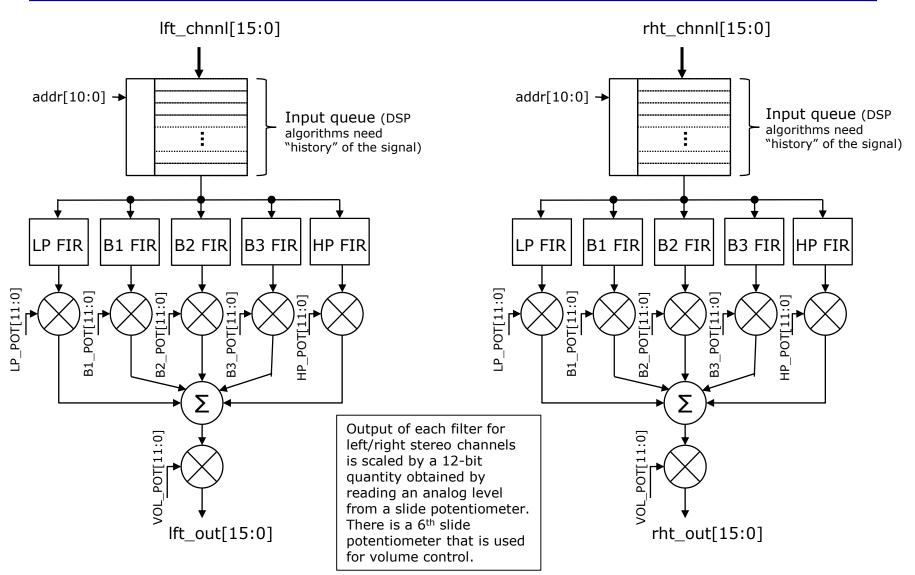

#### DSP FIR Filters (LP, BP,HP...there all the same, just different coefficients are used)

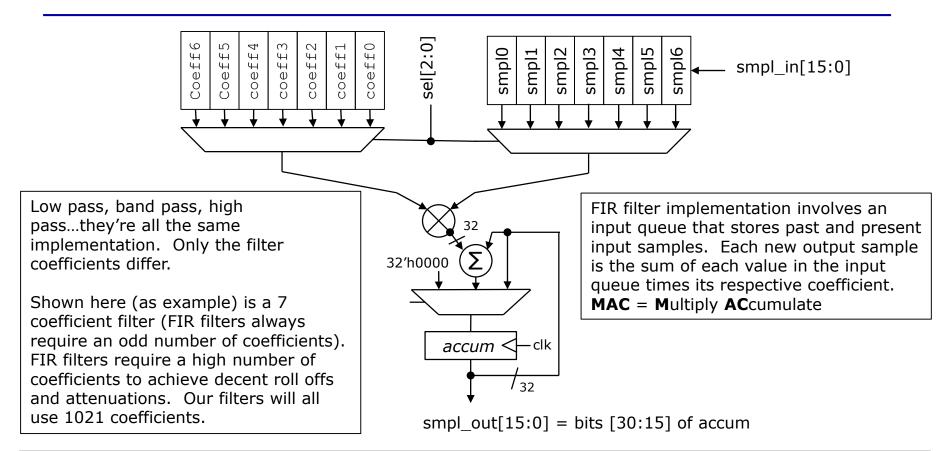

The multiply is signed 16-bit sample times signed 16-bit coefficient to produce a signed 32-bit product. Results are accumulated in a 32-bit register. Once all coefficients have run through the MAC the result is bits [30:15] of the accumulate register. **NOTE:** The diagram above is for illustrative purposes. The coefficients will be stored in a ROM. A dual port RAM with head and tail pointer will be used to implement a circular queue for the sample queues. Using a series of flops in a shift register with a mux as shown would be extremely wasteful, and not even practical for a FIR filter with 1021 coefficients.

#### DSP FIR Filters (Sample Rates and Queue Sizes (number of coefficients))

Filter:	Range:	Queue Size:	Sampling Freq:	ROM Model
LP	80Hz & Below	1024	22050Hz	ROM_LP.v
B1	80Hz to 280Hz	1024	22050Hz	ROM_B1.v
B2	280Hz to 1kHz	1024+512	44100Hz	ROM_B2.v
B3	1kHz to 3.6kHz	1024+512	44100Hz	ROM_B3.v
HP	3.6kHz & above	1024+512	44100Hz	ROM_HP.v

The various FIR filters all utilize 1021 coefficients, keeping thing on a power of 2 we will use a 1024 entry DP RAM. The lower 2 bands (LP & B1) run at a 22.05kHz sample rate, while the upper 3 bands run at a 44.1kHz sample rate.

ROM models and their associated coefficients are provided for storing the various filter coefficients. These ROM models synthesize and map just fine to the DE0-Nano board.

The next question is how to implement the queues most efficiently. Obviously we need a queue with 1024 entries for both left/right channels. However the upper three filters (B2,B3 & HP) are operating at a higher sample frequency. Hmm...what does this mean?

FIR filters have a group delay. Their output is the filtered input delayed by half the queue depth. So LP & B1 have a group delay of 510/22050 = 23.1ms. B2,B3 & HP have a group delay of 510/44100 = 11.56ms.


#### Queue Implementation (Does not consider group delay)

One might be tempted to have two different queues with 1024 entries each. One queue sampling every sample from the RN-52 (at 44.1kHz) and one sampling at half rate (22.05kHz). Each queue (high frequency/low frequency) will contain two dual port RAMs, one for left and one for right.

This approach is close to what we want, however, it does not consider the group delays. Would it sound bad to combine lower frequencies delayed by 23.1ms with upper frequencies that are only delayed by 11.56ms? Would the human ear pick up on that "distortion" of the music? I don't know, and I don't intend to find out. We are dong this right.

**NOTE:** As mentioned these queues will be implemented using Dual Port RAMS (one read port and one write port). They need to be implemented as circular queues.

**NOTE:** Everything in our design will run from a 50MHz system clock. You **will not** be generating a 44100Hz clock and using that to control a queue. The queues that sample at 44100Hz will be a queues that write a new entry every time the RN-52 provides lft/rght, and the queues that sample at 22050 will be queues that write a new entry every other time the RN-52 provides lft/rght.

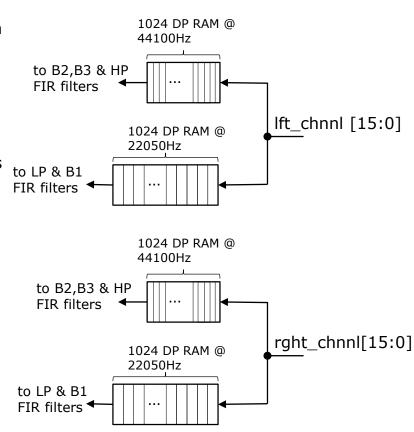


## Queue Implementation (why high freq queue need extra 510 entries for group delay)

Image courtesy of Christian Zimonick:

low freq queue shown wider since it spans more time (written at half the speed).

Music for both channels generated from the middle of the groups (middle of the used samples).

To line up (in time) the outputs of low freq and high freq queues we need to add 510 entries to the high freq queue that just delay the used window of the signals.

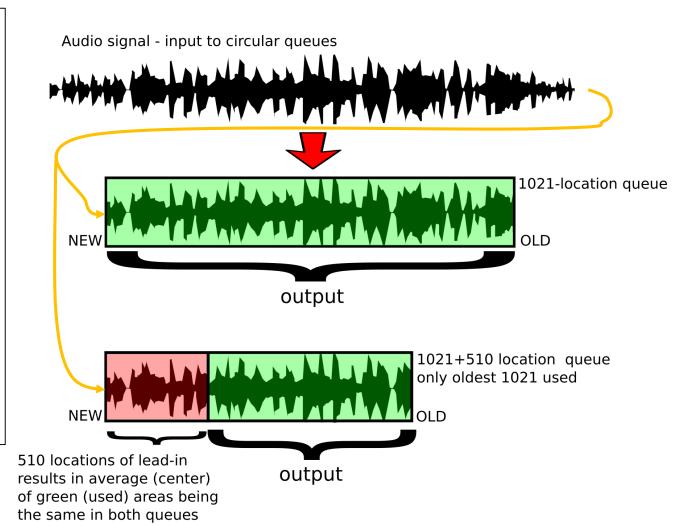


### Queue Implementation (matching group delays)

The group delay of our lower frequencies is 510/22050 = 23.1ms. The group delay of our upper frequencies is 510/44100 = 11.56ms. So we need to increase our B2,B3,HP queue length to add 510 entries of pure delay.


Bands	$\mathbf{f}_{\mathrm{s}}$	Required Size	Actual Size	DP RAM model
B2,B3,HP	44100	1021+510 = 1531	1536	dualPort1536x16.v
LP,B1	22050	1021	1024	dualPort1024x16.v

- Dual Port memories will be used to implement the queues. The queues should be implemented as circular queues.
  - Write port is used for new samples coming in I2S interface (RN-52).
  - Read port is used for reading out when performing the FIR filter algorithm.

### LP,B1 Circular Queue Implementation

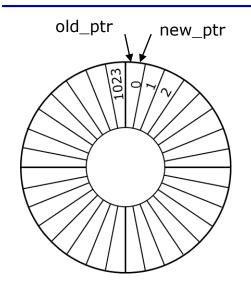


new\_ptr points at next available location. old\_ptr points at oldest data location. Circular queue

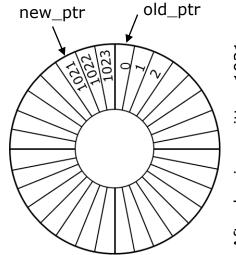


After having written 1021 locations the queue would look like this. Since we are only interested in 1021 locations now **old\_ptr** can start incrementing on every new write.

After having written 1025 locations the queue for the lower frequencies would look like this. *old\_ptr* would have advanced to 4 and the first 2 samples would have been overwritten. *old\_ptr* and *new\_ptr* keep moving around the circle, with *old\_ptr* lagging *new\_ptr*.

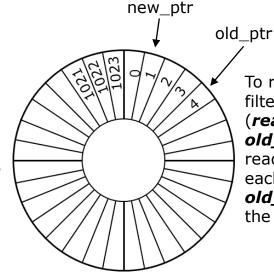


To read out the samples during a FIR filter calculation a 3<sup>rd</sup> pointer (*read\_ptr*) would be initialized to *old\_ptr*. Locations would then be read, with *read\_ptr* incrementing with each clk. When *read\_ptr* advances to *old\_ptr*+1021 then we have read out the samples of interest.

#### B2,B3,HP Circular Queue Implementation

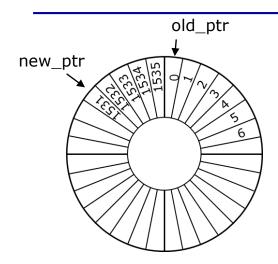


Case where queue just became full for the first time (we have 1531 entries). For readout during FIR calculation the **read\_ptr** would start from 0 and reading would be complete when it reaches 1021.

Case where 2048<sup>th</sup> sample has been written. For readout during FIR calculation the **read\_ptr** would start from 516 and reading would be complete when it reaches "516+1021". However due to pointer roll over that would be 2

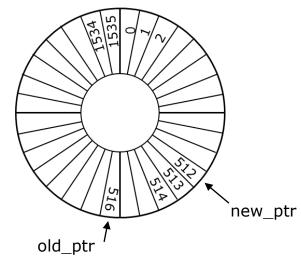

Things are a little trickier for the higher frequencies queue. The queue size is not a power of 2 so we have to watch how pointers roll over from 1535 to 0. When reading out the samples of interest. The **read\_ptr** would start from **old\_ptr**. When it reached **old\_ptr**+1021 we would be done. Again, one has to watch the calculation for **old\_ptr**+1021 because that could be crossing a 1535 to 0 boundary.

## FIRX Block (you can implement FIR functions as you wish. Mine looks like this...)

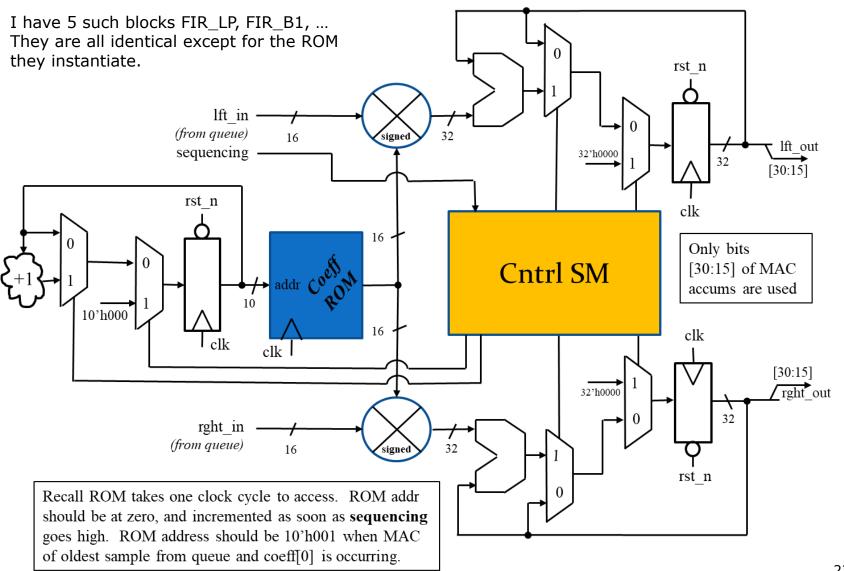


#### What is SPI?

- Simple bi-directional serial interface (Motorola long long ago)
  - Serial Peripheral Interconnect (very popular physical interface)
  - 4-wires for full duplex
    - ✓ MOSI (Master Out Slave In) (we drive this to A2D to inform what channel to read)
    - ✓ MISO (Master In Slave Out) (A2D sends data back over this line)
    - ✓ SCLK (Serial Clock)
    - ✓ SS\_n (Active low Slave Select) (Our system only has a single slave, but in a system with multiple slaves this acts as a one hot selector of the active slave)
  - There are many different variants
    - ✓ MOSI Sampled on clock low vs clock high
    - ✓ SCLK normally high vs normally low
    - ✓ Widths of packets can vary from application to applications
    - ✓ Really is a very loose standard (barely a standard at all)
  - We will use the variant used by the A2D on the DE0\_nano board.
    - ✓ MOSI changes after SCLK rise, and MISO is sampled at that time as well.

(your SPI master should shift its shift register 2 system clocks after SCLK rise)

- ✓ SCLK normally high
- ✓ 16-bit packets

### **SPI Packets**

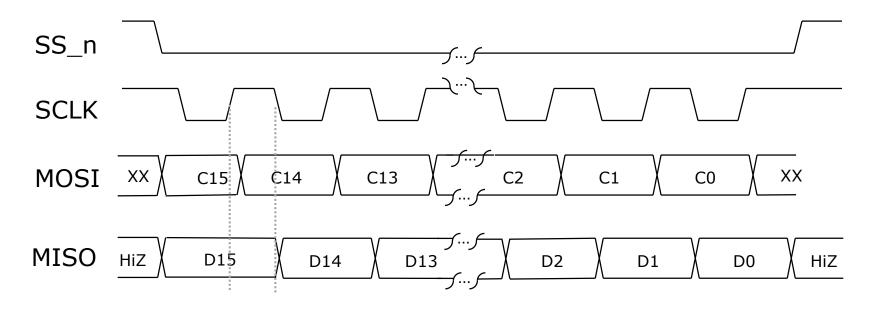


A SPI packet inherently involves a send and receive (full duplex). The full duplex packet is always initiated by the master. Master controls SCLK, SS\_n, and MOSI. The slave drives MISO if it is selected. If the slave is not selected it should leave MISO high impedance. The A2D converter is the only SPI peripheral we have in the system.

The SPI master will have a 16-bit shift register. The MSB of this shift register is MOSI. MISO will feed into the LSB of this shift register. The shift register should shift **two system clocks after** the rise of SCLK, this eliminates any timing difficulties. The A2D on the DEO-Nano samples MOSI on the positive edge of SCLK, and changes MISO on the negative edge of SCLK. Of course all your flops are based purely on clk (system clock), not SCLK! SCLK is a signal output from your SPI master.

SCLK will be 1/16 of our system clock (50MHz/16 = 3.125MHz

## SPI Shift Register

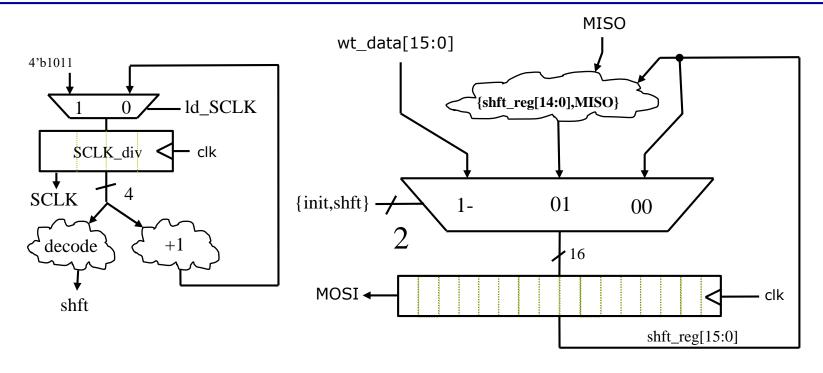


The main datapath of the SPI master consists of a 16-bit shift register. The MSB of this shift register provides MOSI. The shift register can be parallel **load**ed with the data to send to the A2D, or it can left shifted one position taking MISO as the new LSB, or it can simply maintain.

Since the SPI master is also generating SCLK it can choose to shift this register in any relationship to SCLK that it desires. To alleviate timing difficulties it is best that the shift register is shifted two system clocks after SCLK rise. Note the value SCLK\_div is loaded with (4'b1011). Look back at the waveforms. There is a little time from when SS\_n falls till the first fall of SCLK. Do you get the idea of loading with 4'b1011?

## A2D Converter (National Semi ADC128S022)

The ADC128S is a 12-bit eight channel A2D converter. Only one channel can be converted at a time. The A2D is read by via the SPI bus, and is used to convert the values of the six slide potentiometers.


ADC Channel:	IR Sensor:
001 = addr	Gain_LP (gain of Bass)
000 = addr	Gain B1 (gain of 64Hz to 256Hz)
100 = addr	Gain_B2 (gain of 256Hz to 1kHz)
010= addr	Gain_B3 (gain of 1kHz to 4kHz)
011= addr	Gain_HP (gain of treble)
111= addr	Volume (scales both left/right sums)

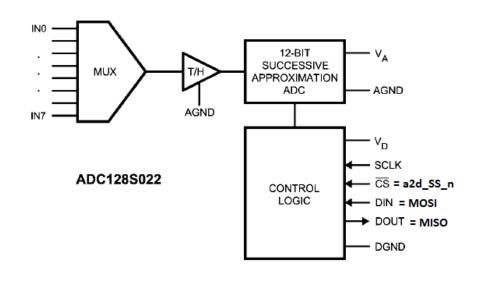

To read the A2D converter one sends the 16-bit packet {2'b00,addr,11'b000} twice via the SPI. There needs to be a 1 system clock cycle pause between the first SPI transaction completing, and the second one starting

During the first SPI transaction the value returned over MISO will be ignored. The first 16-bits are really setting up the channel we wish the A2D to convert. During the 2<sup>nd</sup> SPI transaction the data returned on MISO will be the result of the conversion. Only the lower 12-bits are meaningful since it is a 12-bit A2D. The slide potentiometers should be read in a round robin fashion.

## A2D Converter (Example SPI Read)

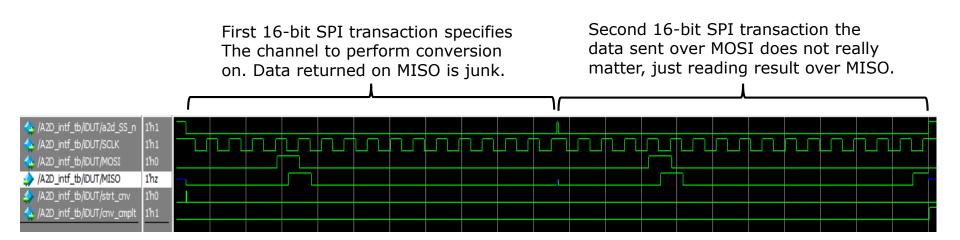


Our use of the A2D converter will involve two 16-bit SPI transactions nearly back to back (separated by 1 system clock cycle).

The first transaction here is sending a 0x0800 to the A2D over MISO. The command to request a conversion is  $\{2'b00, channel[2:0], 11'h000\}$ . The upper 2-bits are always zero, the next 3-bits specify 1:8 A2D channels to convert, and the lower 11-bits of the command are zero. Therefore, the 0x0800 in this example represents a request for channel 1 conversion.

For the next 16-bit transaction the data sent over MOSI to the A2D does not matter that much. We are really just trying to get the data back from the A2D over the MISO line.

Note the timing of data vs SCLK edges. Note the behavior of SS\_n. Note SCLK is normally high.


## Scaling of Bands and Volume

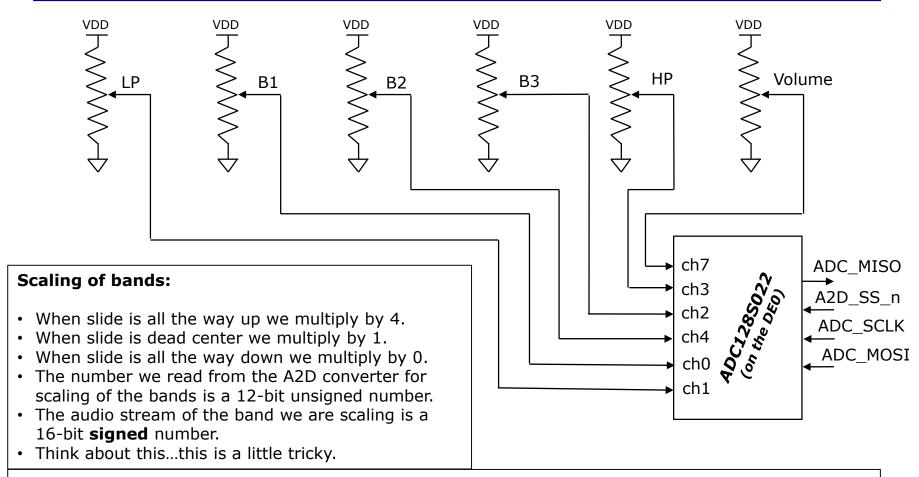

#### Scaling of volume:

- The volume of the audio stream (coming from the RN-52 via I2S) can be scaled using the source device.
- The intent of the volume slider is to have a quick easy way to reduce volume. When the slider is all the way up we should be multiplying by unity. When it is all the way down we multiply by zero.

## Scaling of Bands and Volume

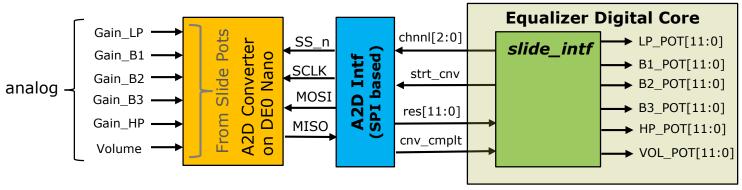

Given you have a block (**slide\_intf**) that performs A2D conversions on the slide potentiometers continuously in a round robin fashion. You now have a 12-bit unsigned number that represents the amount to scale each band (and volume). Now how to make use of those digital scaling numbers?

Volume is a simple linear scaling. VOL\_POT[11:0] can be made into a 13-bit signed number {1'b0,VOL\_POT} and multiplied by the resulting left/right audio stream. This 29-bit product can then be shifted right 12-bits, and the MSB ignored. So you essentially use bits[27:12] of the 29-bit signed product.


For Band scaling we need to use the square of the potentiometer reading as our scaling factor. This gives us the 4X gain when the pot is at full, 1X gain when it is centered, and zero when it is all the way low. (Human perception of sound is to the square root of amplitude, so we have to use square of the pot value to make the effect seem linear)

Starting with a 12-bit unsigned number we square it to get a 24-bit unsigned product. One can next just use bits [23:12] of this product as the 12-bit number to scale the respective FIR output by. Similar to volume scaling we will want to convert our 12-bit number that represents the square of the potentiometer value into a 13-bit signed number. This signed 13-bit factor will be multiplied by the 16-bit signed result of the respective FIR filter output to produce a 29-bit product. We next shift this product right 10-bits and use bits [25:10] as the result sum with the other bands to form our digital audio output. However, what about the data in bits [28:26] that we are discarding? Does the result of using bits [25:10] match it in sign?

## **Band Scaling**

For an audio equalizer the gain control determines the scaling of that band of frequencies. When it is set to its maximum the band is multiplied by 4. When it is set to the middle the band is multiplied by 1. When it is set to zero the band is multiplied by zero.


This means we really want to use the square of the potentiometer as our gain term.

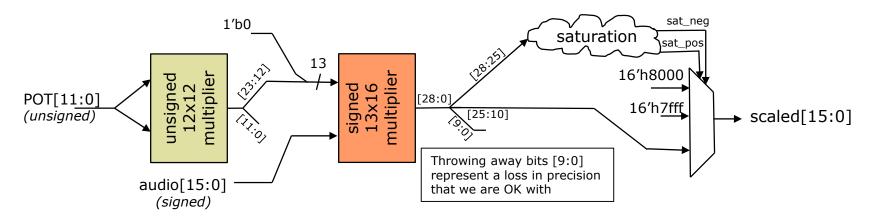

After squaring the potentiometer value we can choose to drop the lower 12-bits and use only the upper 12-bits of the squared result for scaling the audio signal. The audio signal is a signed number, so we need to convert our squared value of the pot to a 13-bit signed number by appending a 1'b0 as the MSB. Now we enter a 13x16 multiplier which will produce a 29-bit result. Of this 29-bit result we will use bits [25:10] as our final scaled audio signal for that band. Dropping bits [9:0] represents a truncation. Dropping bits [28:26] however, is not OK. We have to inspect bits [28:25] to see if our result saturated positive or saturated negative. If so we will choose the appropriate saturated number, if not we just pass [25:10] as the result.


#### PDM = Pulse Density Modulation (driving the speakers)

- To drive the speakers we eventually need an analog signal. So we need a form of Digital to Analog Conversion (DAC).
- There are many forms of DAC. One of the simplest is Pulse Width Modulation (PWM) followed by low pass filtering.
- A variation of PWM is PDM. PDM and PWM are conceptually similar, but PDM is easier to low pass filter than PWM.
- Consider a 15-bit PWM signal vs a 15-bit PDM signal. Both driving 50% duty cycle.

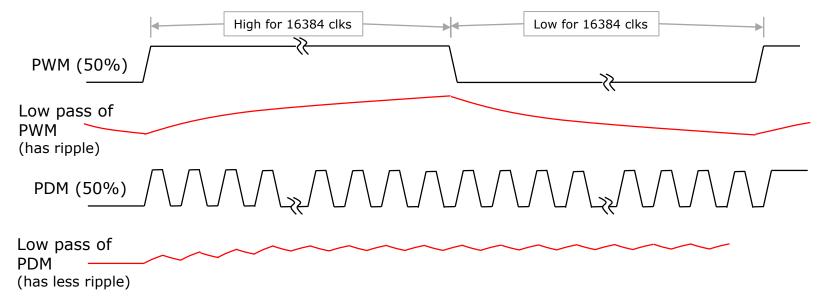


As is shown above for a low pass filter with a given time constant, the PDM signal filters better
and gives a lower ripple. This is an exaggerated view. The time constant of the LPF on the
board will result in tiny ripple, and thus very little distortion in music quality.

#### Low Pass PDM into Class D Amplifier

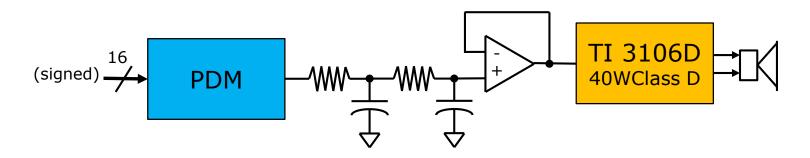

- The 0 to 3.3V digital PDM signal will be put through a 2<sup>nd</sup> order lowpass filter and buffered with a unity gain opamp circuit. This effectively performs digital to analog conversion.
- The analog signal is fed into a Texas Instruments 40W Class D amplifier which in turn drive the speaker.
- The PDM unit will be run at half speed (25MHz) so the IO of the FPGA driving the 0 to 3.3V signal does not suffer too much from rise/fall distortion.
- PDM works in an unsigned domain. The "music signal" coming in is a 16-bit signed number. The PDM unit will first convert the 16-bit signed number to unsigned by adding 0x8000.
- We will create a signal called **update** in our PDM block. This signal will be true every other clock cycle (i.e. a 1-bit counter). Most all functions in our PDM block will only update when **update** is true. Thus we slow down the PDM to 25MHz when operating off our 50MHz system clock.

#### PDM Architecture:

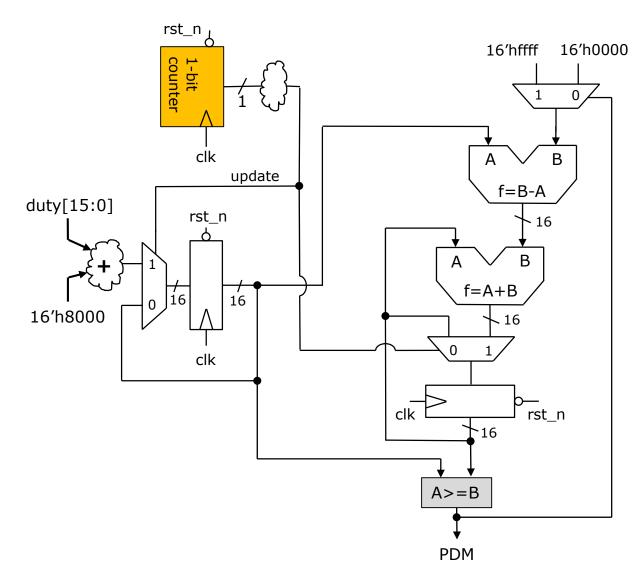


Signal:	Dir:	Description:
clk	in	50MHz system clk
rst_n	in	Asynch active low
duty[15:0]	in	Specifies duty cycle (signed 16-bit)
PDM	out	PDM signal out (glitch free)

Pretty much code what you see using mixture of dataflow and **always** blocks. Code it flat. No need to introduce hierarchy here.


## LED[7:0] Outputs

- This is an extra credit opportunity
- There are 8 LEDs on the DEO-Nano board
- Can you do something cool with them?
  - A thermometer type output that represents of running average of music intensity?
    - To make this effective it might have to be sqrt of intensity.
  - Some other cool LED affect that is somehow tied to the music.
- If you are going to do this optional part then make it a separate module so you can use a blank version when synthesizing on Synopsys so the area does not count against you.
- Impress me with your LED effects and earn another 1.25% extra credit.

## **Digital Functionality**

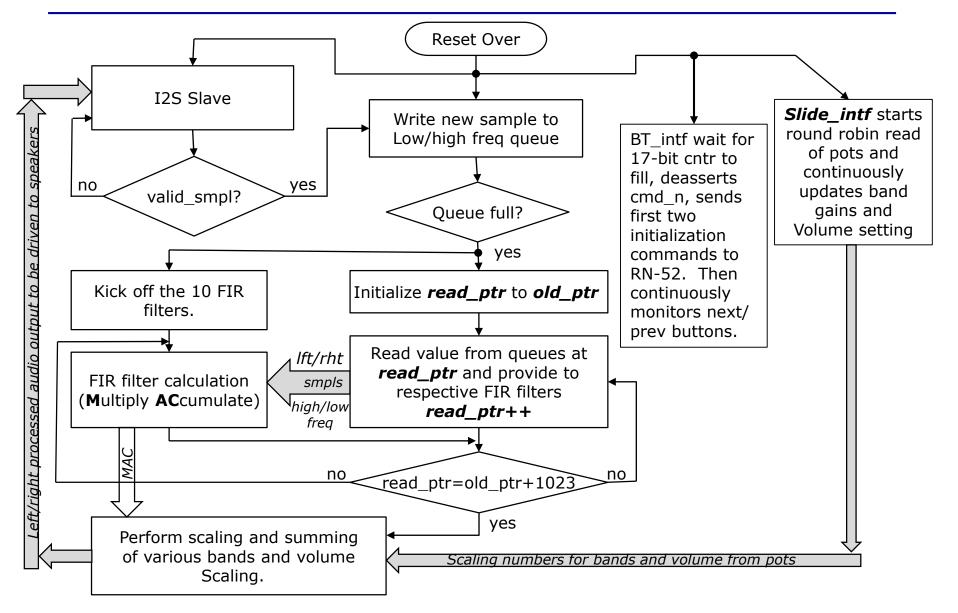

## Required Hierarchy & Interface

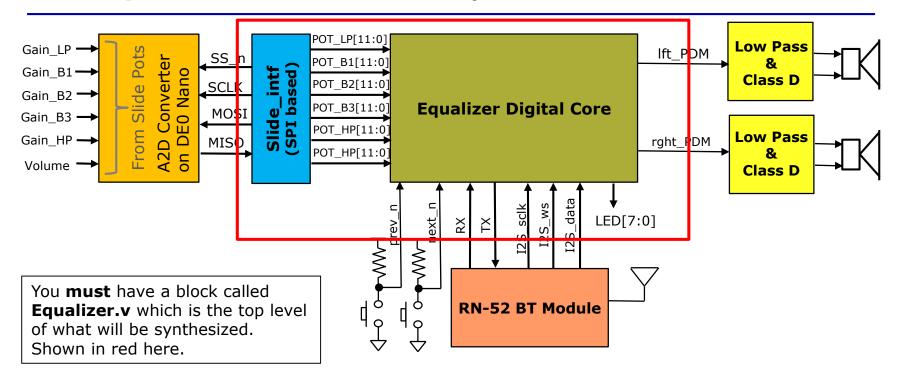


The interface of **Equalizer.v** must match exactly to the specified **Equalizer.v** interface. Please download the provided files from the project .zip and use the **Equalizer.v** provided as your skeleton.


The hierarchy/partitioning of your design below the **Equalizer.v** level is up to your team. The next slide shows my hierarchy. The hierarchy of your testbench is up to your team.

Your design will also be placed into an EricFego test bench, which is why it is critical it match at the **Equalizer.v** level.

# My Hierarchy (hierarchy below Equalizer up to you...you can match what I did if you like)

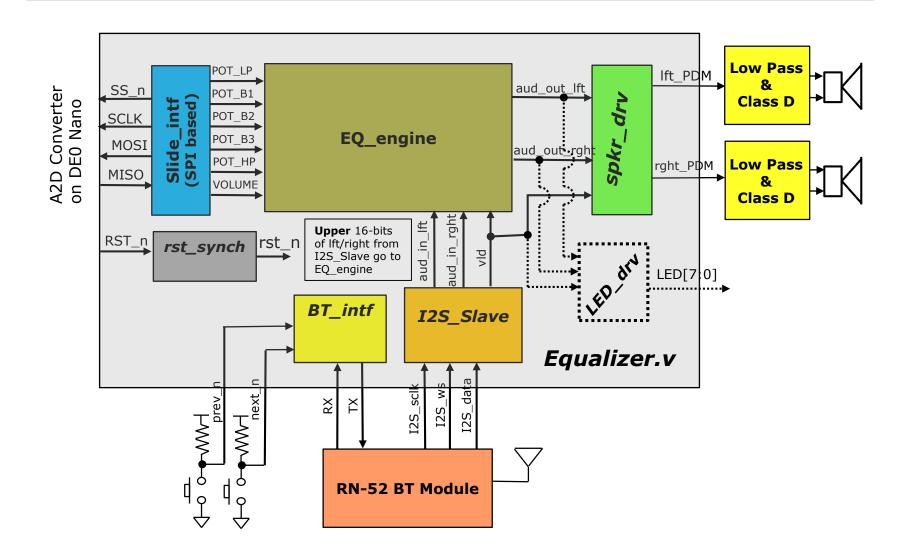

## My Hierarchy (What is inside EQ\_engine)

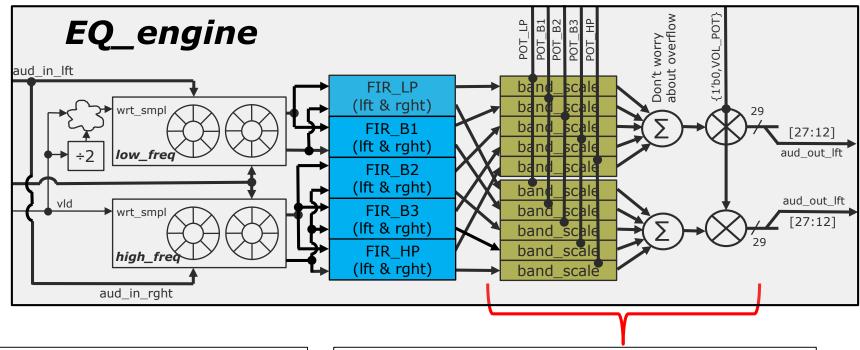

In the final summation of the bands it is possible there would be overflow. Don't sweat it, just keep everything at 16-bits. If there is overflow it just mean you young whipper snappers are playing your rock-n-roll music too loud and should turn it down. However, I ask that you always keep overflow in mind in case you are working on a mission critical application in the future.

There is a heck of a lot of math going on here kids. Is Synopsys going to be able to fit all this math in a single cycle at a 2.5ns clock period? You will probably need to insert some flops in this path to pipeline it and ease the timing constraints. Start without flops first and get it functionally working. Add the pipelining flops later, the latency of the flops affects nothing.

After scaling by volume you should have a signed 29-bit product. Just use bits 27:12 as the result for each channel. Don't worry about any saturation. Again, you are playing your music too loud if that happens.

## **Equalizer Interface**


Signal Name:	Dir:	Description:
clk	in	Clock input (50MHz)
RST_n	in	Active low input from push button. Should be synchronized inside equalizer
LED	out	Perhaps nothing (tied low). Perhaps something coolextra credit opportunity
A2D_SS_n	out	Active low slave select to A2D SPI interface
A2D_SCLK	out	SPI bus clock (to A2D)
A2D_MOSI	out	Serial output data to SPI bus of A2D converter (Master Out Slave In)
A2D_MISO	in	Serial input data from SPI bus of A2D converter (Master In Slave Out)
I2S_sclk	in	Roughly a 2.11MHz signal. Use rise edge to sample I2S_data
I2S_ws	in	I2S Word Select. 0 => Left Chnnl, 1 => Right Chnnl
I2S_data	in	Serial Audio data. 24-bits/channel of which we use the upper 16-bits.
lft_PDM	out	PDM signals that drive H-Bridge that is low passed to drive speakers.
rght_PDM		
cmd_n	out	To RN-52 Bluetooth Audio module (put in cmd mode after 2.5ms delay)
RX	in	From RN-52 Bluetooth Audio module (115,200 baud)
TX	out	To RN-52 Bluetooth Audio module
prev_n/next_n	in	Couple of push button inputs that allow repeating/skipping of songs
sht_dwn	out	Shuts down class D amp when asserted. Should be high for first 5ms after reset
Flt_n	in	Active low fault signal from class D. Should force <b>sht_dwn</b> for 5ms if it occurs

#### Provided Modules & Files: (available on website under: Project)

File Name:	Description:
Equalizer.v	Requried interface skeleton verilog file. Copy this and flush it out with your design
ROM_*.v	ROM models for holding the coefficients for the FIR filters. LP,B1,B2,B3,HP
Coeff_*_hex.txt	FIR coefficients read by the above ROM models.
dualPort*.v	Dual port memories used for queues holding audio samples. 1024 entries for LP & B1 queues and 1536 entries for B2,B3, & HP queues
A2D_with_Pots.sv	Models the A2D converter and the pots it converts. Contains provided module SPI_ADC128S
RN52.sv	Verilog model of RN-52 BT audio module
cmdROM.v & cmd_hex.txt	Contains command strings to be sent to the RN-52 for initialization or for next/prev functionality
resp_ROM.v & resp_hex.txt	Contains responses sent by RN-52 model.
UART.sv	UART module used inside RN_52.sv. You can also use it for your DUT to communicate with RN-52.
I2S_Master.sv	Sub-module of RN-52 model. Master your I2S_Slave is reading from.
tone_ROM_*.v	Sub-module of RN-52 model. Contains "music" of left/right channels
tone_hex_*.txt	Data files with 5 superimposed frequencies in the middle of each band of interest. Read by tone_ROM_*.v. Handy for testing at fullchip level
Equalizer_tb.sv	Up to you. This is a skeleton test bench you can start with.

## Synthesis:

 You have to be able to synthesize your design at the **Equalizer** level of hierarchy.

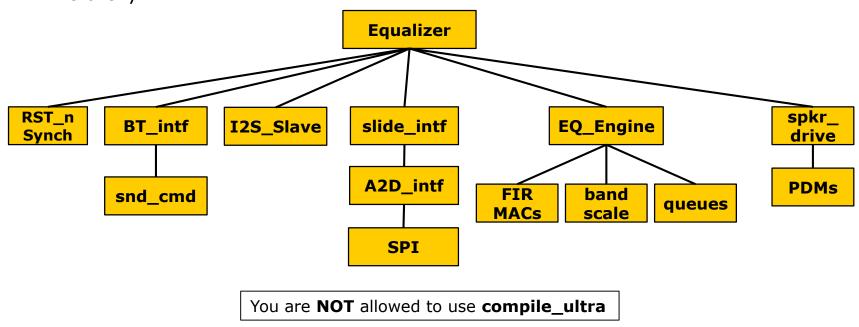

- Your synthesis script should write out a gate level netlist of follower (Equalizer.vg).
- You should be able to demonstrate at least one of your tests running on this post synthesis netlist successfully.
- Timing (400MHz) is mildly challenging. Your main objective is to minimize area.

## Synthesis Constraints:

Contraint:	Value:
Clock frequency	400MHz (yes, I know the project spec speaks of 50MHz, but that is for the FPGA mapped version. The standard cell mapped version needs to hit 400MHz minimum.
Input delay	0.75ns after clock rise for all inputs
Output delay	0.75ns prior to next clock rise for all outputs
Drive strength of inputs	Equivalent to a ND2D2BWP gate from our library
Output load	0.1pF on all outputs
Wireload model	TSMC32K_Lowk_Conservativve
Max transition time	0.10ns
Clock uncertainty	0.12ns

**NOTE:** Area should be taken after all hierarchy in the design has been smashed.

My Total Cell Area is: 40134