

Front Bumper Shutter Replacement

Removal Procedure



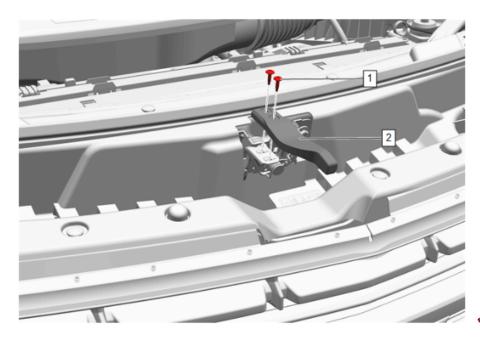


- 1. Hood Latch Actuator Bolt (1) » Remove [2x]
- 2. Hood Secondary Latch Release Handle (2) » Remove

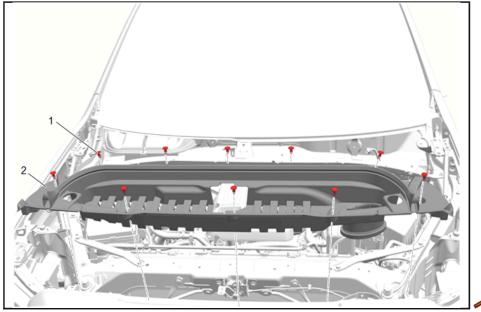





- 3. Intake Air Baffle Retainer (1) » Remove [10x]
- 4. Intake Air Splash Shield (2) » Remove

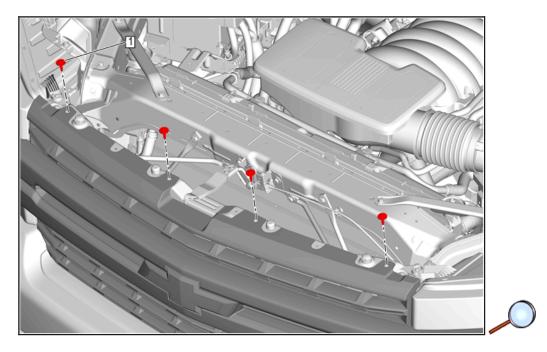

5. Front Grille Bolt (1) » Remove [4x]

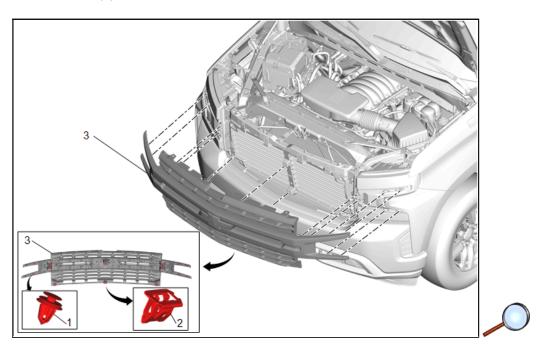


- 6. Front Grille Retainer (1) » Release [8x]
- 7. Front Grille Clip (2) » Release [8x]
- 8. Front Grille (3) » Remove

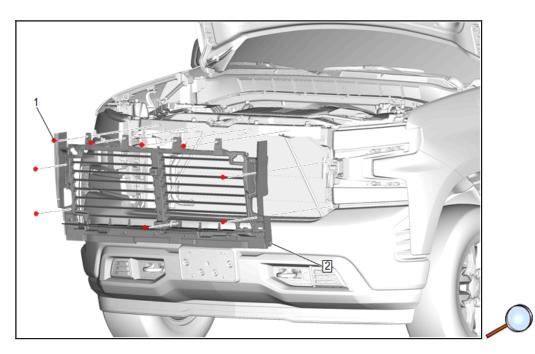


- 9. $\{$ If equipped $\}$ Disconnect and reposition the lower shutter harness.
- 10. Disconnect the electrical connector.
- 11. Front Bumper Shutter Bolt (1) » Remove [9x]
- 12. Front Bumper Shutter (2) » Remove

Installation Procedure

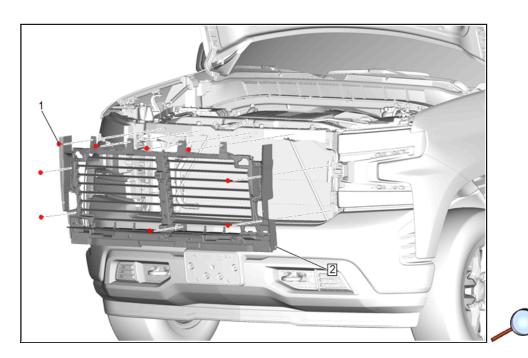



- 1. Front Bumper Shutter (2) » Install
- **Caution:** Refer to <u>Fastener Caution</u>.

 2. Front Bumper Shutter Bolt (1) Install and tighten [9x] <u>Fastener Specifications</u>
- 3. Connect the electrical connector.
- 4. { If equipped } Connect and install the lower shutter harness.

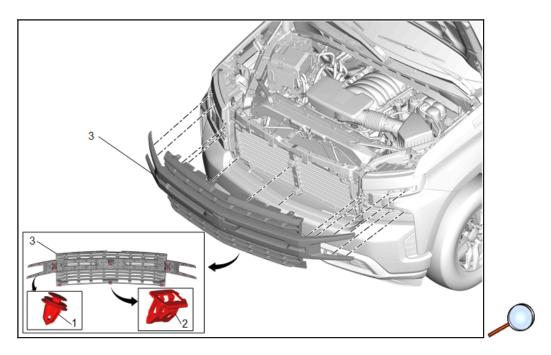


- 5. Front Grille (3) » Install
- 6. Front Grille Clip (2) » Install [8x]
- 7. Front Grille Retainer (1) » Install [8x]

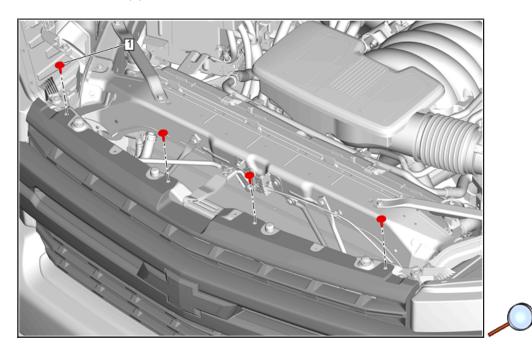

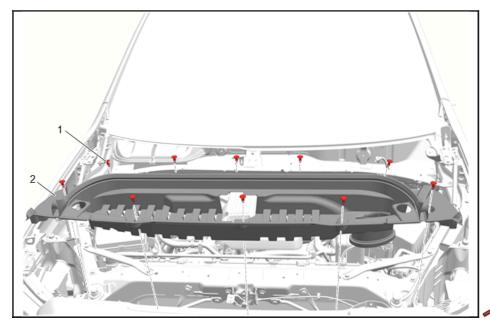



- 9. Intake Air Splash Shield (2) » Install
- 10. Intake Air Baffle Retainer (1) » Install [10x]

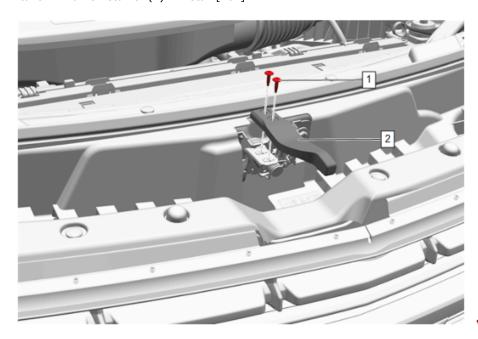



- 11. Hood Secondary Latch Release Handle (2) » Install
- 12. Hood Latch Actuator Bolt (1) » Install and tighten [2x] <u>Fastener Specifications</u>