


carrier-v1 — 1:1 FOOTPRINT CHECK


Print at 100% / actual size. NOT 'fit to page'.

- 1. Check the ruler below with calipers — it must read 50.0 mm.
- 2. Lay a real XIAO RP2040 on the pad pattern. Pads must line up.
- 3. Both patterns below are traced to primary sources — see README.




XIAO RP2040 land pattern — 17.0 mm rows, 2.54 mm pitch, 7/side, pads 3.0 x 2.0

Source: Seeed 'XIAO Series Package and PCB Design' p.3 (CONFIRMED)

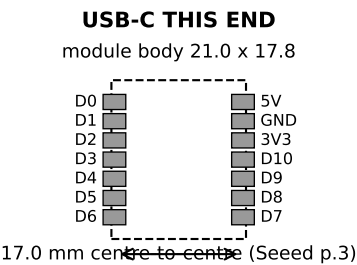

Pogo + dowel pattern — traced to pcb-v7-zero-opens.kicad_pcb (confirmed)

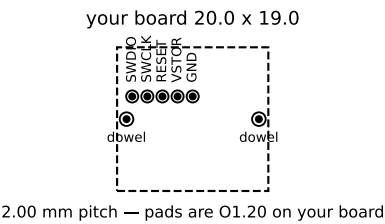

If the XIAO does not fit, the board is still usable:

J2 (SWD ESC) carries SWDIO / SWCLK / RESET / VSTOR / GND for an external probe.