

# D20&D60 DRIVER AND FLASH TOOL


V1.0.0




## Catalogue


### 1. USB Serial Port Driver Installation

- 1. Install serial port driver: <u>Driver\_Auto\_Installer\_exe\_v5.1632.00.zip</u>
- 2. Open the Setup program by clicking on the DriverInstall.exe.

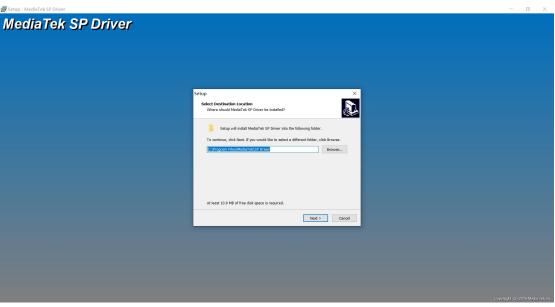

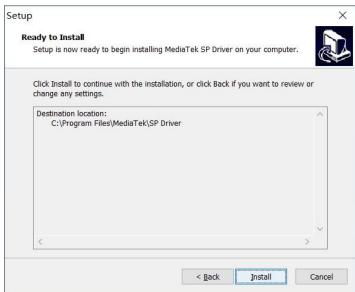



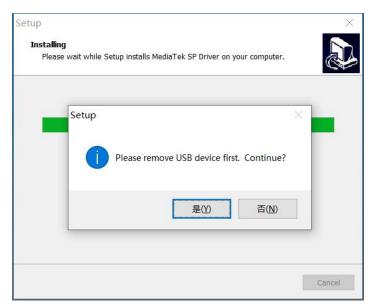

#### 3. Remove USB and click Next.

```
Installing: USB\VID_OBSD&PID_200F&MI_01...

SetupCopyOEMInf: done
installing: USB\VID_OBSD&PID_2010&MI_03...

SetupCopyOEMInf: done
installing: USB\VID_OBSD&PID_2011&MI_02...

SetupCopyOEMInf: done
installing: USB\VID_OBSD&PID_2011&MI_02...

SetupCopyOEMInf: done
installing: USB\VID_OBSD&PID_2012&MI_01...

SetupCopyOEMInf: done
installing: USB\VID_OBSD&PID_2013&MI_01...

SetupCopyOEMInf: done
installing: USB\VID_OBSD&PID_2013&MI_02...

SetupCopyOEMInf: done
installing: USB\VID_OBSD&PID_2013&MI_03...

SetupCopyOEMInf: done
installing: USB\VID_OBSD&PID_201A&MI_02...

SetupCopyOEMInf: done
installing: USB\VID_OBSD&PID_201A&MI_03...

SetupCopyOEMInf: done
installing: USB\VID_OBSD&PID_201A&MI_03...

SetupCopyOEMInf: done
installing: USB\VID_OBSD&PID_2026&MI_04...

SetupCopyOEMInf: done
installing: USB\VID_OBSD&PID_2026&MI_04...

SetupCopyOEMInf: done
installing: USB\VID_OBSD&PID_2027&MI_02...


SetupCopyOEMInf: done
installing: USB\VID_OBSD&PID_2027&MI_04...

SetupCopyOEMInf: done
installing: USB\VID_OBSD&PID_2028&MI_03...

SetupCopyOEMInf: done
```



4. Waiting for update to succeed. After the installation finished, restart the computer to initiate the driver.

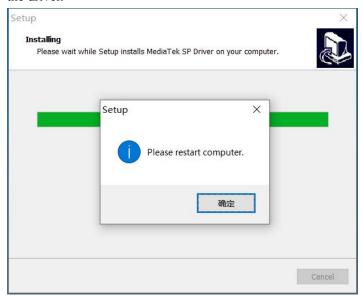






### 2. Update the D20&D60 ROM


- 1. Download SP Flash Tool exe Windows v5.1944.00.000 tool
- 2. Shut down the D20&D60 device.
- 3. Extraction the "SP\_Flash\_Tool\_exe\_Windows\_v5.1944.00.000" folder, then click the "flash\_tool.exe" file.

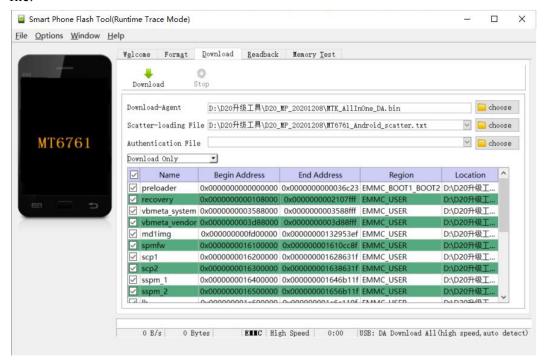


4. Select Download-Agent.


Choose the file "MTK\_AllnOne\_DA.bin" file in the "D20\_Customer\_debug/release\_yyyymmdd" folder, as follows:



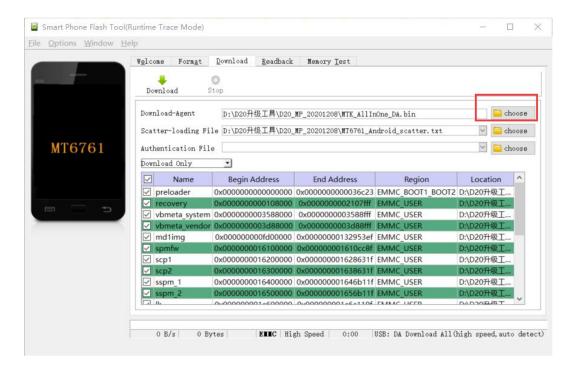

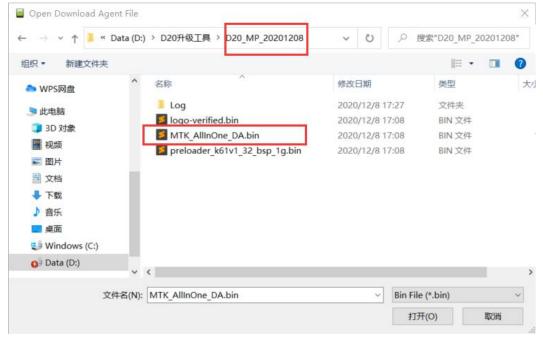




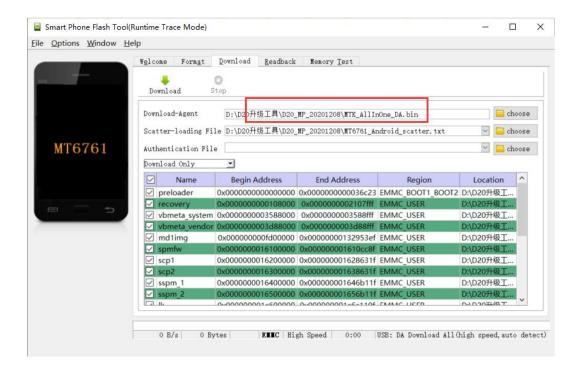


5. Select Scatter-loading File.

Choose the "MT6761\_Android\_scatter.txt" file in the "D20\_Customer\_debug/release\_yyyymmdd" folder, as follows:

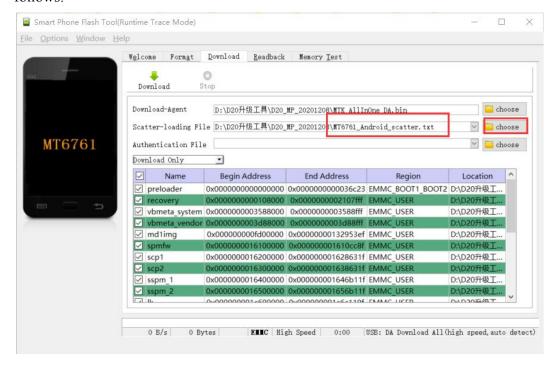



6. Click "Download" button to begin update. Then connect the device with PC via USB.

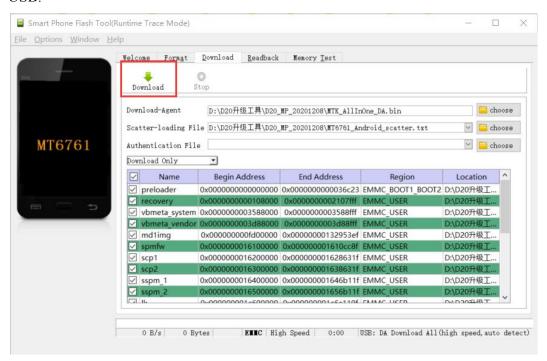

7. Waiting for update to succeed.

