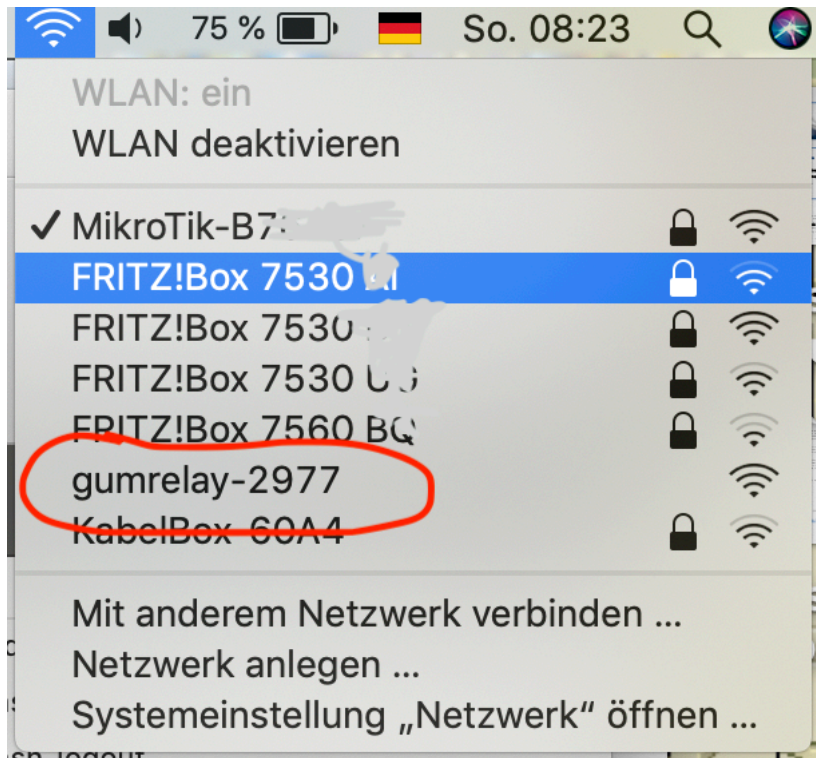Connect GumRelay to a power source, (Recommended 4,5 to 6Volt).

Please keep the correct polarity.

After that a WIFI network will be created by the ESP01 Module. Please connect to the gumrelay-xxxx Network.

Open in your web browser http://192.168.4.1/
A configuration page will appear.
At AP1 SSID provide your WIFI network name.
At AP1 Password provide the password of your WIFI network.
Leave the AP2 values empty and click save.

Wifi parameters

AP1 SSId ()

AP1 Password

••••

AP2 SSId ()

AP2 Password

••••

Hostname (%s-%04d)

%s-%04d

Save

Restart

Reset Configuration

After this the GumRelay will restart and connect to your WIfi network.
To find out which IP the GumRelay has received, you'll have to connect to your router and look at DHCP Leases. Or you can use apps like Wireshark to scan your local network for connected devices.

Then connect to the like: http://192.169.xx.xx/ with your browser and a GumRelay Control page will appear.