
Formula Slug – Buck Converter Schematic Block
Power Electronics Onboarding Project 2026-2027

Overview

This project is centered around designing a buck converter to help power different boards on our LV system. This project requires you to design your own buck converter, sourcing components and creating the schematic and layout. You will also push it onto FS's github.

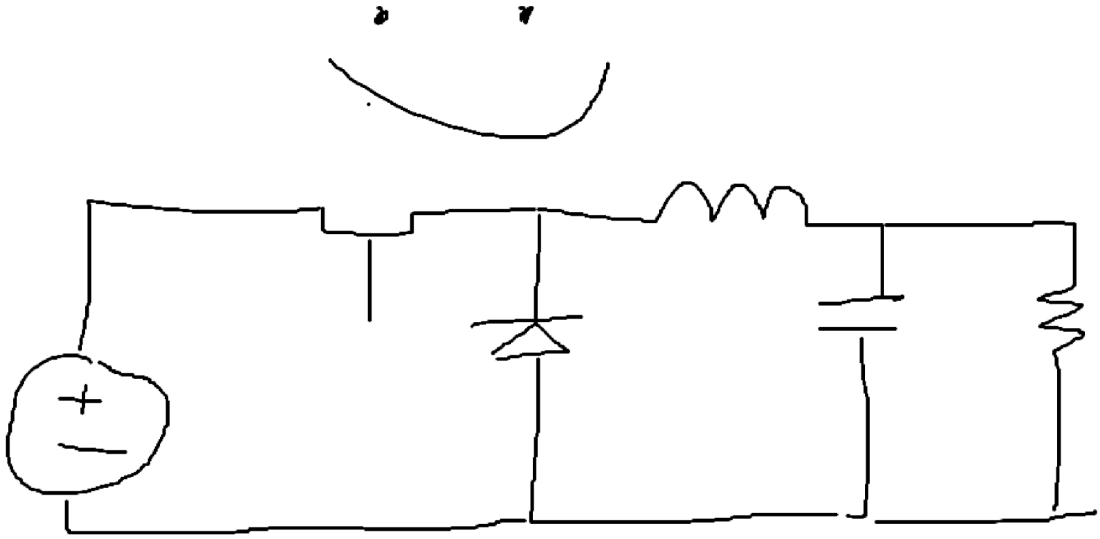

Our Low Voltage system consists of all our important logic and sensing boards, such as our Vehicle Control Unit, Telemetry boards, and Tractive Battery board. On all these boards, there are a variety of different components, who all may need to be powered by a different voltage level. For example, relays can operate at 12V, MCUs can operate at 5V, while some smaller chips run on as small as 3.3V. This is a big issue, because our low voltage bus runs on 12V!? If we overvolted those components, they would immediately stop working.


So what can we do to fix this?

A buck converter is used to transform a higher voltage to a lower voltage. We can use this to

power all of these components that require a much smaller power input, allowing it to properly function.

Navigating Project & Submission

There are 3 parts to this project: Initial Learning, Component Selection, and Schematic Layout. On the left side of the Google Doc, you will find the different tabs leading you to each activity.

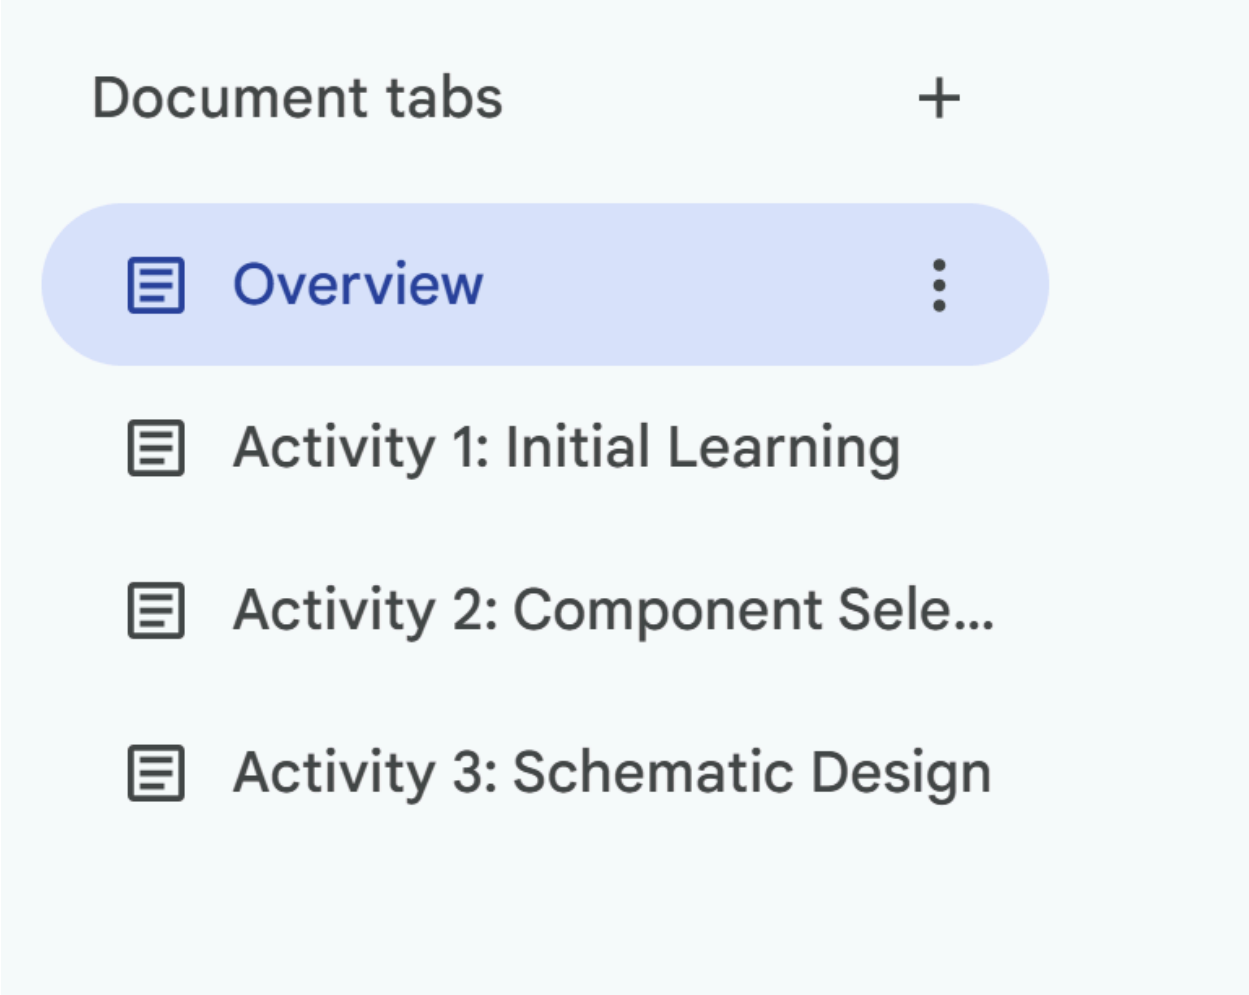

Make a copy of this project, renaming it to "*Full Name* - Power Electronics Onboarding". Once every activity is completed, or before the due date, submit the document here. For example:

"Edmund Lai - Power Electronics Onboarding"

If there are any questions, message Edmund Lai on slack. There will be updates to this document if needed, check below for update logs.

Revision	Date	Updated Content
1.0	9/14/2026	Initial draft
2.0	10/16/2026	Maheer Grang submission

Activity #1: Initial Learning

Listed below is a variety of initial resources that you can use if you are not familiar with electrical engineering concepts. I would suggest getting to know these well before you attempt to work on the buck converter. Any resource that talks about the same thing is good, as long as you understand the basics.

Analog Devices and Circuits:

1. Organic Chemistry Tutor: Ohm's Law
   https://www.youtube.com/watch?v=_rSHqvjDksg
2. Khan Academy, Current, Resistors, Ohm's Law:
   https://www.khanacademy.org/science/ap-physics-2/x0e2f5a2c:electric-circuits/x0e2f5a2c:current-resistivity-ohms-law/v/circuits-part-1
3. Khan Academy, Compound Circuits:
   https://www.khanacademy.org/science/ap-physics-2/x0e2f5a2c:electric-circuits/x0e2f5a2c:current-resistivity-ohms-law/v/electric-power
4. EEVBlog, Voltage Dividers:
   https://www.youtube.com/watch?v=xSRe_4TQbuo&list=PLvOlSehNtuHtWlH0UOZNtOn-FlFCn1GYw&index=2
5. EEVBlog, Kirchhoff's Laws:
   https://www.youtube.com/watch?v=WBfAEeEzDlg&list=PLvOlSehNtuHtWlH0UOZNtOn-FlFCn1GYw&index=13

Listed below are more power related resources. This you will need to use to understand the theory behind how switch mode power supplies work.

1. MIT OpenCourseWave Power Electronics Course:
   a. Lecture 5: Intro to DC/DC, Part 1
2. Fundamentals of Power Electronics, by Robert W. Erickson and Dragan Maksimovic
3. Power Electronics by Daniel W. Hart

Please take good notes! Take notes in your notebook, here, whatever you would want to do. I would just like to see what you guys see and how you understand it!

Activity #2: Component Selection

After finishing Activity #1, you are ready to start selecting different components! When selecting components, please follow the LV Standards guideline to picking different form factors. Typically, our resistors and capacitors are both 0603, but this is just a general guideline. Typically do not go under 0603, but if we need a larger voltage rating, going up is completely fine. We typically only source from Digikey as well (Mouser if it is the only place available). We also do not want to use marketplace products. These are all filters that you can apply on Digikey, and more information is available in the LV standards document.




The first big thing to source is your Buck IC! This chip is used to adjust the duty cycle of the switches, and work with the feedback loop. For reference, here is the one we used last year but is now out of stock. The big thing is making sure it can output enough current to supply our boards! For FS5, we defaulted to a 2A buck, which worked perfectly fine (to my knowledge), so anything 2A and above is good! However, be sure to properly select this, because there are some tradeoffs that you may have to make if you oversize the buck converter too much. Feel free to ask me if you have any questions about that!

There are a couple I have in mind, but I would like you guys to do your own research and play with Digikey to be more familiar with the website! This is where we order almost all our parts, excluding some from Mouser. You will need to get familiar with it. Here are some initial parameters to get you all started on looking.


Input Voltage	~10-15V *
Output Voltage	5V
Output Current	Iout ≥ 2A
Switching Frequency	Fsw ≥ 500kHz**
Feedback Control	😳
Ripple Voltage	1-5%

*Though our LV bus is 12V nominally, it is actually 13.5V!
**with too low of a switching frequency, you upsize your inductor and output capacitor value, which could be an issue space wise. This is an arbitrary value I have set for the case of the onboarding project.

Whatever chip you decide to pick, be sure to properly read the entire thing, understanding what each pin does, what kind of internal structure it has, and the reasoning behind all of it.

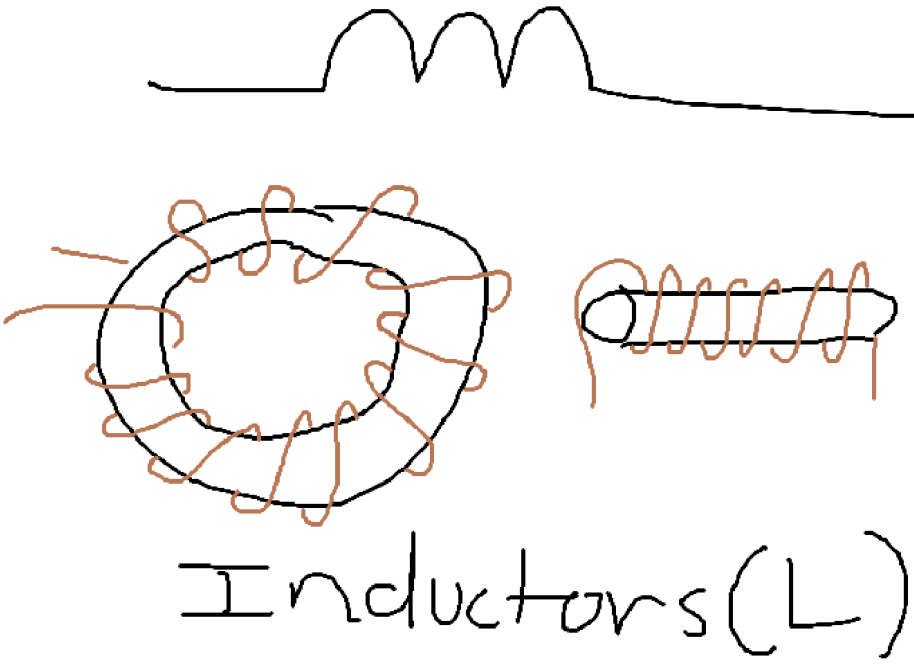

One big thing you should check in an inductor is its saturation current. Make sure that your inductor does not oversaturate at the output current you are expecting, or else your inductor's inductance will drop so low that your output ripple will be extremely large.

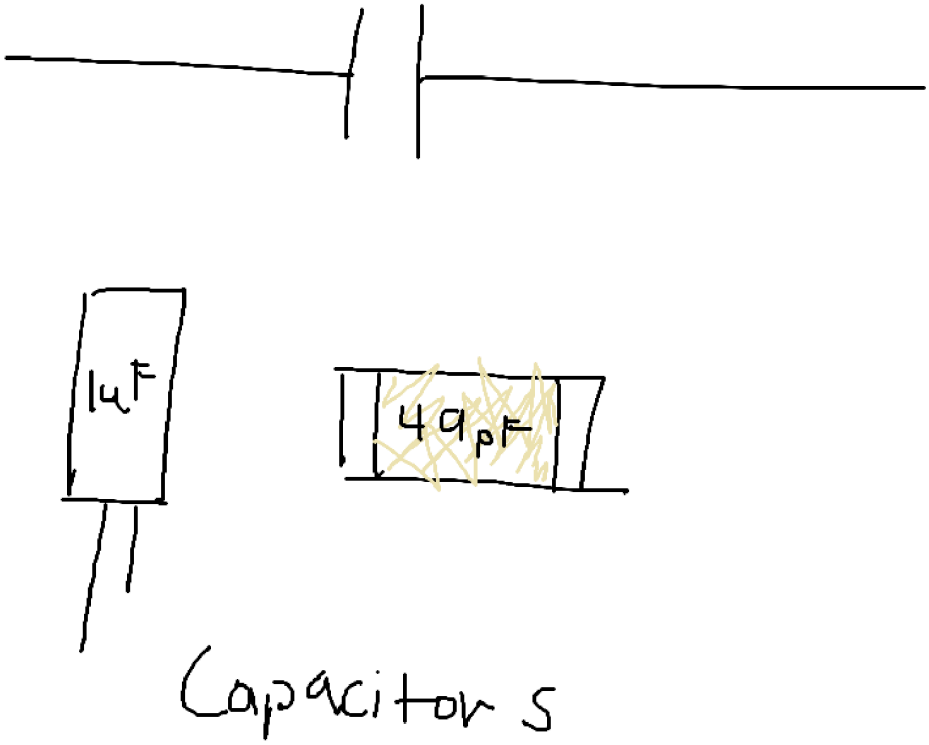

Capacitors have a funny little thing called DC Biasing. Capacitors do not like staying at the specific capacitance they were designed to be at. Instead, whenever you apply any kind of voltage across one, their capacitance will drop by some percentage, typically shown in your datasheet. Make sure that your capacitances will be what you are expecting at your expected output voltage! A little hint: The output capacitors are there to help filter noise! There is something you have to do when picking your output capacitors to help reduce noise on the output end.



Make sure to try to minimize costs as much as possible! This is more of a good engineering practice to not just go with the best thing if it costs an unreasonable amount of money.

At the end of this activity, fill out this chart with the things that you have selected for ONE buck converter, with the costs per unit and size as well. If you need to add more rows, feel free to.

Component	Cost	Link	Units	Size
Buck IC AP62300TWU	$0.38	https://www.digikey.com/en/products/detail/diodes-incorporated/AP62300TWU-7/12702558	1	TSOT-26
Inductor	$0.90	https://www.digikey.com/en/products/detail/codaca/CSEG0430H-4R7M/25843508?s=N4IgjCBcpgTGBOKoDGUBmBDANgZwKYA0IA9lANoiwDMiADAKwjE1jUDs7zV1rAbNxqwAHHy4tewuhAnUALGJABdYgAcALlBABldQCcAlgDsA	1	0.165" L x 0.165" W (4.20mm x 4.20mm)

		5iAC%2BxOAgjQQaSFjxFSFEMIZyEwripAatXUNTCxY6H2R7DBwCYjJISjkAOnYAAgBWgAllNU1IEABVIwN1AHl0AFl8TFwAVz18C3NzIA		
Capacitor 1 and 2	$0.28	https://www.digikey.com/en/products/detail/murata-electronics/GRM188R61E106MA73J/4905347	3	0603 0.063" L x 0.031" W (1.60mm x 0.80mm)
Capacitor 3	$0.14	https://www.digikey.com/en/products/detail/yageo/CC0603KRX7R9BB104/2103082?s=N4IgTCBcDaIMJwAwDZEGYDSAlAGgdiwE4AhYgRkQBYQBdAXyA	1	0603 (1608 Metric) Size / Dimension 0.063" L x 0.031" W (1.60mm x 0.80mm)
Capacitor 4 and 5	$0.42	https://www.digikey.com/en/products/detail/samsung-electro-mechanics/CL21A226KOQNNNG/3894433	2	0603 (1608 Metric)

Resistors	Total: $0.41	https://www.digikey.com/en/products/detail/yageo/RC0603FR-0756K2L/727303 https://www.digikey.com/en/products/detail/yageo/AC0603FR-0710KL/2827814 https://www.digikey.com/en/products/detail/yageo/AC0603FR-07221KL/5895920?s=N4IgTCBcDaIIIGEAMA2JBmAYgJQLRIHYwwBGAaQBkQBdAXyA https://www.digikey.com/en/products/detail/yageo/AC0603FR-0732K4L/5896034?s=N4IgTCBcDaIIIGEAMA2JBmAYgJQLRIHZ0wBpAFgBkQBdAXyA	1 of each	0603 (1608 Metric)
Total Cost	$3.46			

Table 1. Recommended Component Selections

AP62300/AP62301/AP62300T								
Output Voltage (V)	AP62300/AP62301 R1 (kΩ)	AP62300T R1 (kΩ)	R2 (kΩ)	L (µH)	C1 (µF)	C2 (µF)	C5 (pF) (Optional)	C6 (nF)
1.2	4.99	5.76	10	1.5	10	2 x 22	Open	100
1.5	8.66	9.76	10	1.5	10	2 x 22	Open	100
1.8	12.4	13.7	10	2.2	10	2 x 22	10 - 100	100
2.5	21.5	22.6	10	2.2	10	2 x 22	10 - 100	100 - 220
3.3	31.6	33.2	10	3.3	10	2 x 22	10 - 100	100 - 330
5.0	52.3	56.2	10	3.3	10	2 x 22	10 - 100	100 - 330

Buck converter

IC: Diodes inc. AP62300T

$I_{max} = 3A$, $f_{sw} = 750kHz$

V_{in}: 4V → 18V (20V max)

2 internal mosfets

75mΩ high, 45mΩ low

ref $V_{out} = 0.763V$,

V_{out}: 0.8V → 7V

Inductor:

$$D = \frac{V_{out}}{V_{in\,max}} = \frac{5V}{13.5V} = 0.37$$

$V_{in} = 13.5V$ $V_{out} = 5V$ $I = 2A$ (or 3A?)

$$L = \frac{V_{out}(V_{in} - V_{out})}{V_{in} \cdot \Delta I_L \cdot f_{sw}}$$

ΔI_L = inductor current ripple

= 0.2 - 0.3 of max I @ 3A.

$= 2A \cdot 0.3 = 0.9A$

$$= \frac{5(13.5-5)}{13.5 \cdot 0.9 \cdot 750K} = \frac{42.5}{9112500} \approx 4.66\mu H$$

use 4.7 µH, closest standard value

$$I_{peak} = I + \frac{\Delta I_L}{2} = 2 + \frac{0.9}{2} = 2.45A$$

$I_{sat} > 1.35 \times I_{max} = 1.35 \cdot 3$

$I_{sat} > 4.05$

$I_{sat} > 4.05 + \Delta I_L$

$I_{sat} > 4.05 + 0.9A$

$I_{sat} > 5A$

$R_I < 30m\Omega$

Buck IC data sheet

Table 1. Recommended Component Selections

AP62300/AP62301/AP62300T								
Output Voltage (V)	AP62300/AP62301 R1 (kΩ)	AP62300T R1 (kΩ)	R2 (kΩ)	L (µH)	C1 (µF)	C2 (µF)	C5 (pF) (Optional)	C6 (nF)
1.2	4.99	5.76	10	1.5	10	2 x 22	Open	100
1.5	8.66	9.76	10	1.5	10	2 x 22	Open	100
1.8	12.4	13.7	10	2.2	10	2 x 22	10 - 100	100
2.5	21.5	22.6	10	2.2	10	2 x 22	10 - 100	100 - 220
3.3	31.6	33.2	10	3.3	10	2 x 22	10 - 100	100 - 330
5.0	52.3	56.2	10	3.3	10	2 x 22	10 - 100	100 - 330

Input caps:

- $I_{in} = I_{out} \cdot \sqrt{D \cdot (1-D)} = 2A \cdot \sqrt{0.37 \cdot 0.63} = 0.97A$ (worst case 1A @ D=0.5)
- From IC datasheet, RMS > $\frac{1}{2} I_{max}$, 2 capacitors give 0.48A each
- Input ripple = $I_{out} \cdot D \cdot \frac{(1-D)}{(F_{sw} \cdot C_{in})} = \frac{0.466}{750K C_{in}}$, with ~ 0.5-0.65x capacitance @ 13.5V
  $C_{in} \approx 10-13\,\mu F$, ripple $\approx 48-62\,mV = 0.4\% \cdot 13.5V$
- 25V rating on 15V bus is 1.67x, > 50% margain
- using 1206 to keep more capacitance under DC bias than 0603

Bootstrap cap: datasheet uses 100nF, allows for 100-330nF

Output Caps

$$\Delta I_L \cdot \left(ESR + \frac{1}{8 \cdot f_{sw} \cdot C_{out}}\right) = \text{output ripple}$$

$C_{out} \approx 17.6 - 26.4\,\mu F$, $ESR = 5m\Omega$

ripple = $0.95(.005 + .0095) = 14mV$ → $0.95(.005 + .0063) = 11mV$

2A w/ 0.25V, overshoot $C_{out} > L \cdot \frac{I^2}{(\Delta V \cdot V_{out})} = 4.7\mu \cdot \frac{4}{(0.25 \cdot 5)} = 15\,\mu F$

undershoot $C_{out} > L \cdot \frac{I^2}{\Delta V \cdot (V_{in} - V_{out})} = 4.7\mu \cdot \frac{4}{0.25 \cdot 8.5} = 8.9\,\mu F$

C_2 from data sheet is also 2 x 22µF caps

Resistors


$$R_1 = R_2 \left(\frac{V_{out}}{V_{fb}} - 1\right) = 10K \left(\frac{5}{0.763} - 1\right) = 55.5K$$

not standard, $R_1 = 56.2K$

$V_{out} = .763\left(1 + \frac{56.2}{10}\right) = 5.05V$, $I = \frac{5.05}{66.2K} = 76\,\mu A$

worst case V_{out} is 4.86 → 5.24V (0.747 - 0.778 over temp + 1% resistors)

ie, 5V ± 3.37%

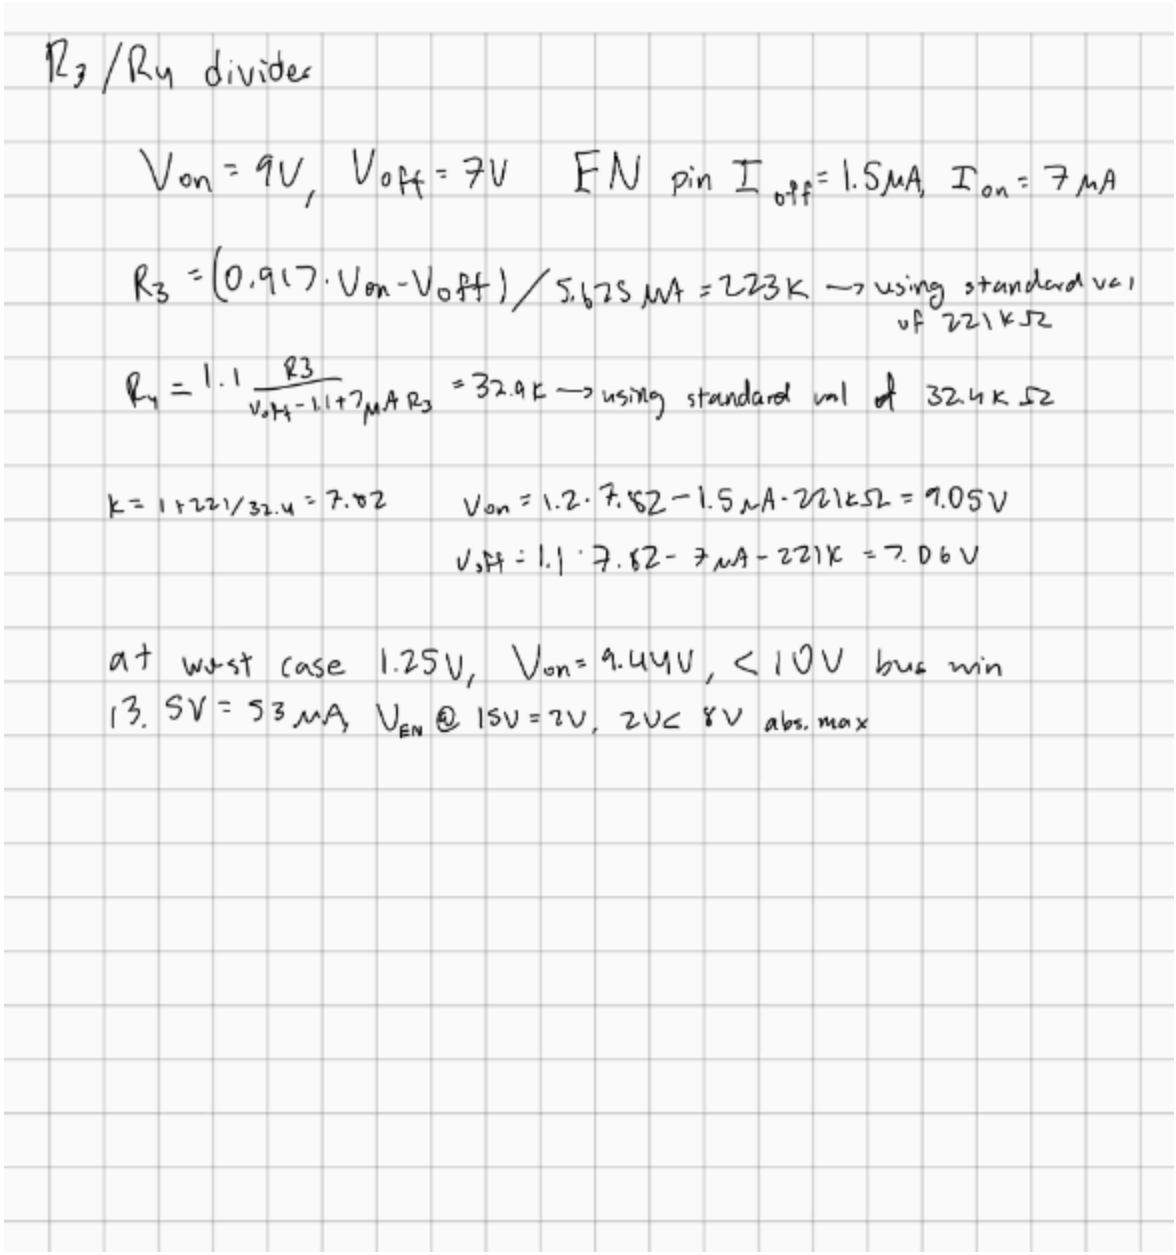

NOTES: per my conversation with edmund, I have changed the input caps to be 0603 and have included 3 capacitors at 10 microfarads each. This way, even though the capacitors are smaller and lose more capacitance to DC biasing, adding a third to the two existing capacitors keeps the equivalent capacitance in the 10 microfarad range. I have also changed the inductor to be a smaller scale inductor that fits more cleanly on the board. The values and calculations for this inductor remain unchanged.


Activity #3: Schematic and Layout Design


Here is where you start designing the schematic! Create a branch in the onboarding repo, and use the template KiCad project to make your buck converter. Be sure to follow the LV standards guide.

Please attend one of the KiCad workshops, where the electrical leads will teach you more about the software and what we expect.


Once you feel that your schematic and or layout is done, make a commit on the fs-electrical-onboarding repository, and push it onto github. You should make a commit no matter what, even if you did not finish completely. If you do not, you will not be considered for Power Electronics.


V 2.0

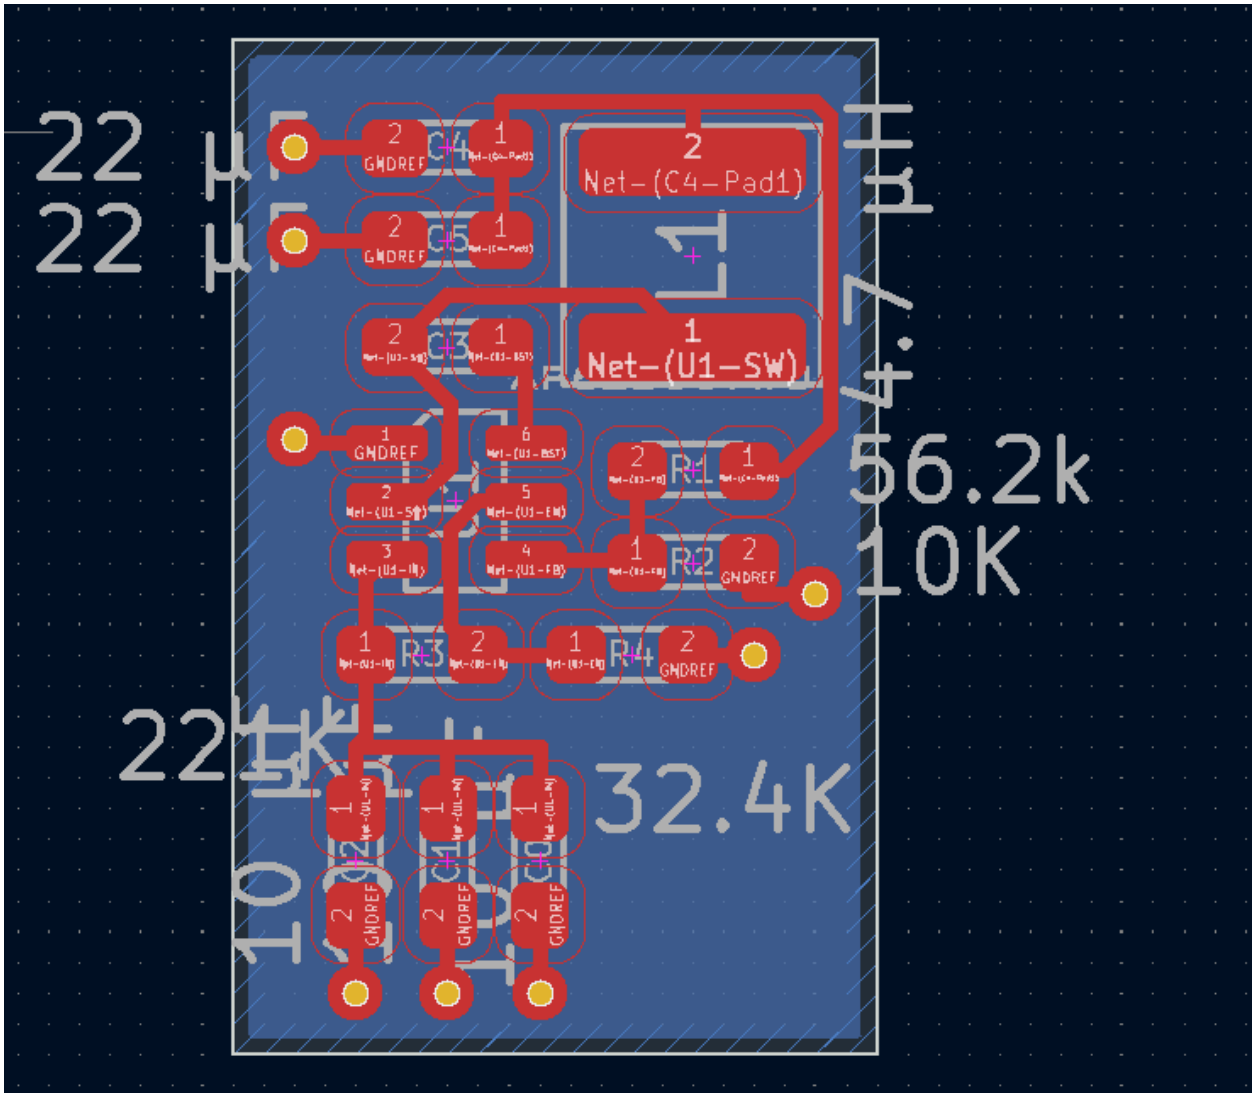
22 µF
22 µF
GNDREF
Net-(C4-Pad1)
L1
4.7µH
Net-(U1-SW)
56.2k
10K
32.4K
22K
10 µF

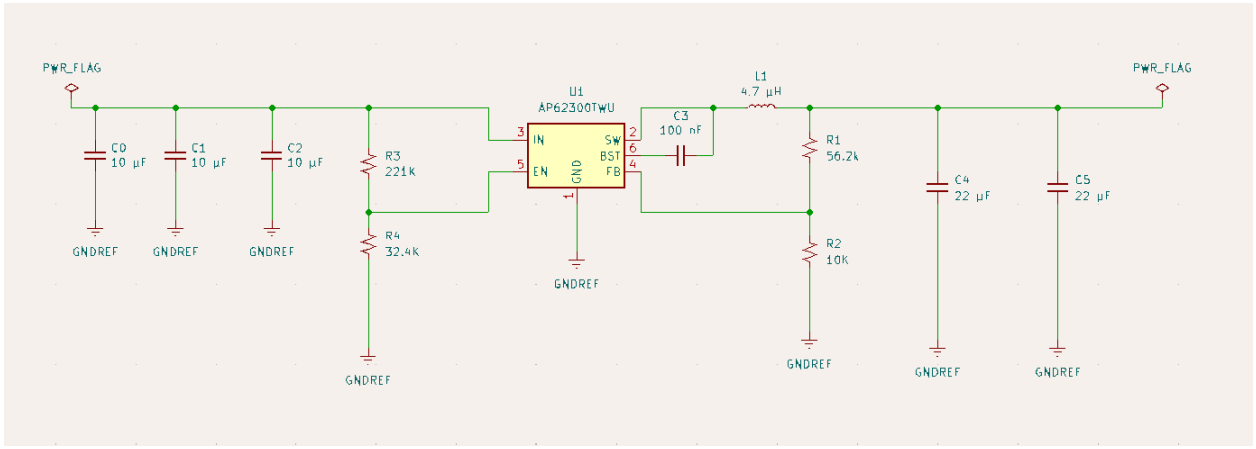
PWR_FLAG
C0
10 µF
C1
10 µF
C2
10 µF
R3
221k
R4
32.4k
U1
AP62300TWU
IN
EN
SW
BST
FB
GND
C3
100 nF
L1
4.7 µH
R1
56.2k
R2
10K
C4
22 µF
C5
22 µF
GNDREF

Initial draft

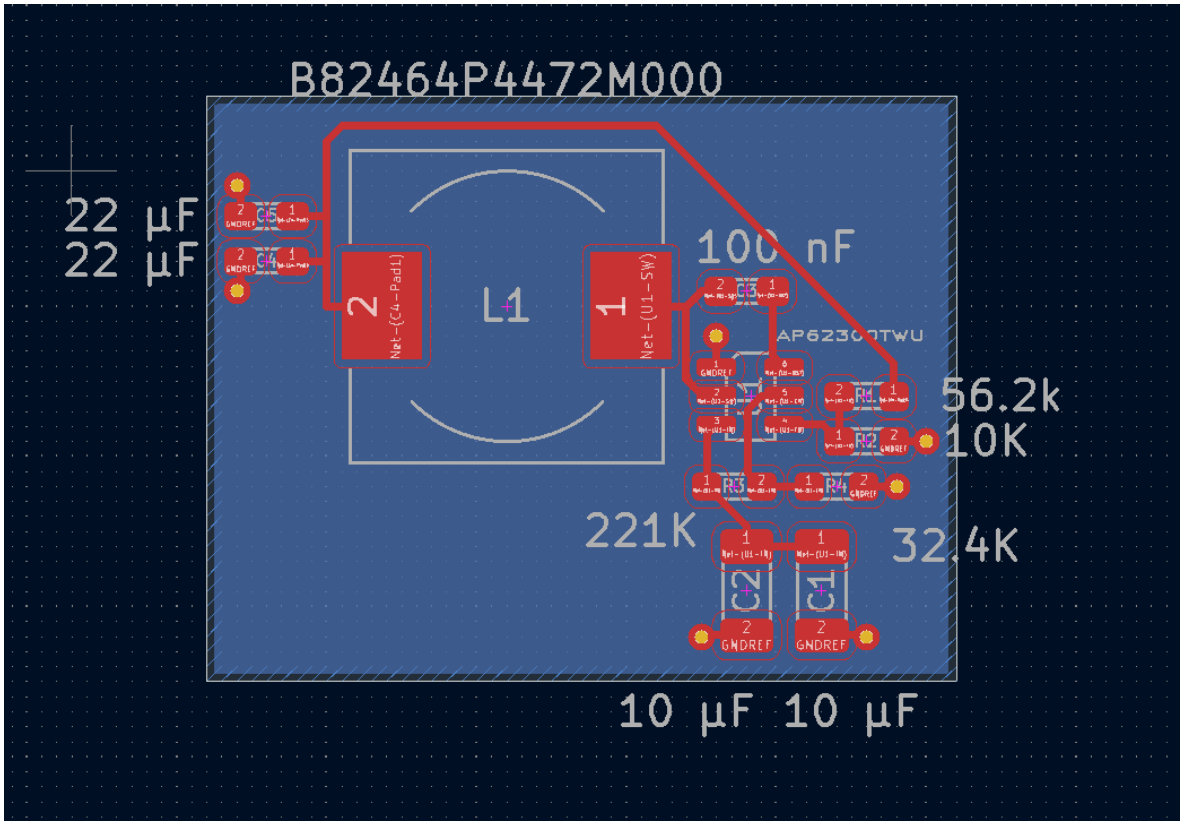

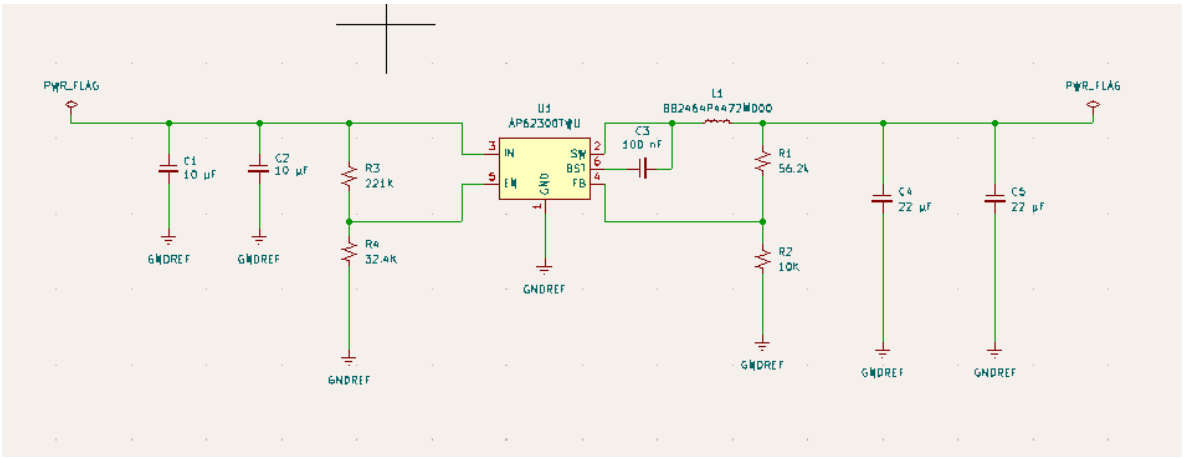

Extra Activity: Tractive System Shunt Current and/or Voltage Sense

If you happen to finish the buck converter, or you feel that the buck converter doesn't speak to you, you can also work on this project as well. This one will be in the form of a presentation / research project.

This project is based around adding to our current sensors within our Tractive Battery's container. Currently, we use a hall effect current sensor, which kind of looks like this:



For accuracy and data acquisition reasons, it would be nice to be able to add to this hall effect sensor with a shunt one, where you measure the voltage drop across a specially manufactured piece of metal with a specific resistance and voltage drop across, where you can then determine what current is going through it based on it. However, there are some constraints to this system, ie: isolation, heat dissipation, etc

Our current tractive battery current can go up to ~600A peak. We want to be able to measure up to this and down to the negatives as well in order to track regen current. Required by FSAE 26-27 Rules (EV.8.7.4), we need to be able to *prove* to judges that the Brake System Plausibility Device works through simulating tractive system current going through the current sensor. Find a way to be able to simulate this using a shunt if possible. At the moment, we have wire wrapped around a hall effect sensor multiple times, simulating higher currents with a smaller test current.

We would also like to be able to properly measure the voltage in our tractive system while we drive. We should find a way to take that voltage measurement, isolate it and pass it through to a

microcontroller so that we can have this data for the future.

When completing this research project, continue to write good documentation and make sure to optimize for costs when possible.

Have fun!