
Point Placement Guide
Shoulder Analysis (Beta_angle_ana)

As a reminder, this extension enables the computation of shoulder morphological measurements on radiographs (or 2D images) based on precise anatomical landmarks. The accuracy of the results directly depends on the precision of point placement. Following, you will find a detailed description to help you place the fiducials nodes.

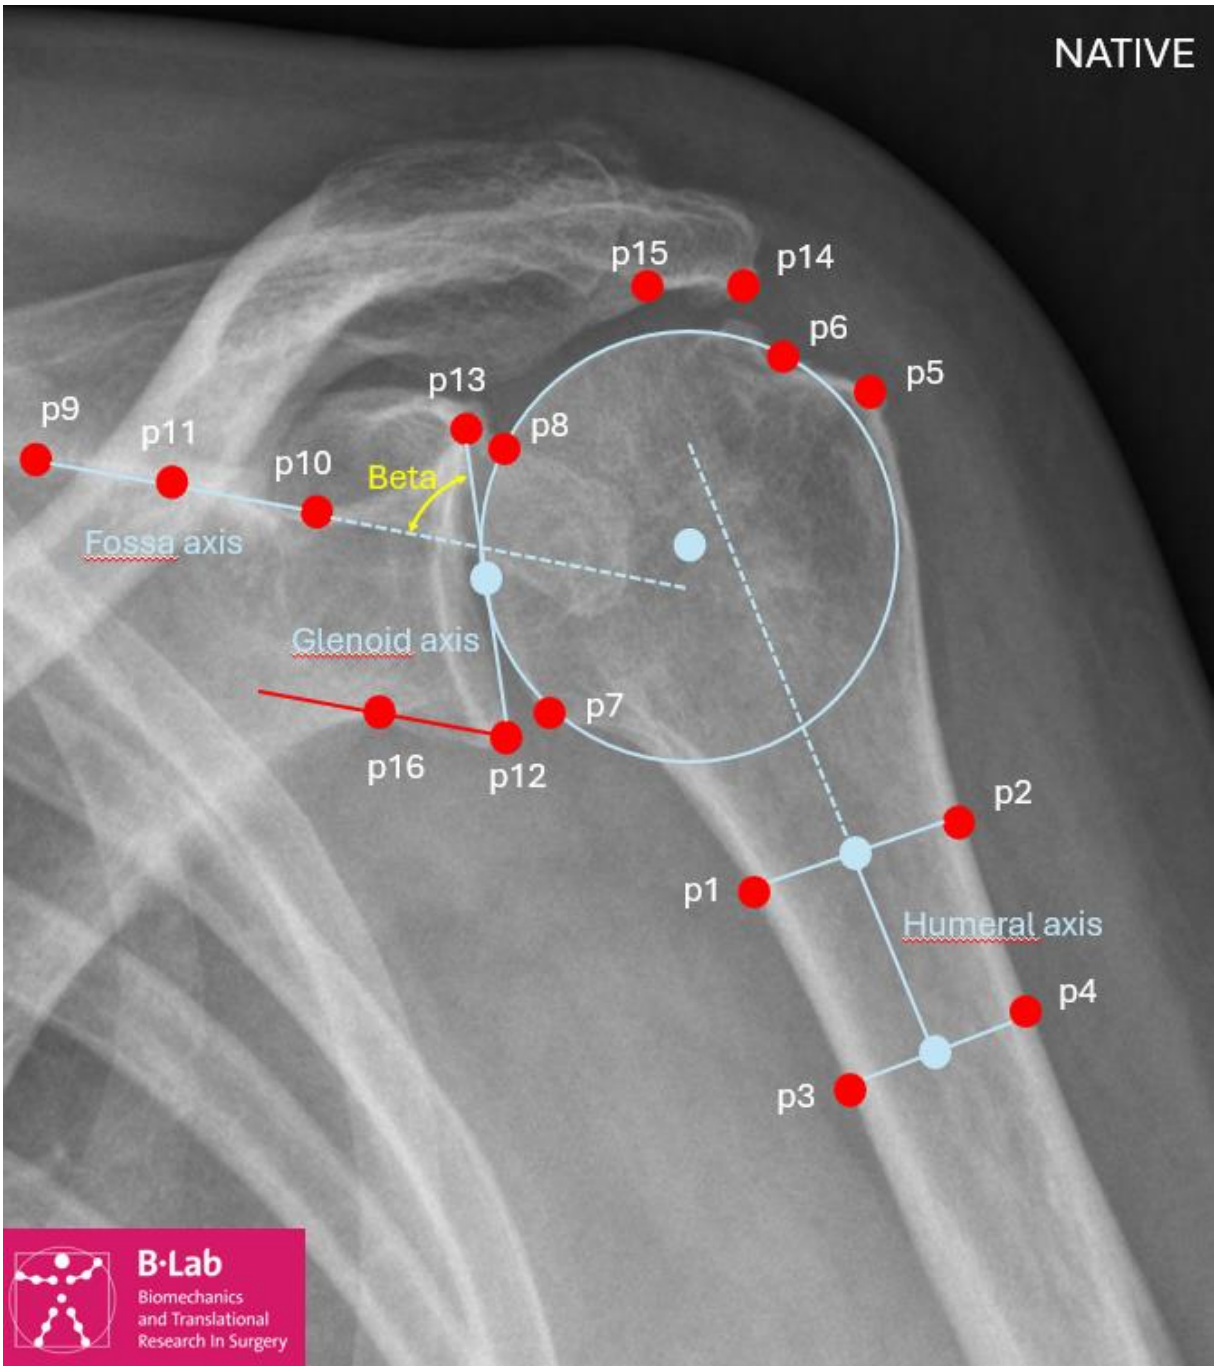

P1–P4 — Humeral diaphysis (proximal/distal, medial/lateral) — external cortex
Place four points along the external cortical borders of the humeral shaft, in this order: proximal medial (P1) → proximal lateral (P2) → distal medial (P3) → distal lateral (P4). P1–P3 form the medial cortical border and P2–P4 form the lateral cortical border. The humeral shaft axis is computed as the least-squares centerline running midway between these two lines.

I am going to add 1 point per cortical to gain in precision.

P5 — Latero-superior greater tuberosity (GT)
Place a point at the latero-superior edge of the greater tuberosity.

P6 — Upper head / greater tuberosity junction
Place a point on the upper aspect of the humeral head, at its junction with the greater tuberosity. Together with P7 and P8, this point is used to reconstruct the circle of the humeral head.

P7 — Lower head-calcar junction
Place a point at the lower head-calcar junction.

P8 — Head surface
Place a point roughly midway between P6 and P7 on the humeral head contour. Together, P6, P7 and P8 define the circle used to estimate the center of rotation of the humeral head — space them as widely as possible along the contour for a more accurate fit.

P9, P10, P11 — Fossa axis
P9: place at the "bottleneck" where the coracoid process broadens away from the scapular fossa.

P10: place at the most medial point of the fossa visible on the image.
P11: place on the fossa cortex roughly midway between P9 and P10 — this third point allows the fossa axis to be refined as a least-squares line fit rather than a simple two-point line.
Together, P9, P10 and P11 define the fossa axis, used as the scapular reference line.

P12, P13 — Upper glenoid / Lower glenoid
Place points at the most superior and most inferior aspects of the glenoid rim. These define the glenoid line.

P14, P15 — Lateral acromion / Medial acromion (inferior border)
Place two points at the lateral and medial edges of the inferior acromial border. These define the acromial line.

P16 — Medial scapular neck
A line, parallelled to the fossa axis and passing through p12, will appear to guide the placement of p16. Indeed, the point should be placed where this line crosses the cortical edge of the scapular neck, to represent the base of the scapular neck.