


How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

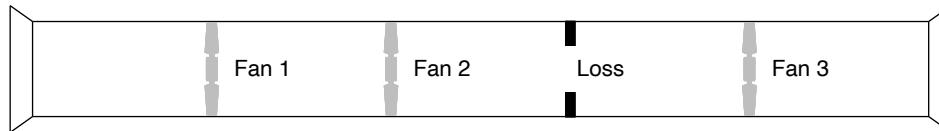



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

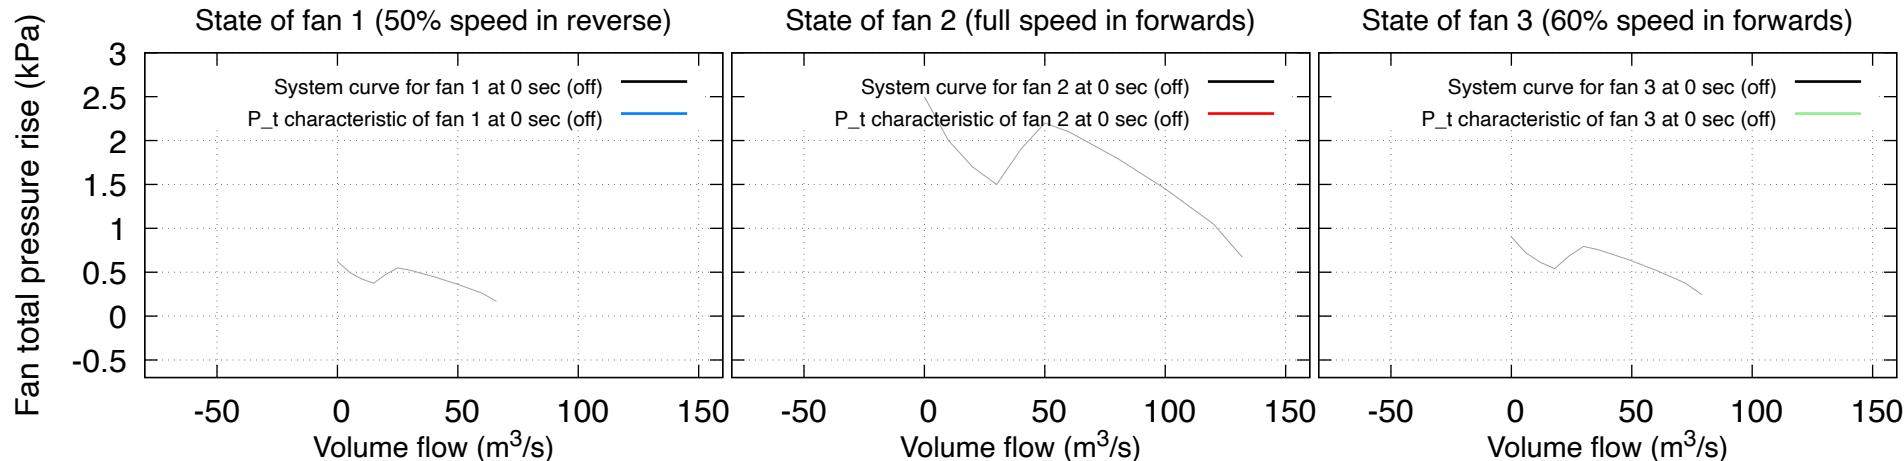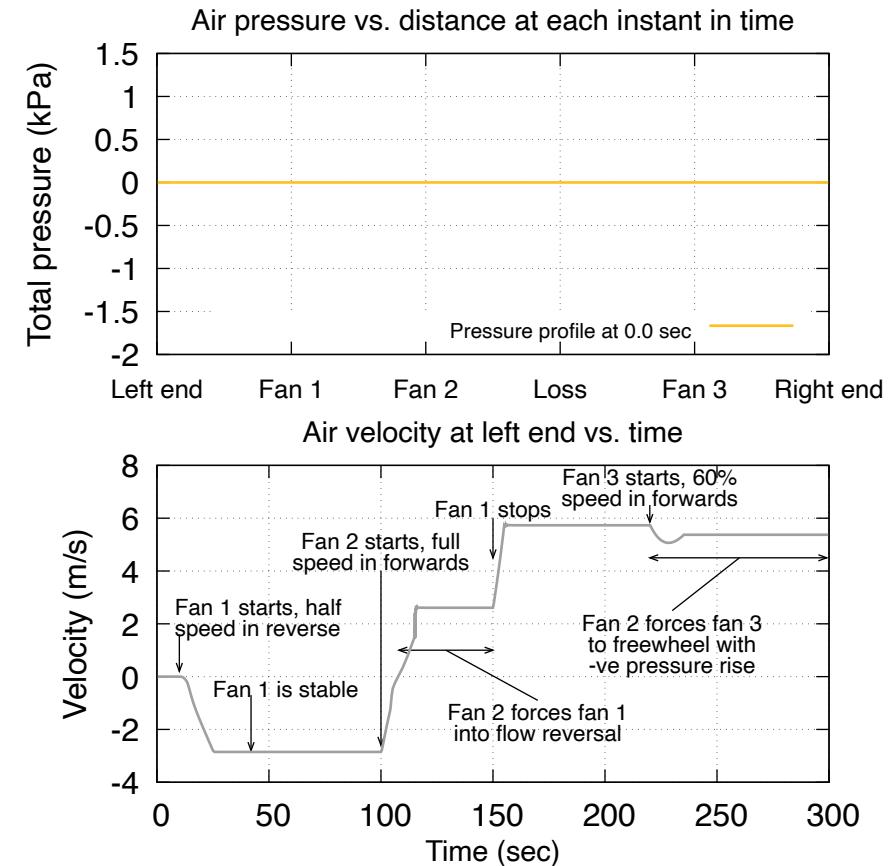

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

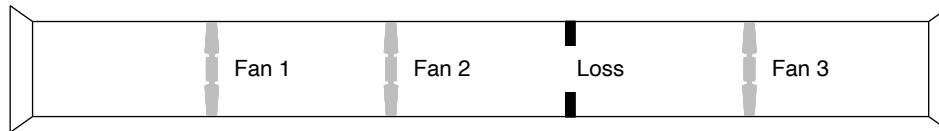



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

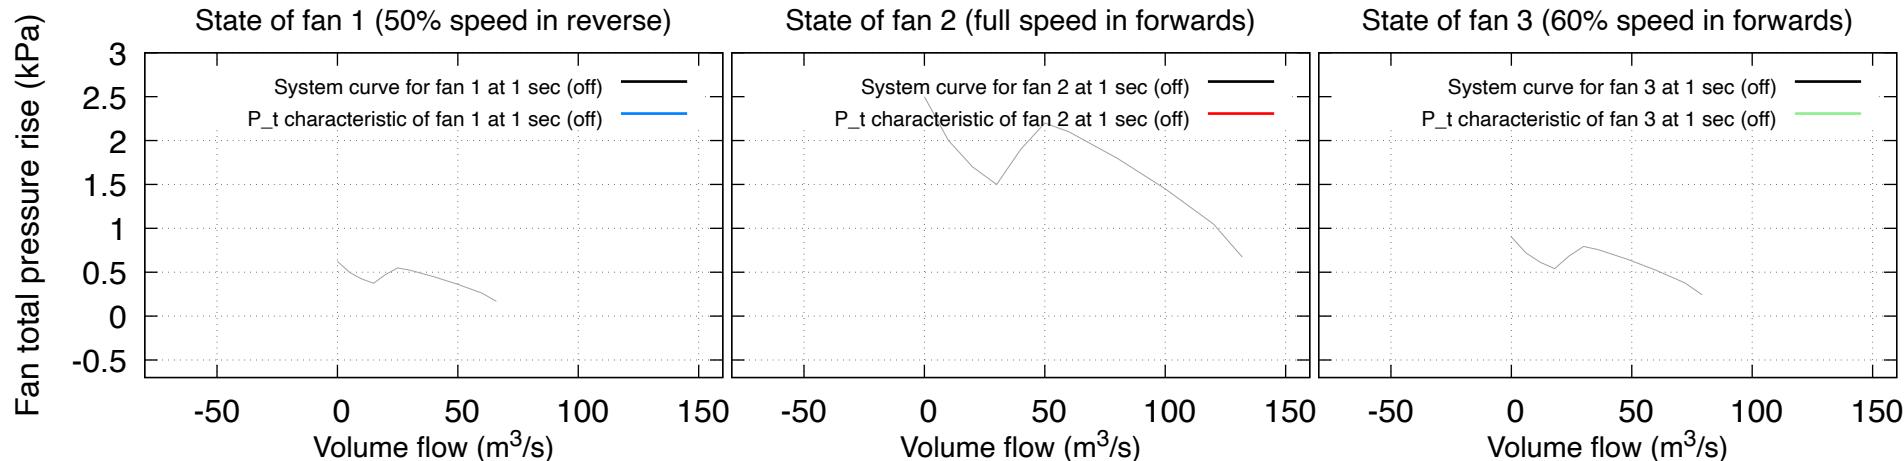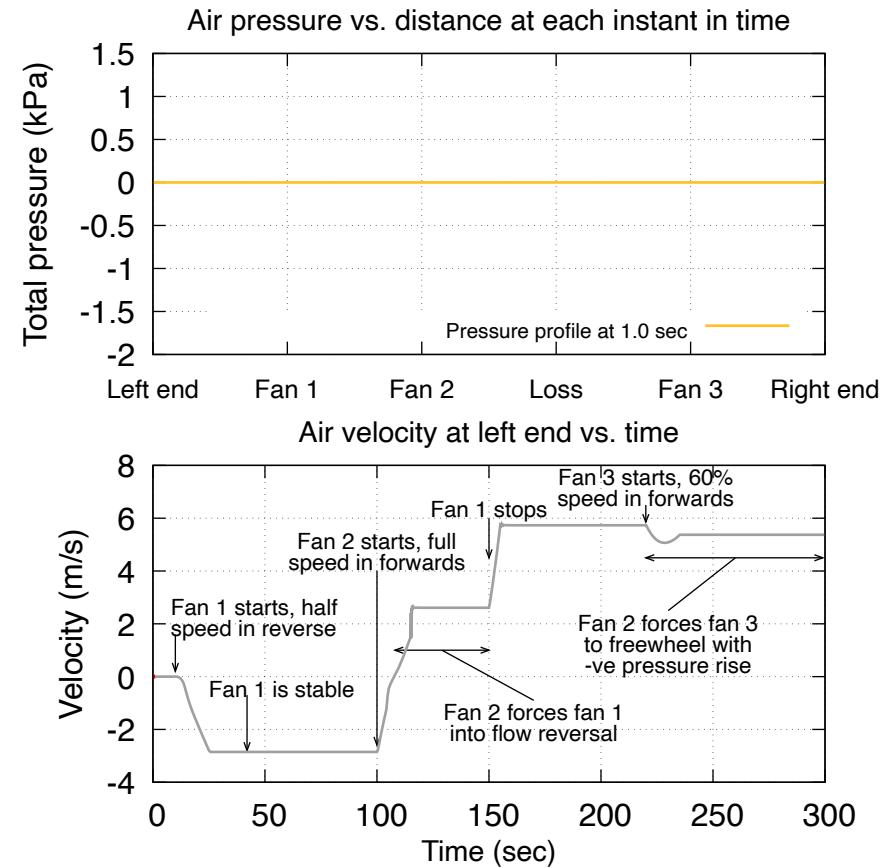

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

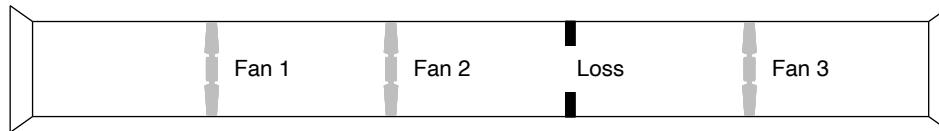



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

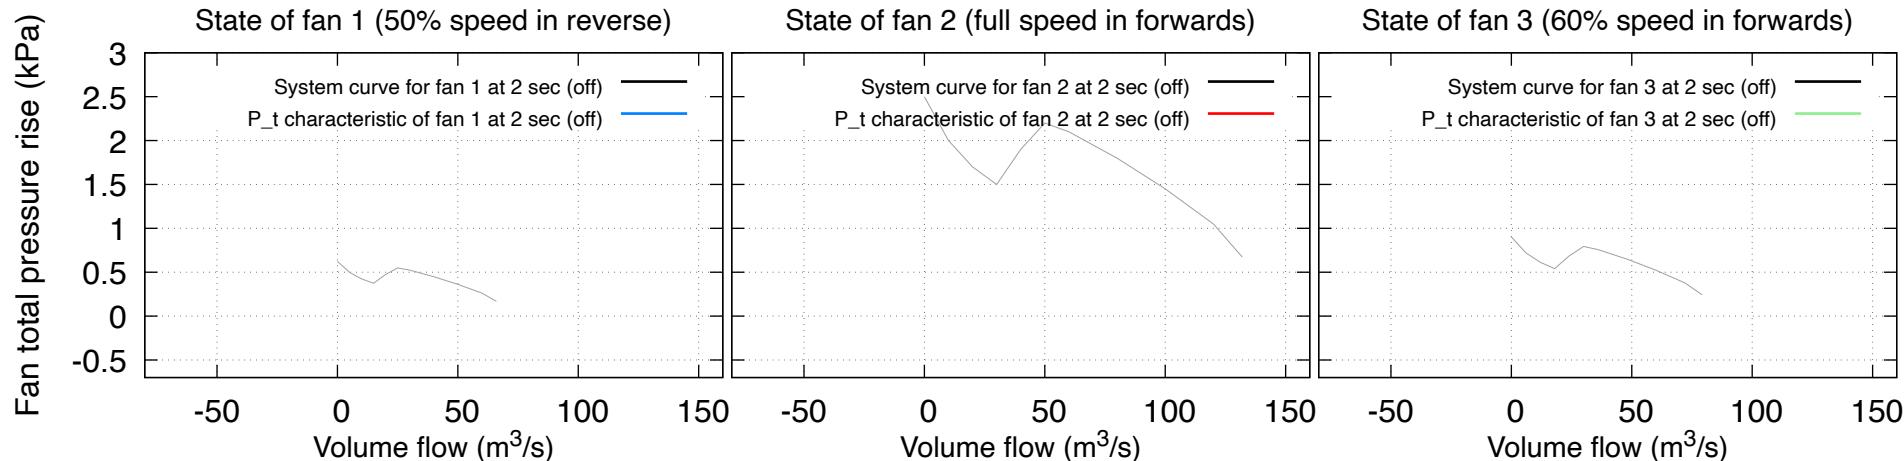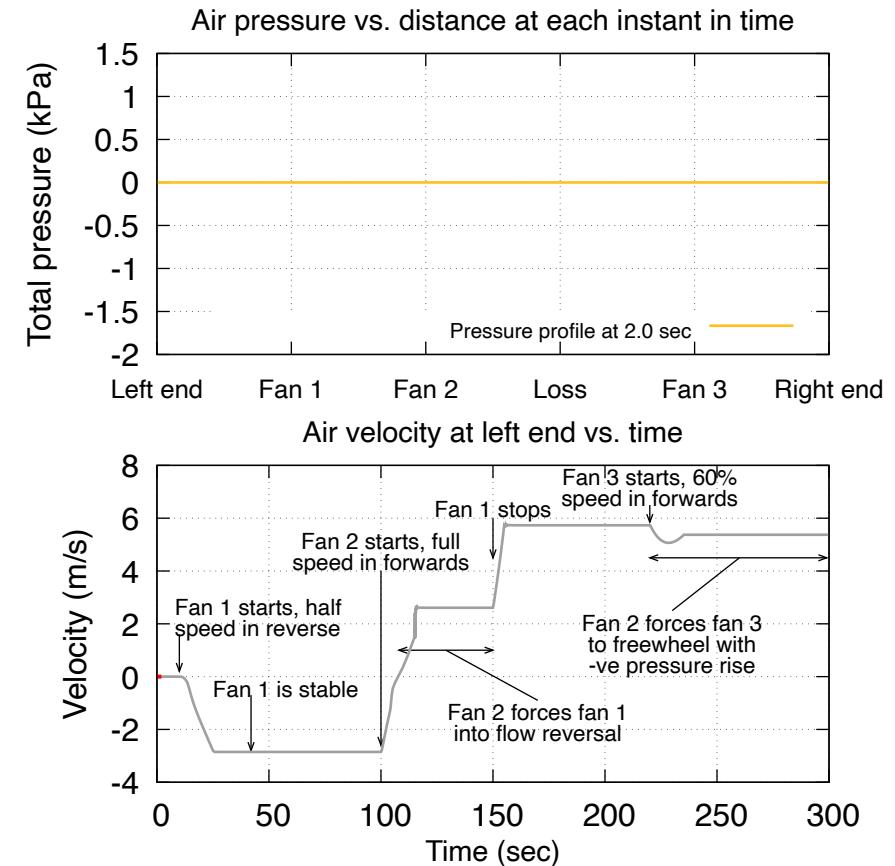

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

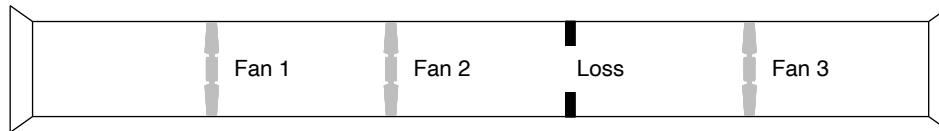



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

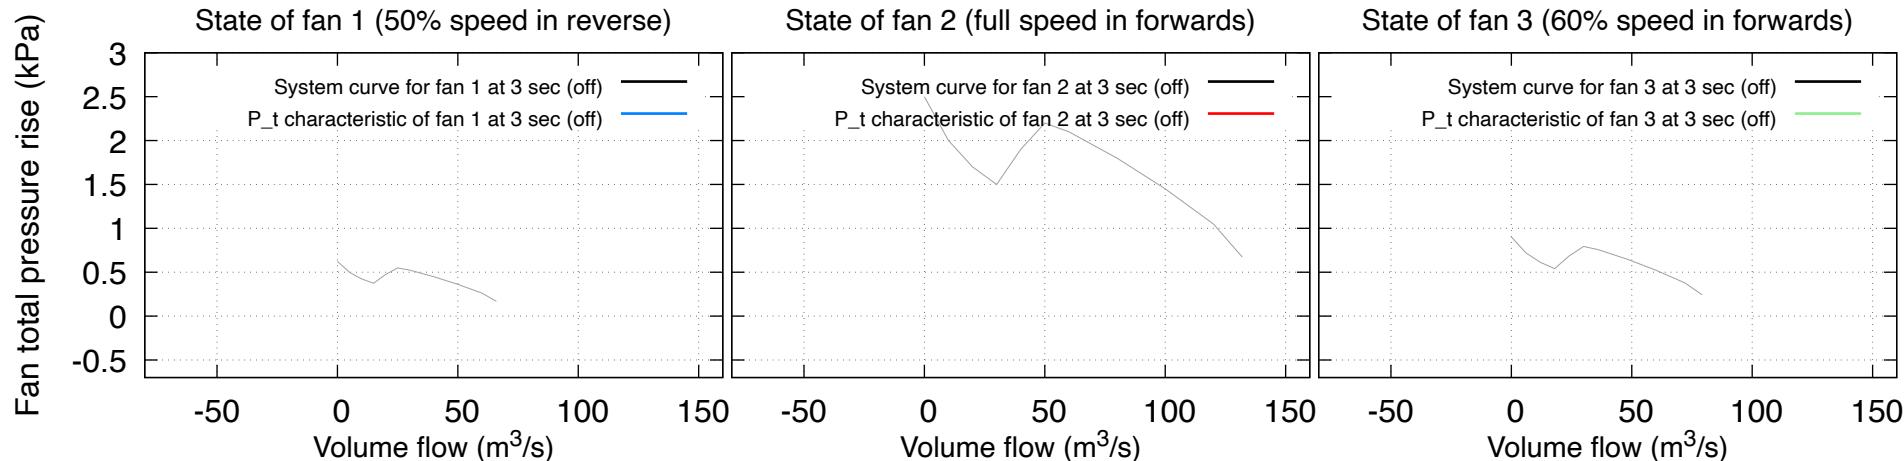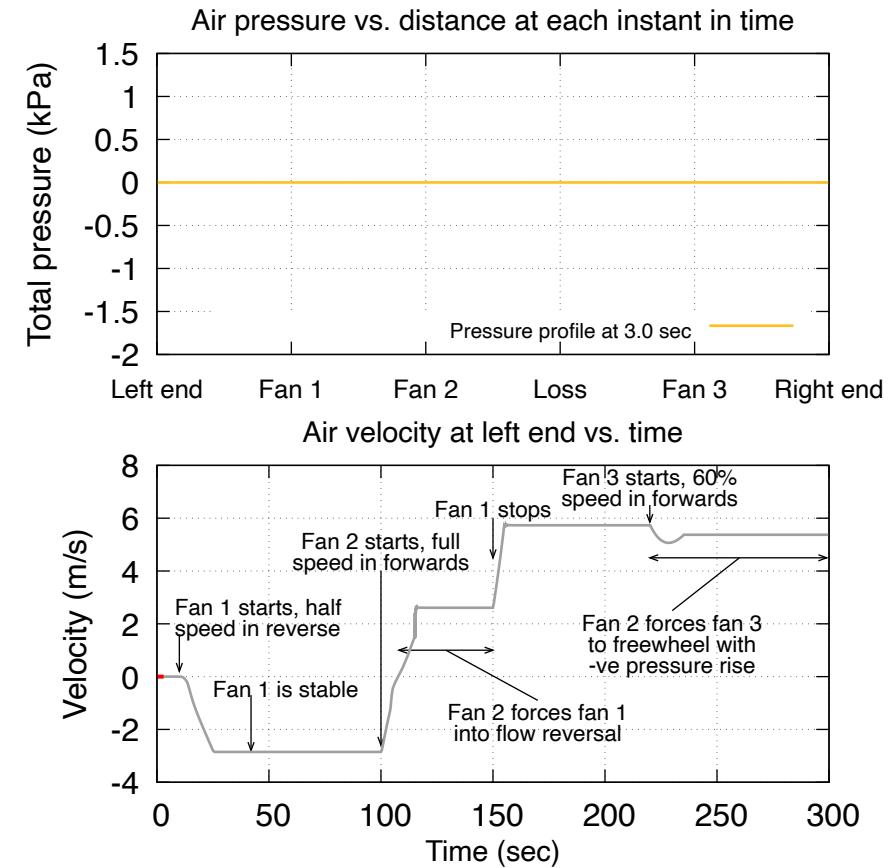

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

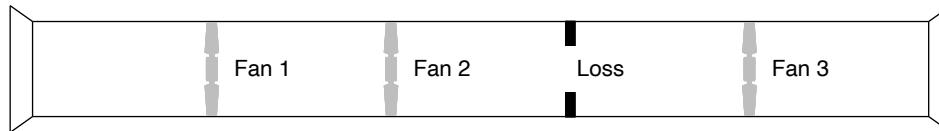



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

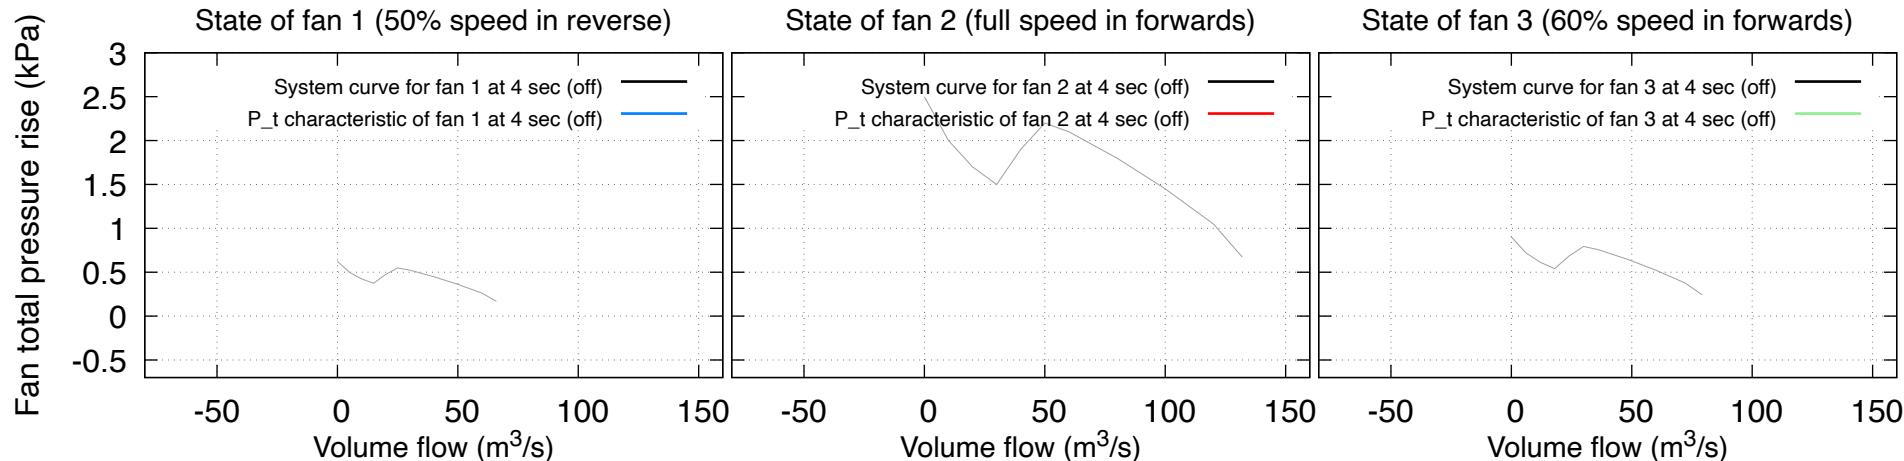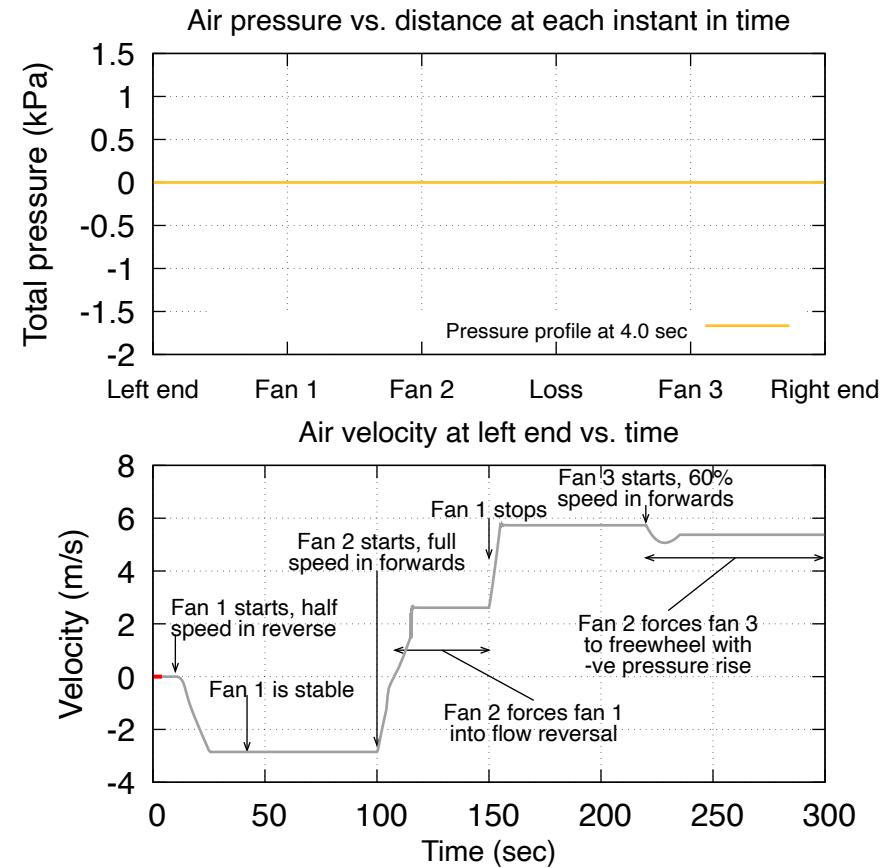

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

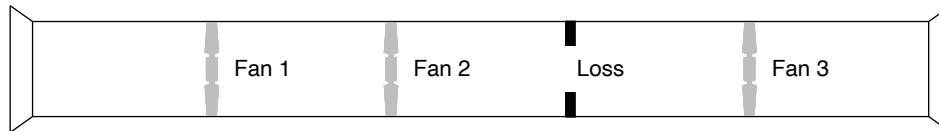



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

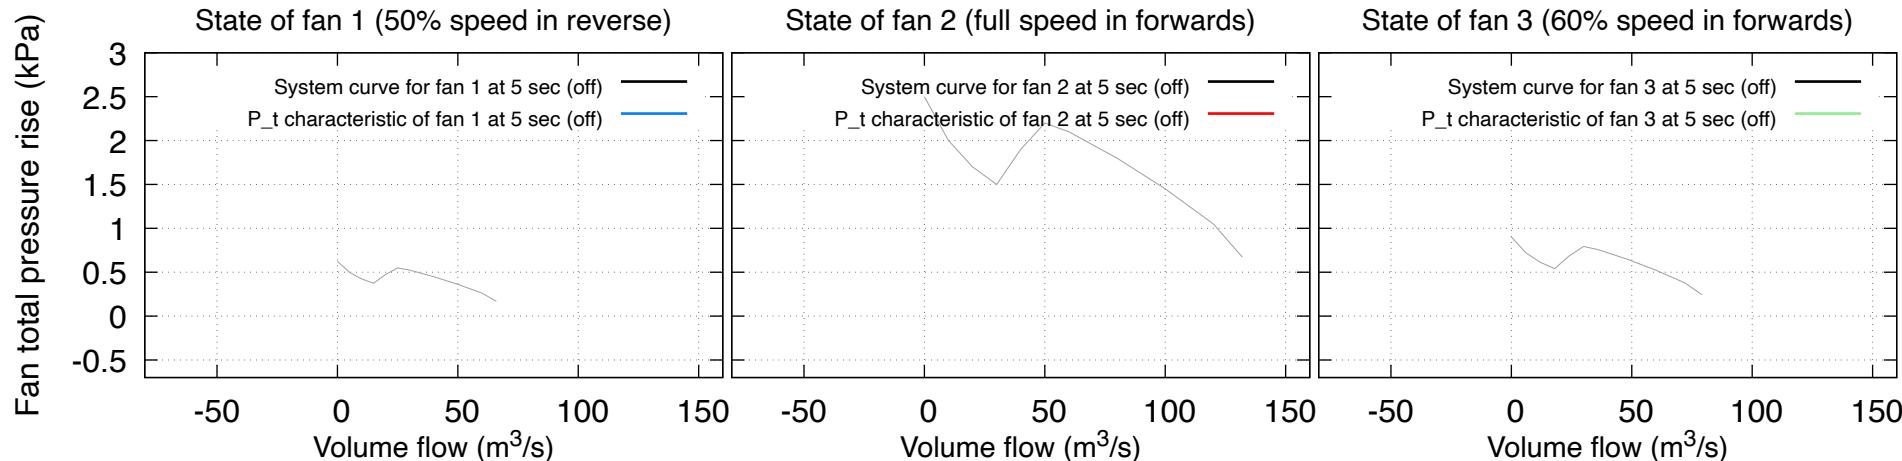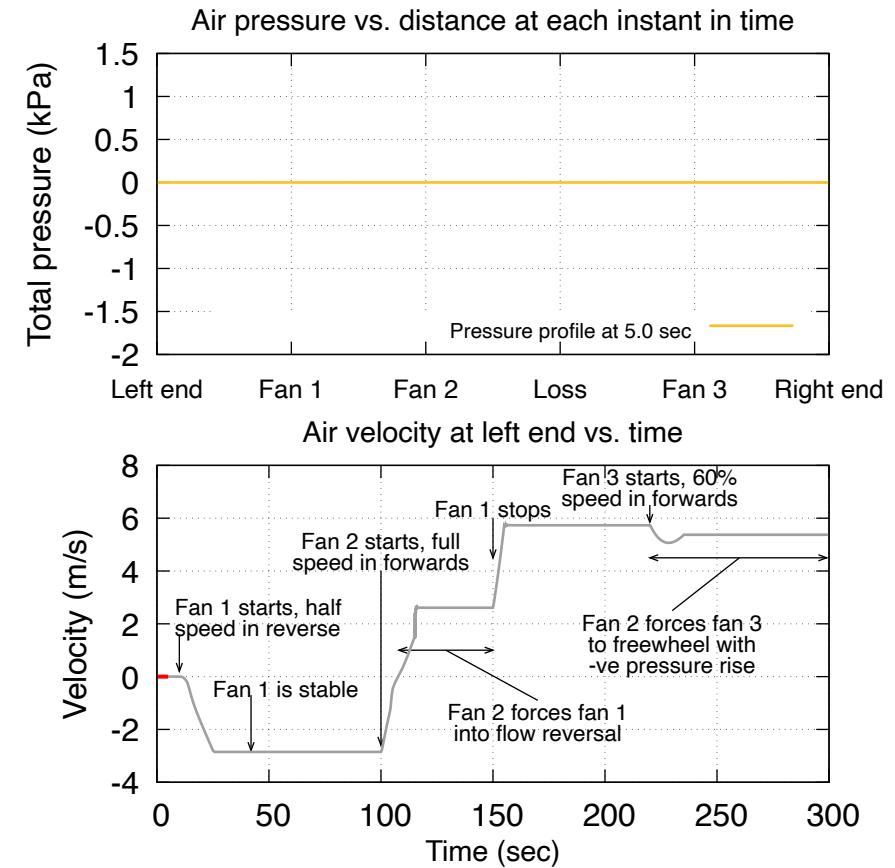

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

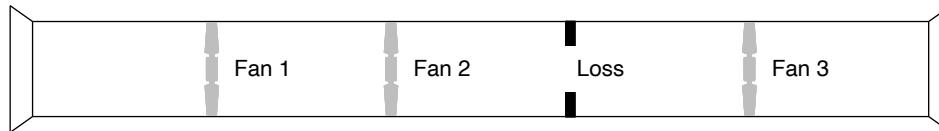



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

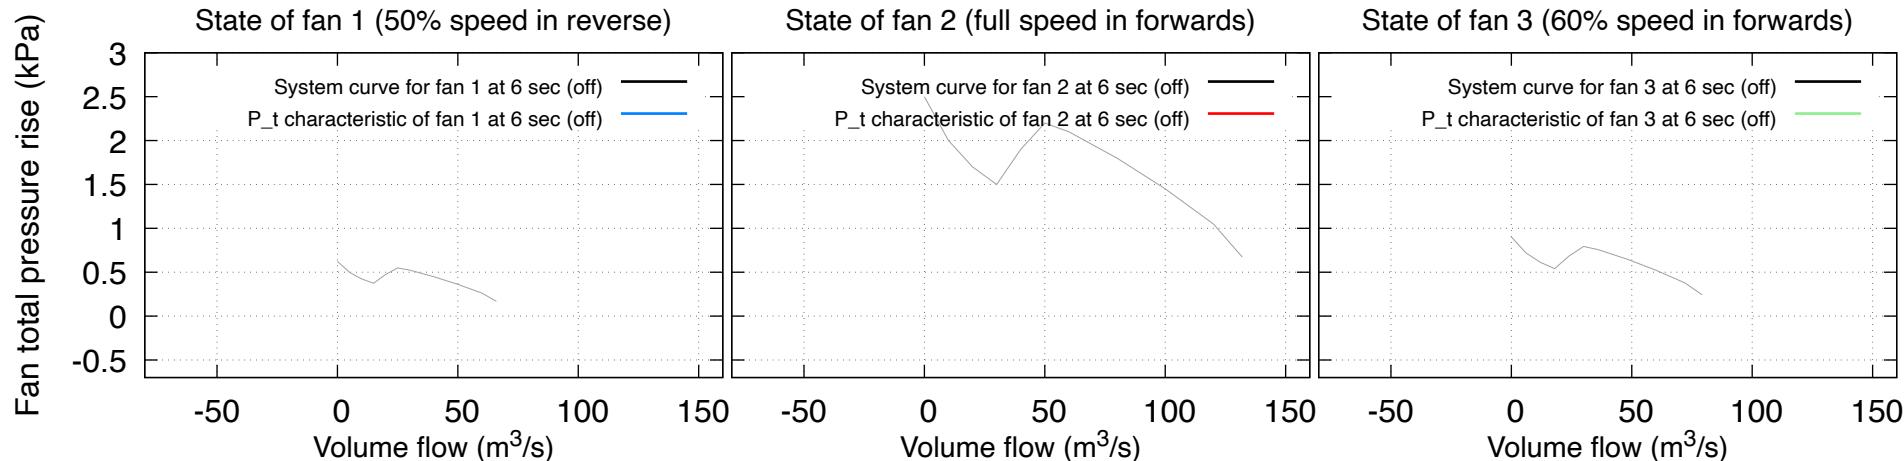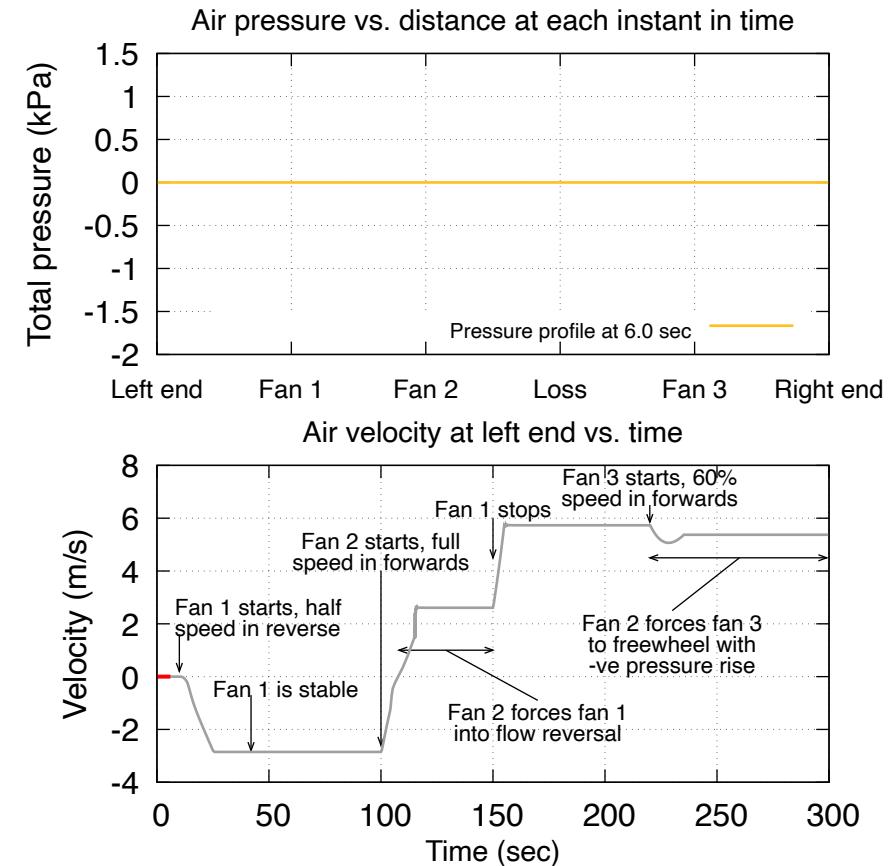

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

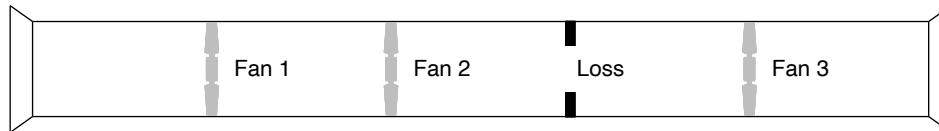



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

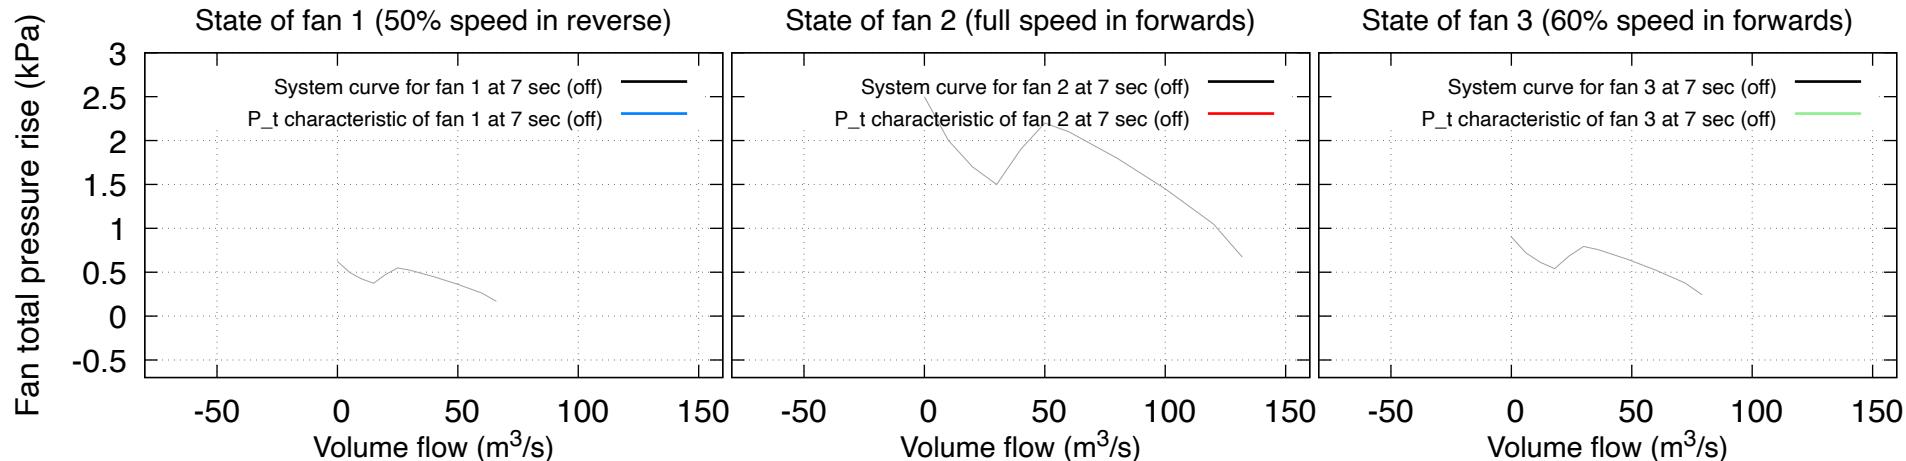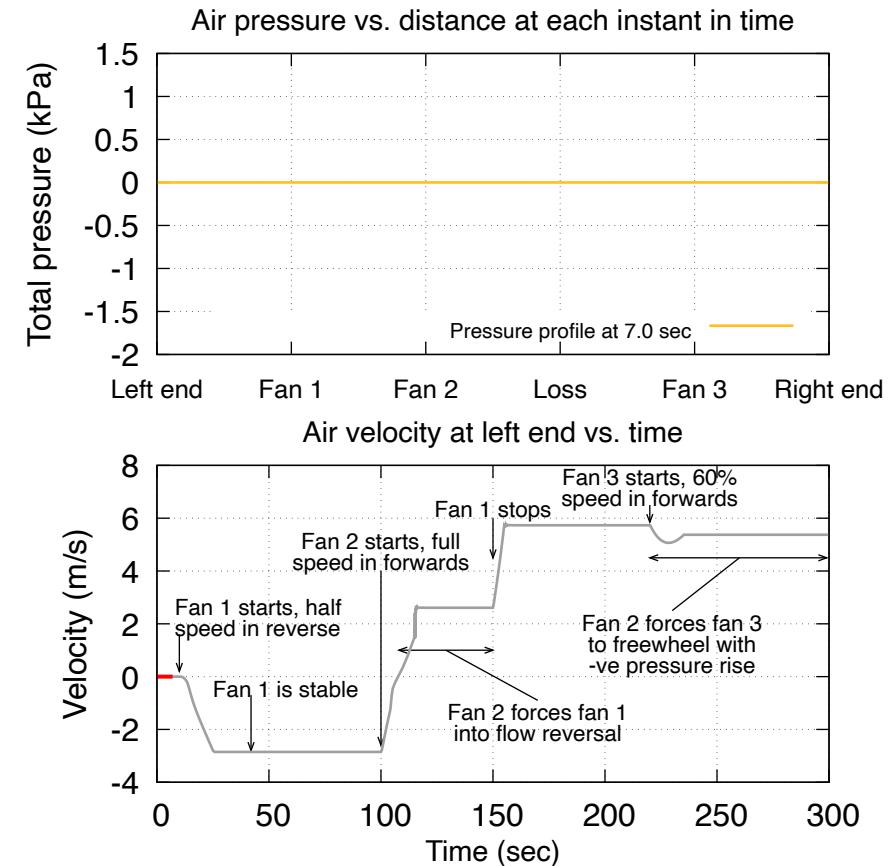

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

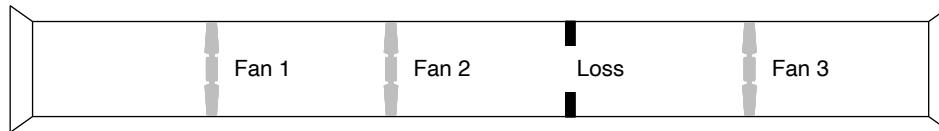



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

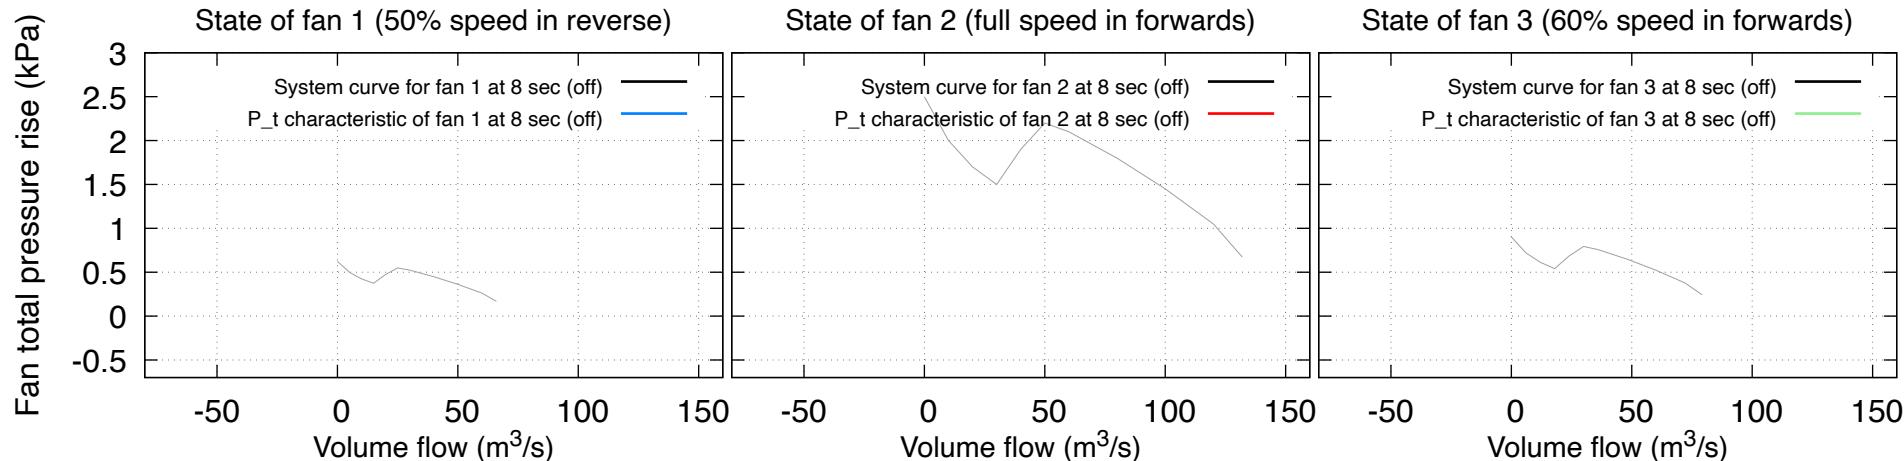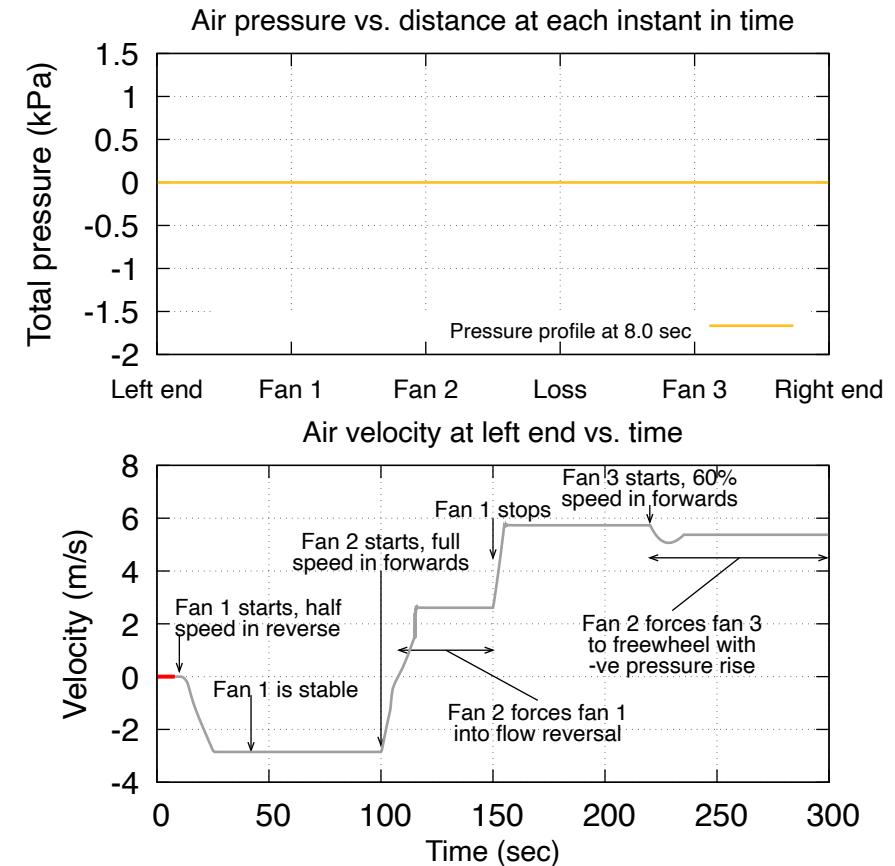

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

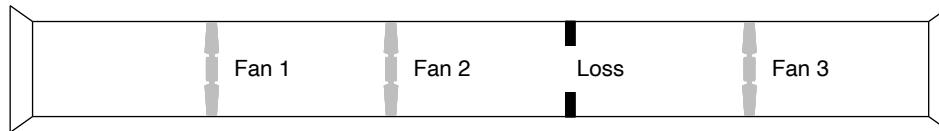



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

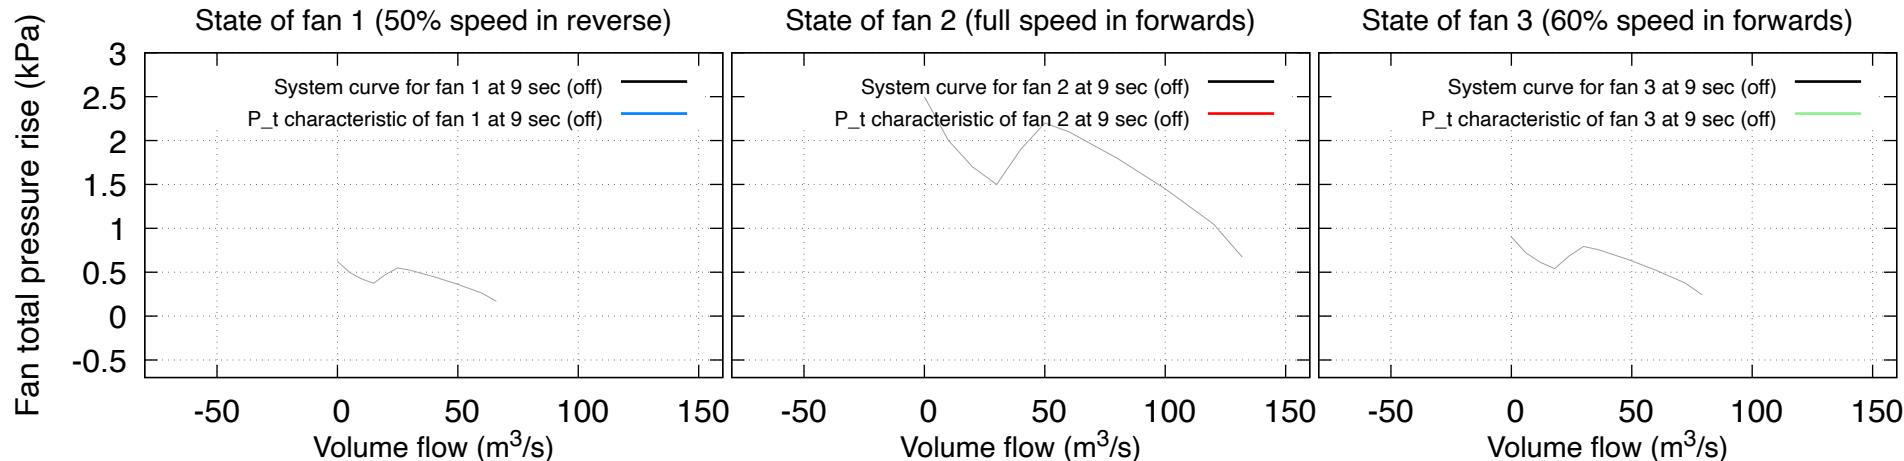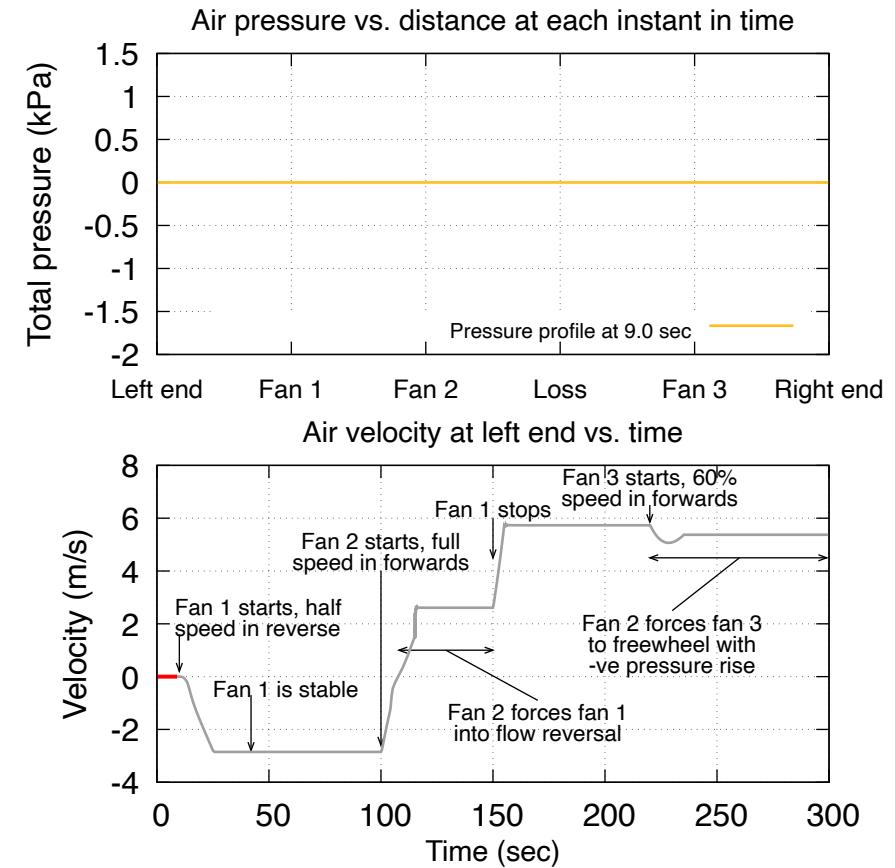

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

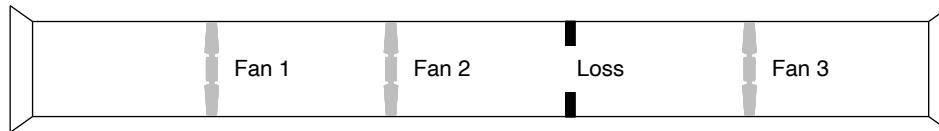



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

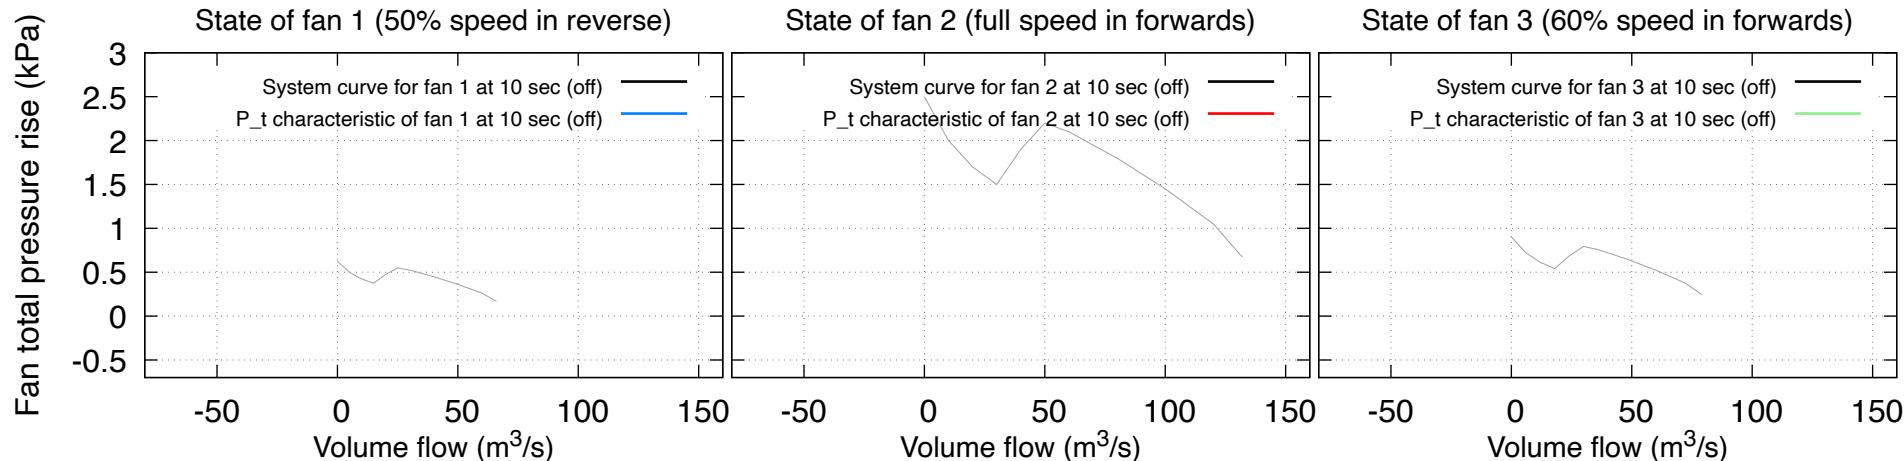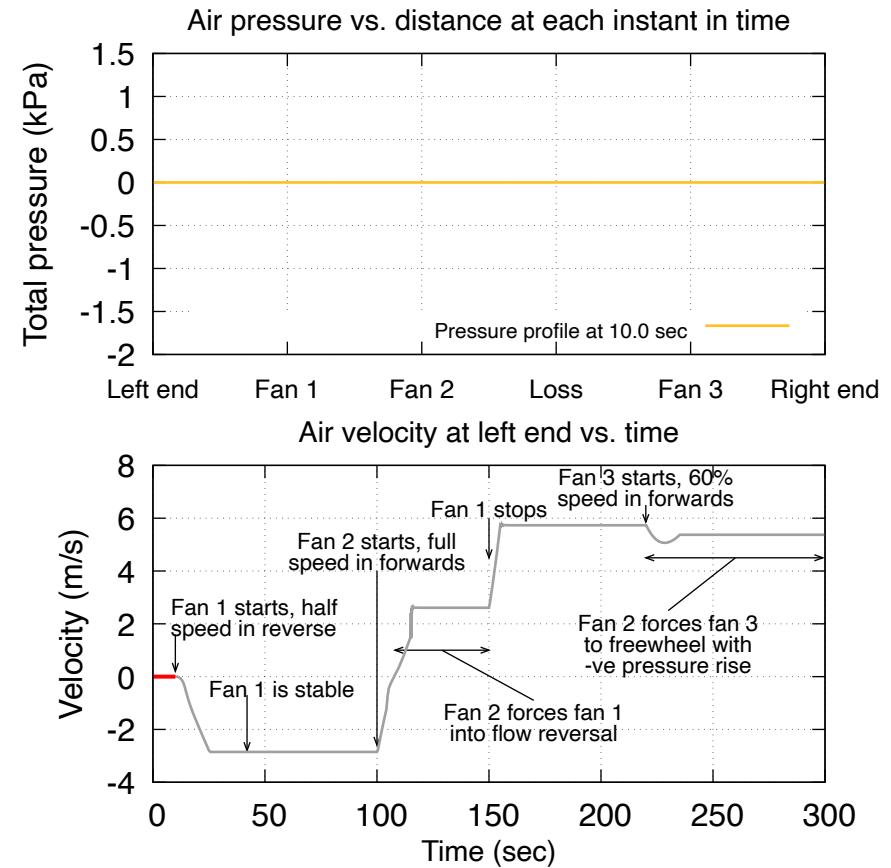

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

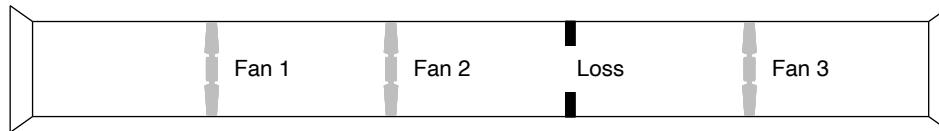



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

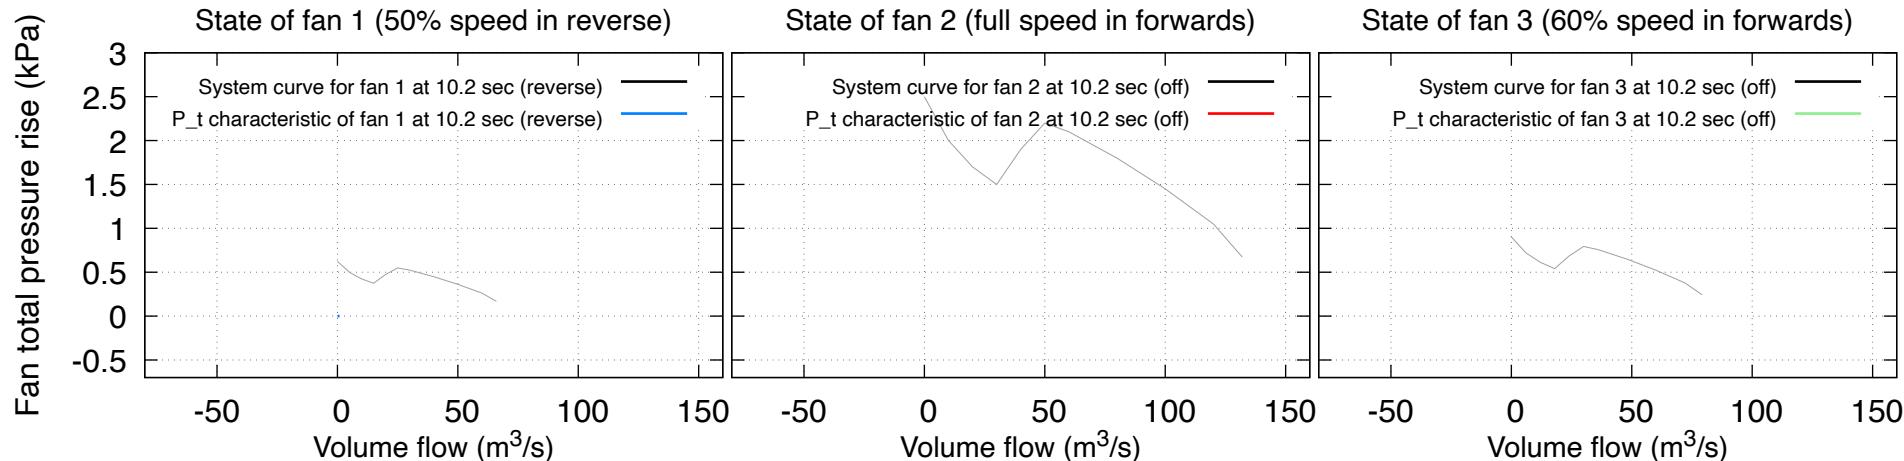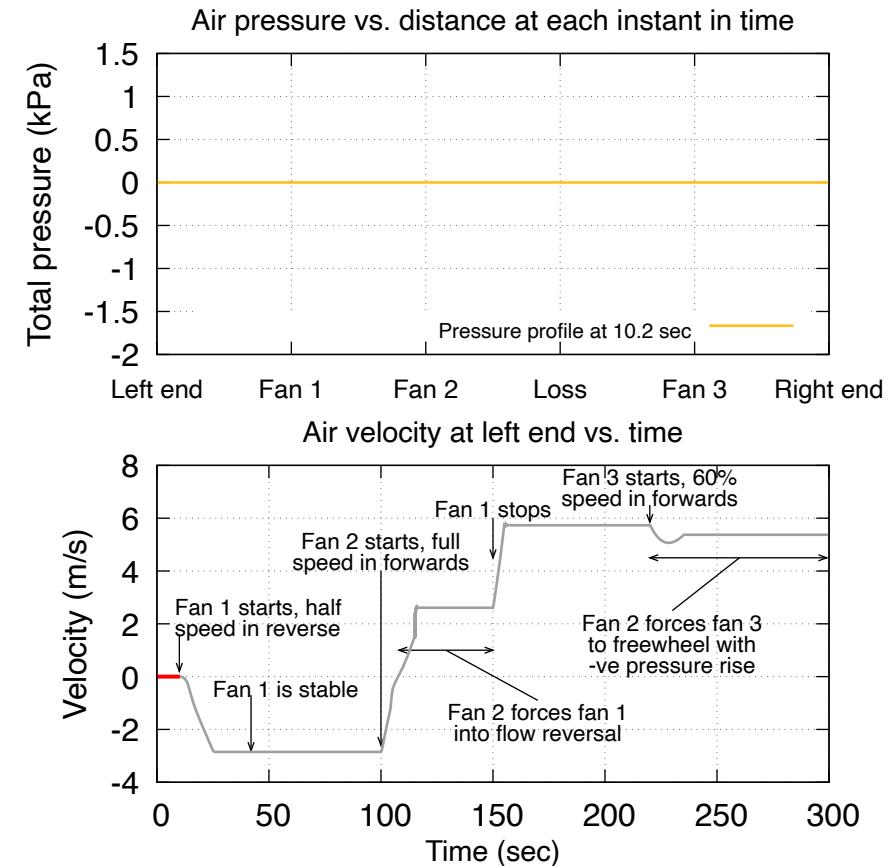

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

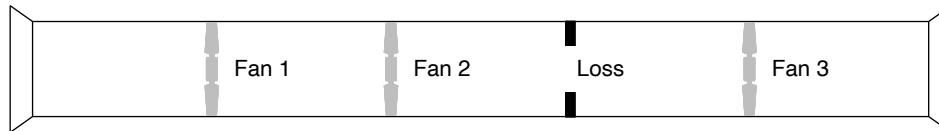



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

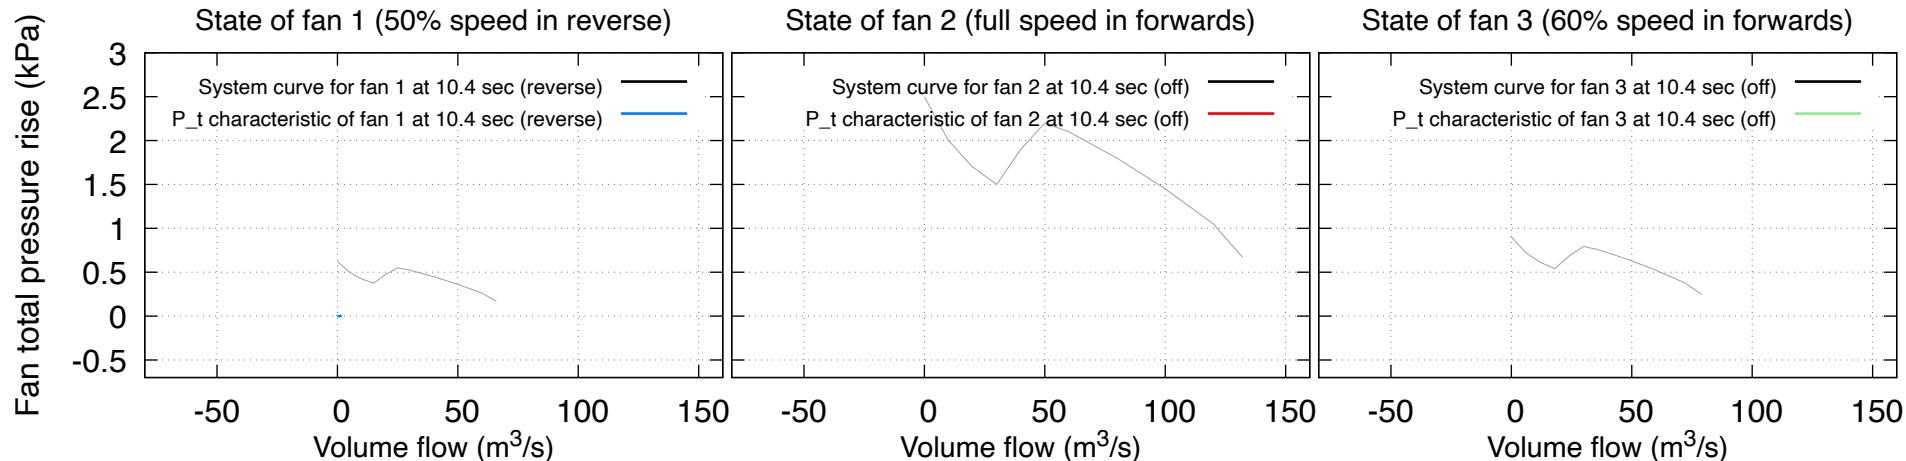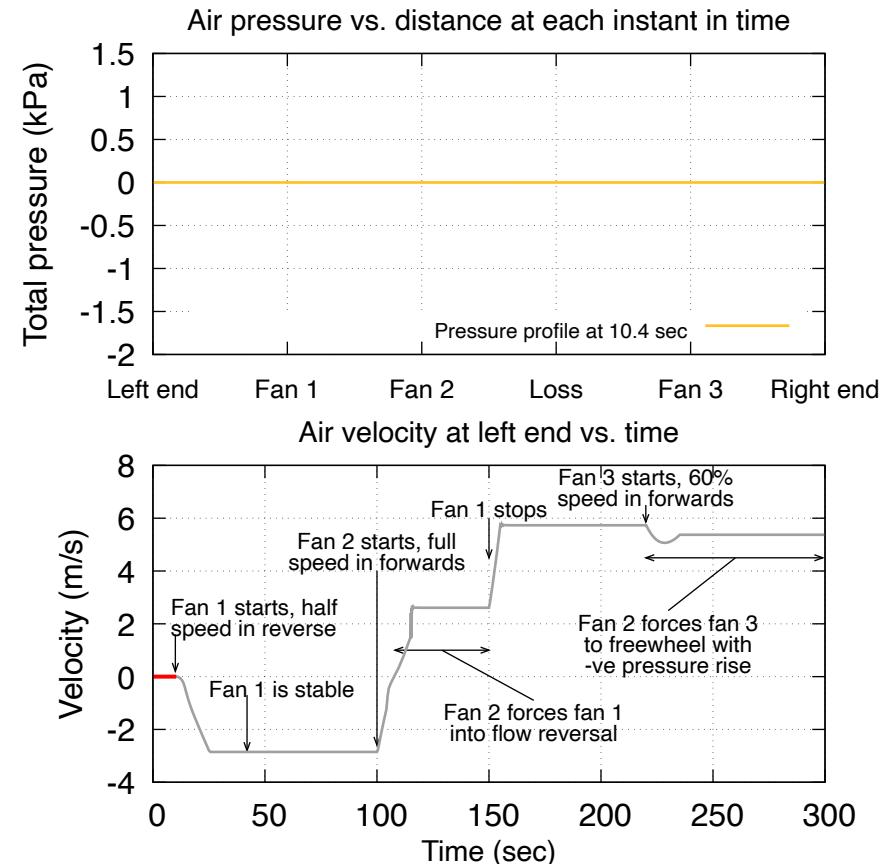

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

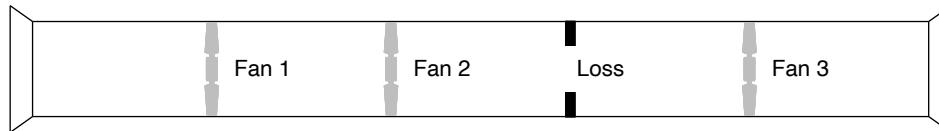



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

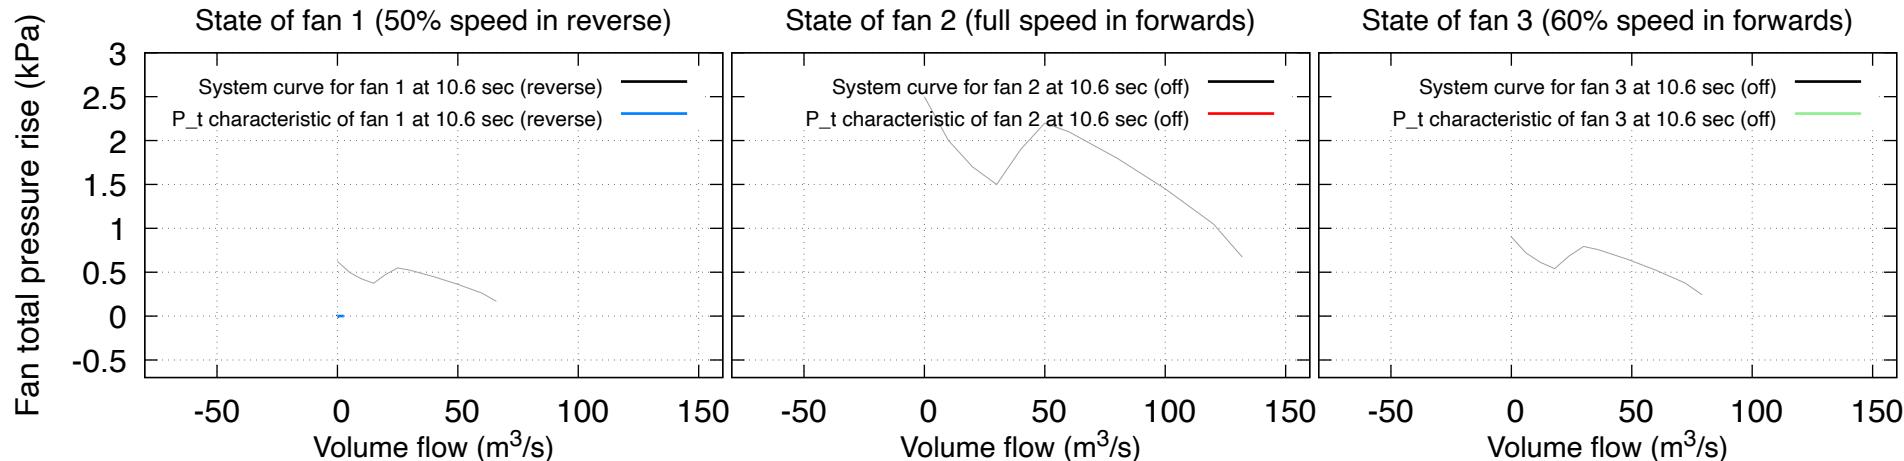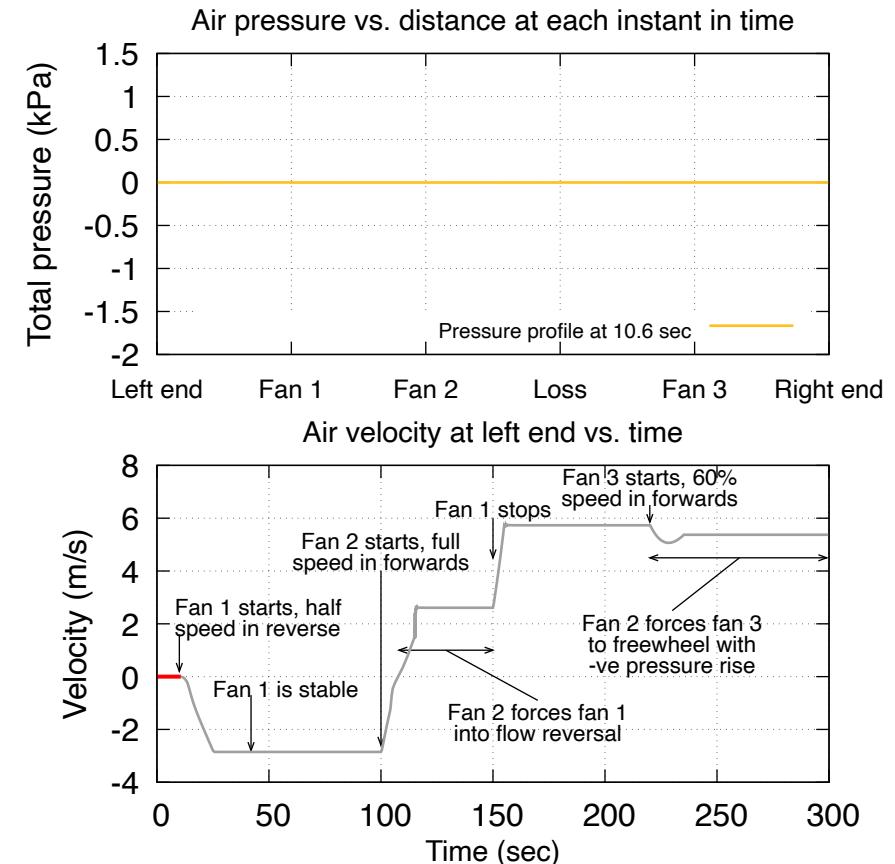

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

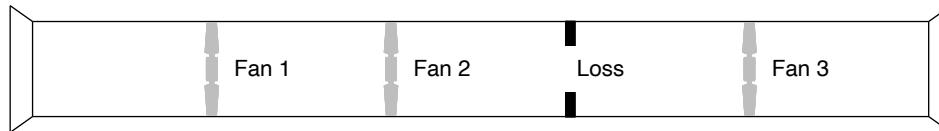



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

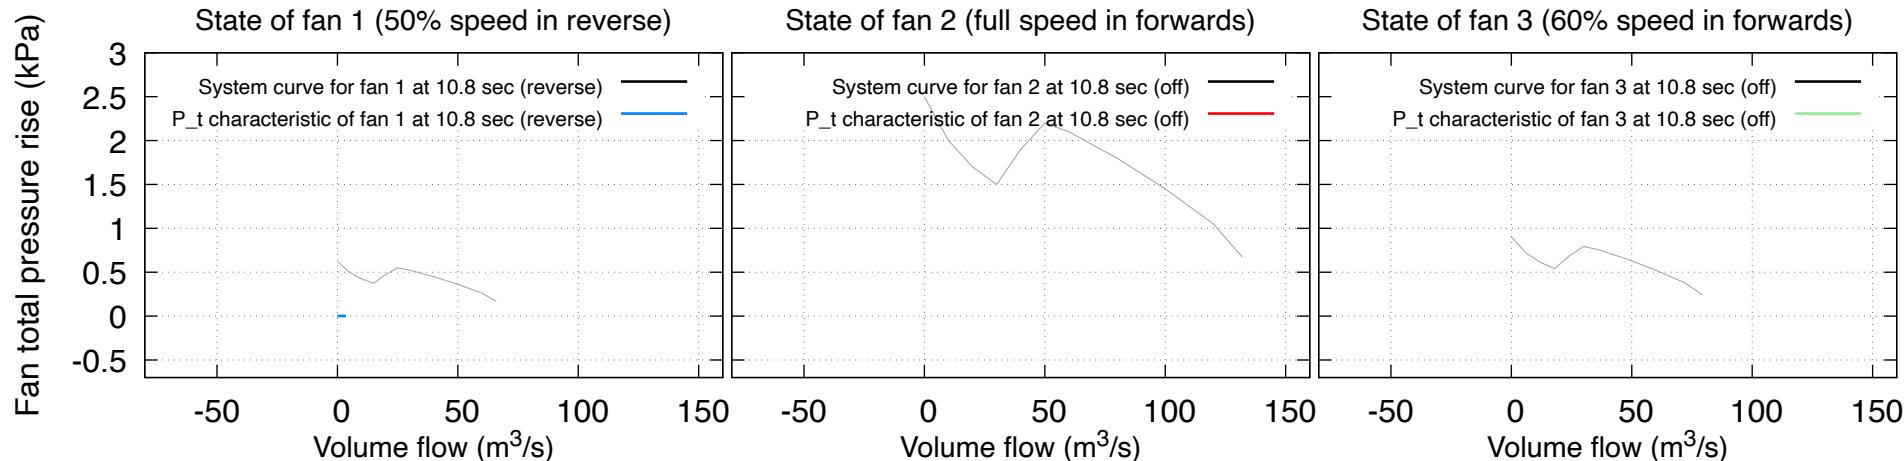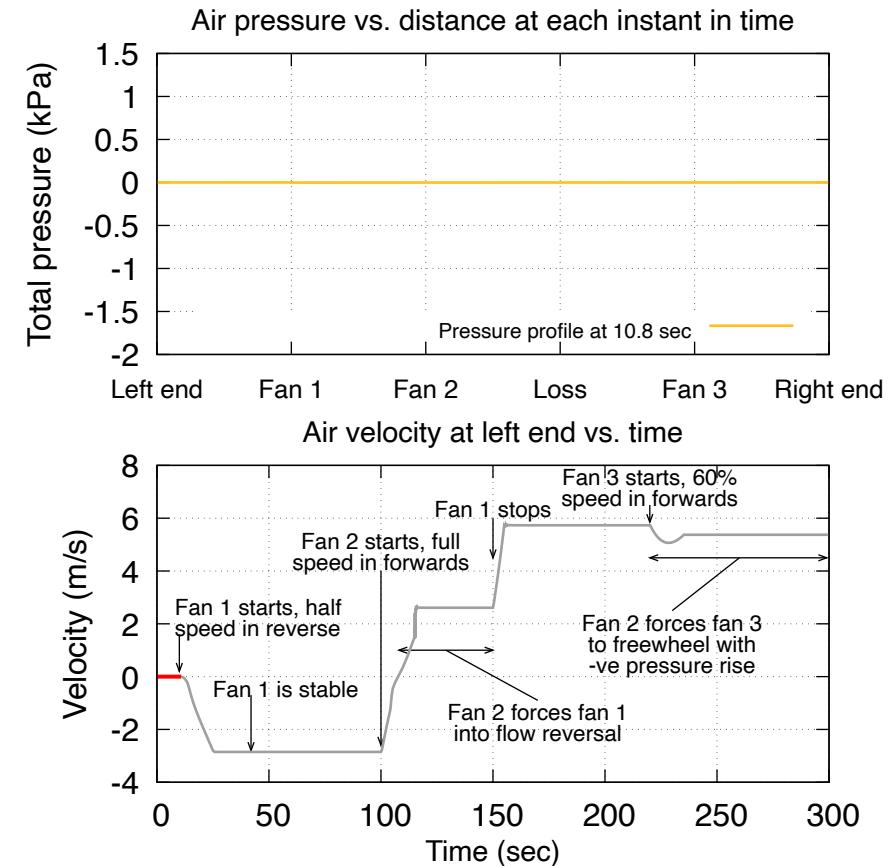

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

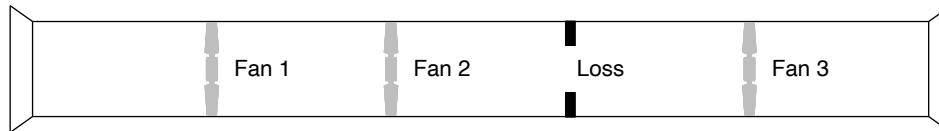



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

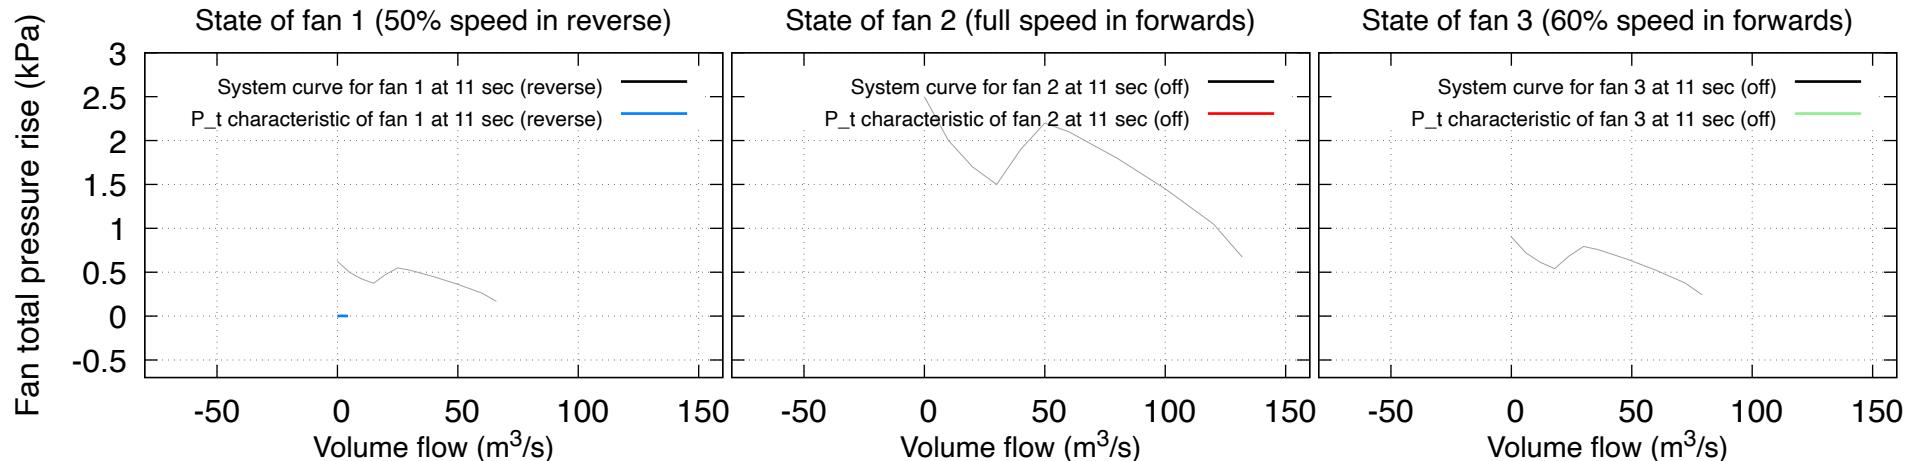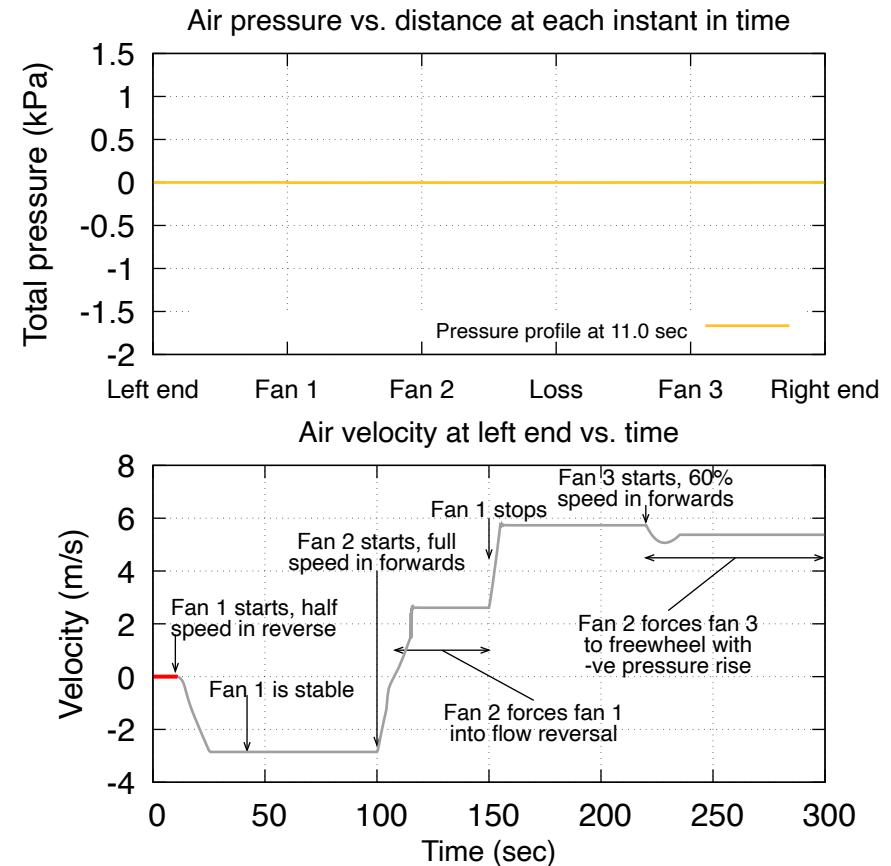

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

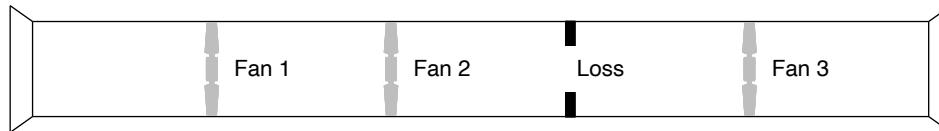



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

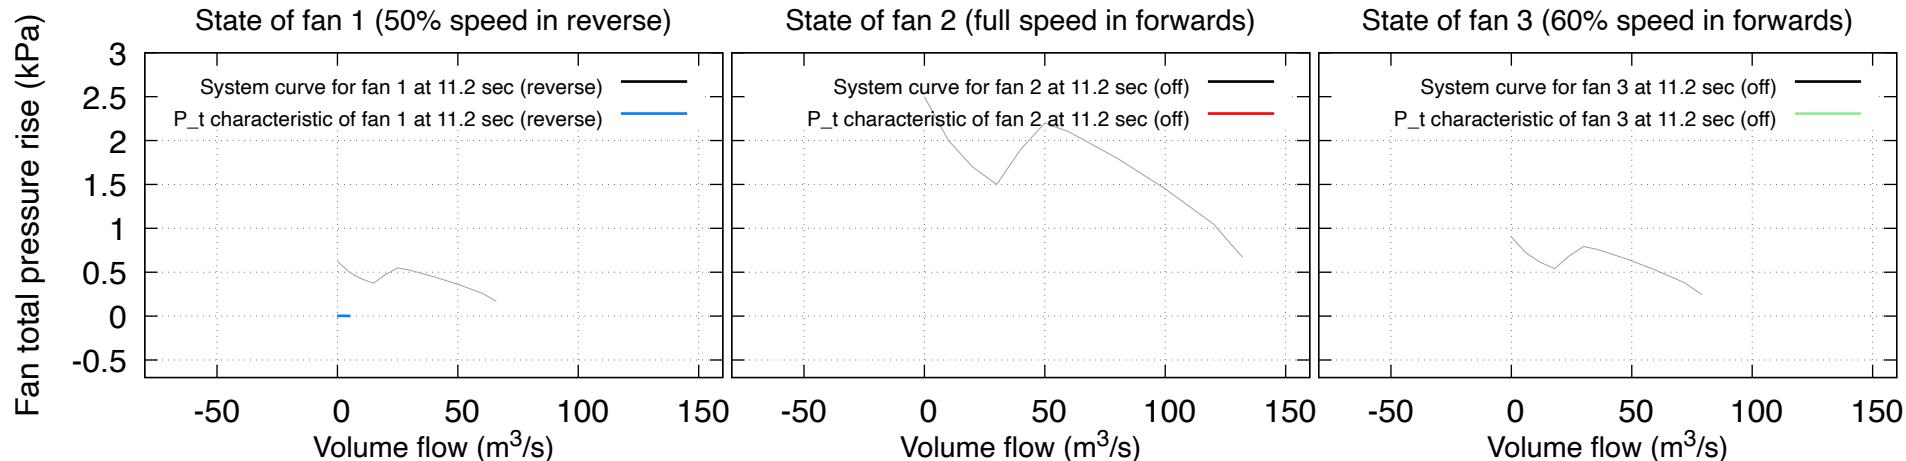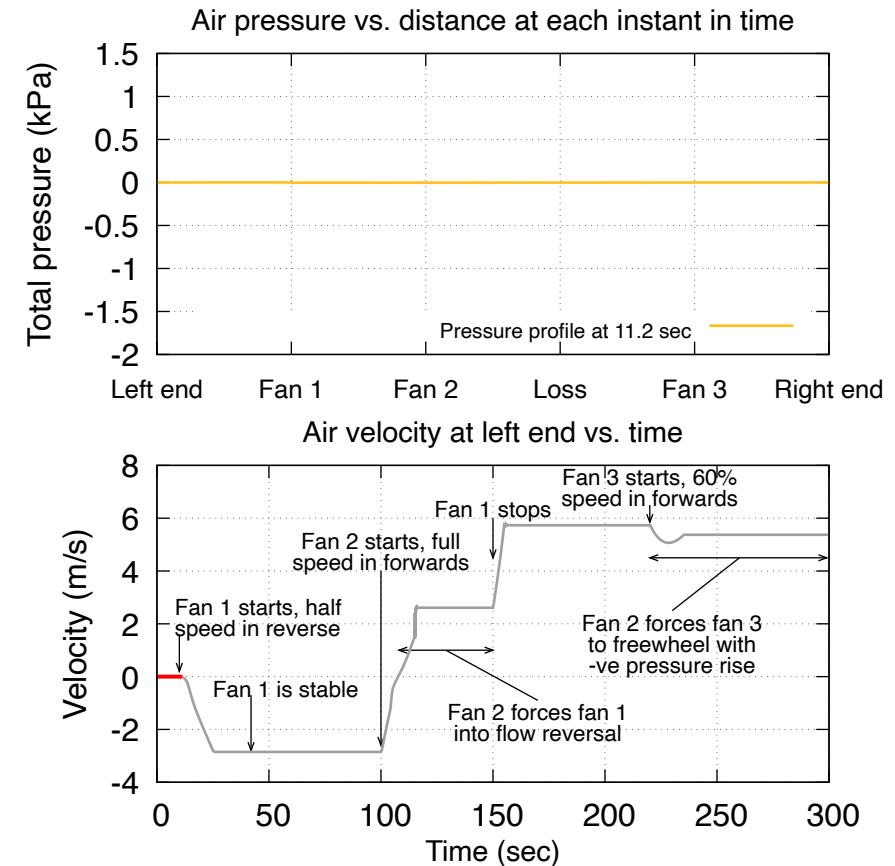

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

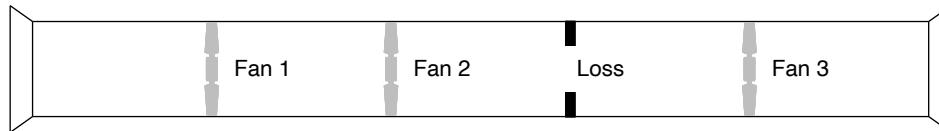



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

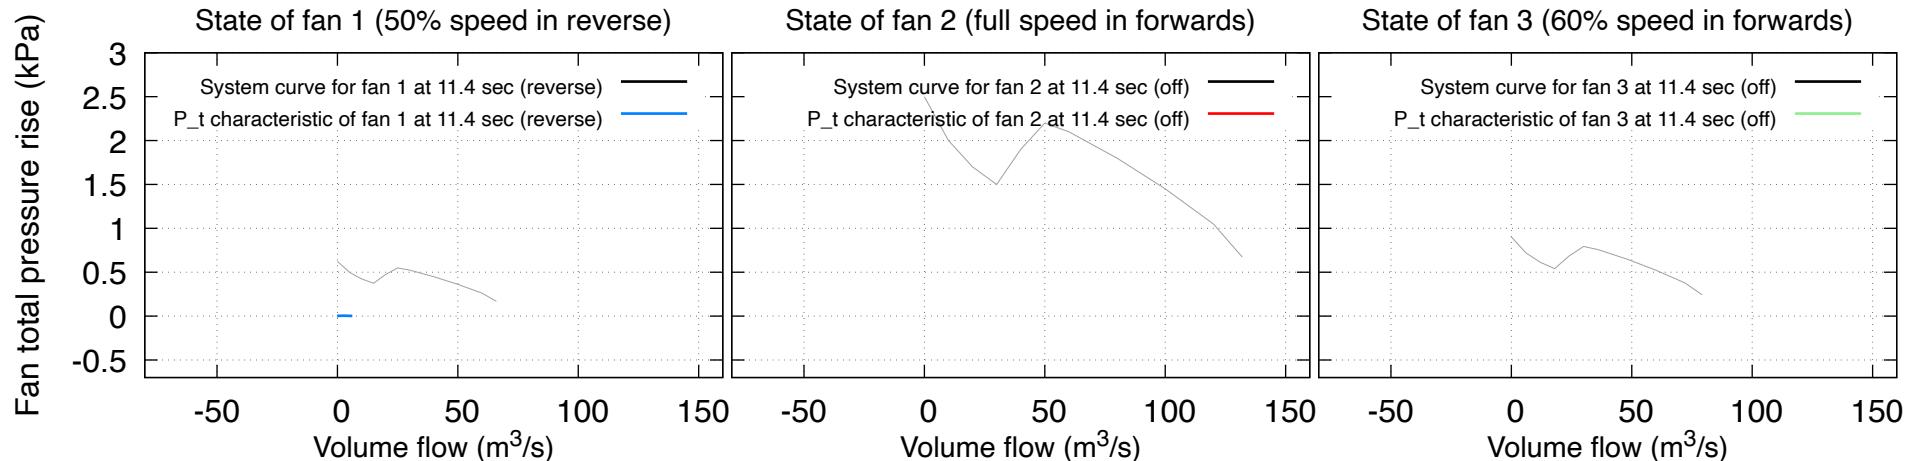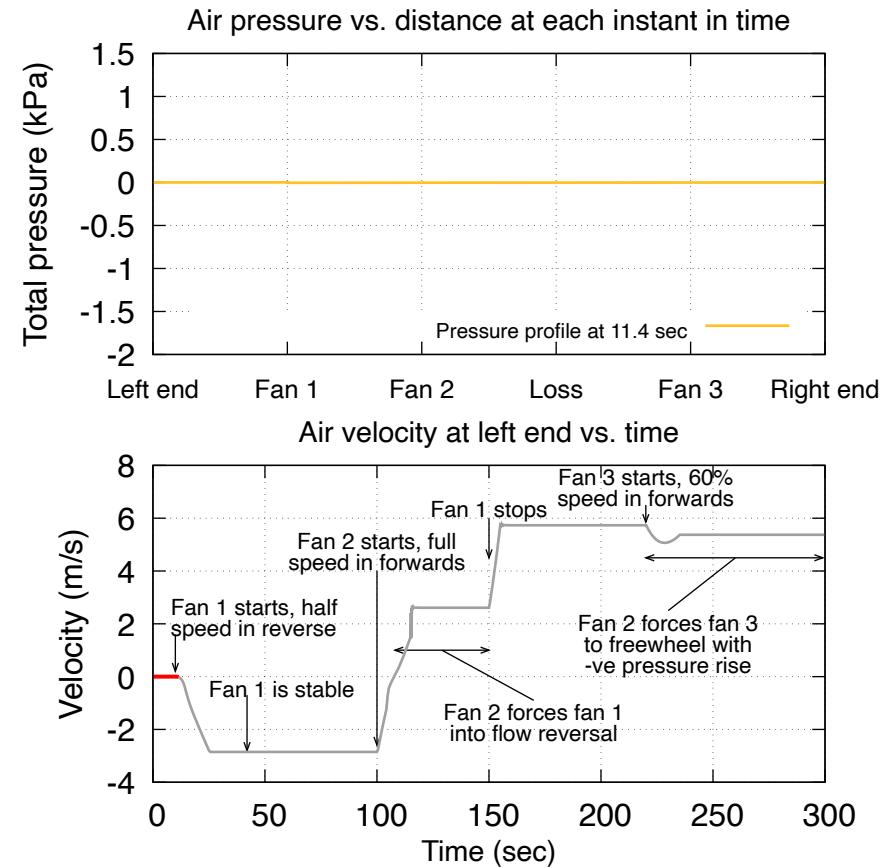

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

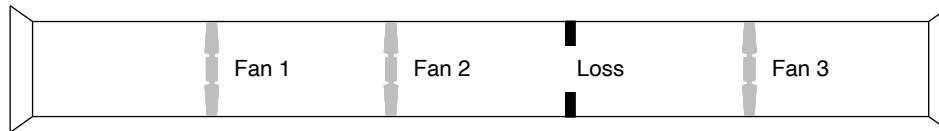



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

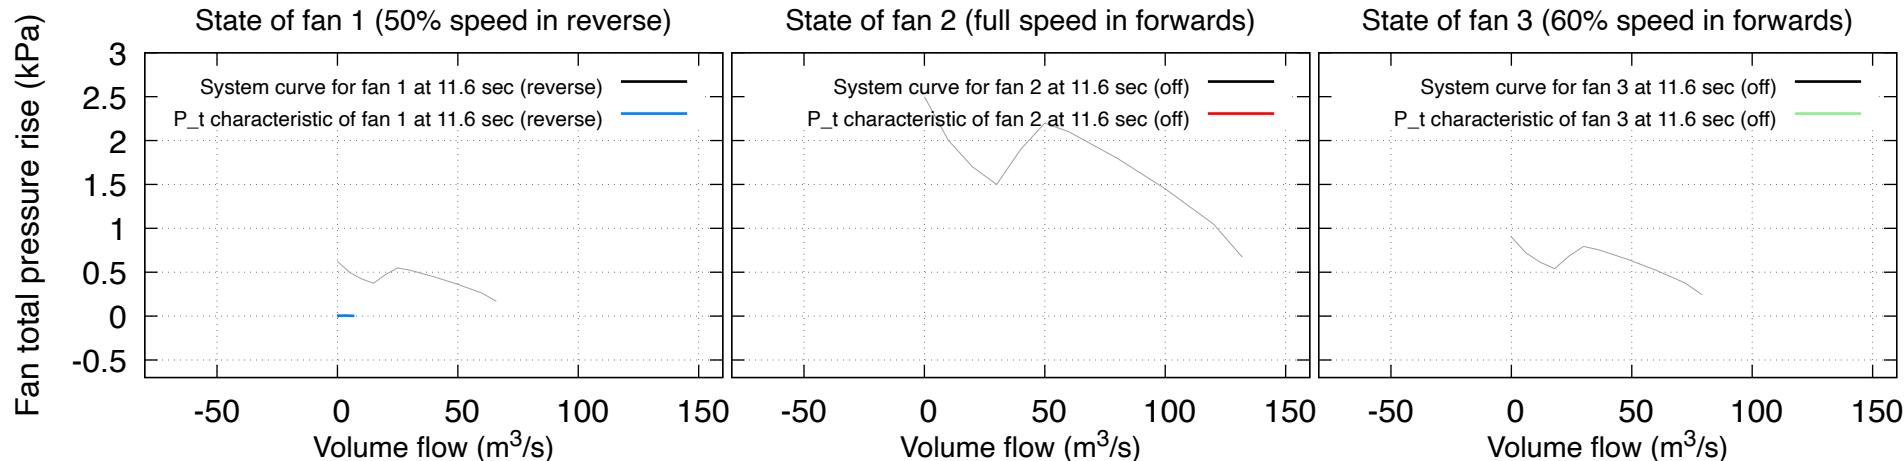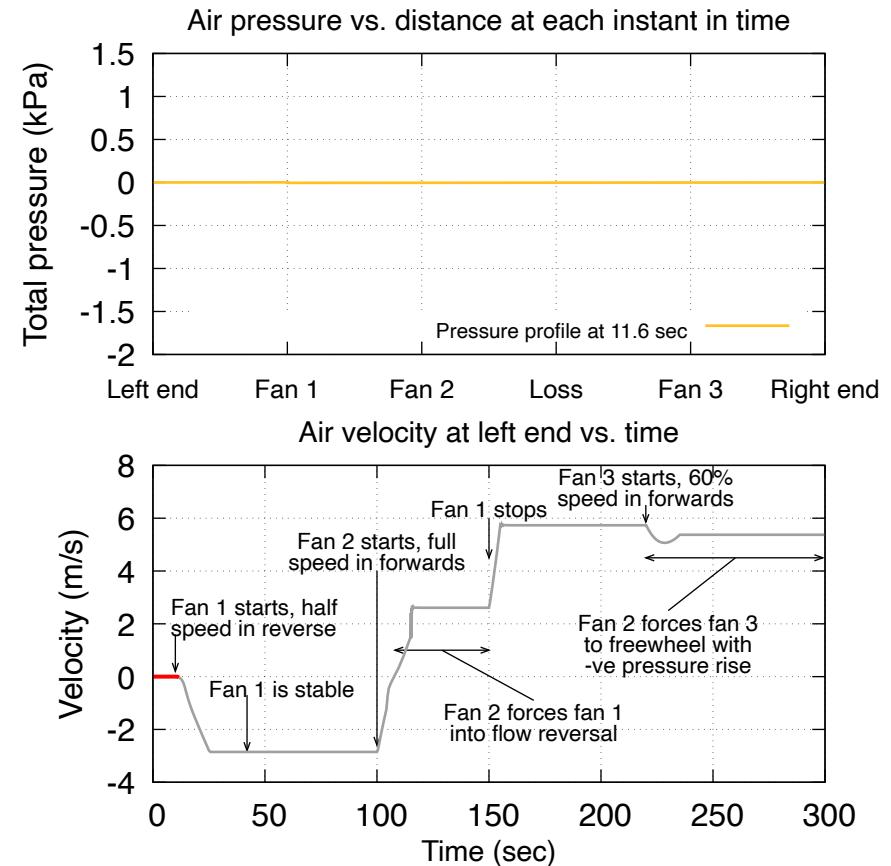

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

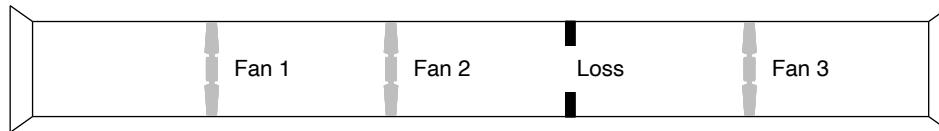



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

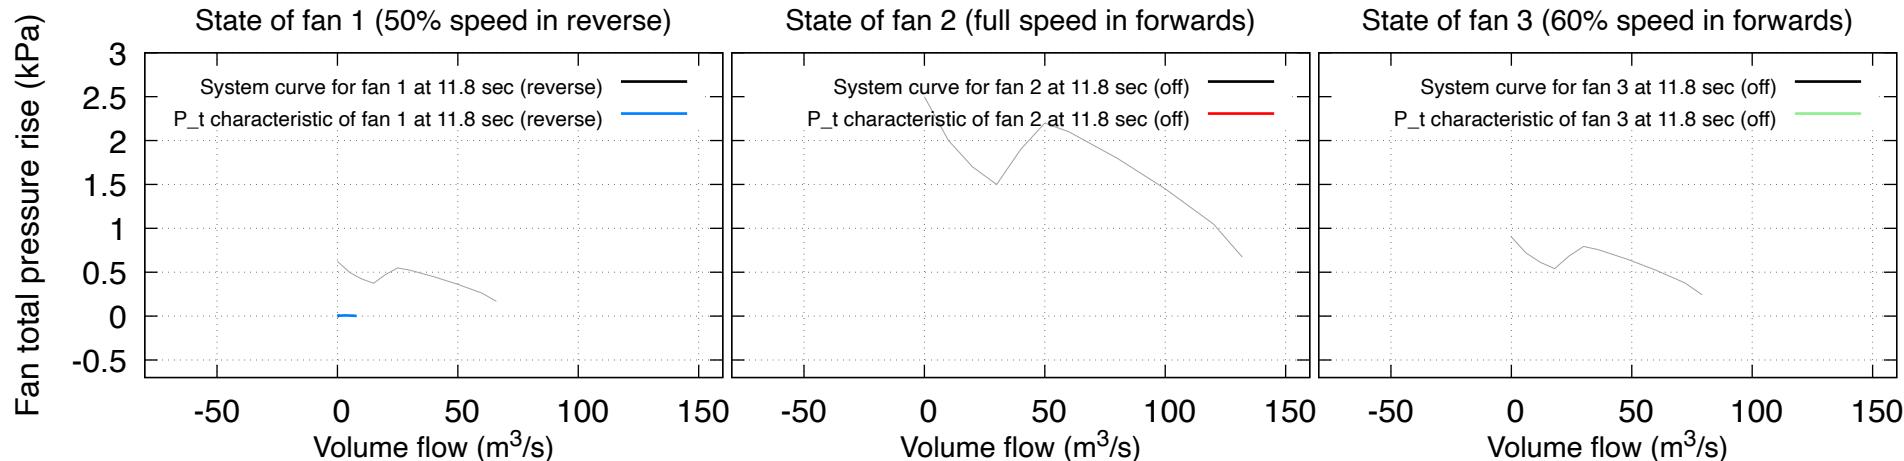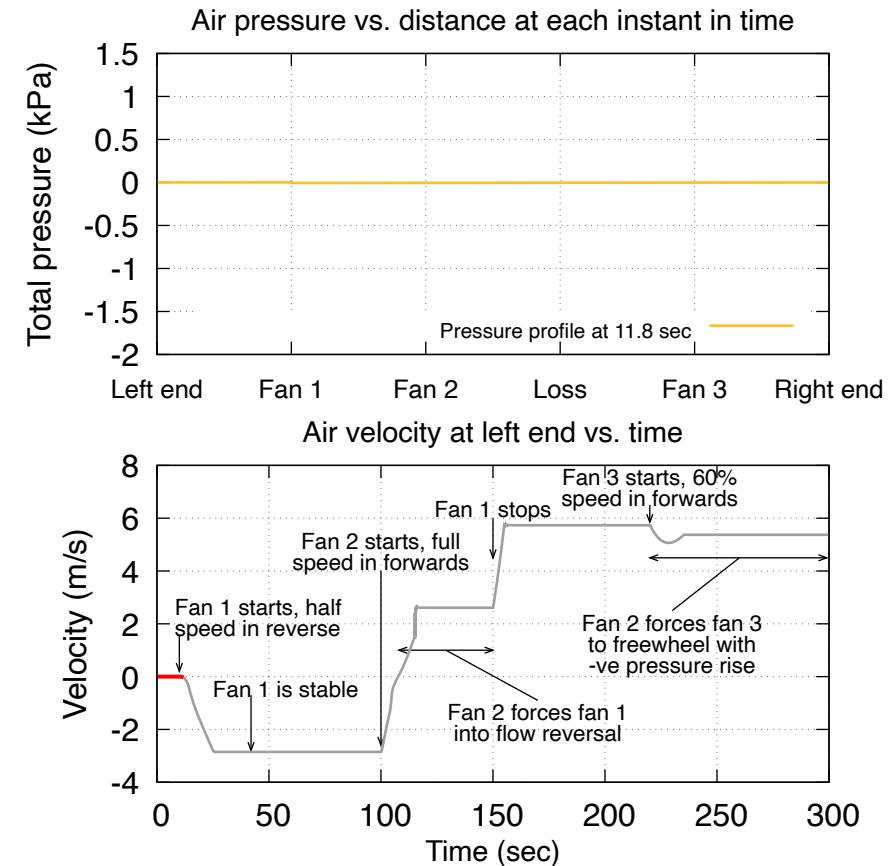

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

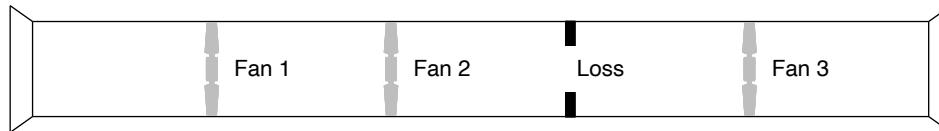



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

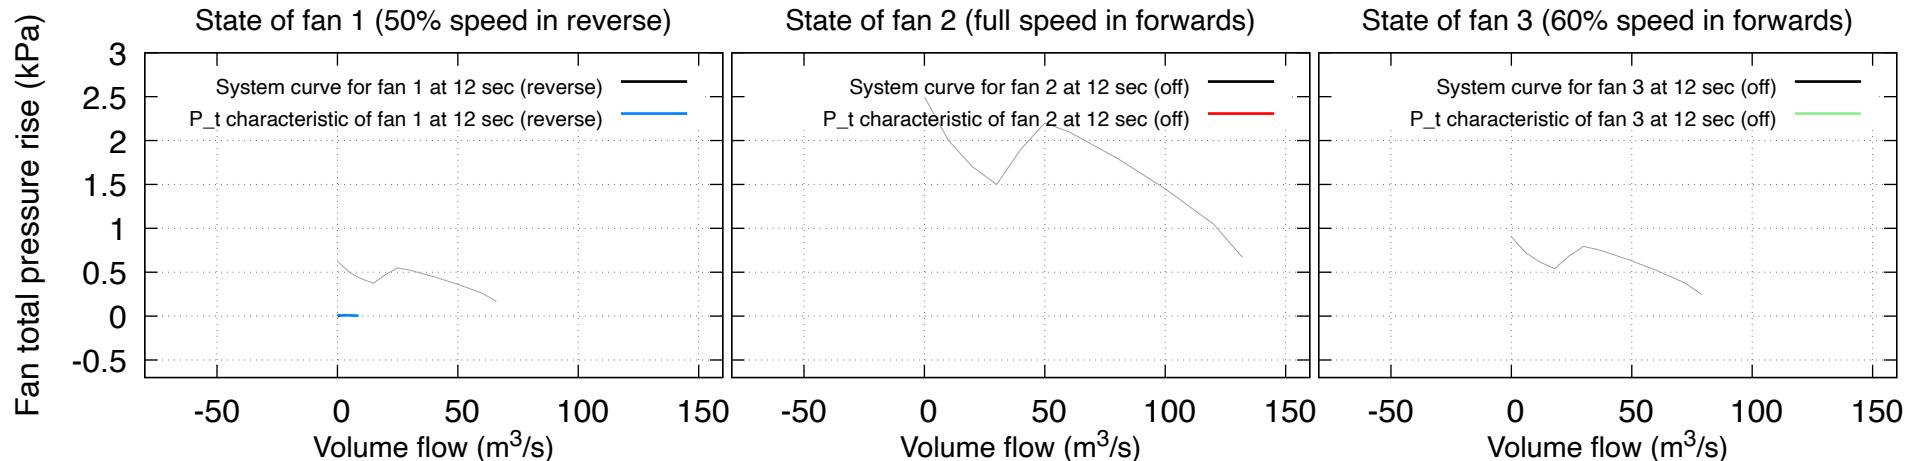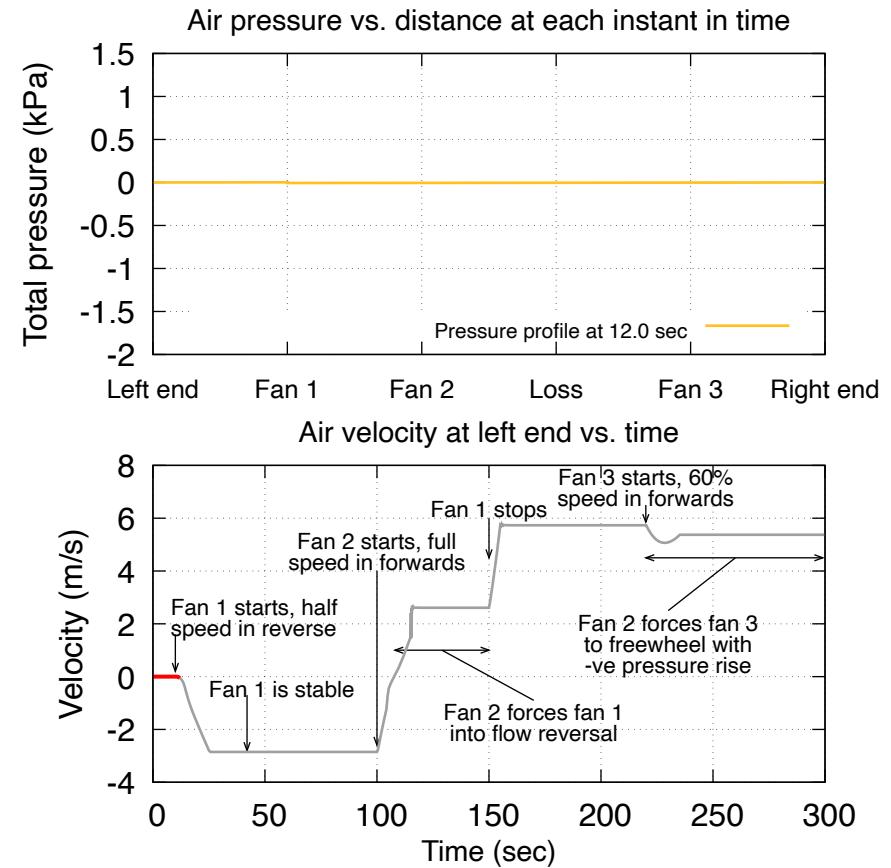

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

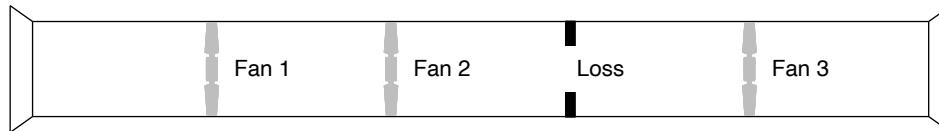



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

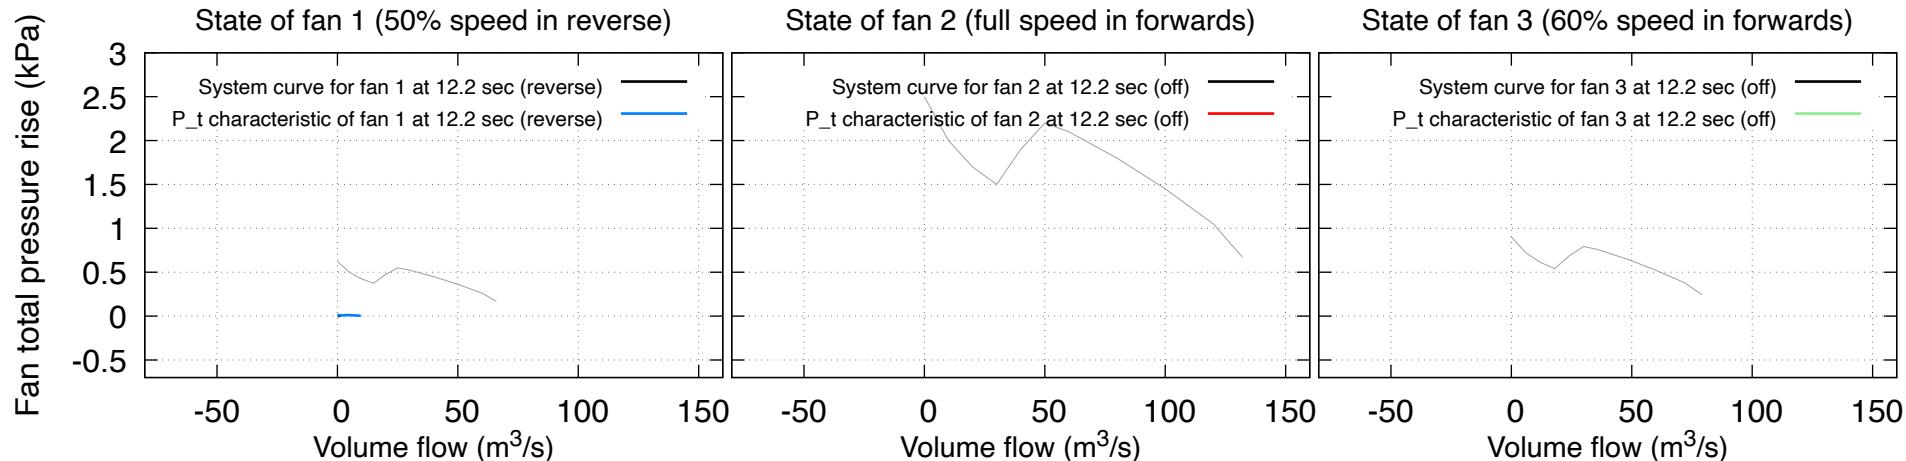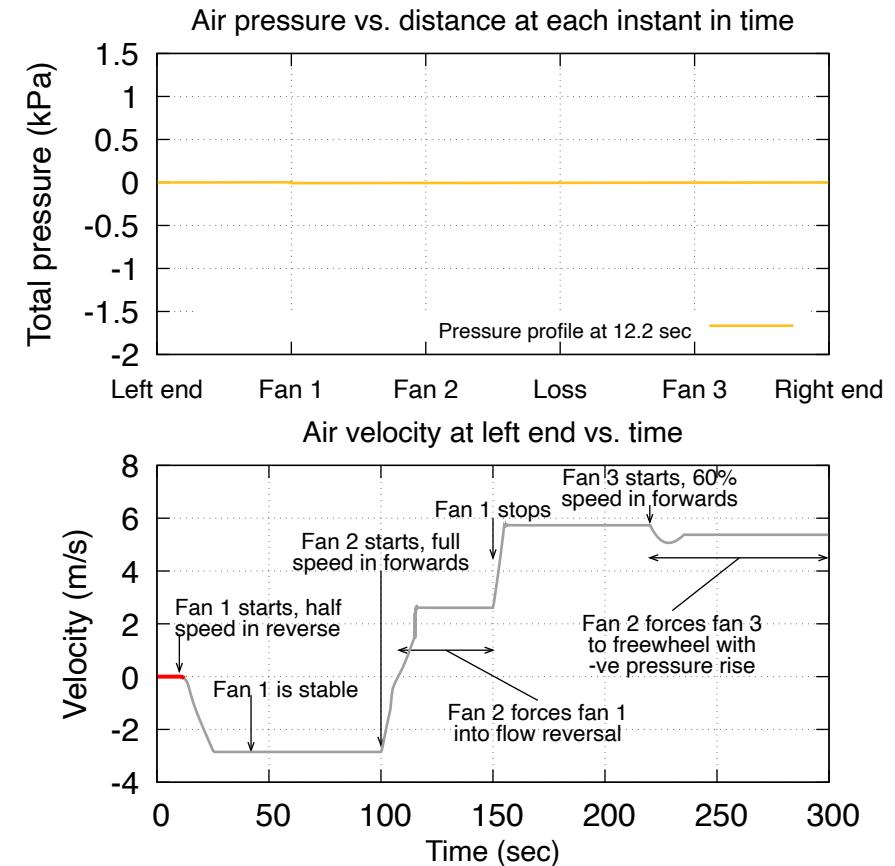

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

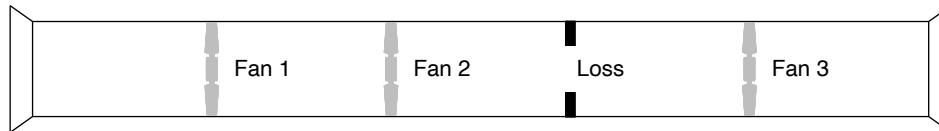



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

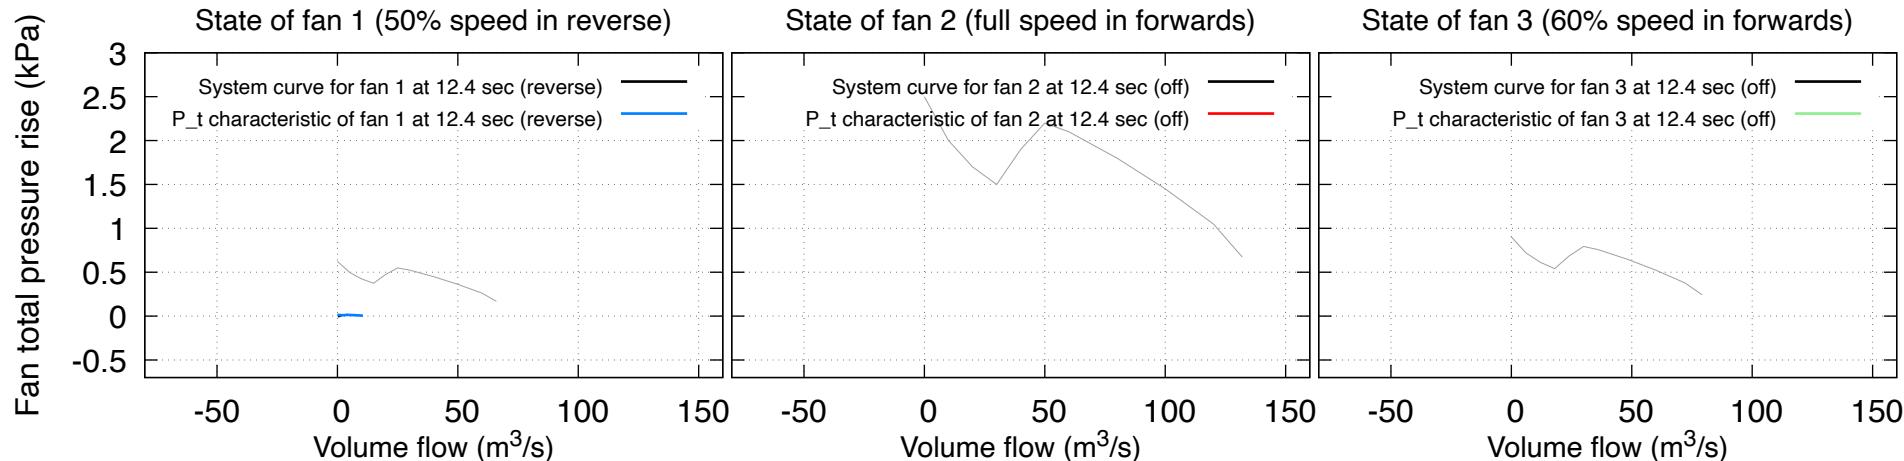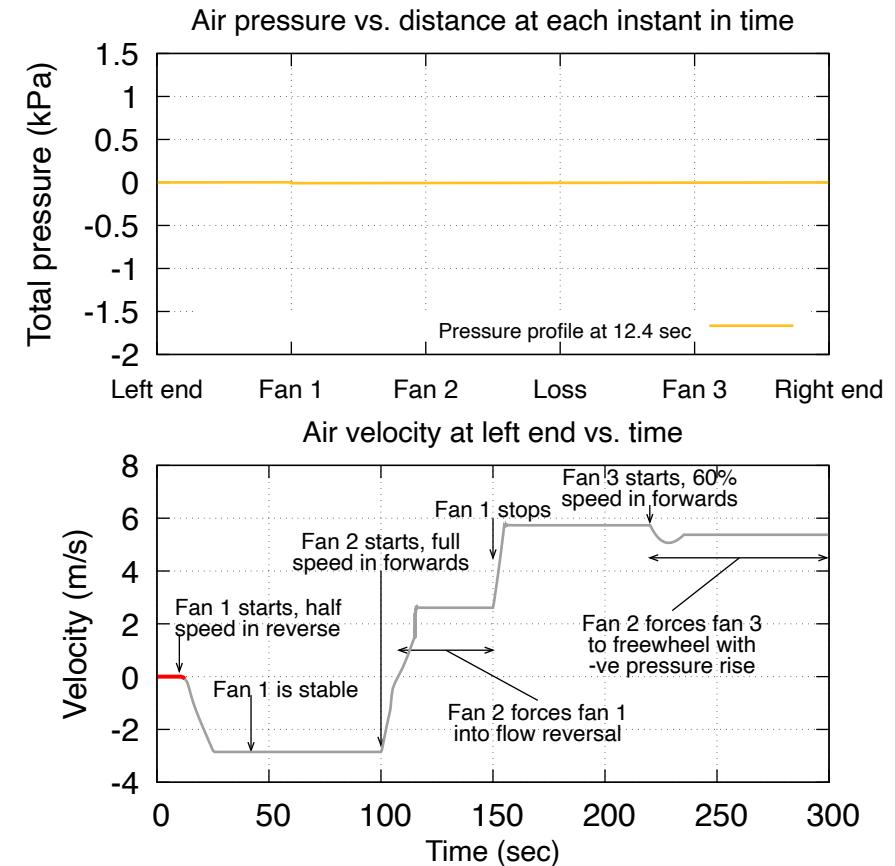

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

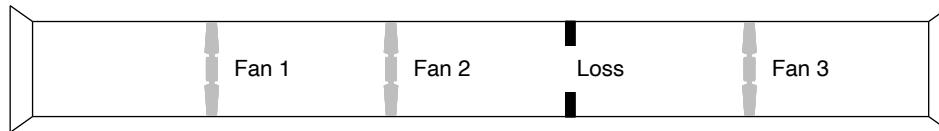



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

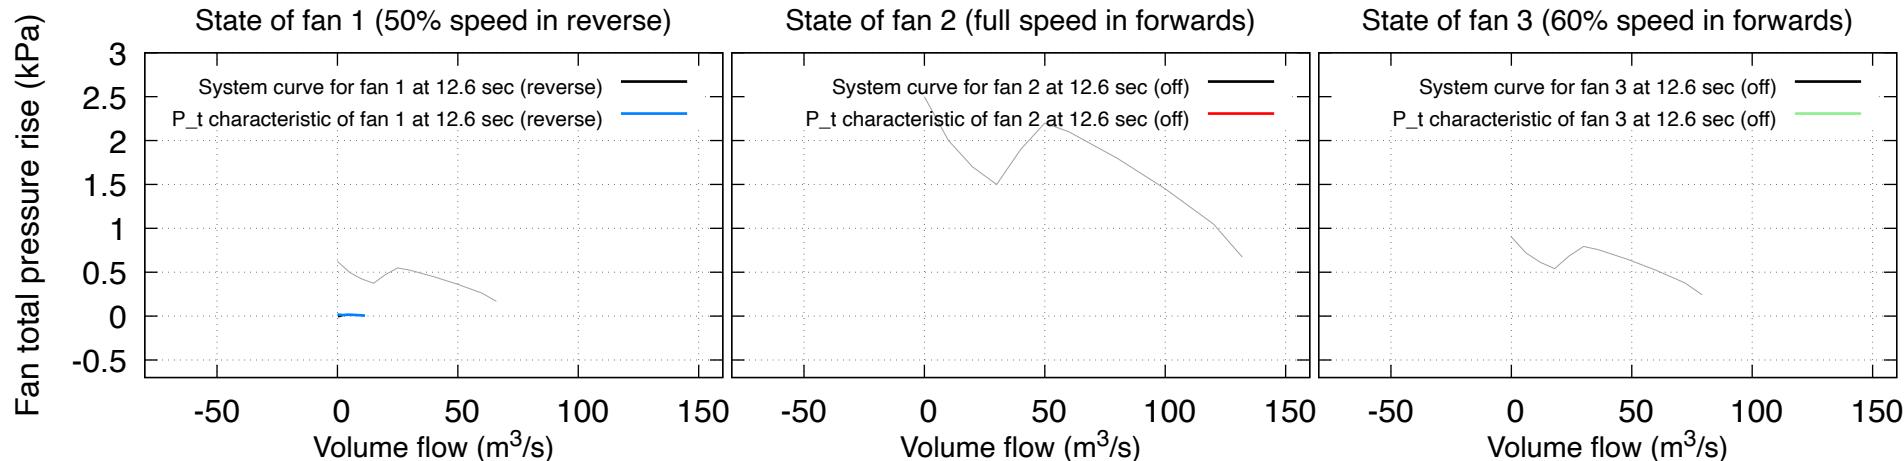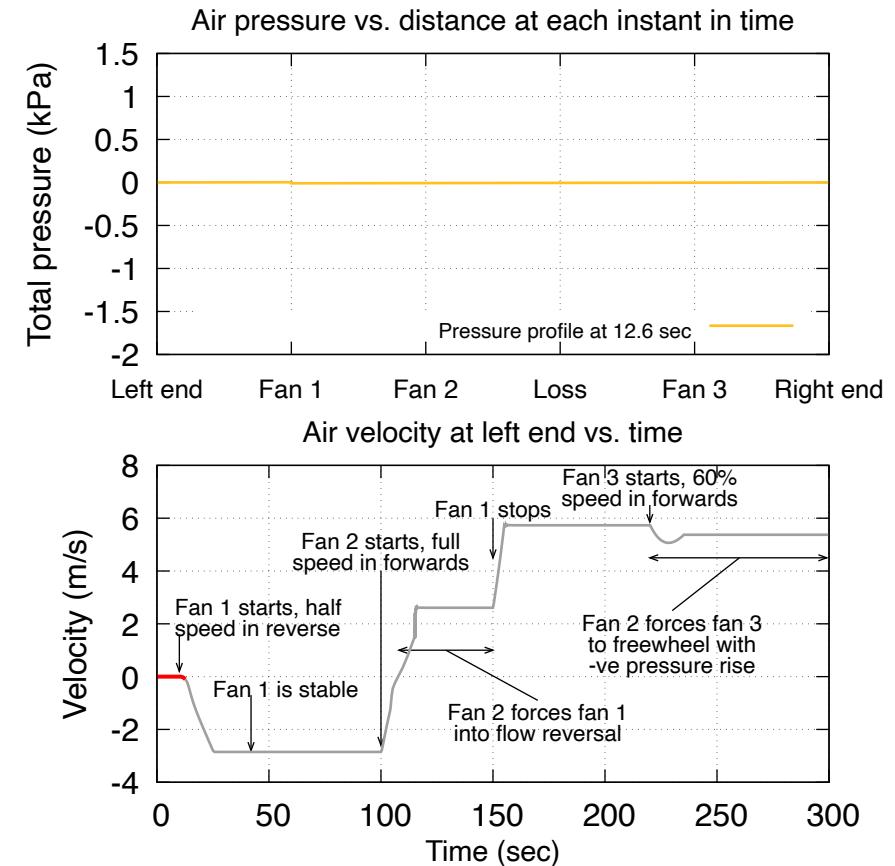

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

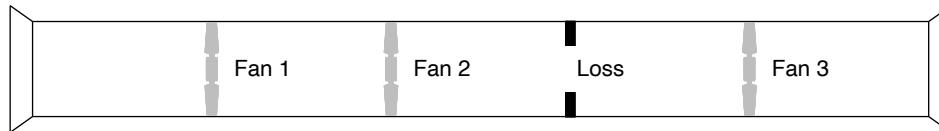



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

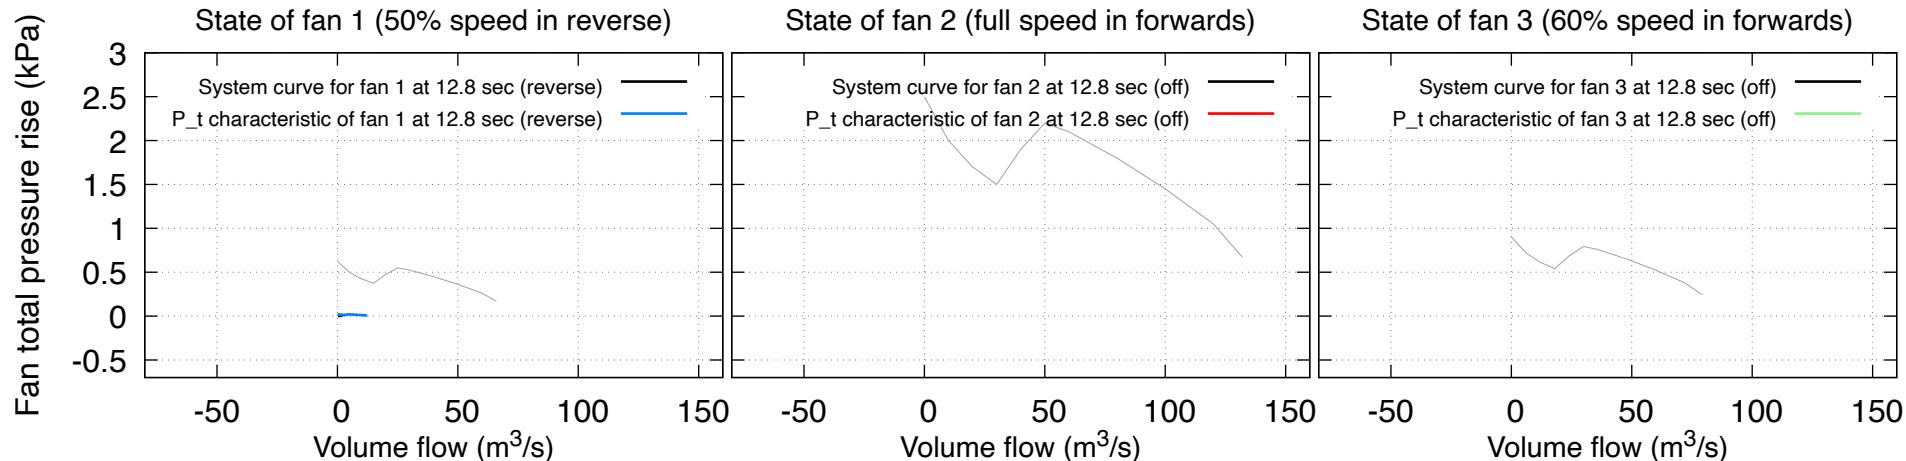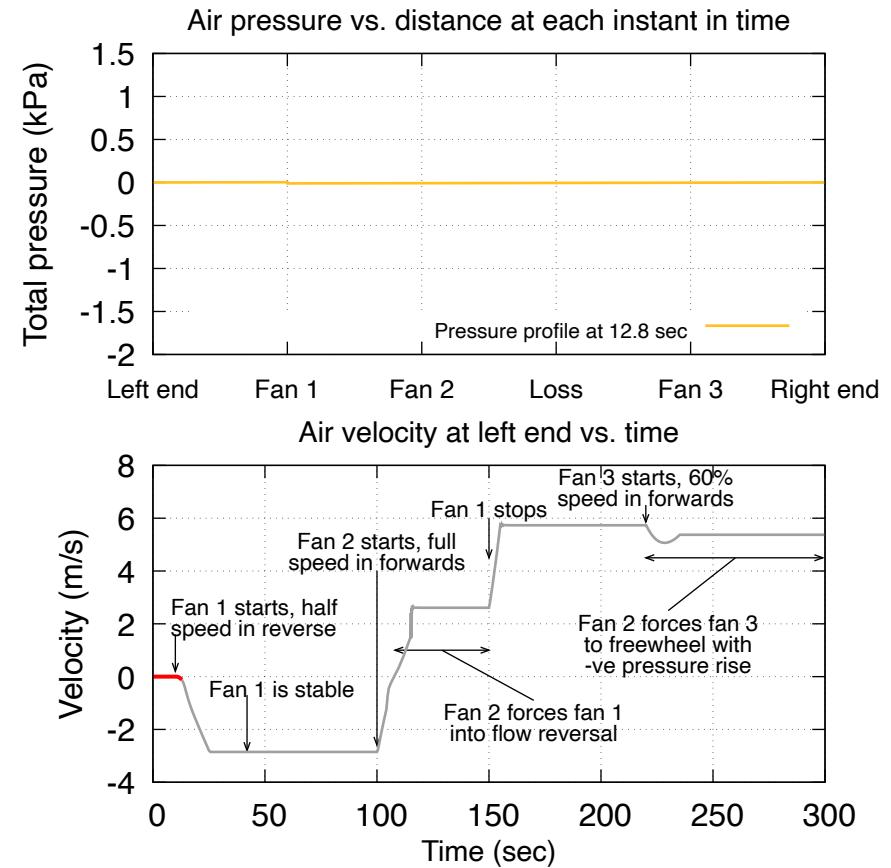

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

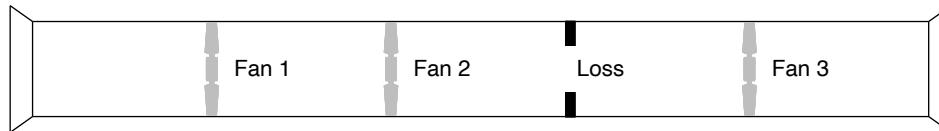



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

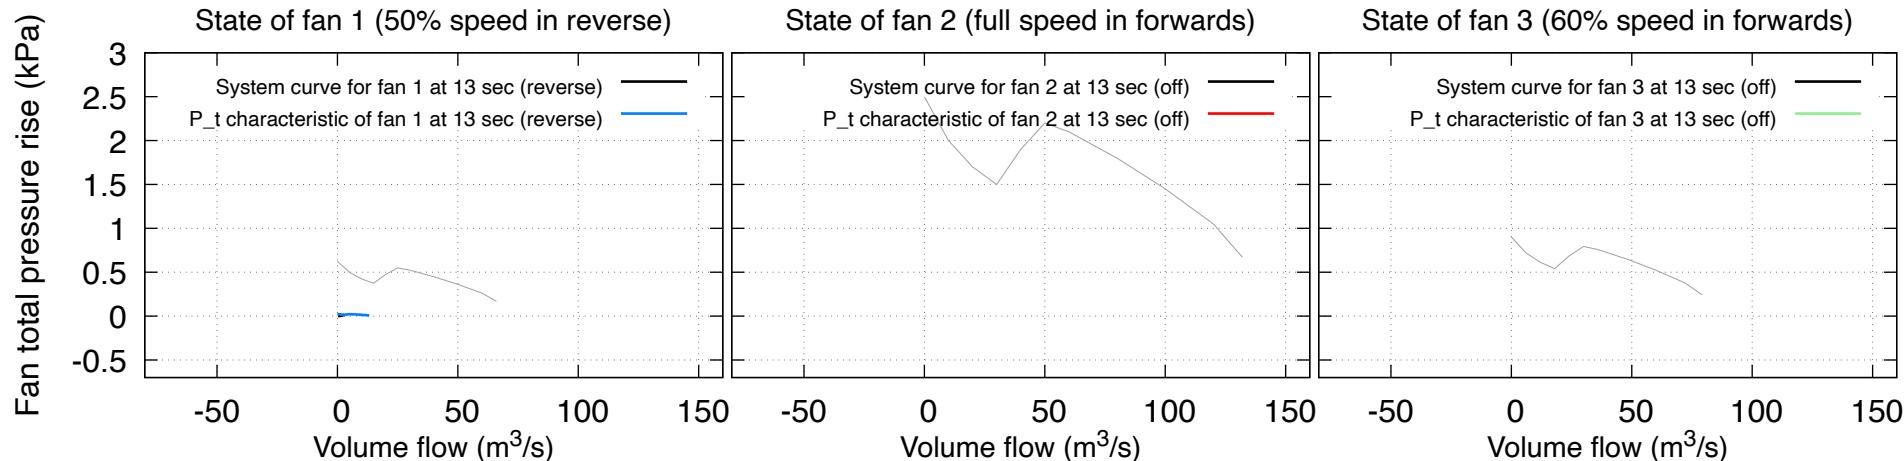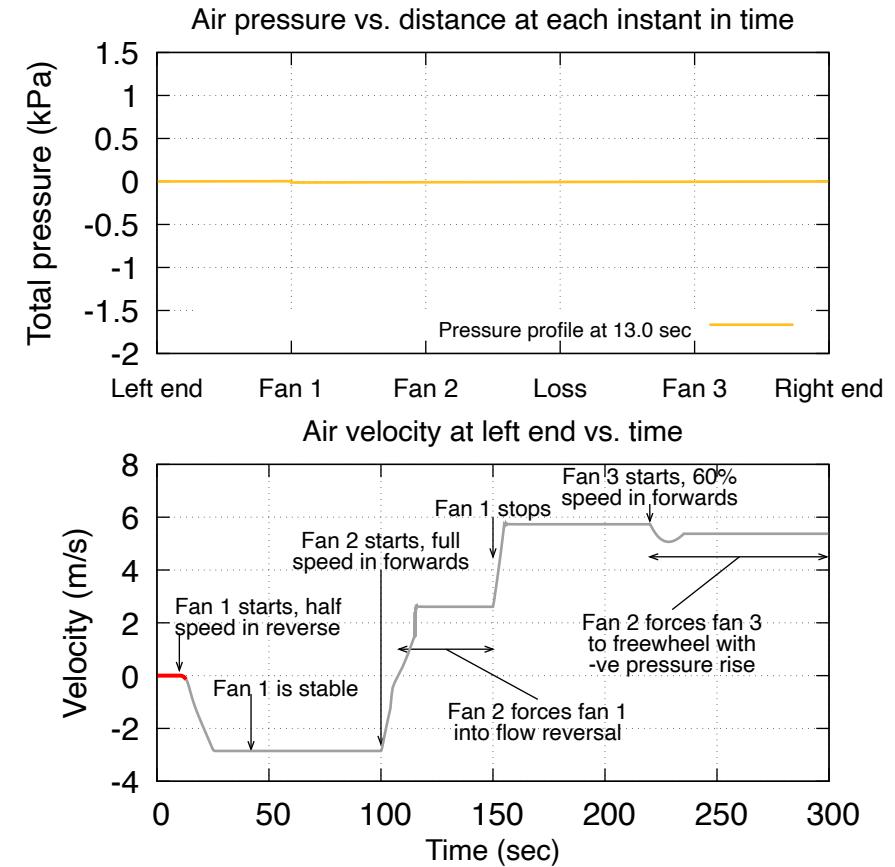

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

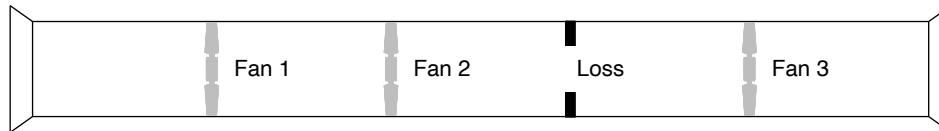



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

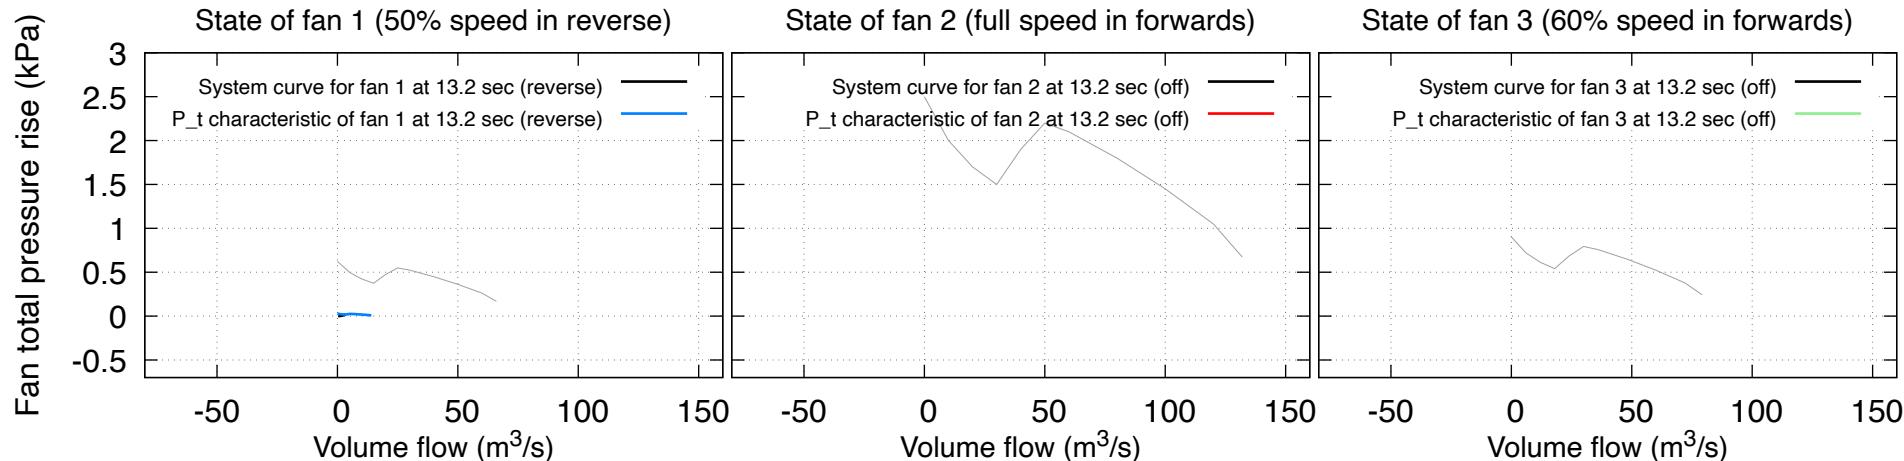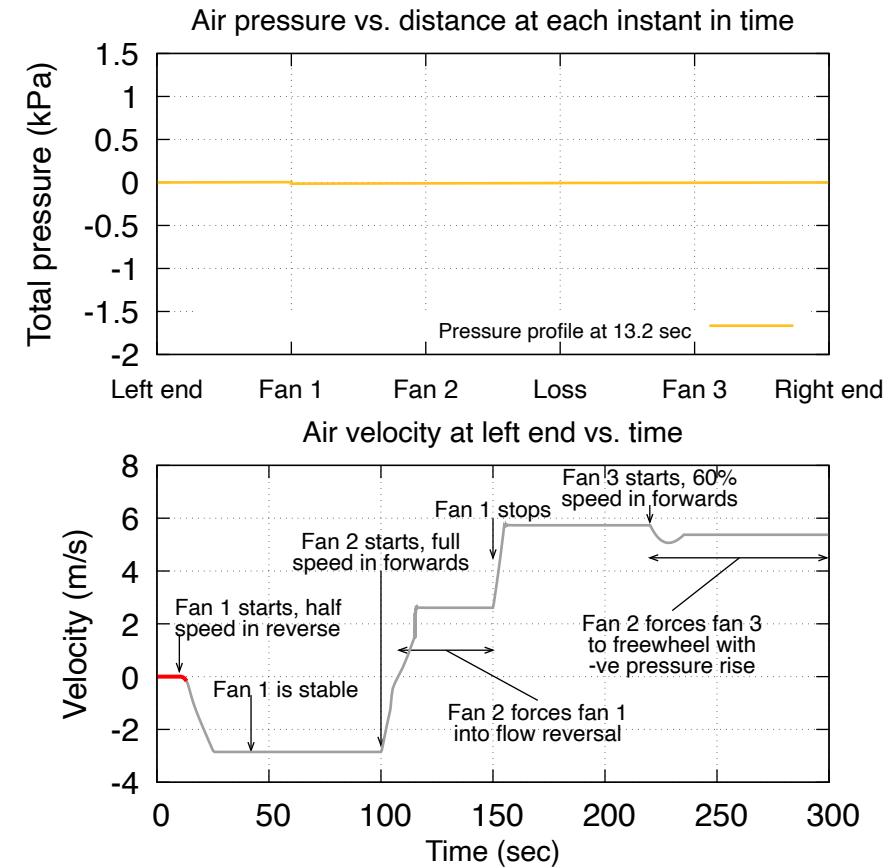

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

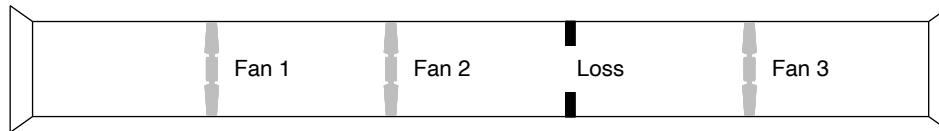



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

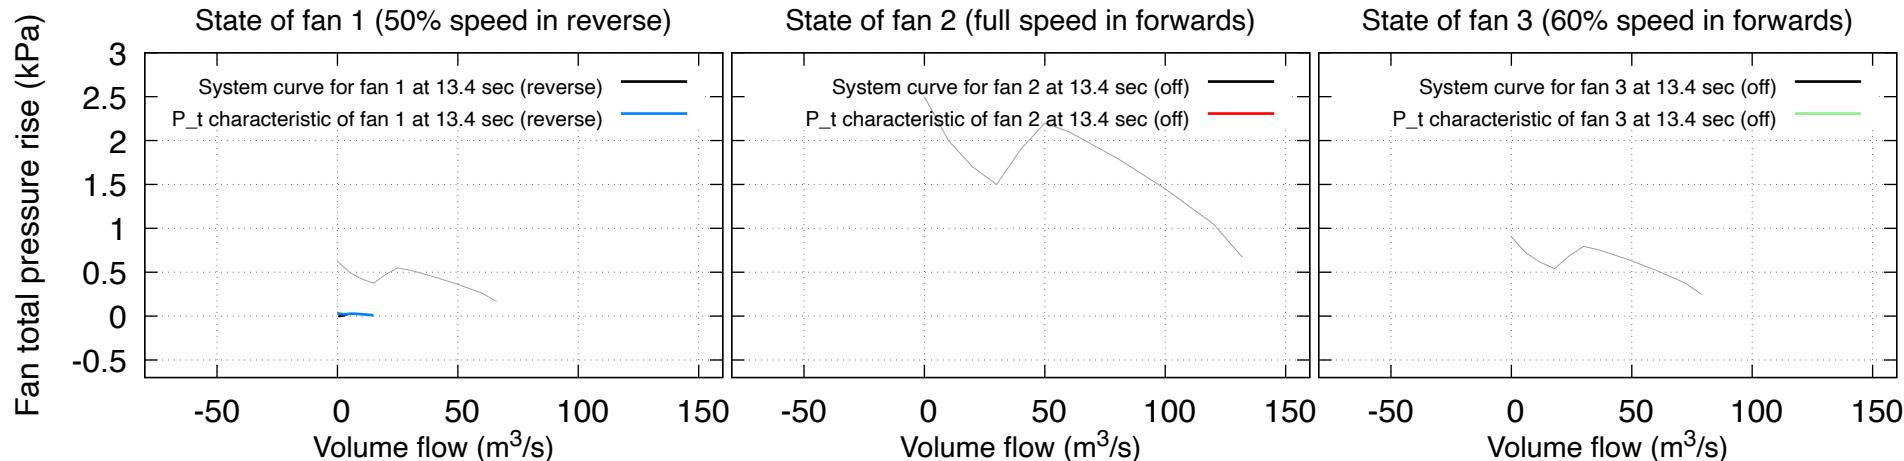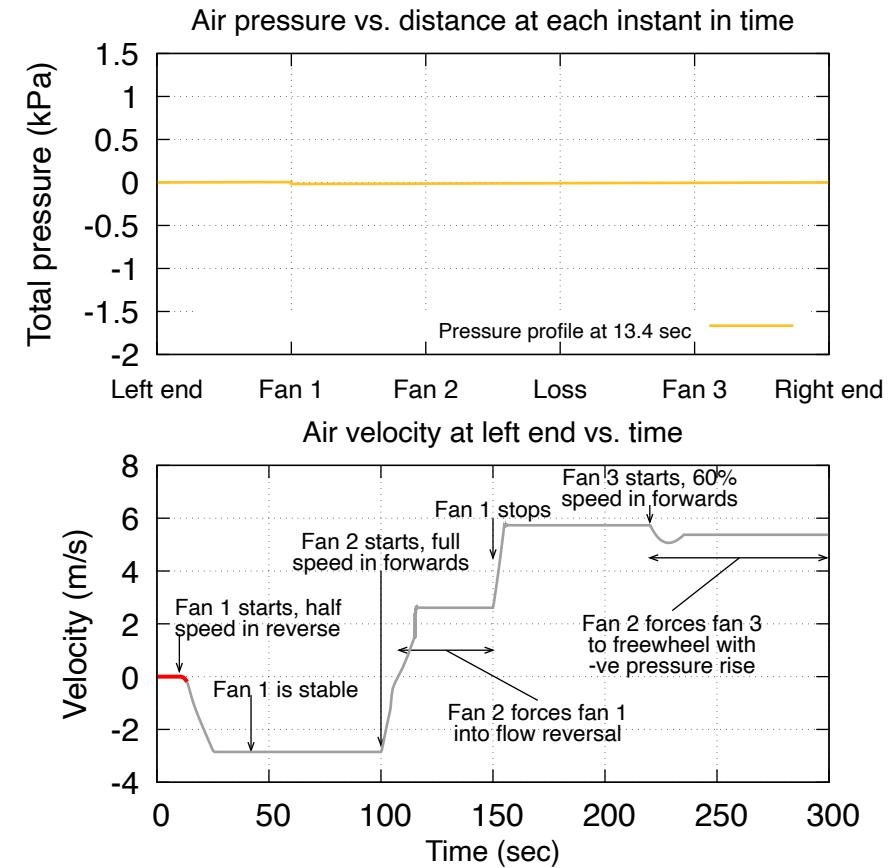

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

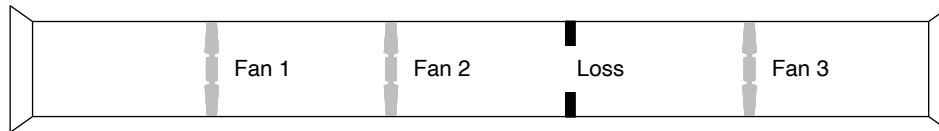



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

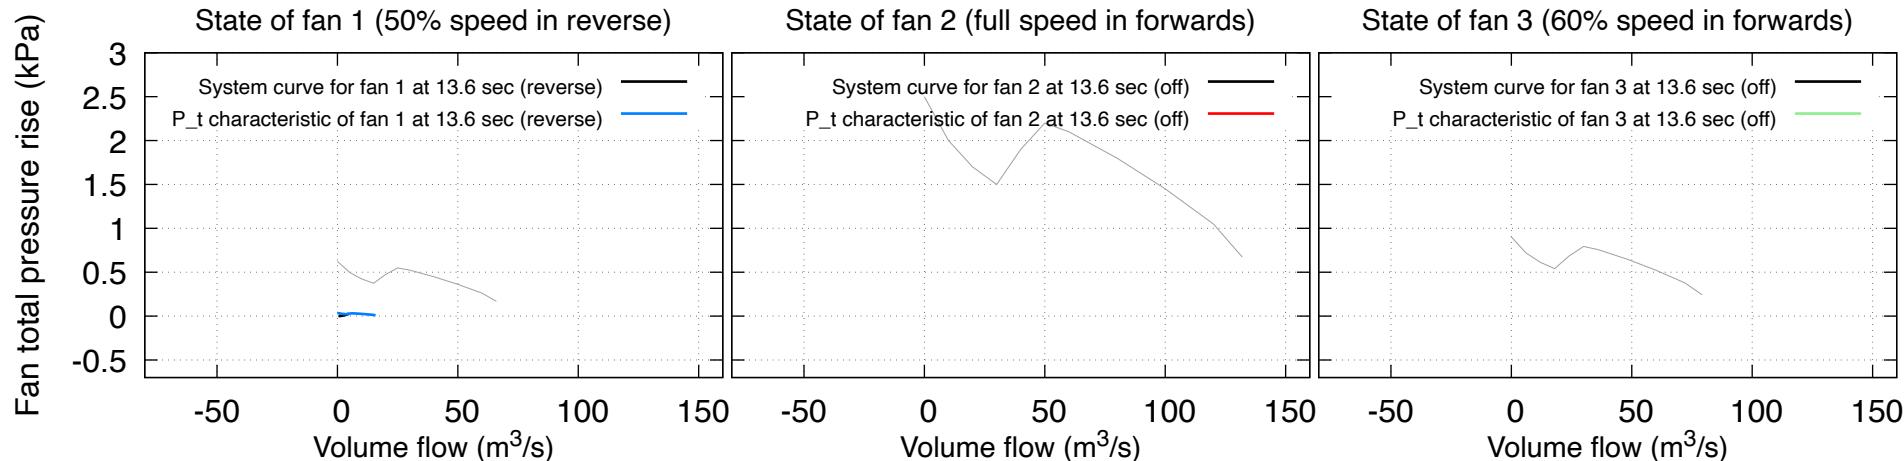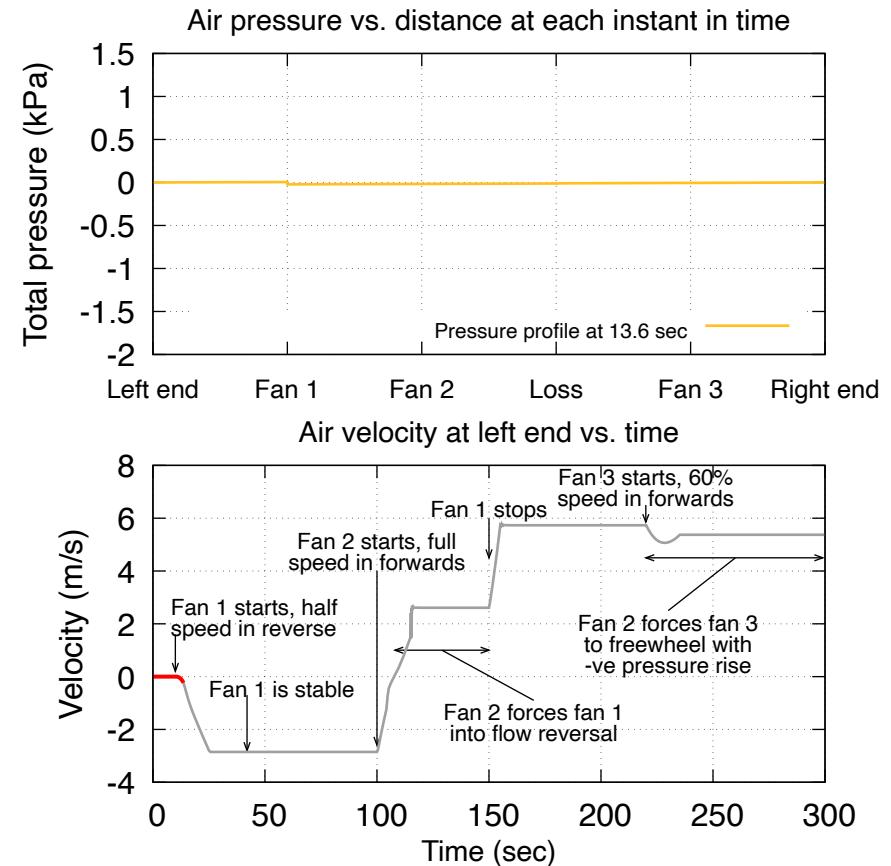

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

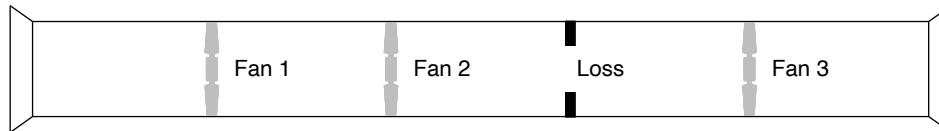



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

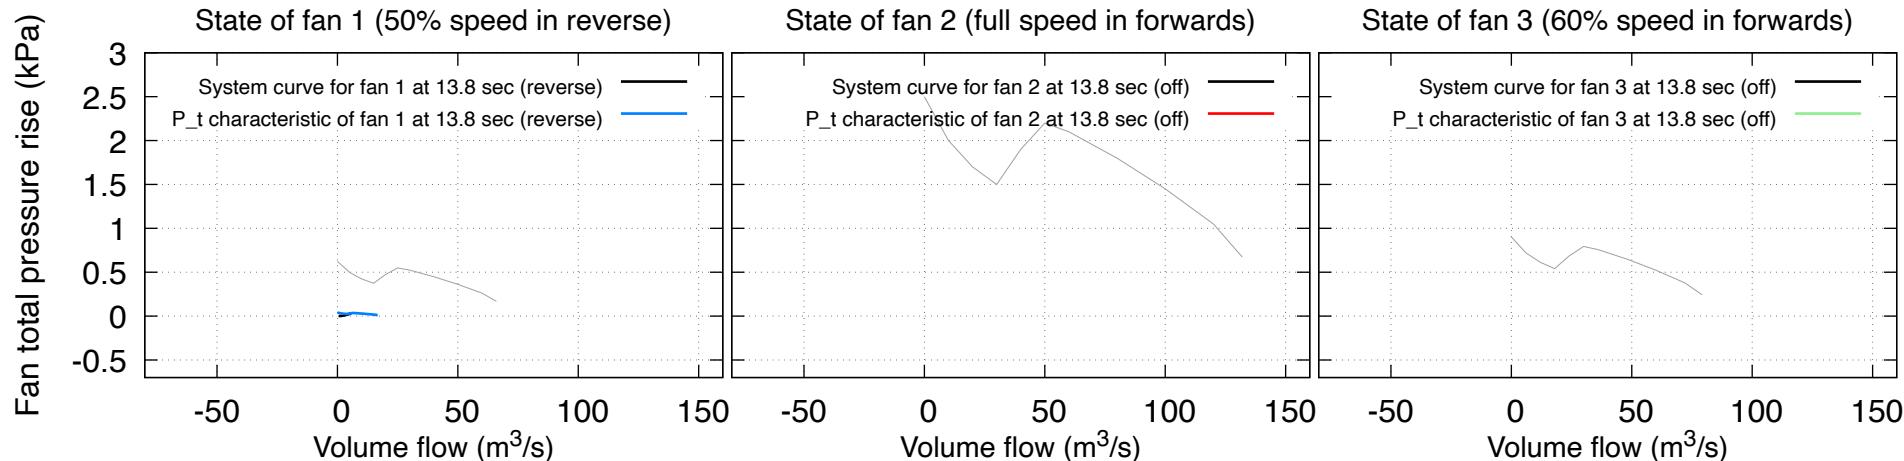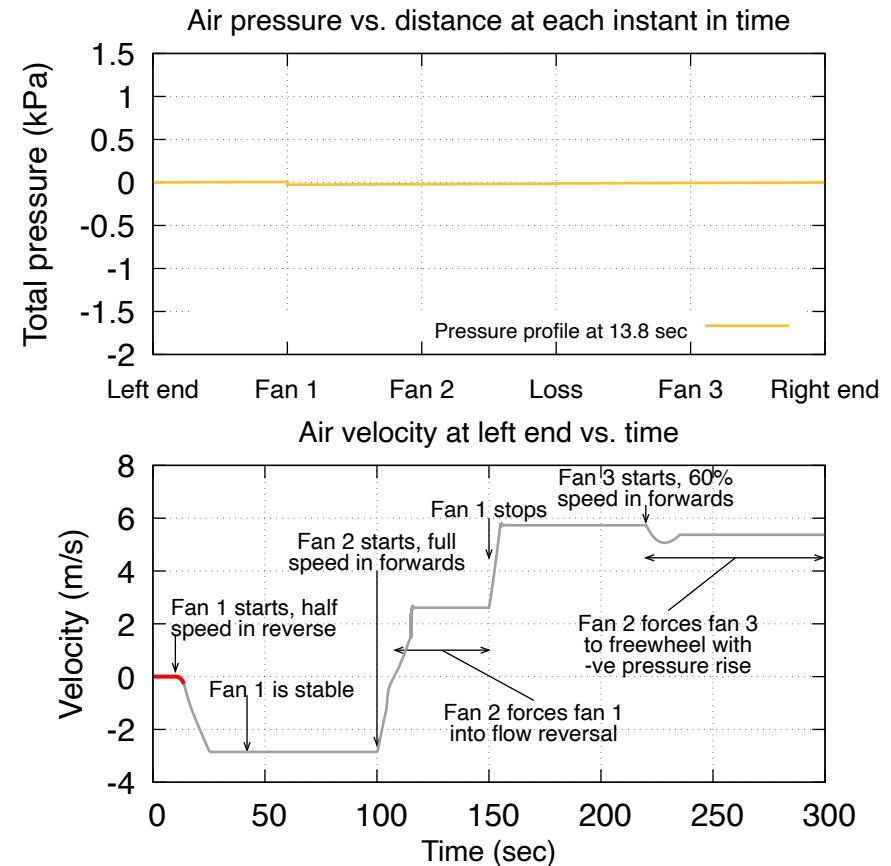

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

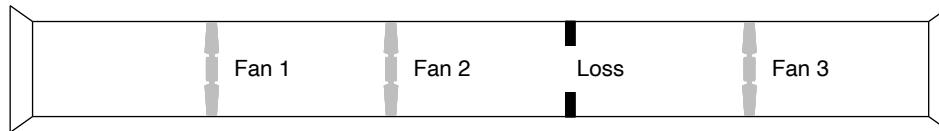



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

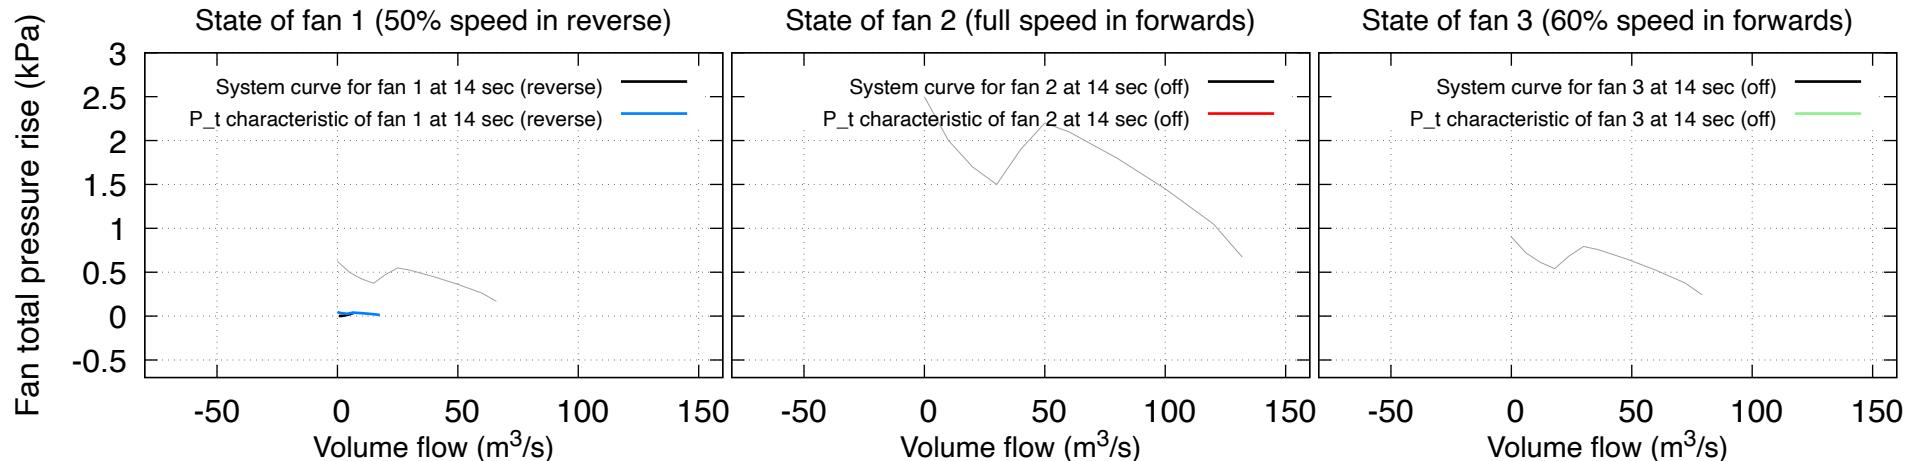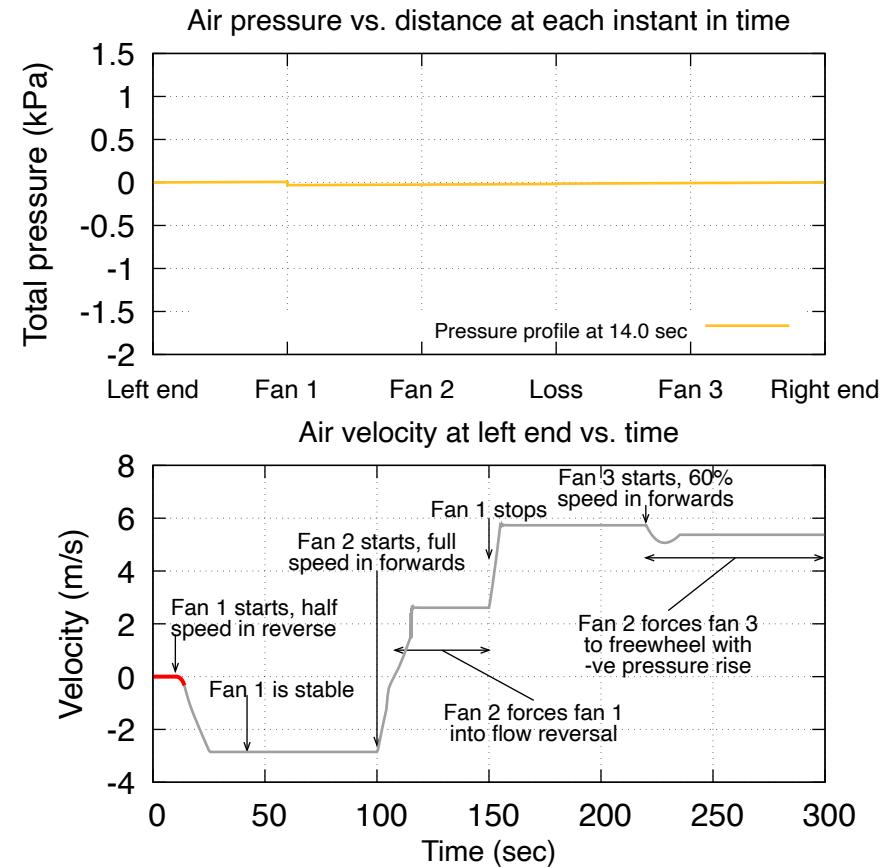

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

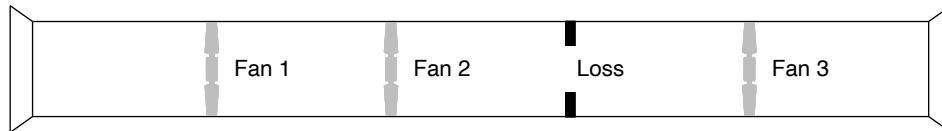



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

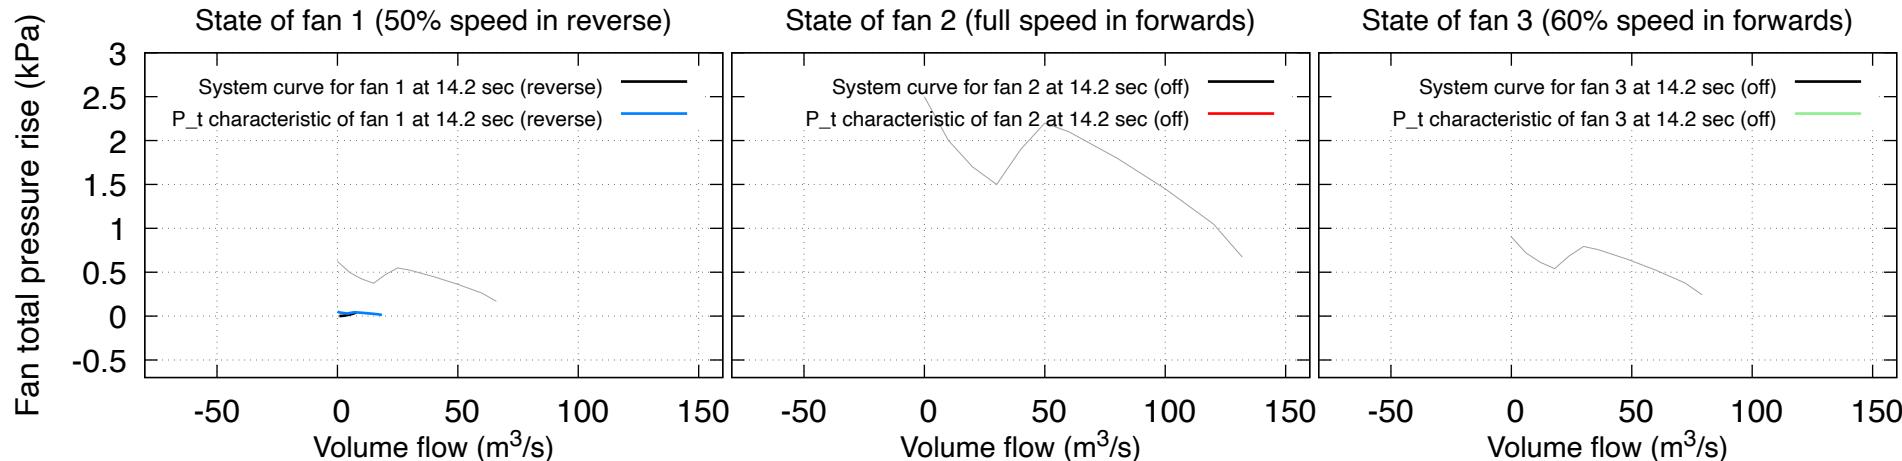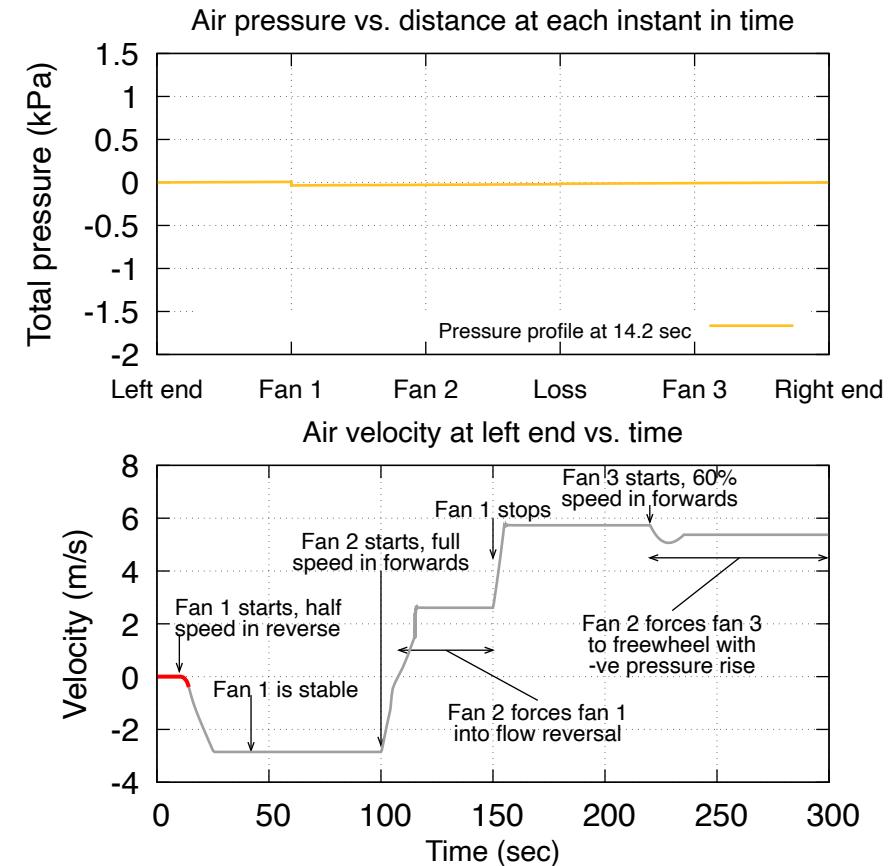

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

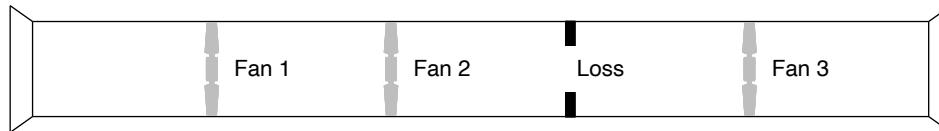



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

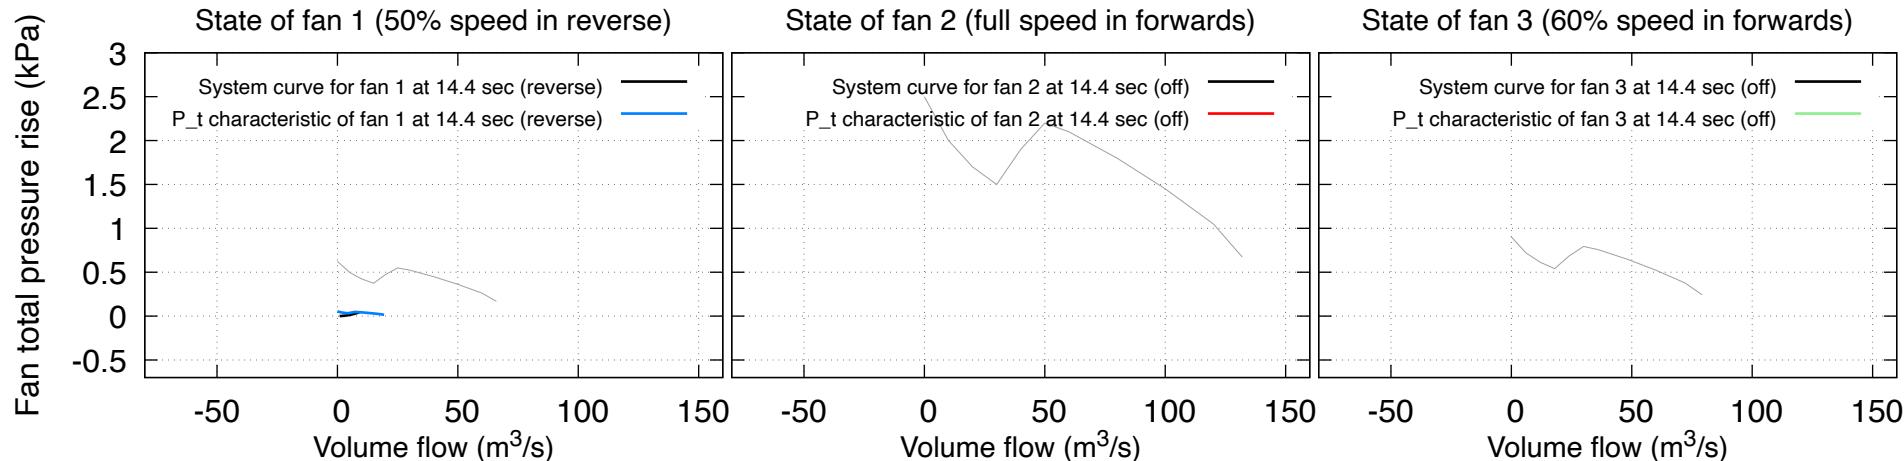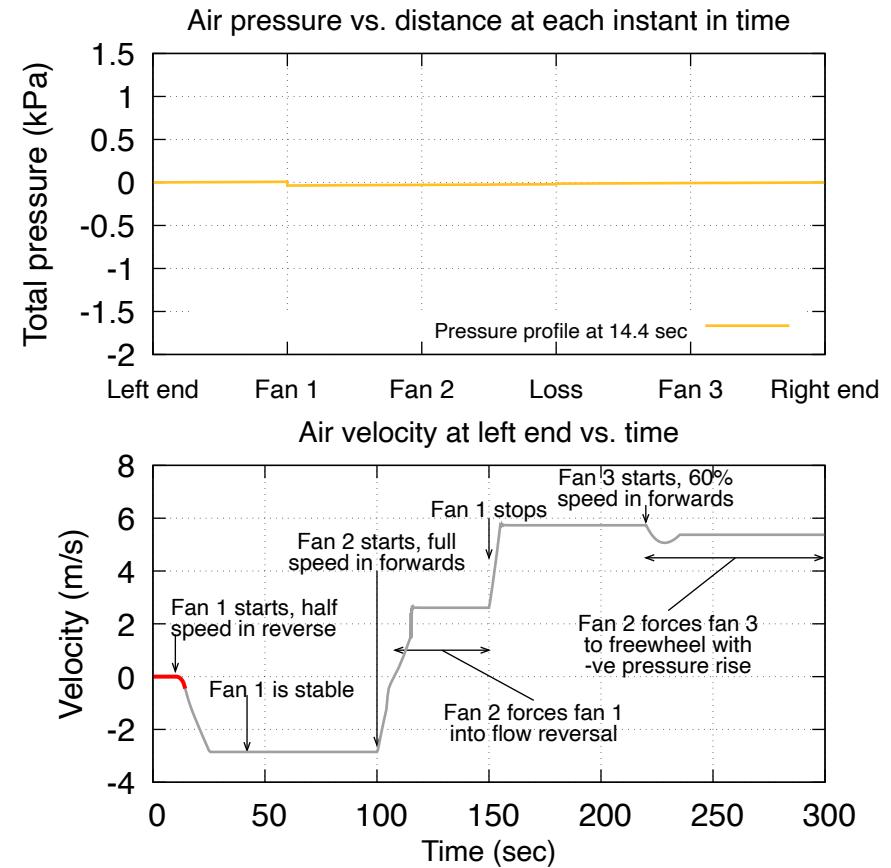

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

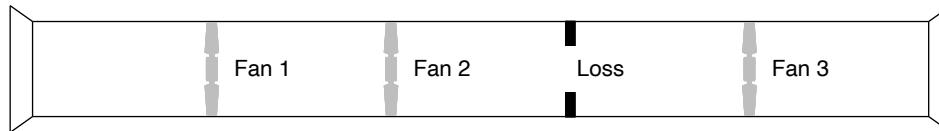



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

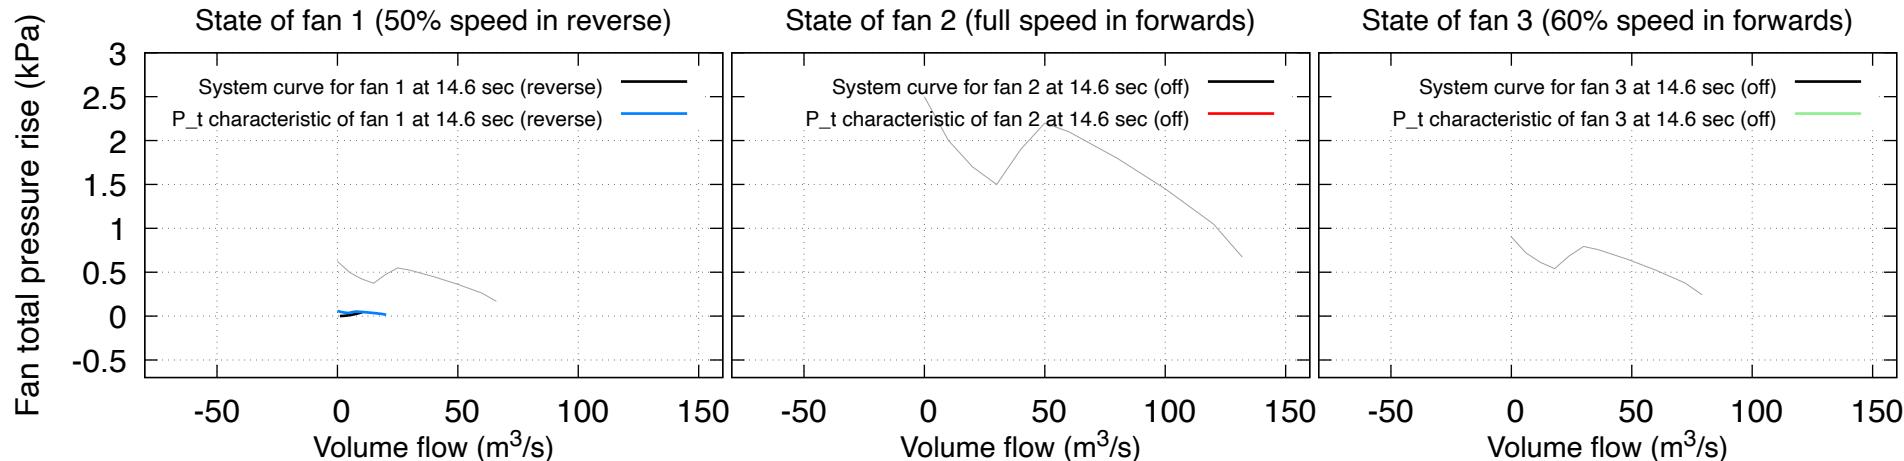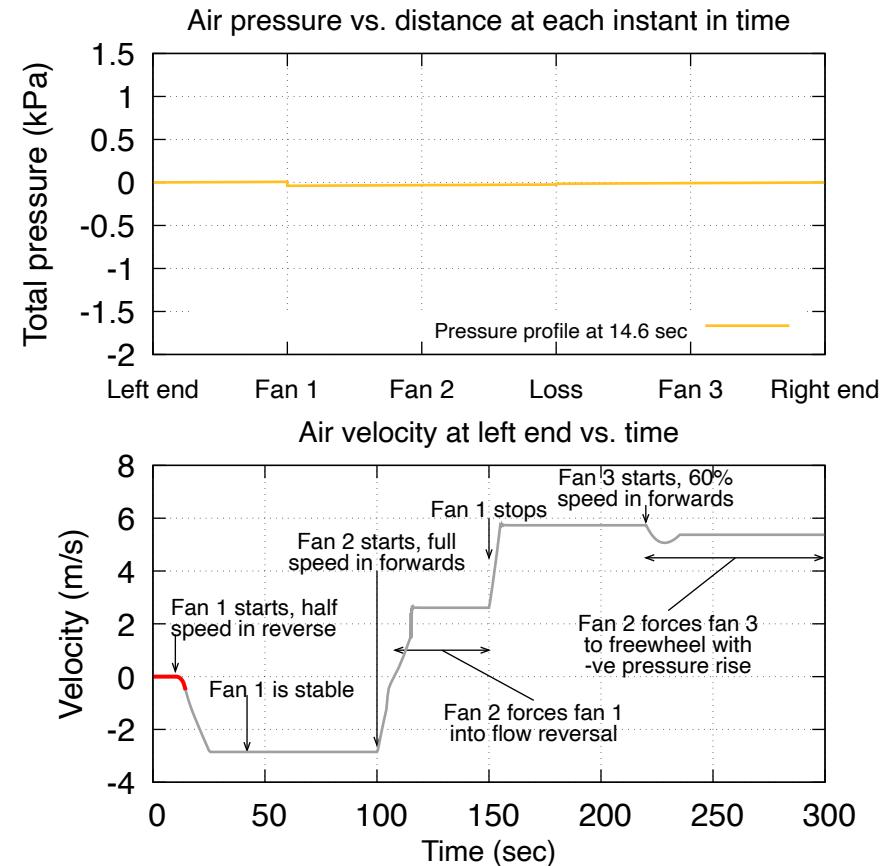

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

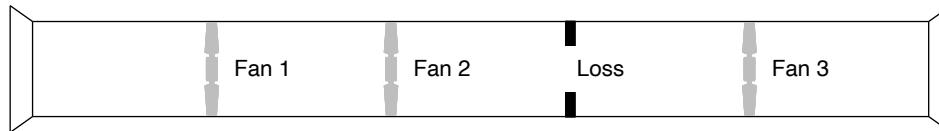



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

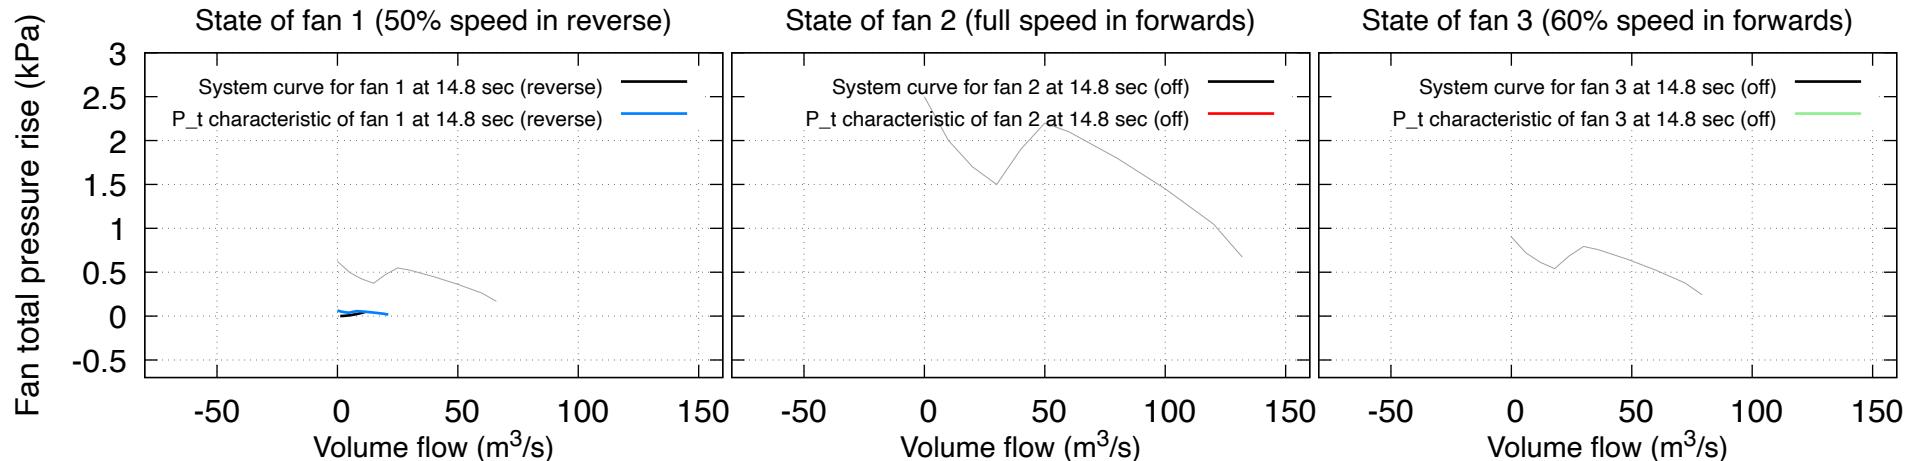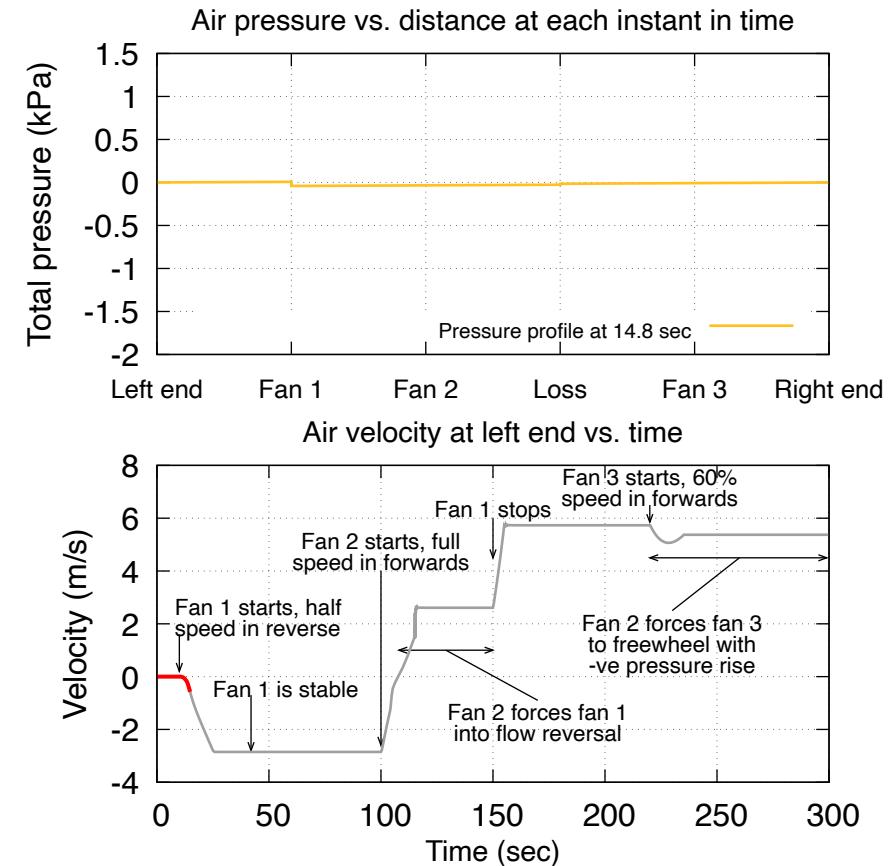

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

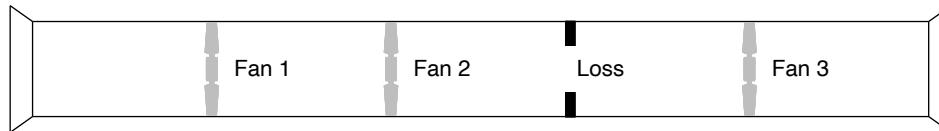



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

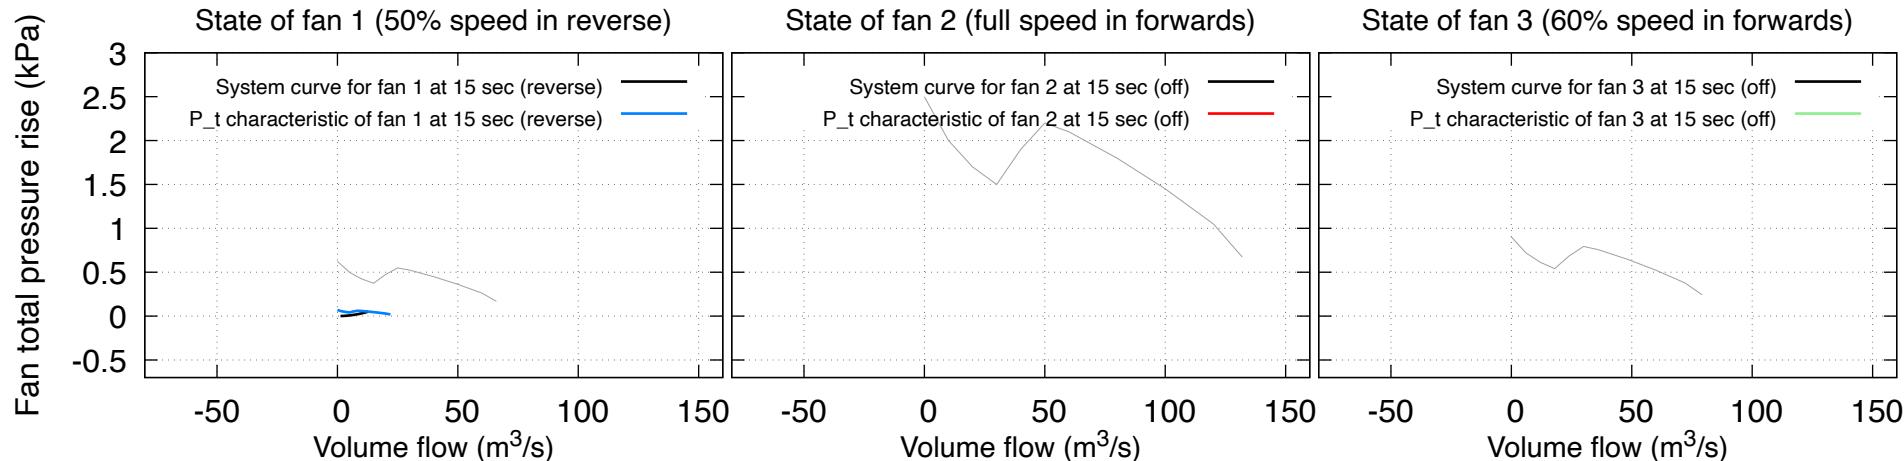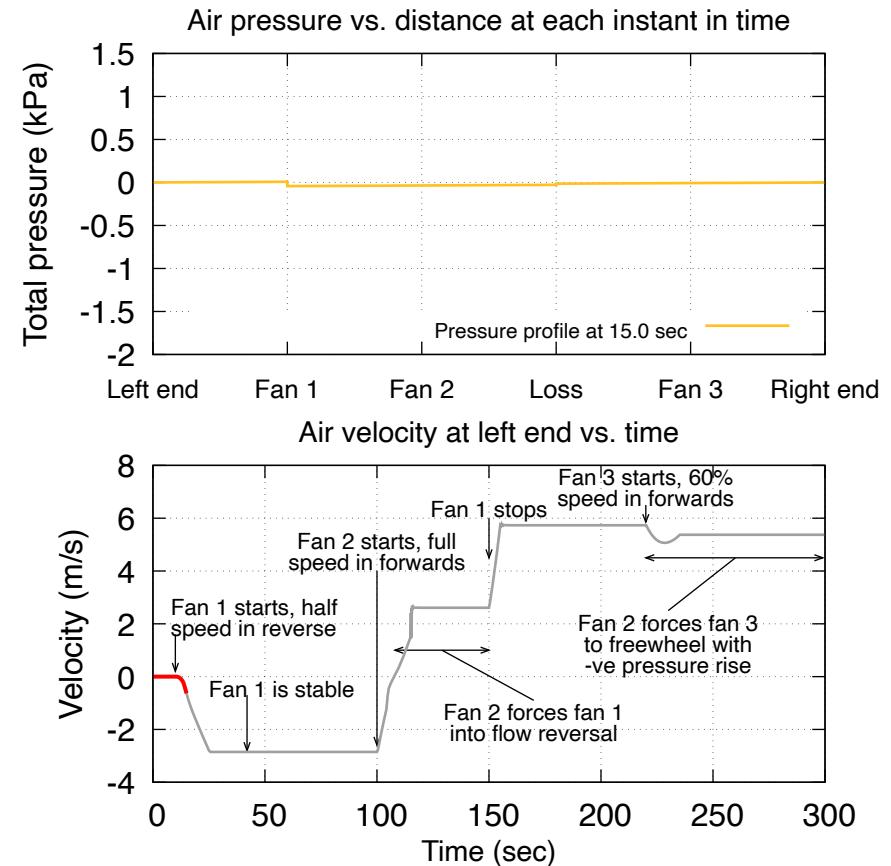

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

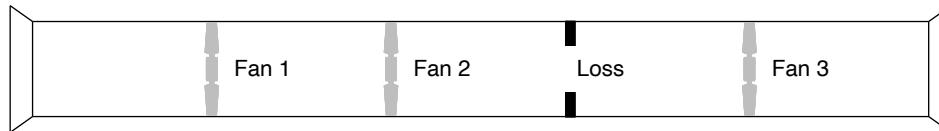



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

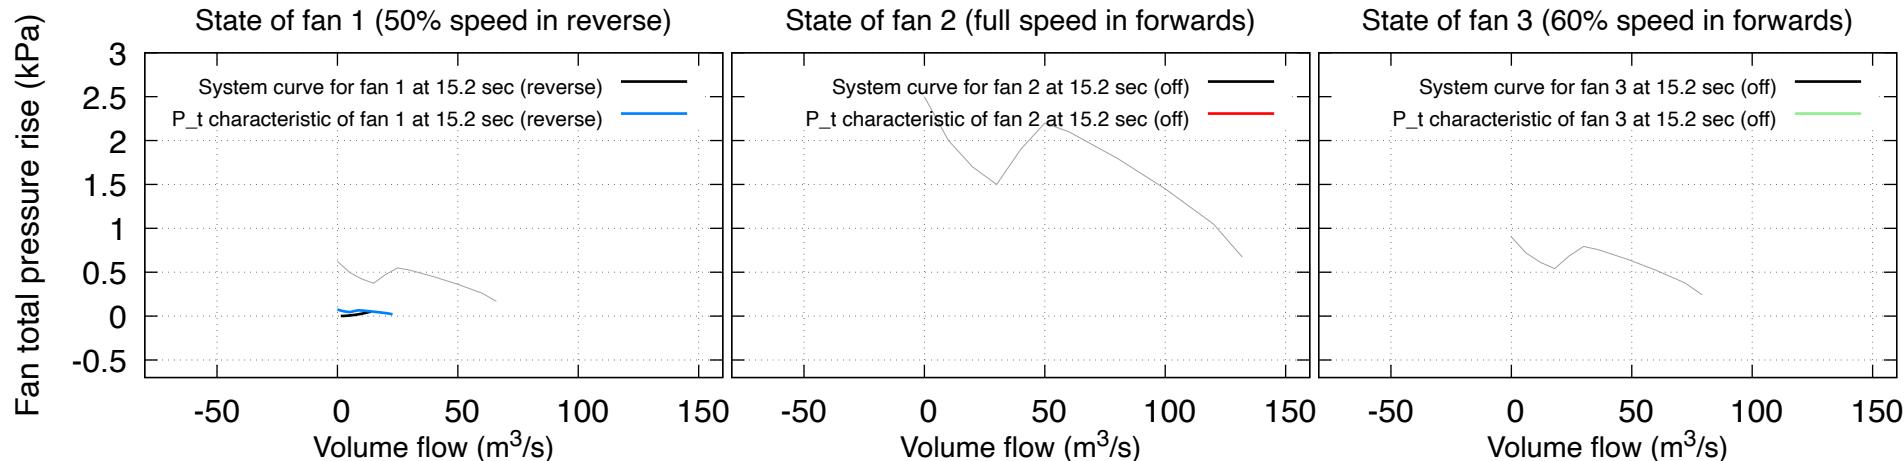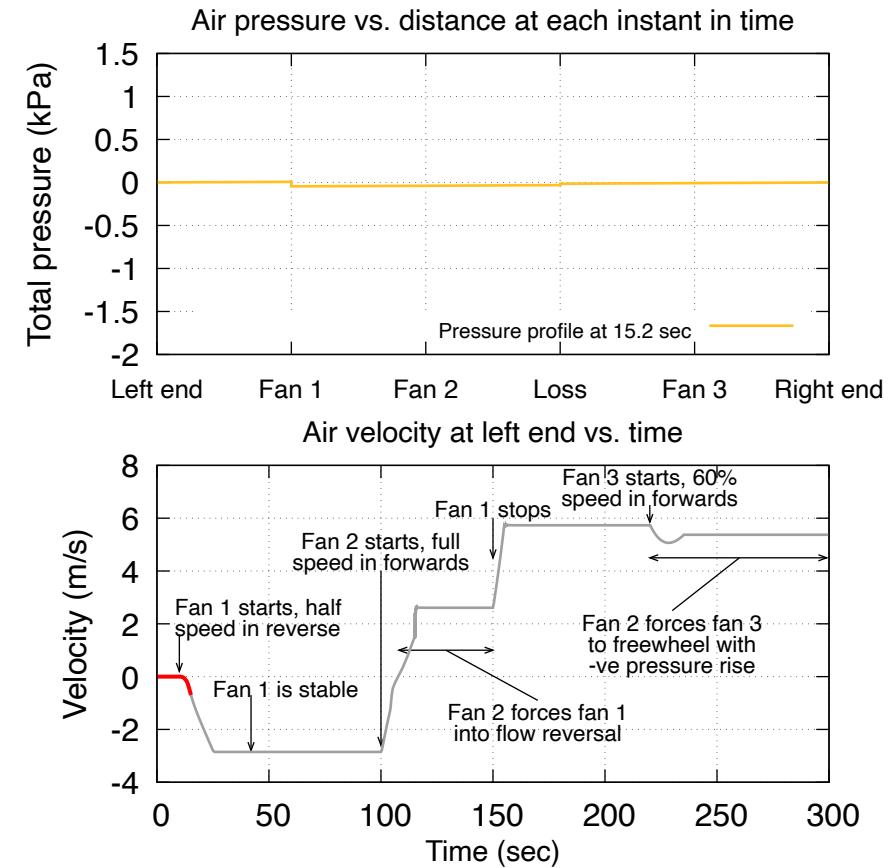

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

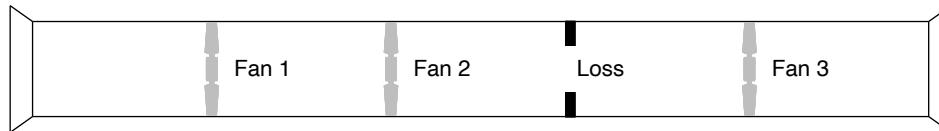



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

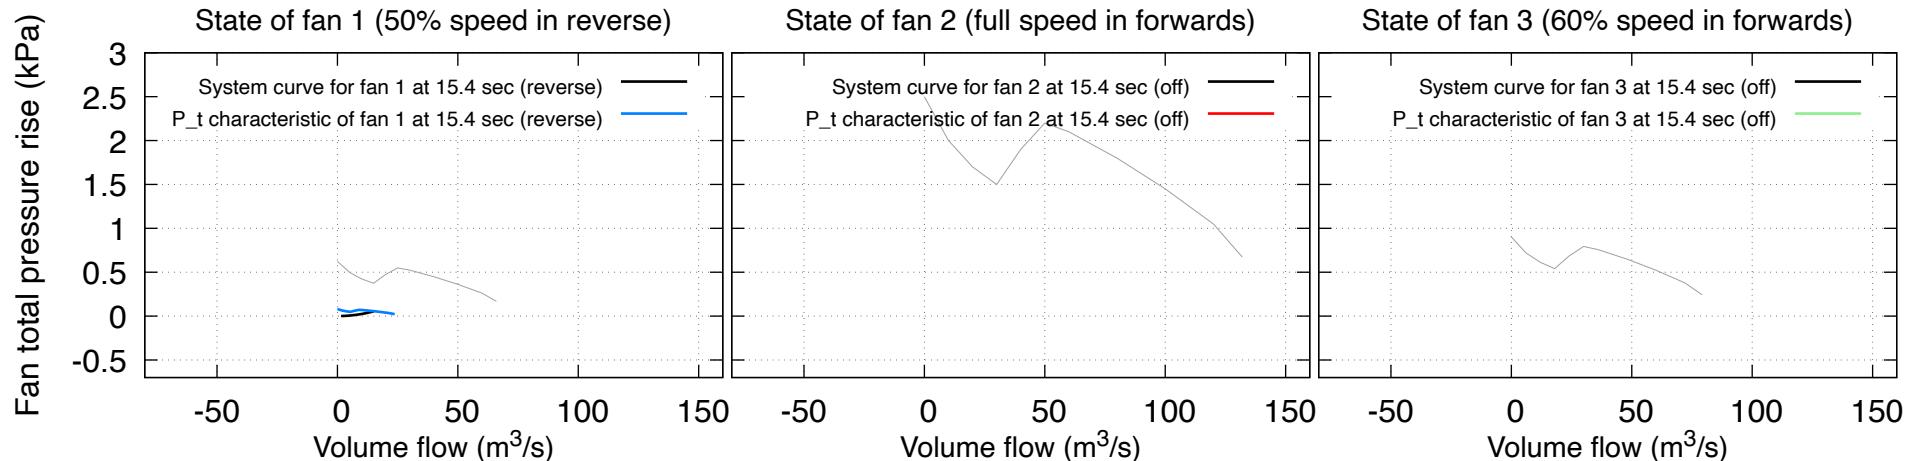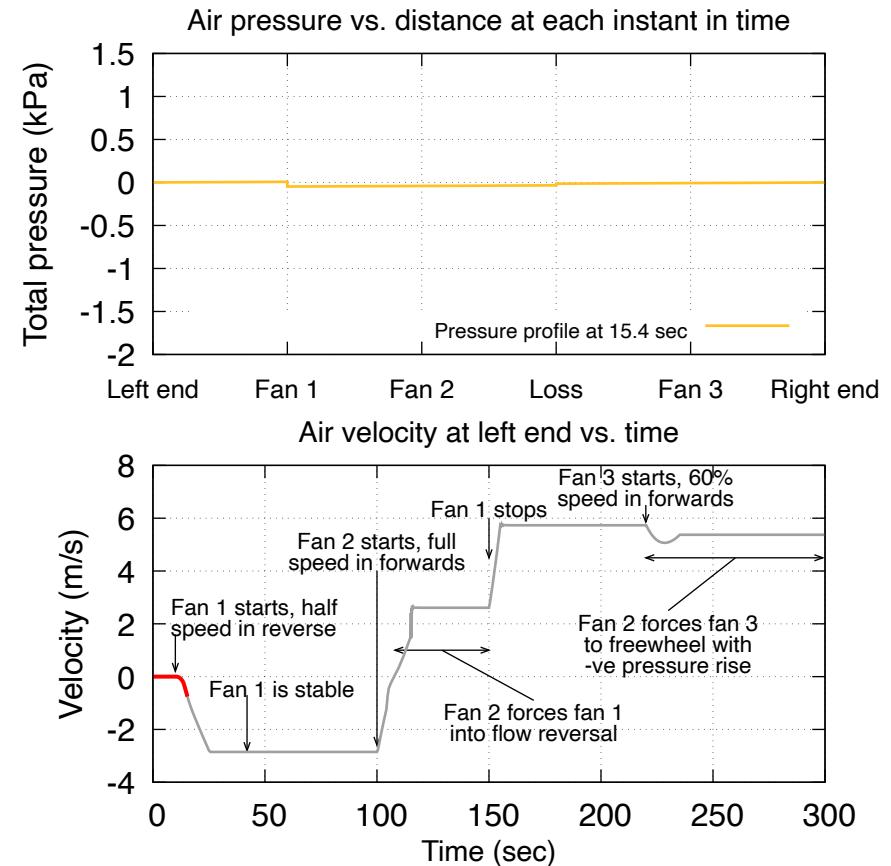

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

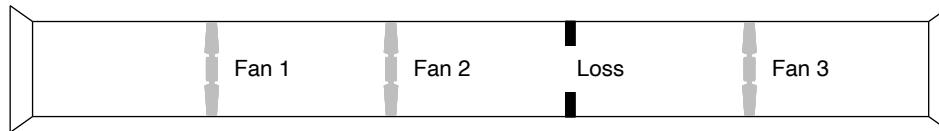



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

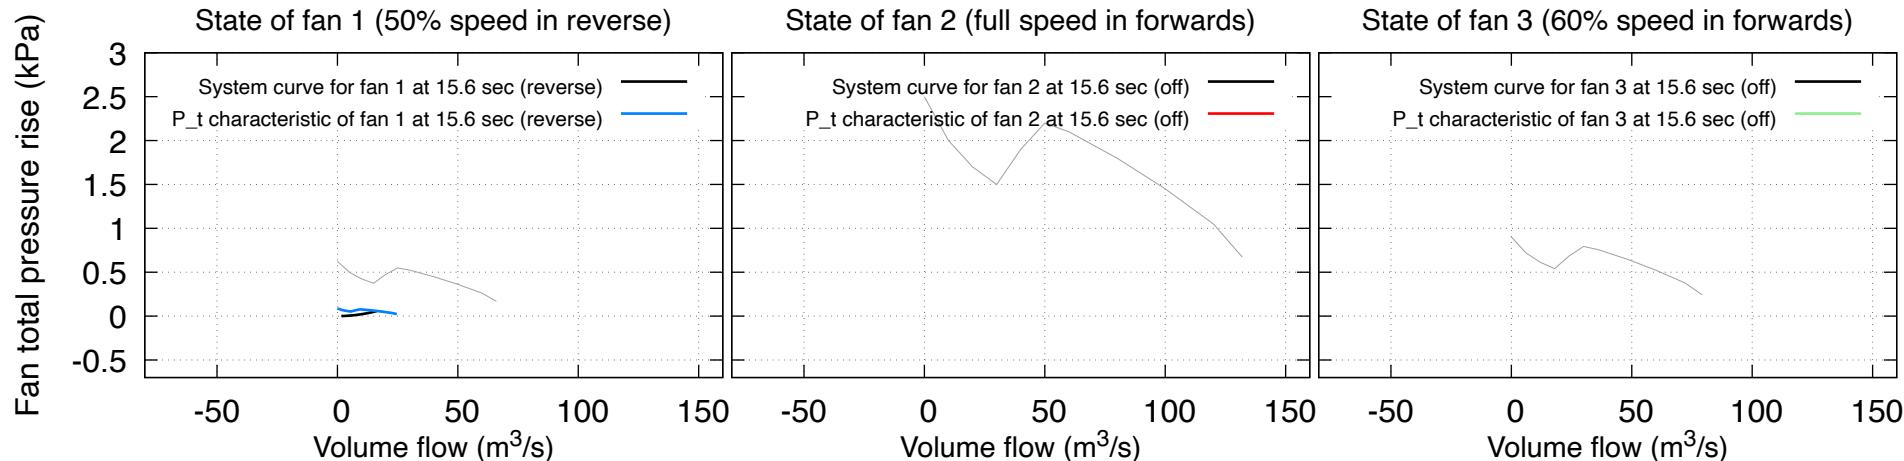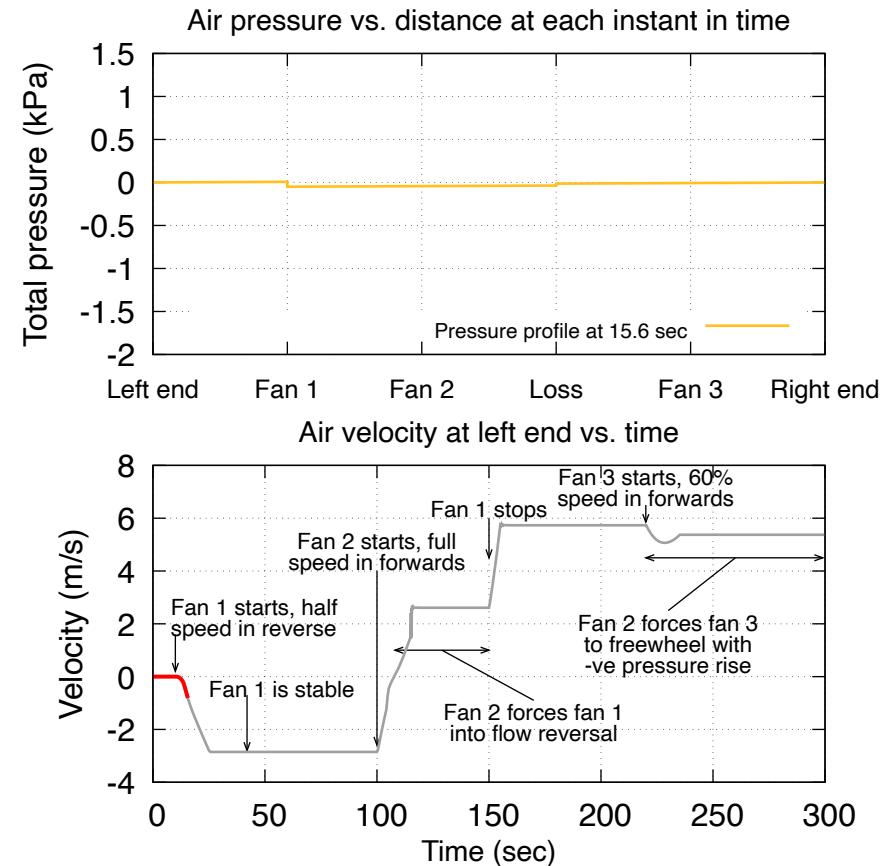

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

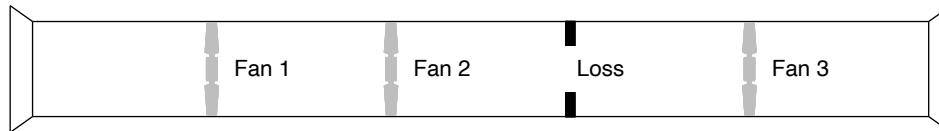



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

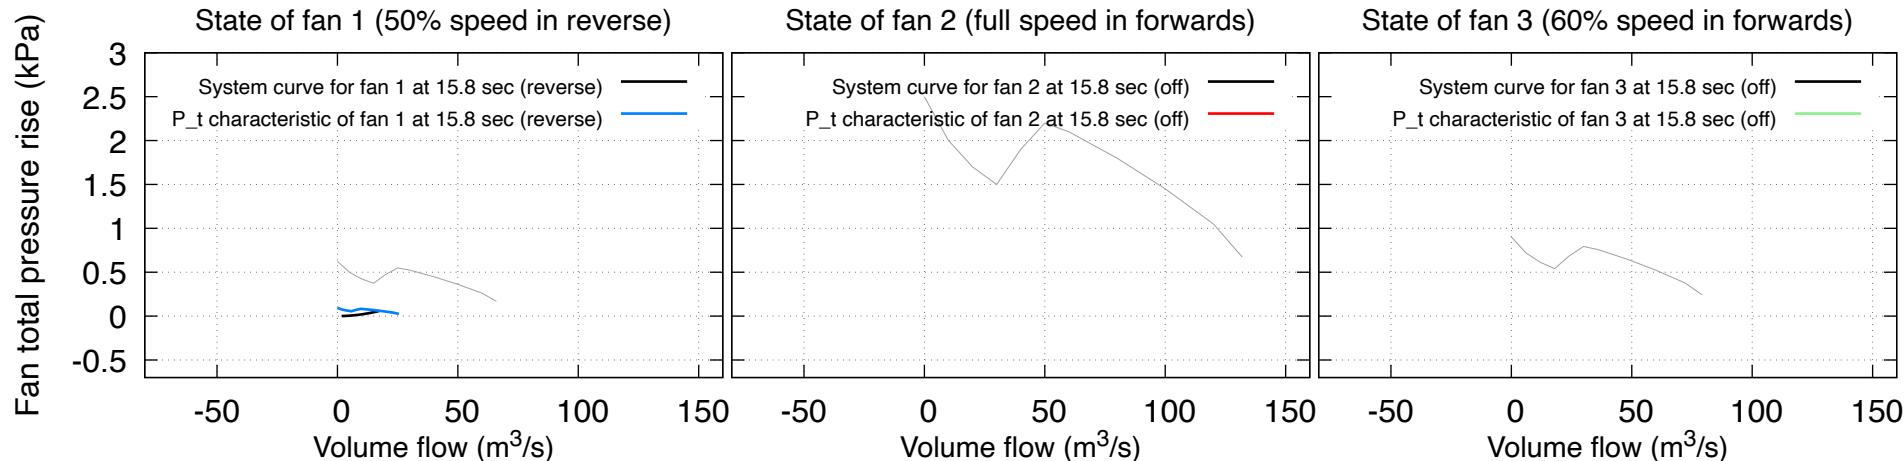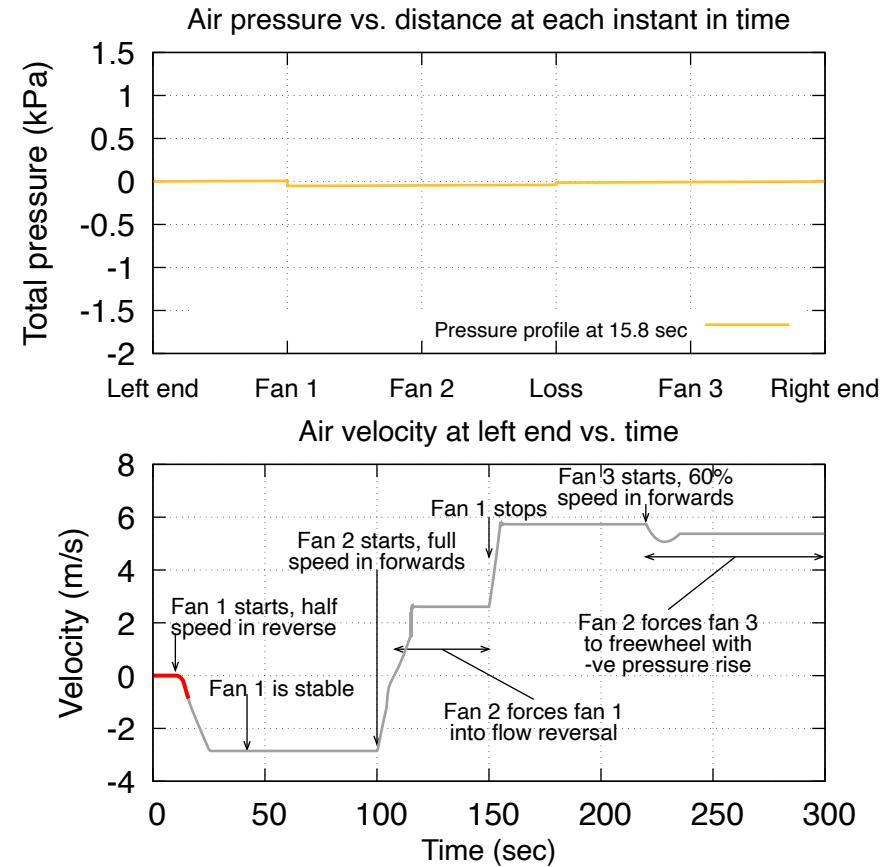

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

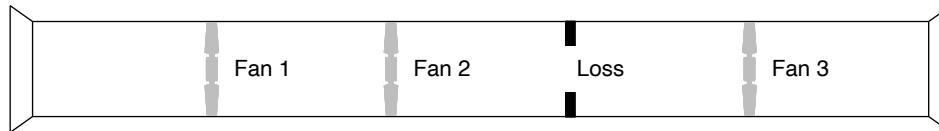



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

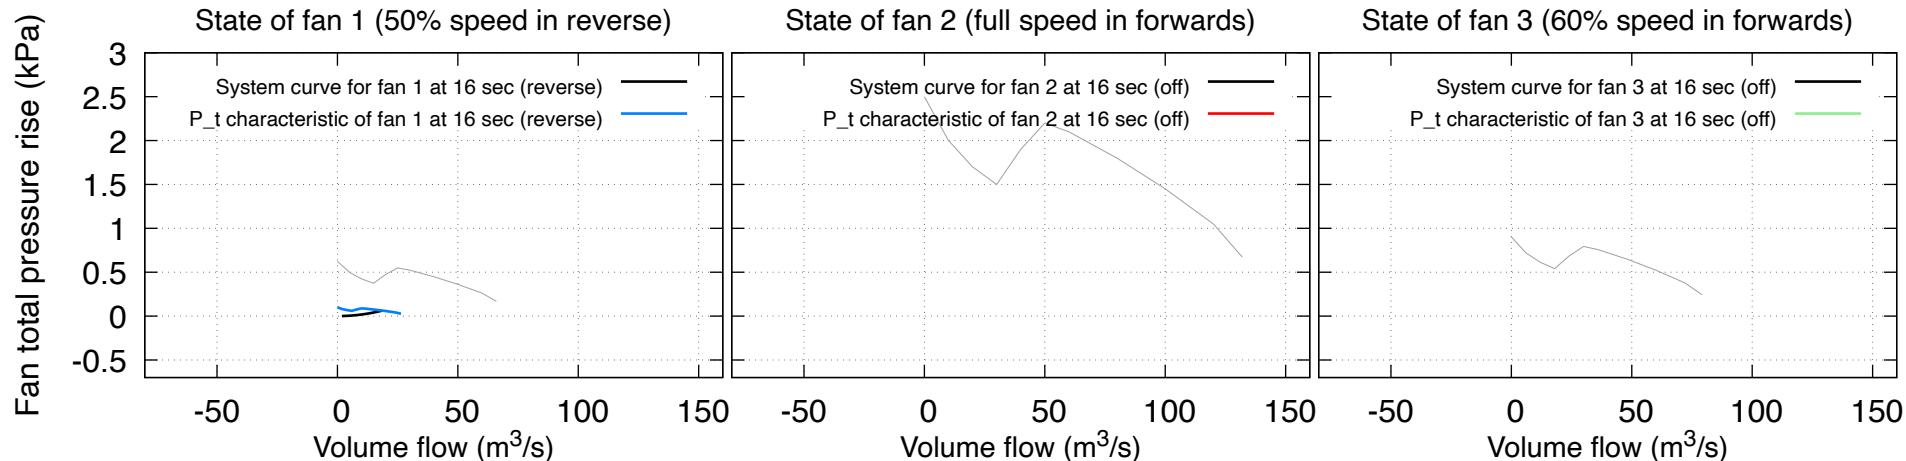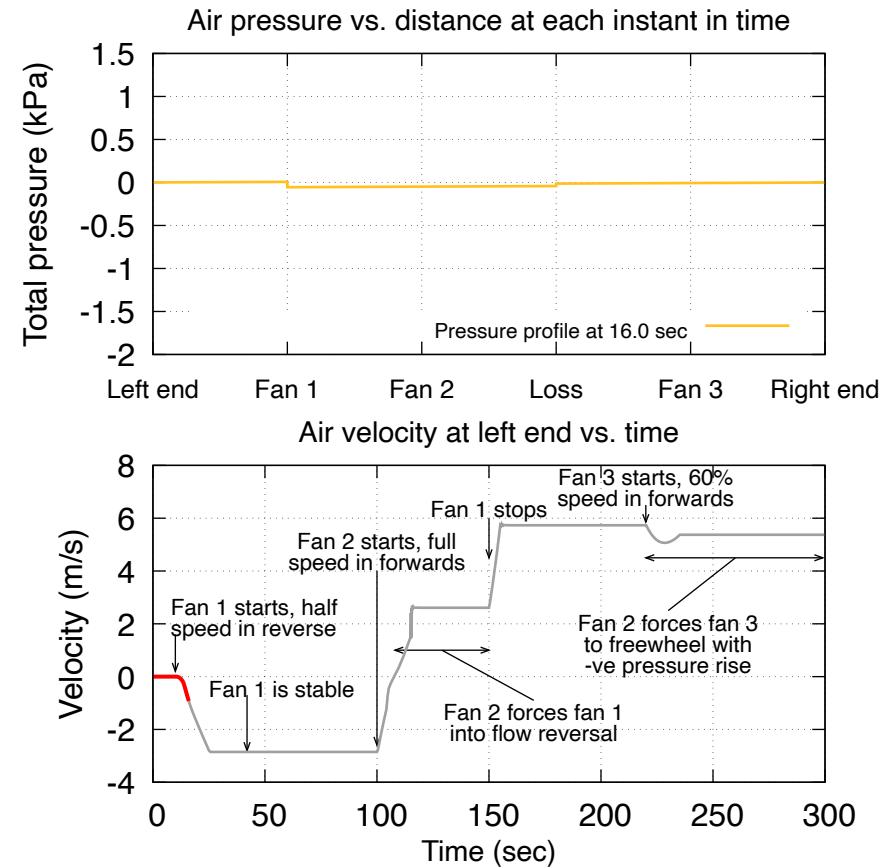

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

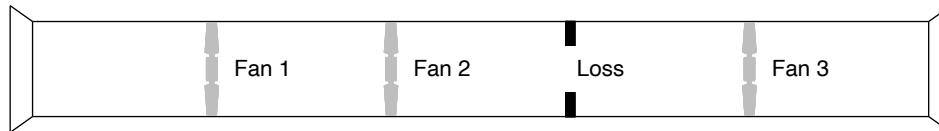



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

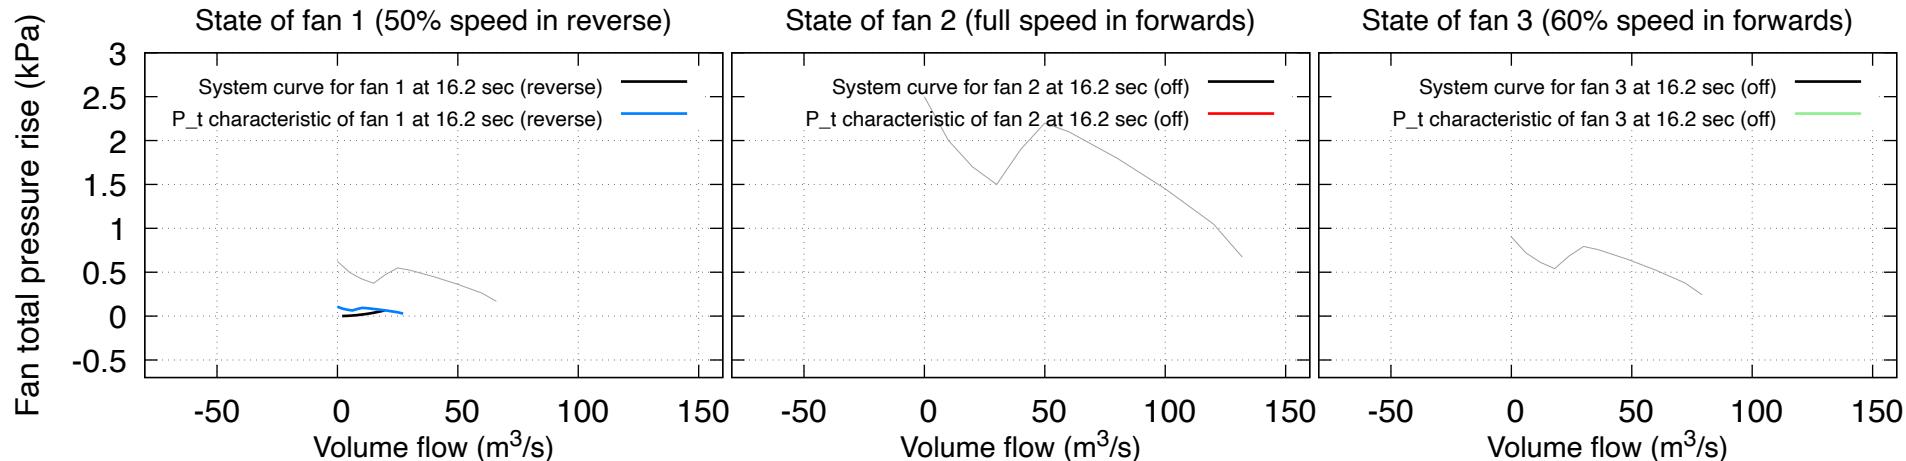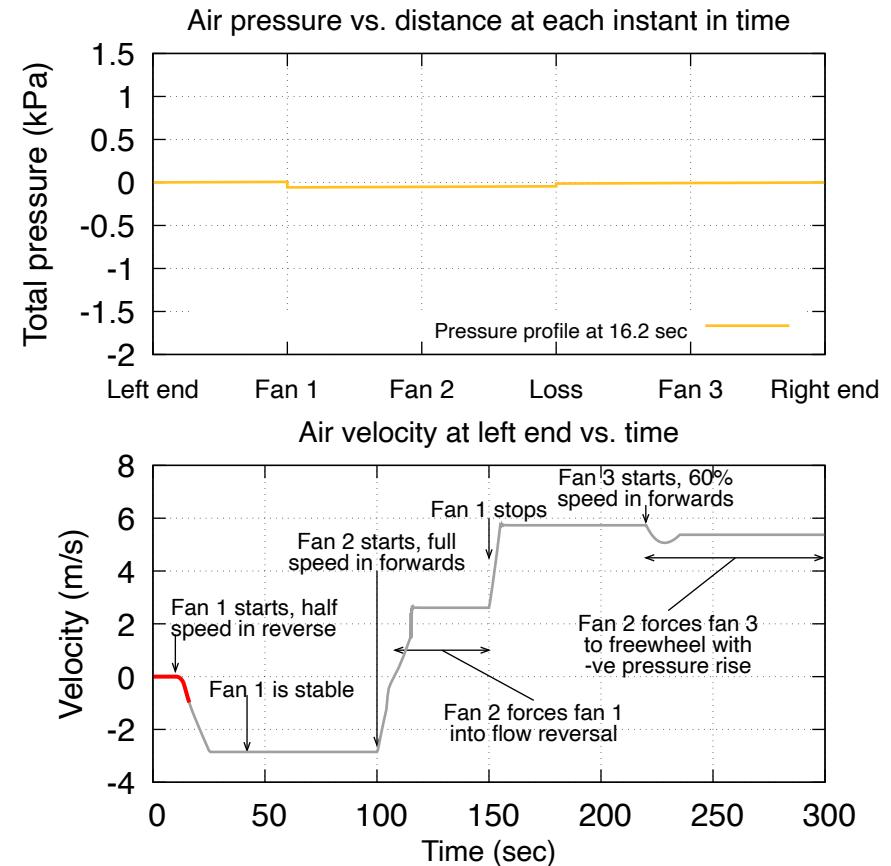

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

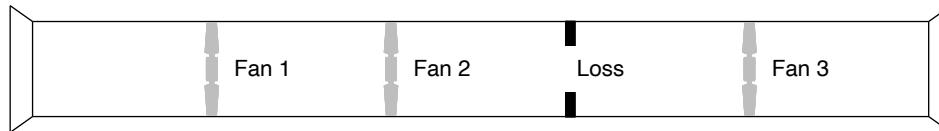



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

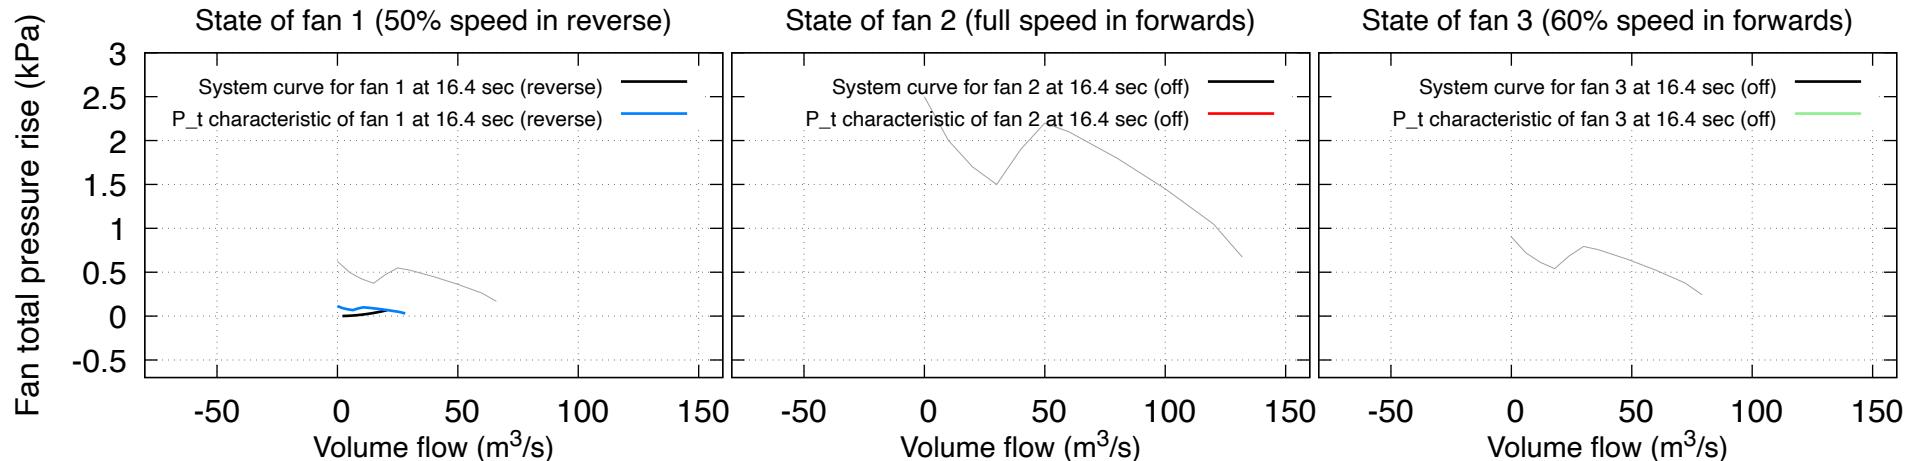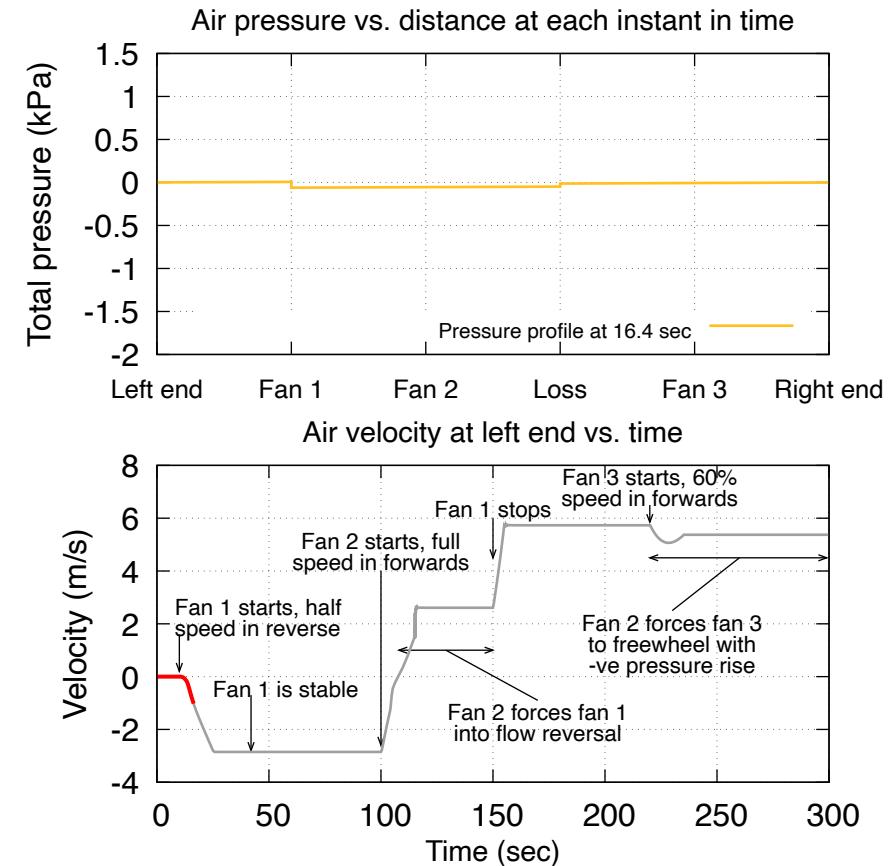

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

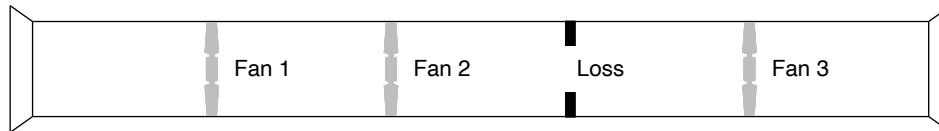



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

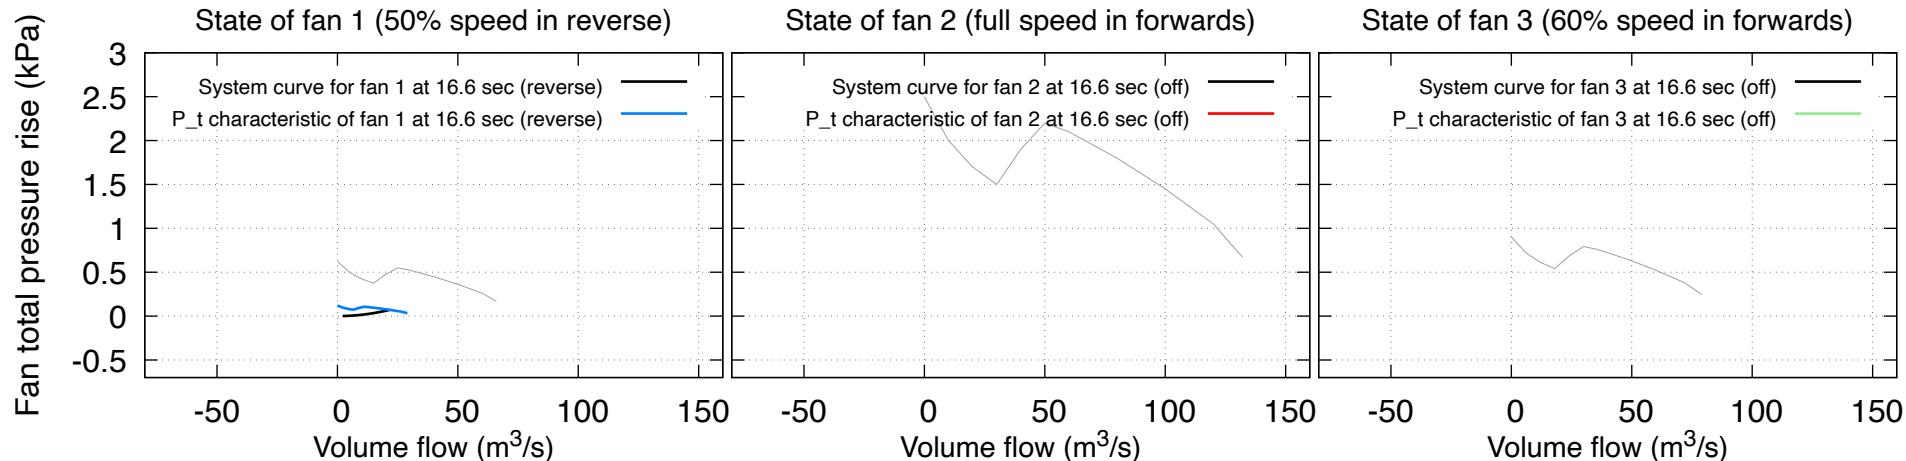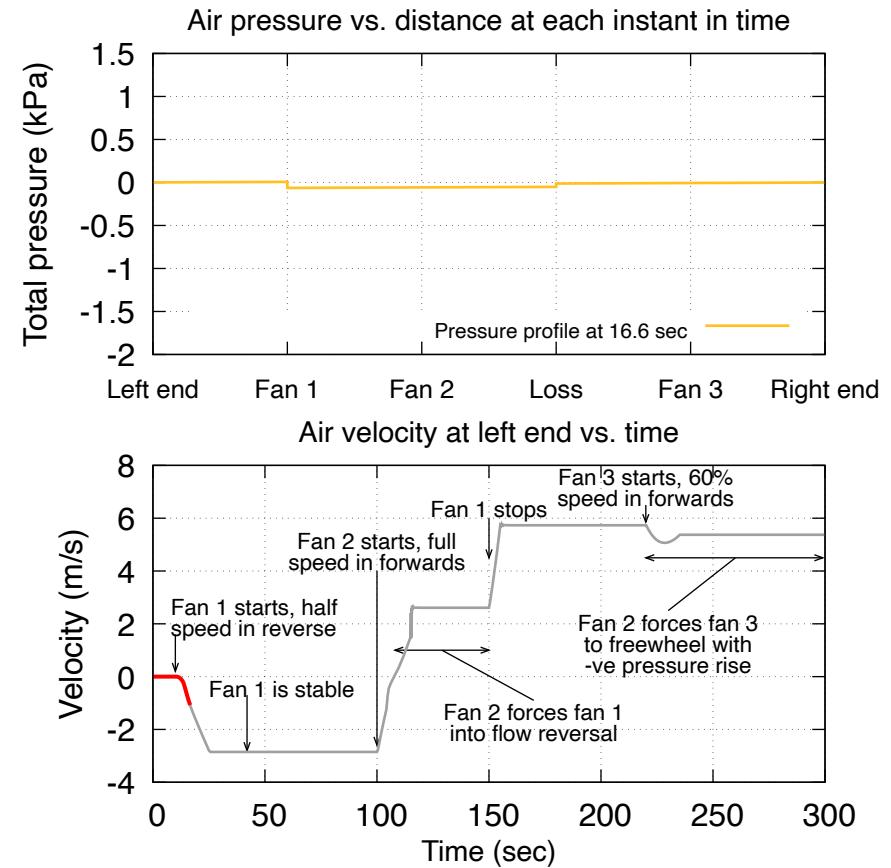

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

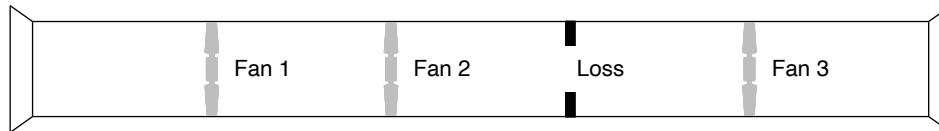



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

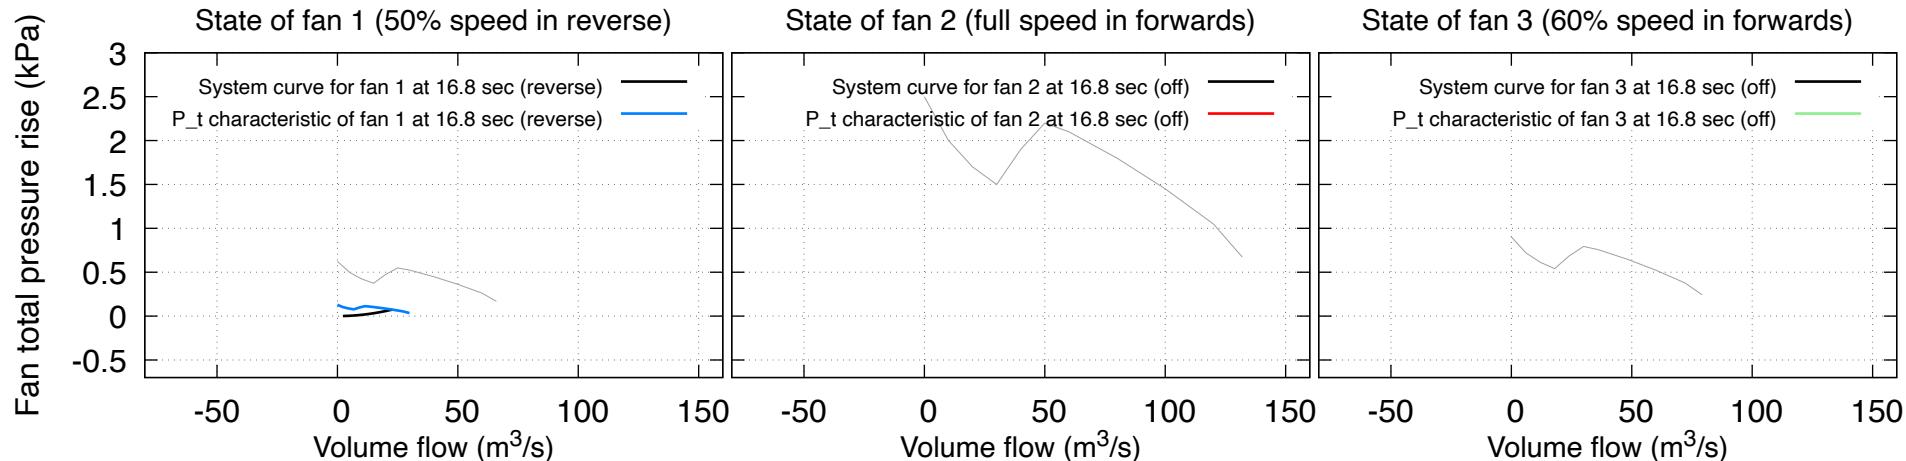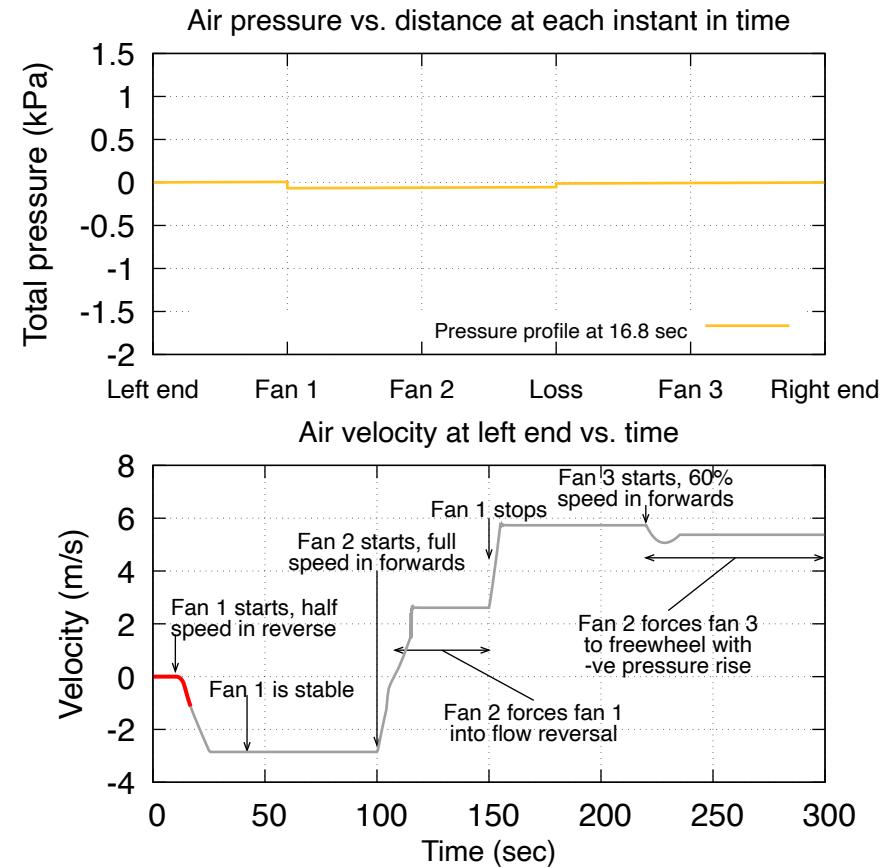

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

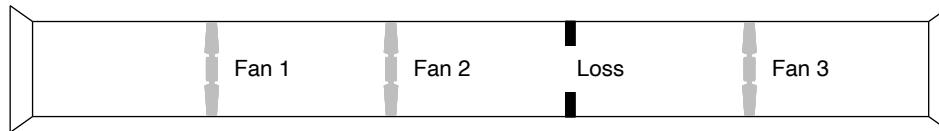



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

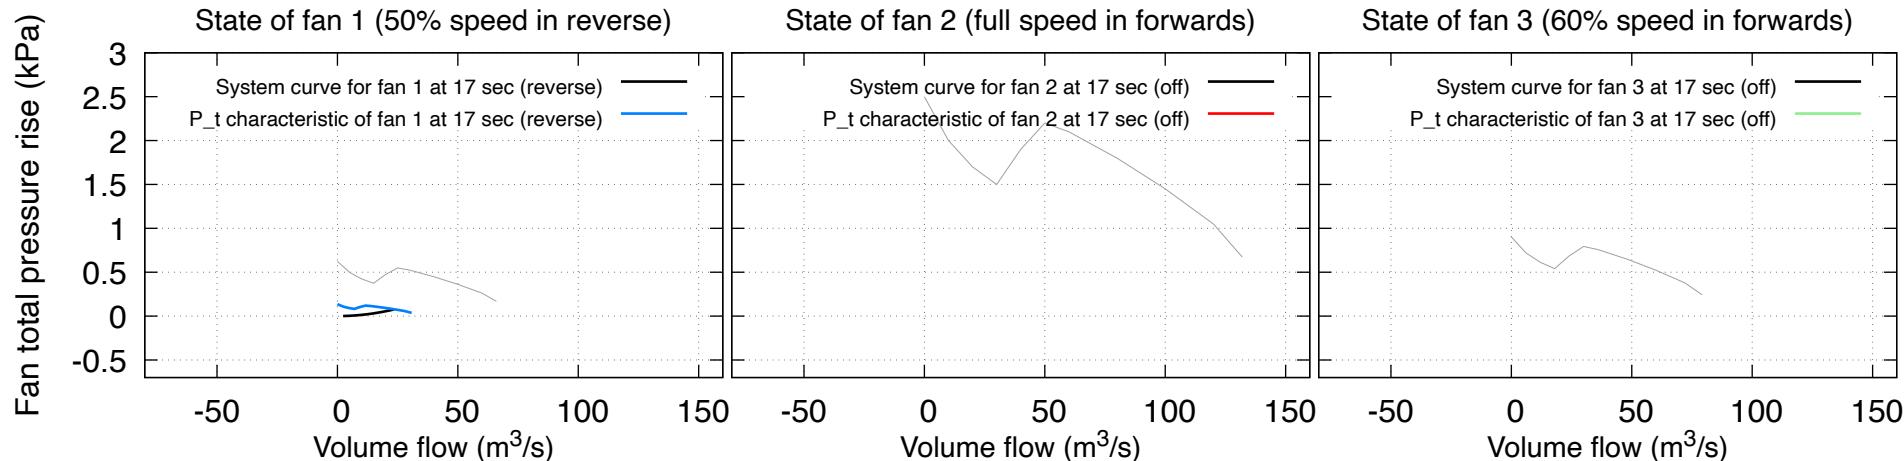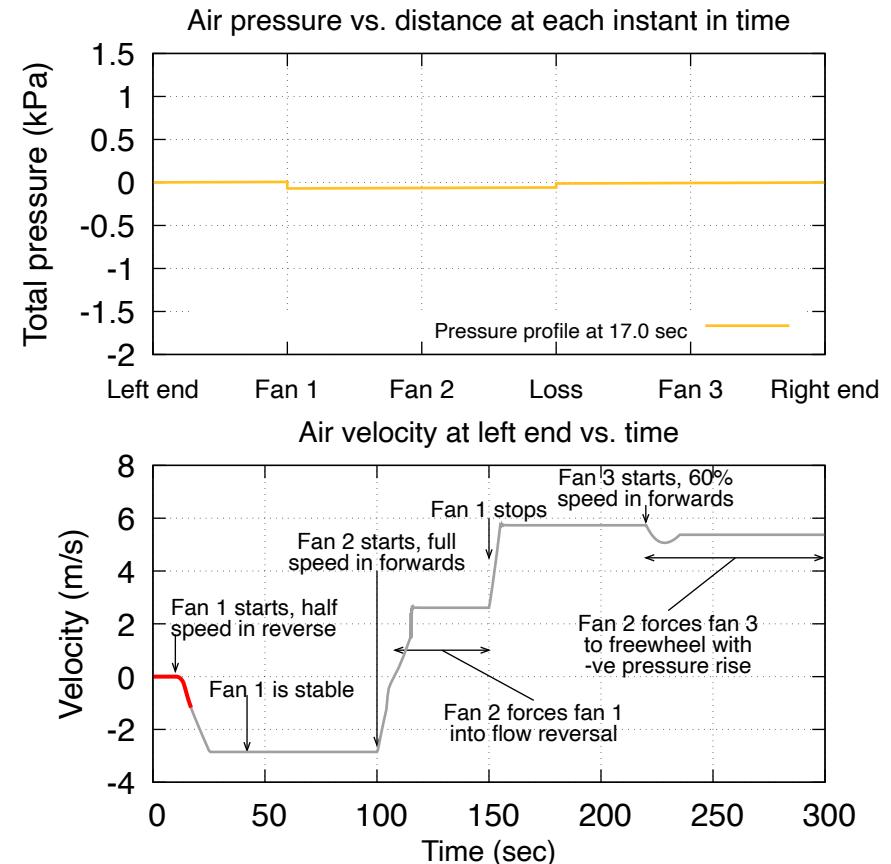

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

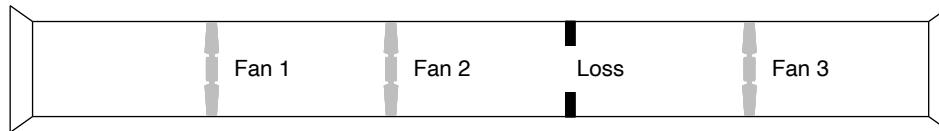



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

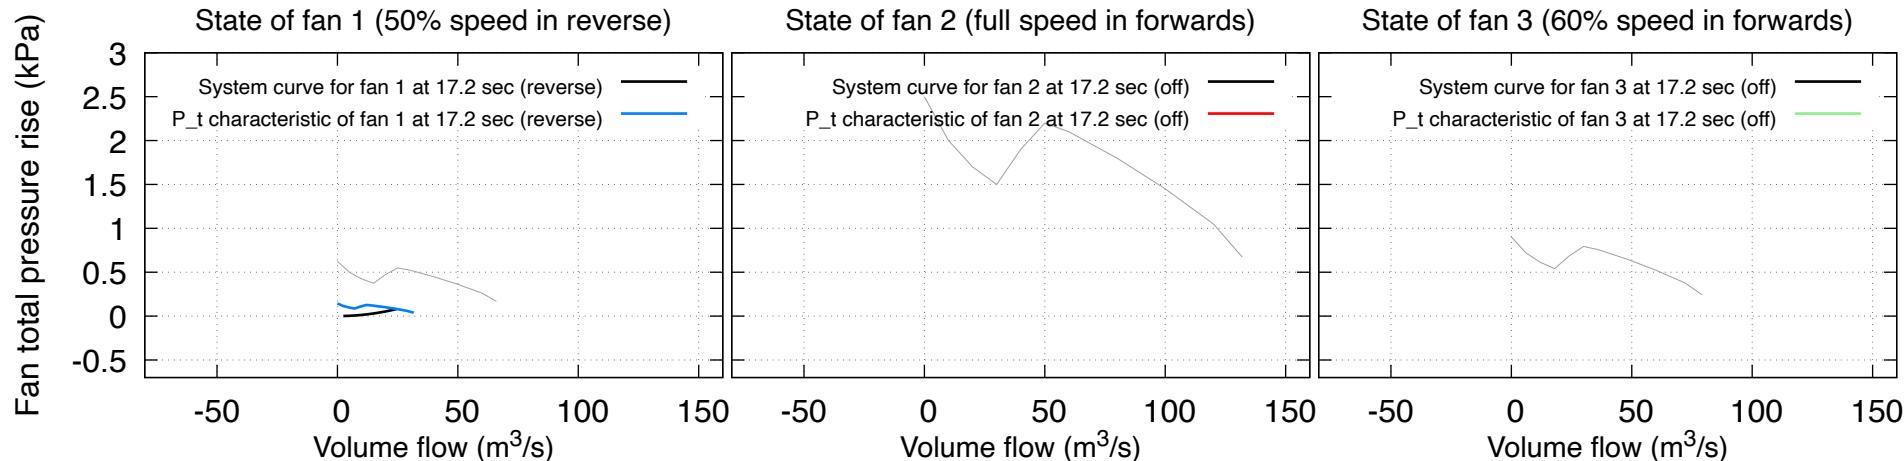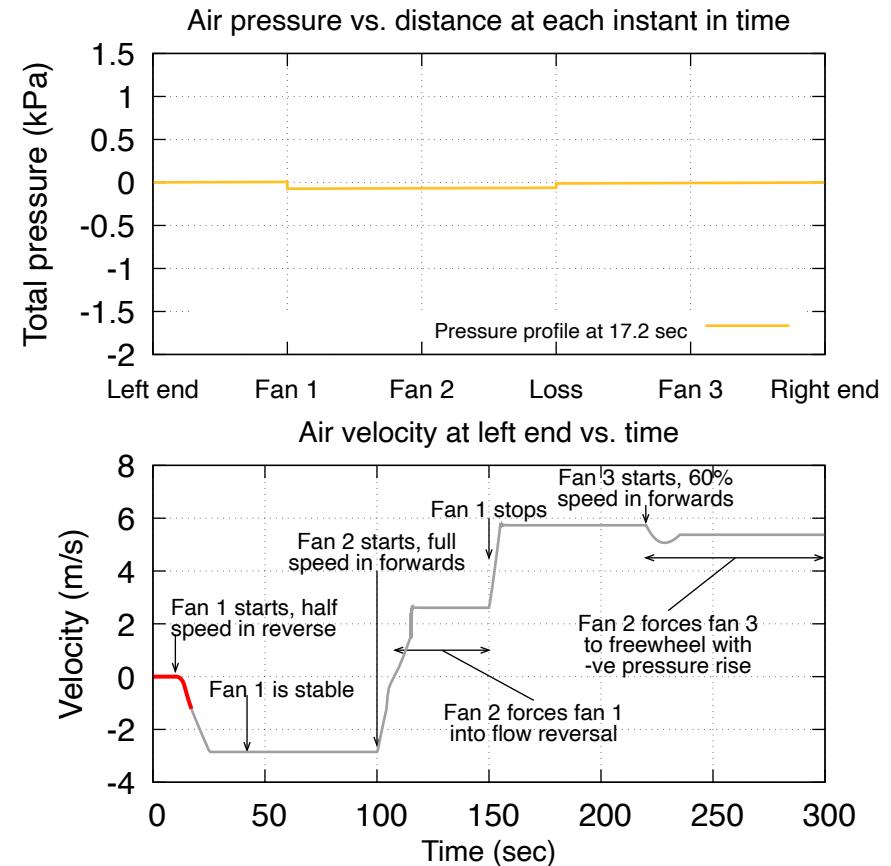

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

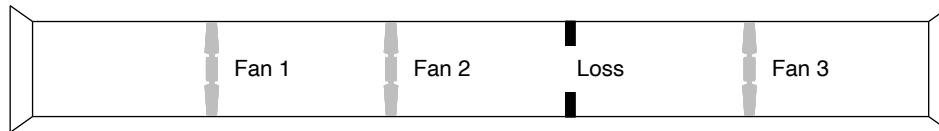



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

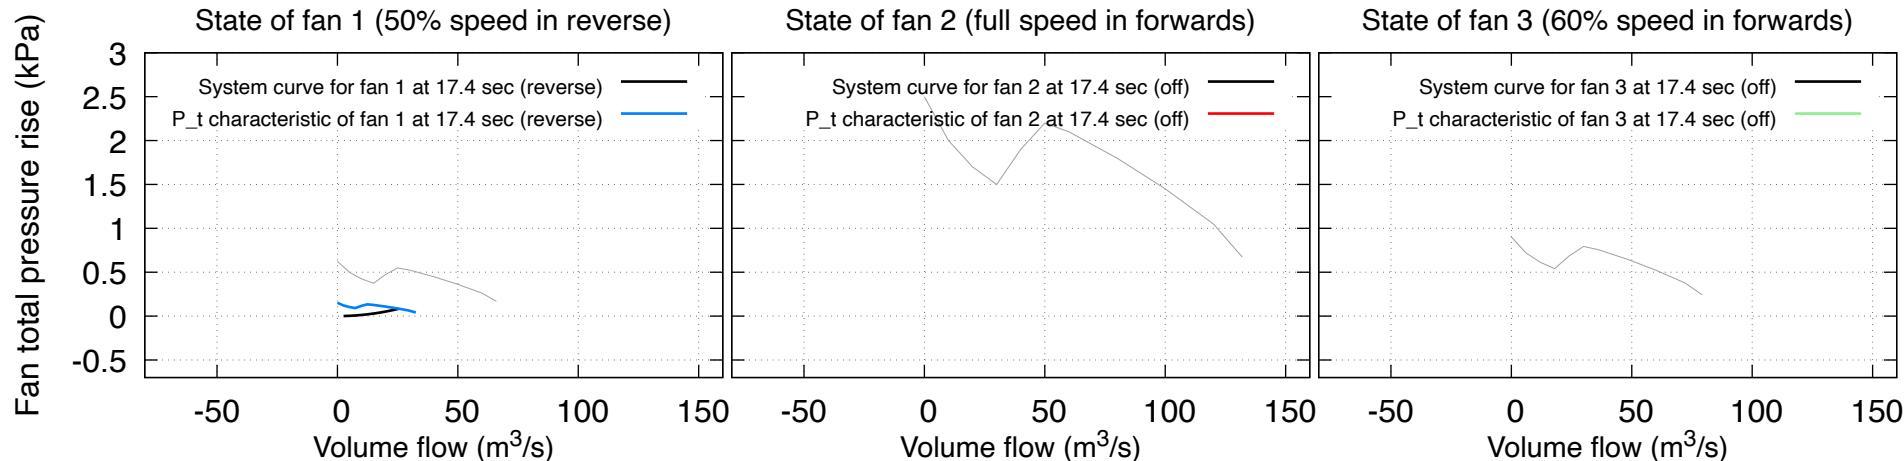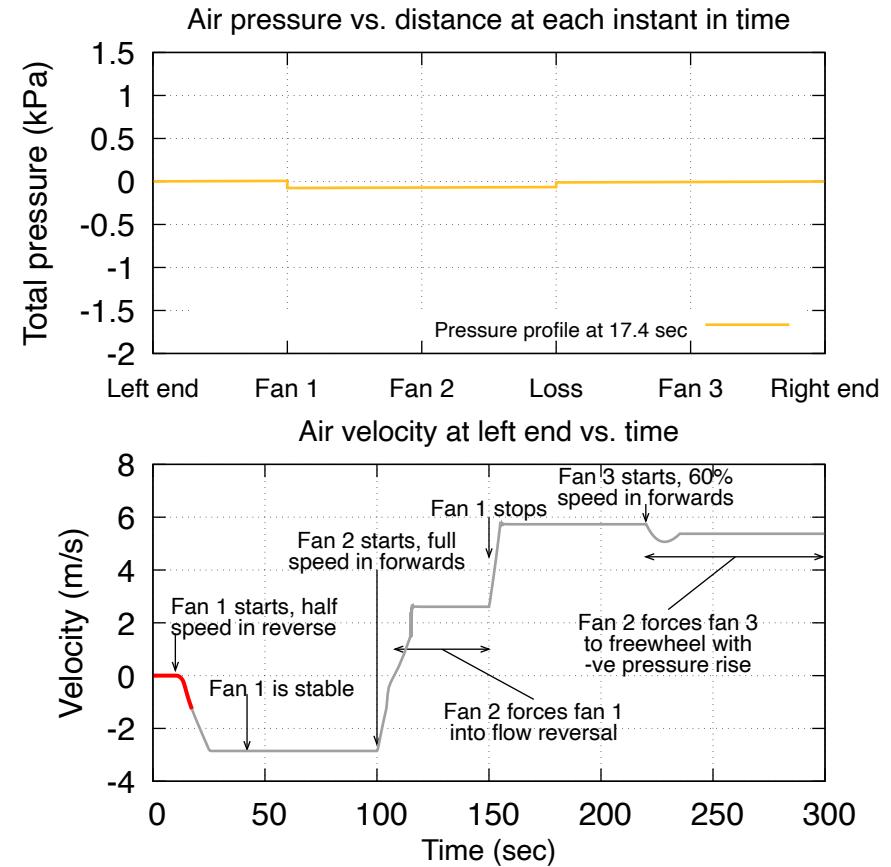

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

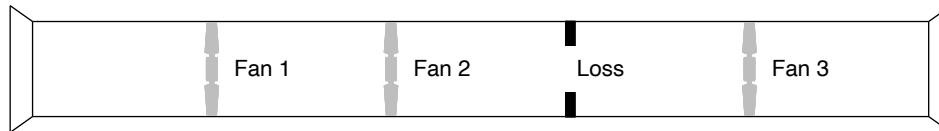



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

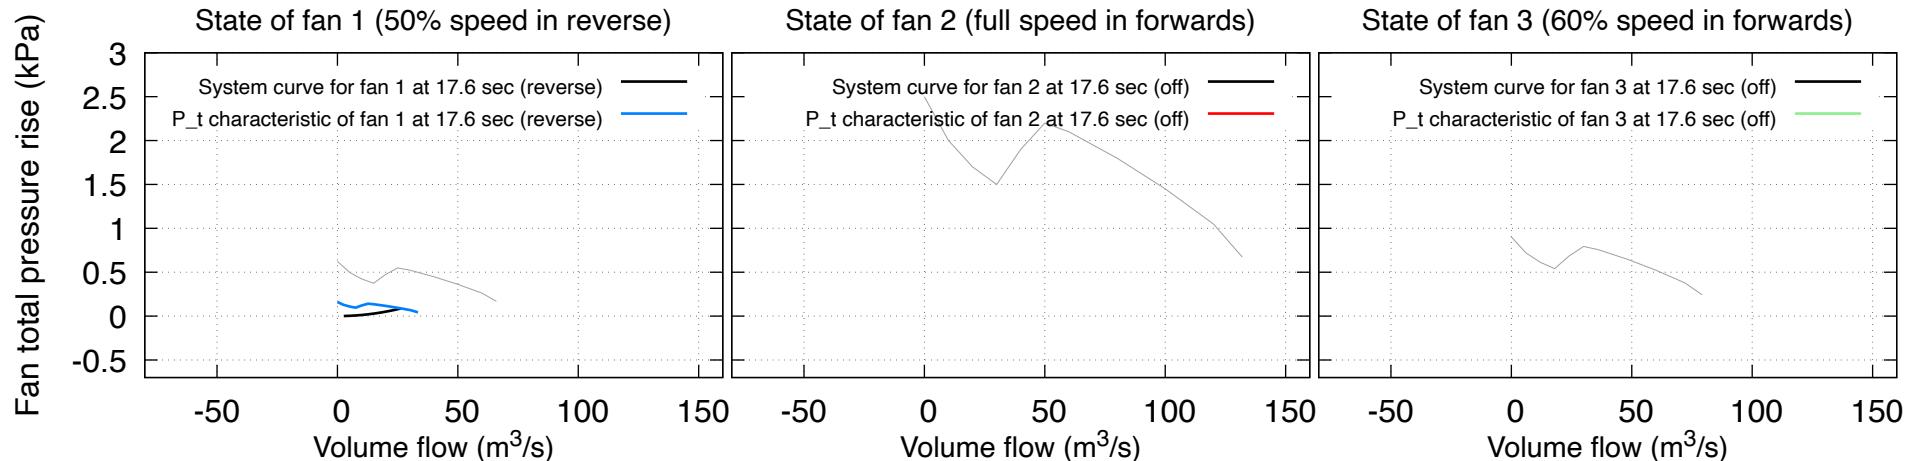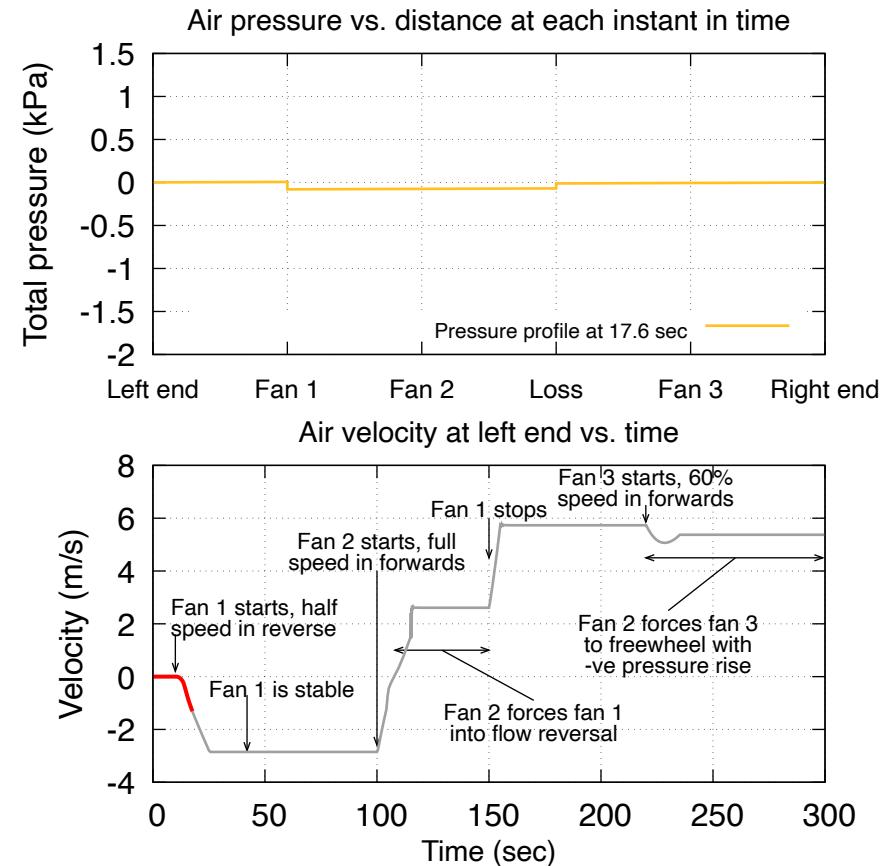

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

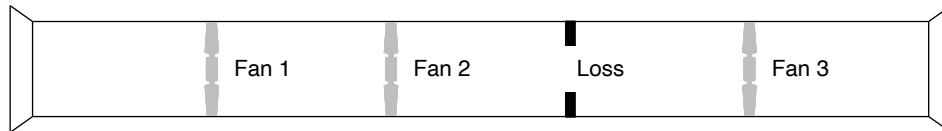



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

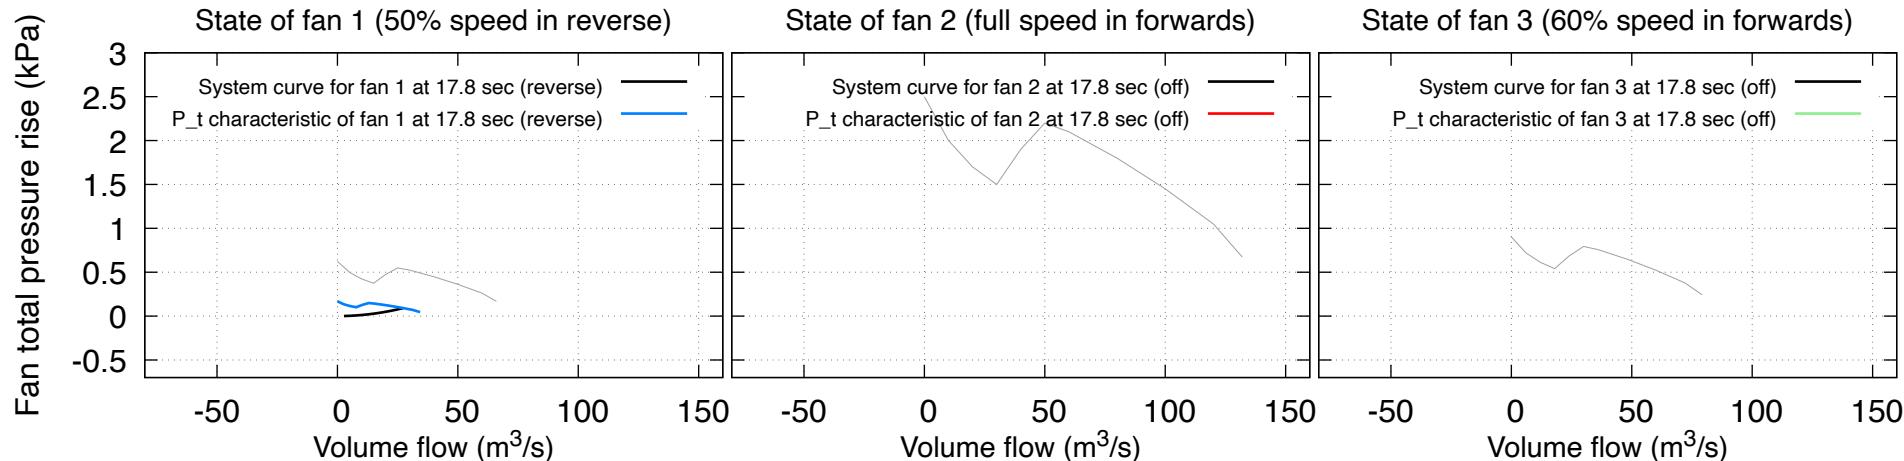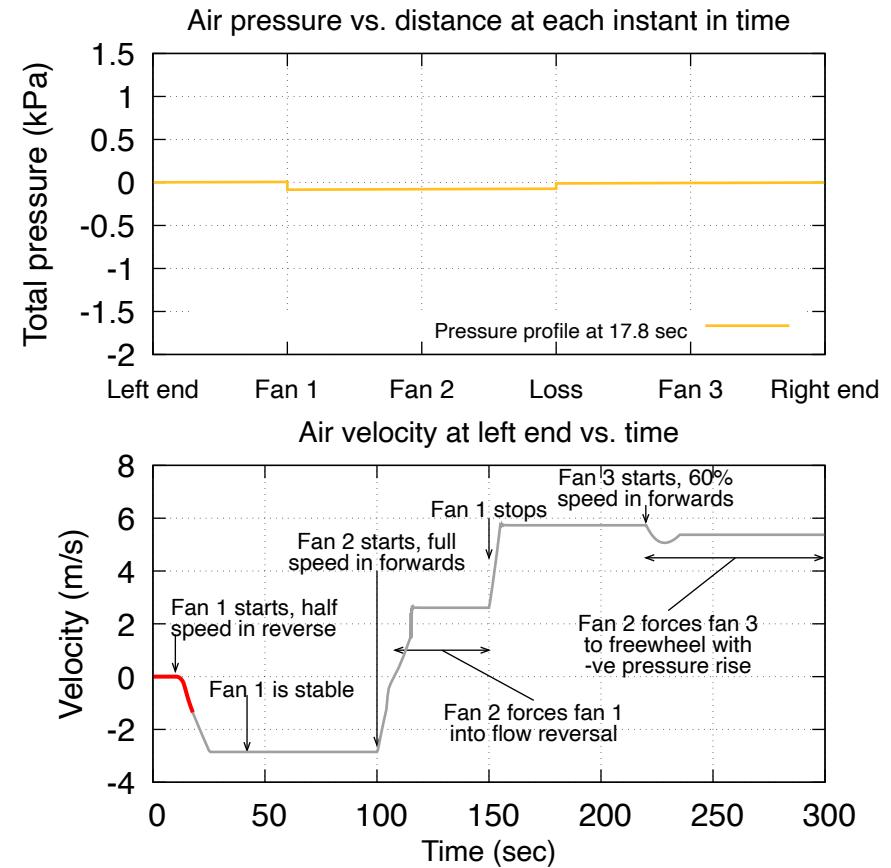

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

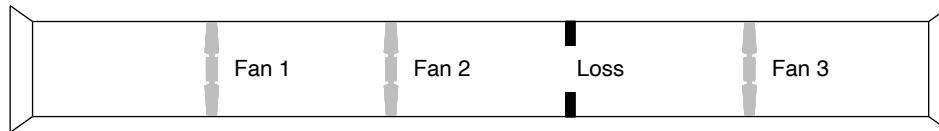



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

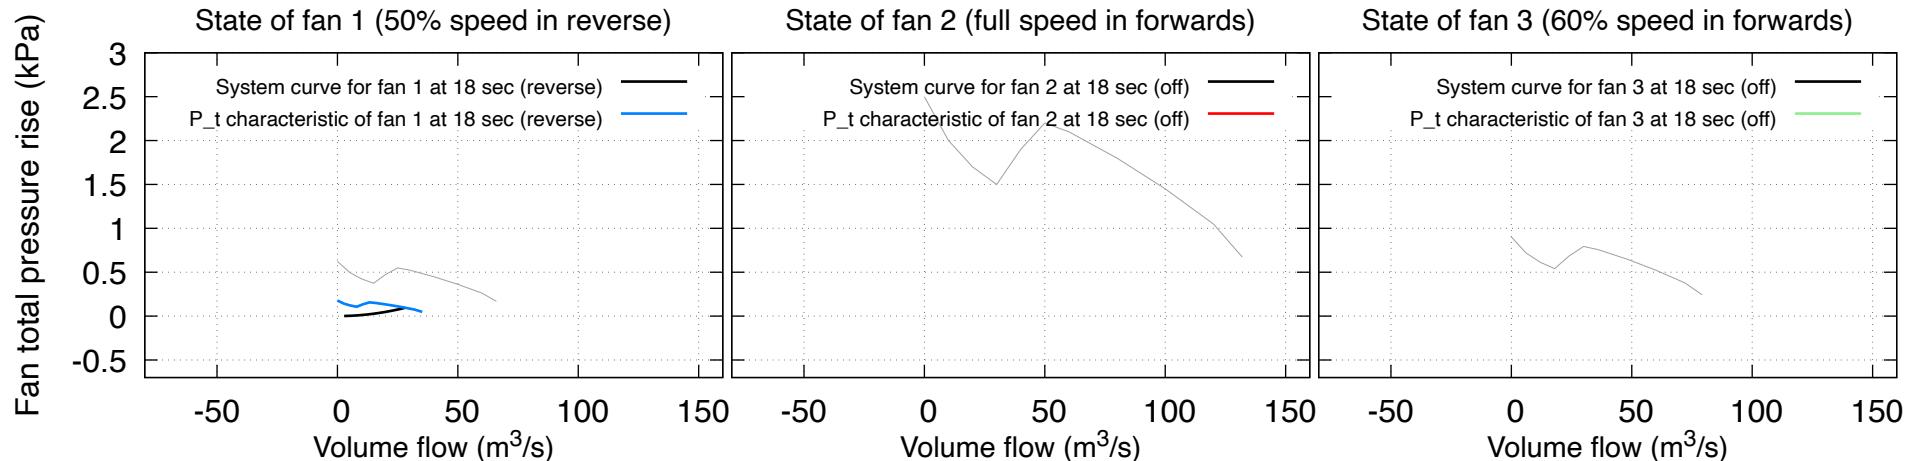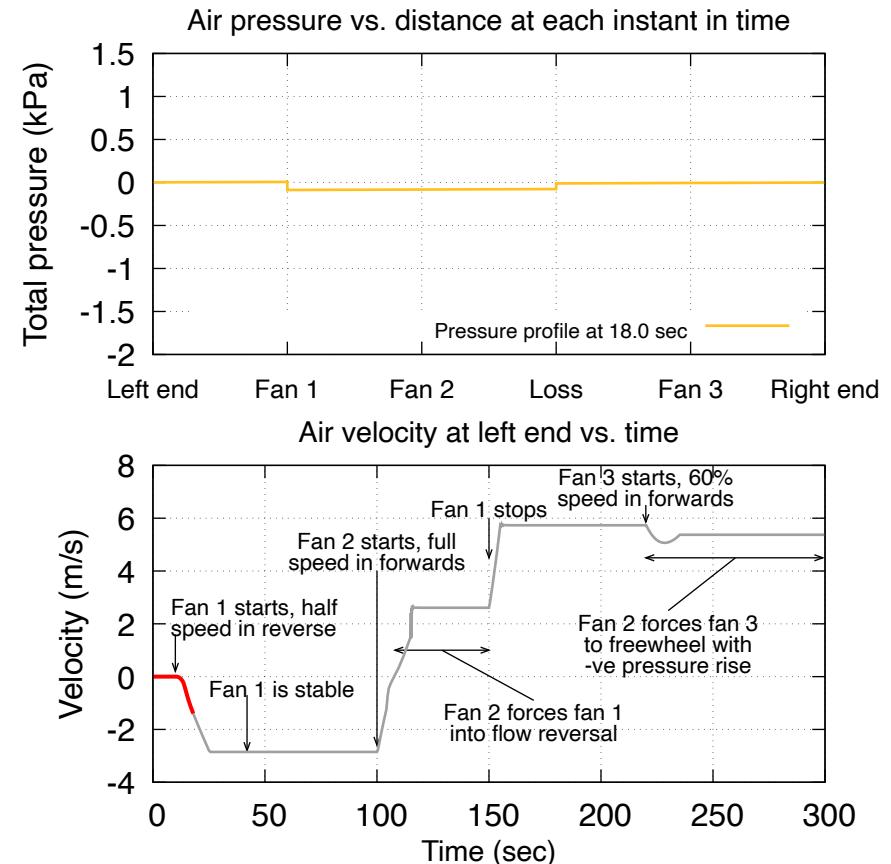

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

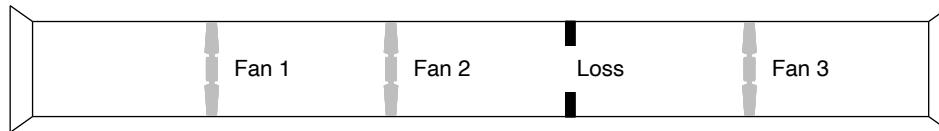



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

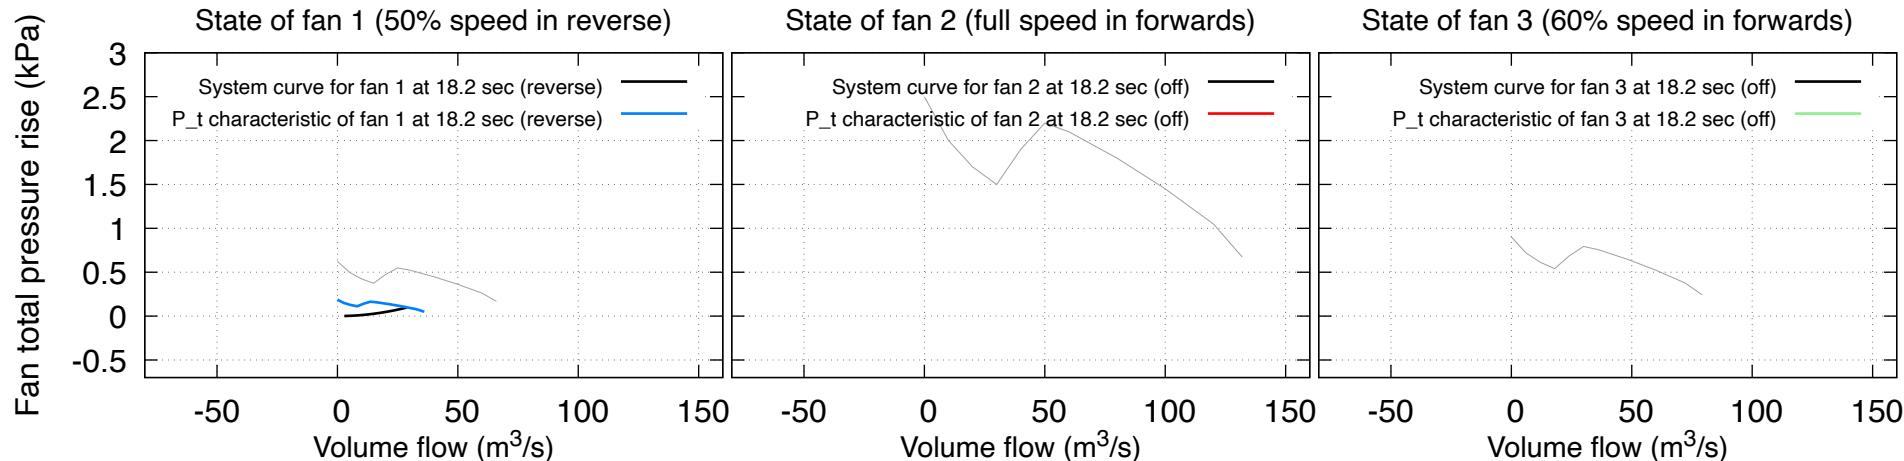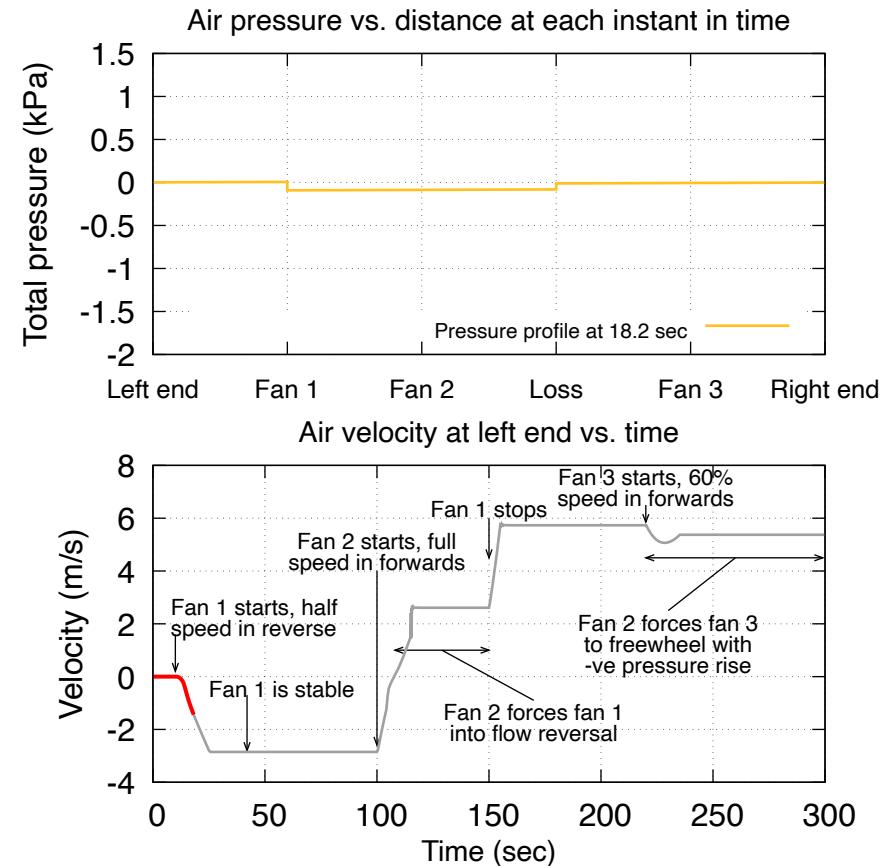

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

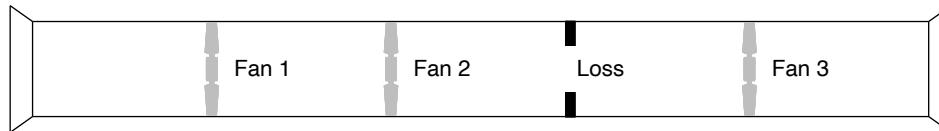



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

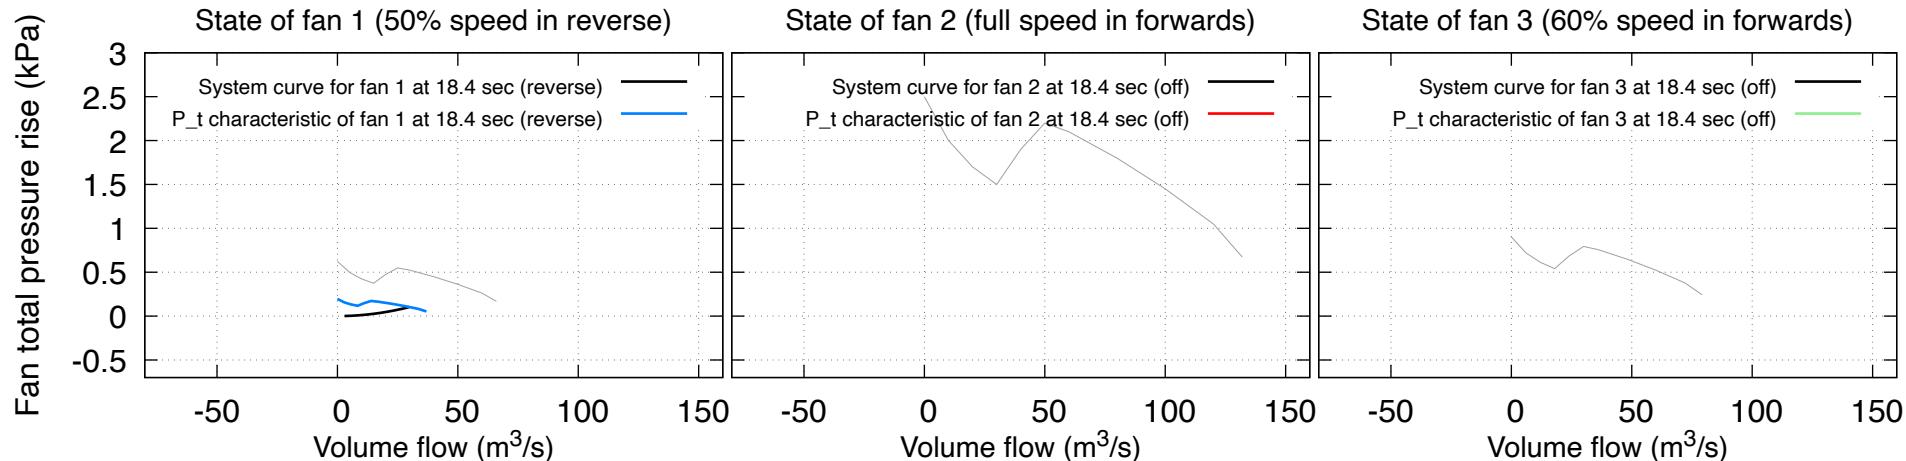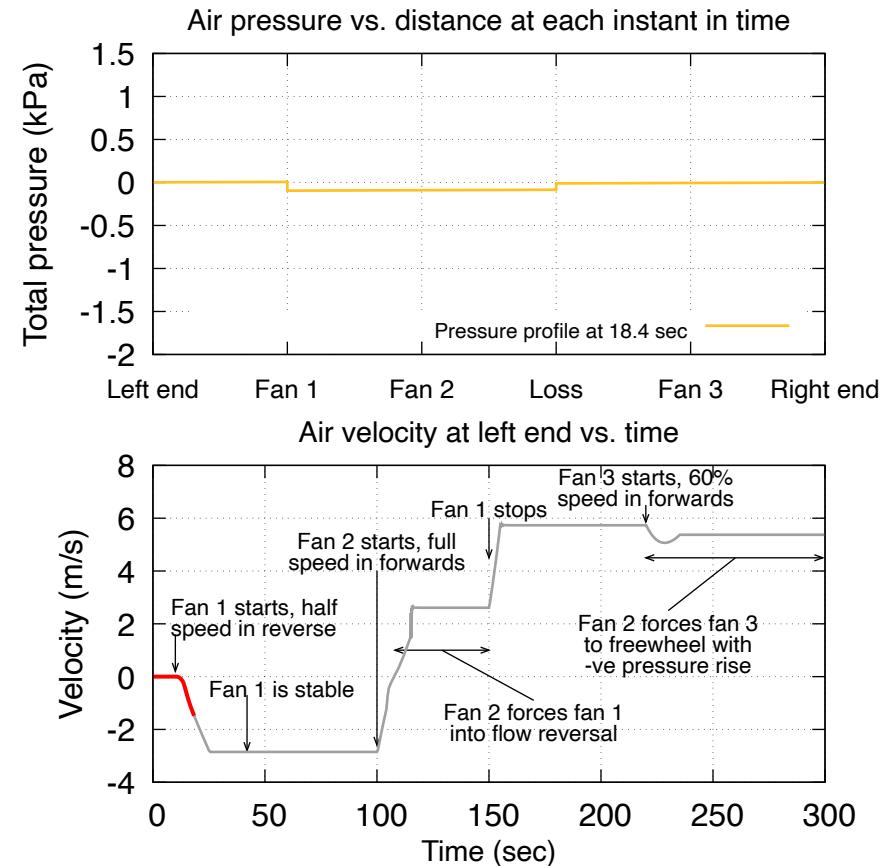

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

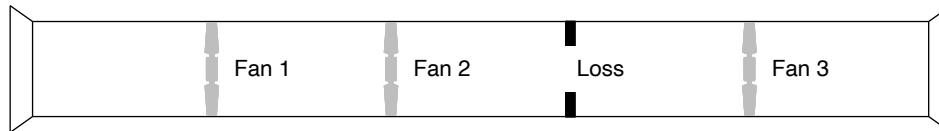



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

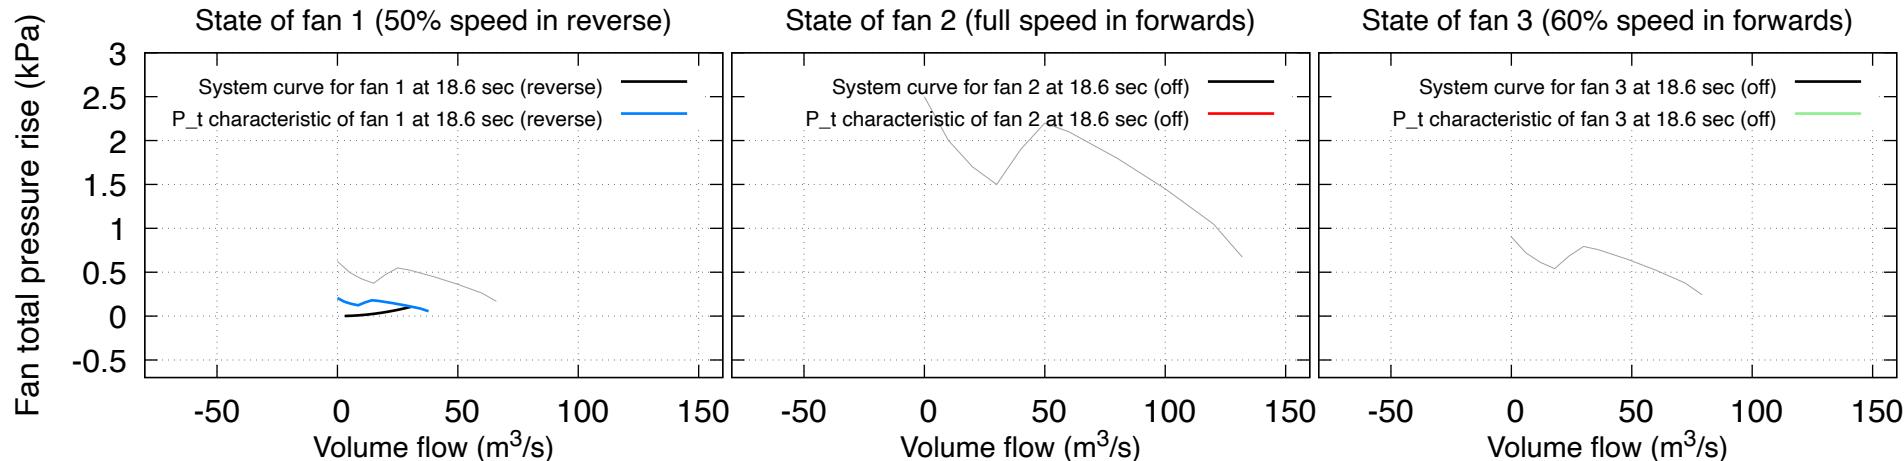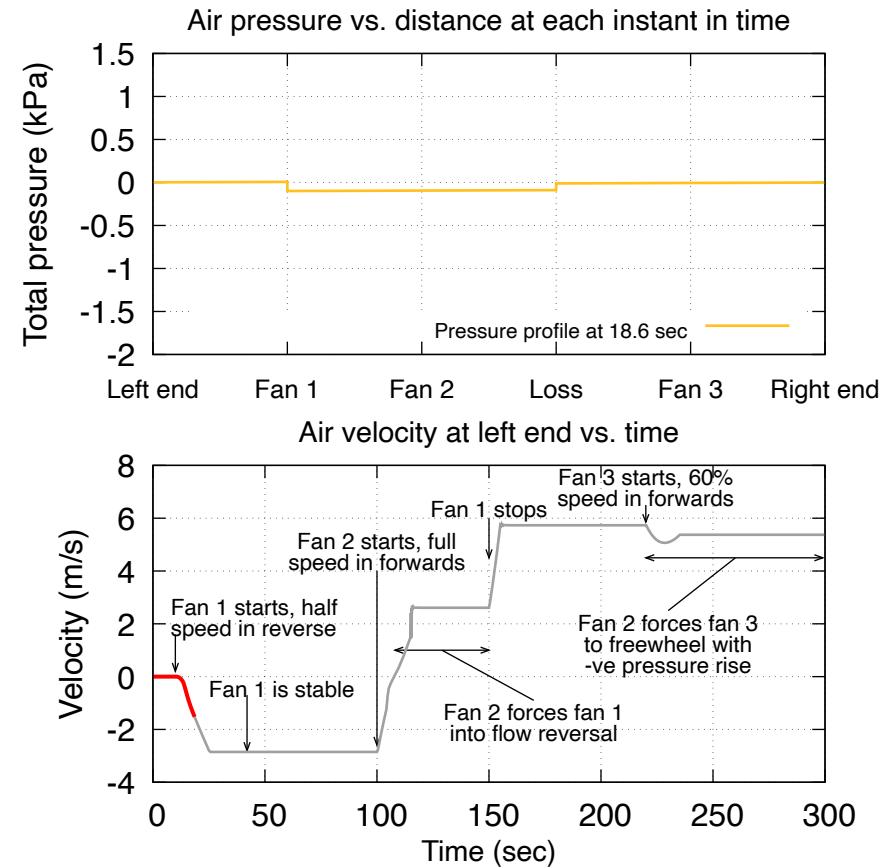

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

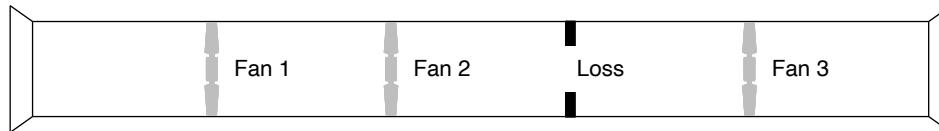



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

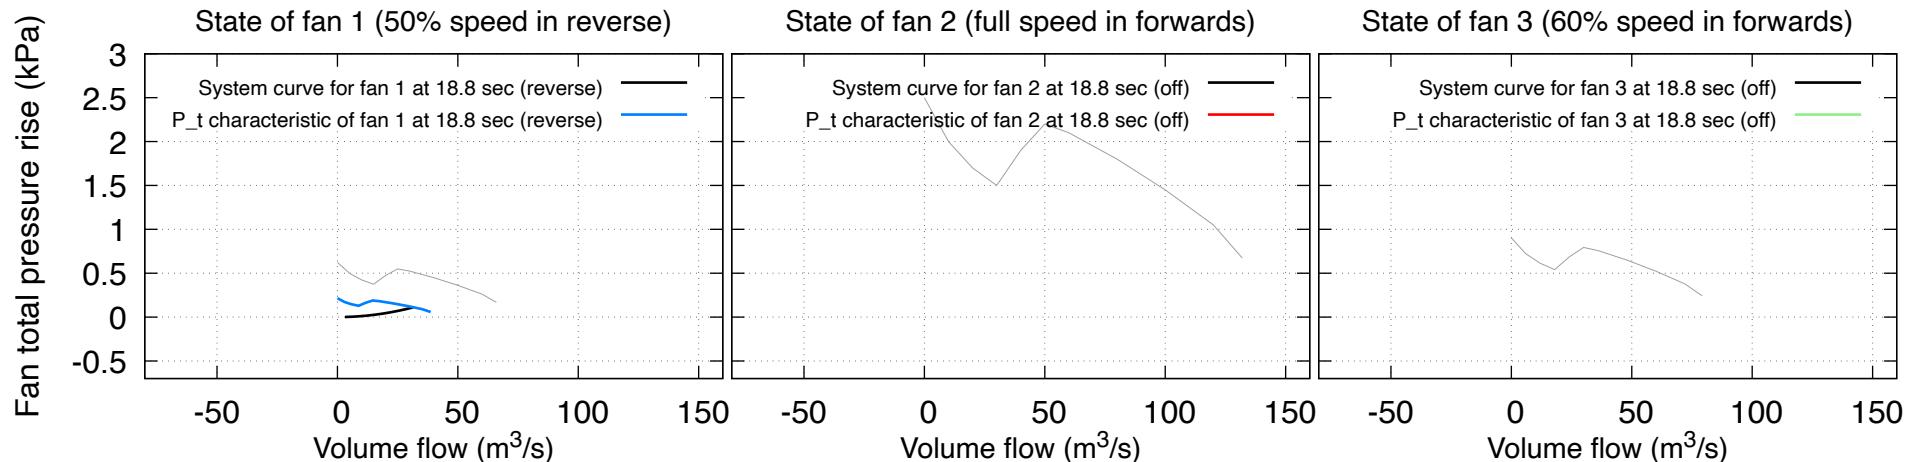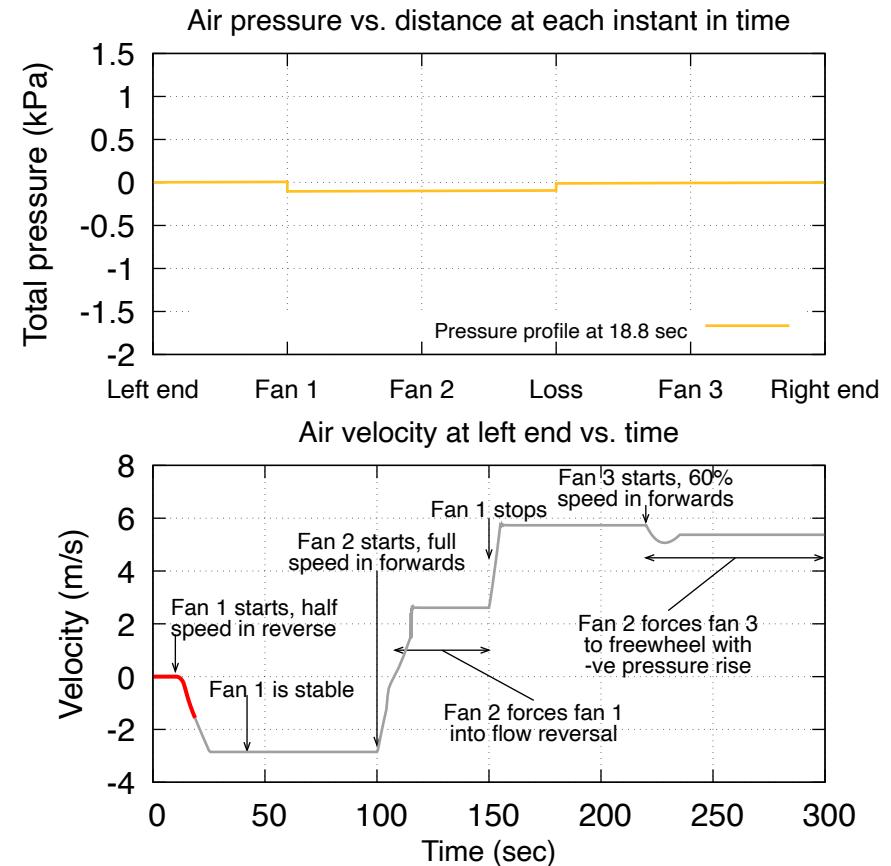

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

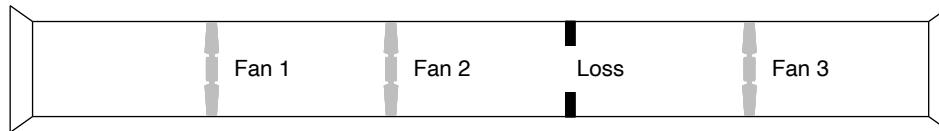



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

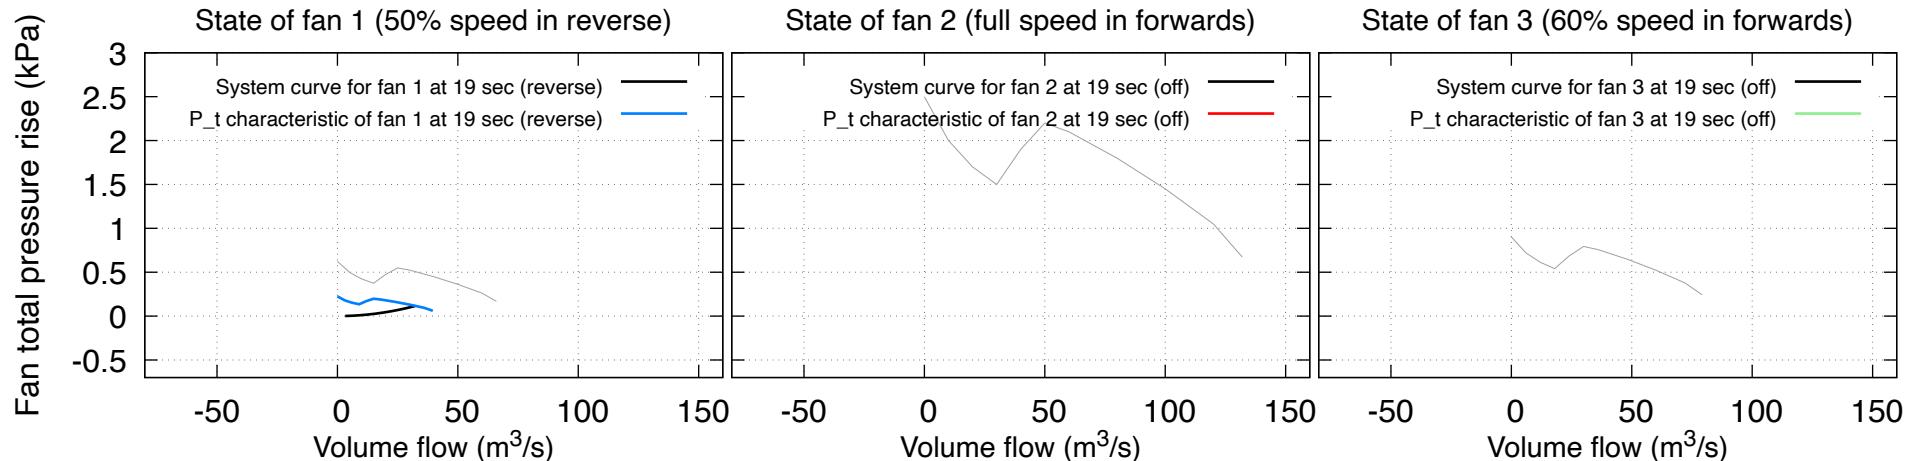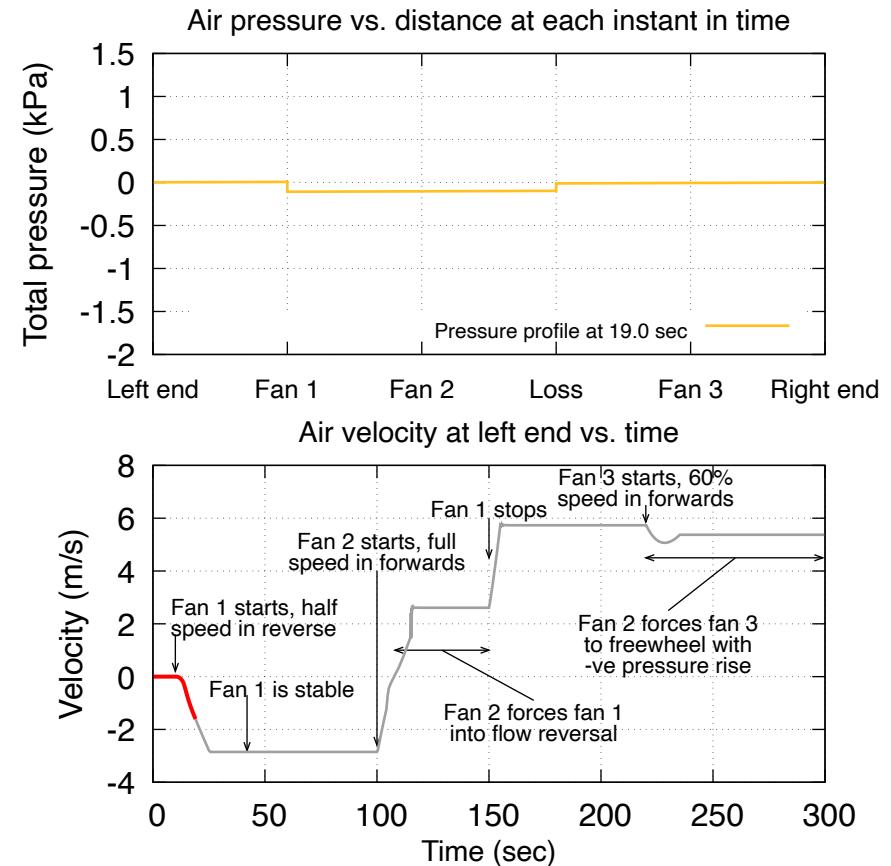

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

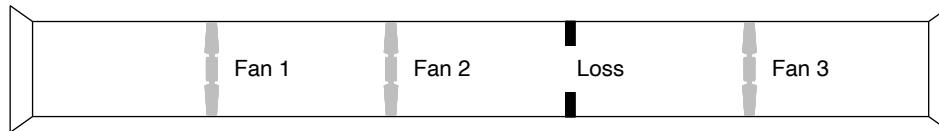



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

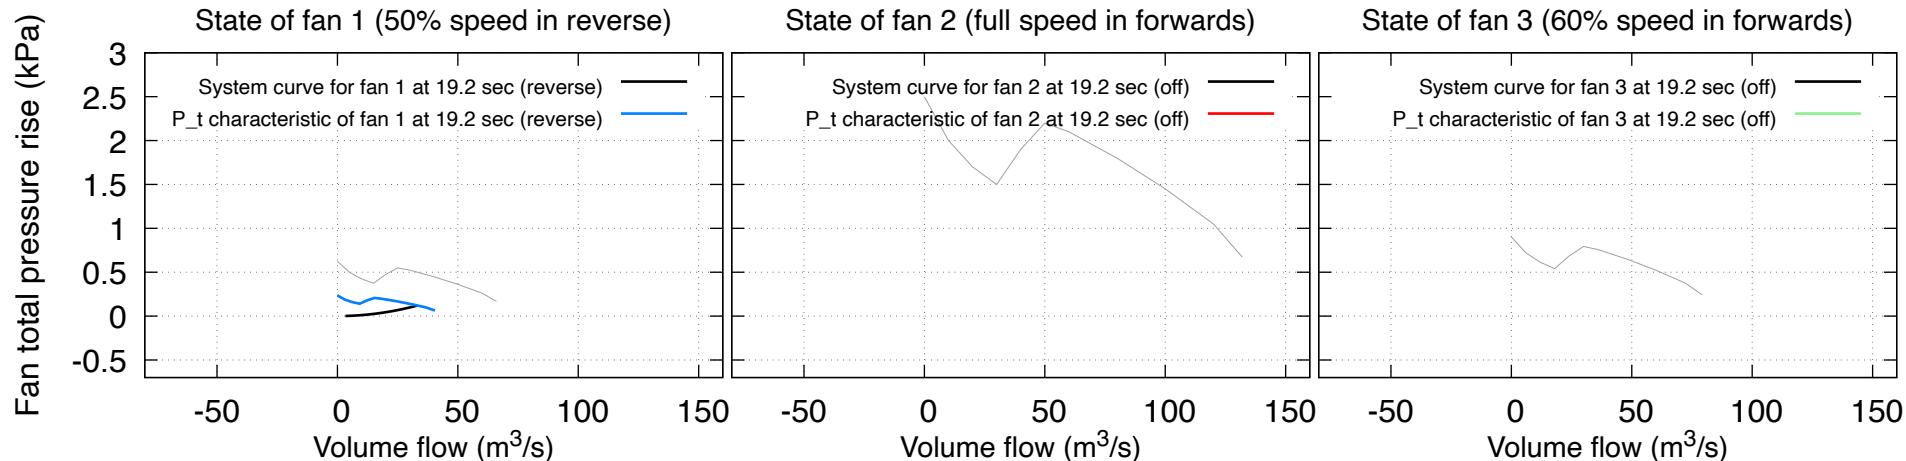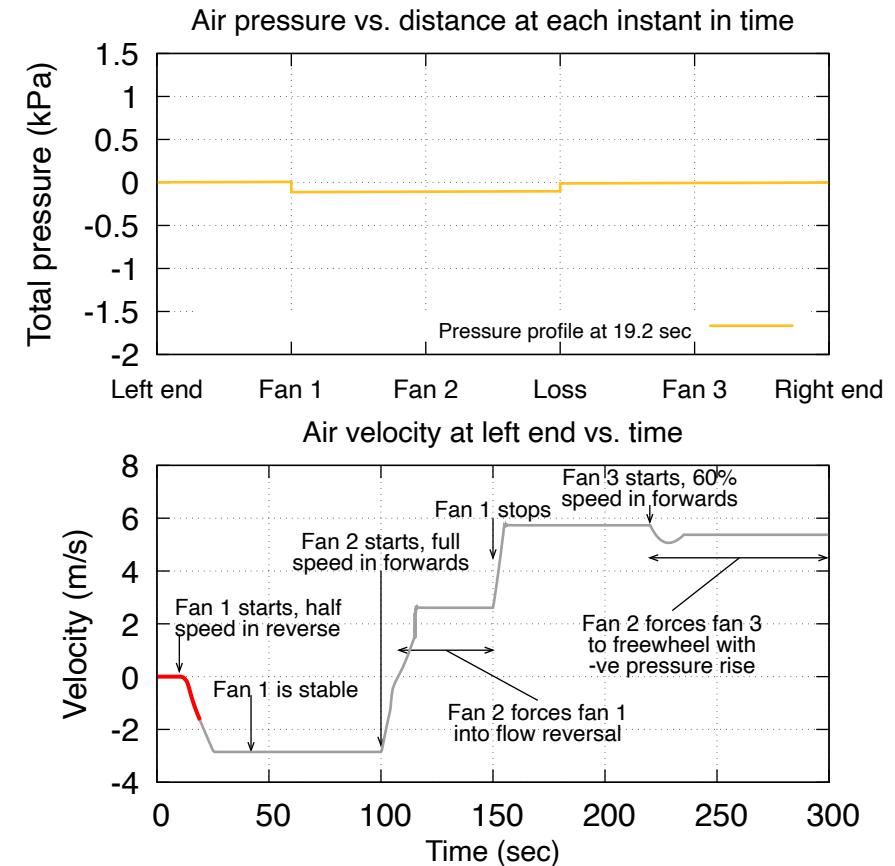

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

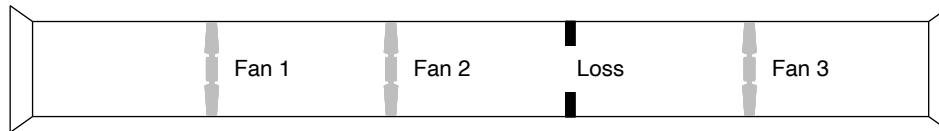



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

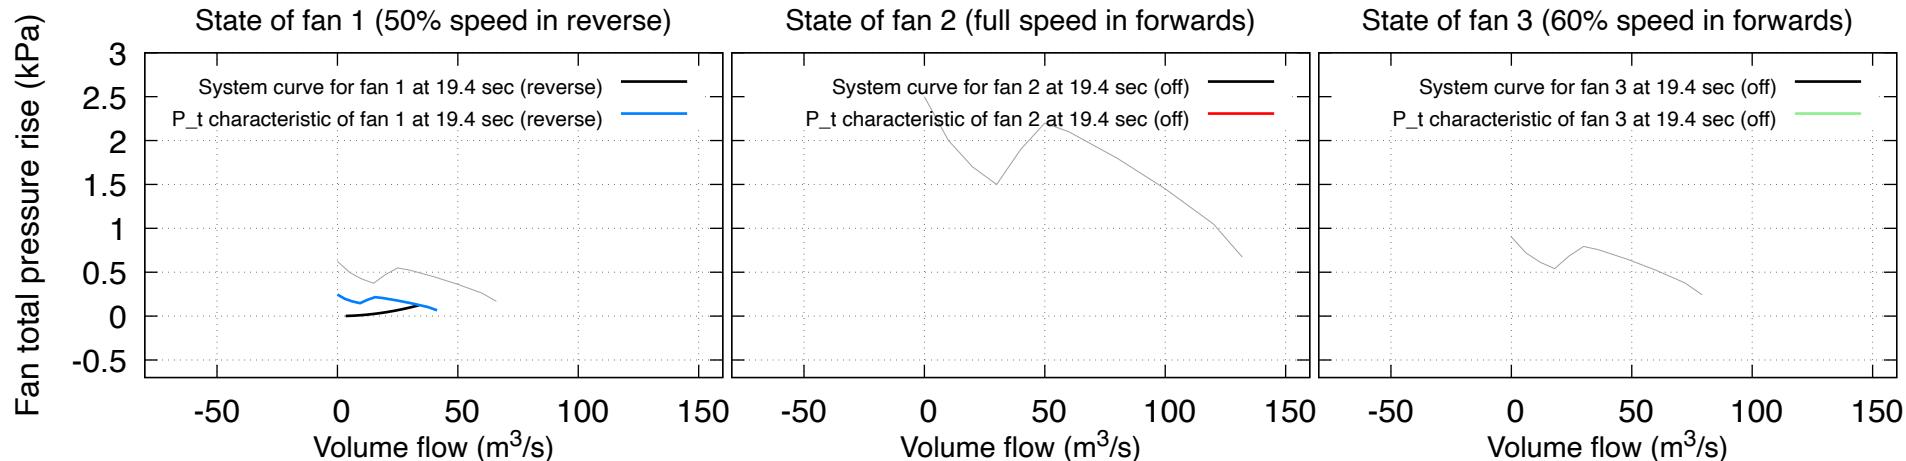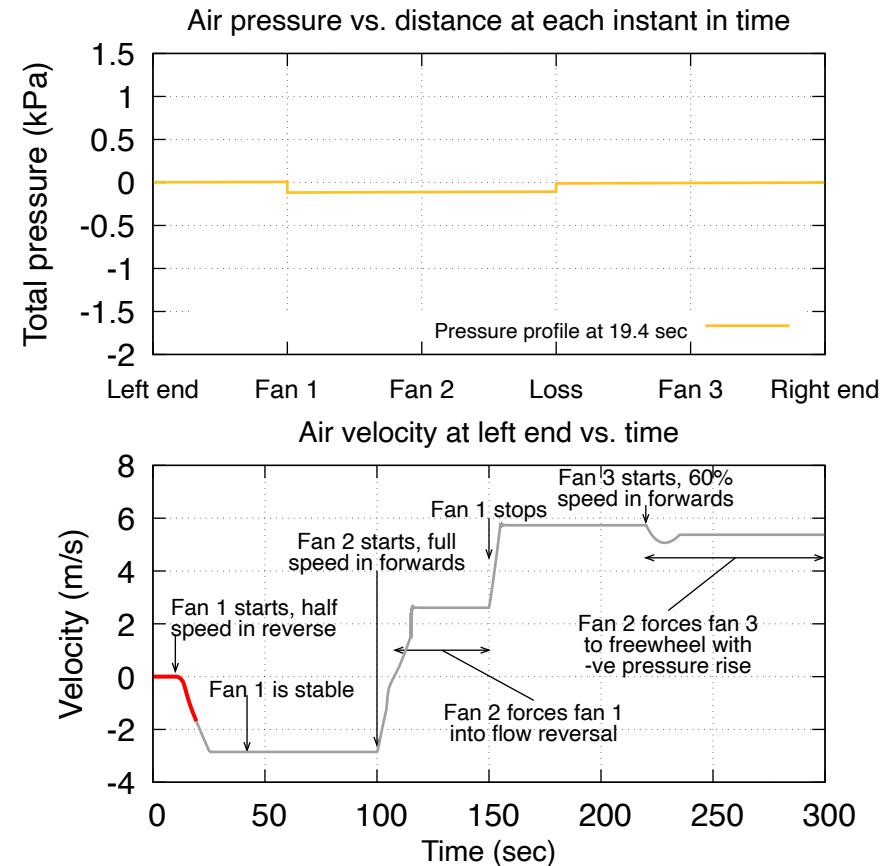

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

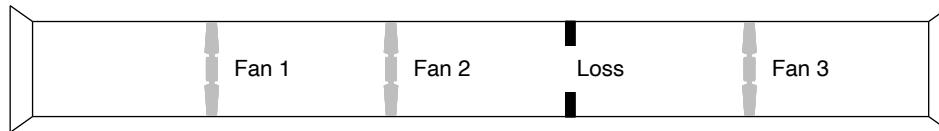



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

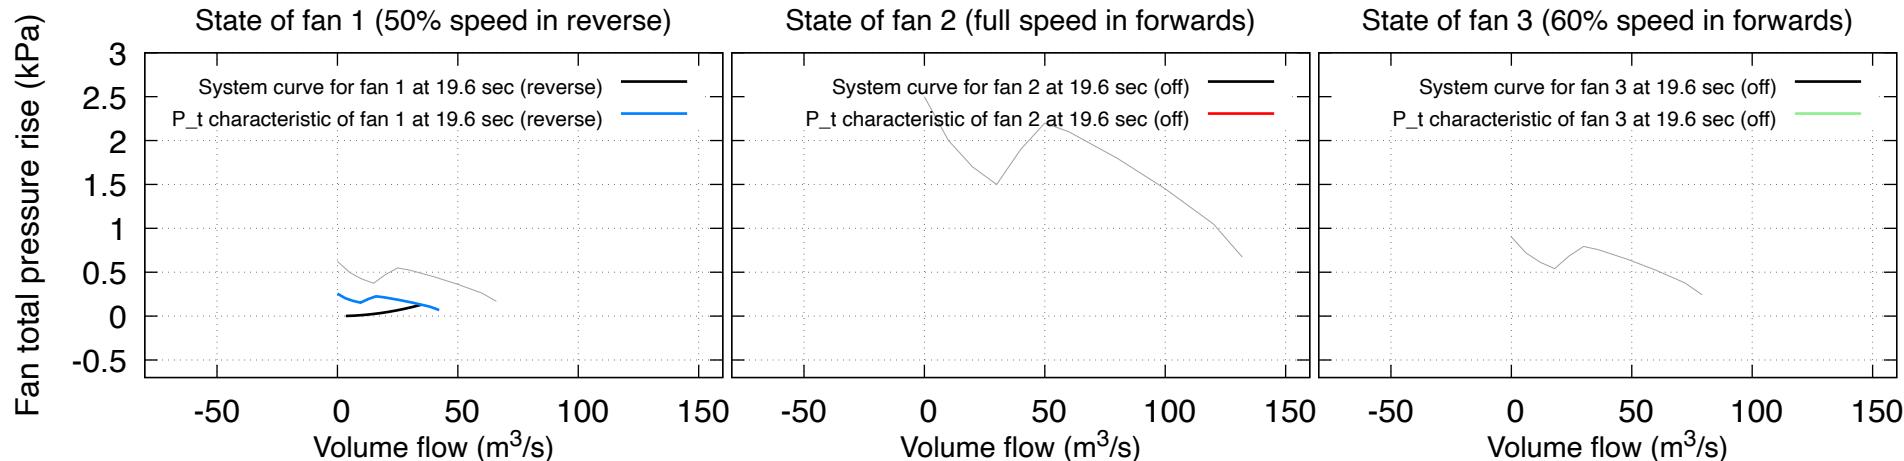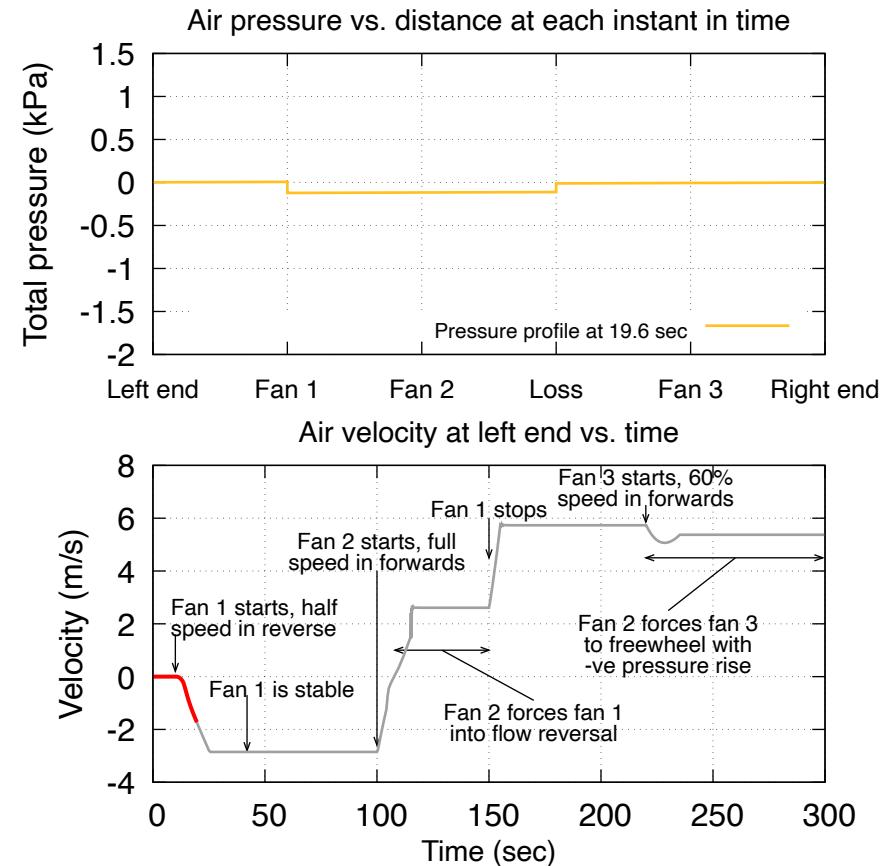

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

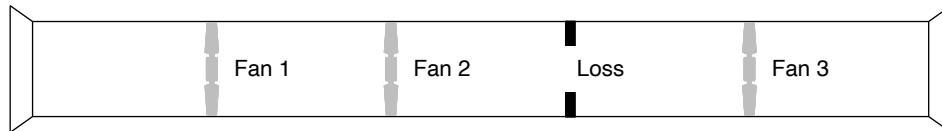



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

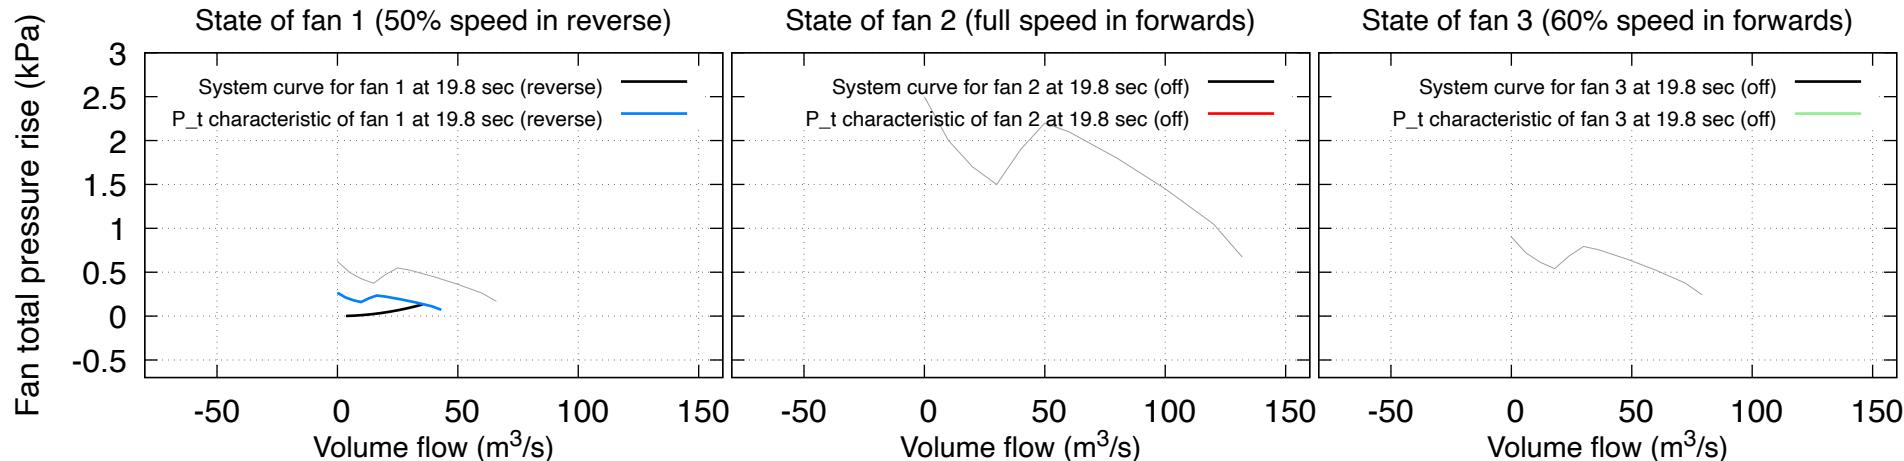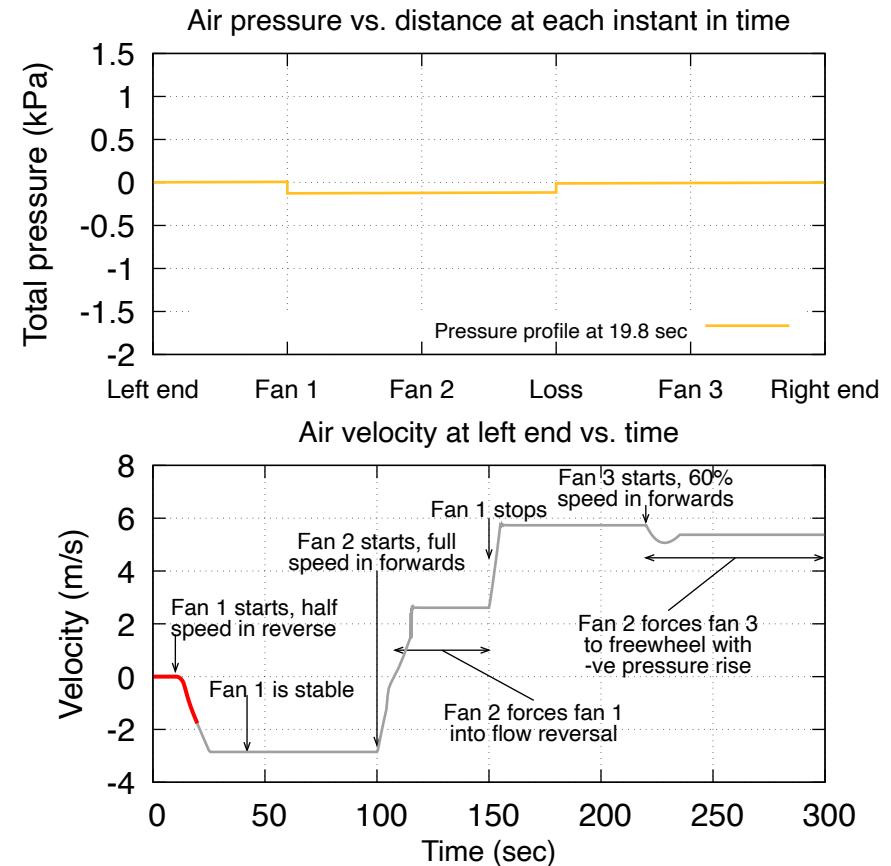

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

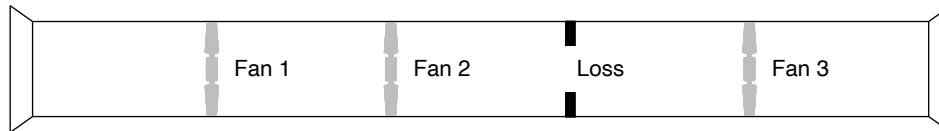



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

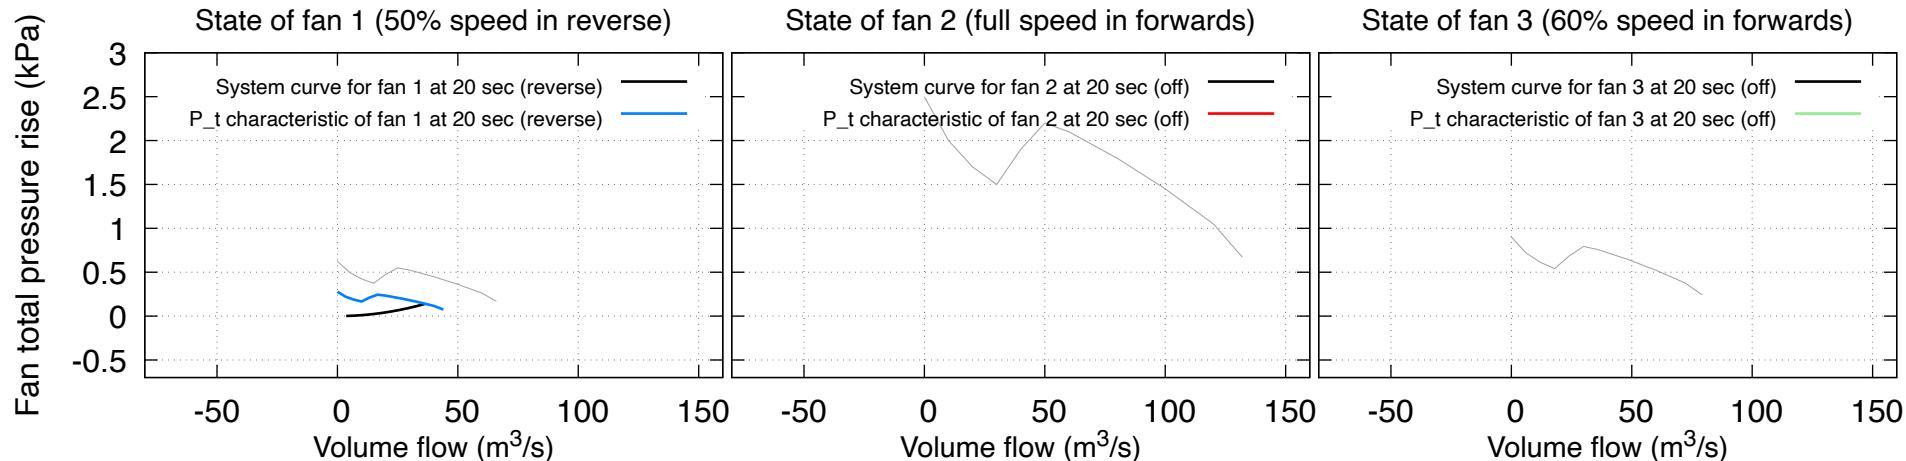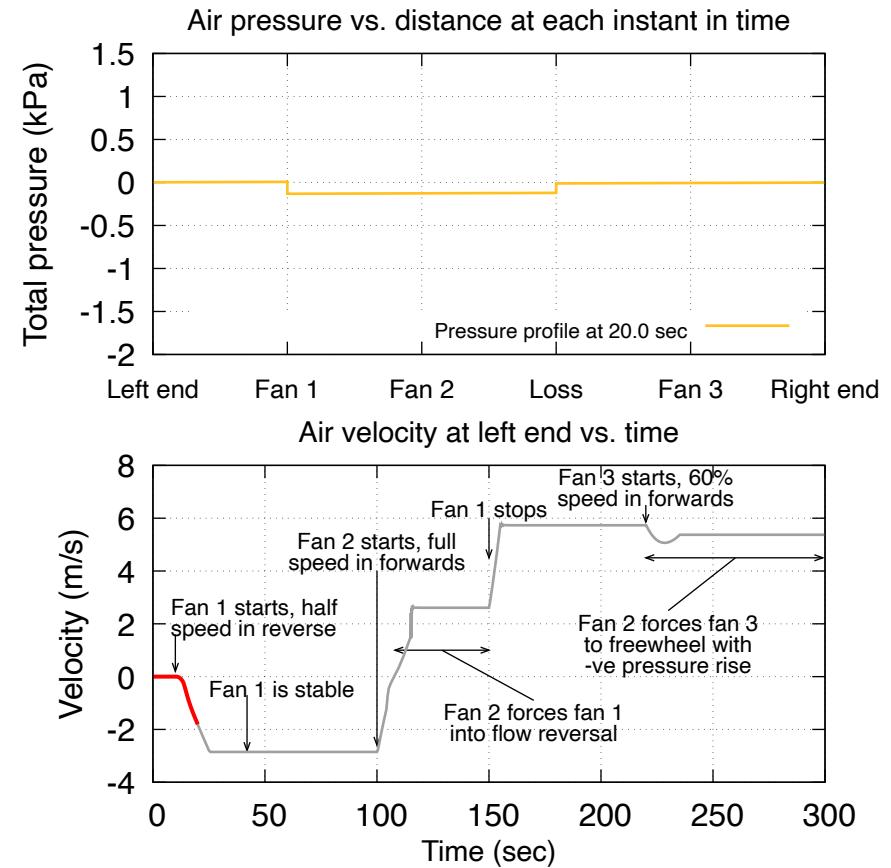

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

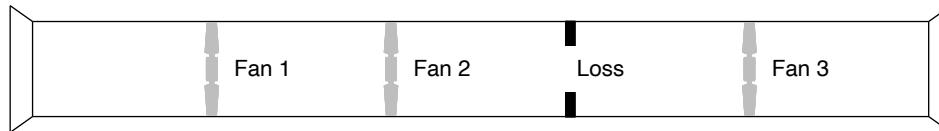



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

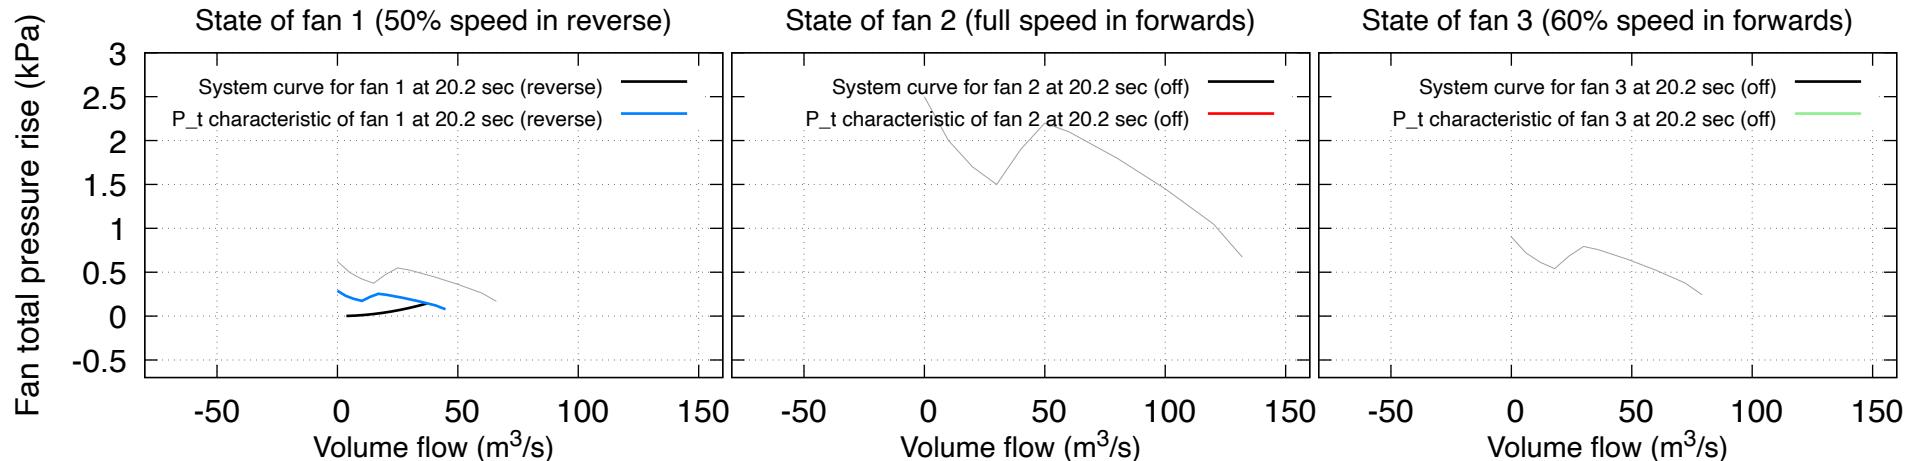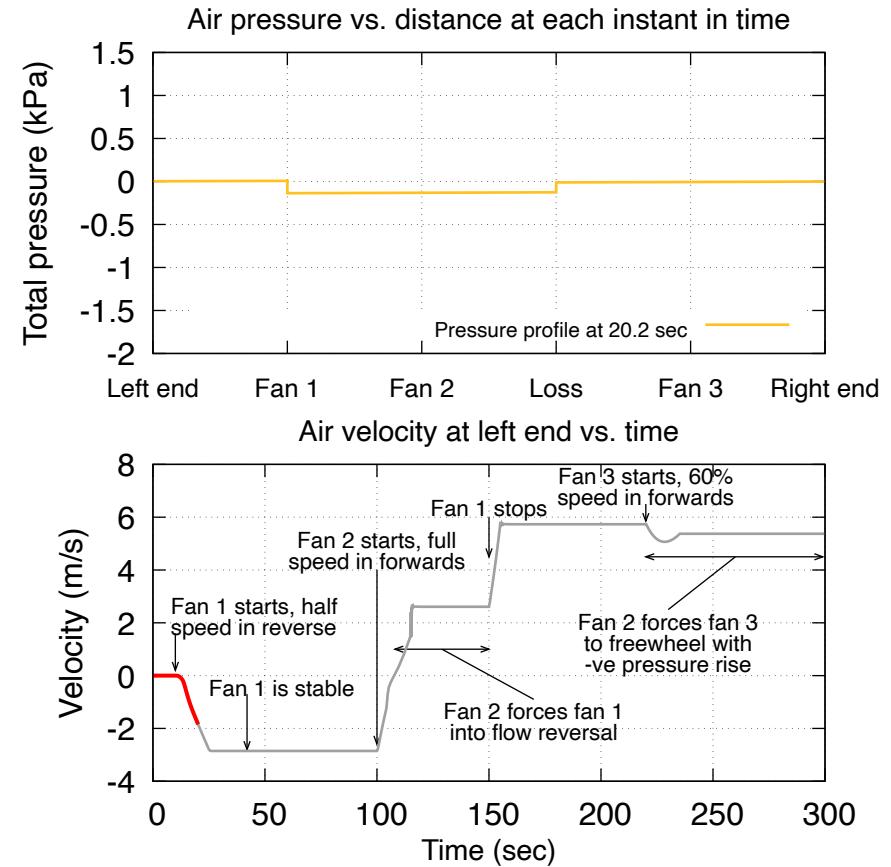

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

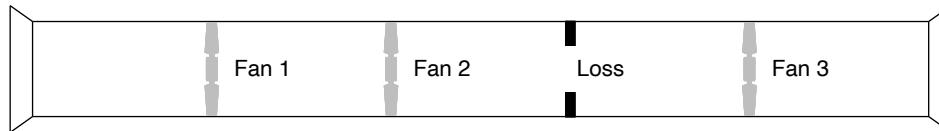



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

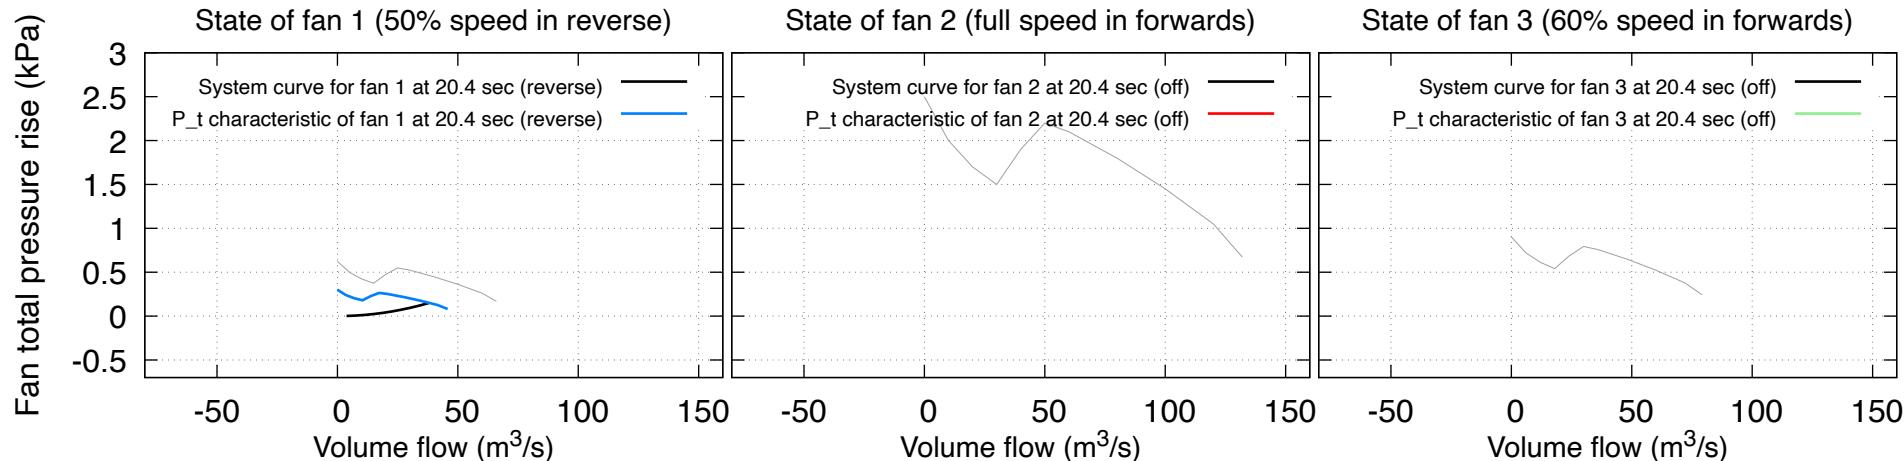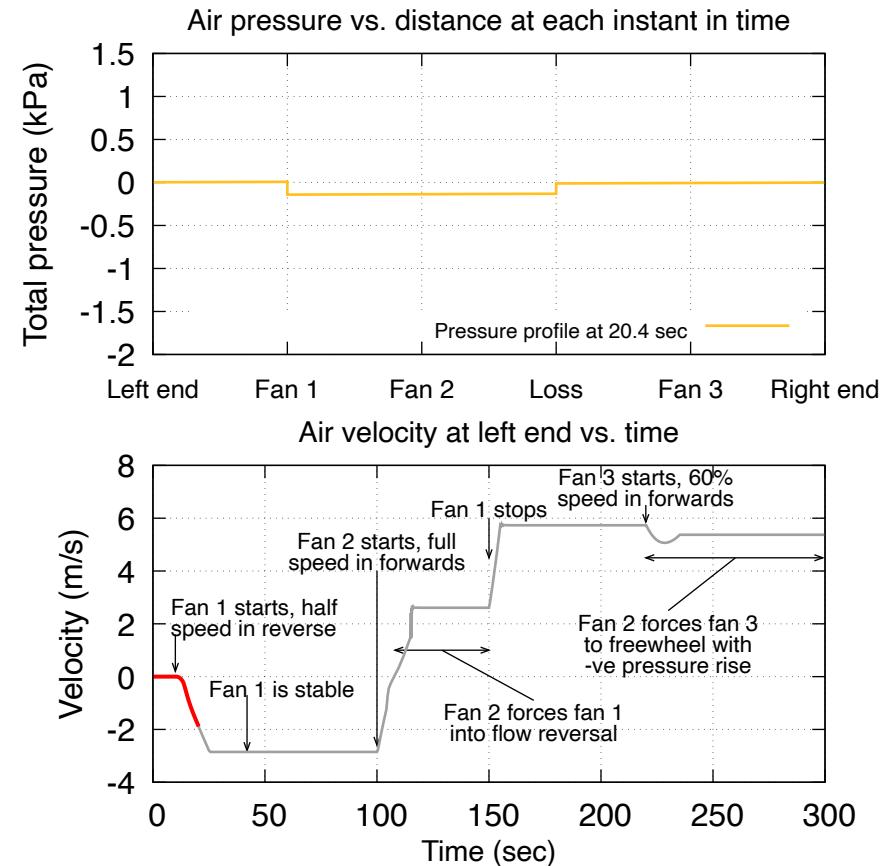

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

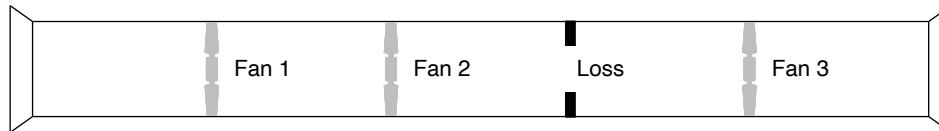



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

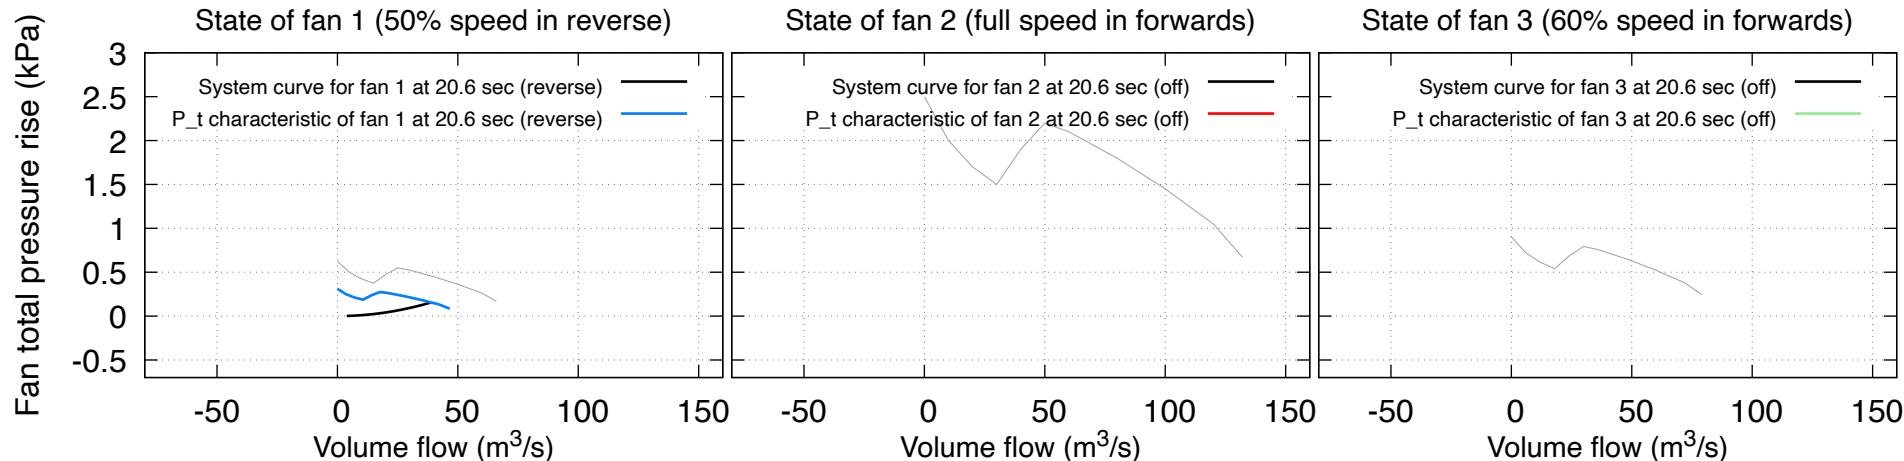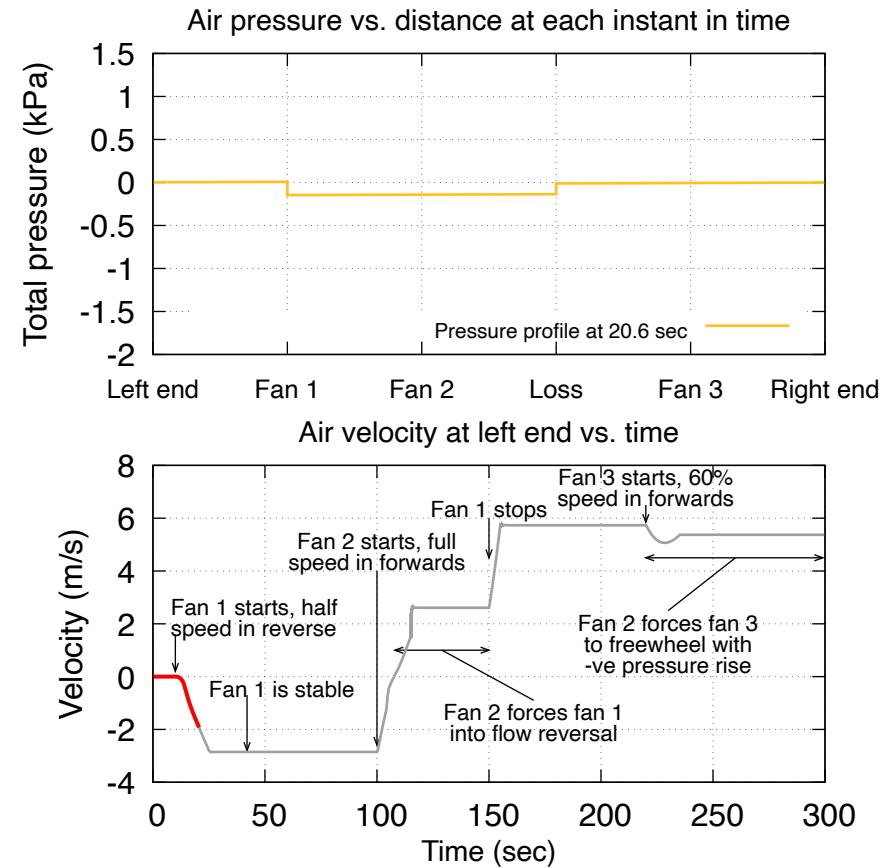

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

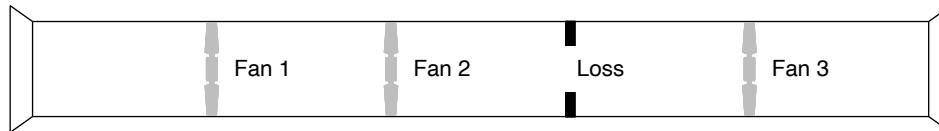



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

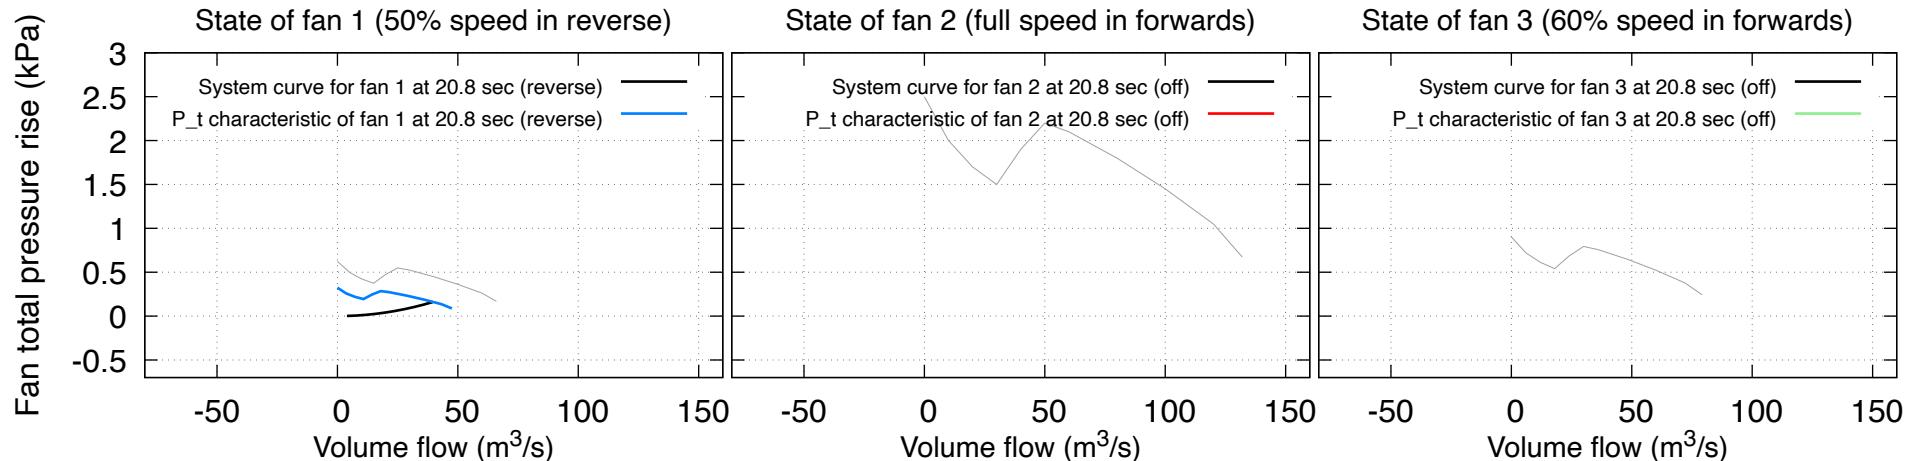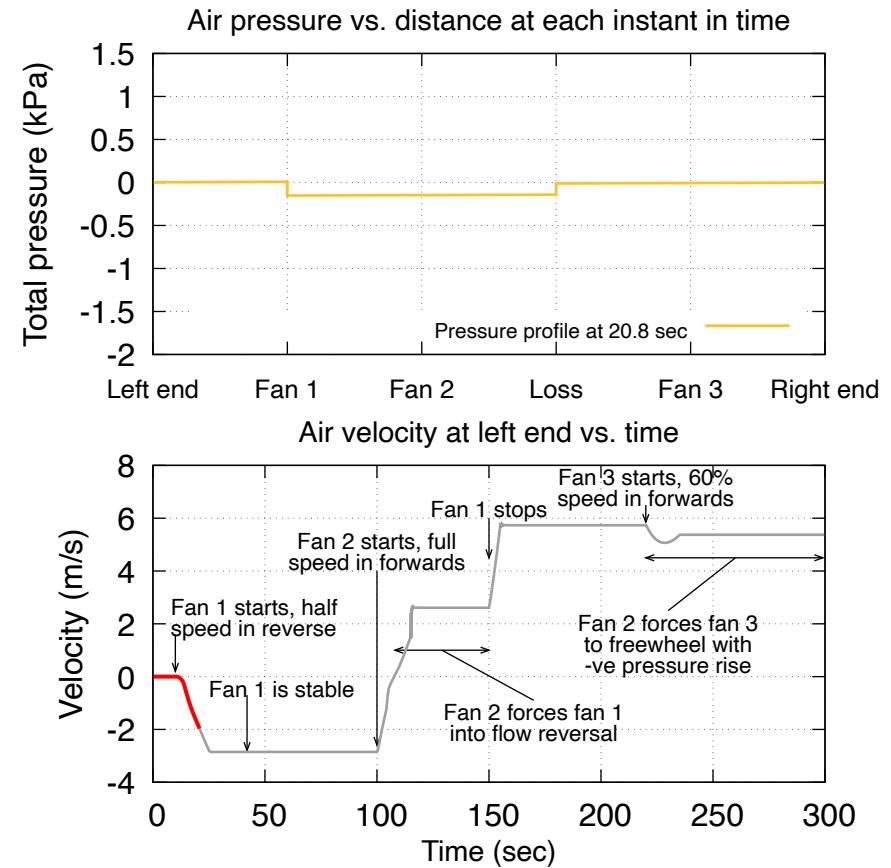

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

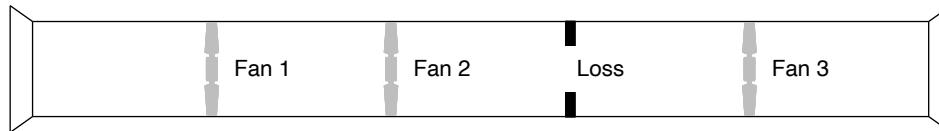



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

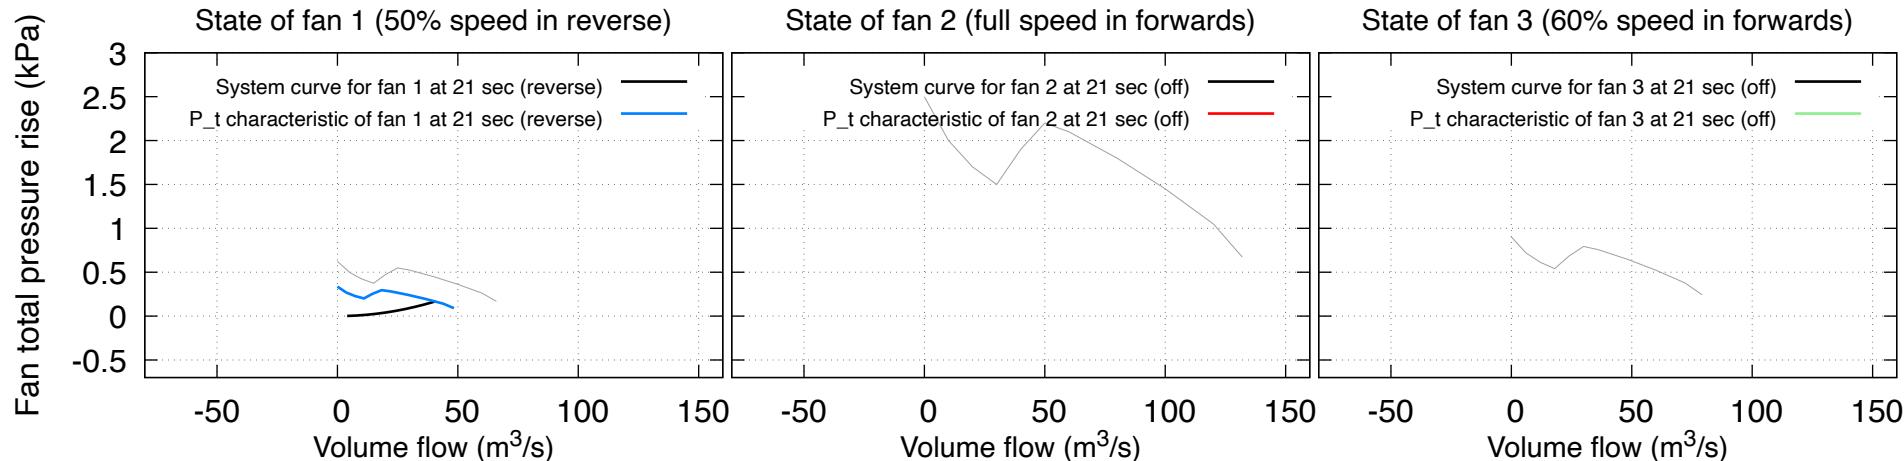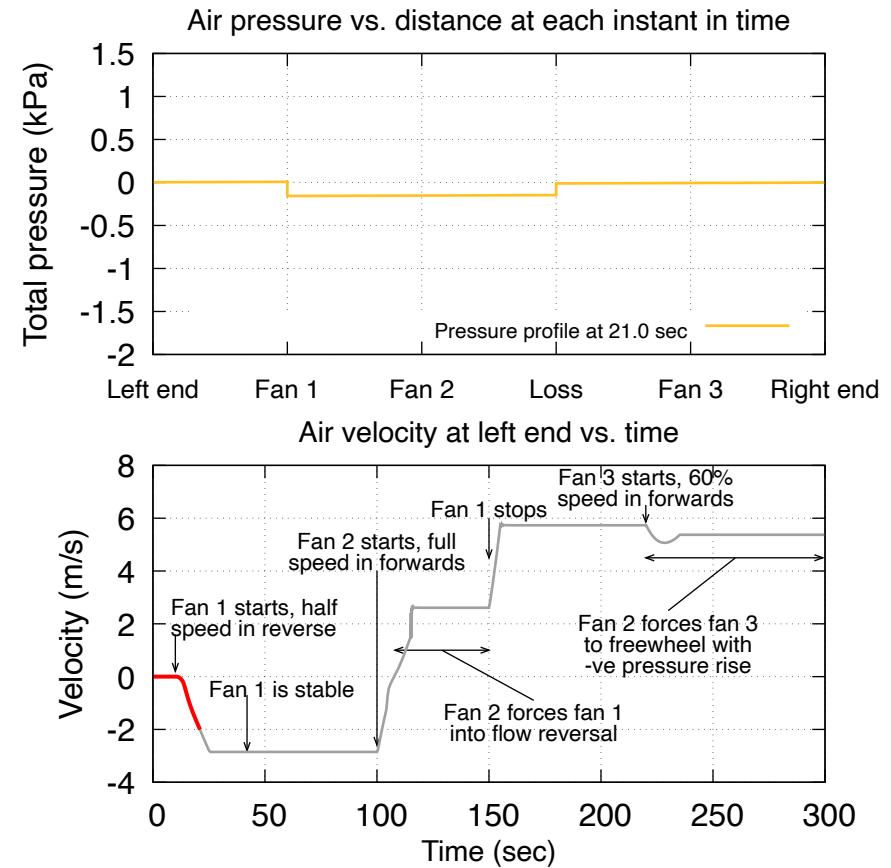

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

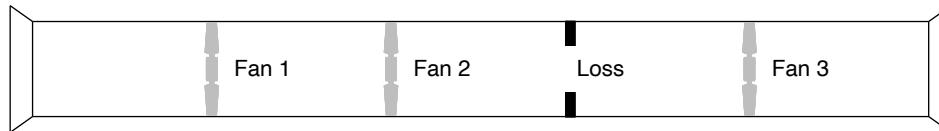



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

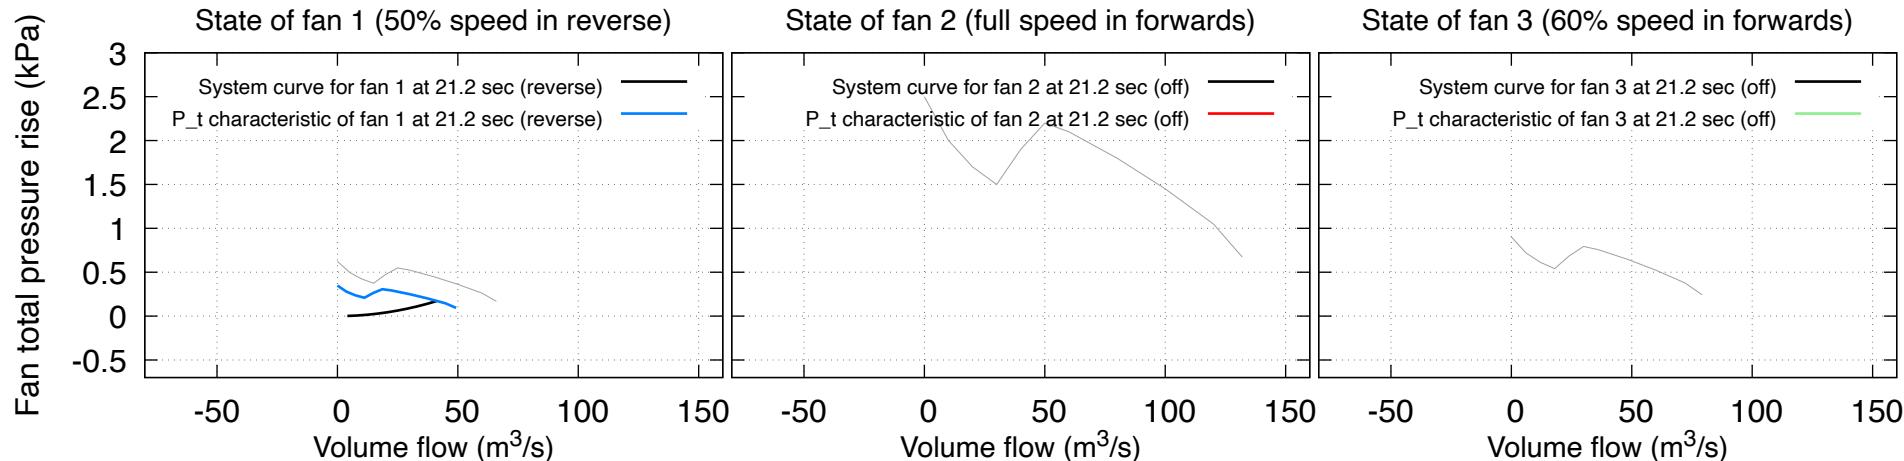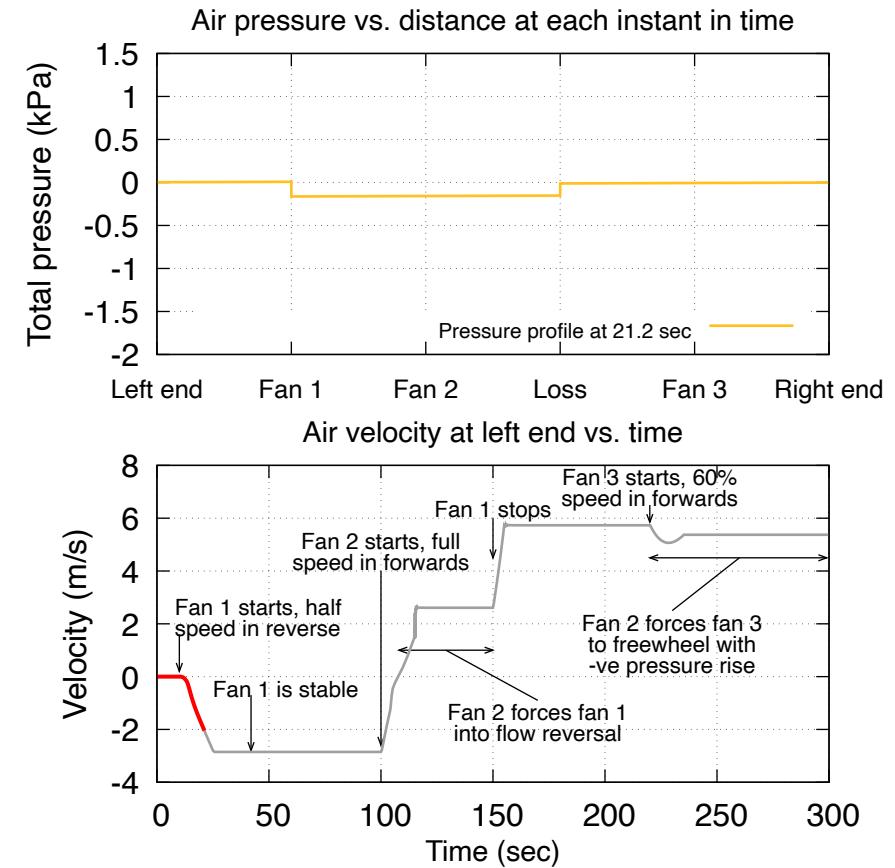

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

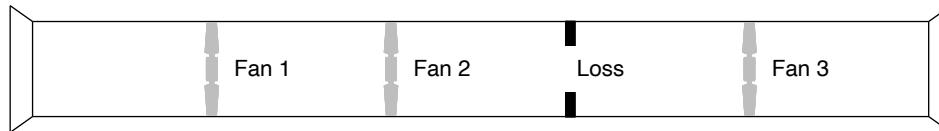



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

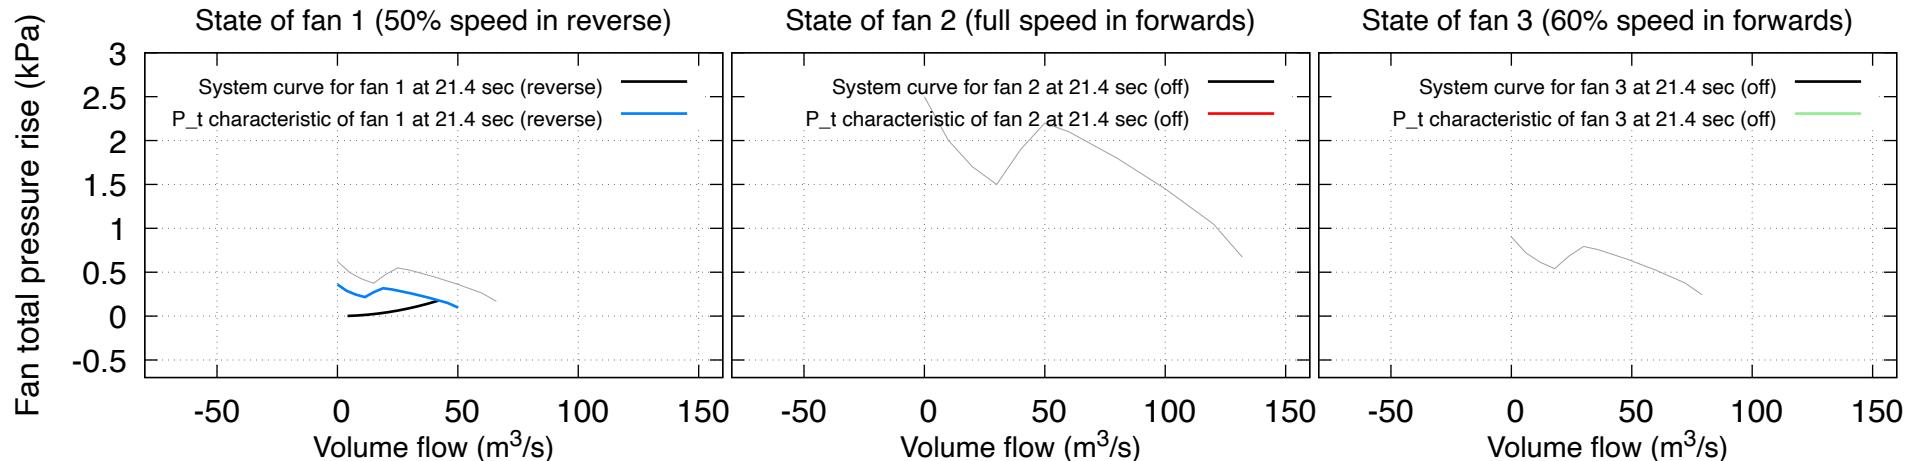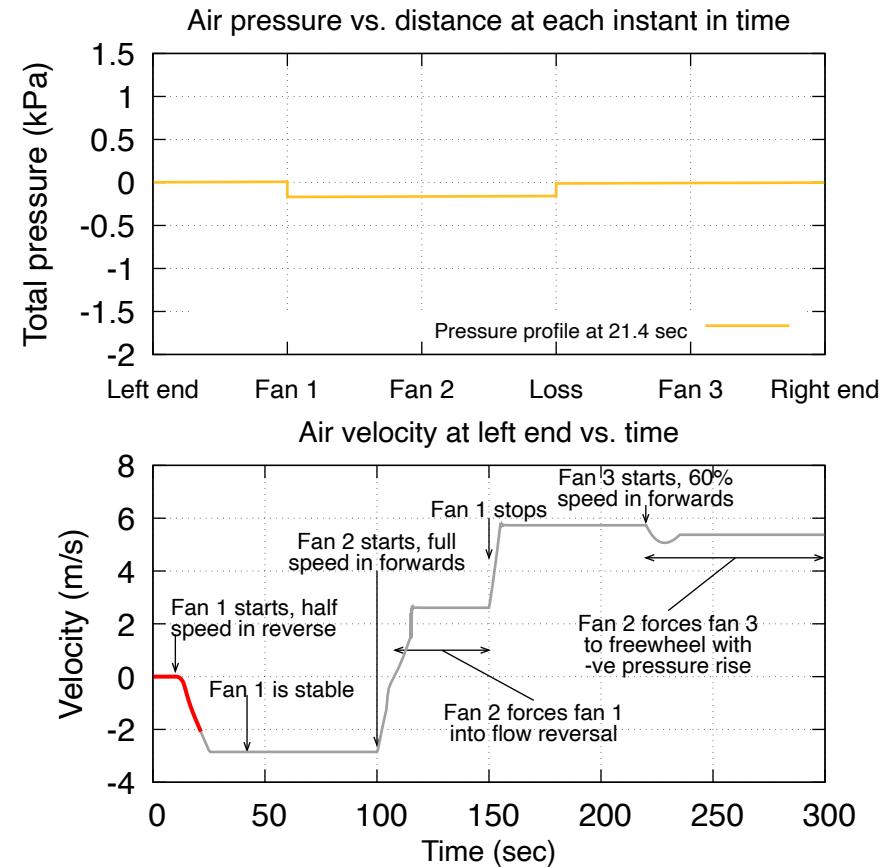

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

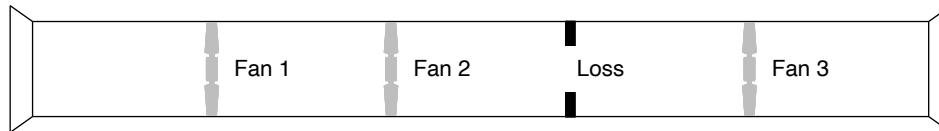



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

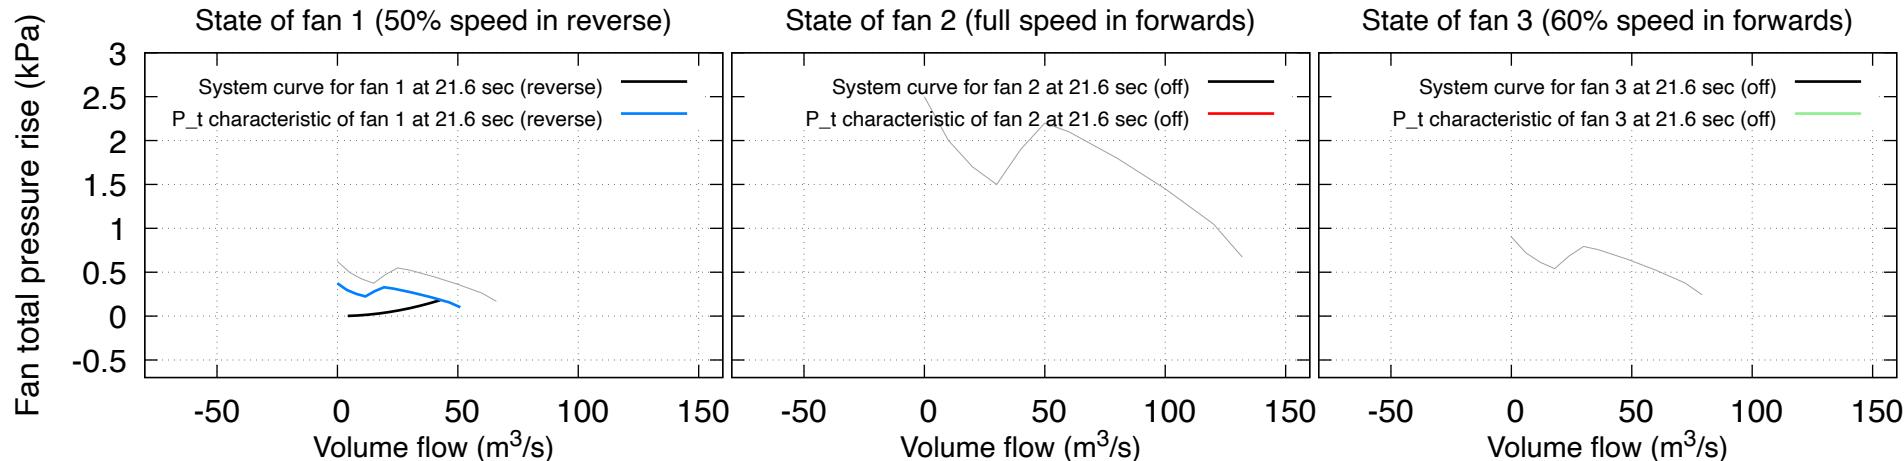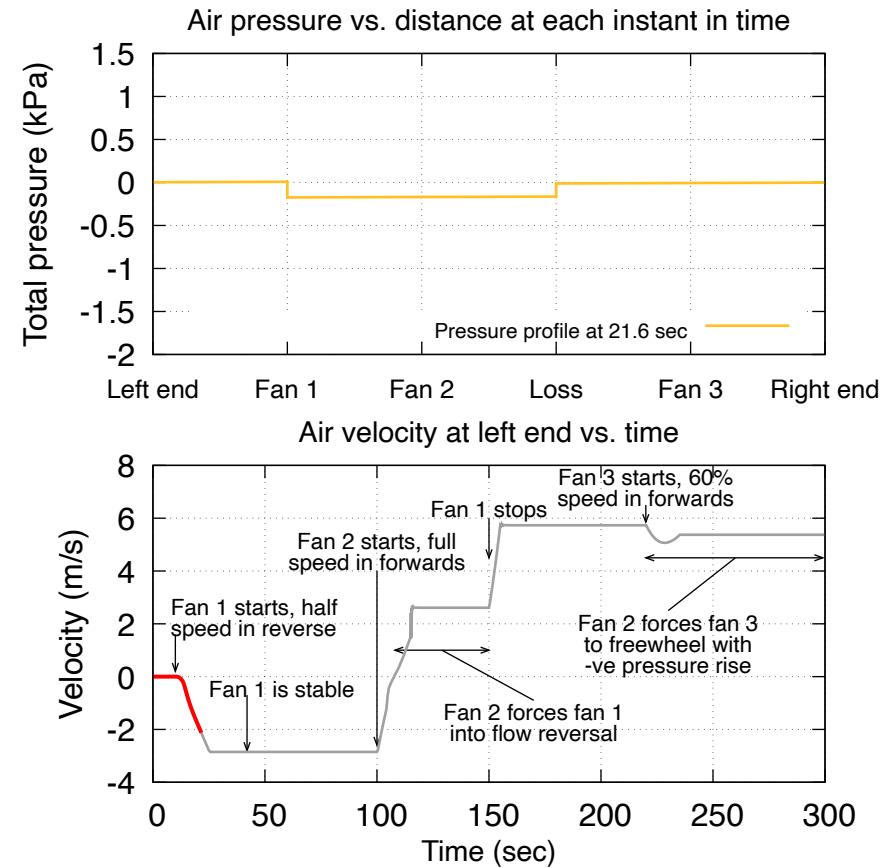

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

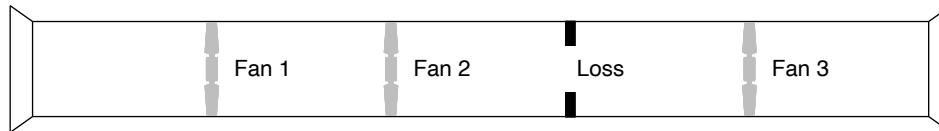



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

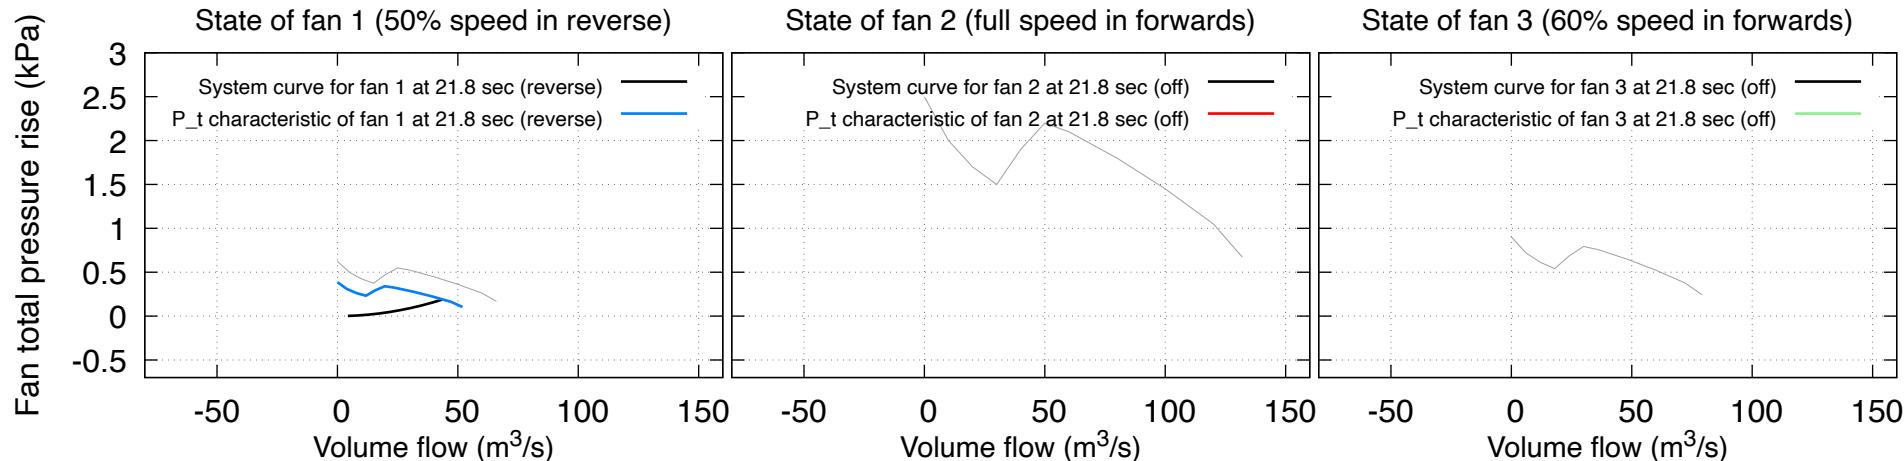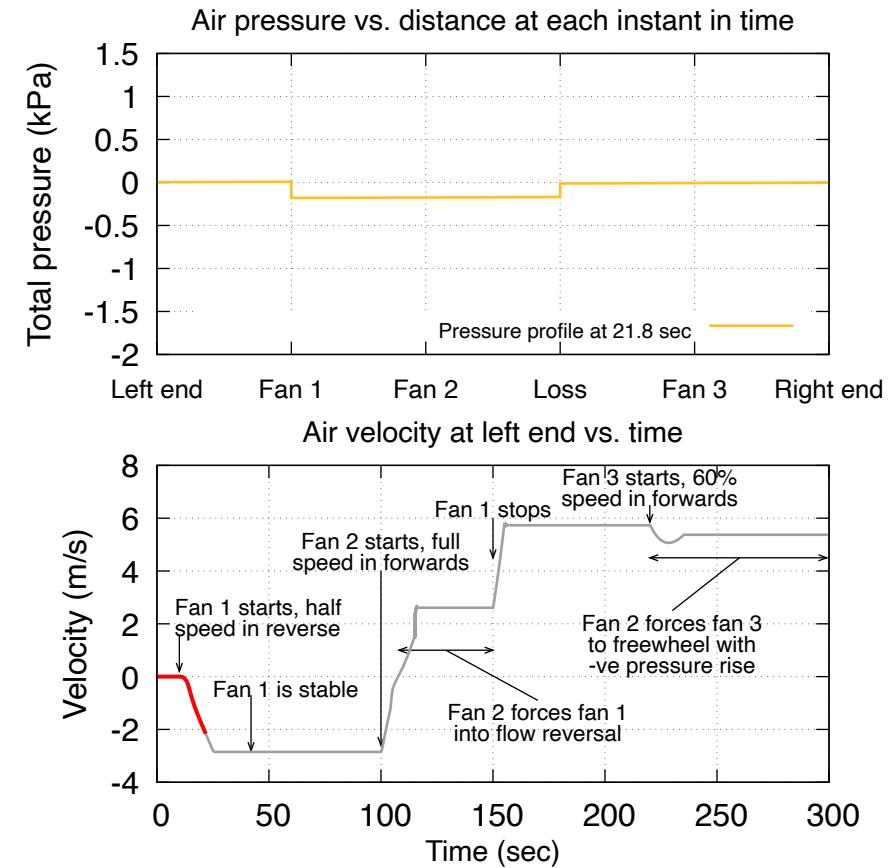

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

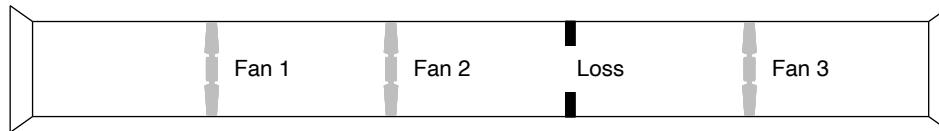



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

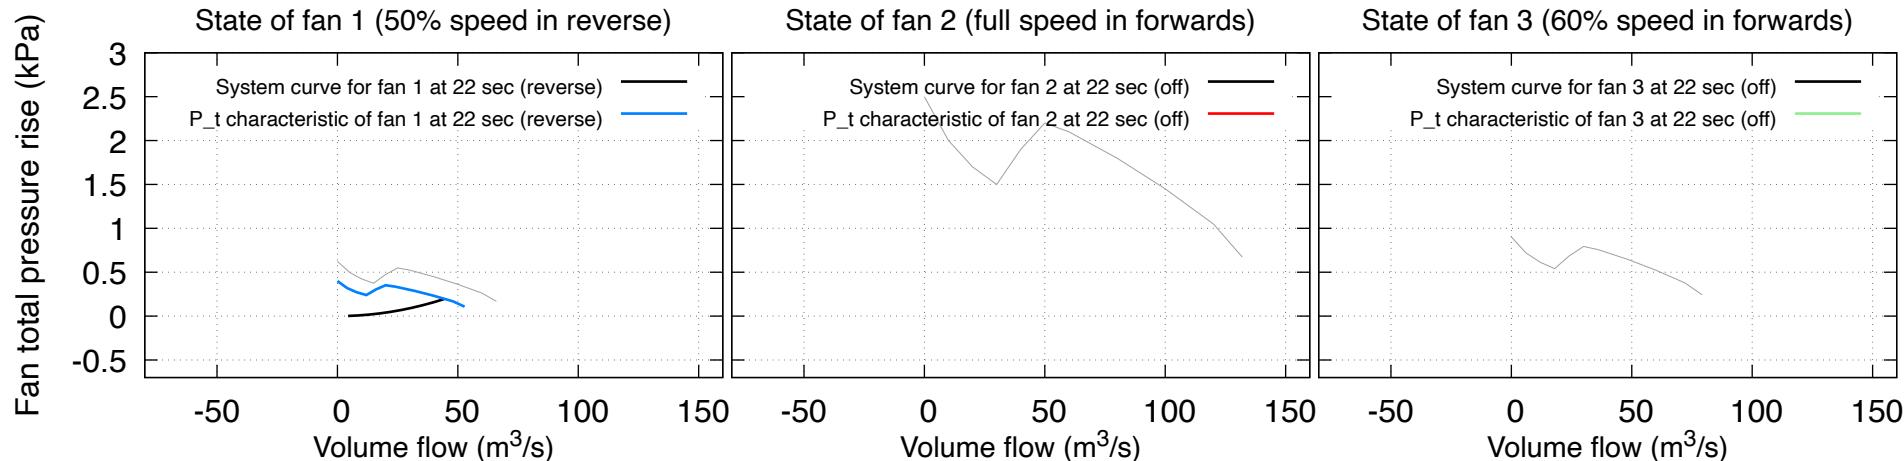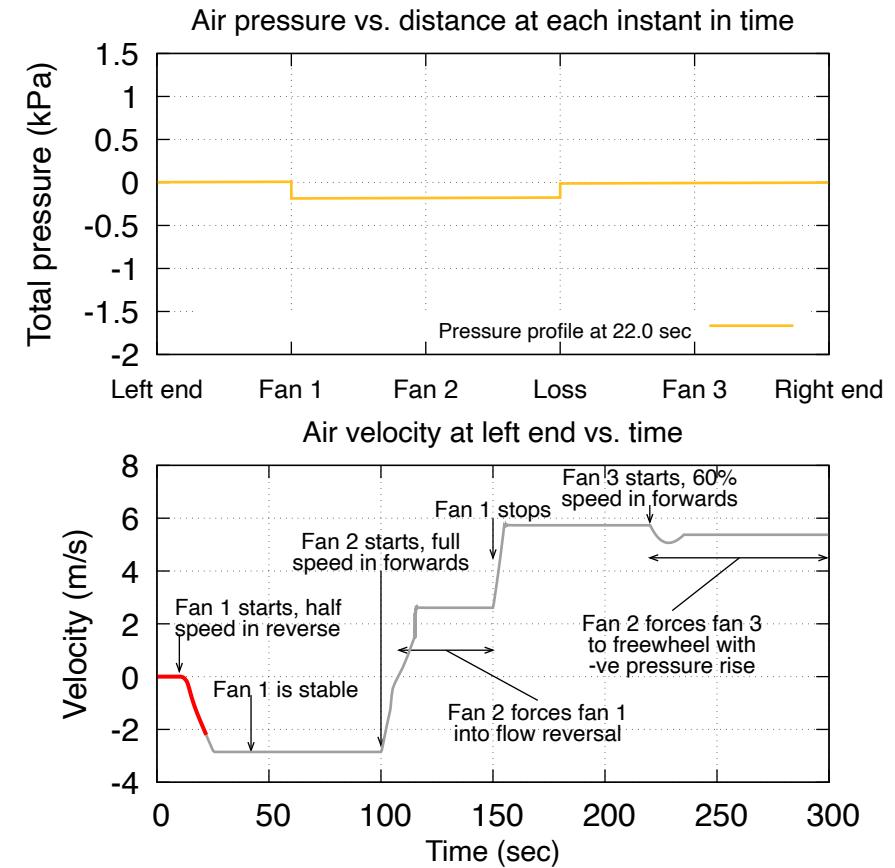

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

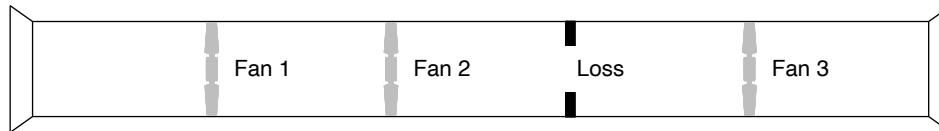



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

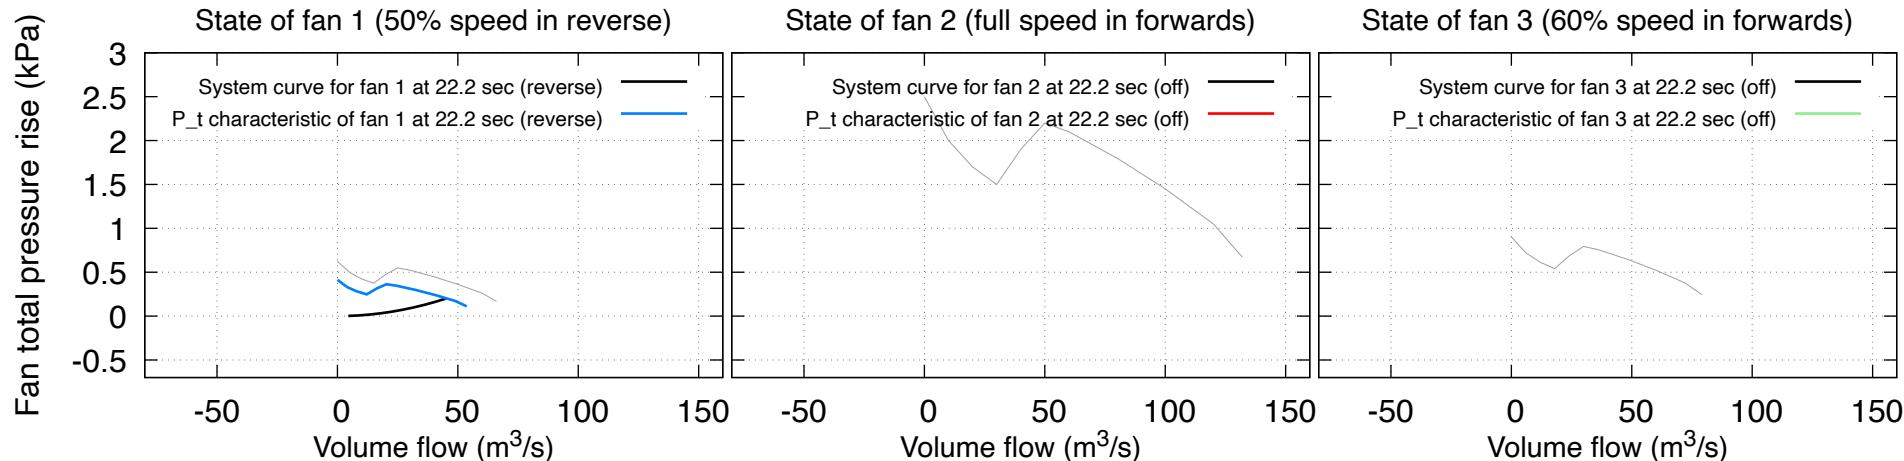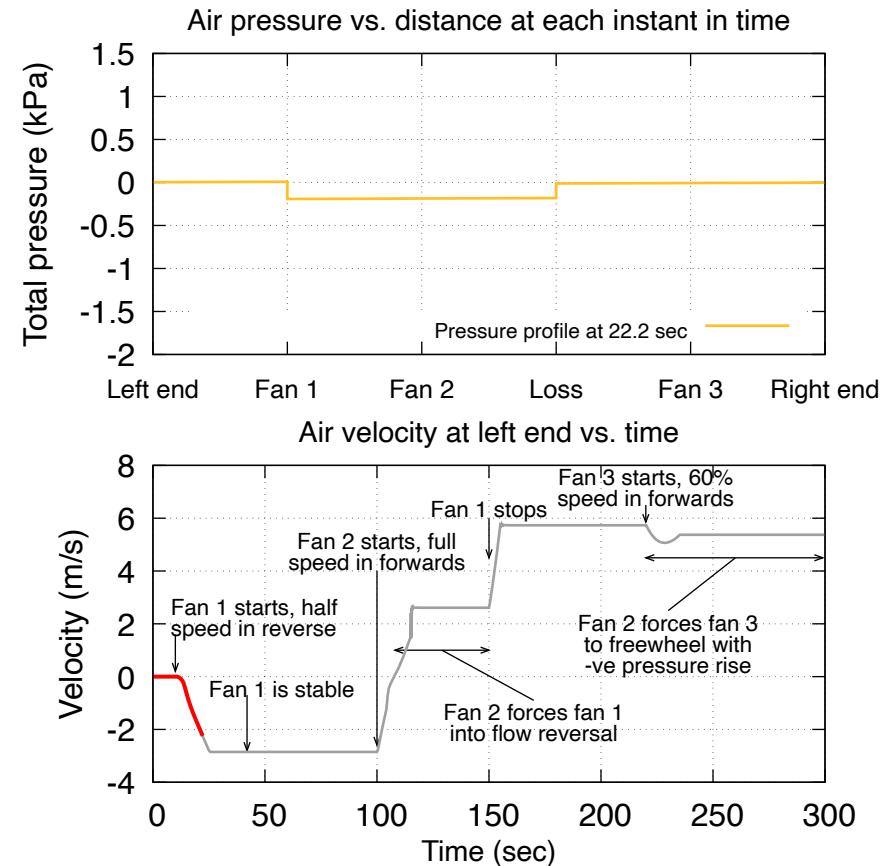

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

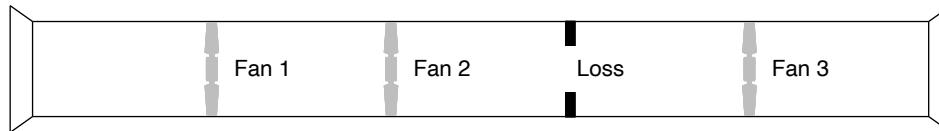



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

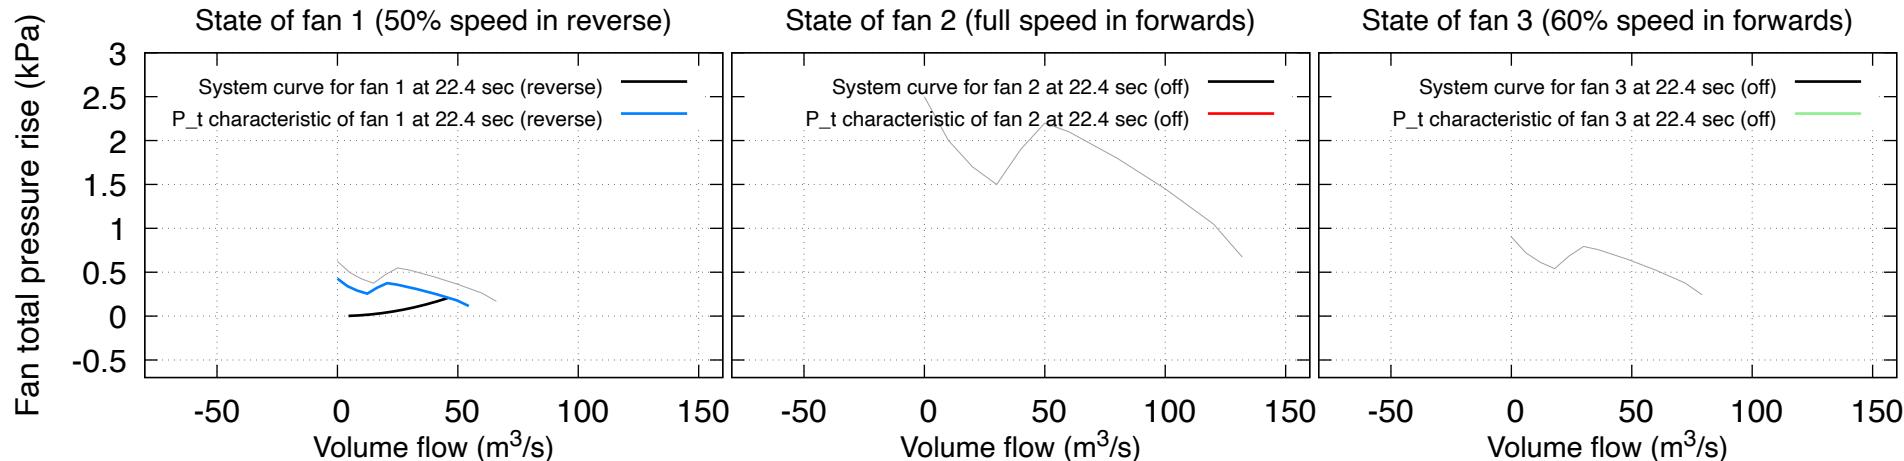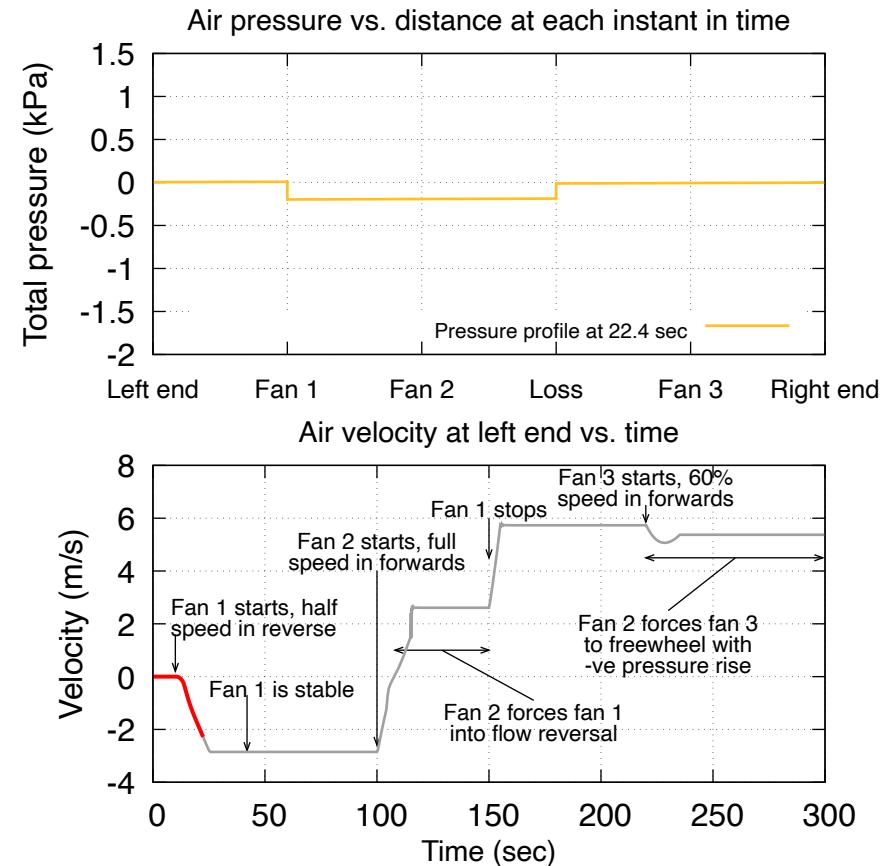

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

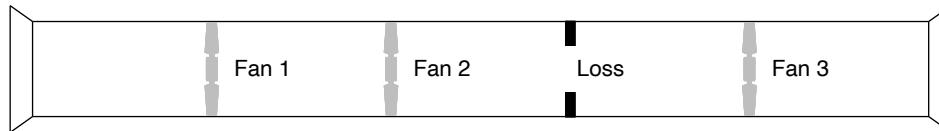



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

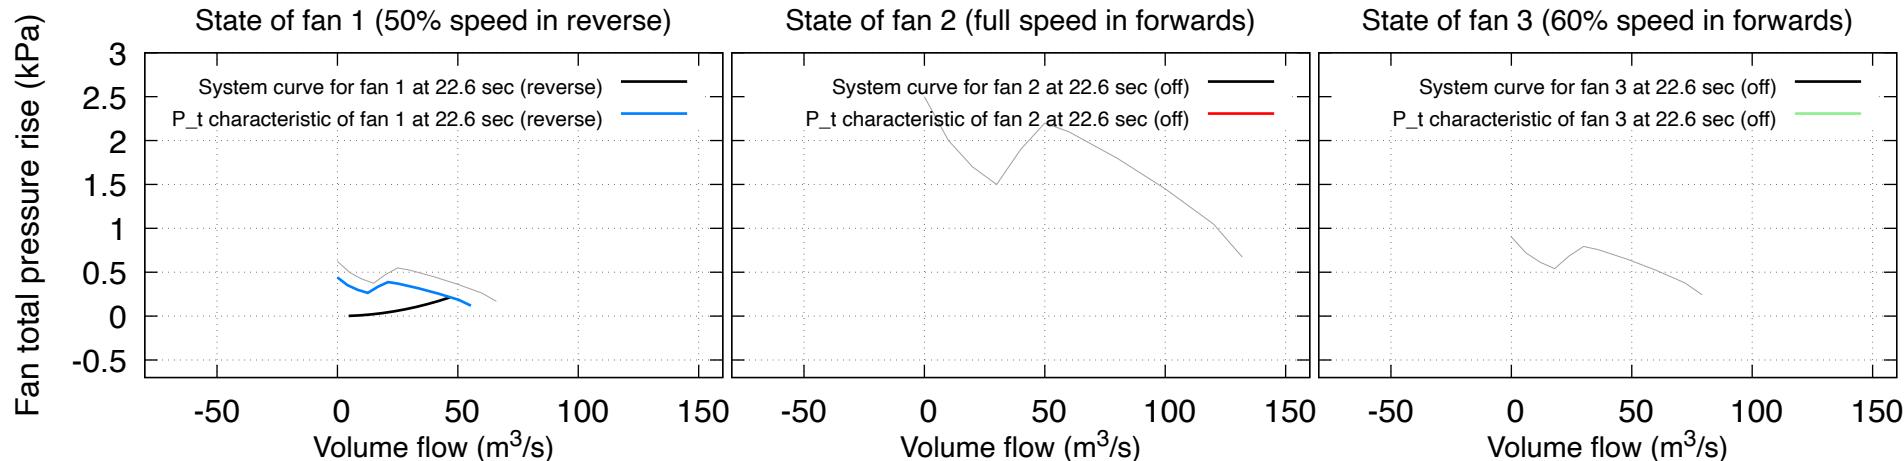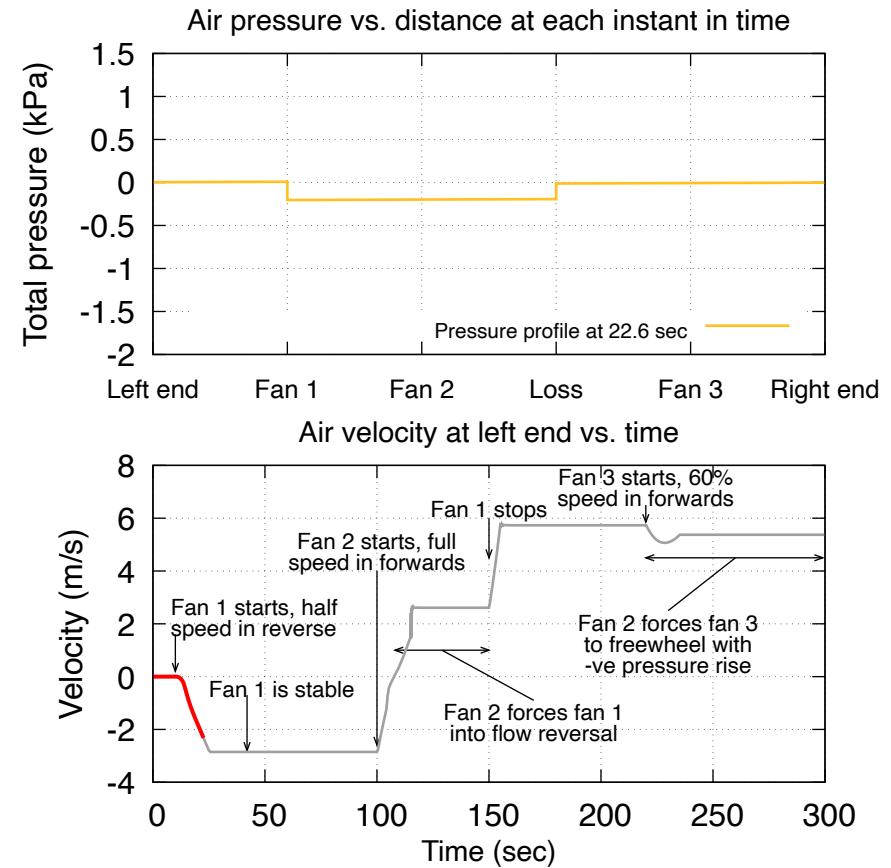

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

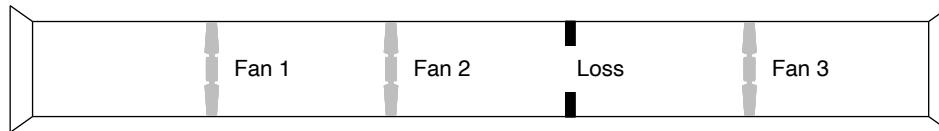



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

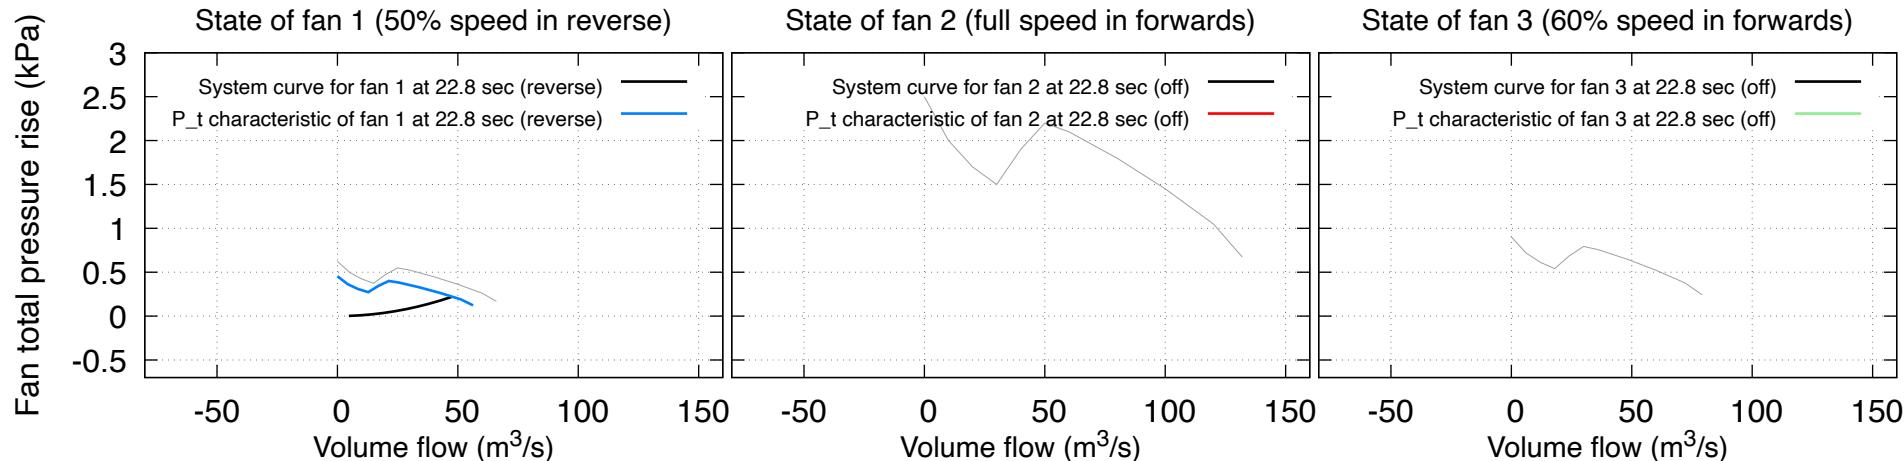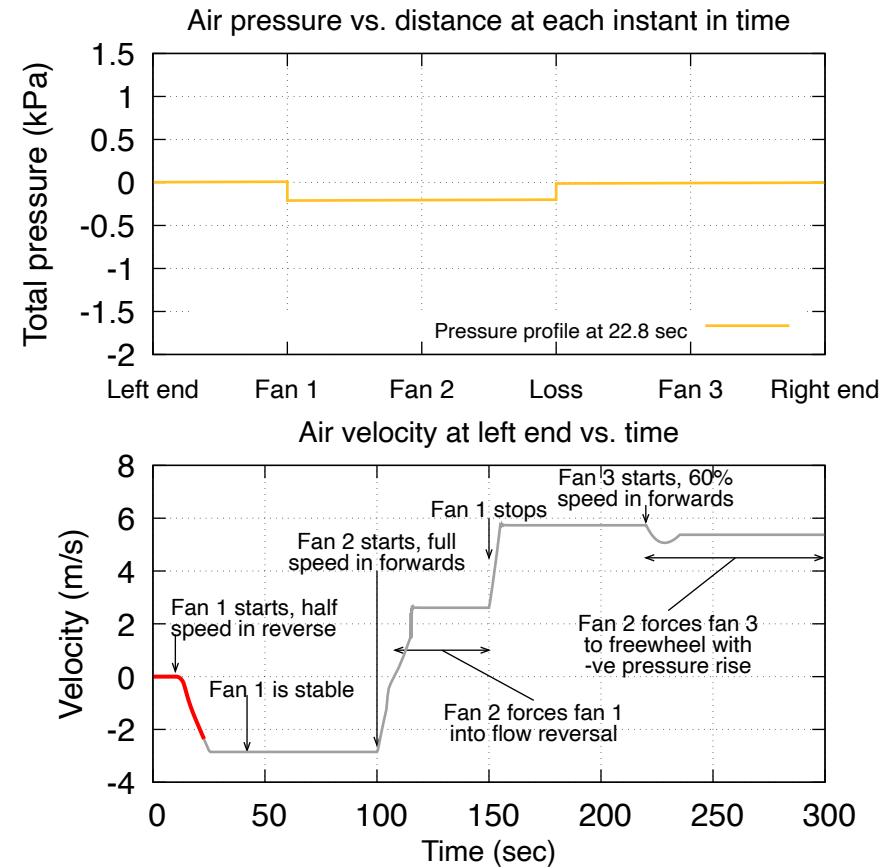

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

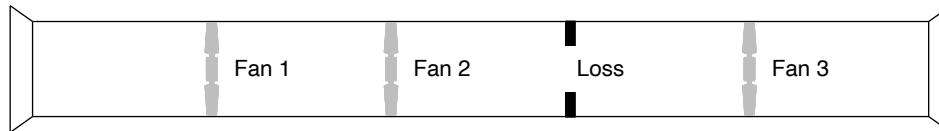



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

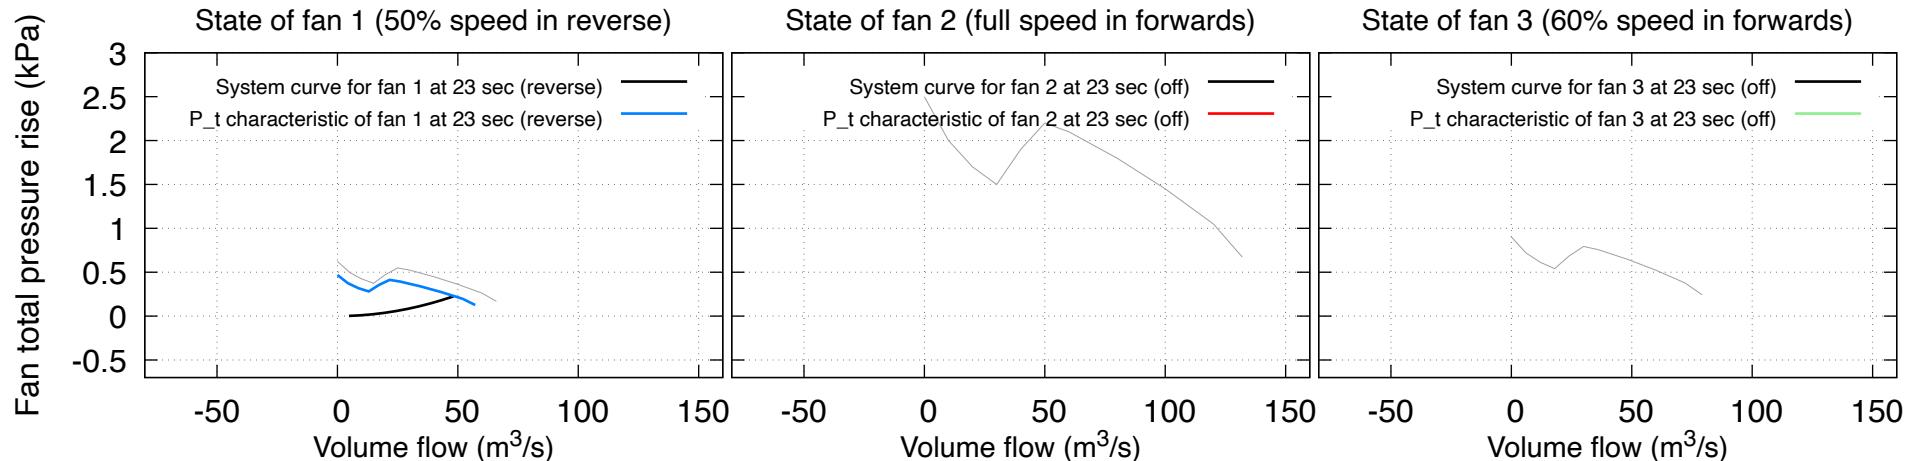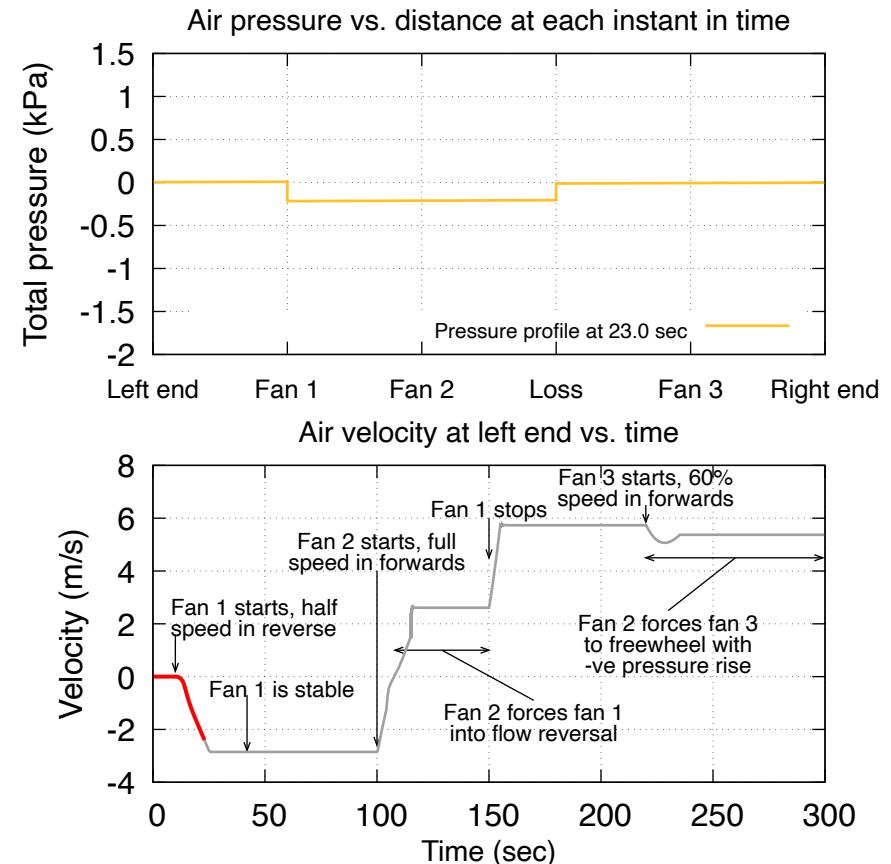

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

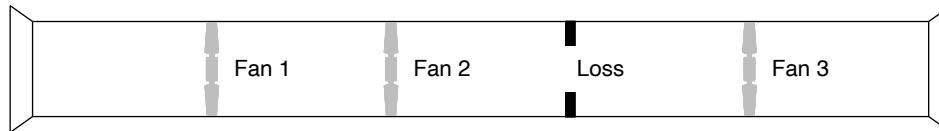



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

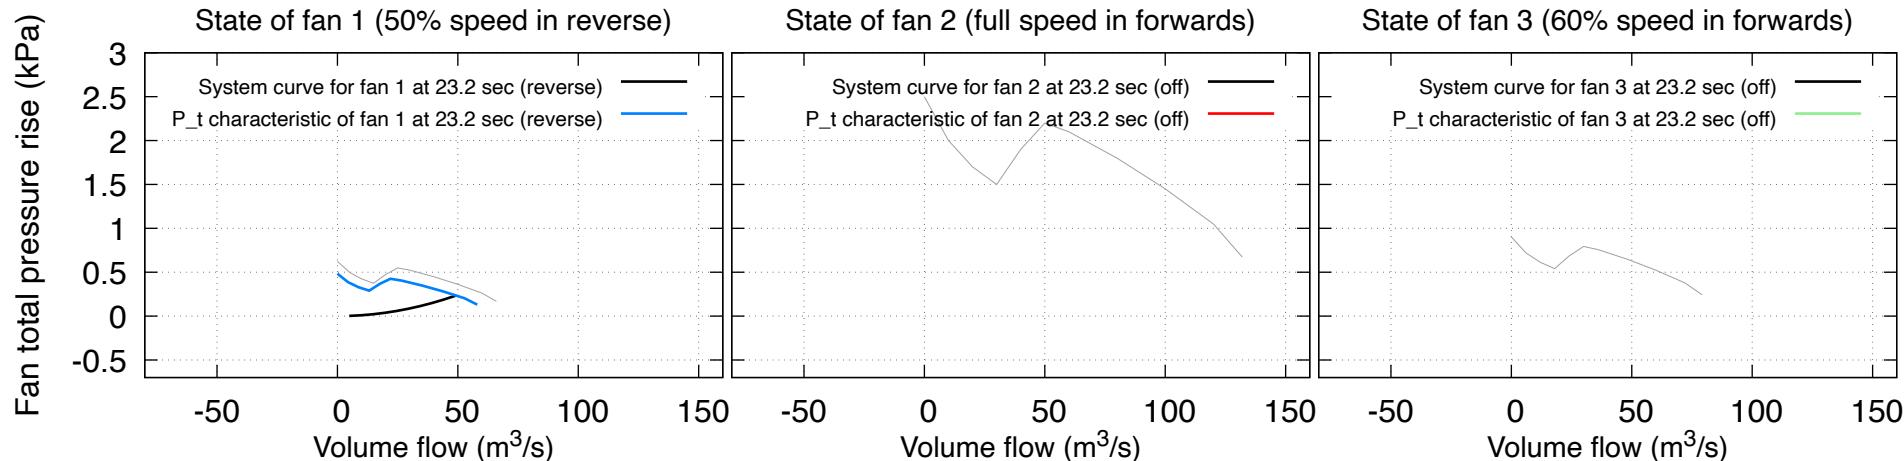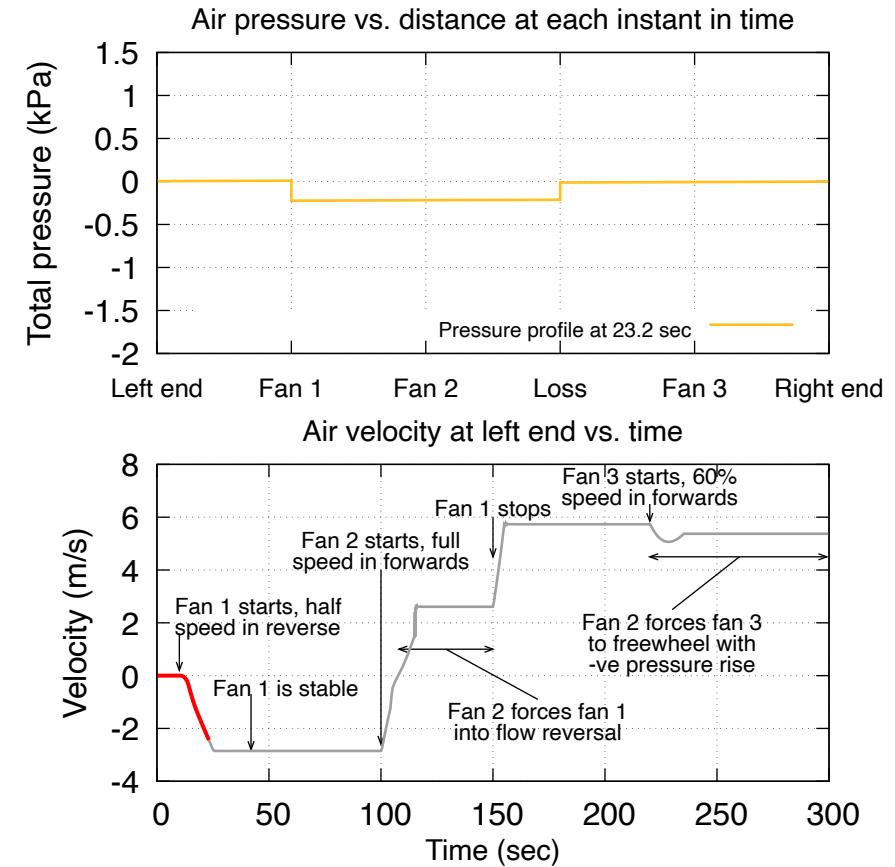

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

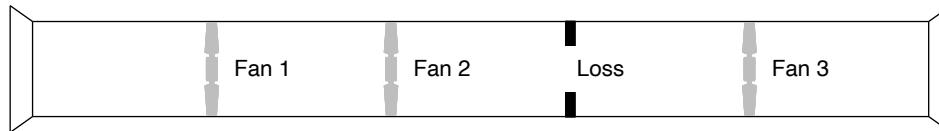



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

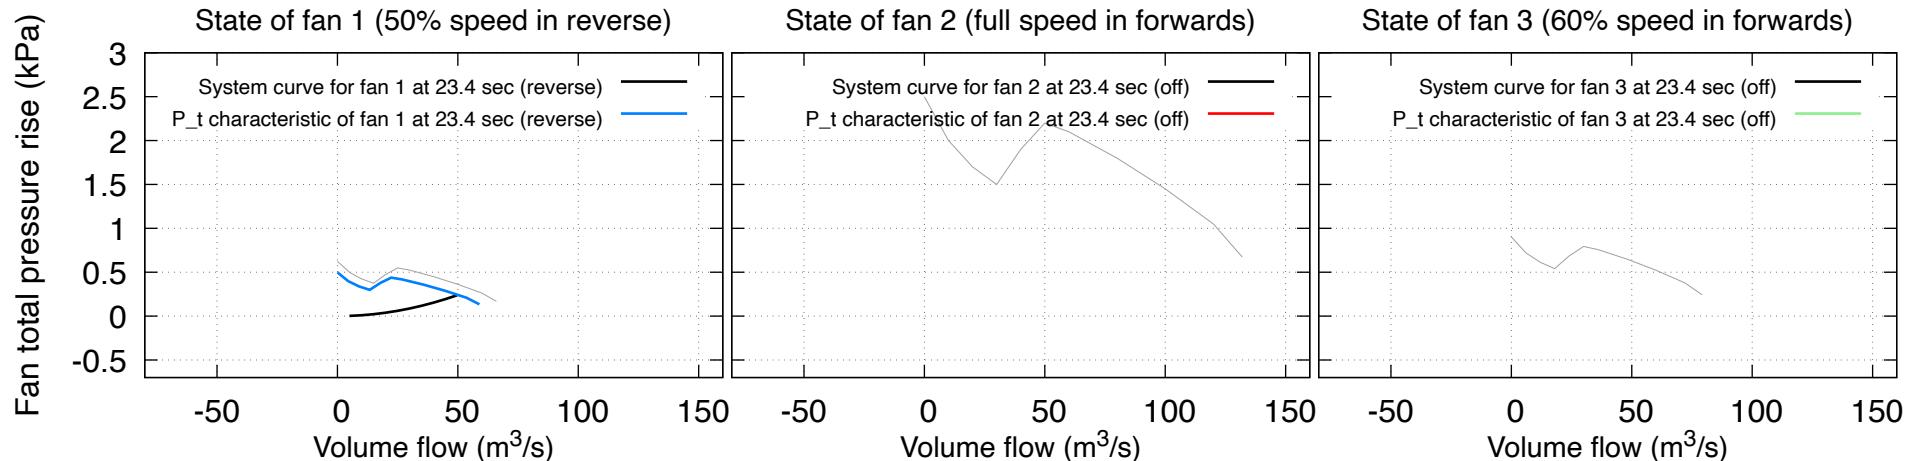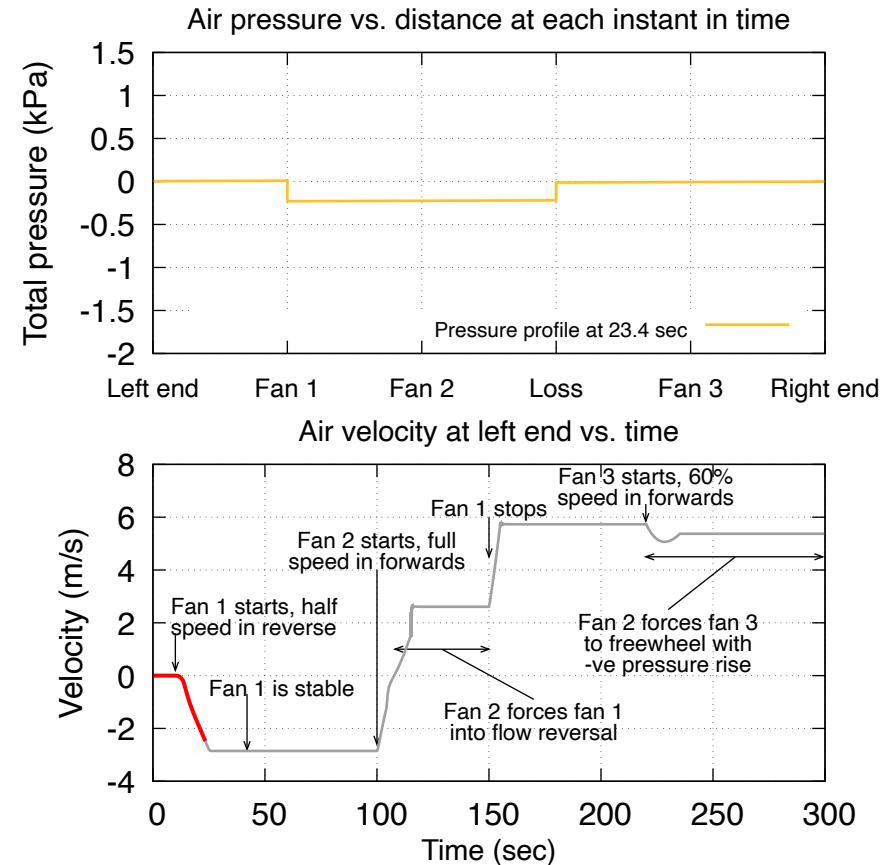

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

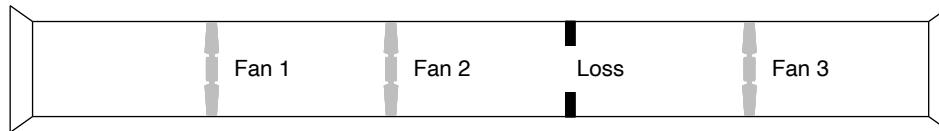



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

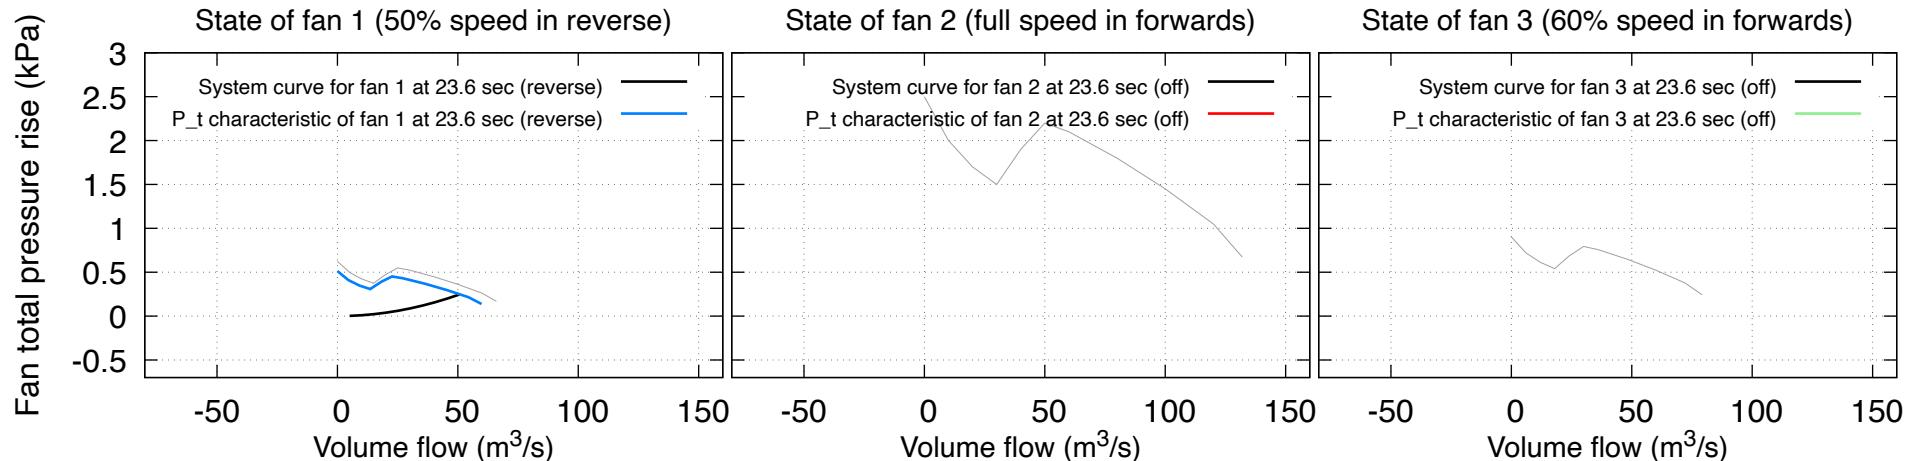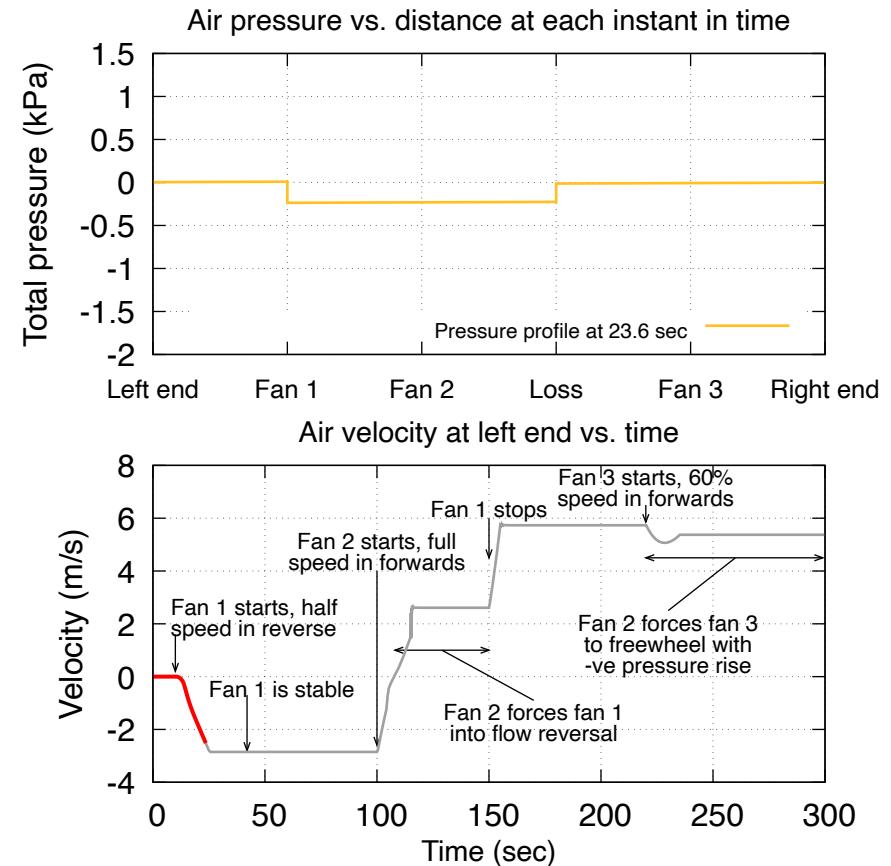

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

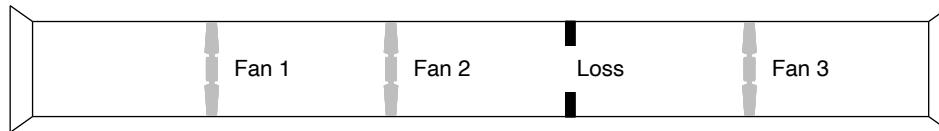



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

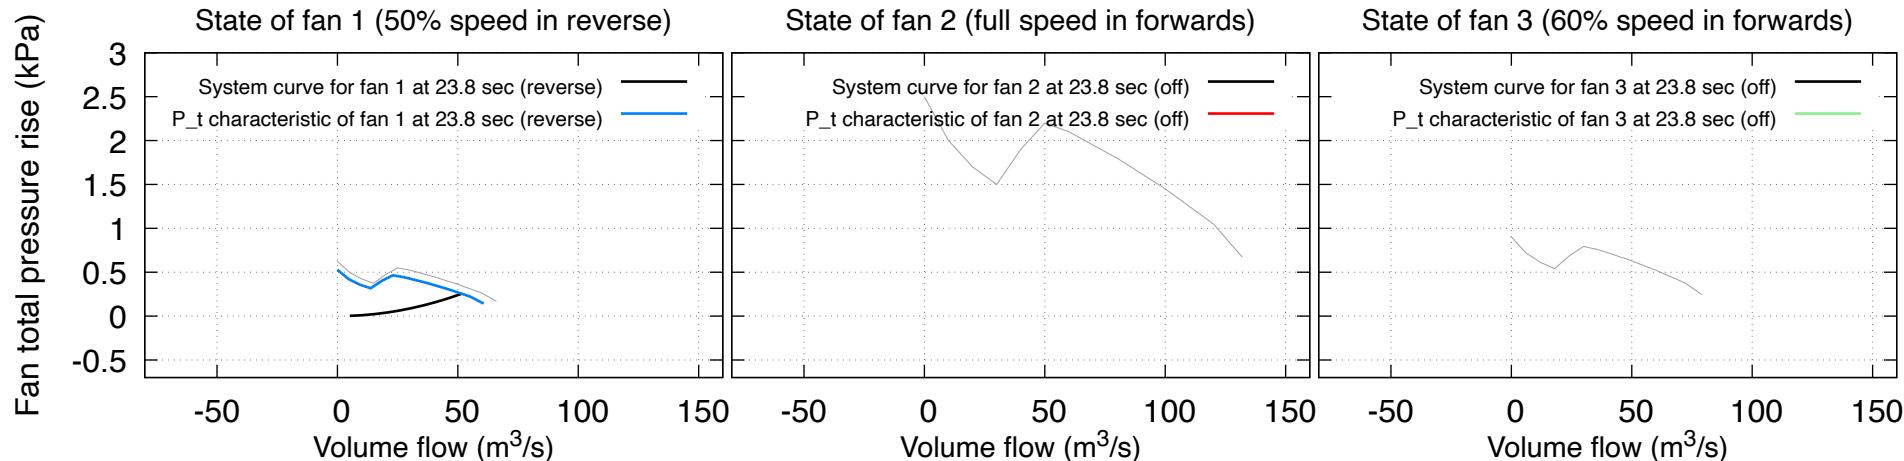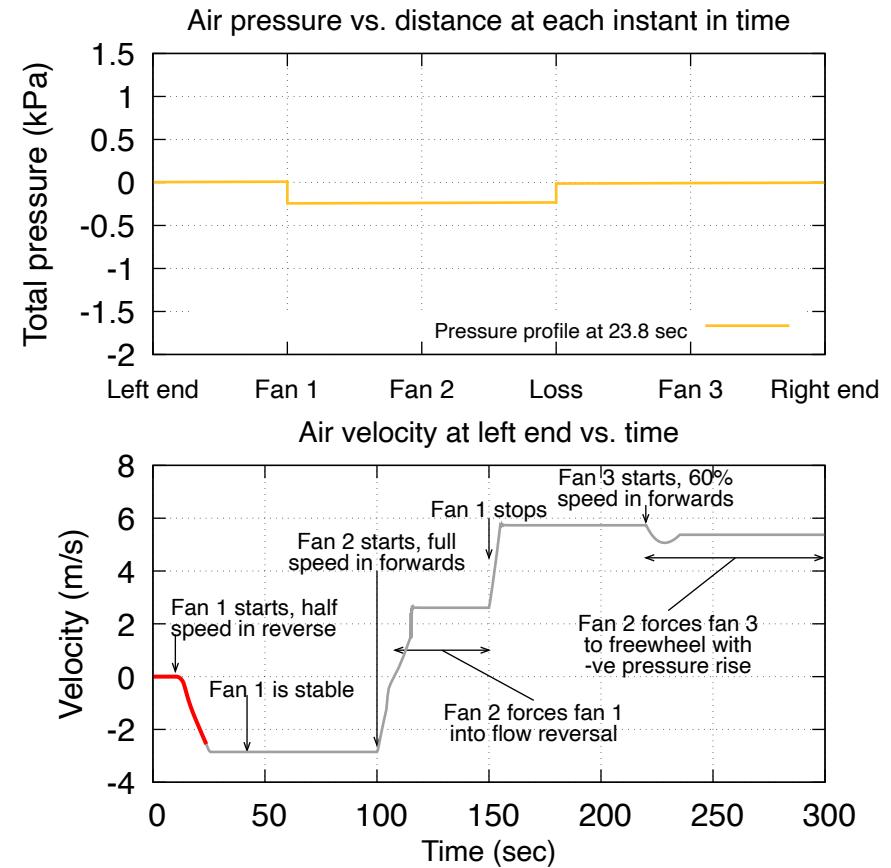

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

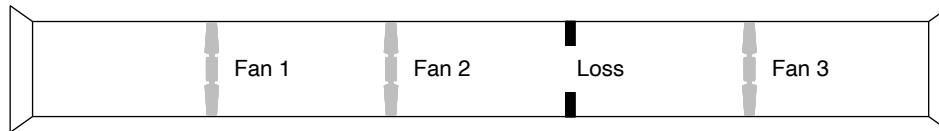



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

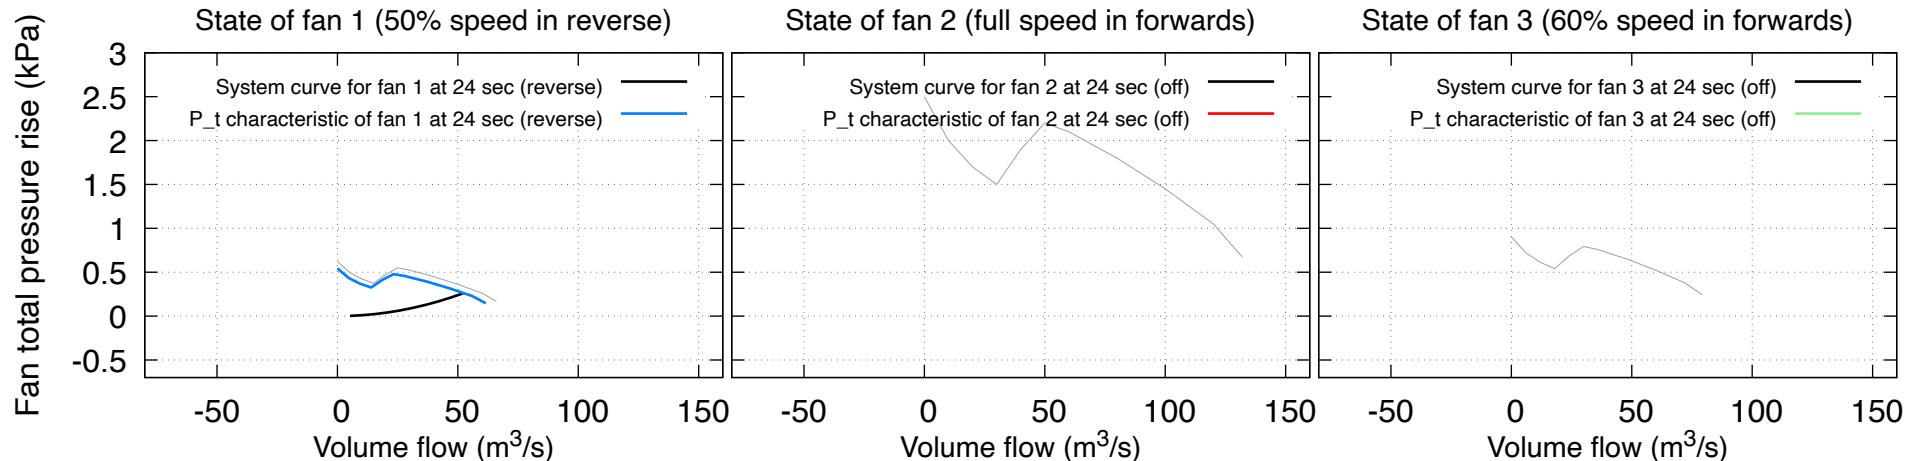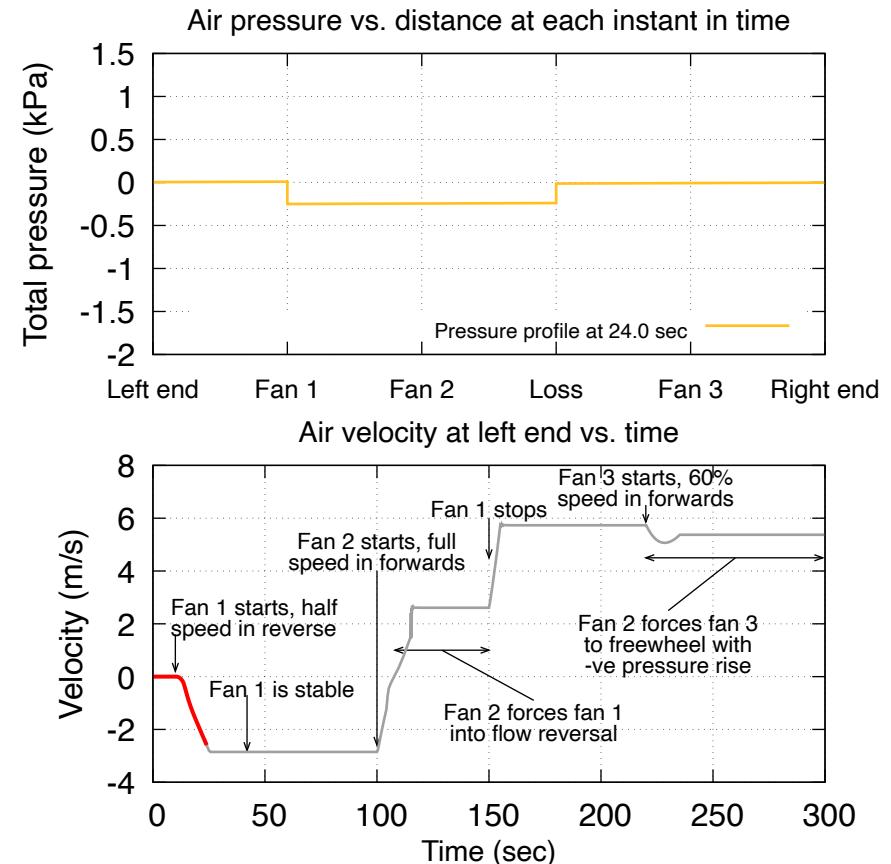

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

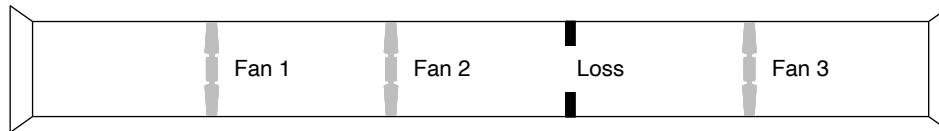



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

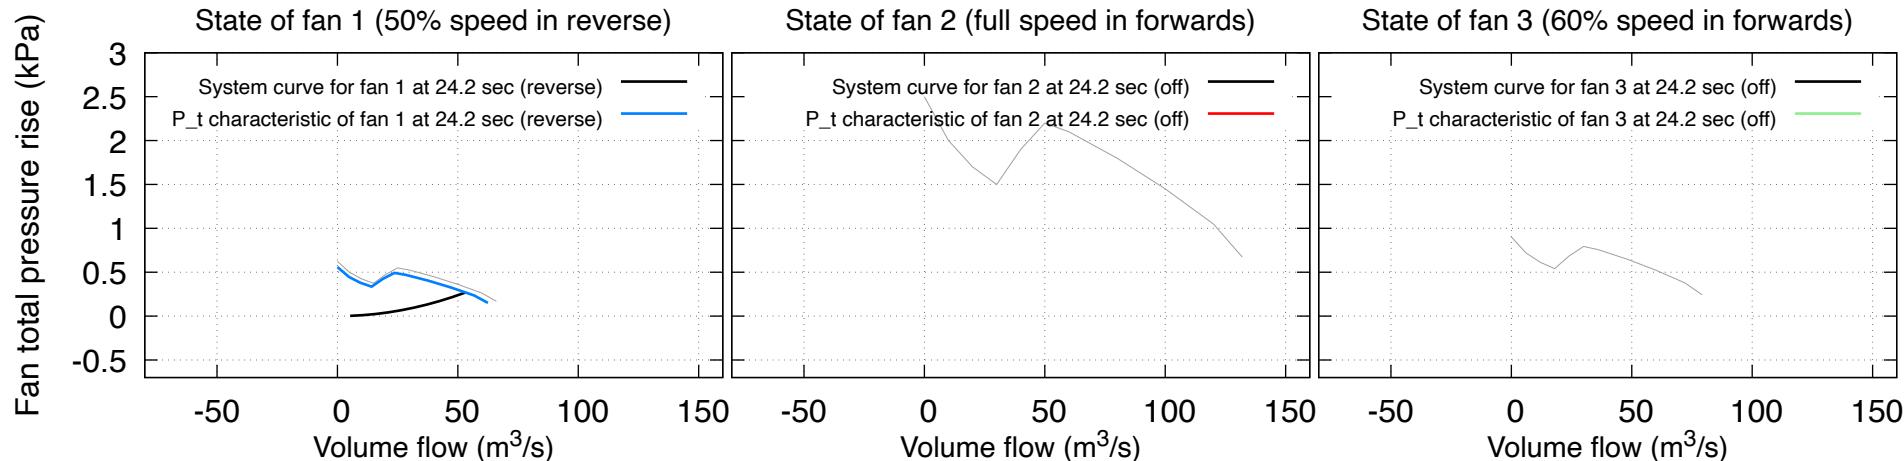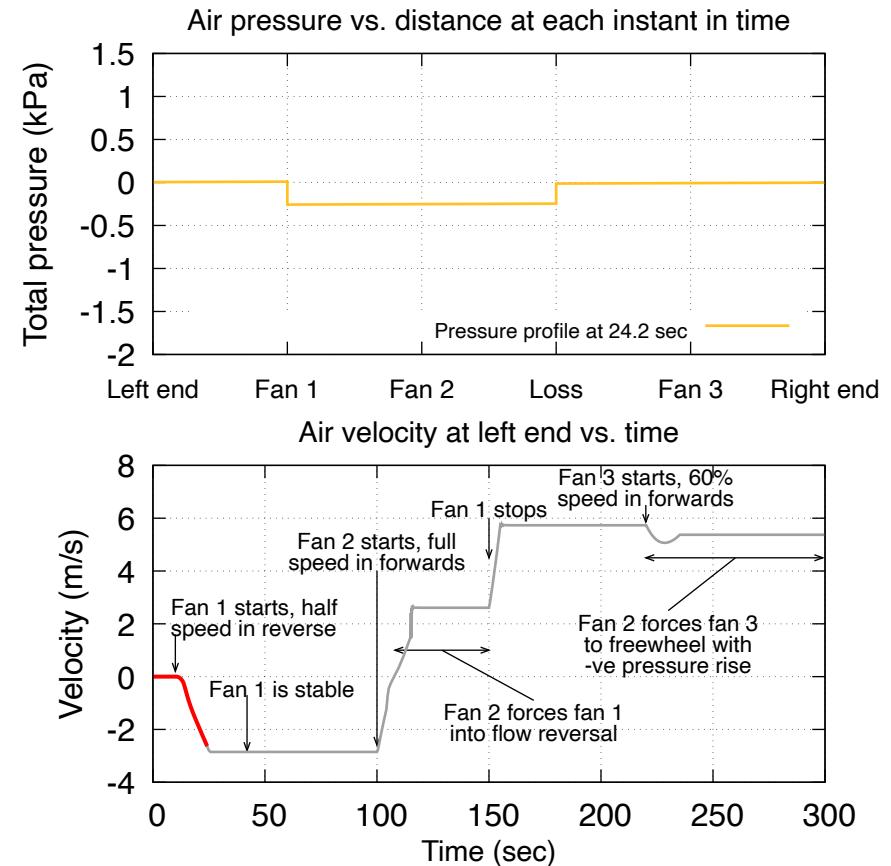

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

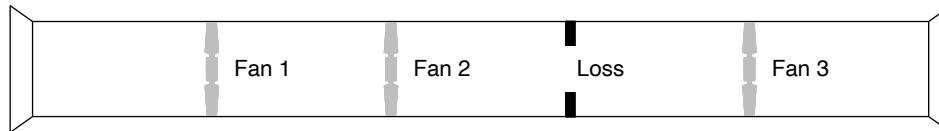



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

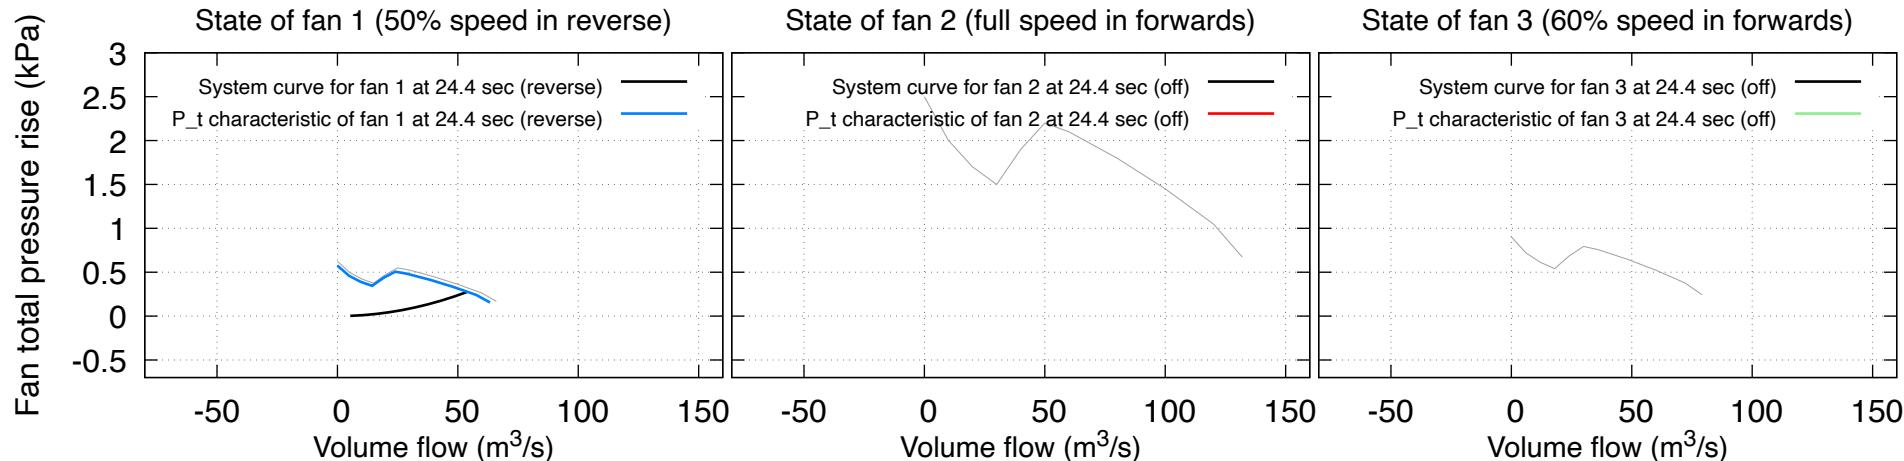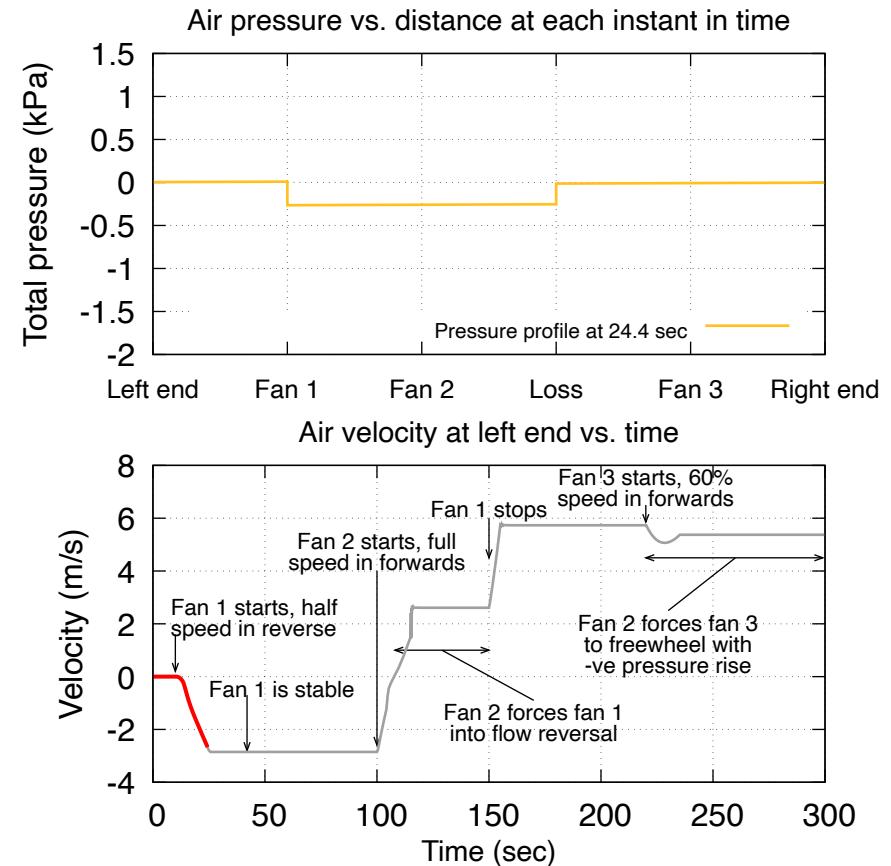

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

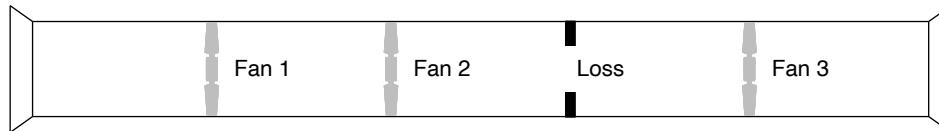



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

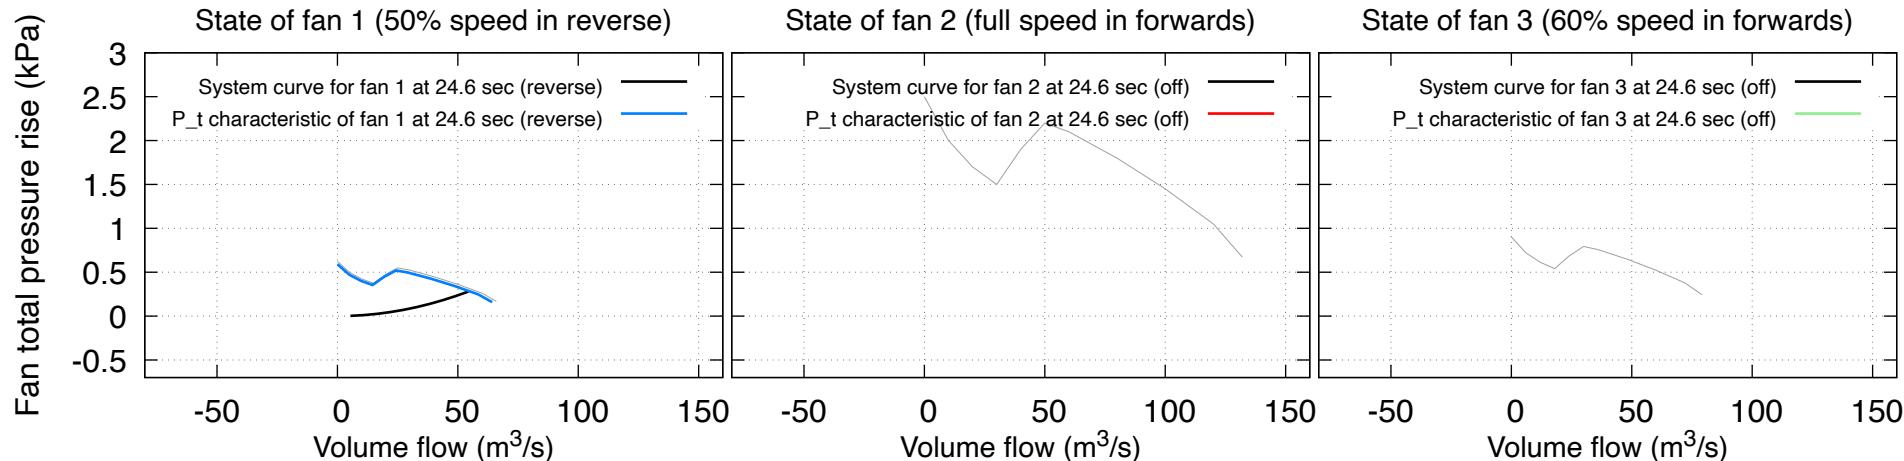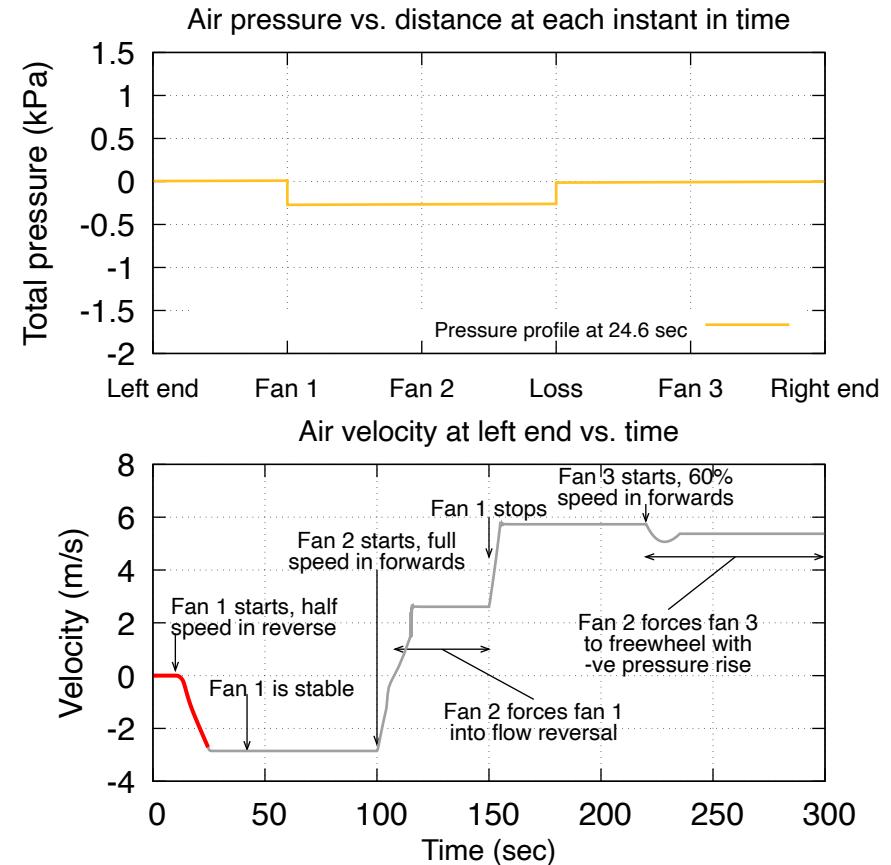

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

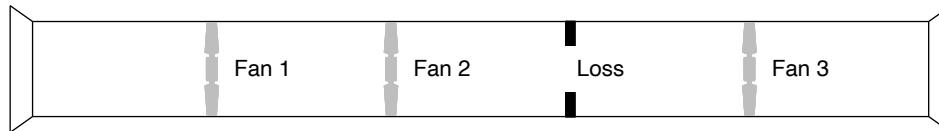



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

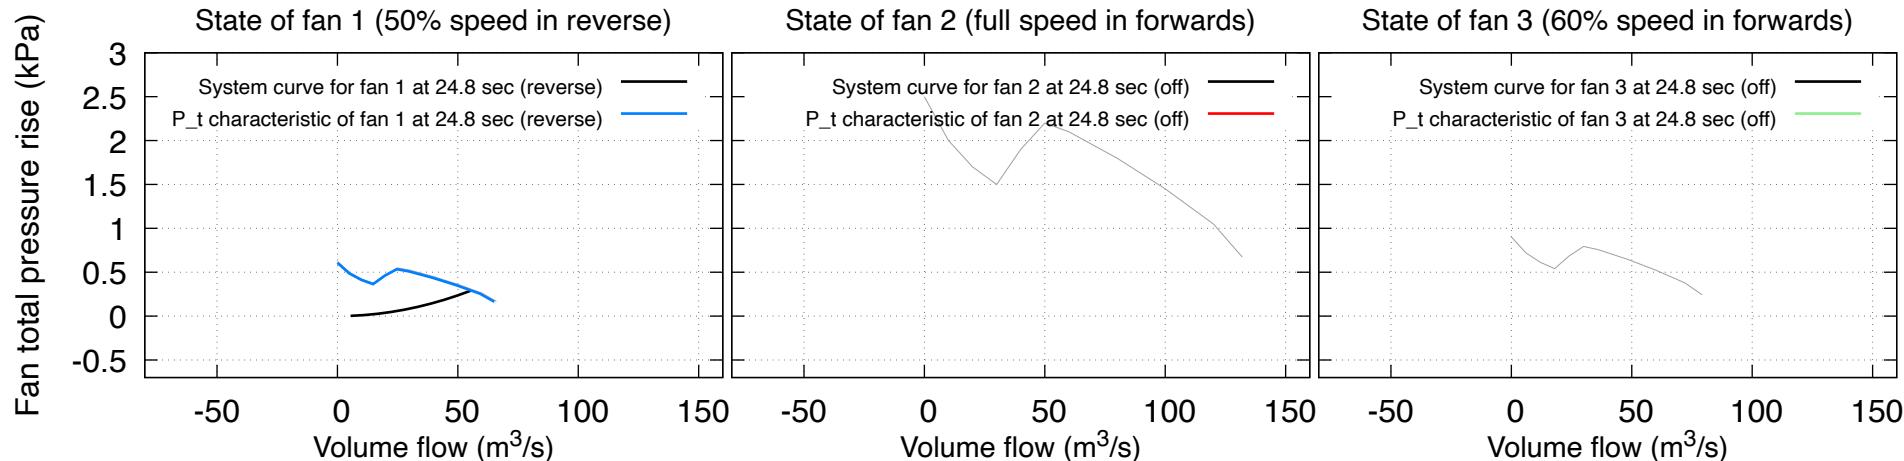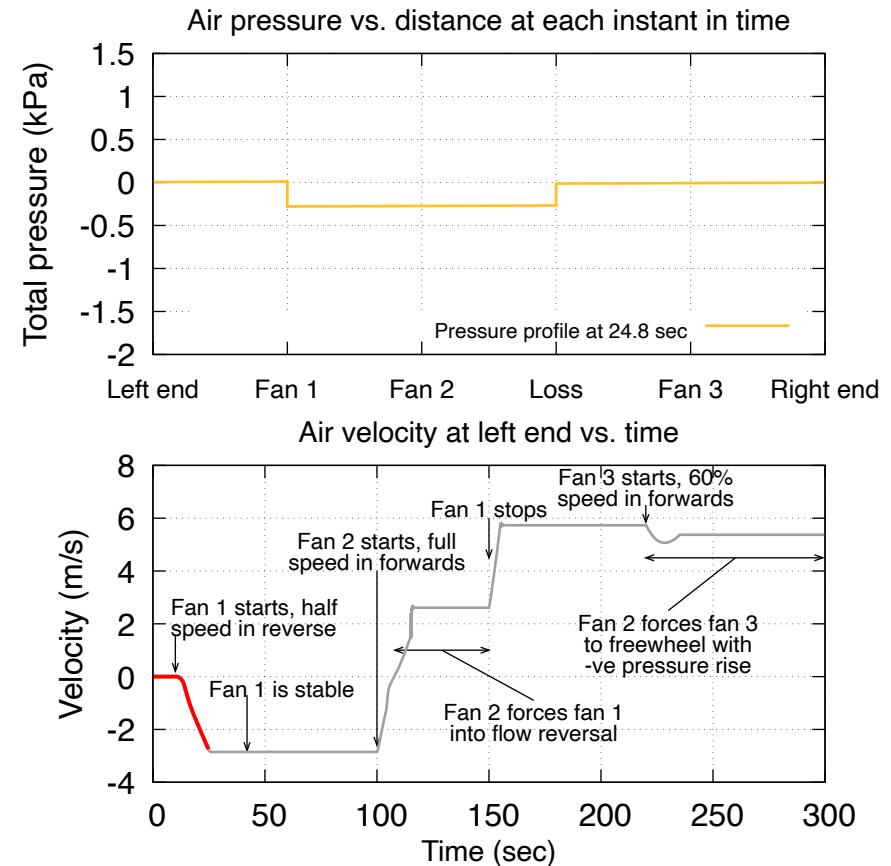

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

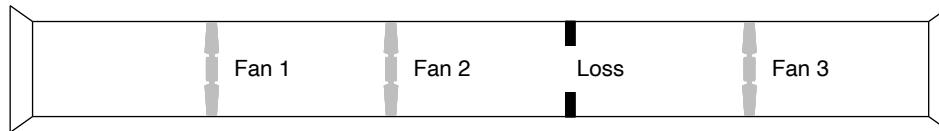



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

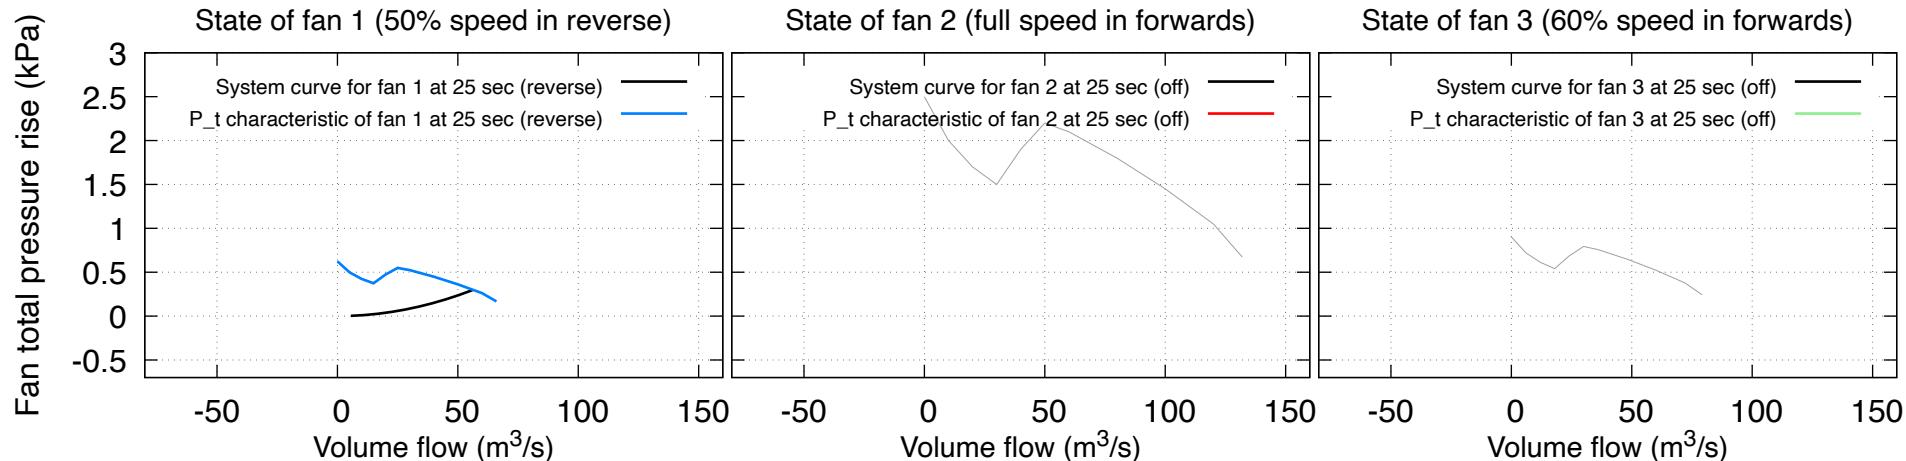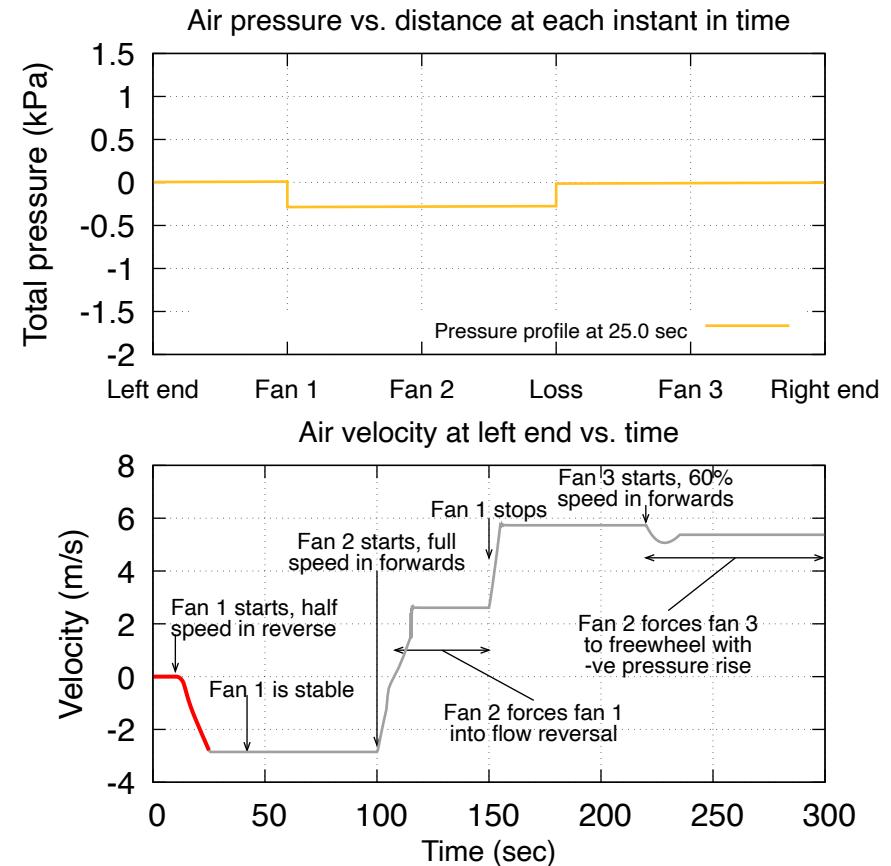

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

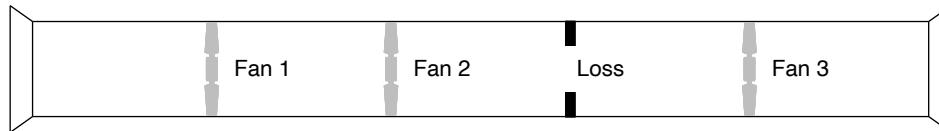



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

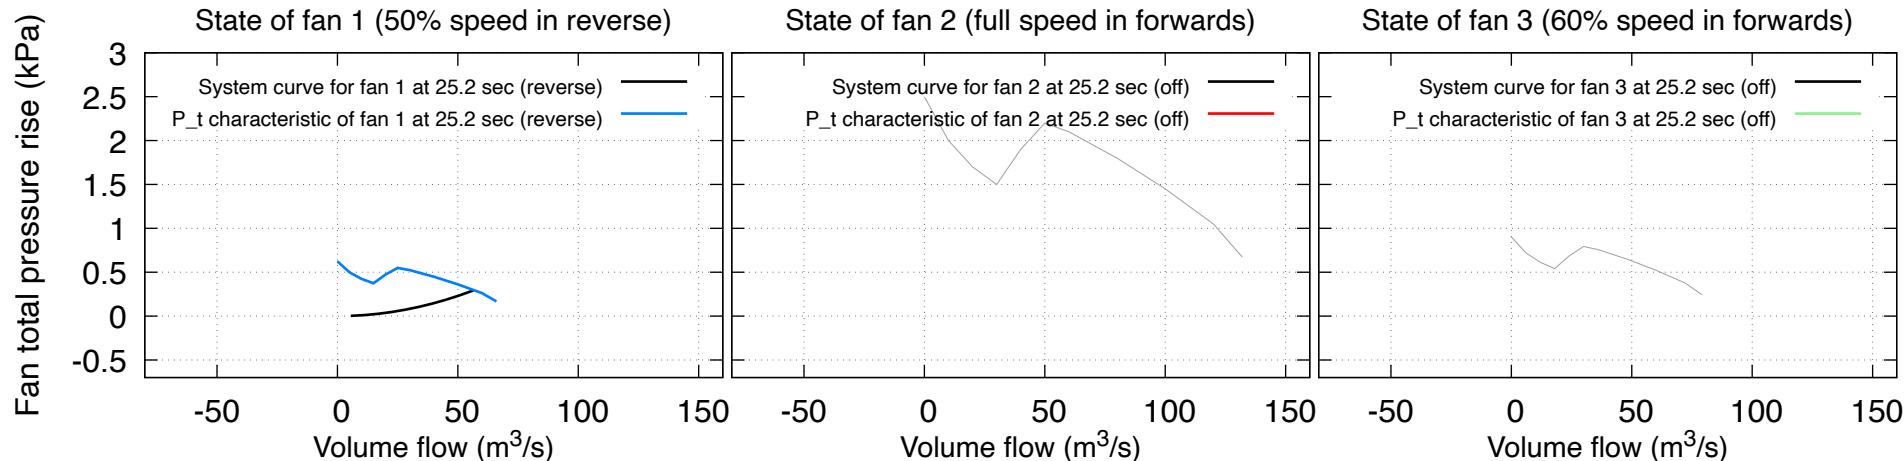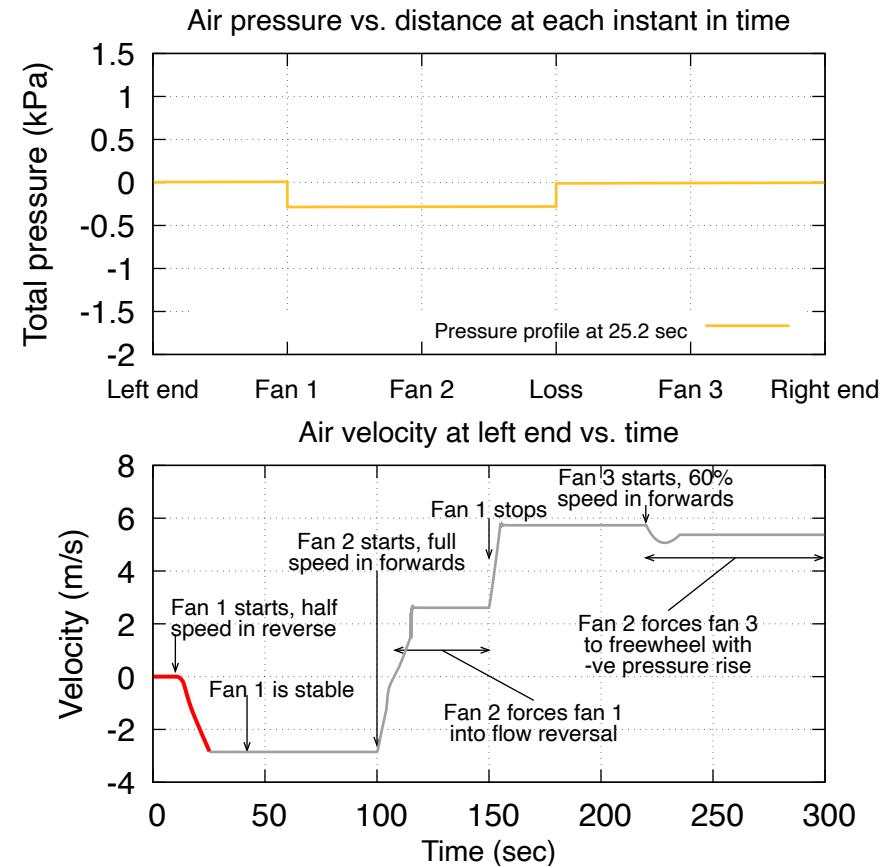

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

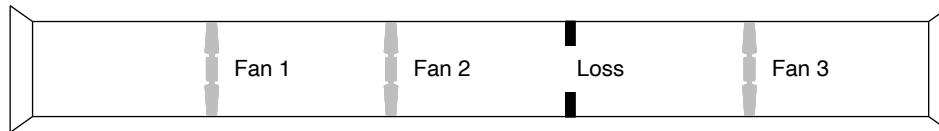



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

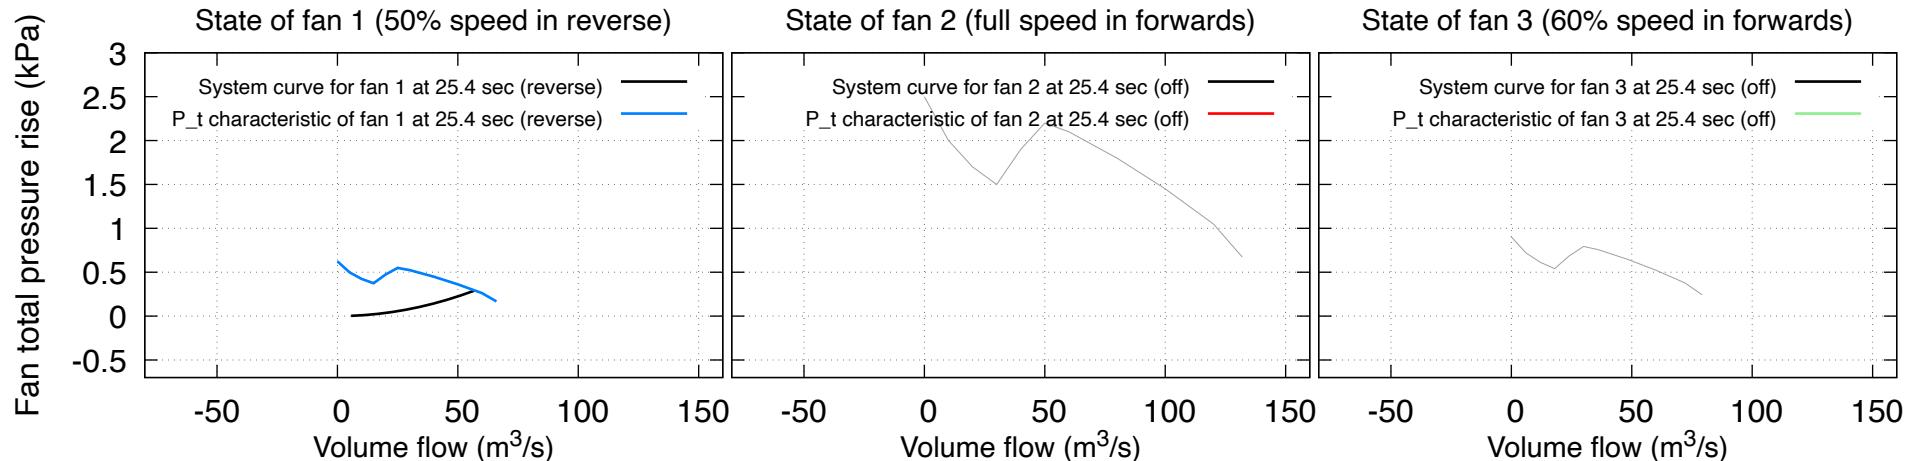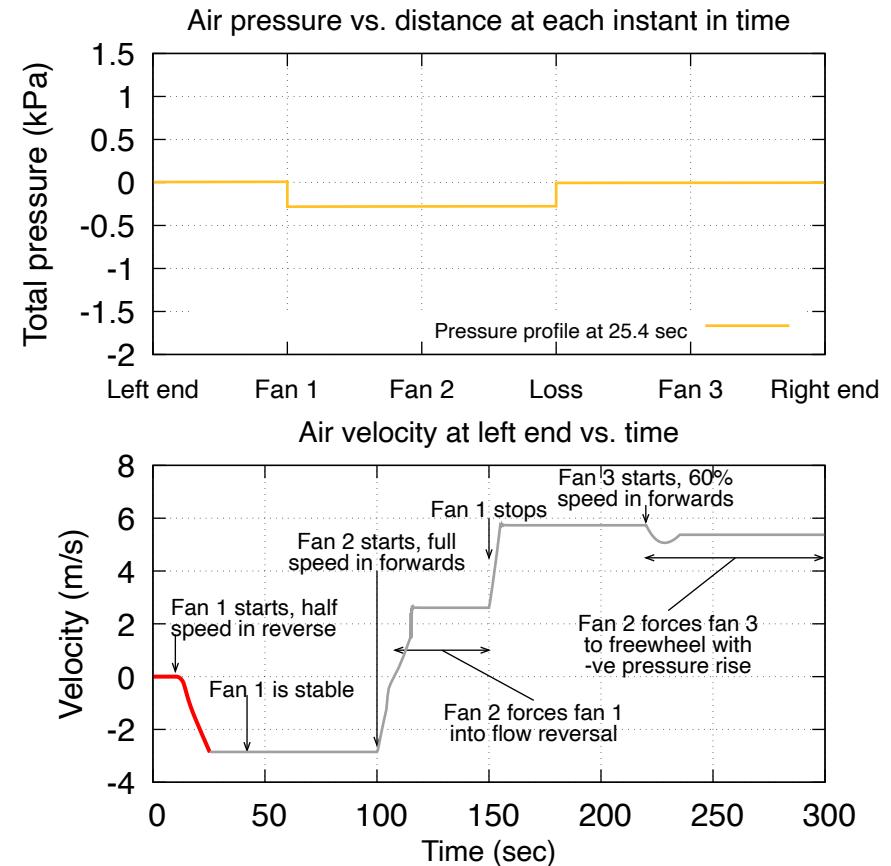

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

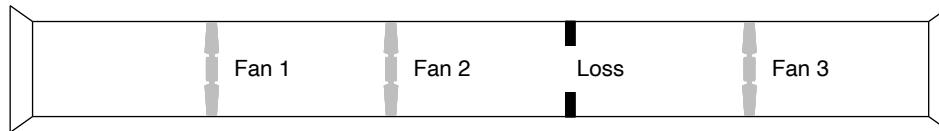



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

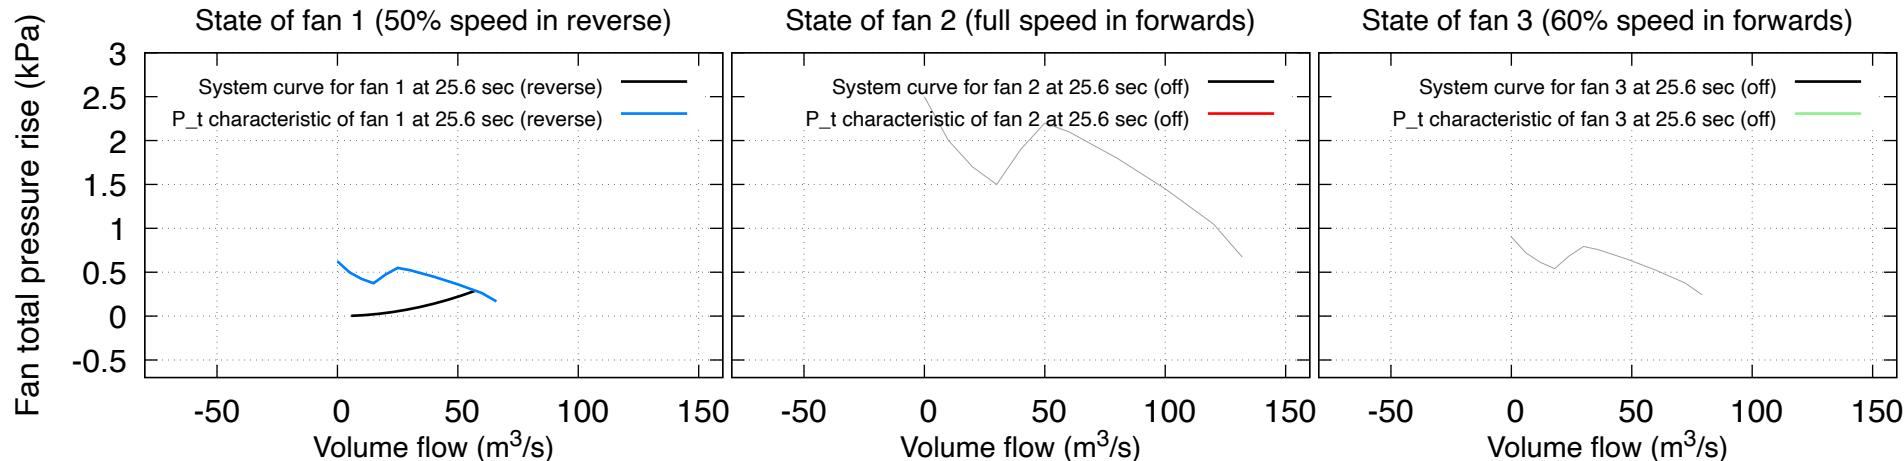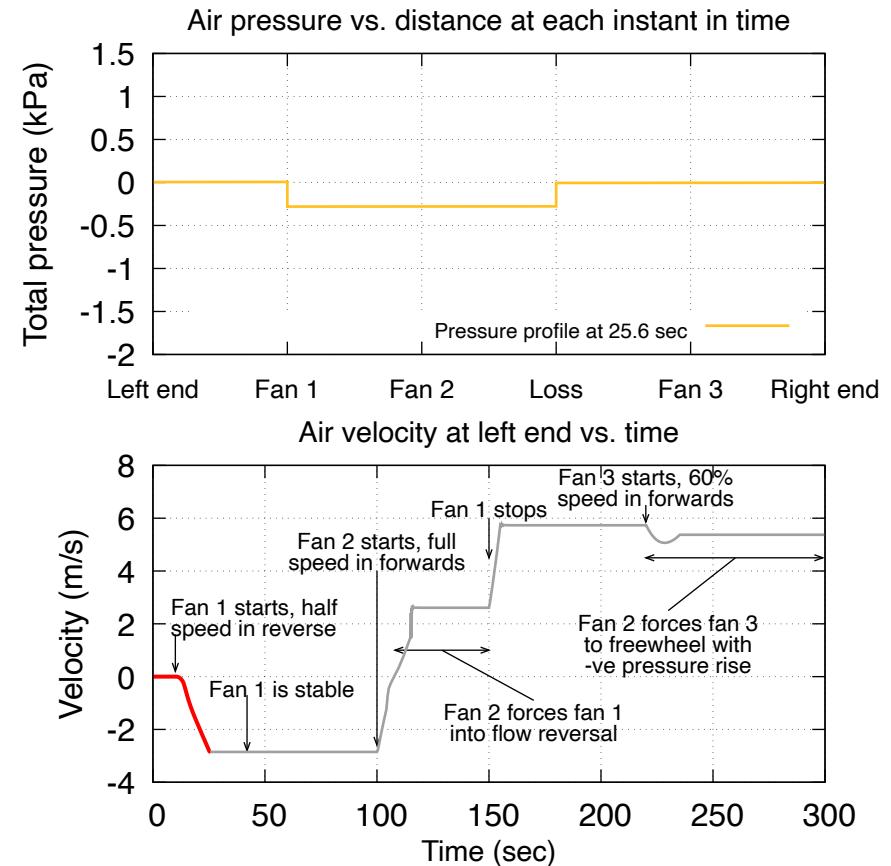

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

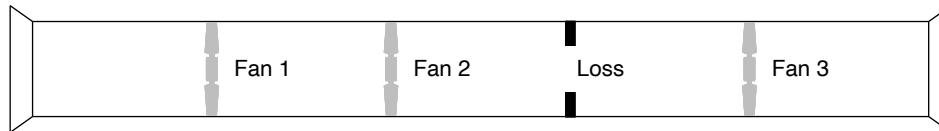



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

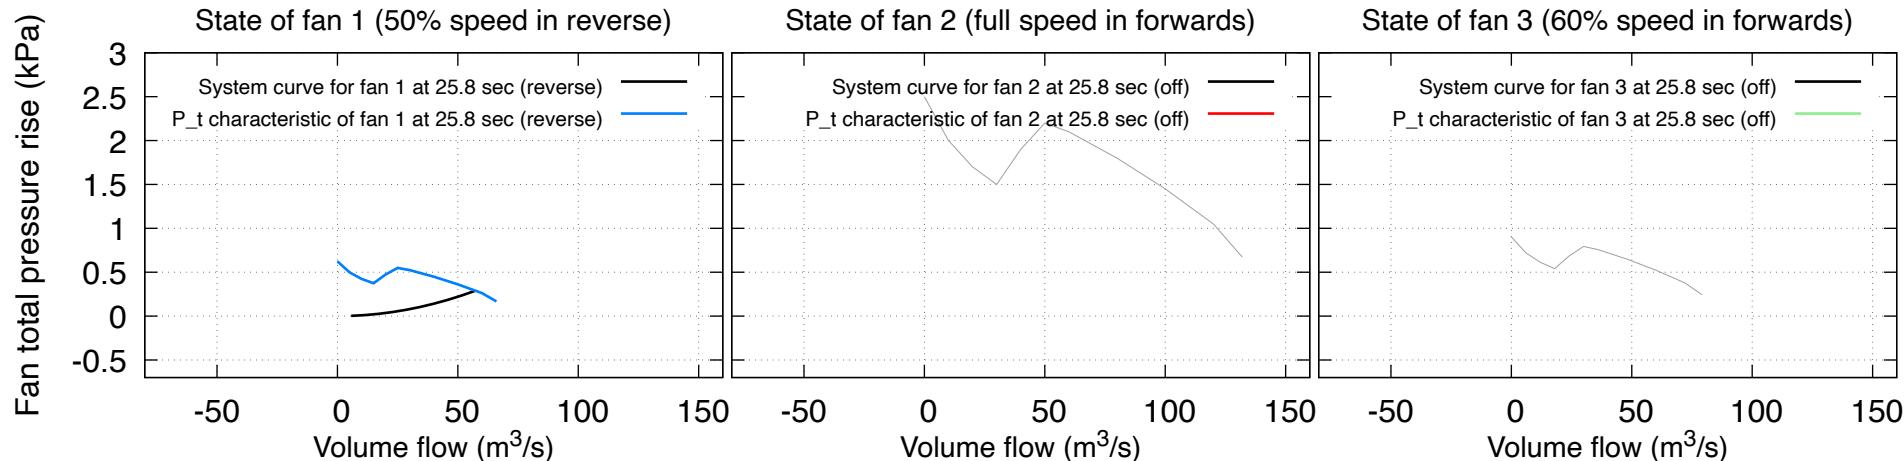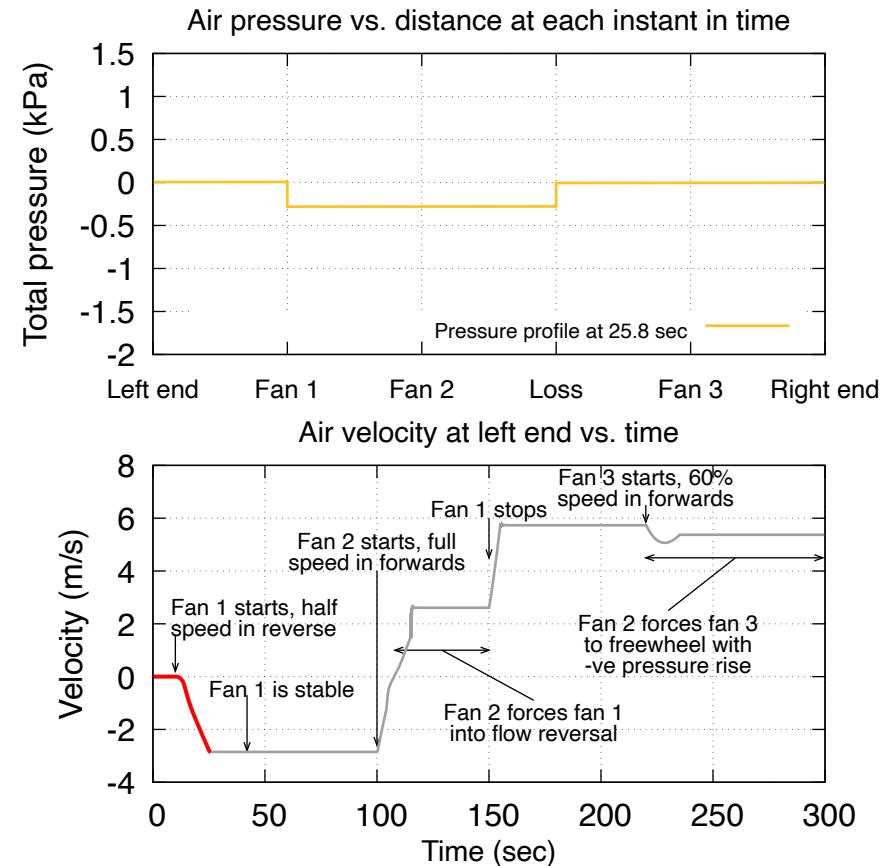

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

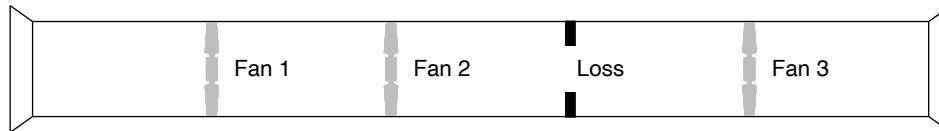



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

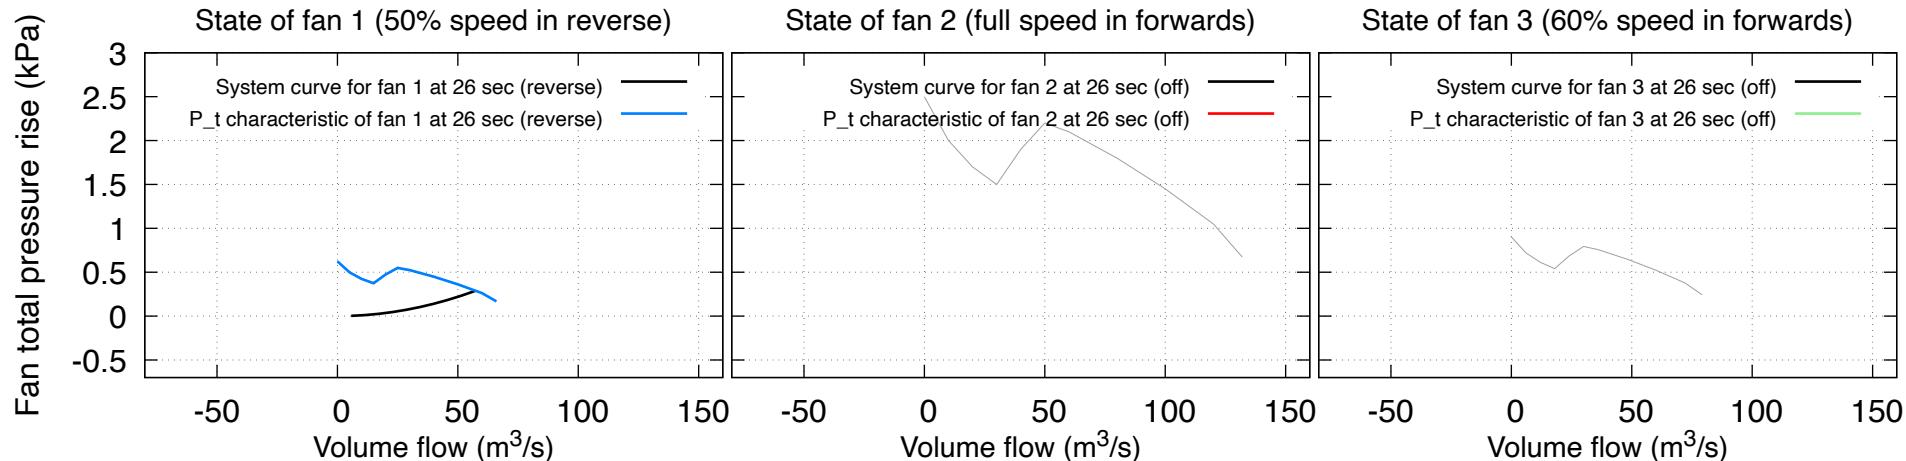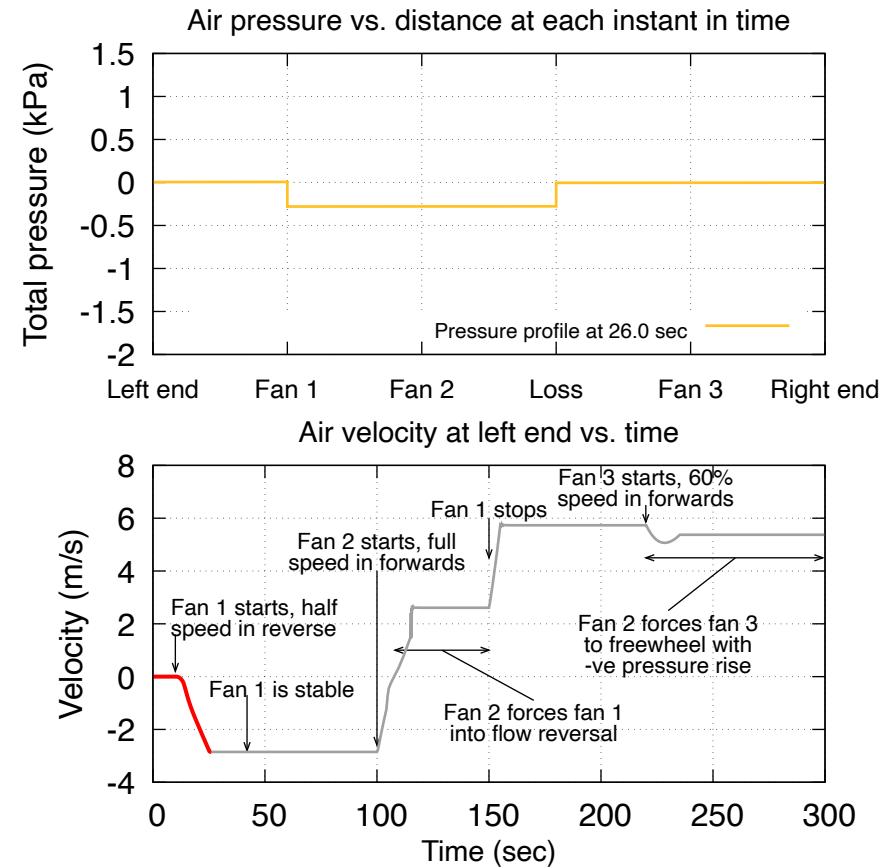

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

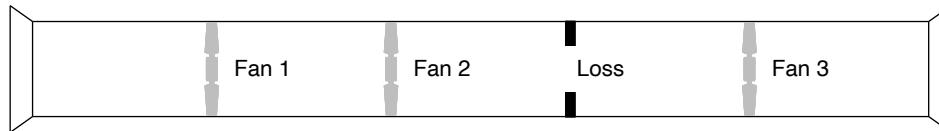



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

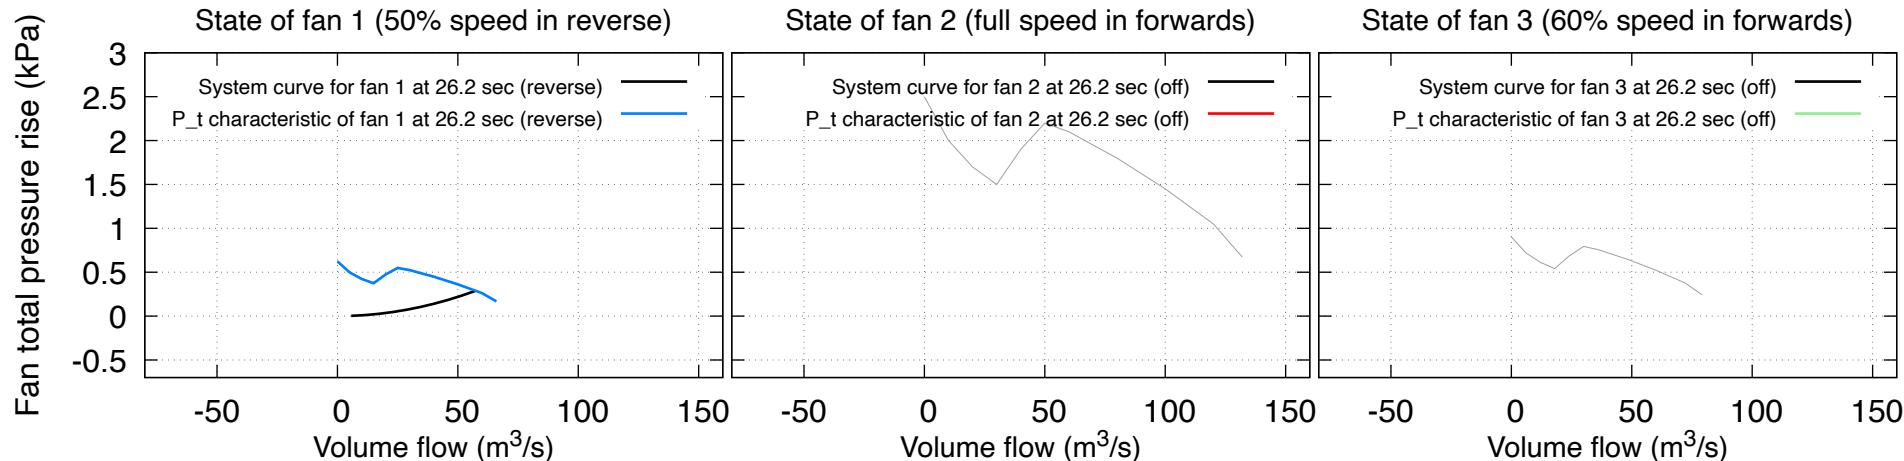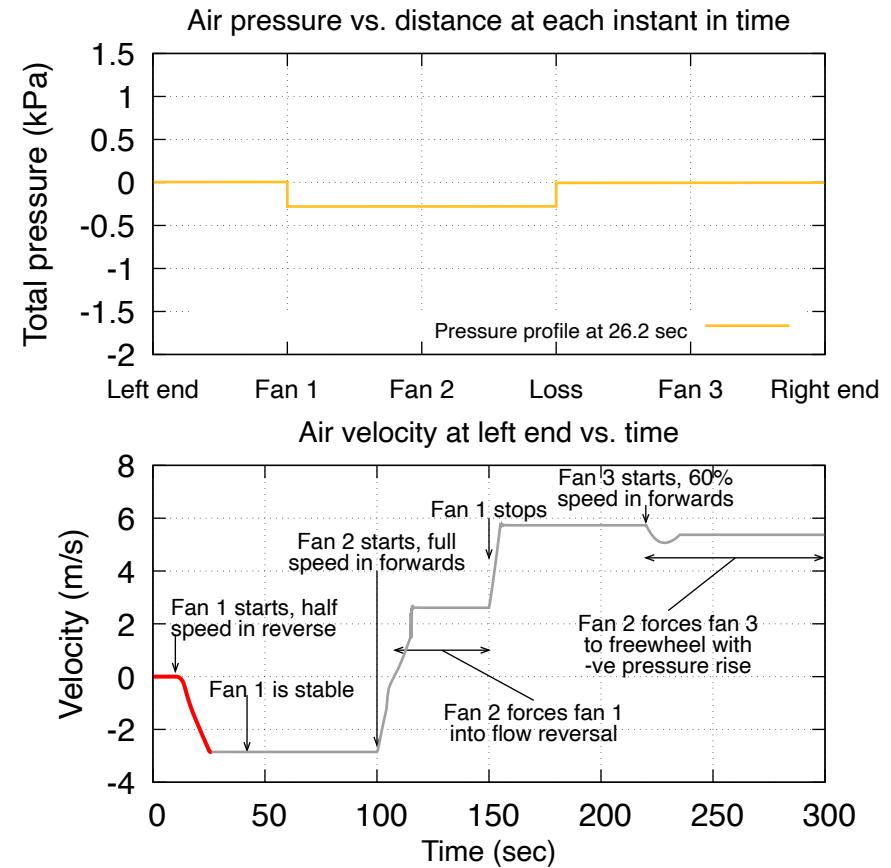

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

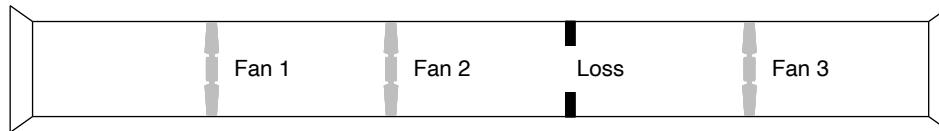



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

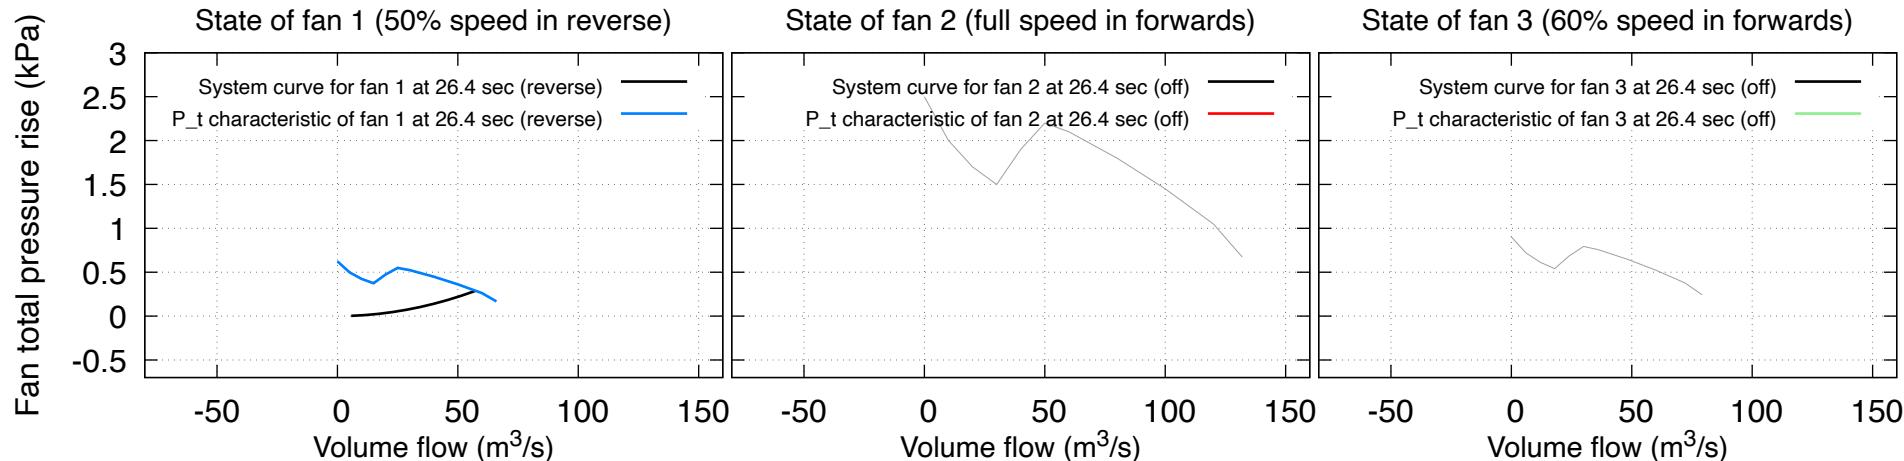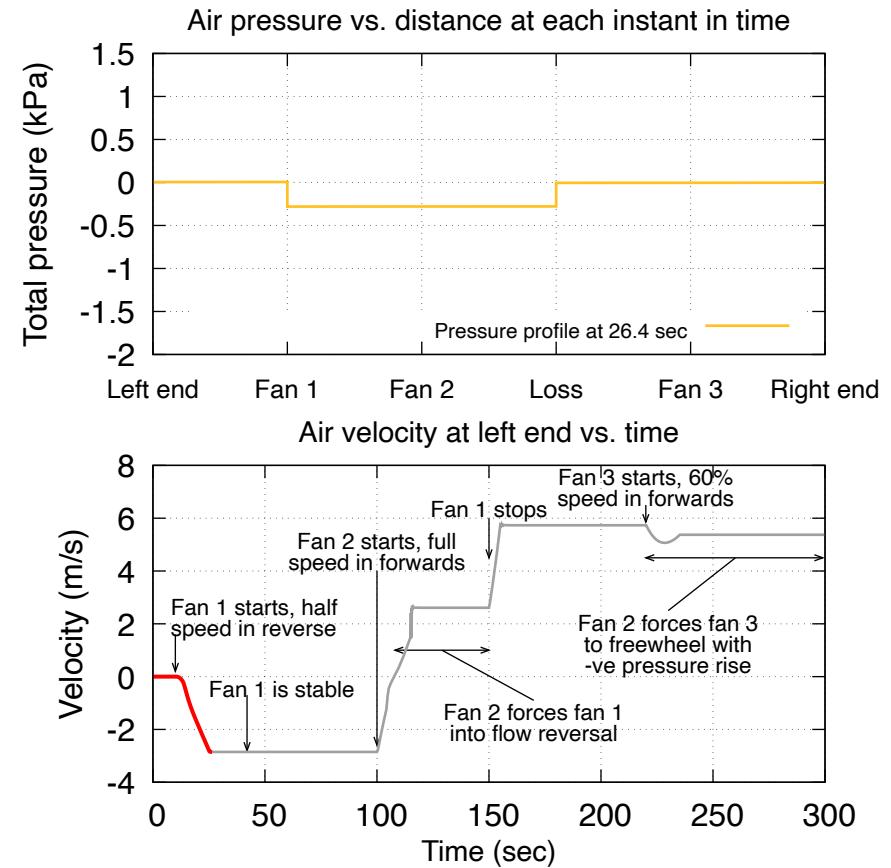

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

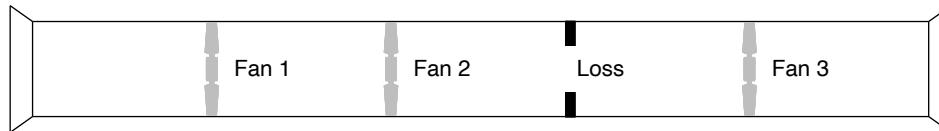



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

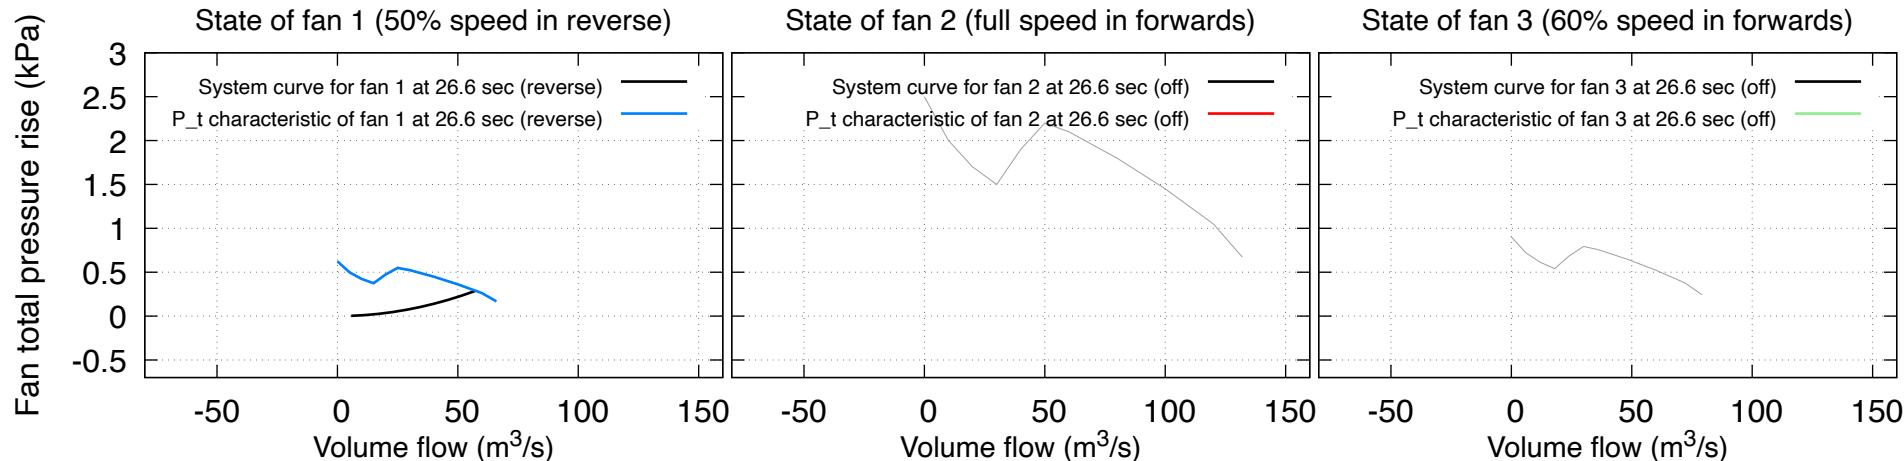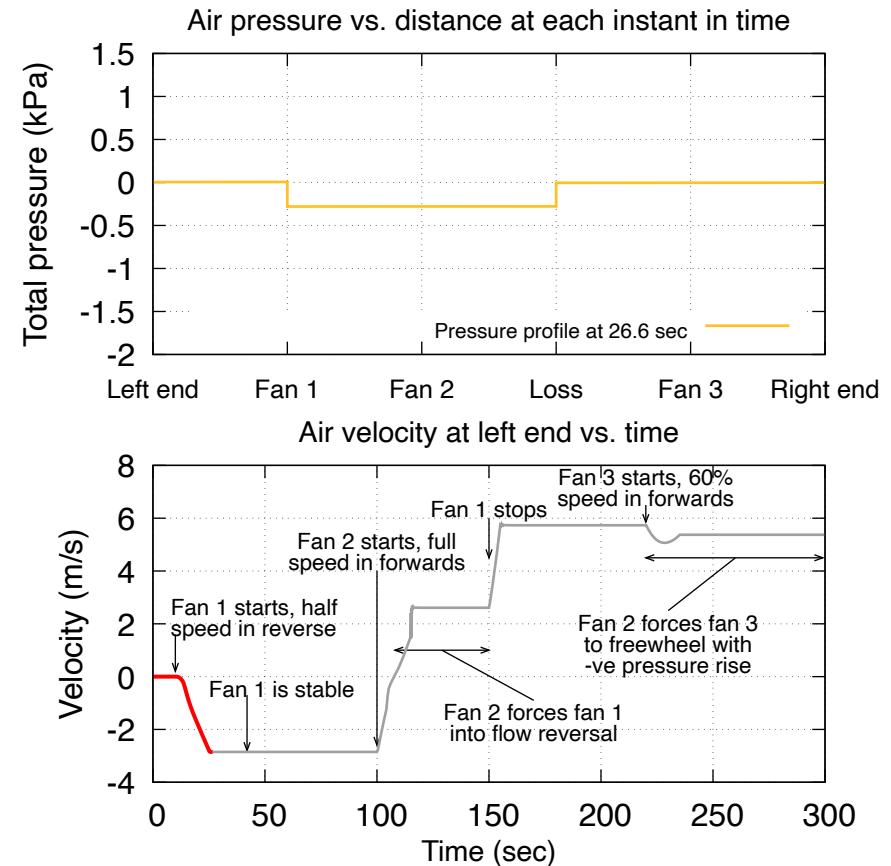

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

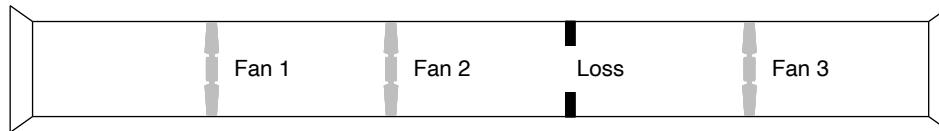



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

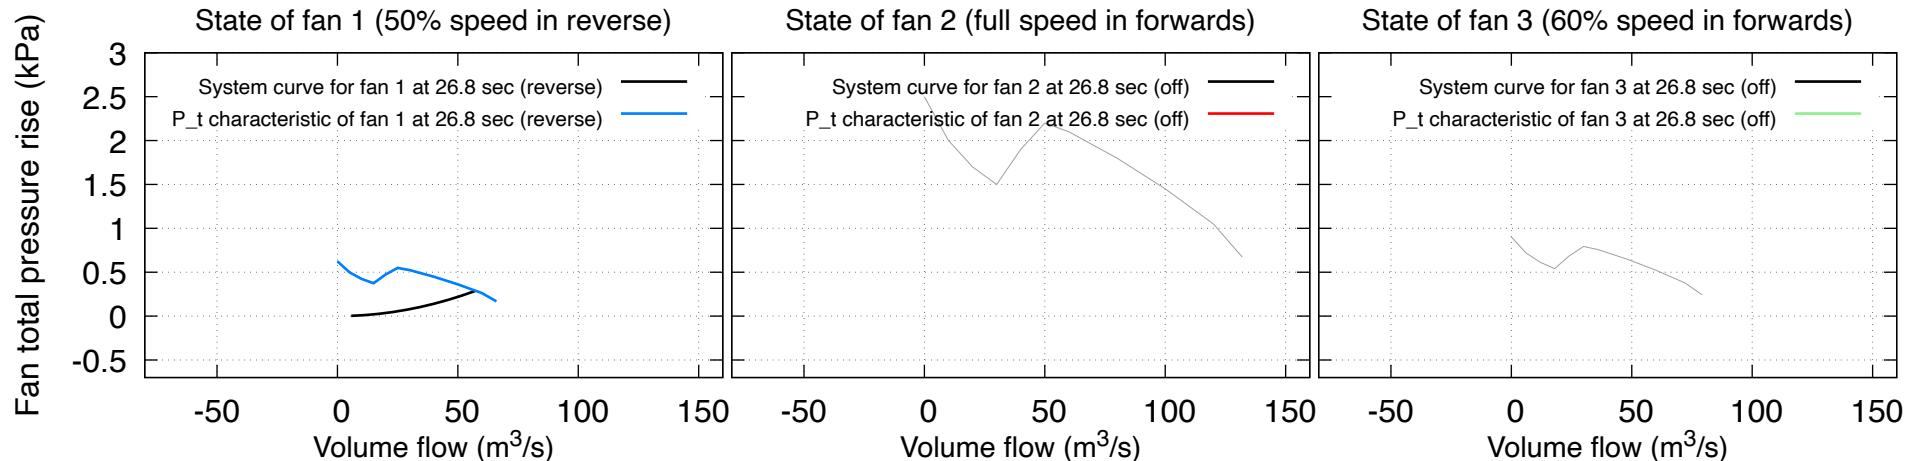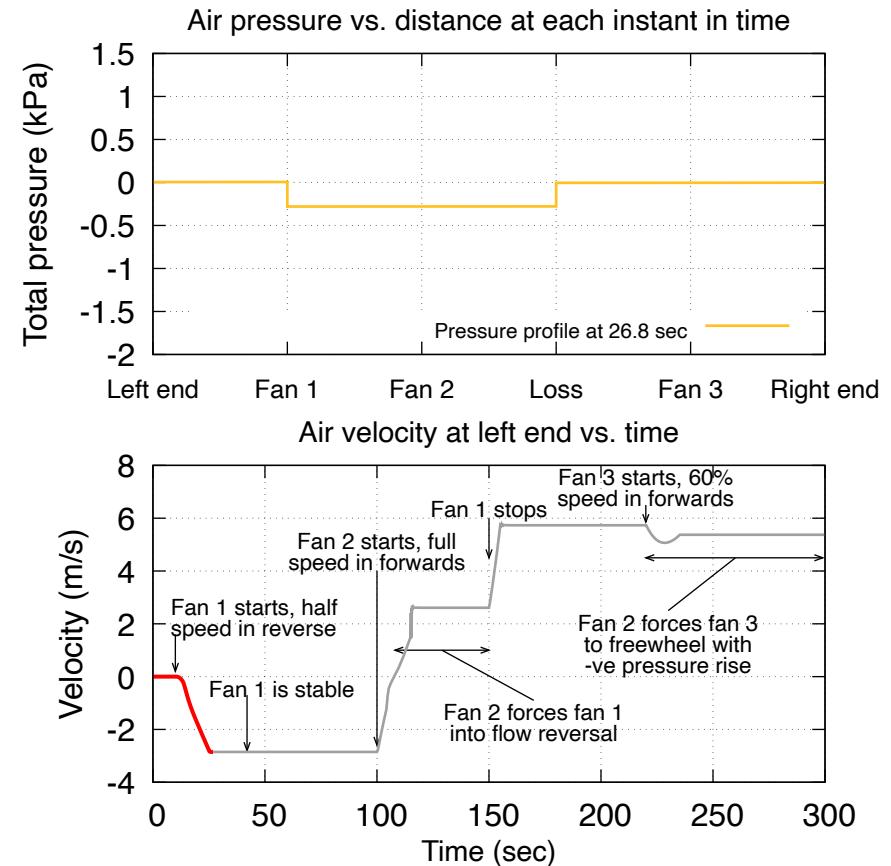

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

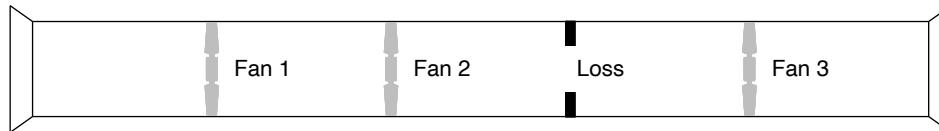



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

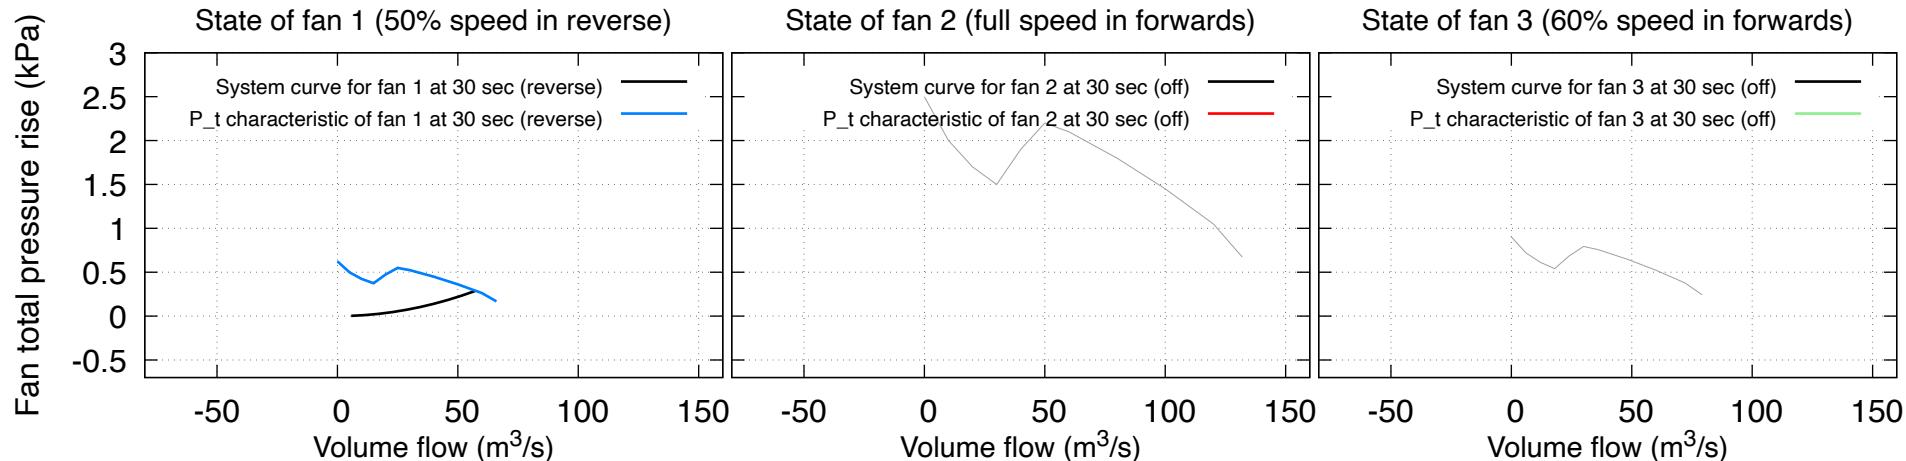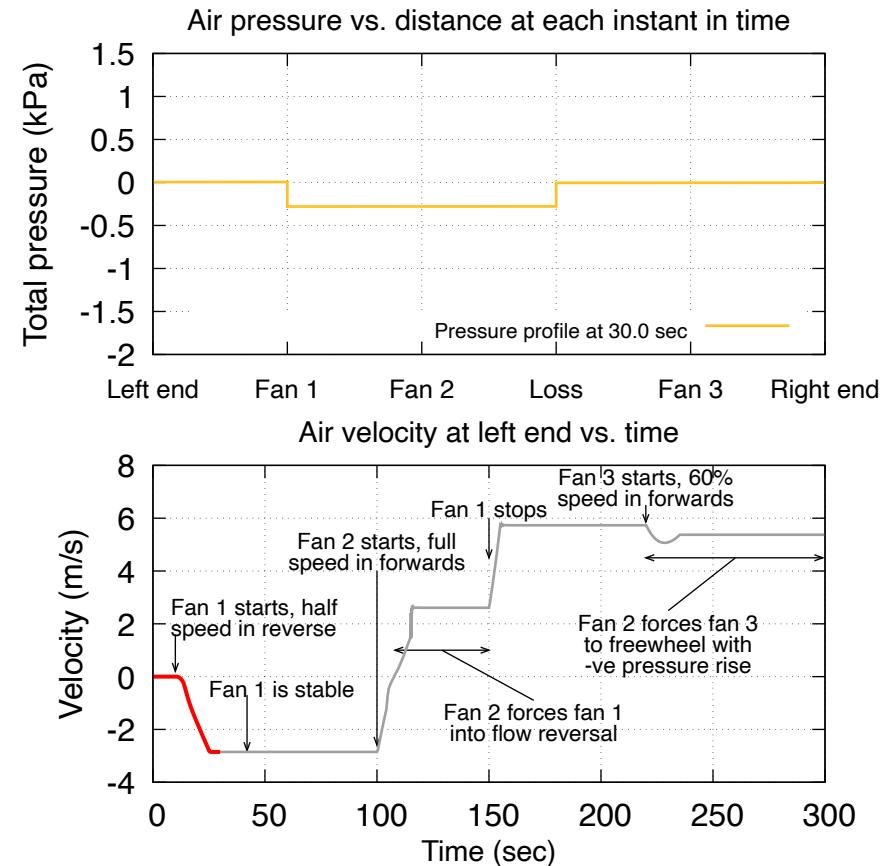

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

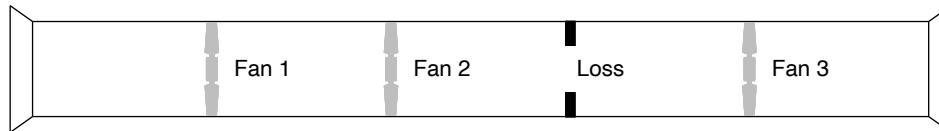



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

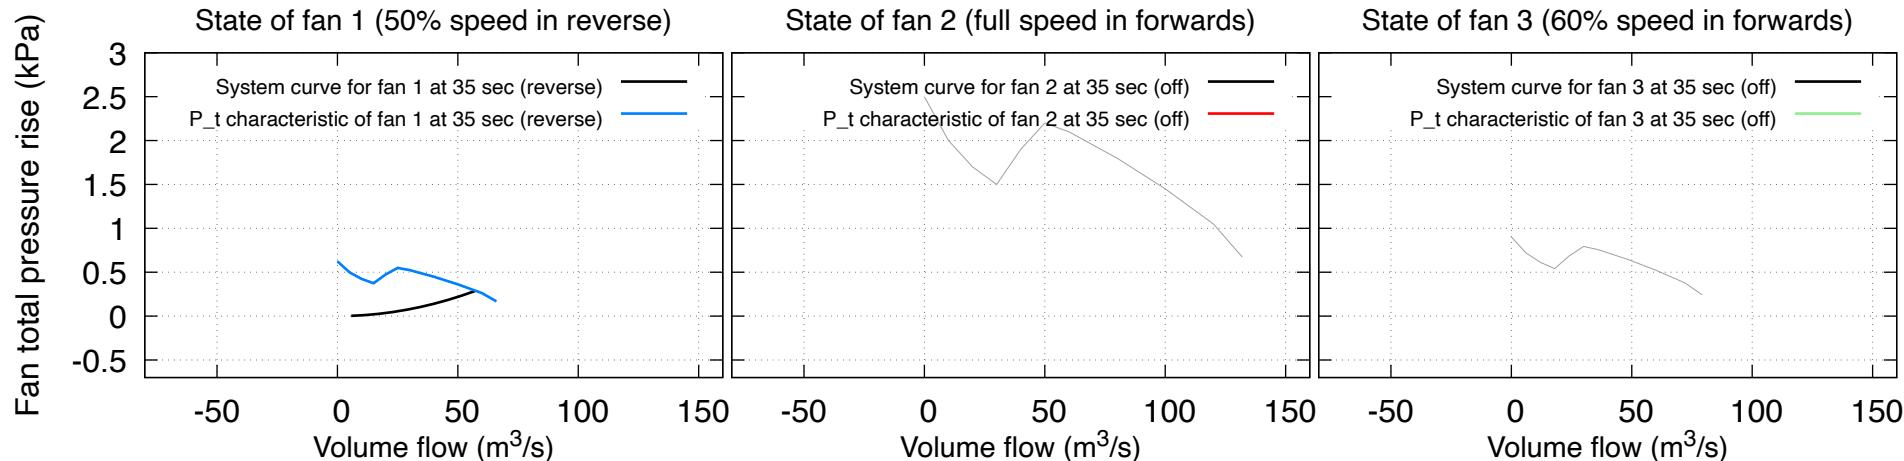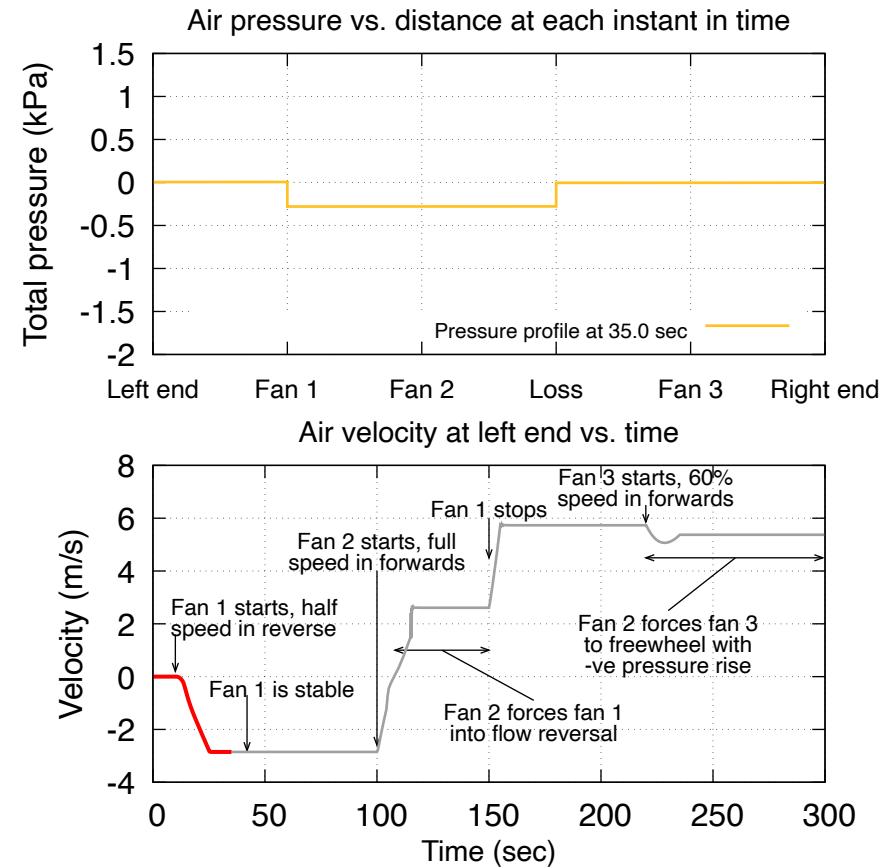

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

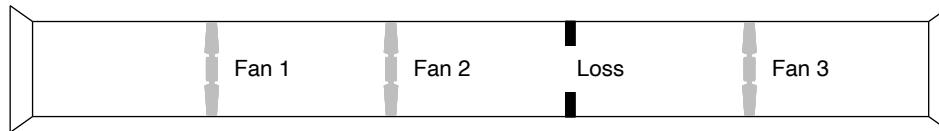



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

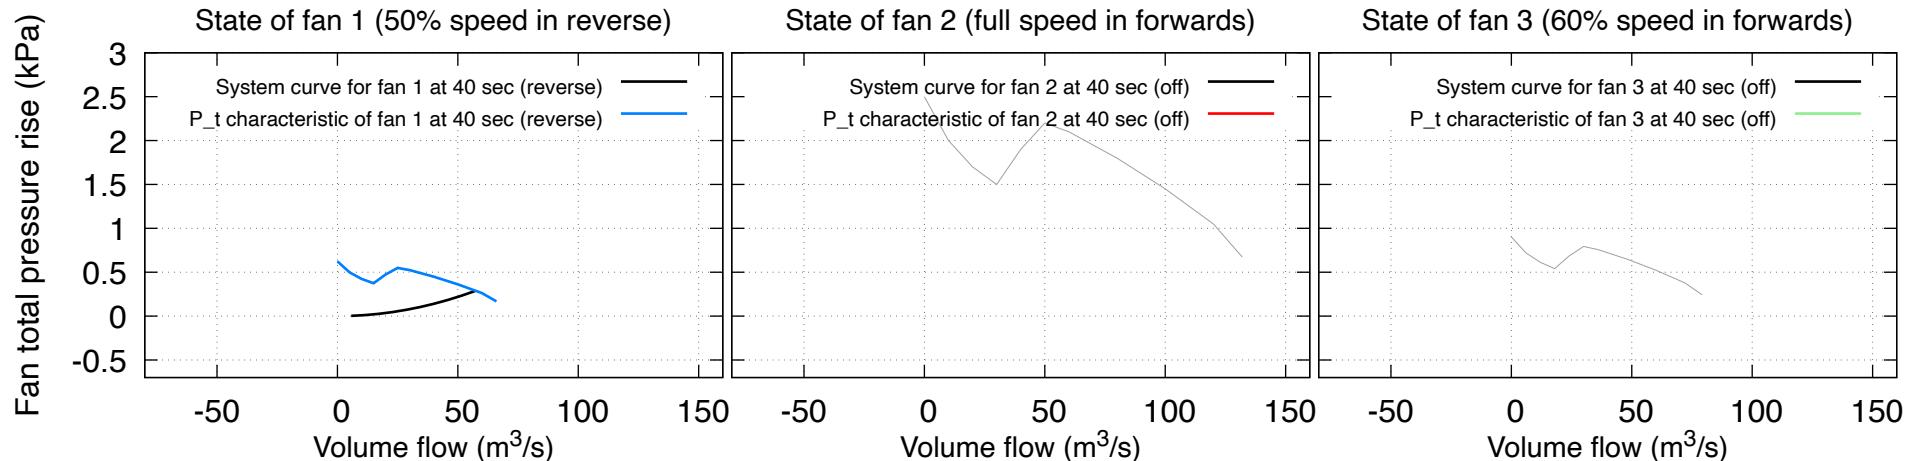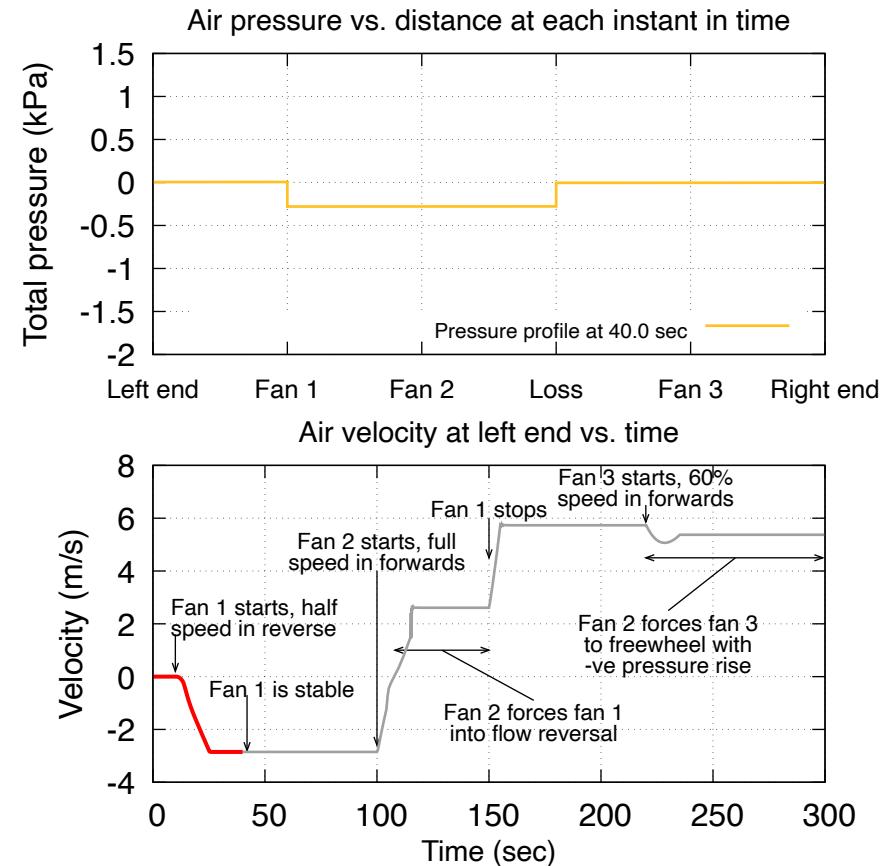

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

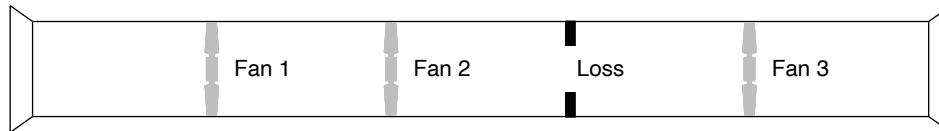



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

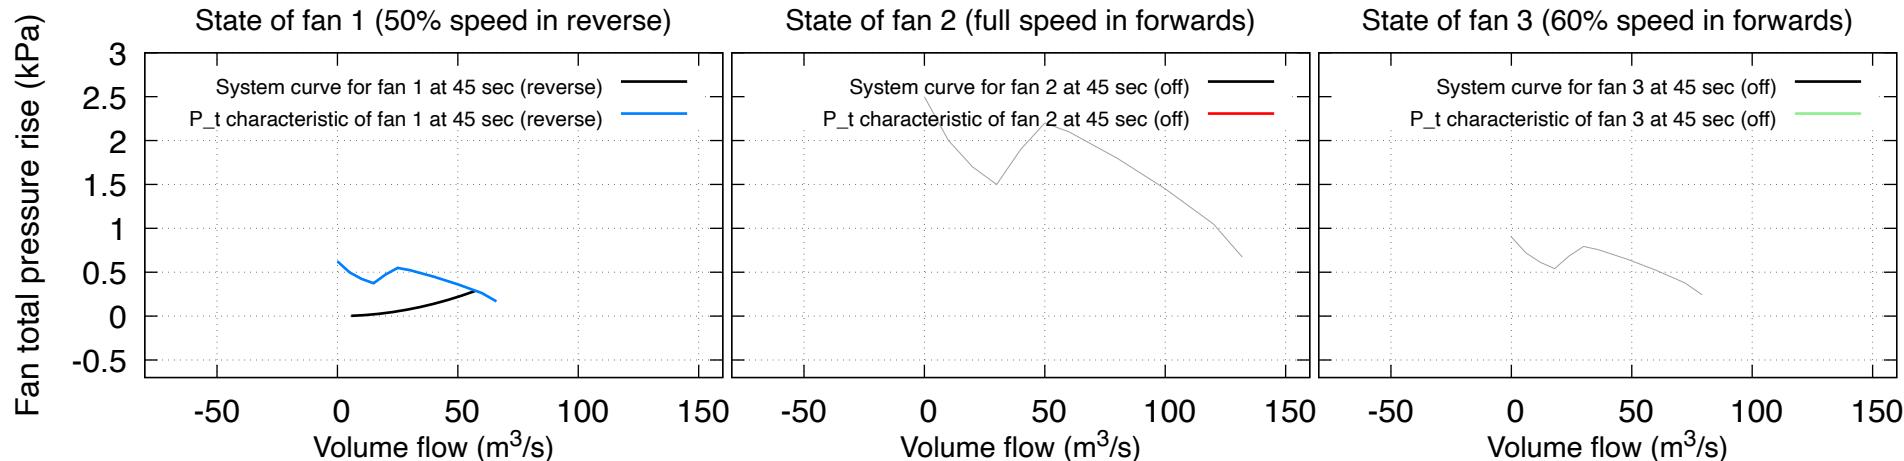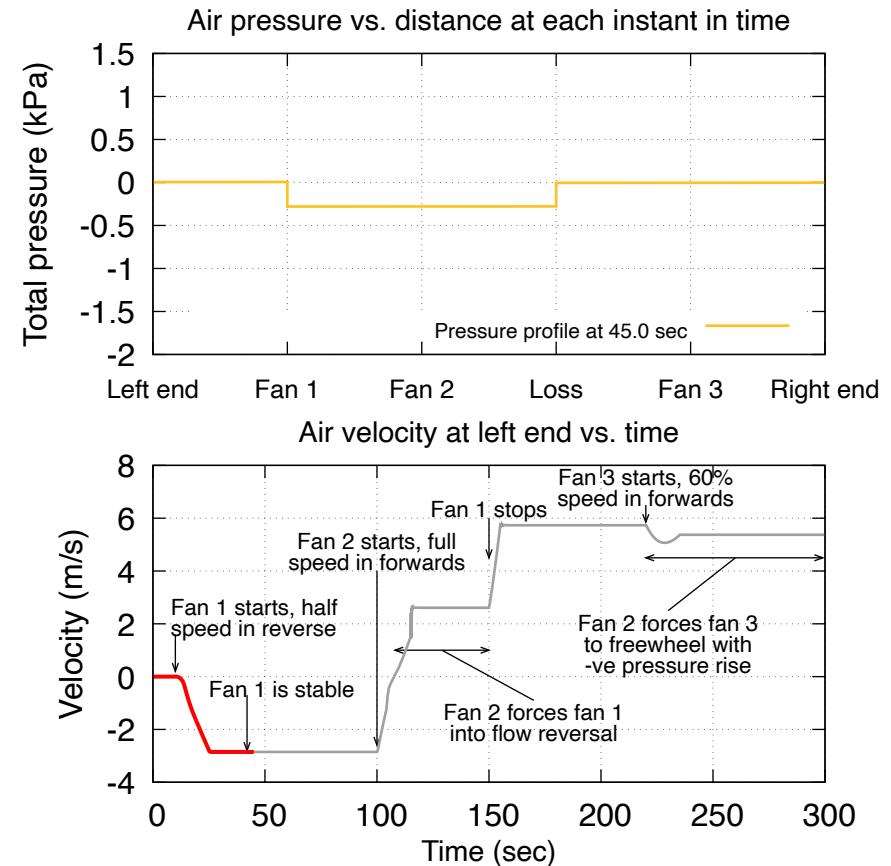

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

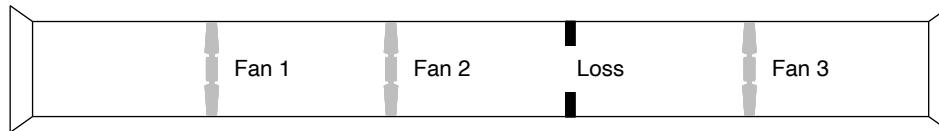



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

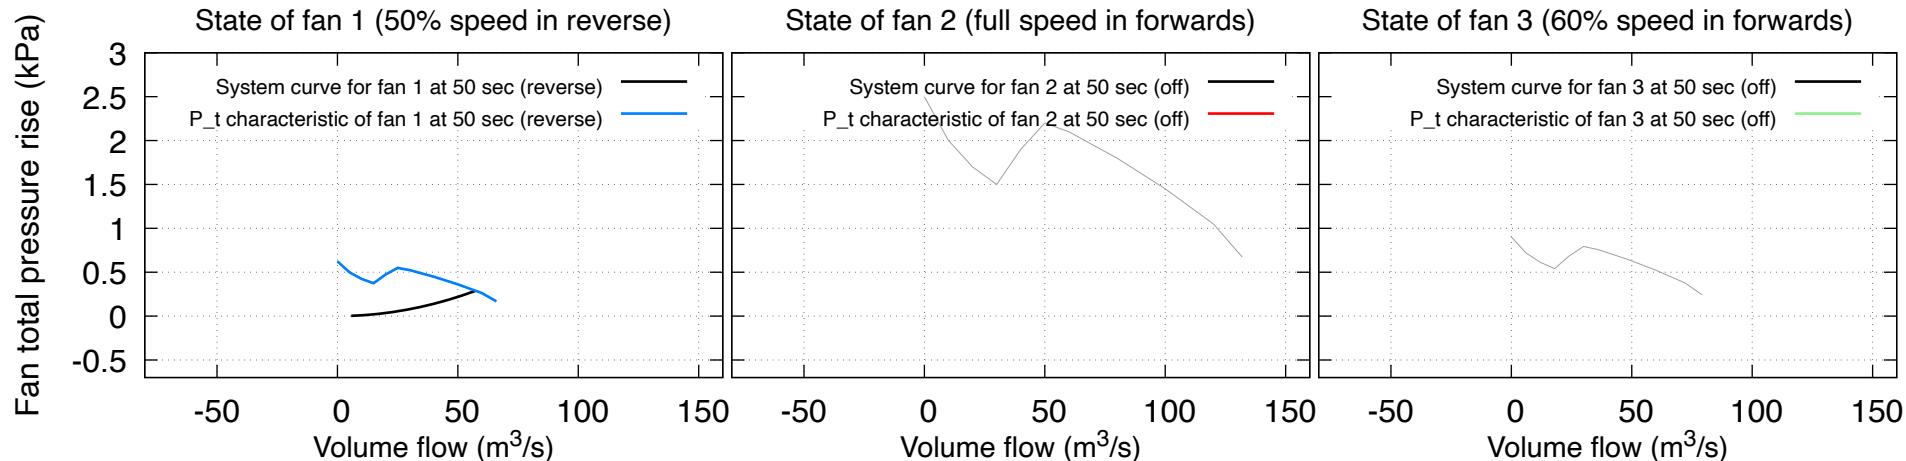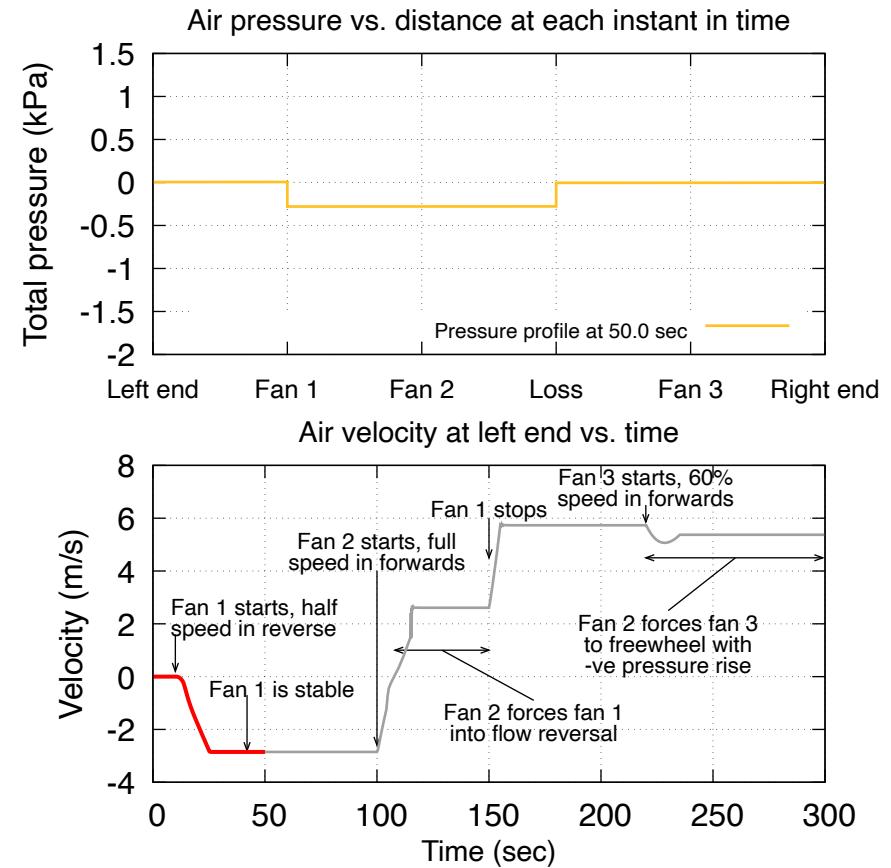

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

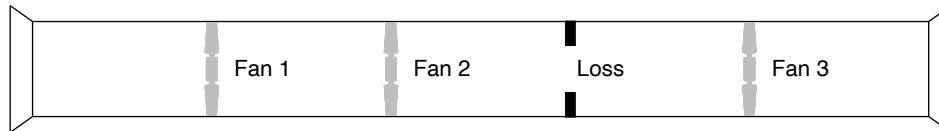



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

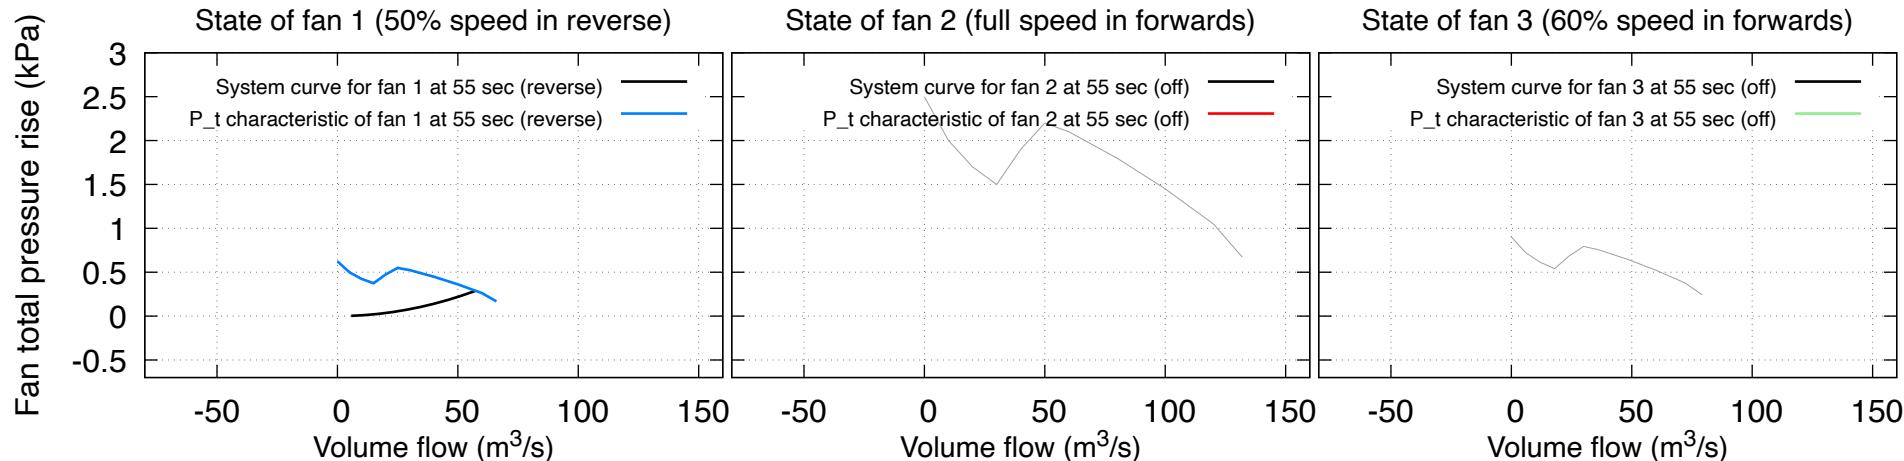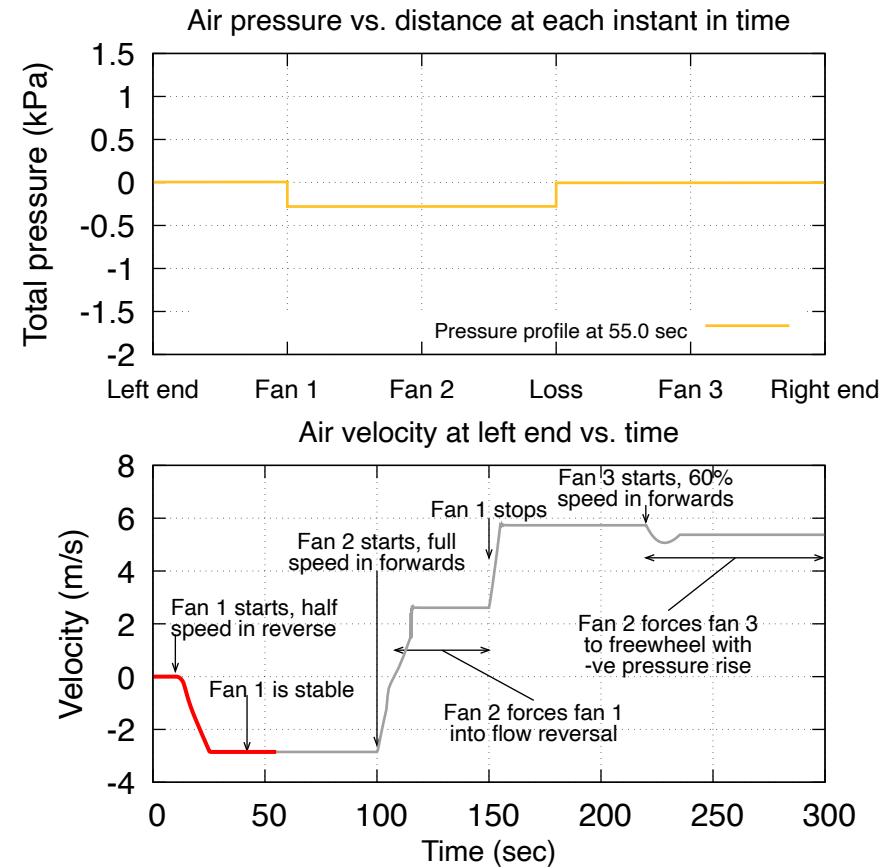

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

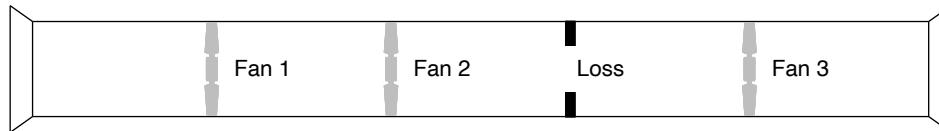



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

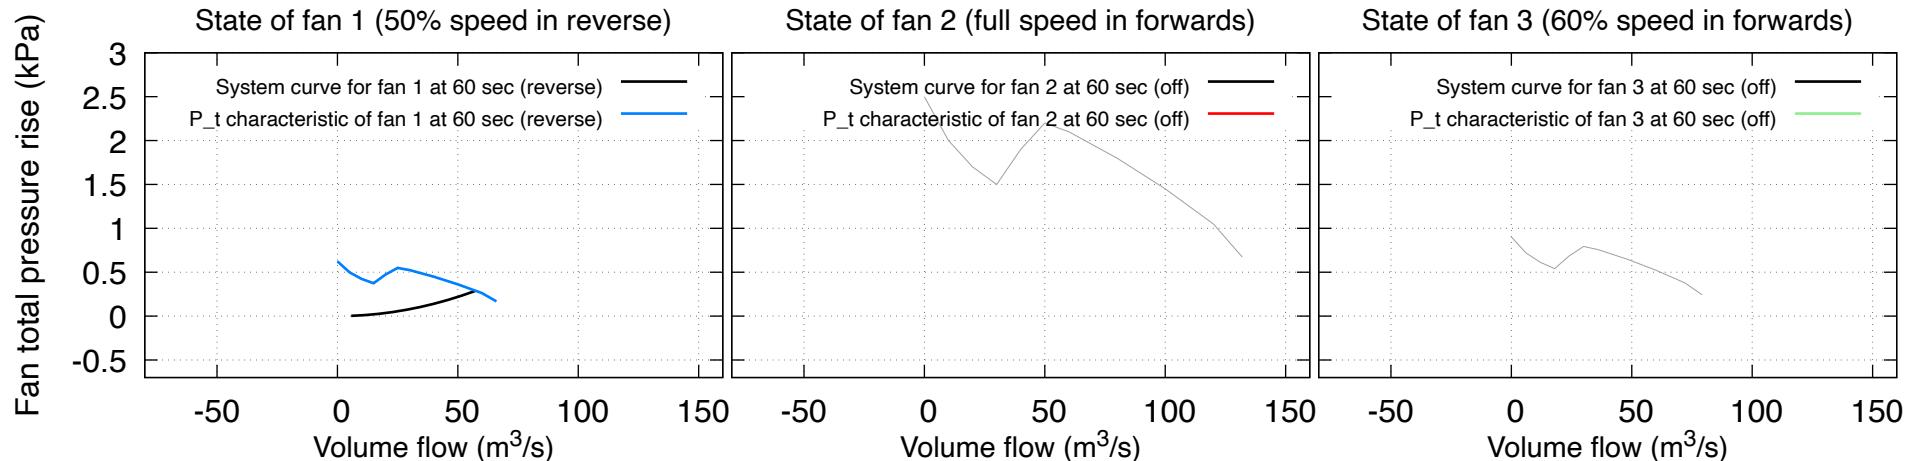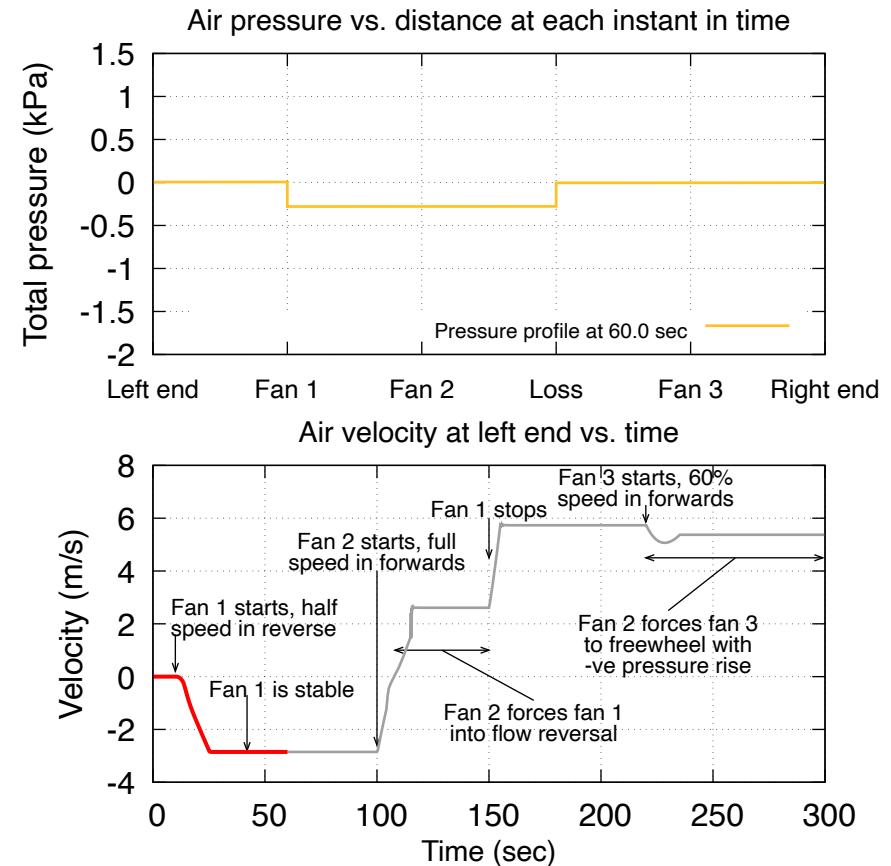

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

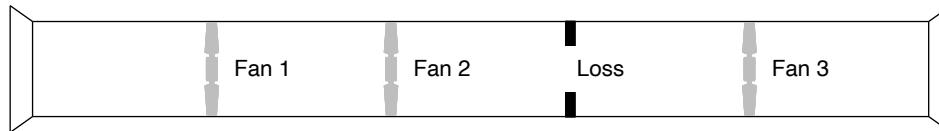



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

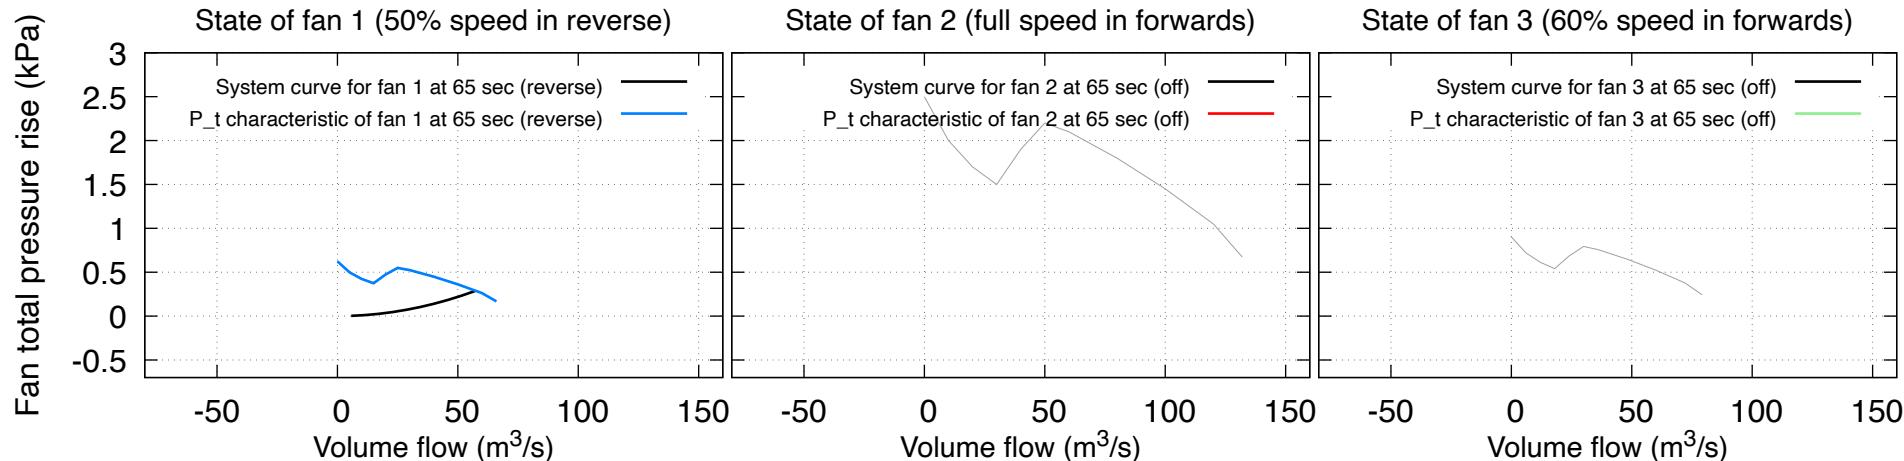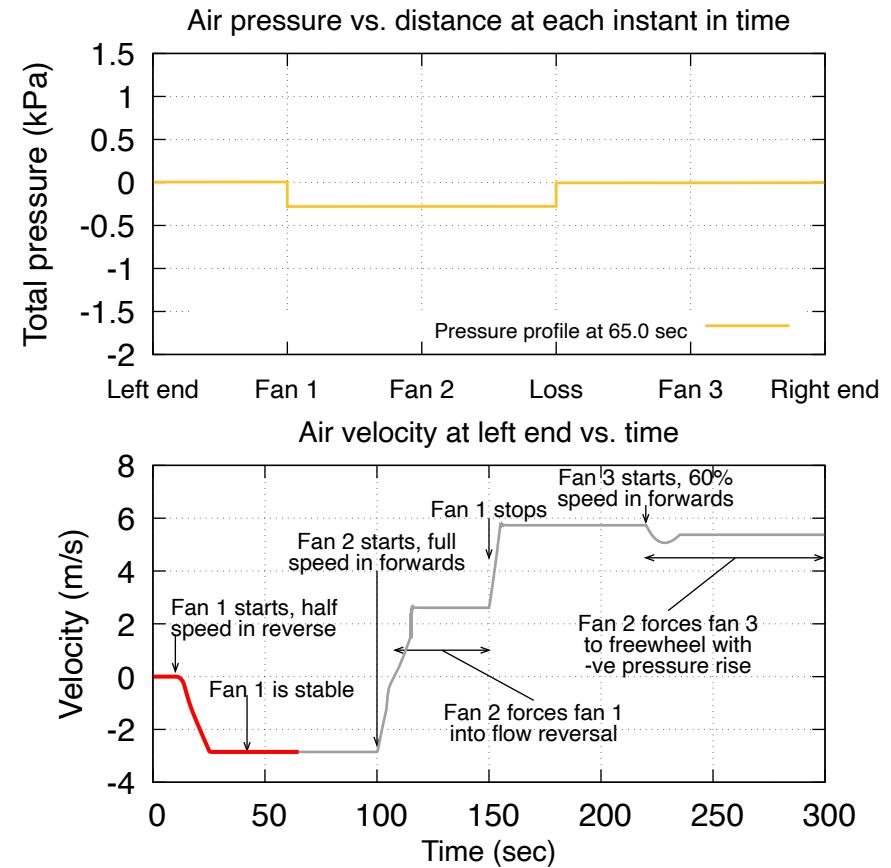

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

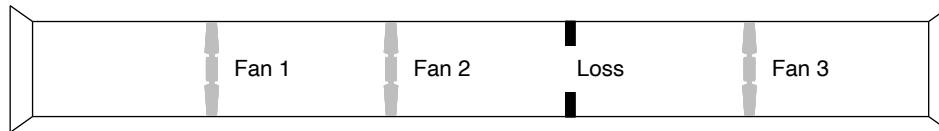



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

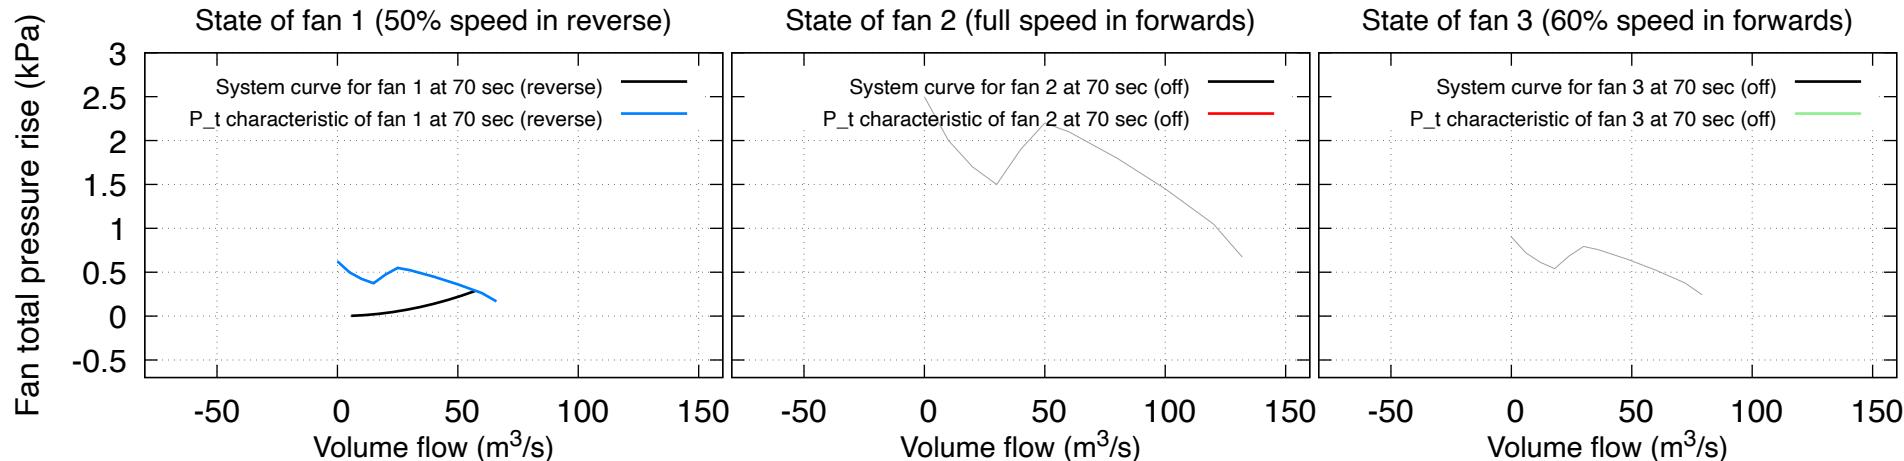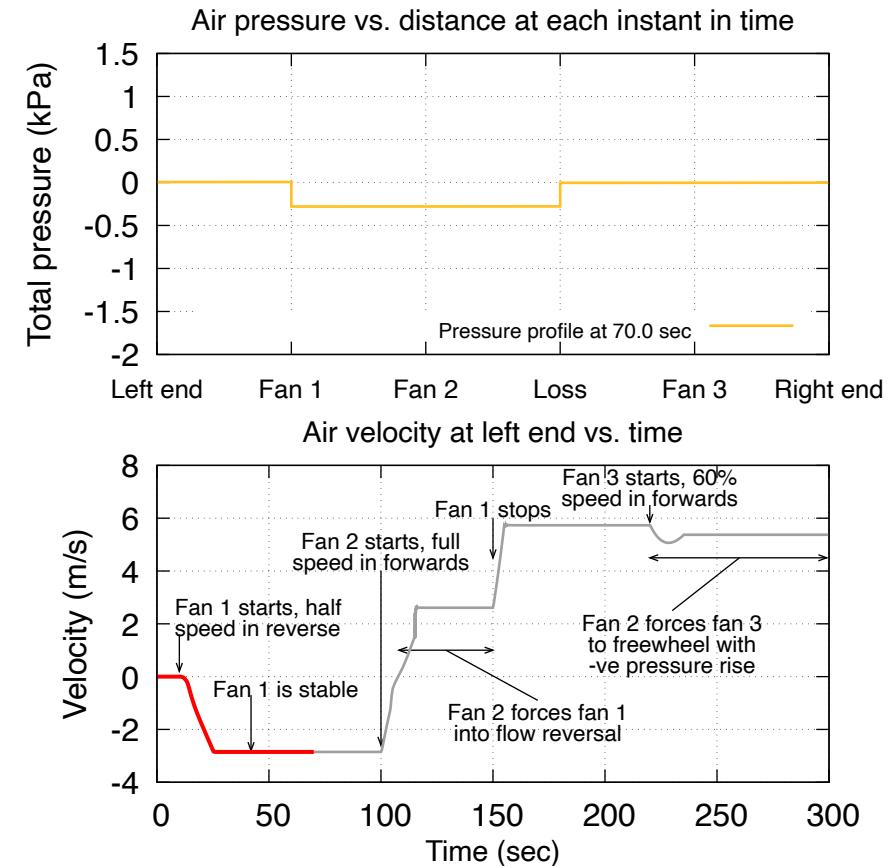

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

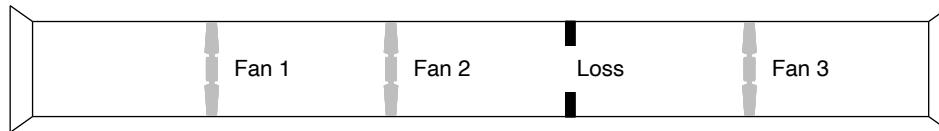



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

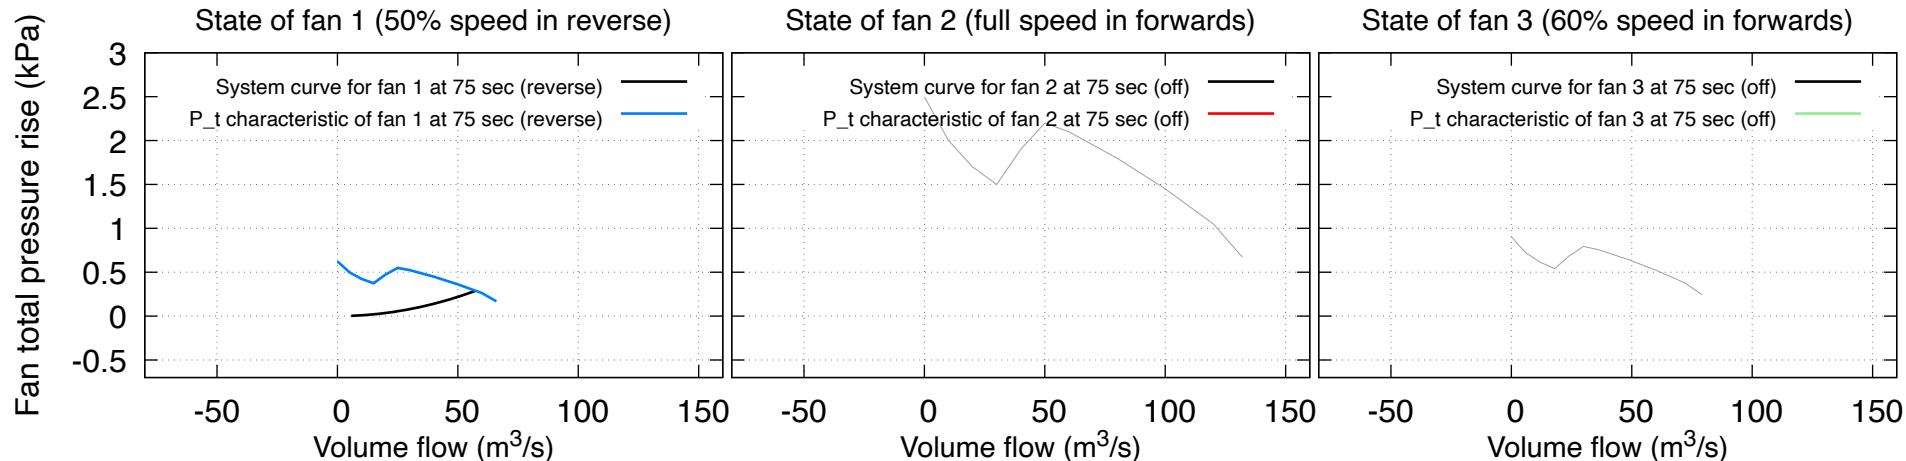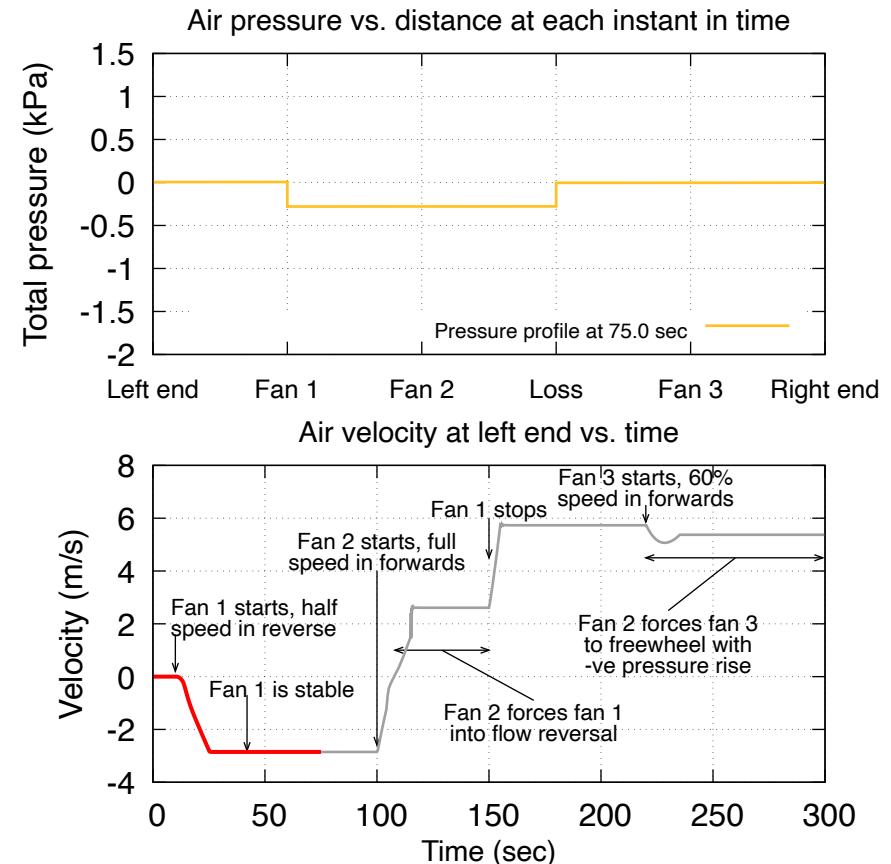

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

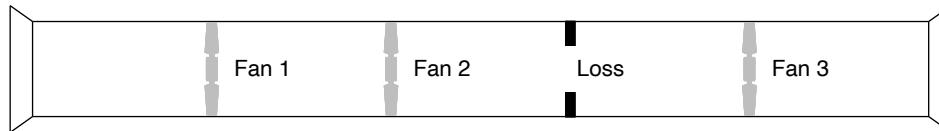



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

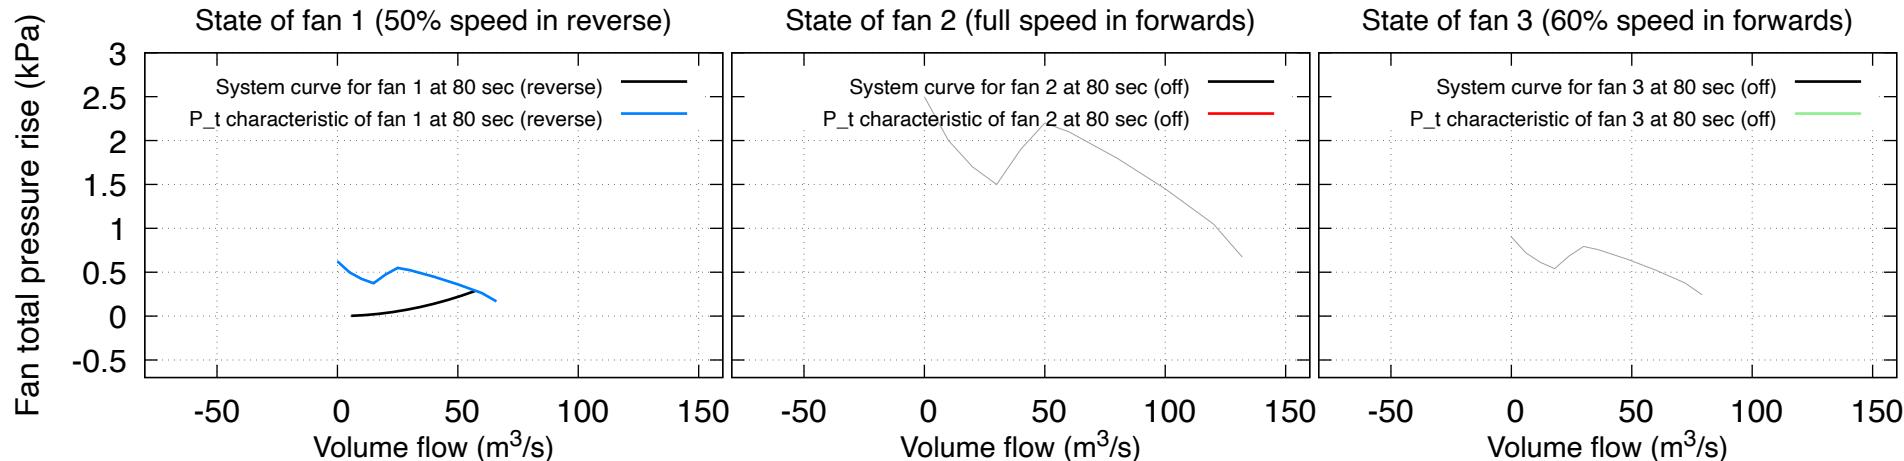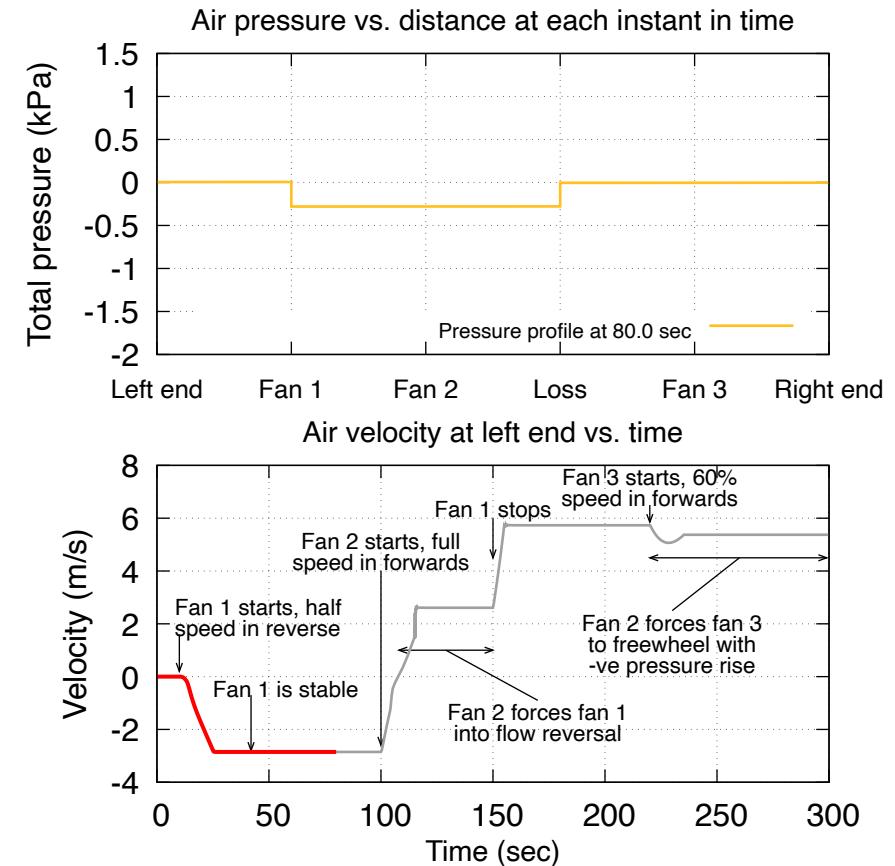

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

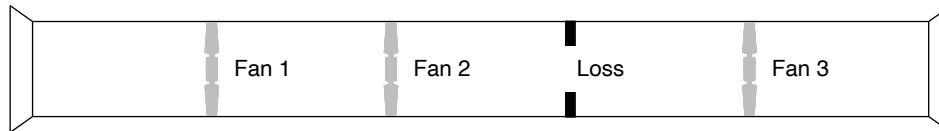



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

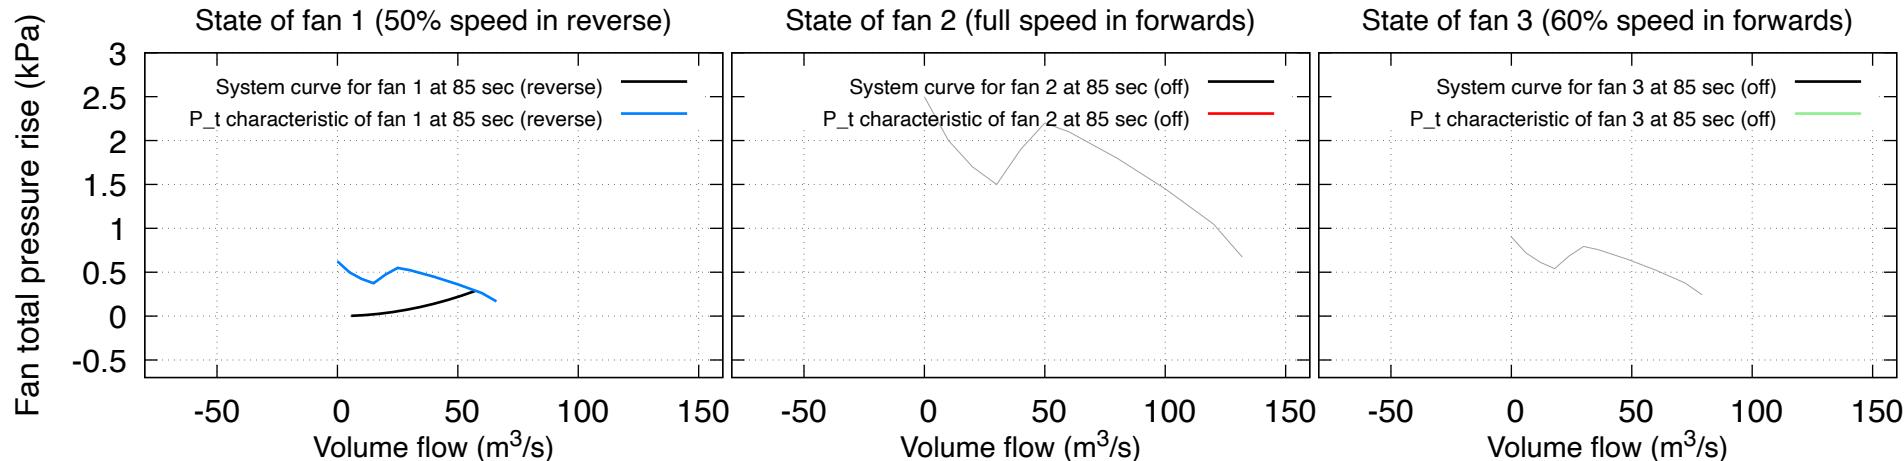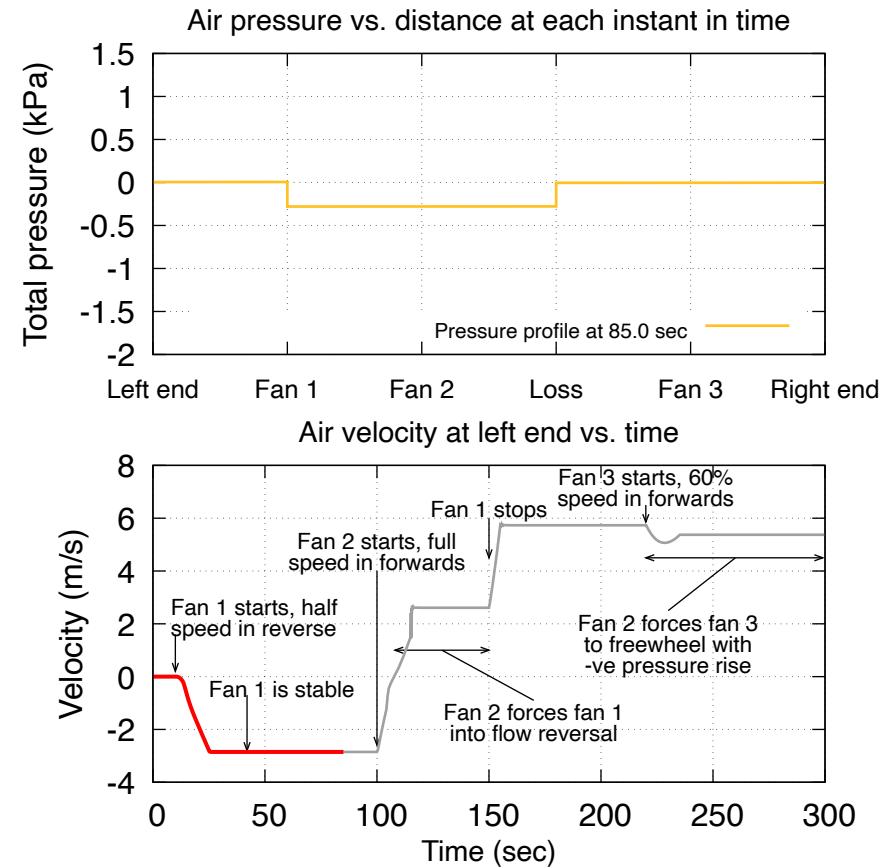

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

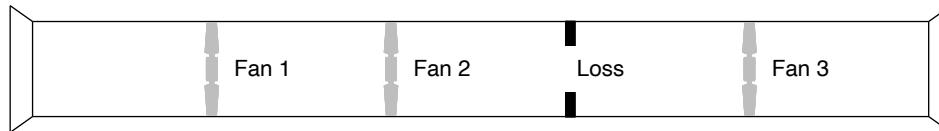



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

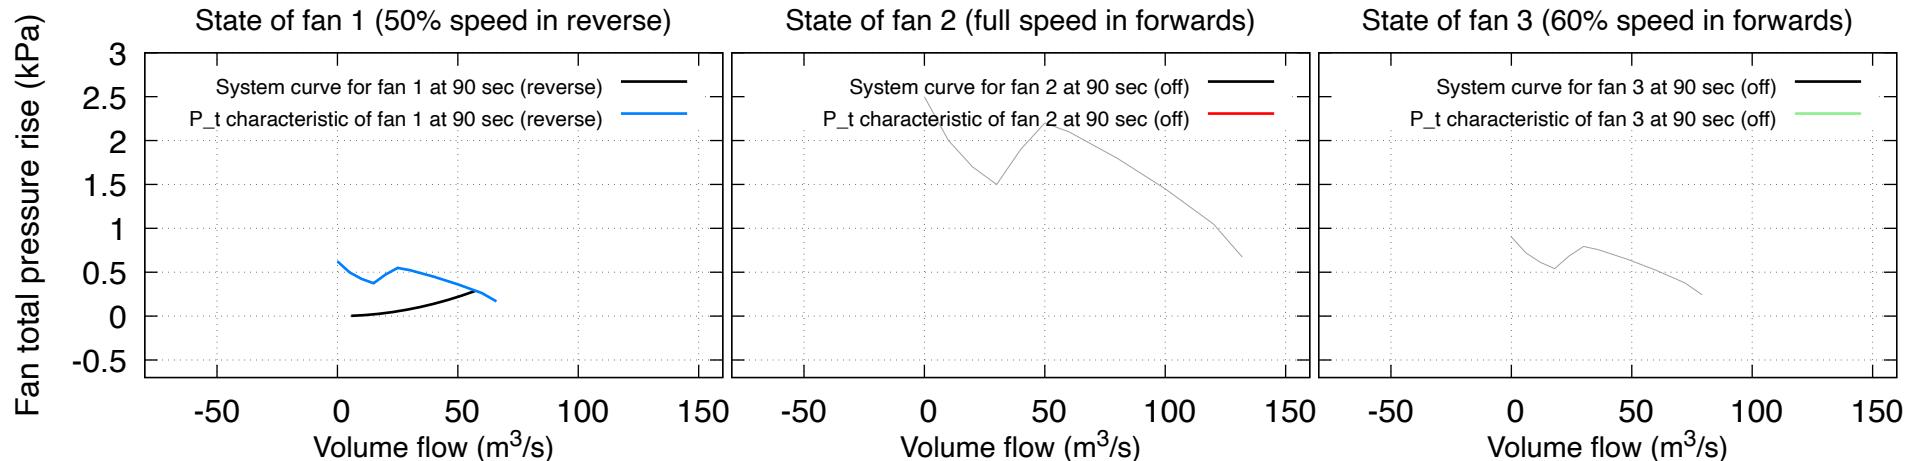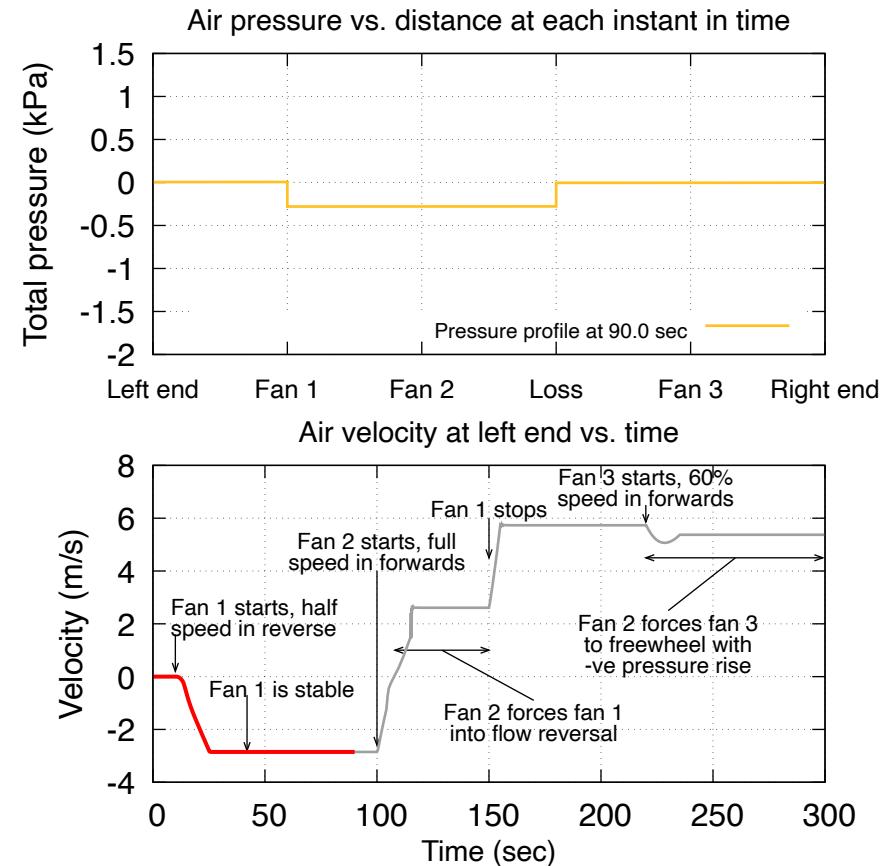

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

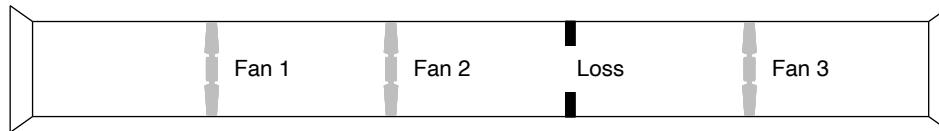



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

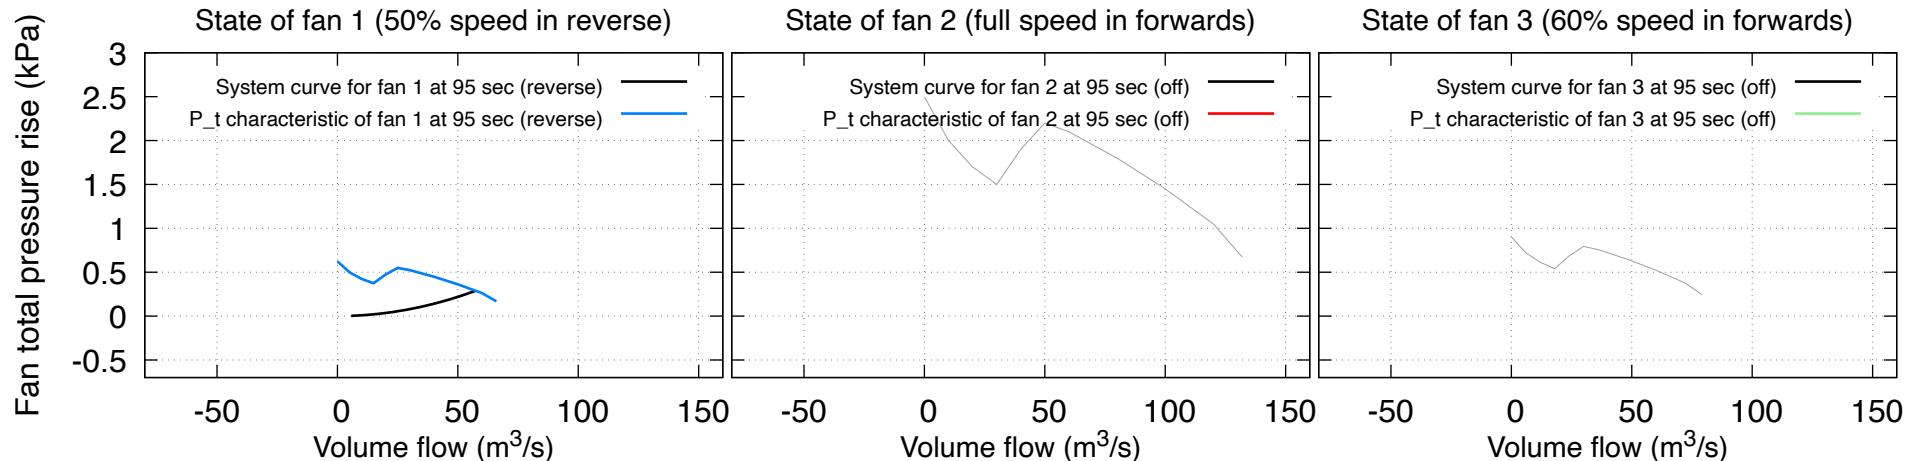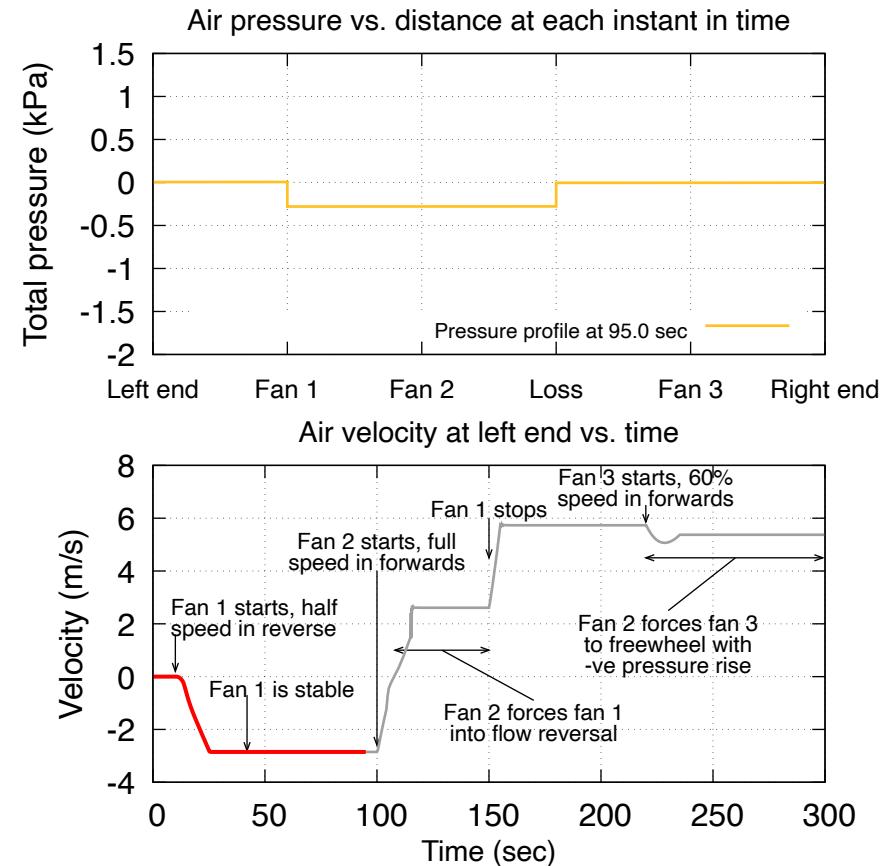

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

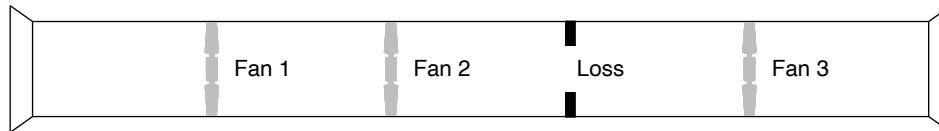



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

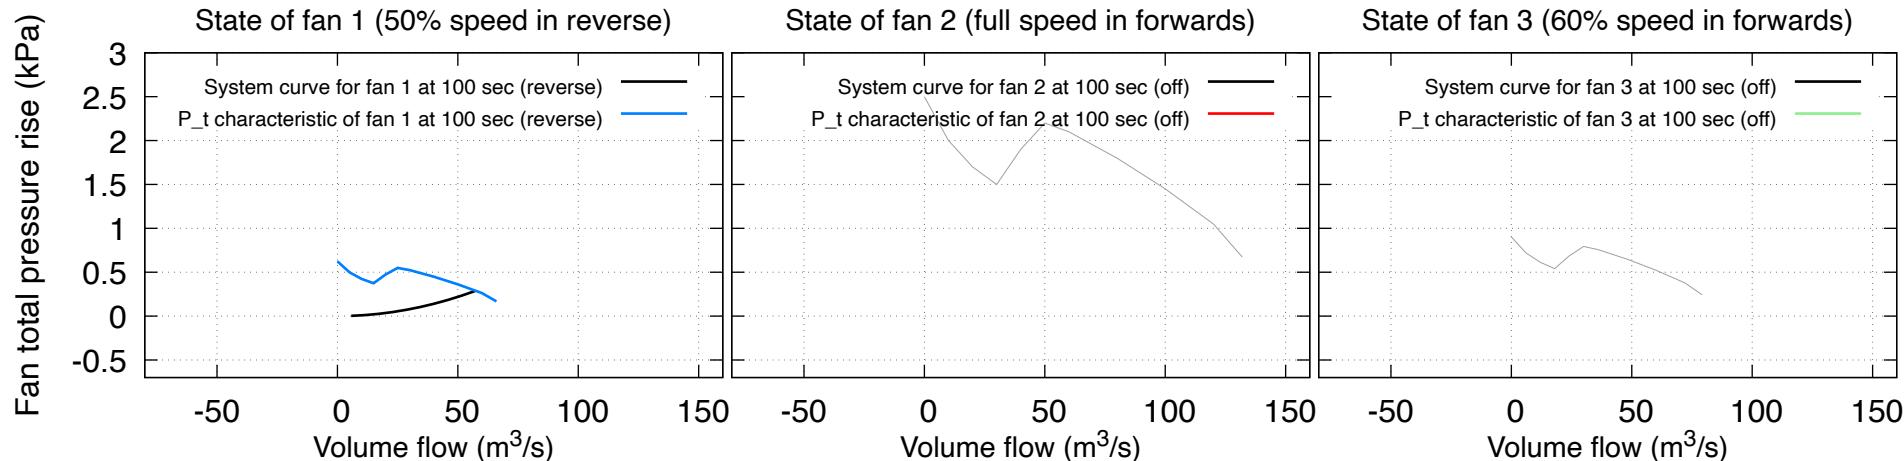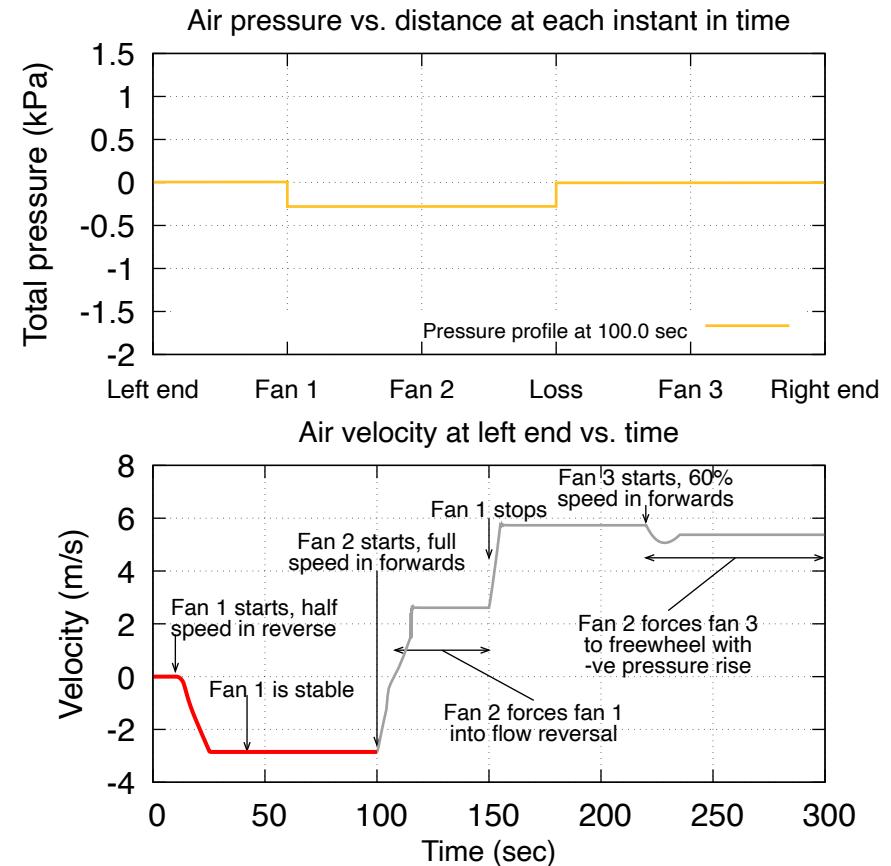

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

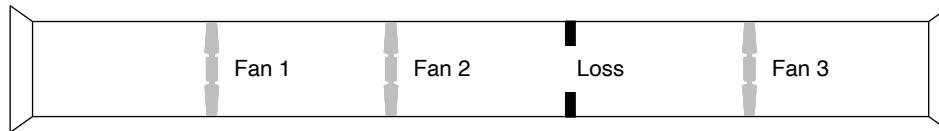



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

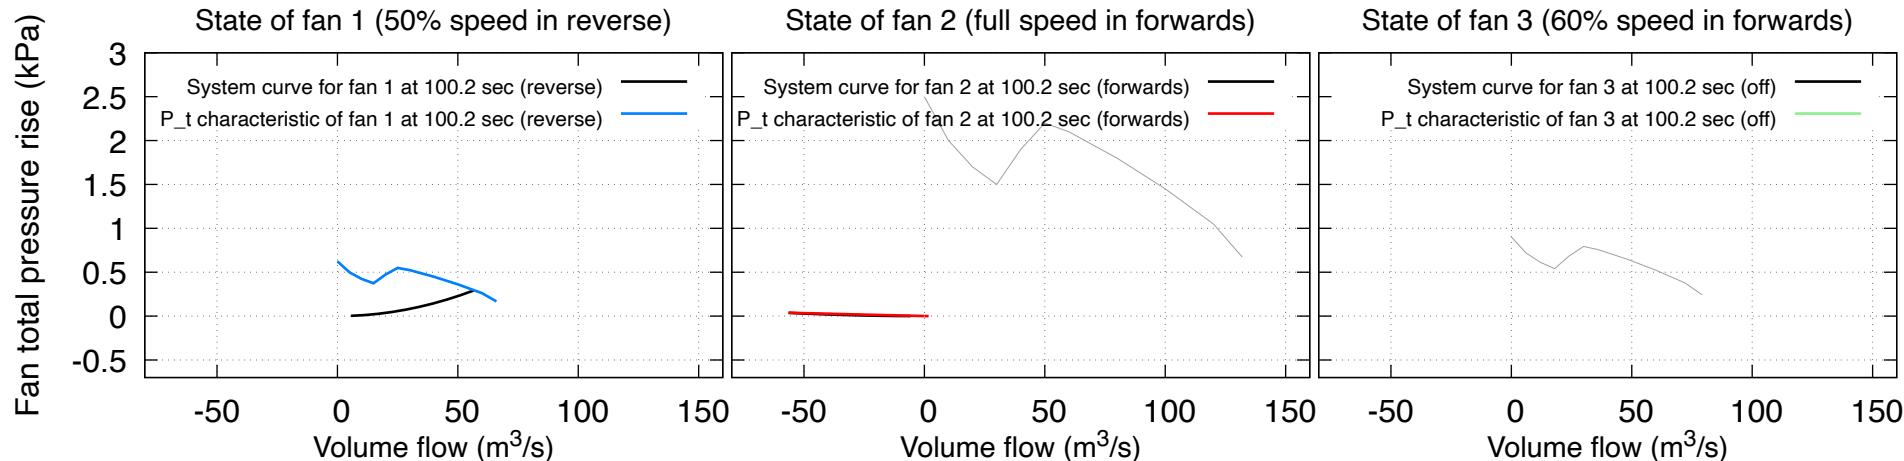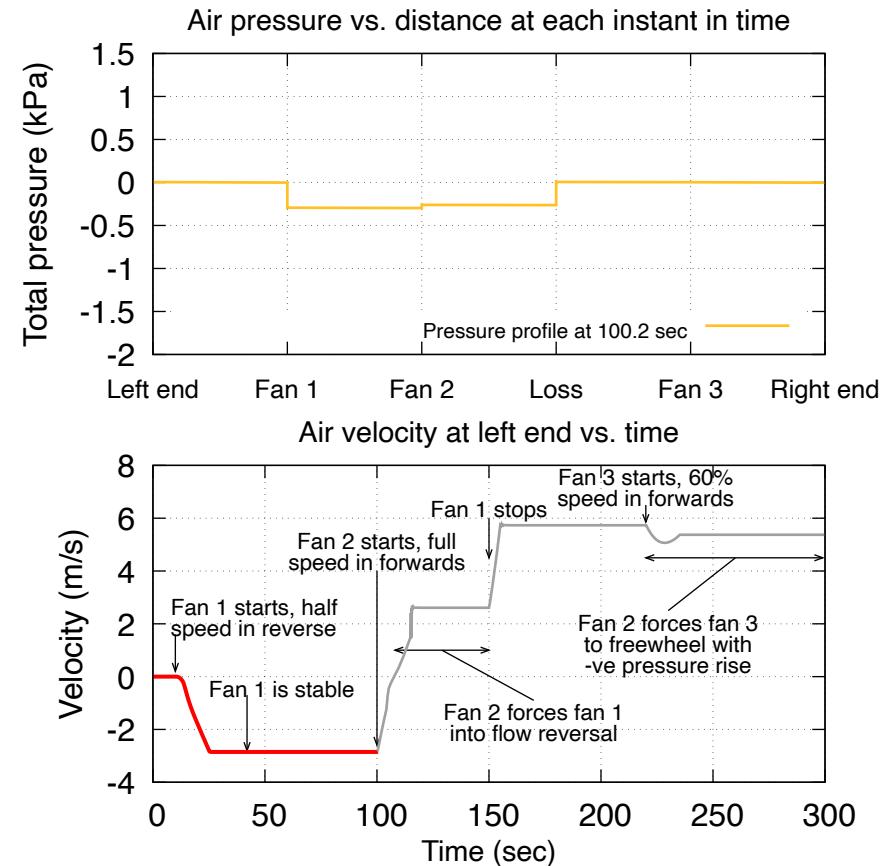

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

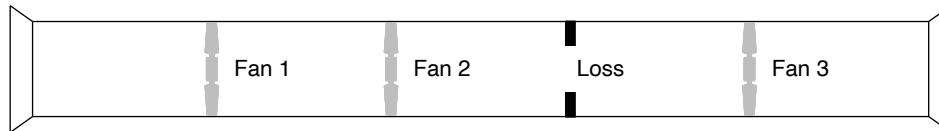



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

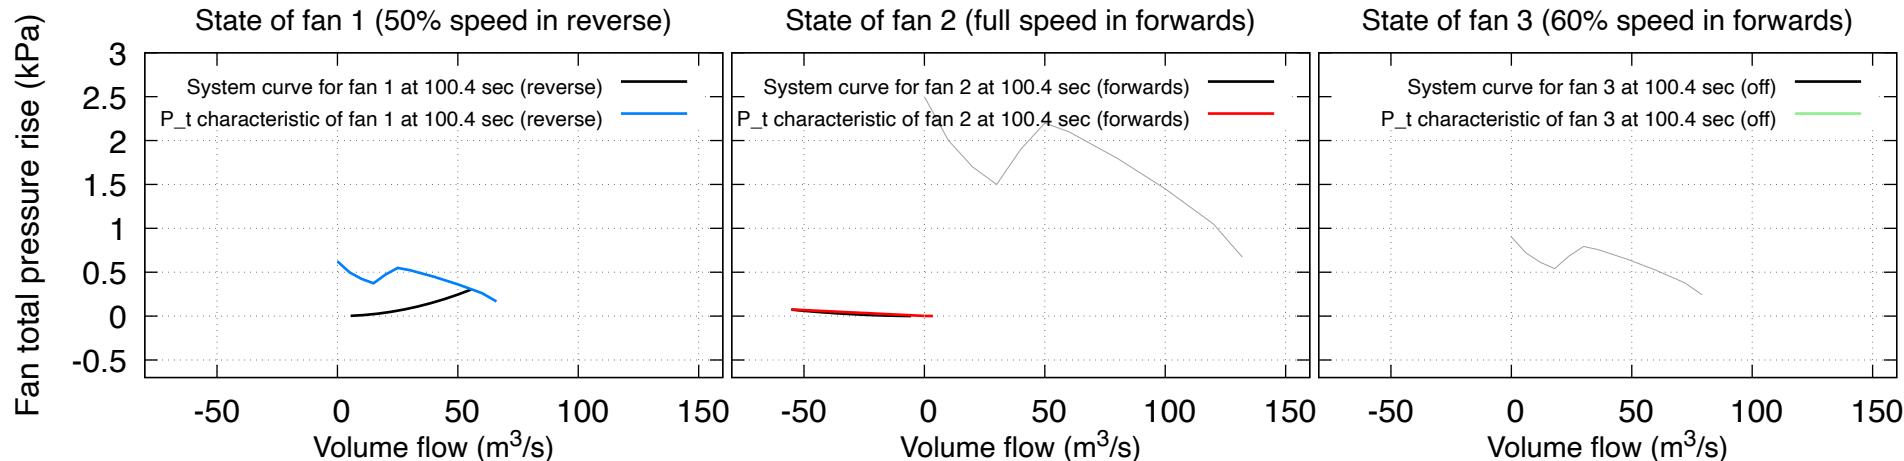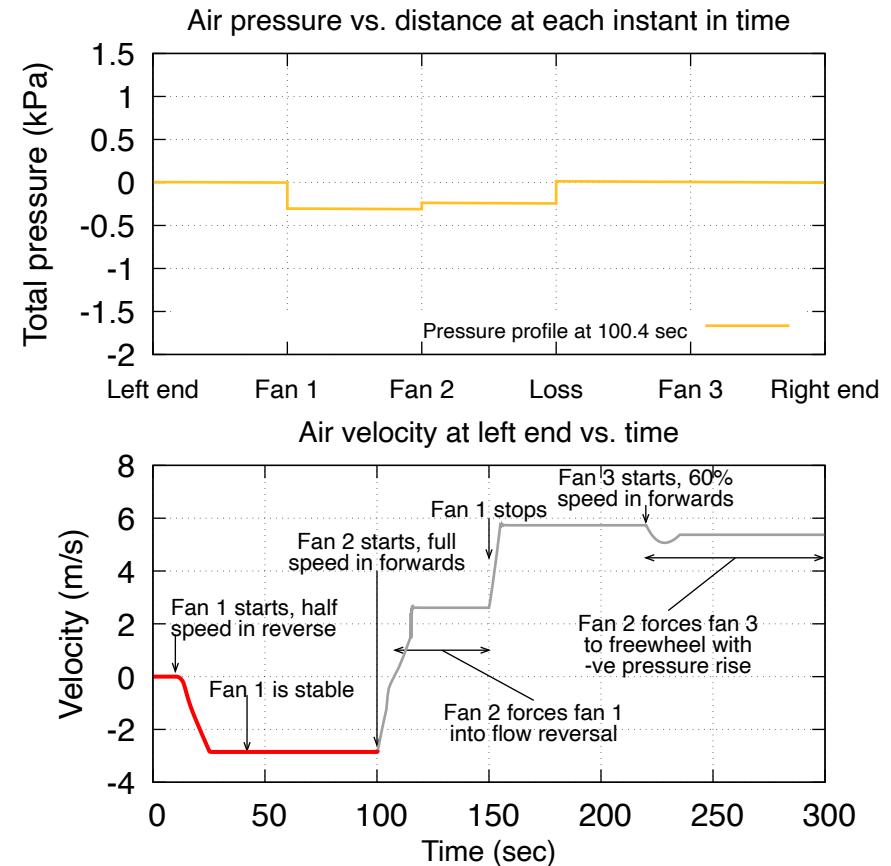

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

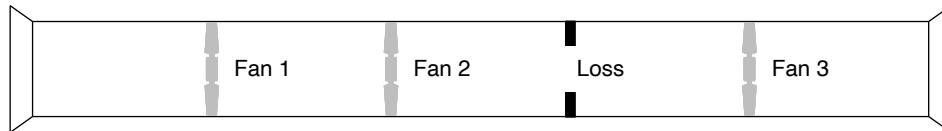



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

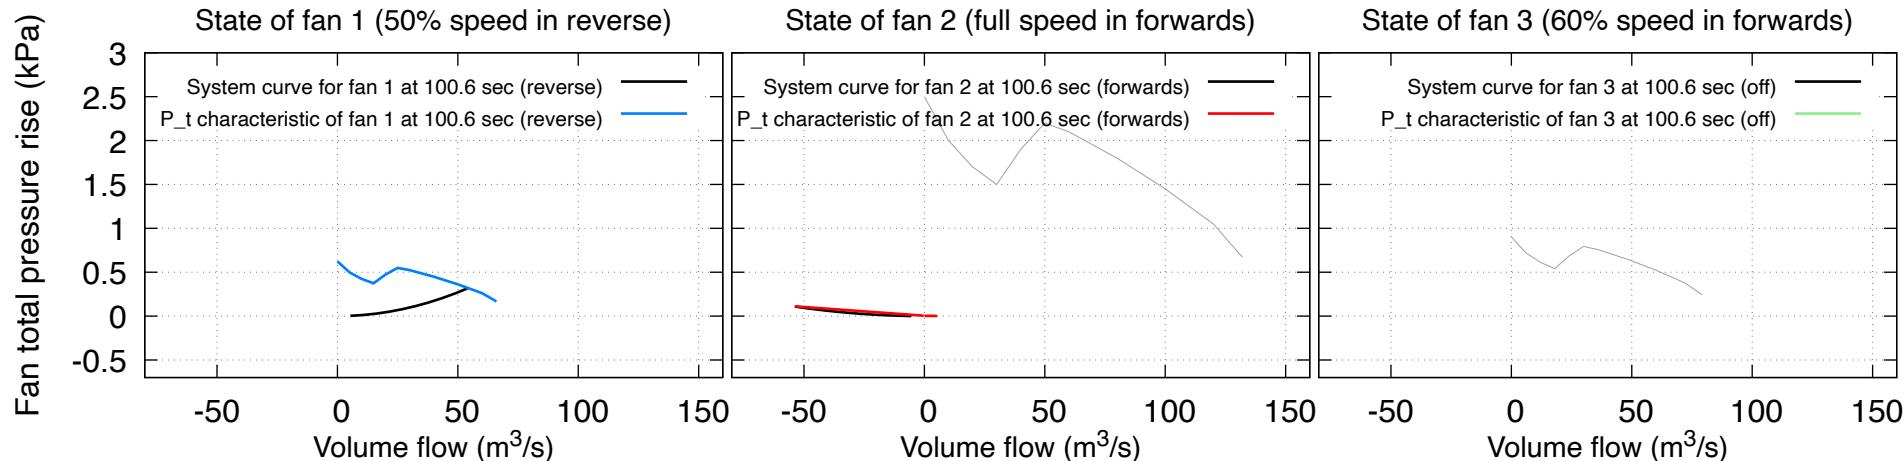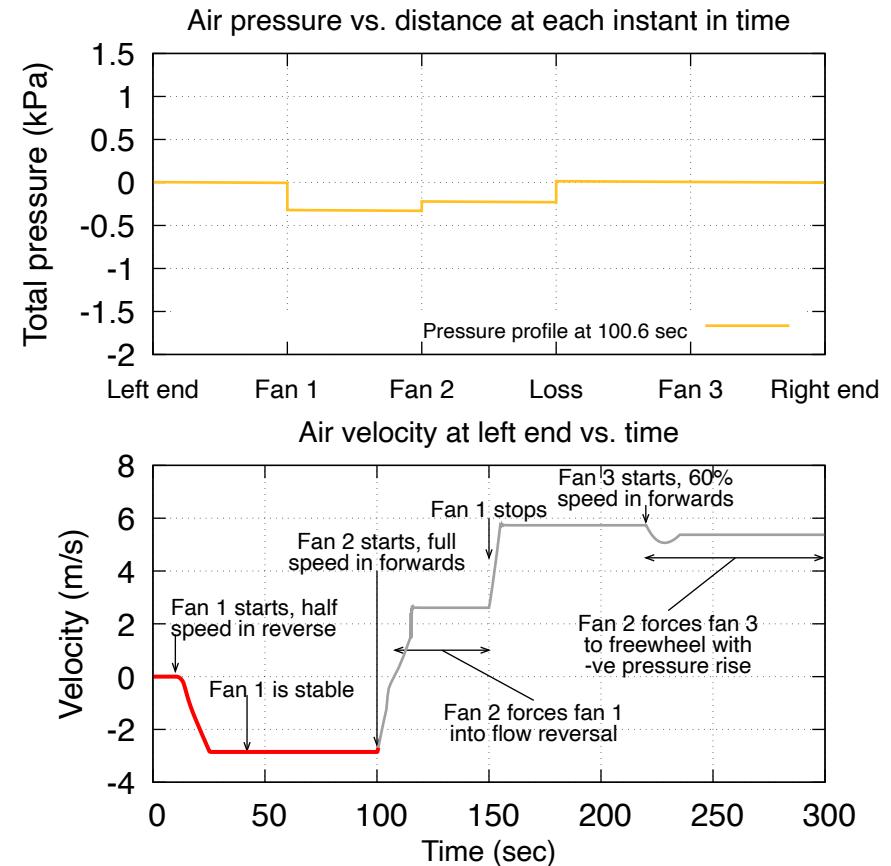

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

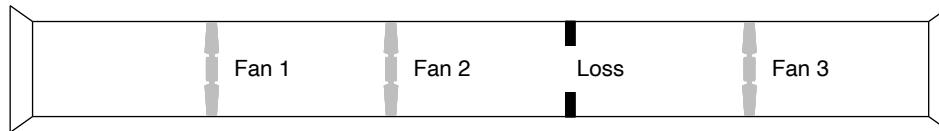



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

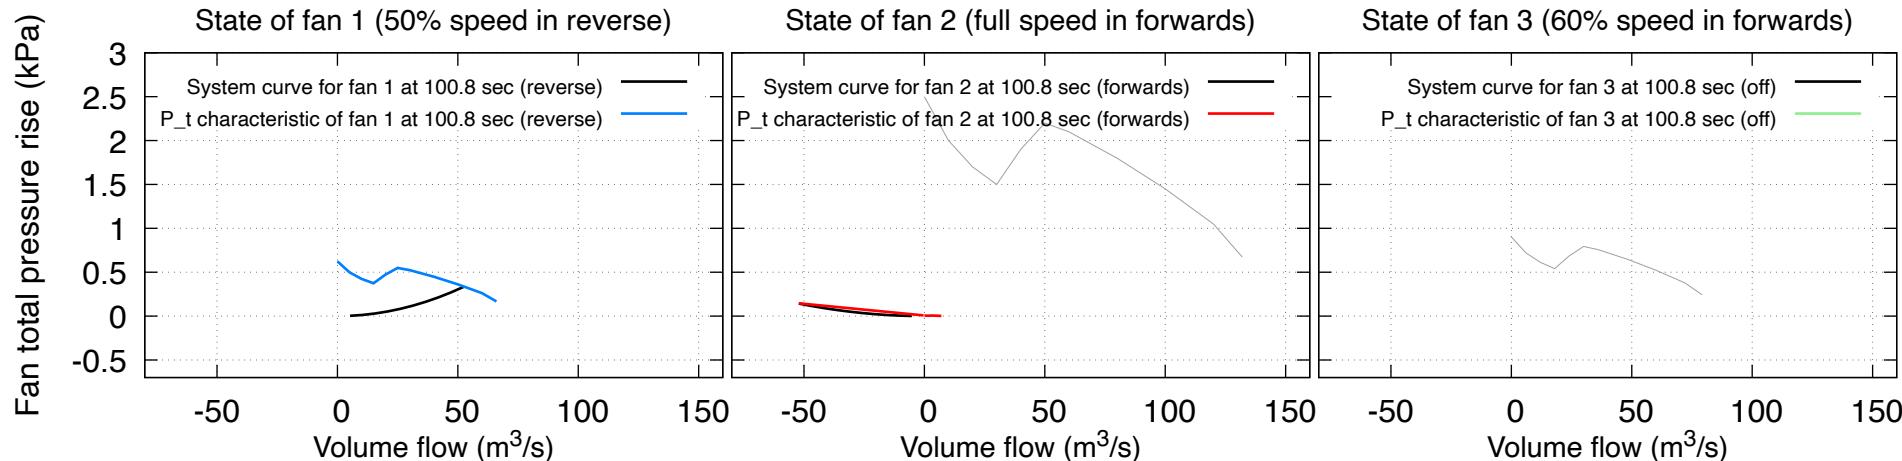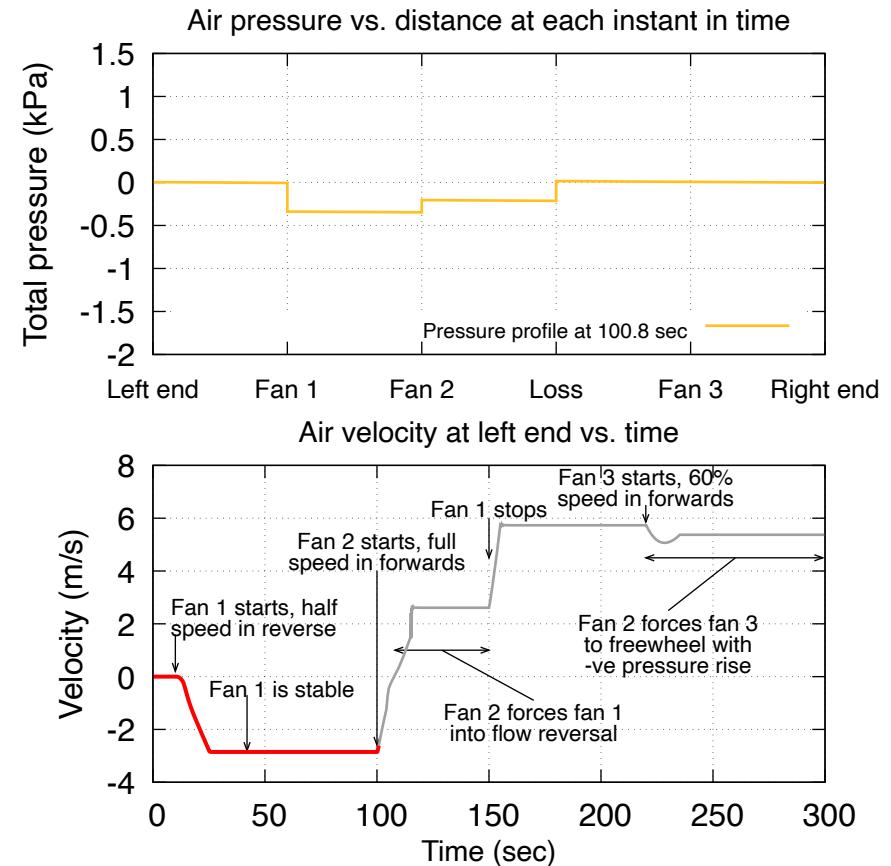

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

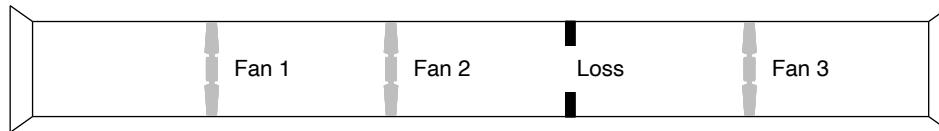



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

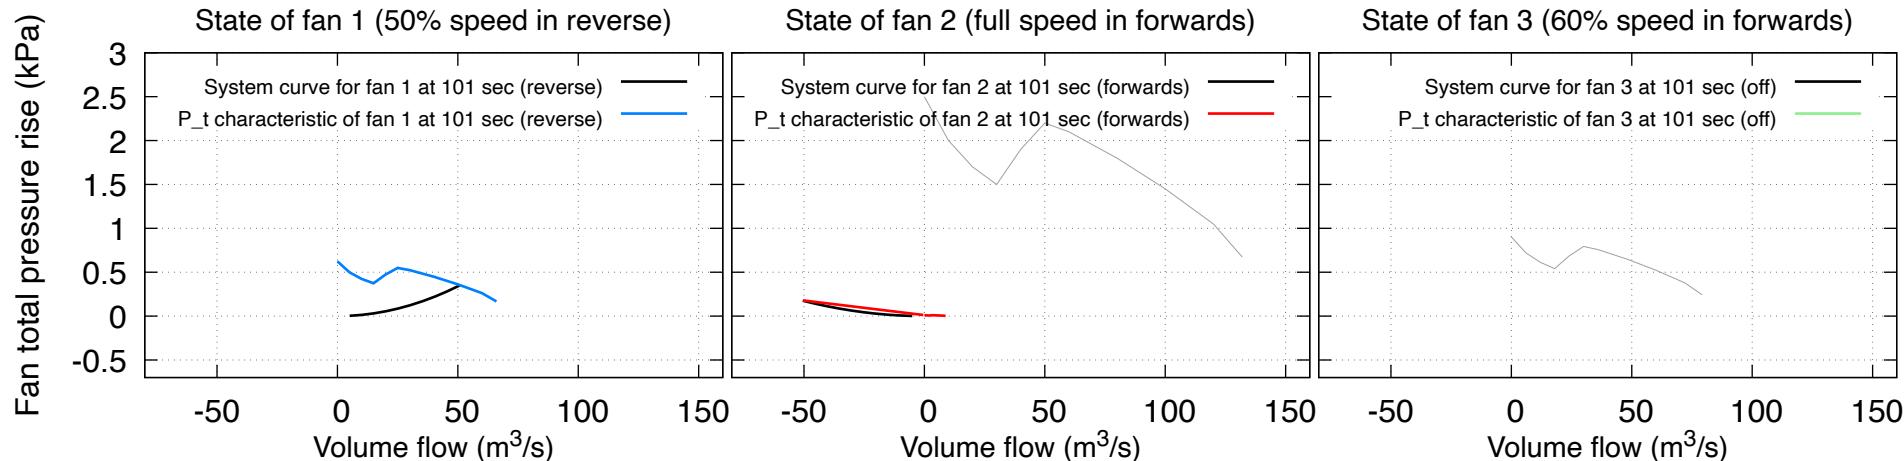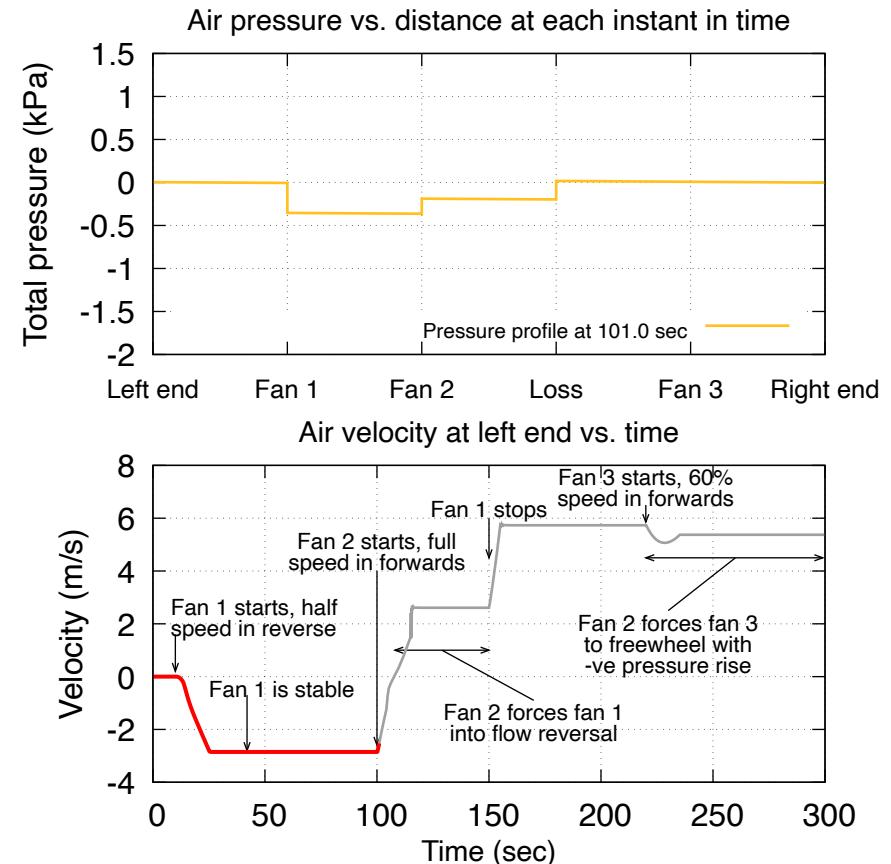

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

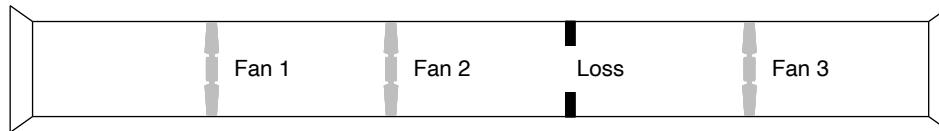



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

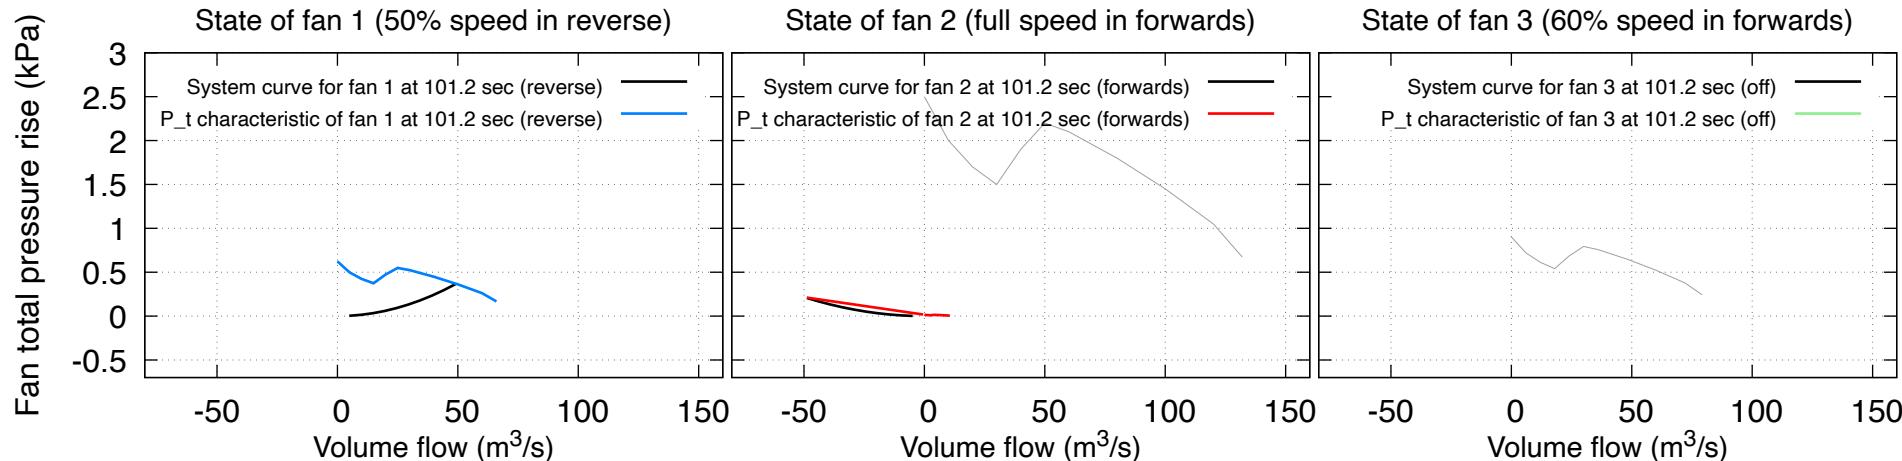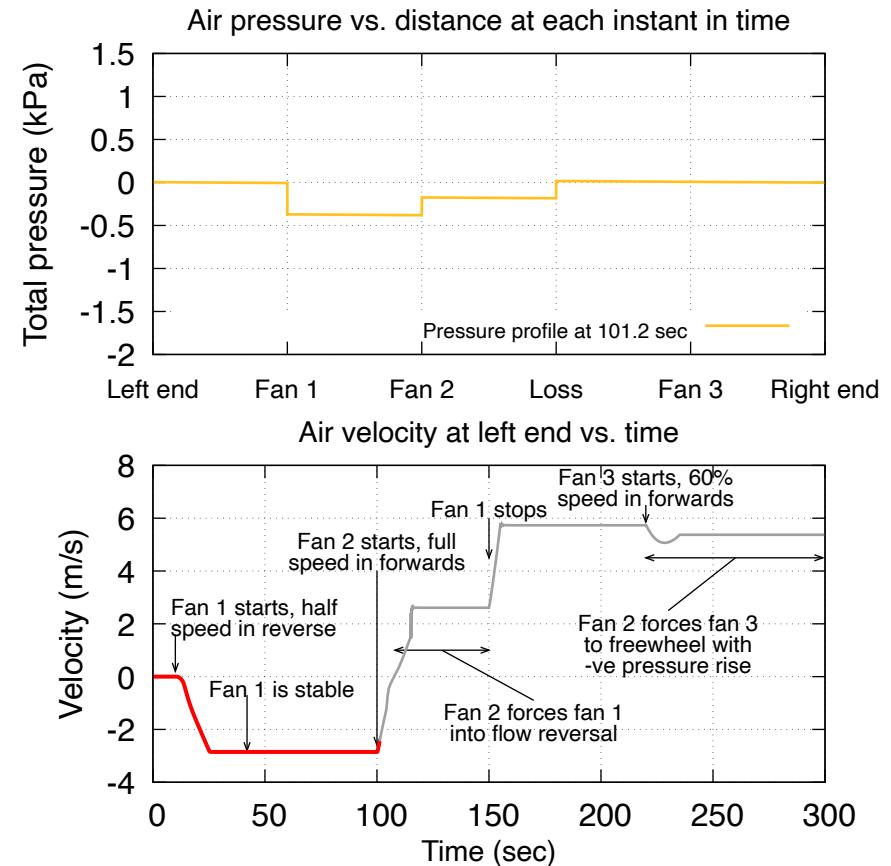

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

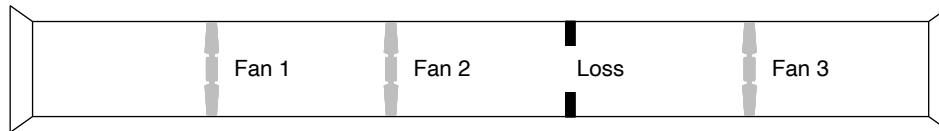



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

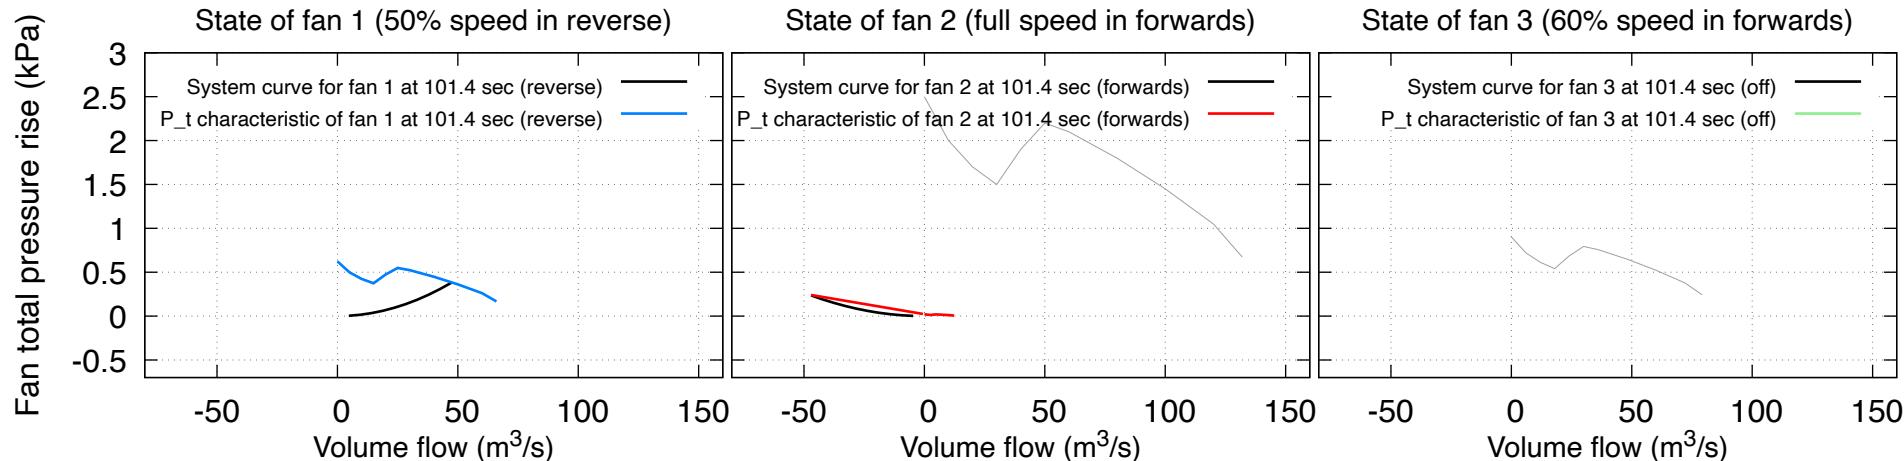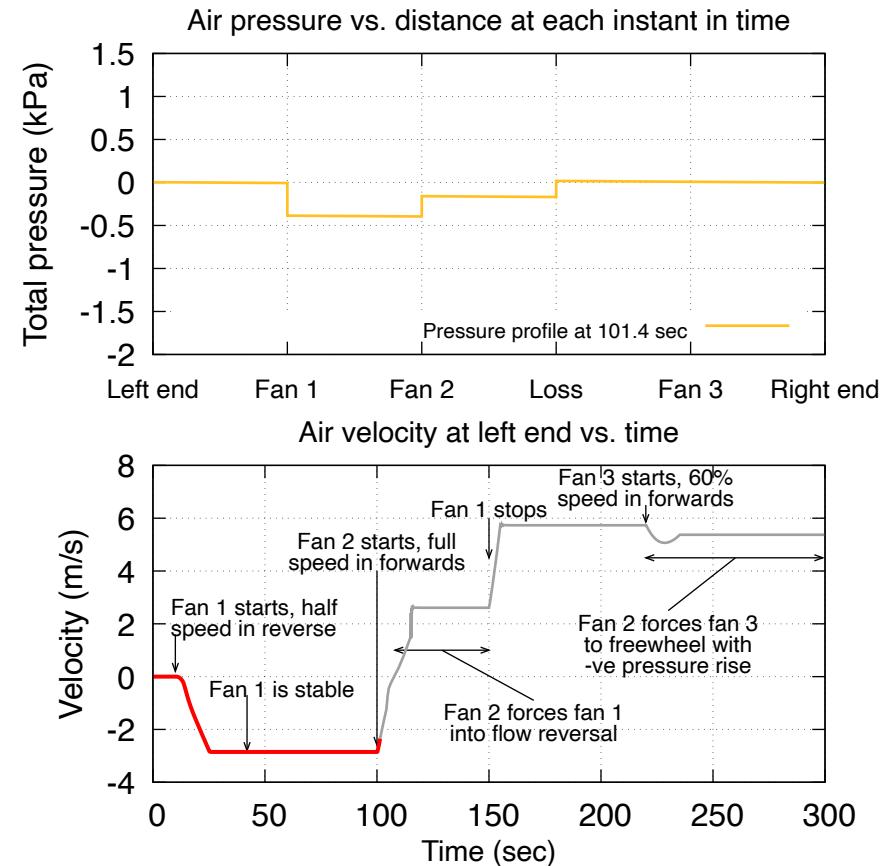

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

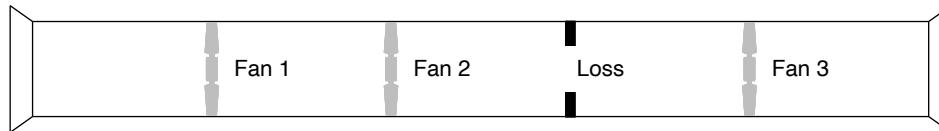



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

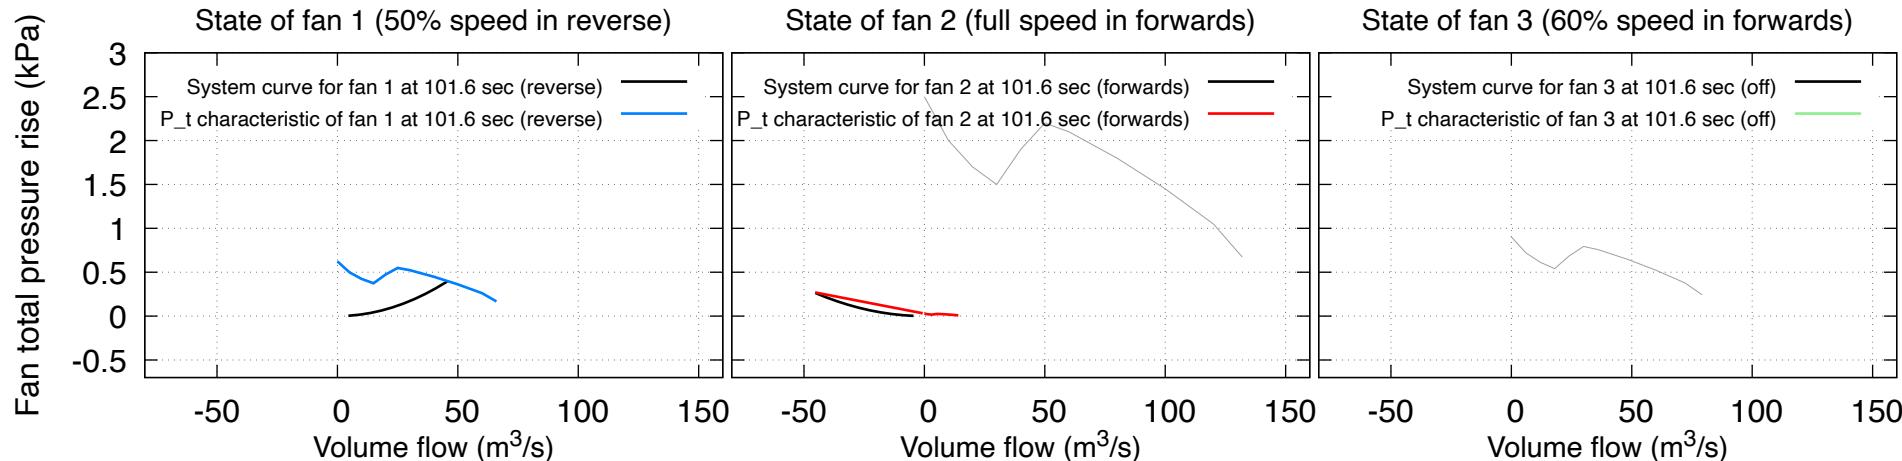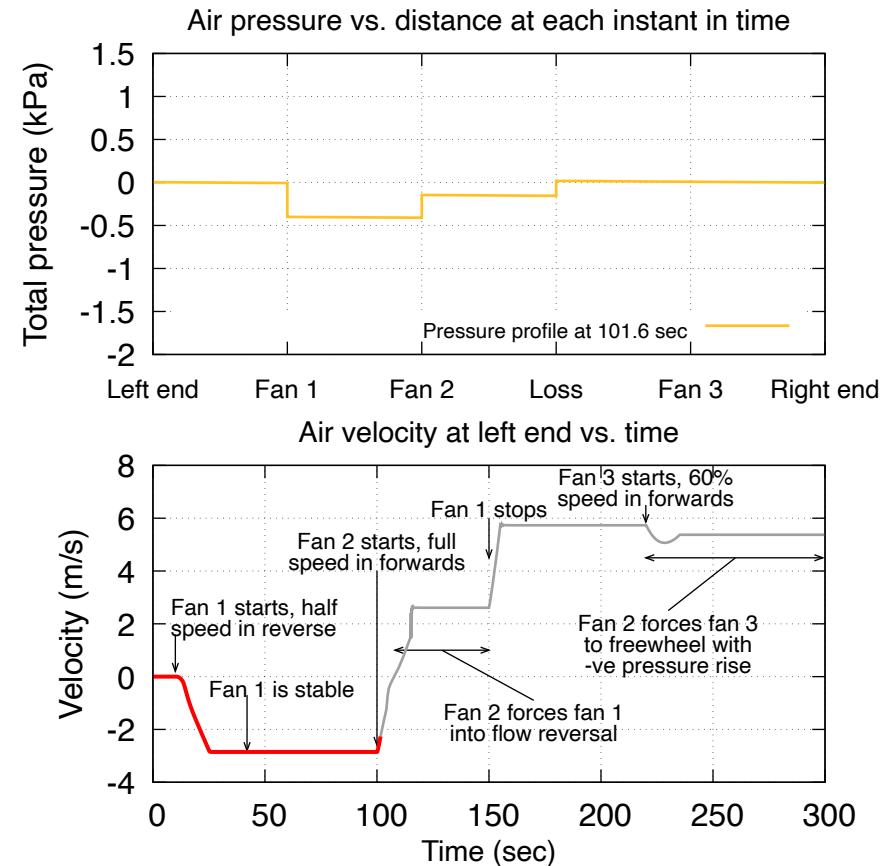

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

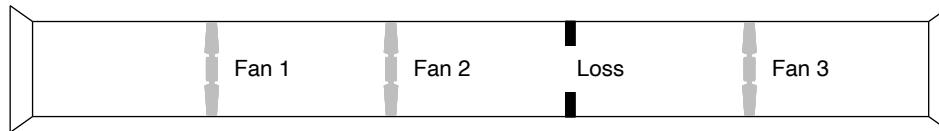



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

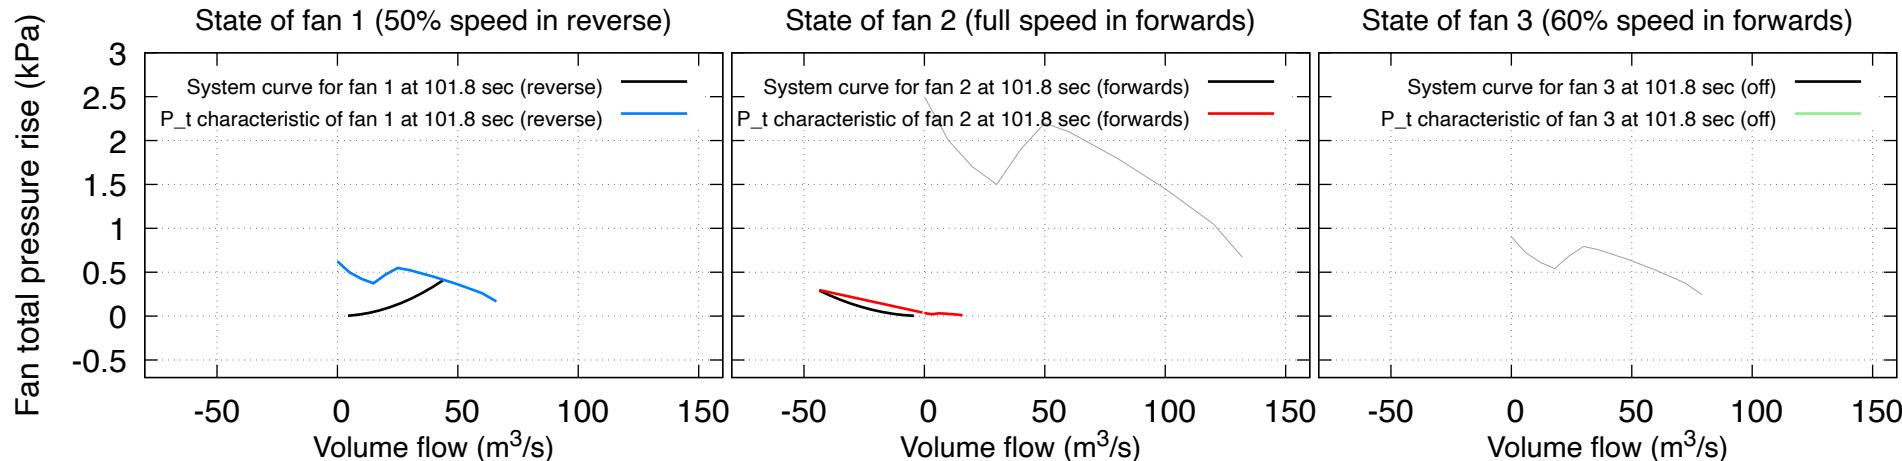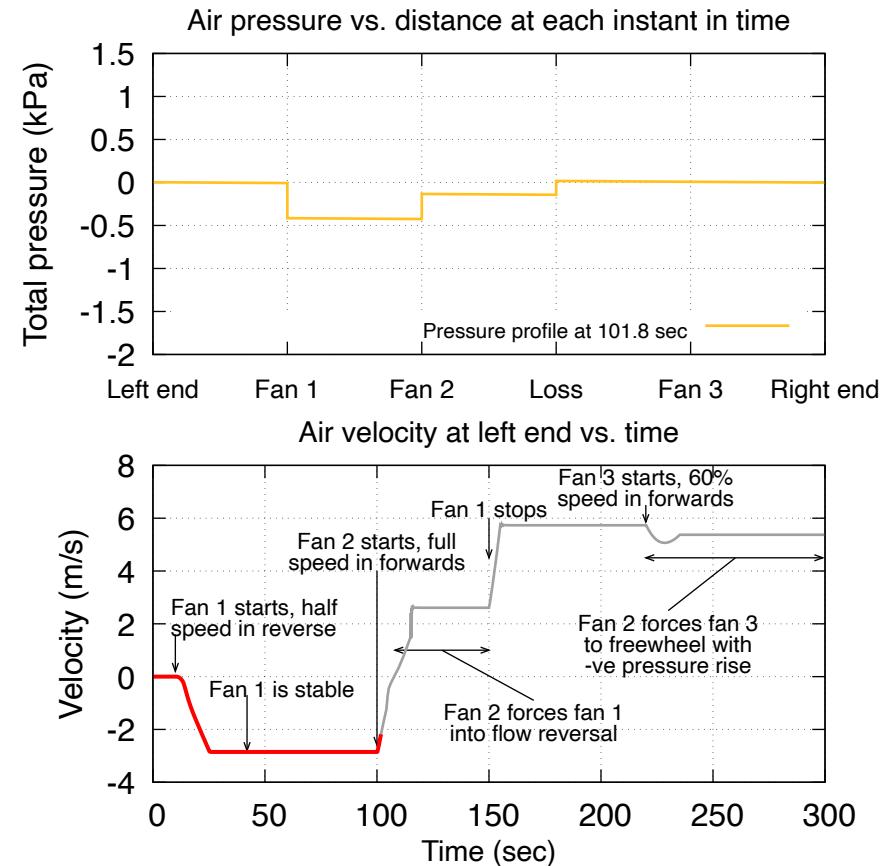

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

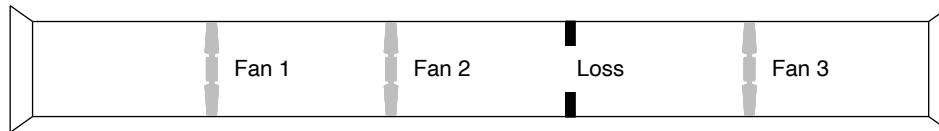



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

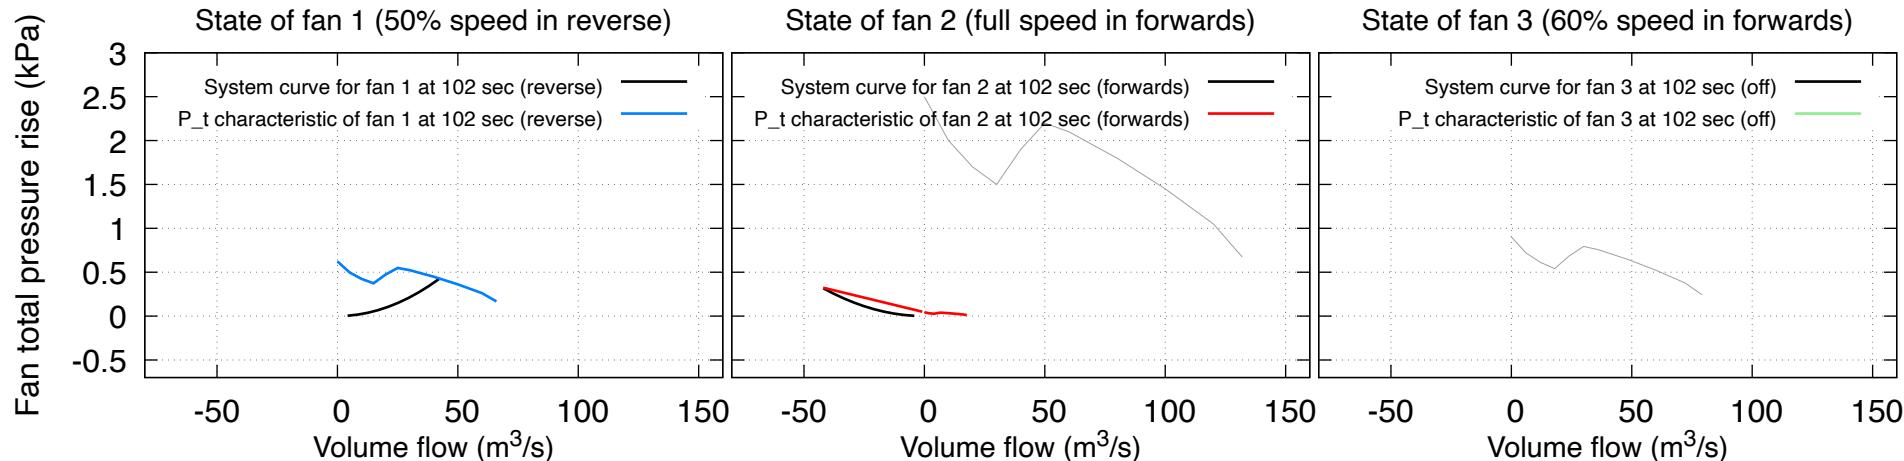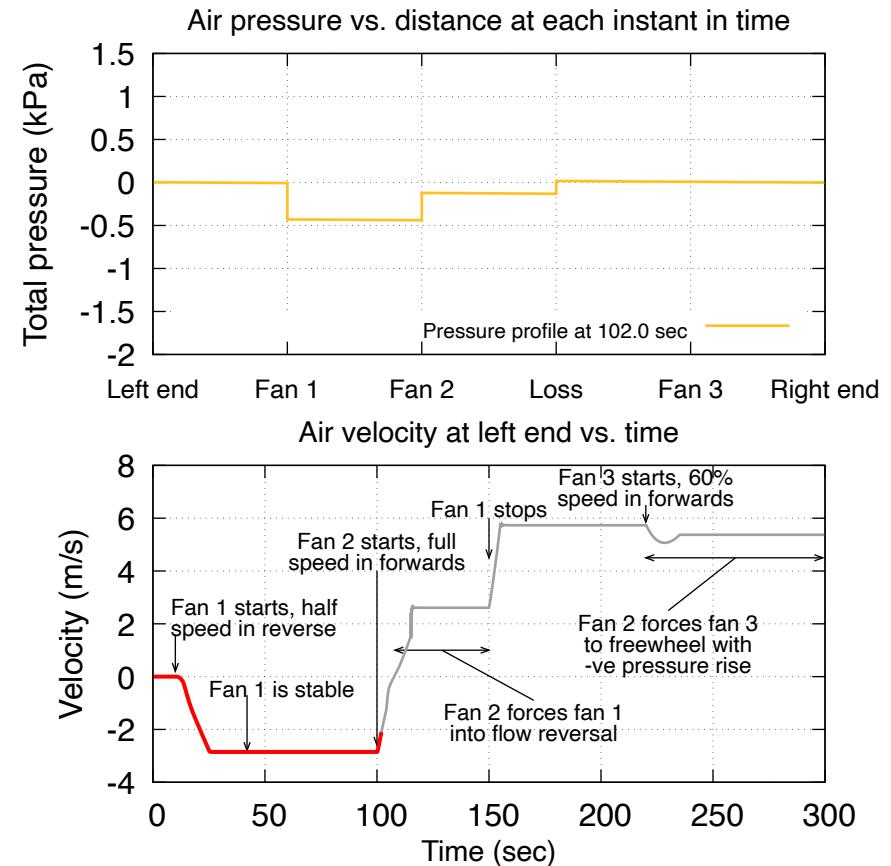

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

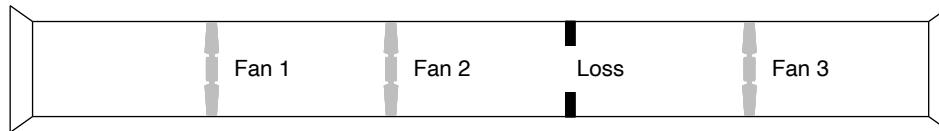



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

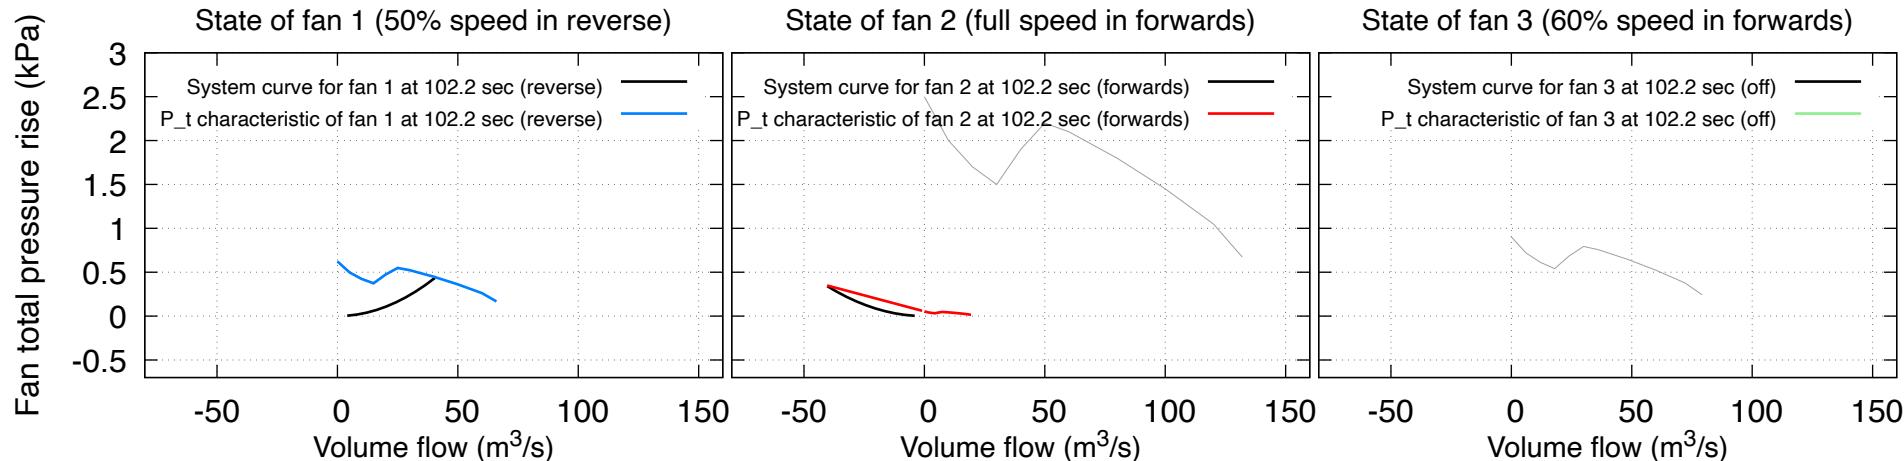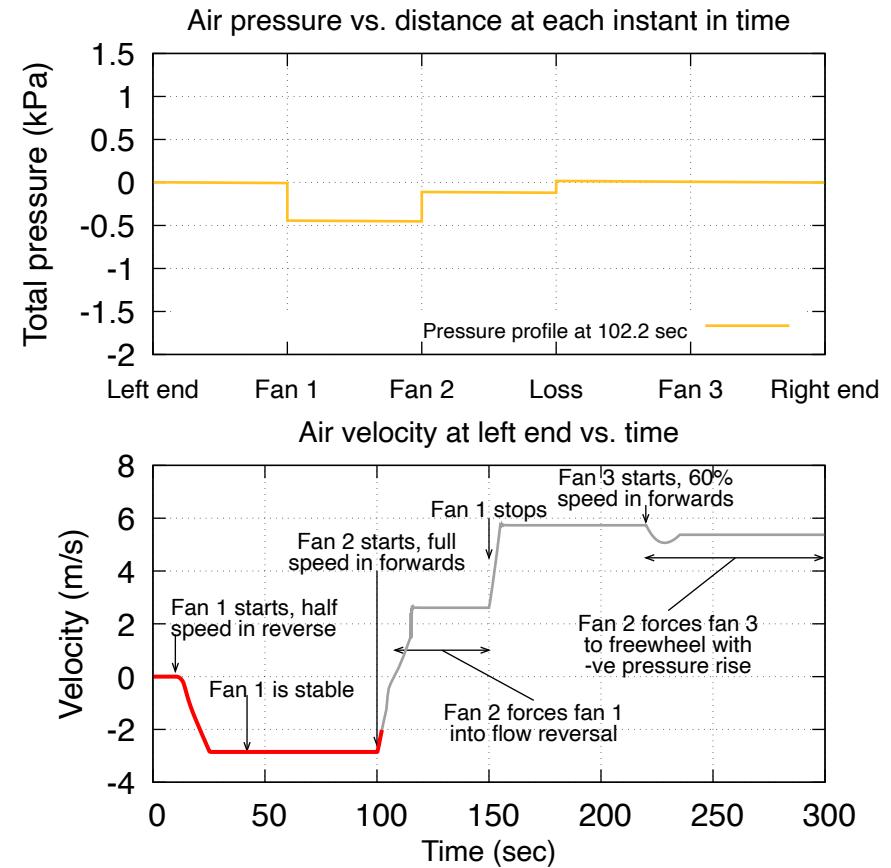

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

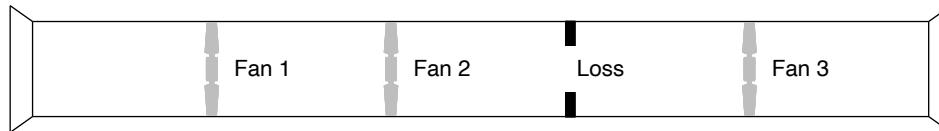



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

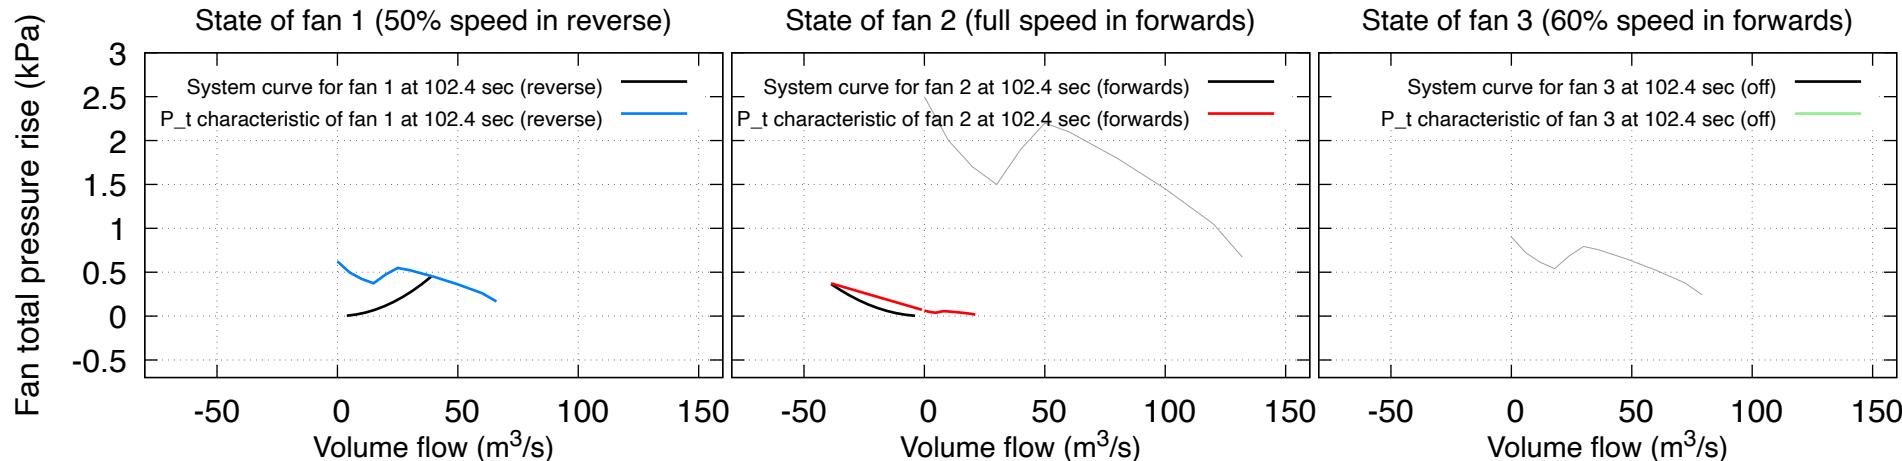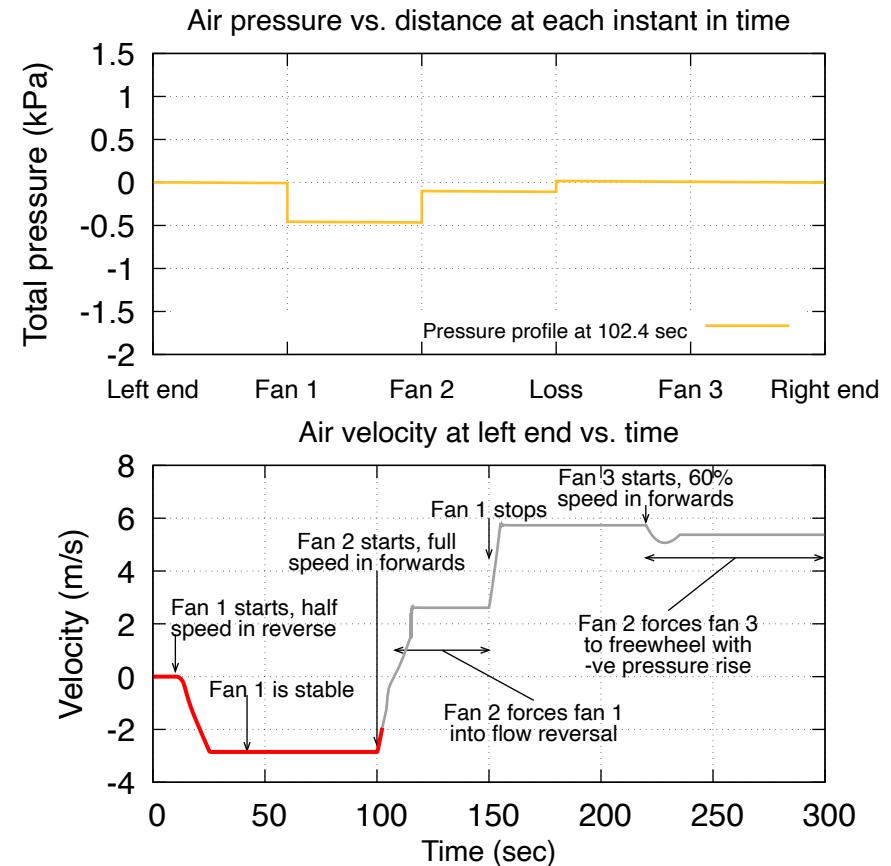

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

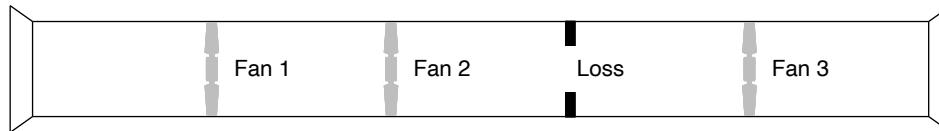



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

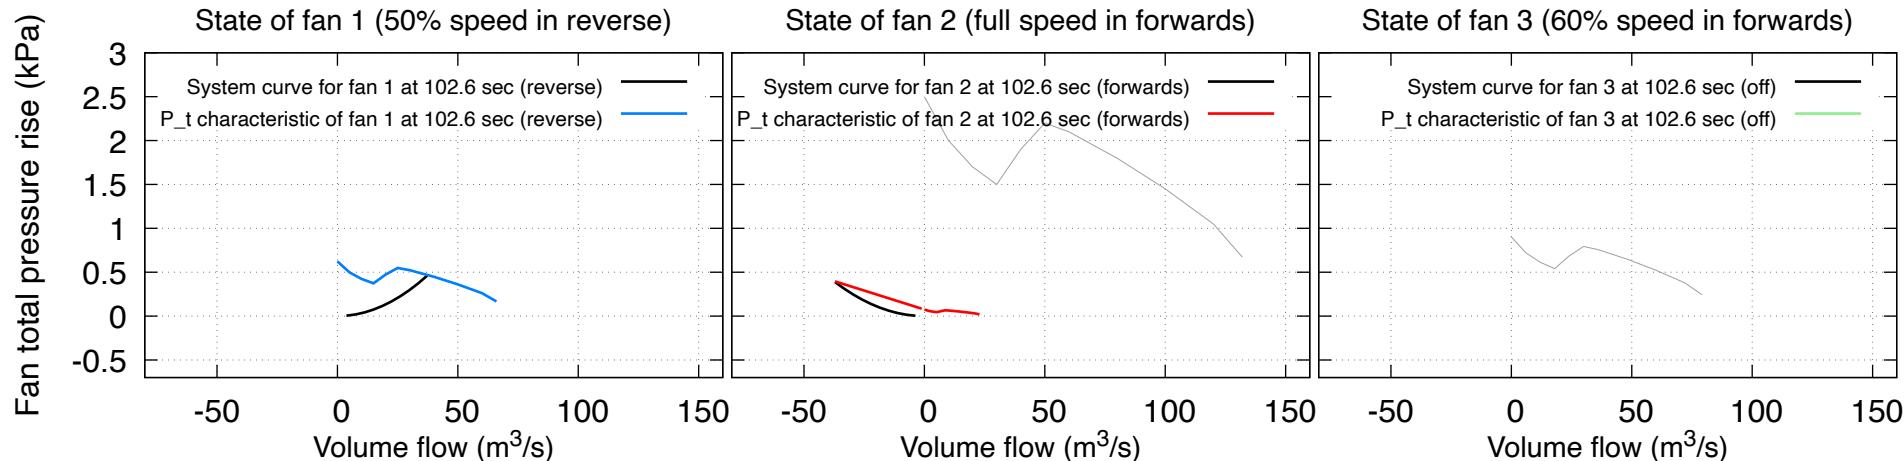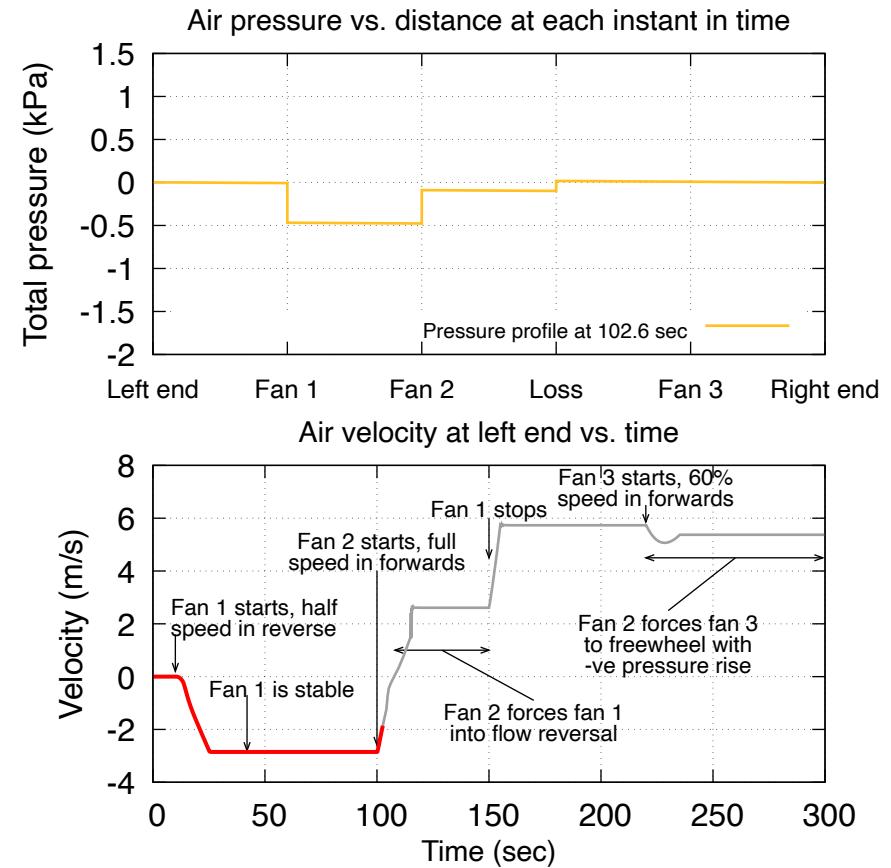

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

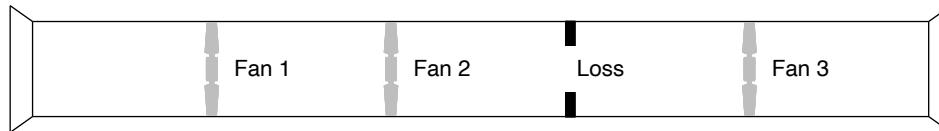



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

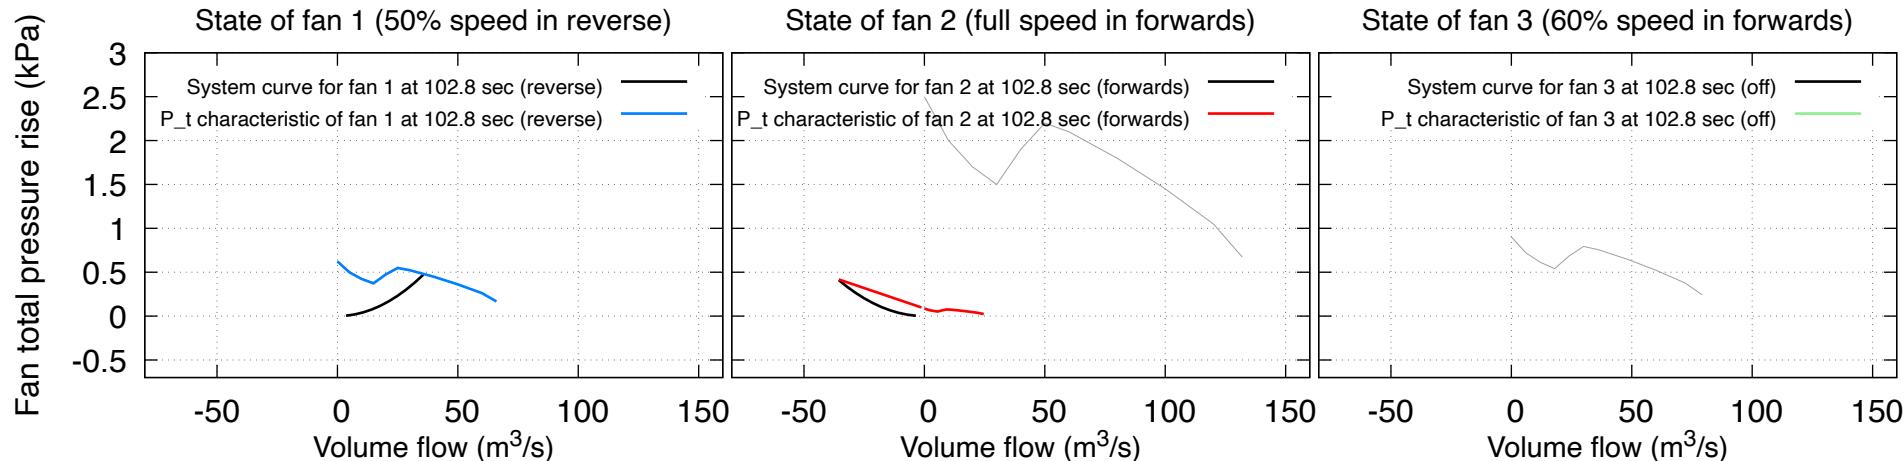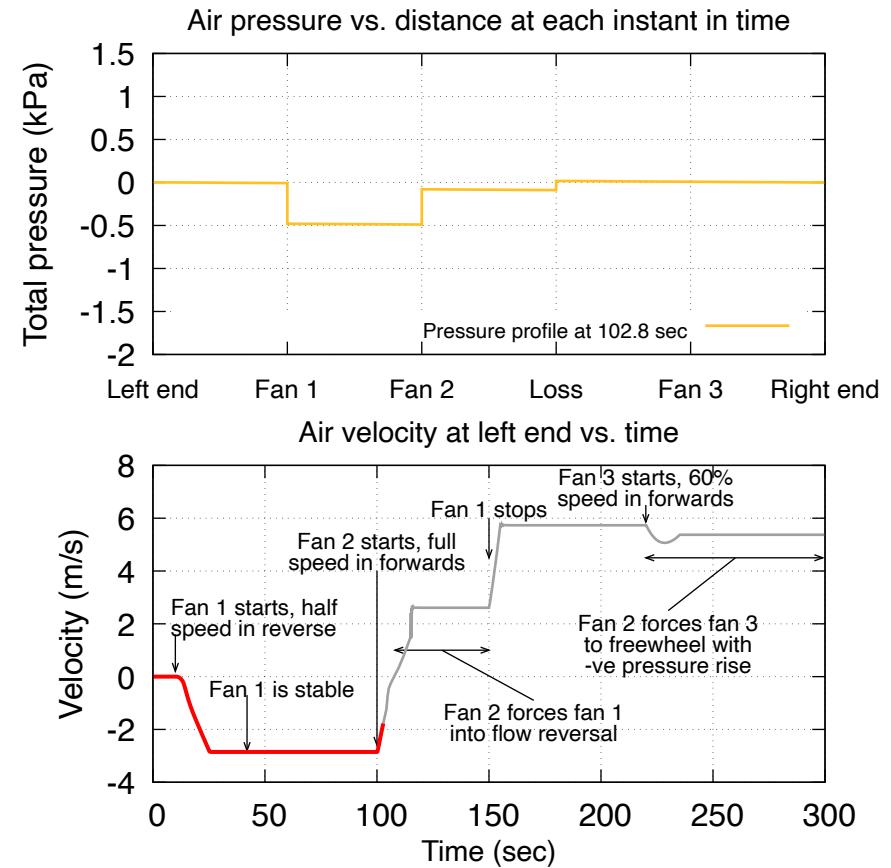

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

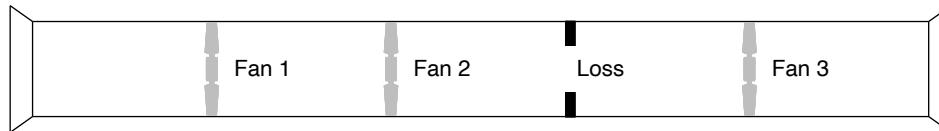



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

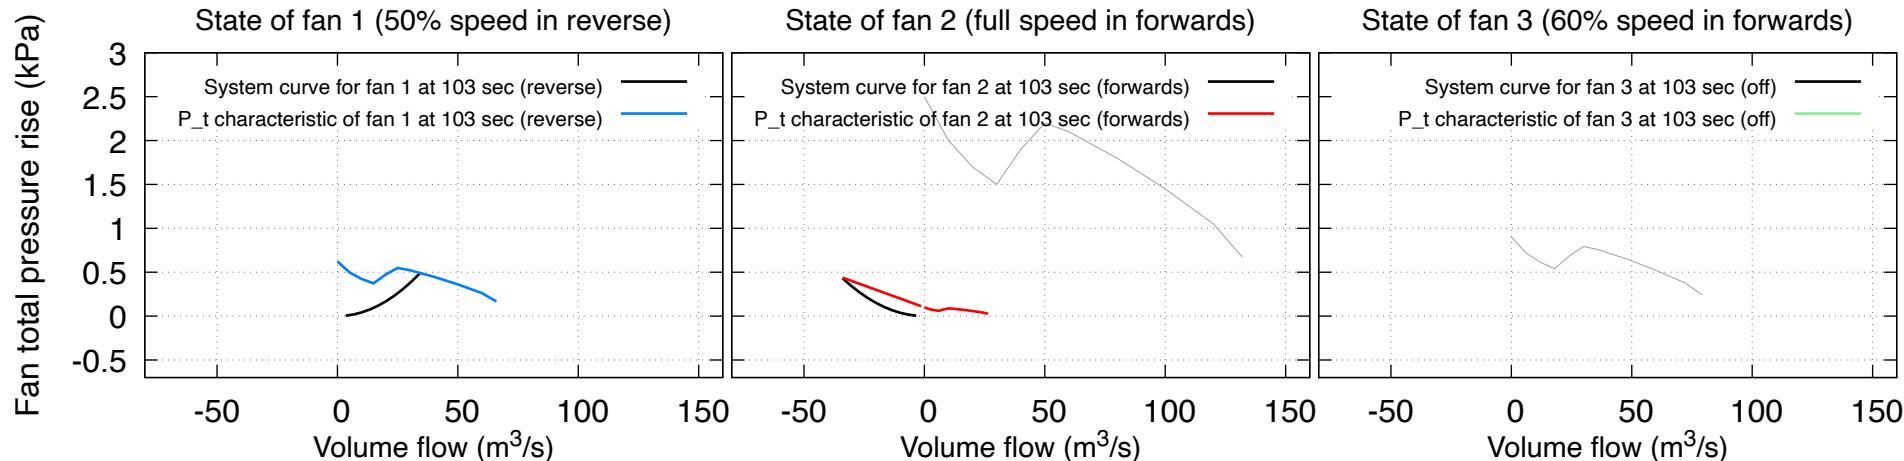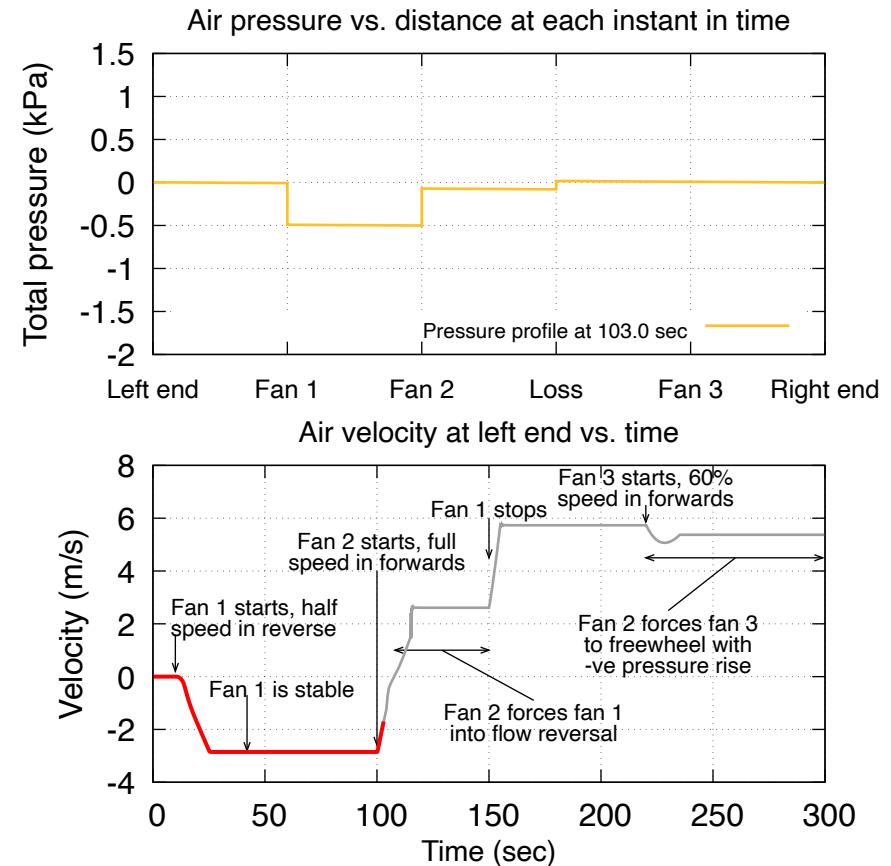

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

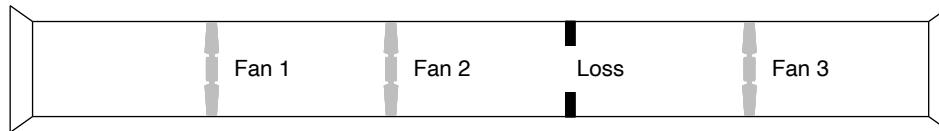



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

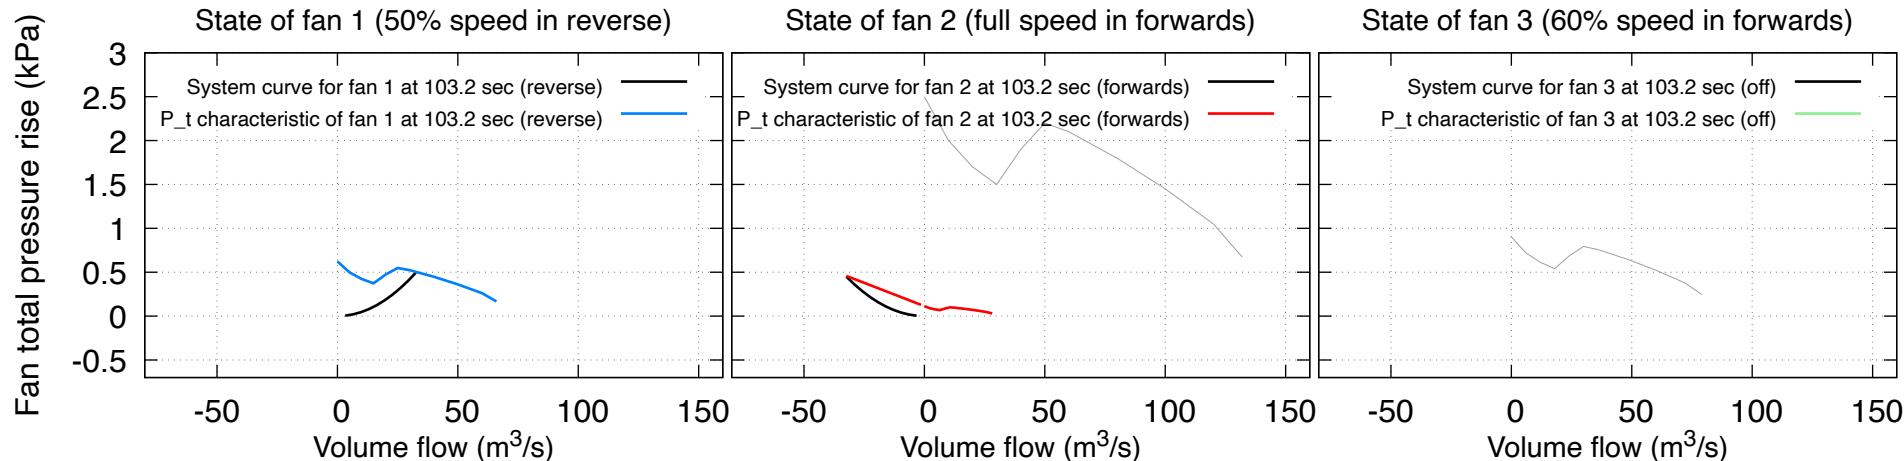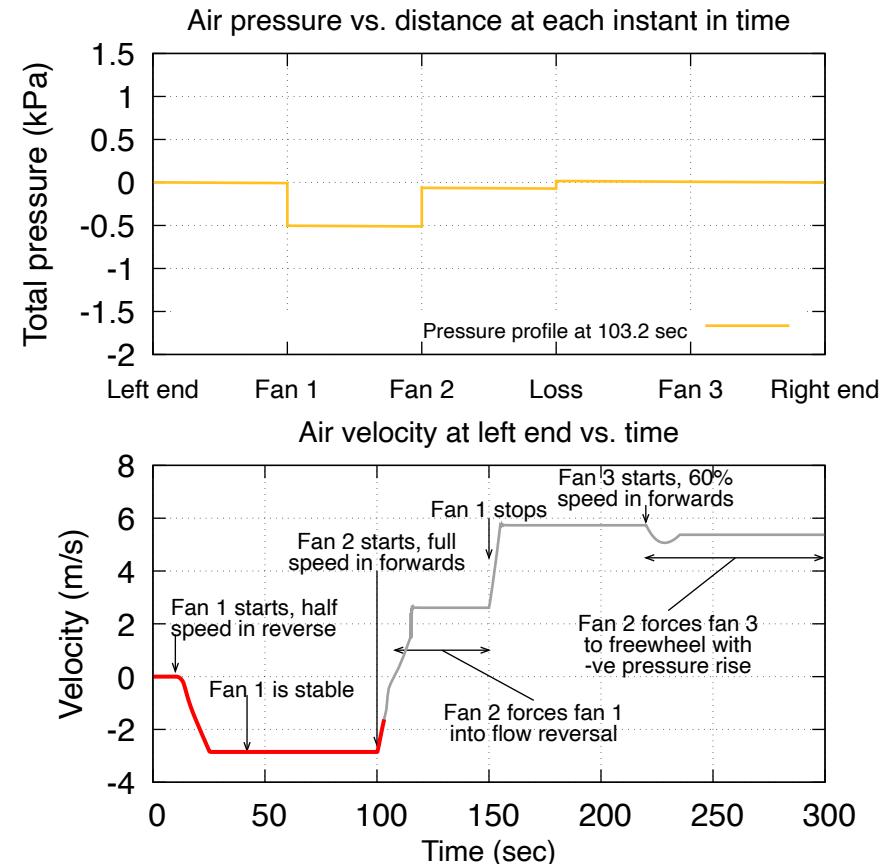

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

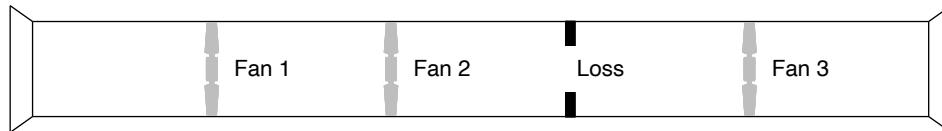



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

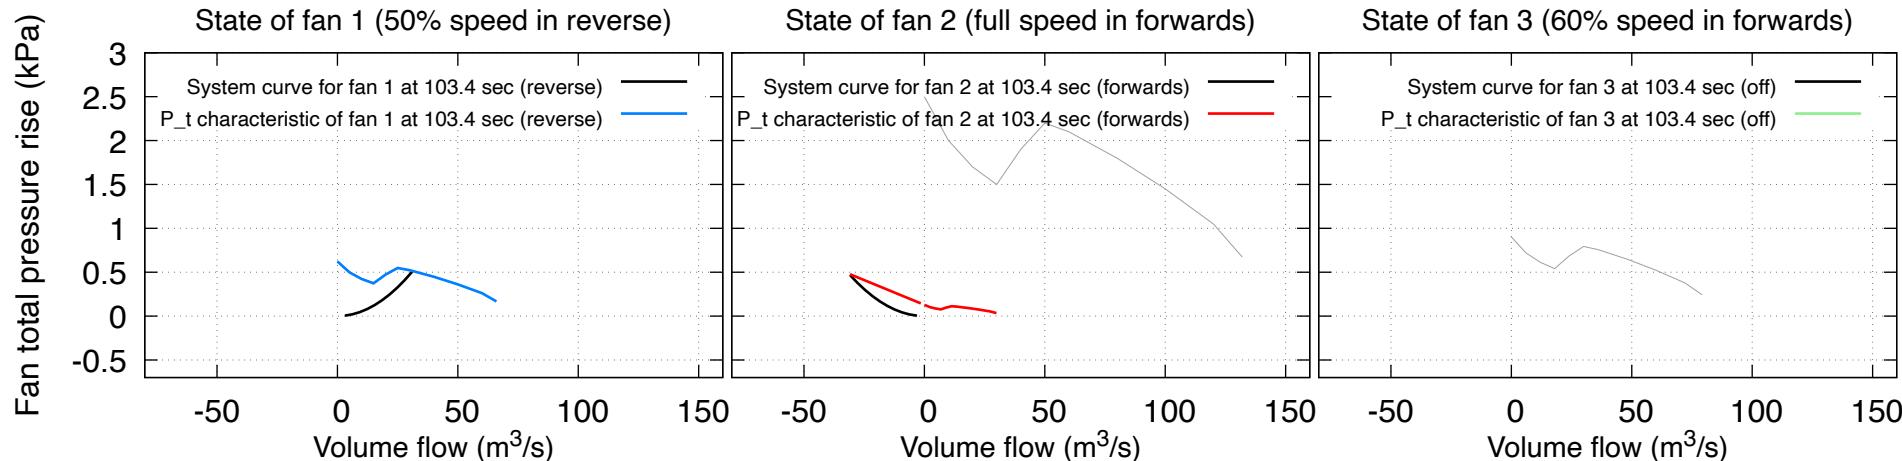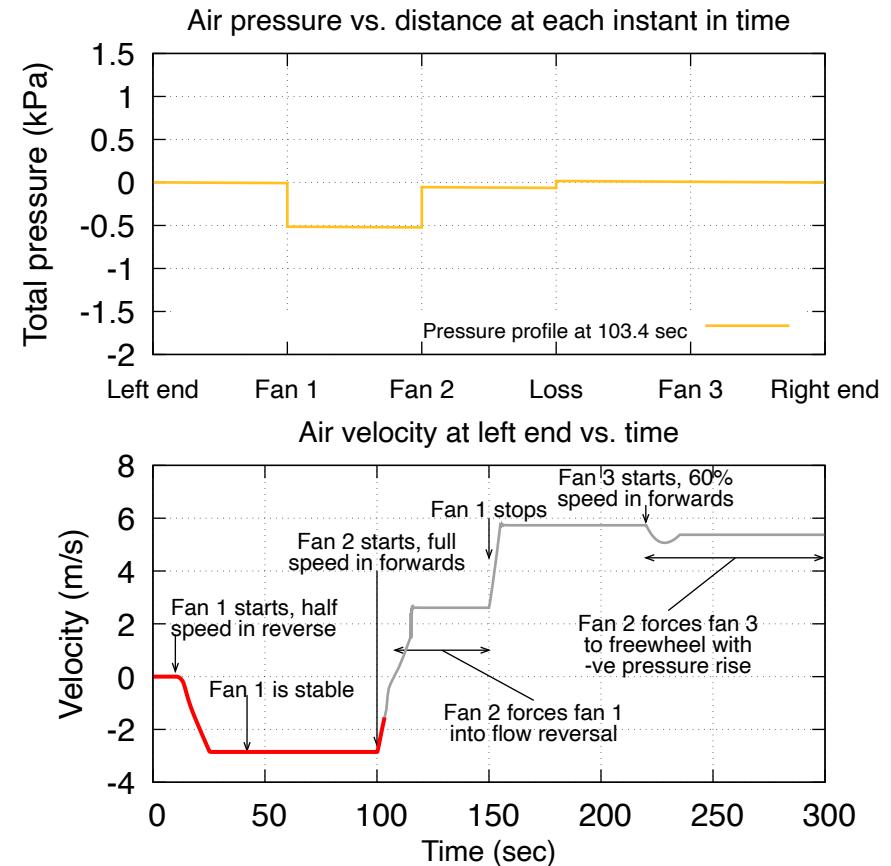

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

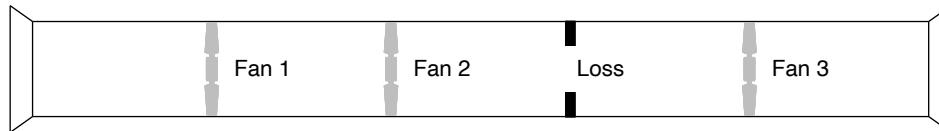



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

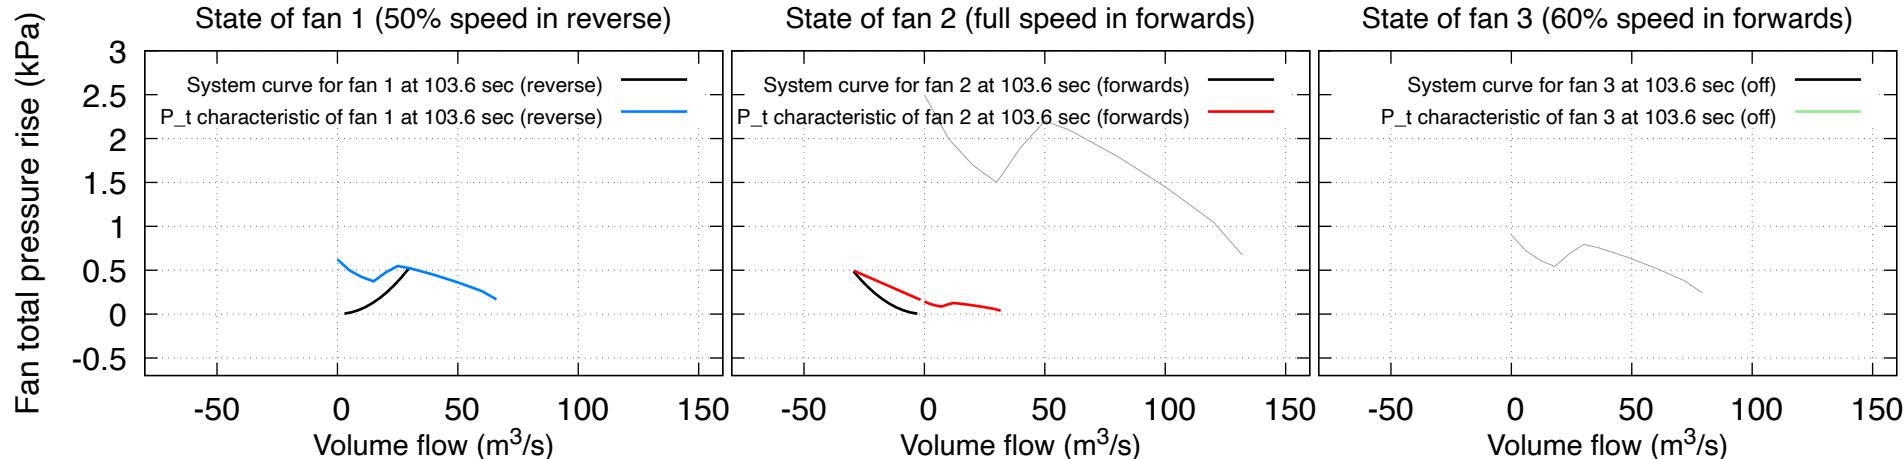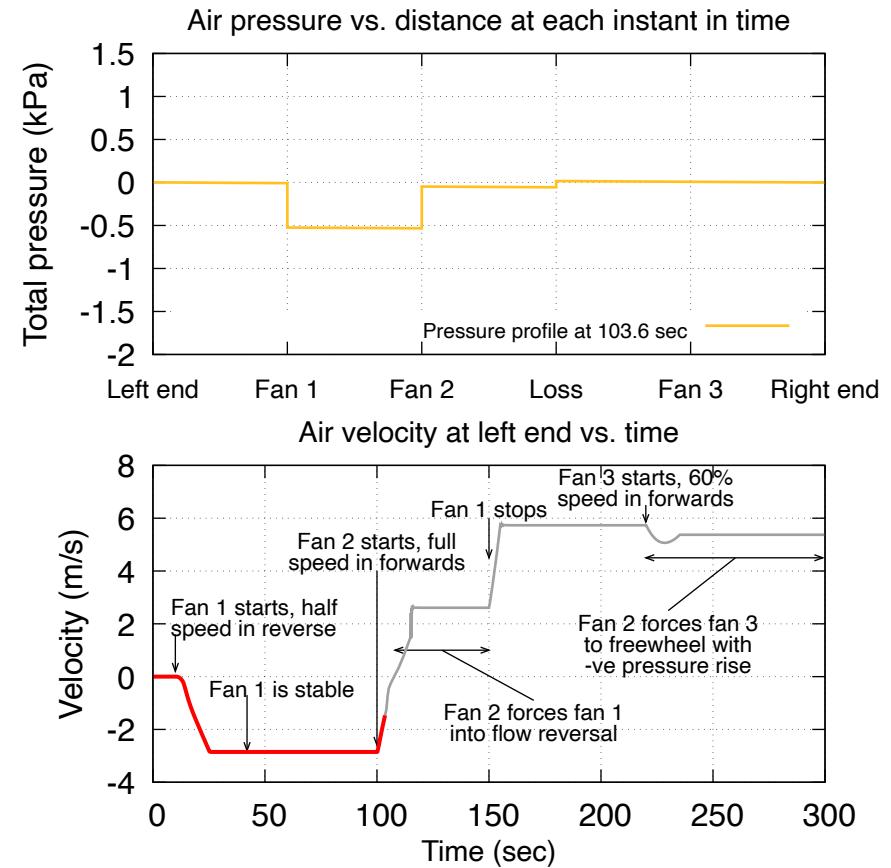

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

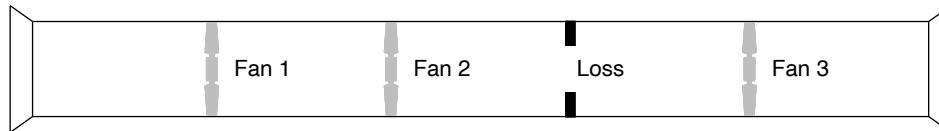



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

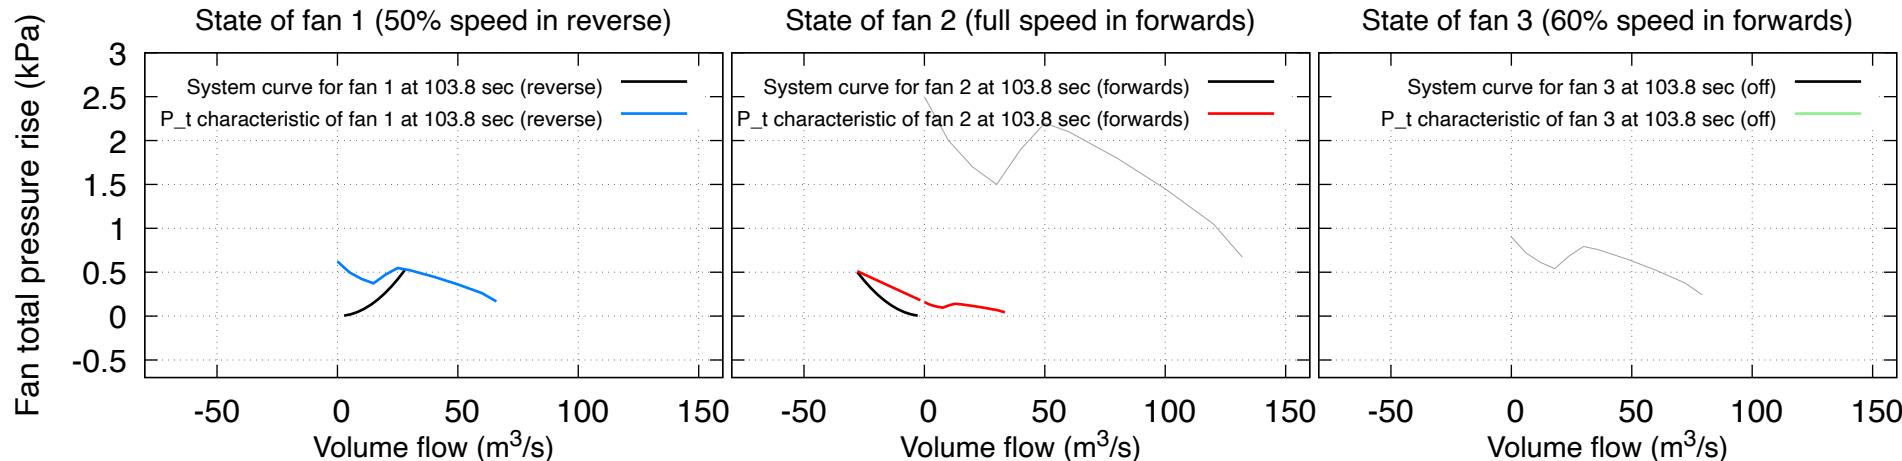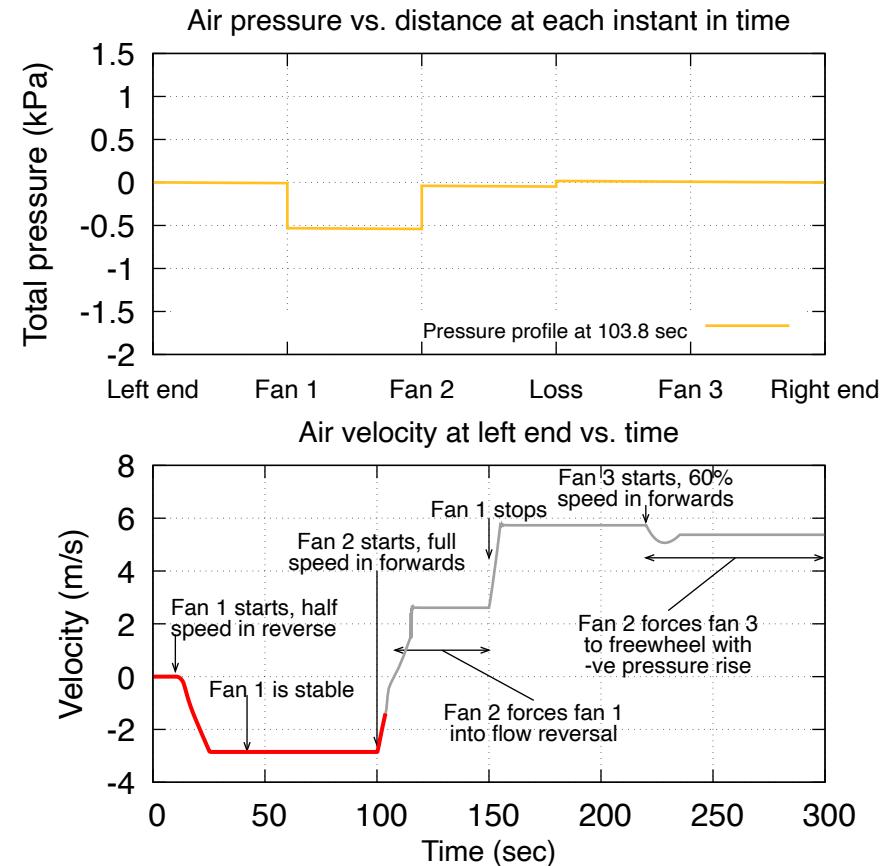

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

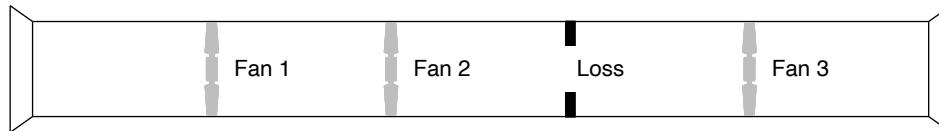



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

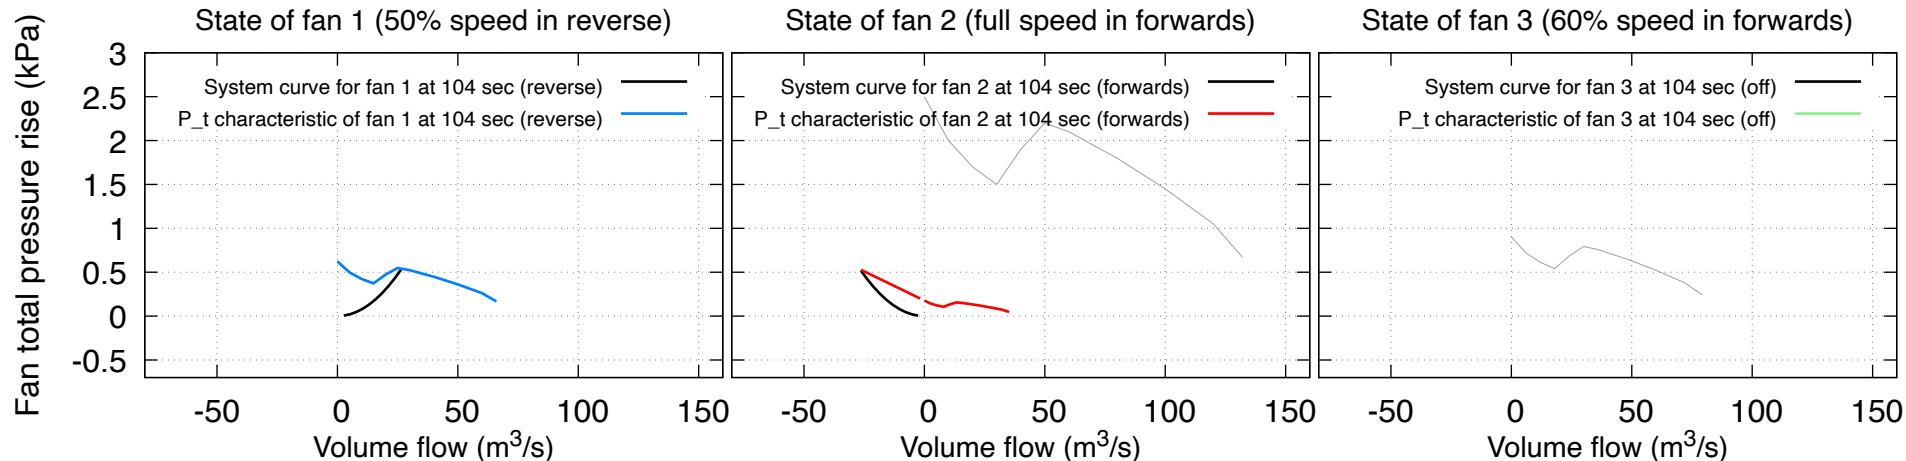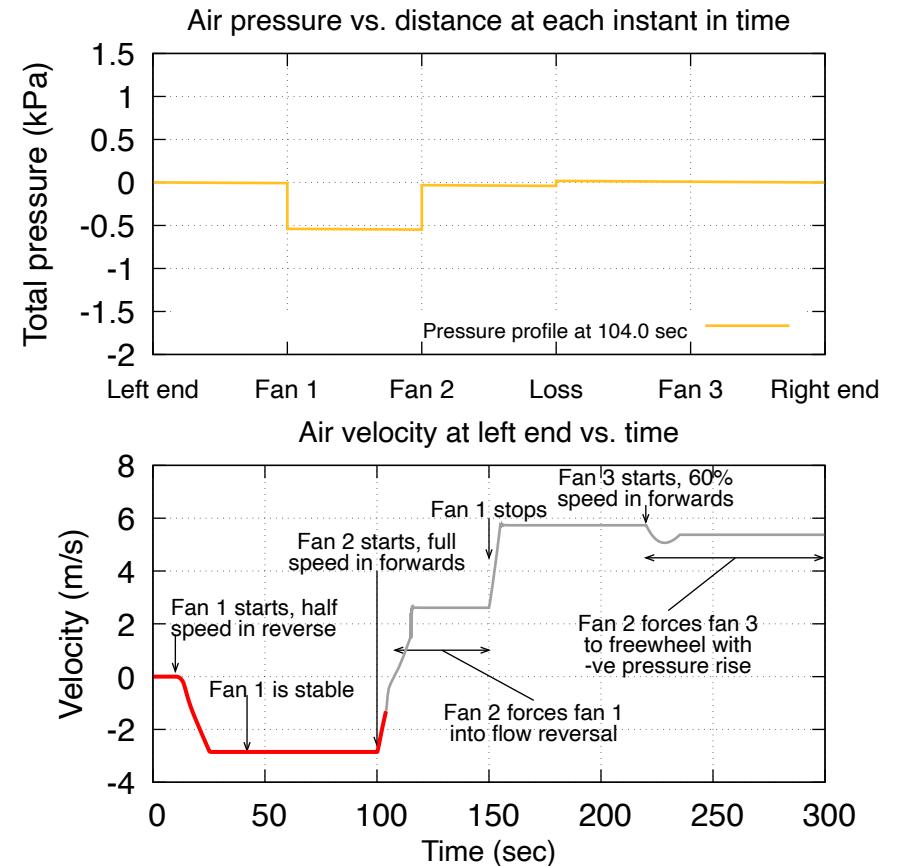

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

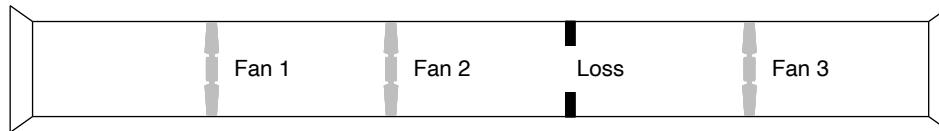



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

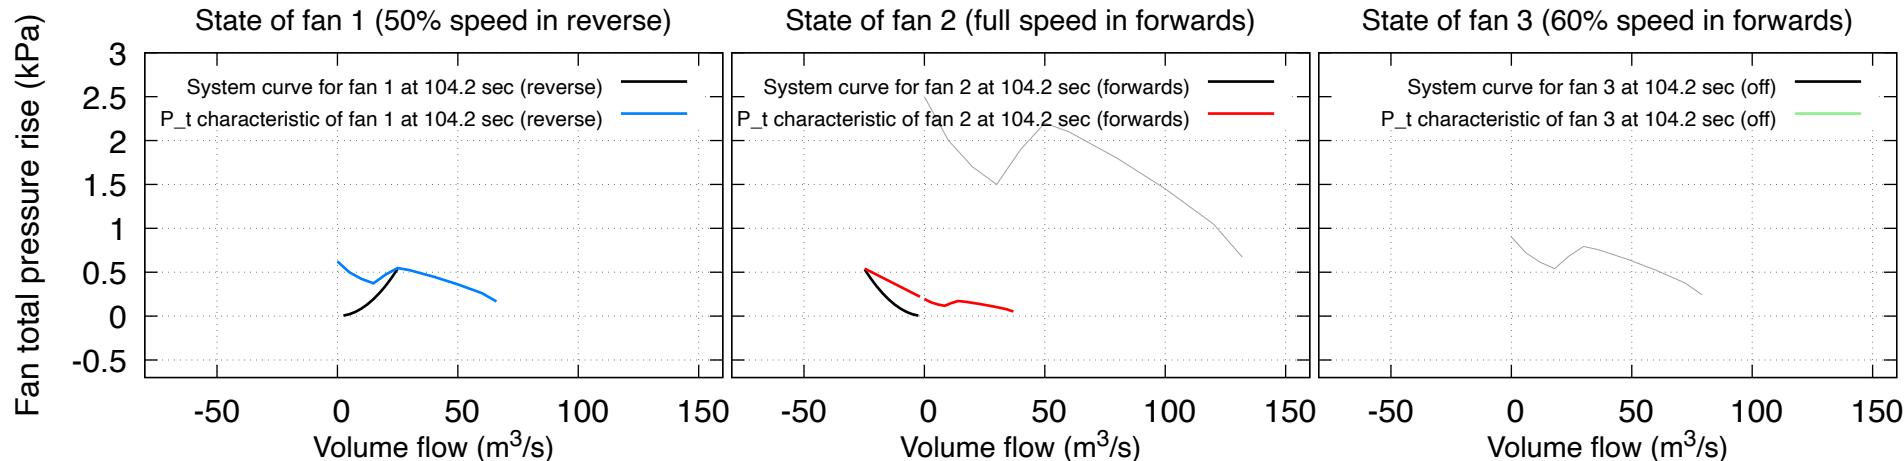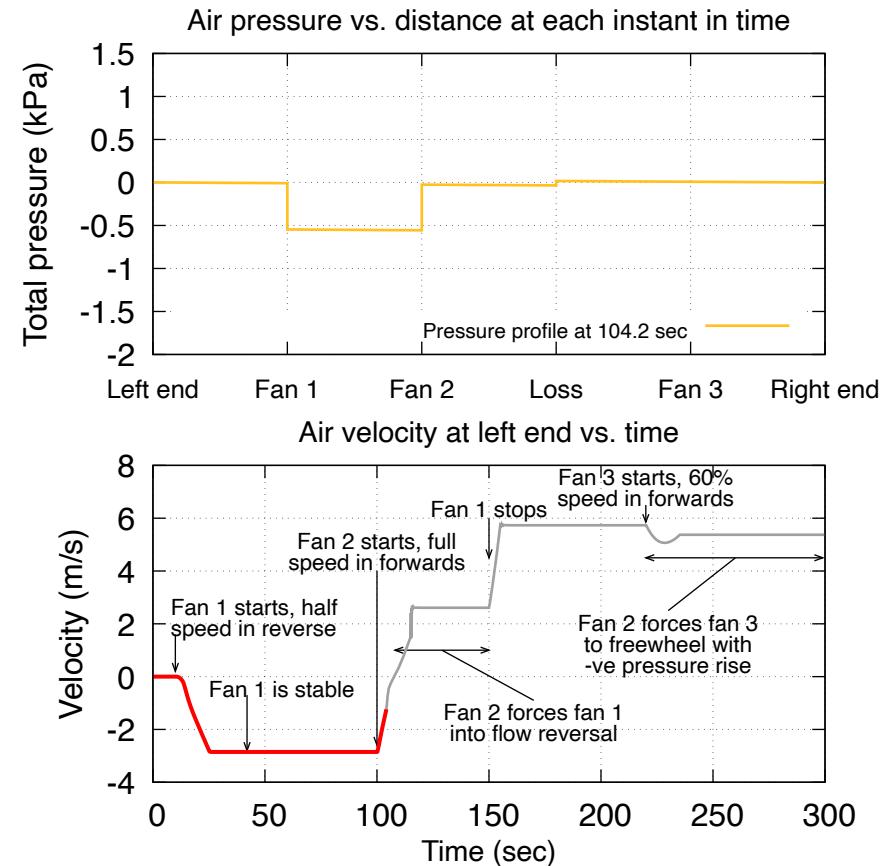

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

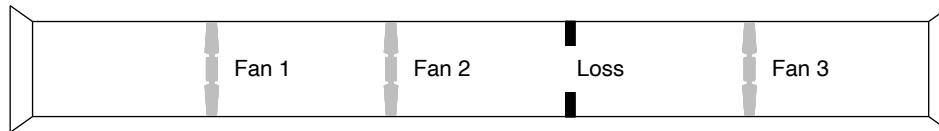



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

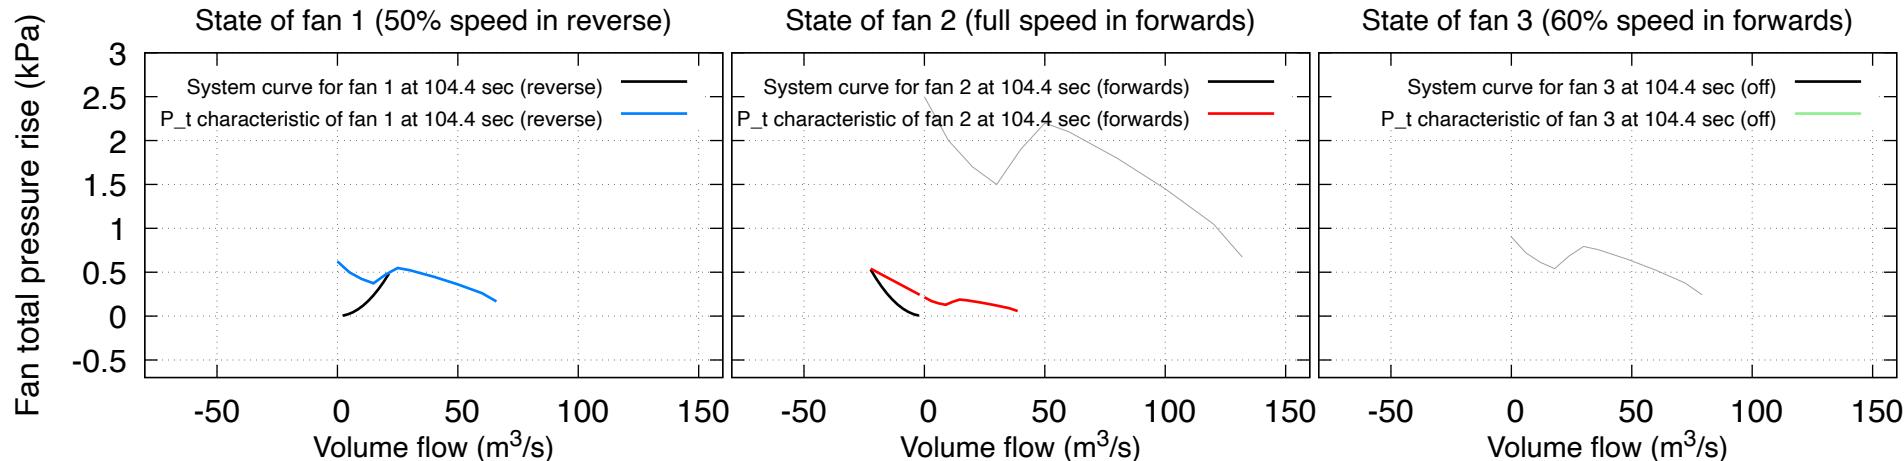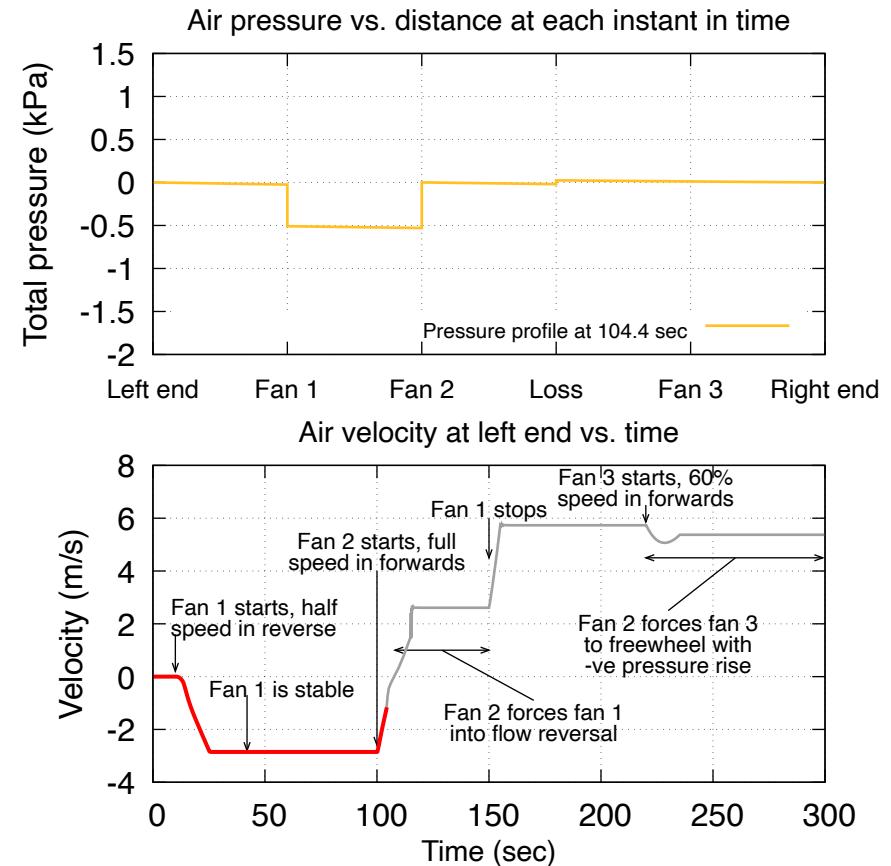

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

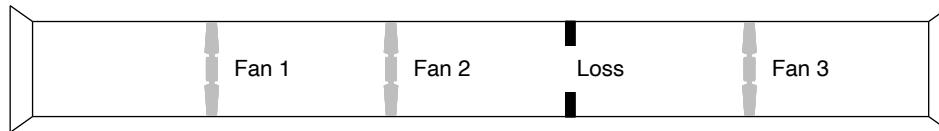



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

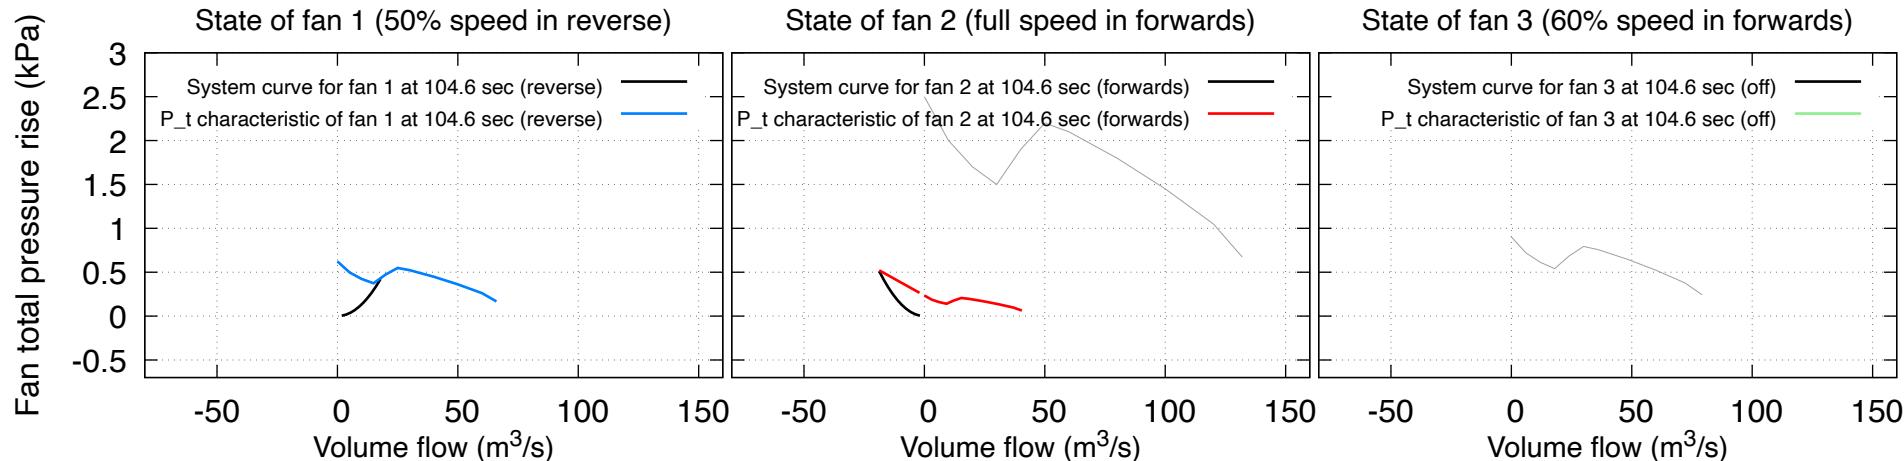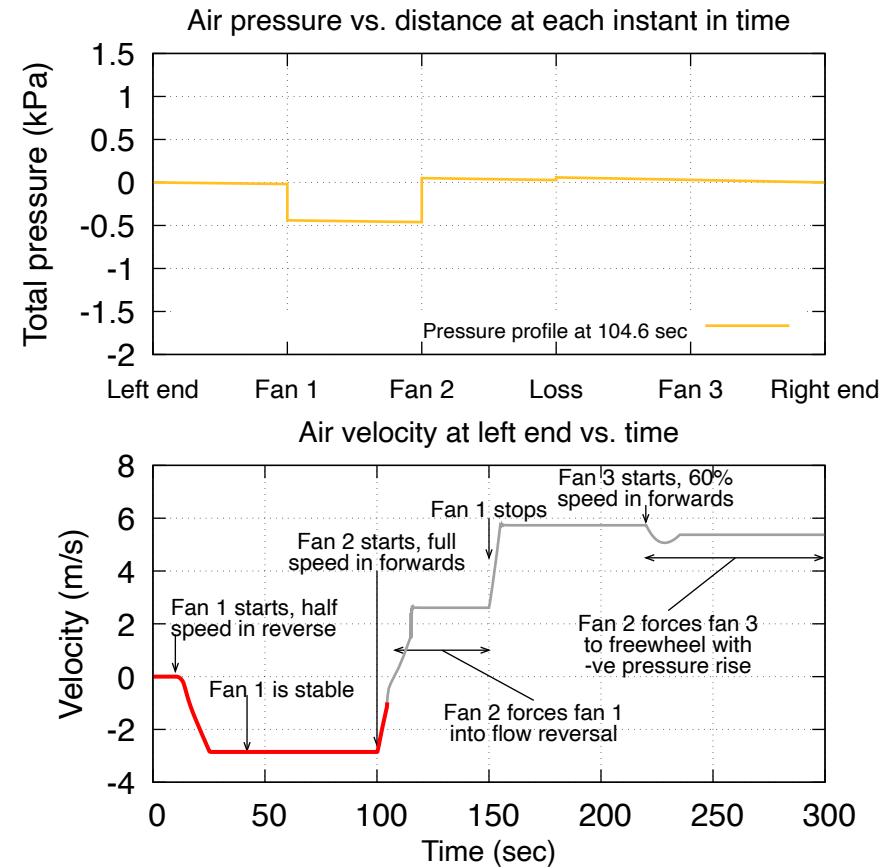

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

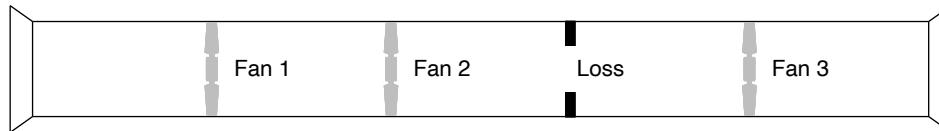



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

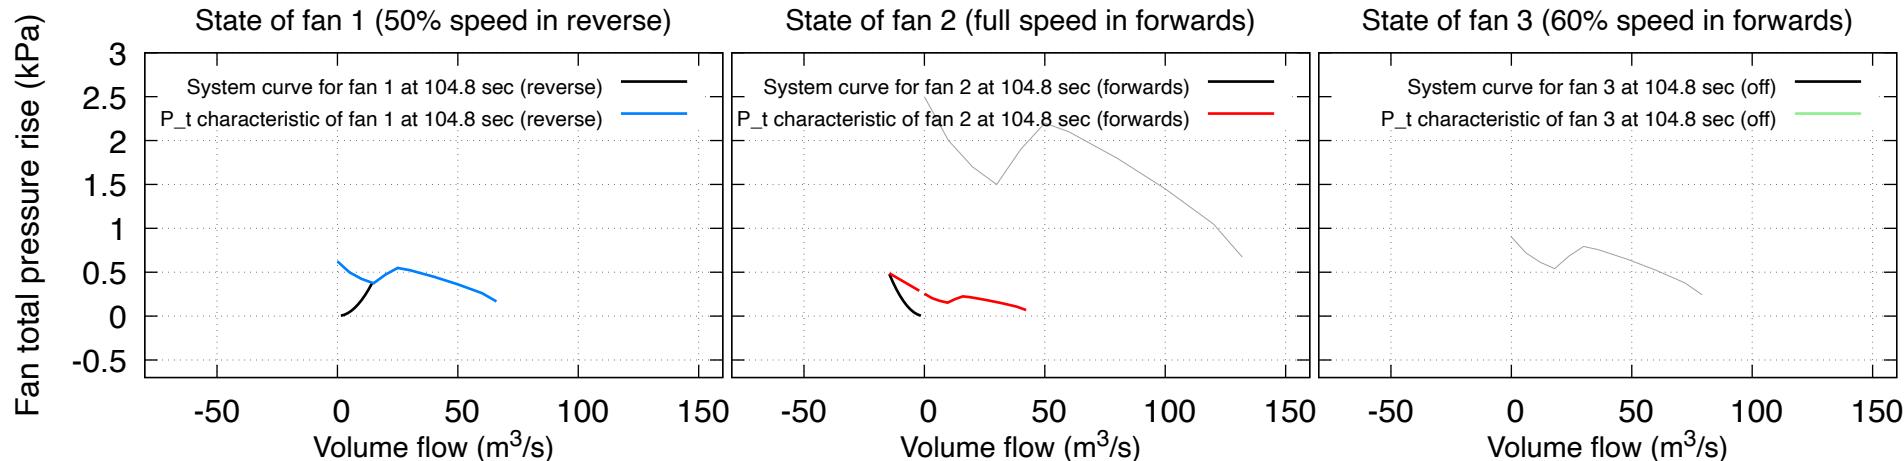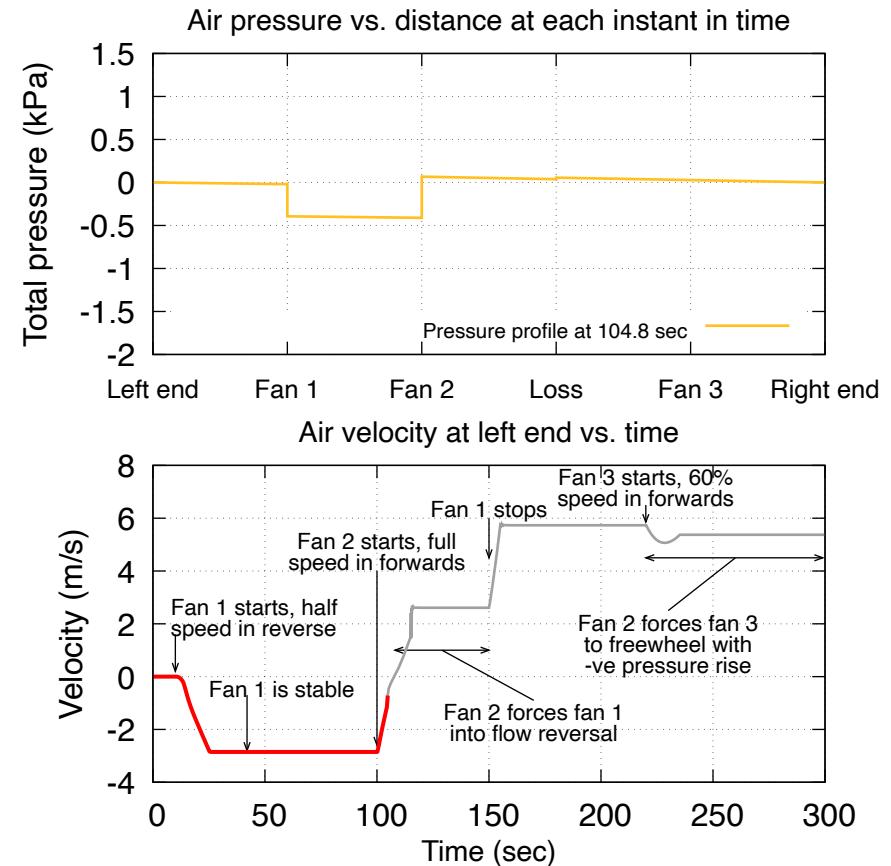

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

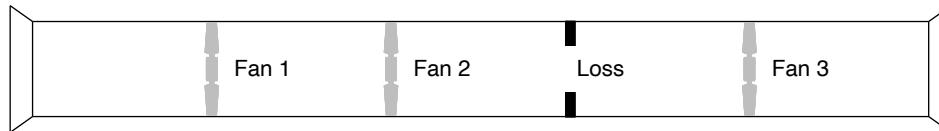



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

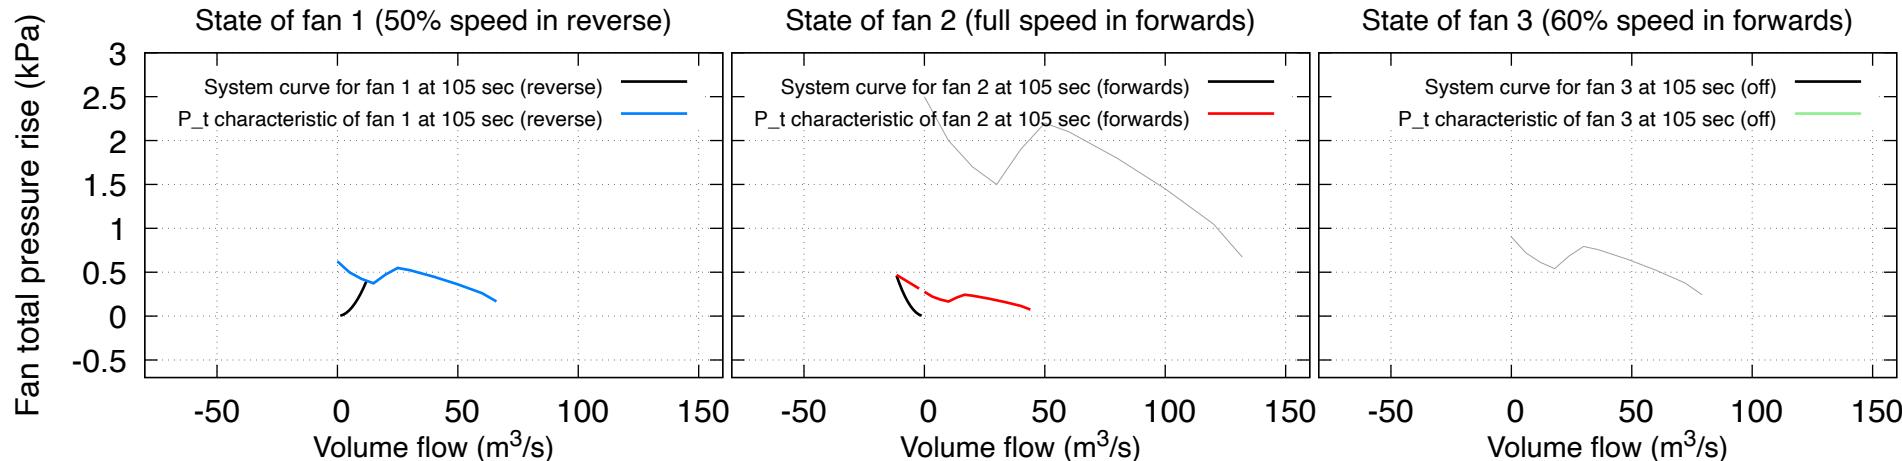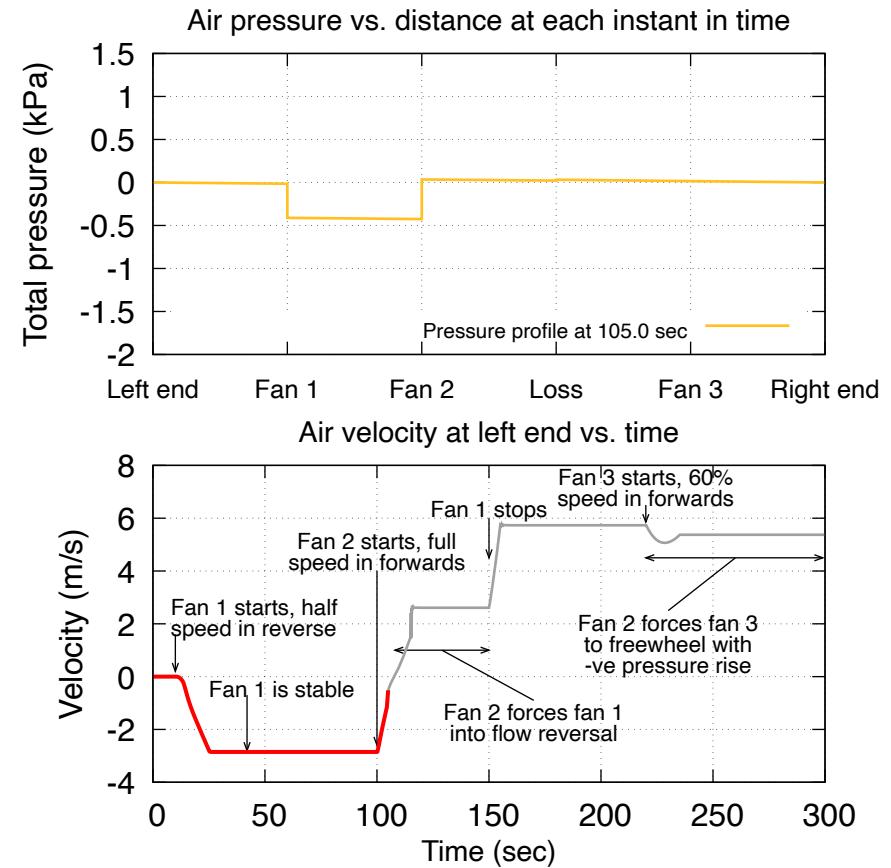

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

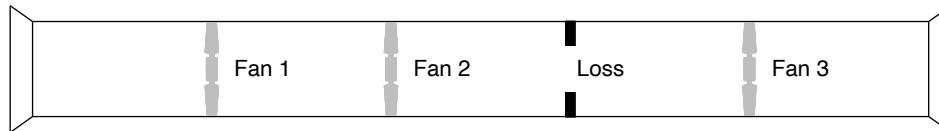



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

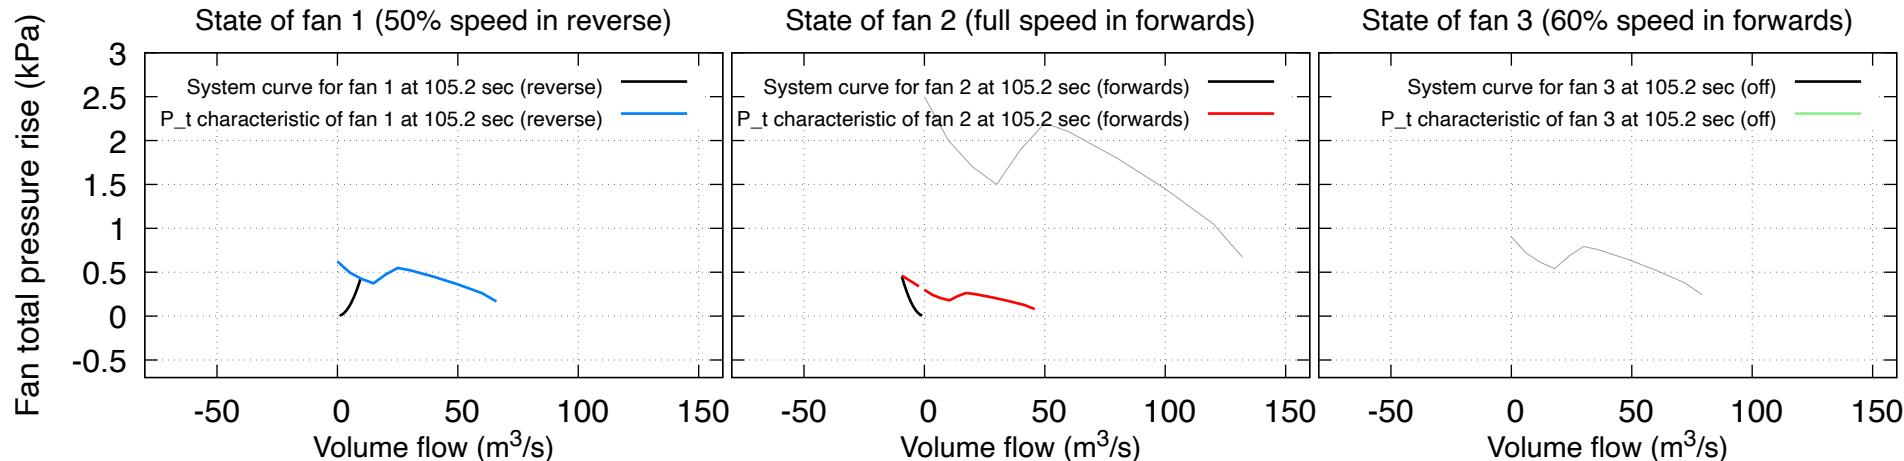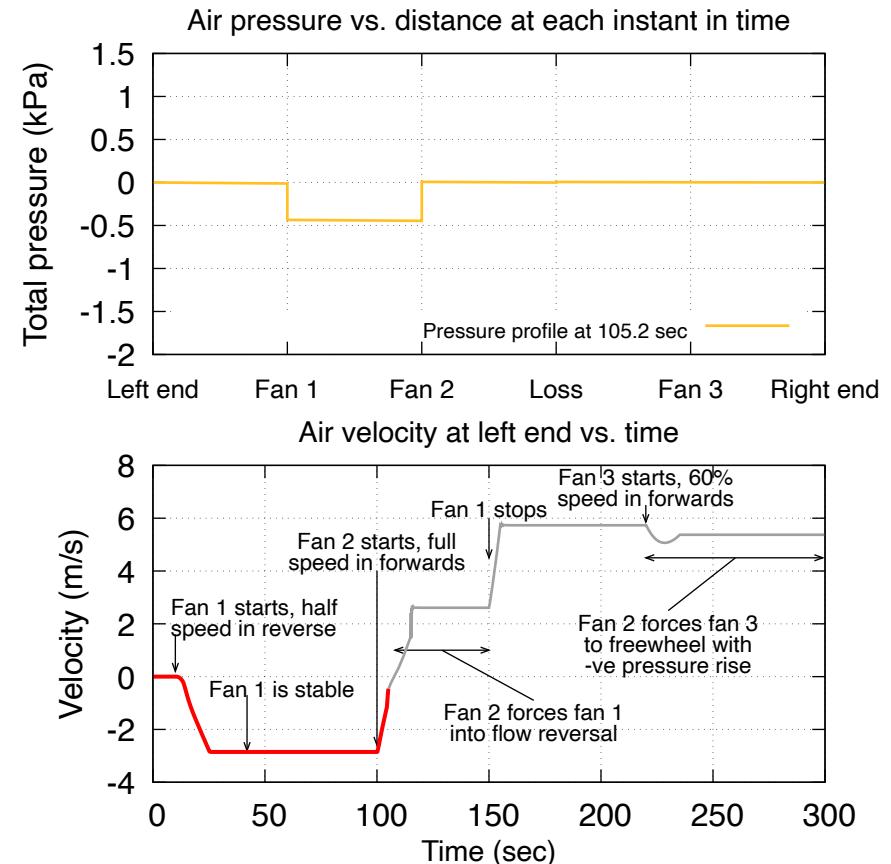

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

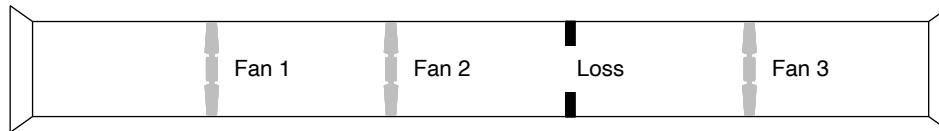



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

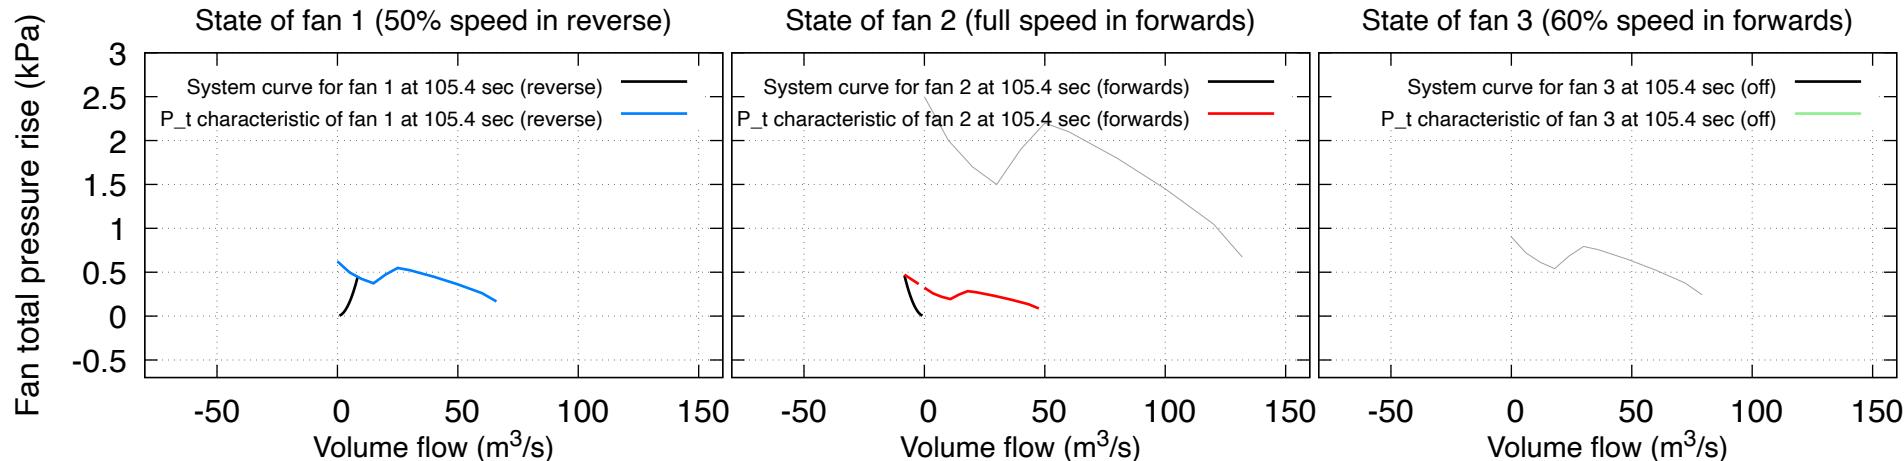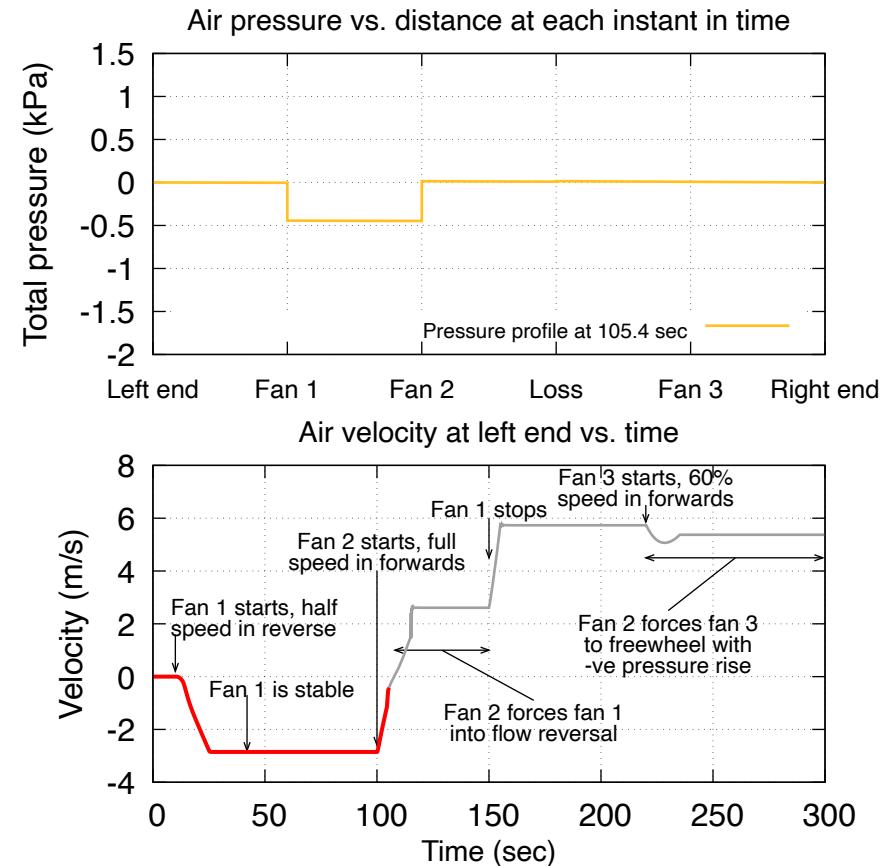

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

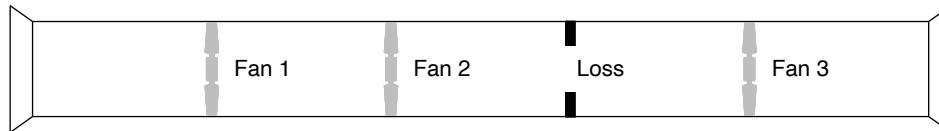



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

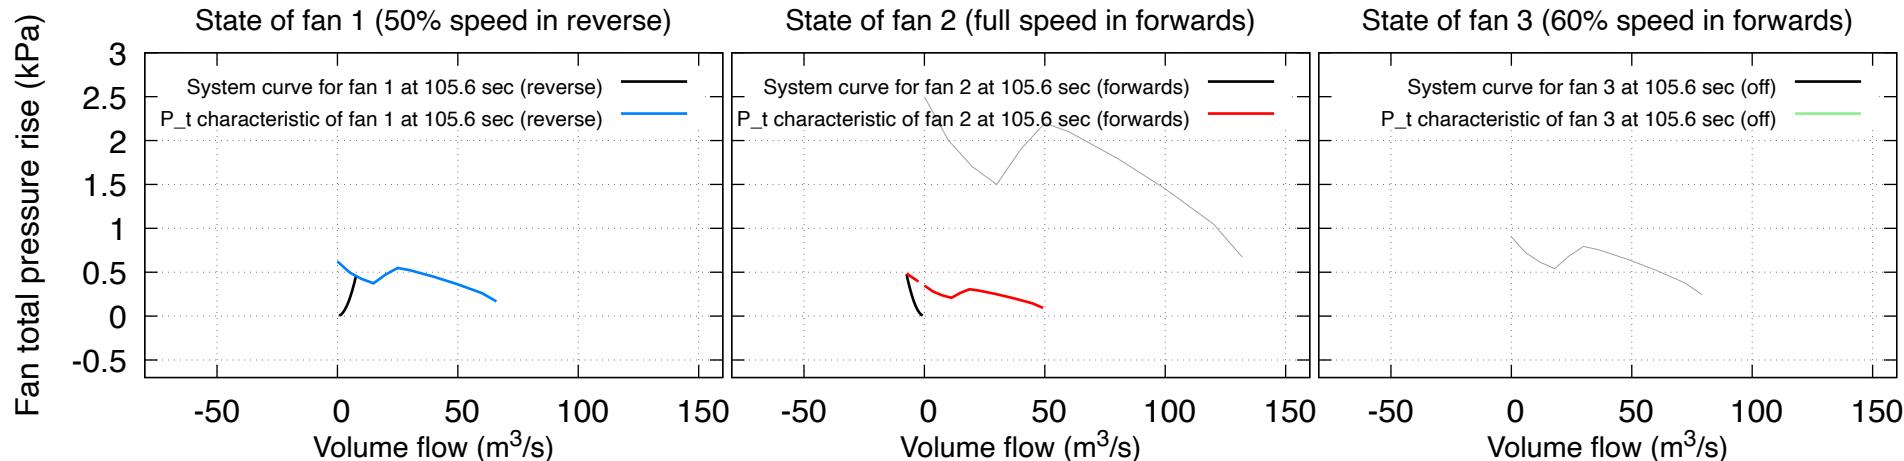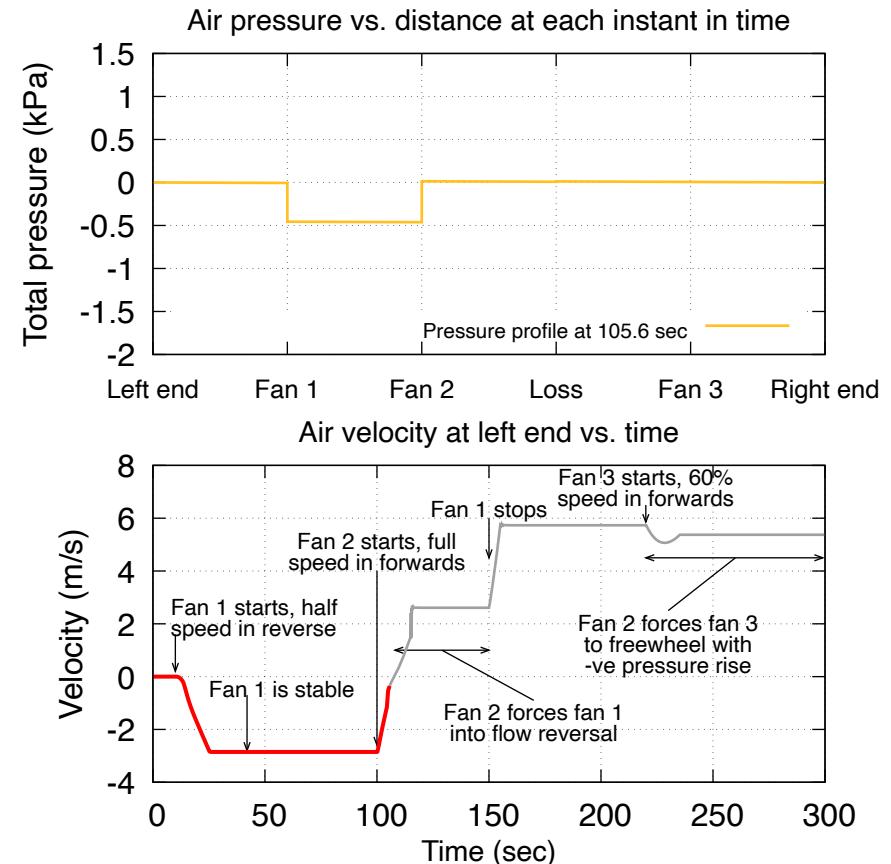

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

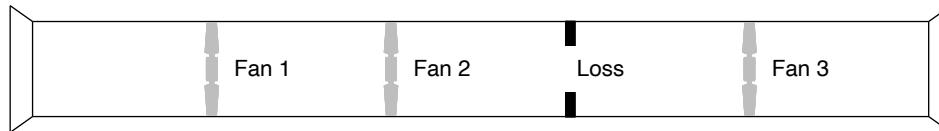



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

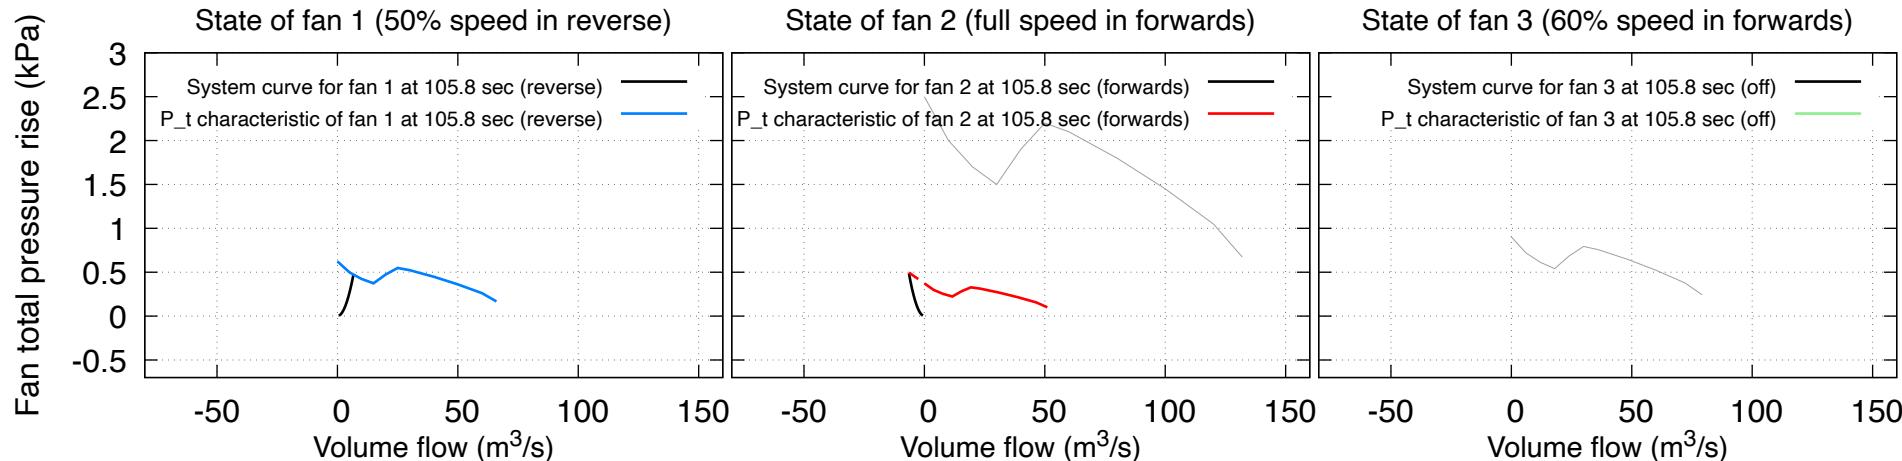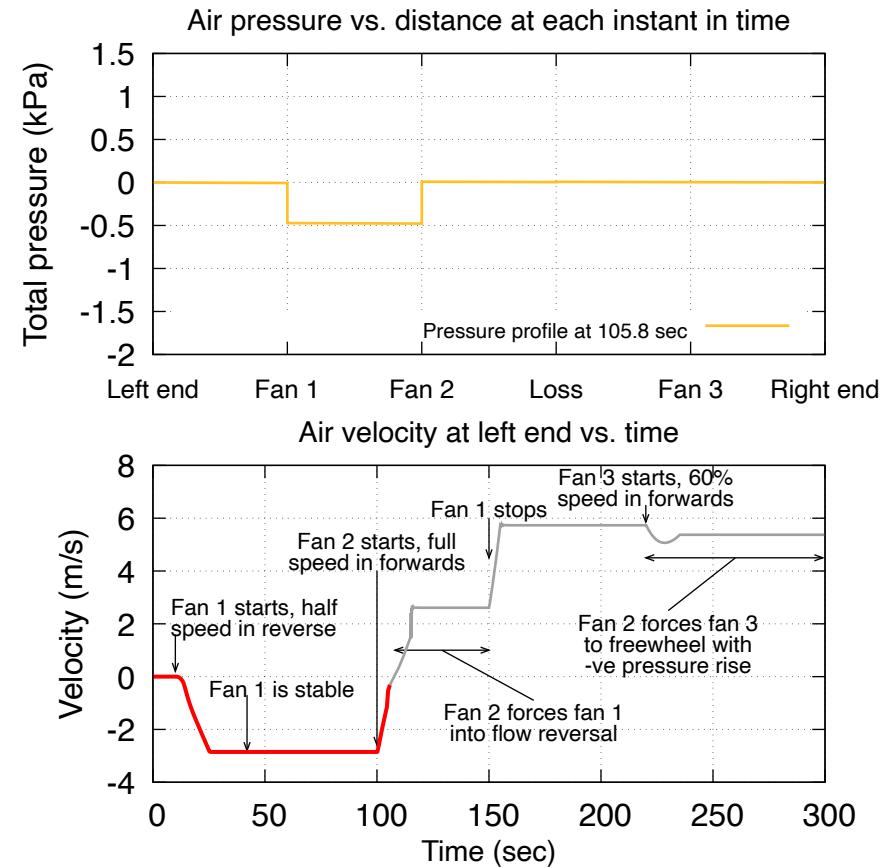

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

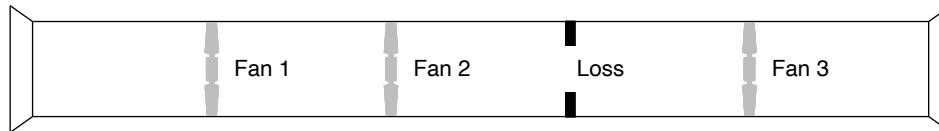



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

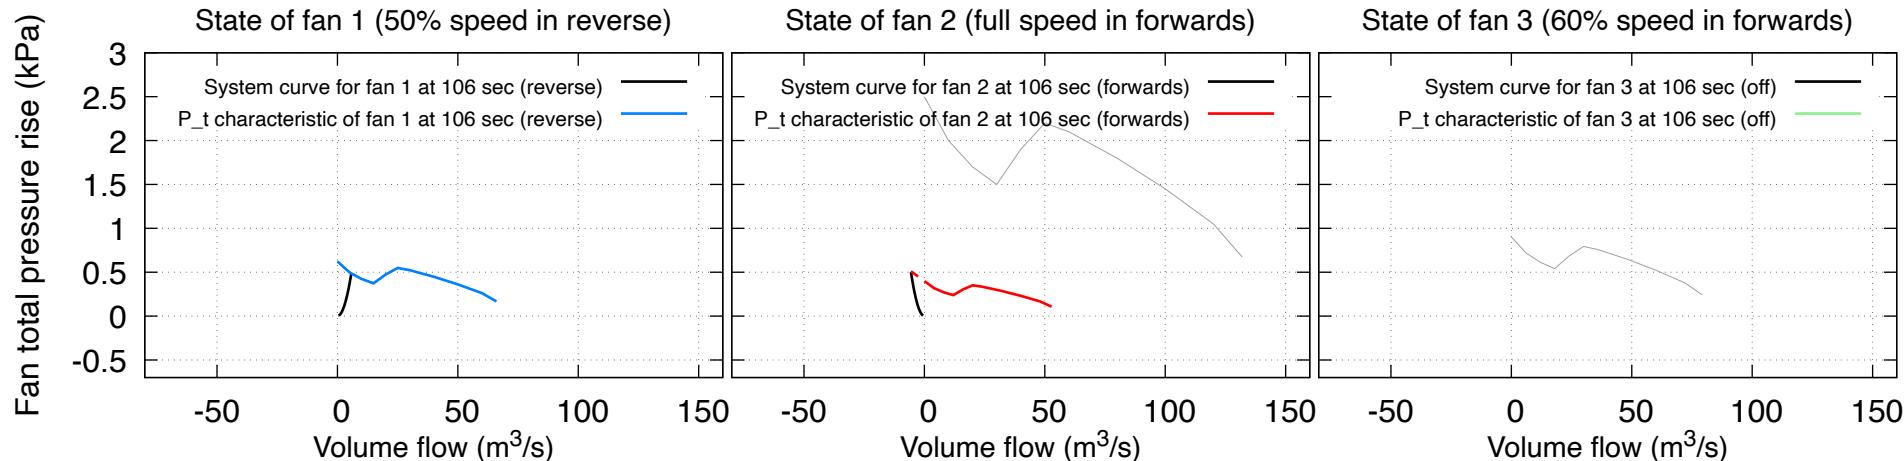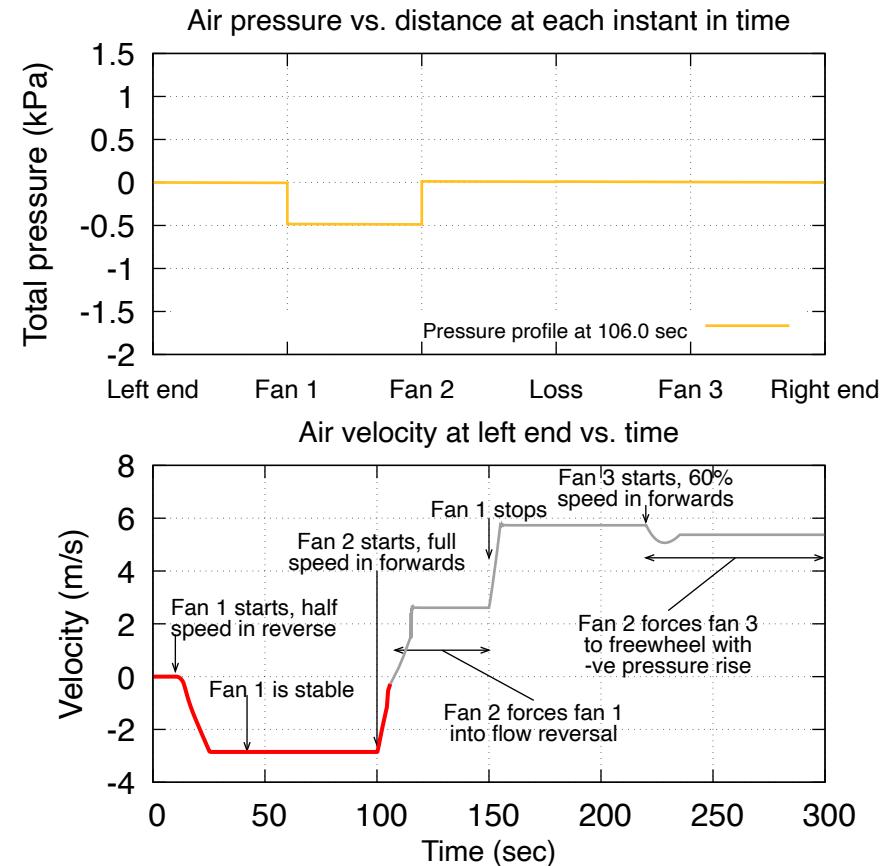

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

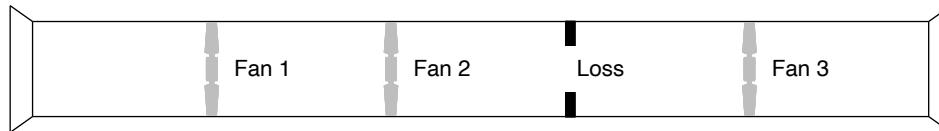



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

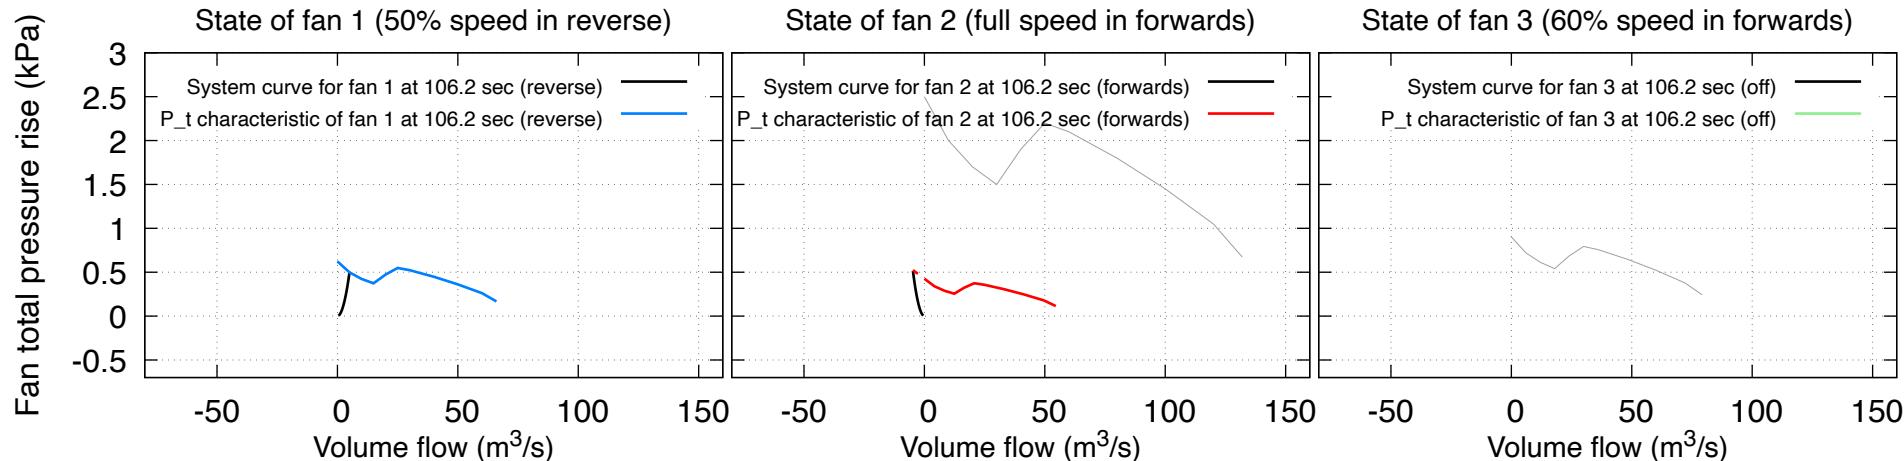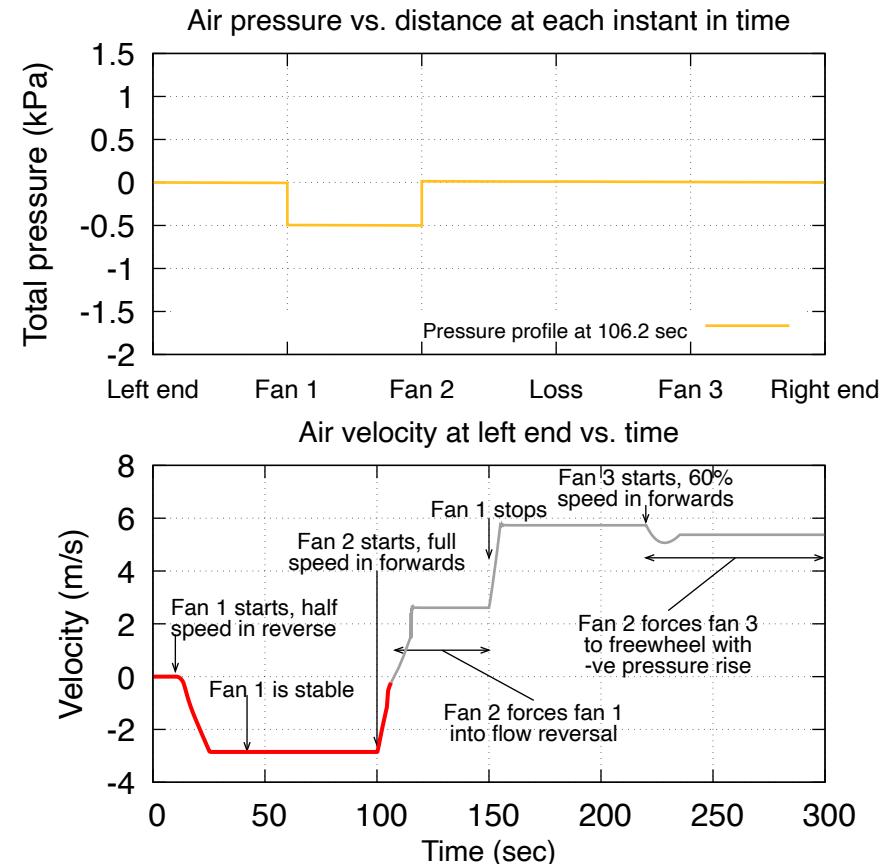

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

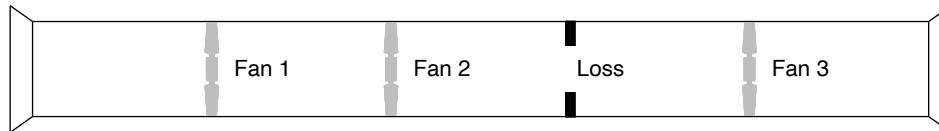



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

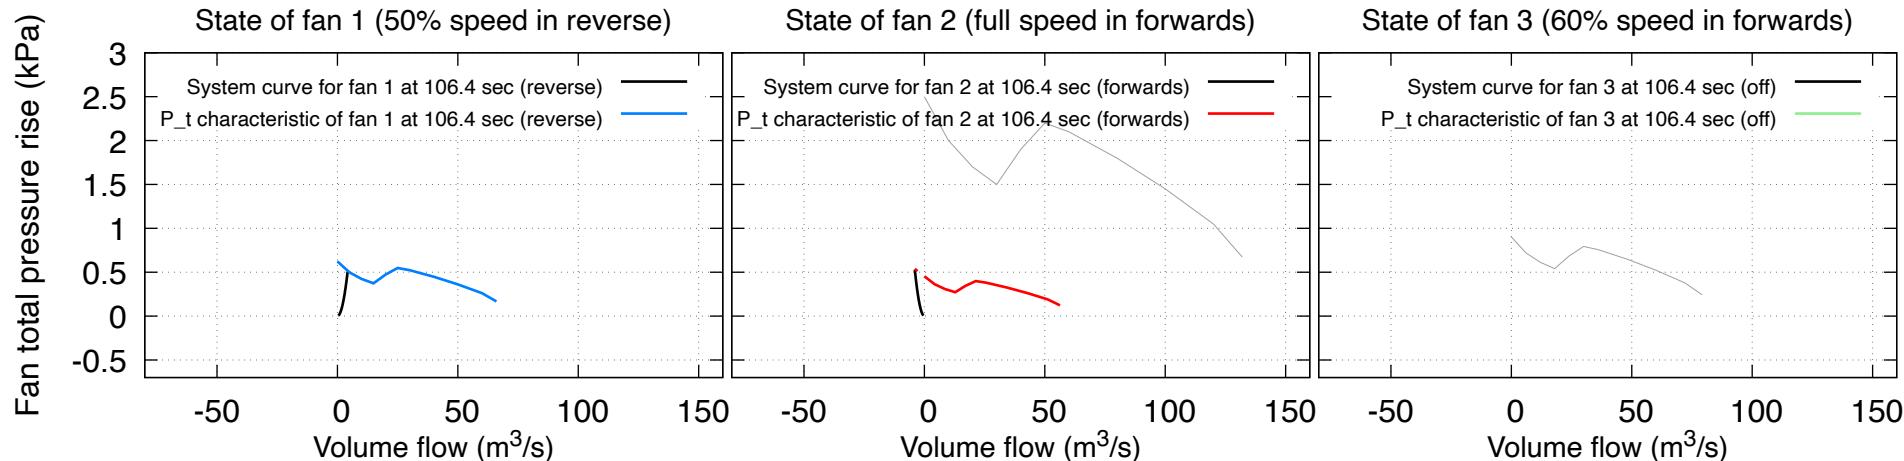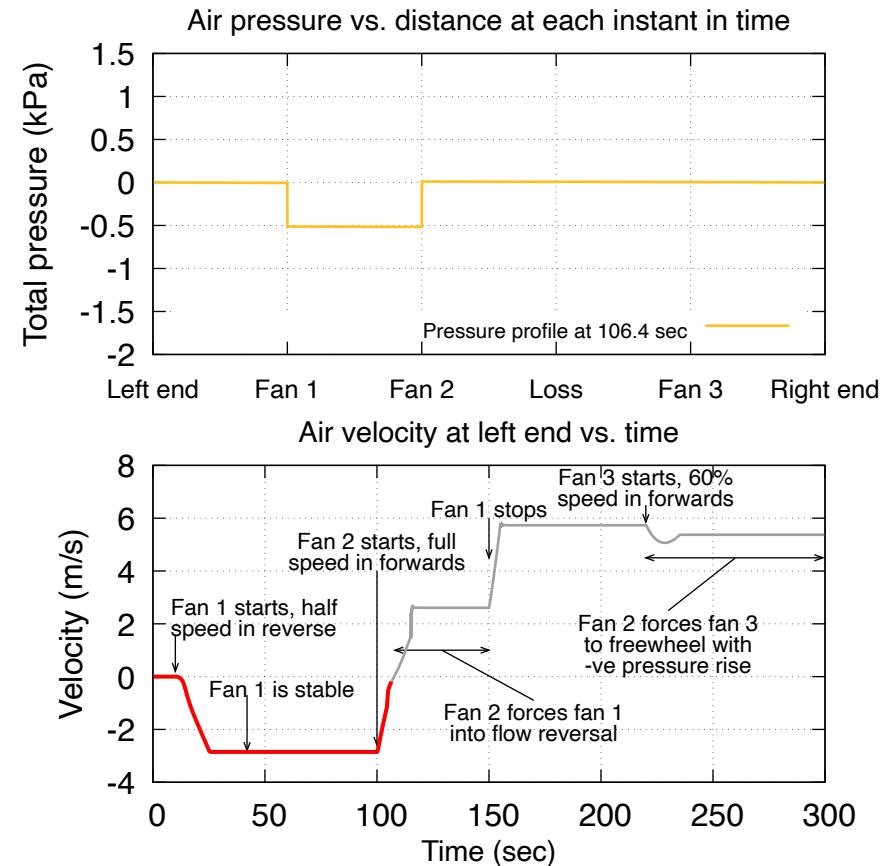

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

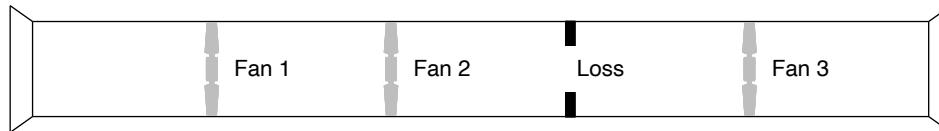



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

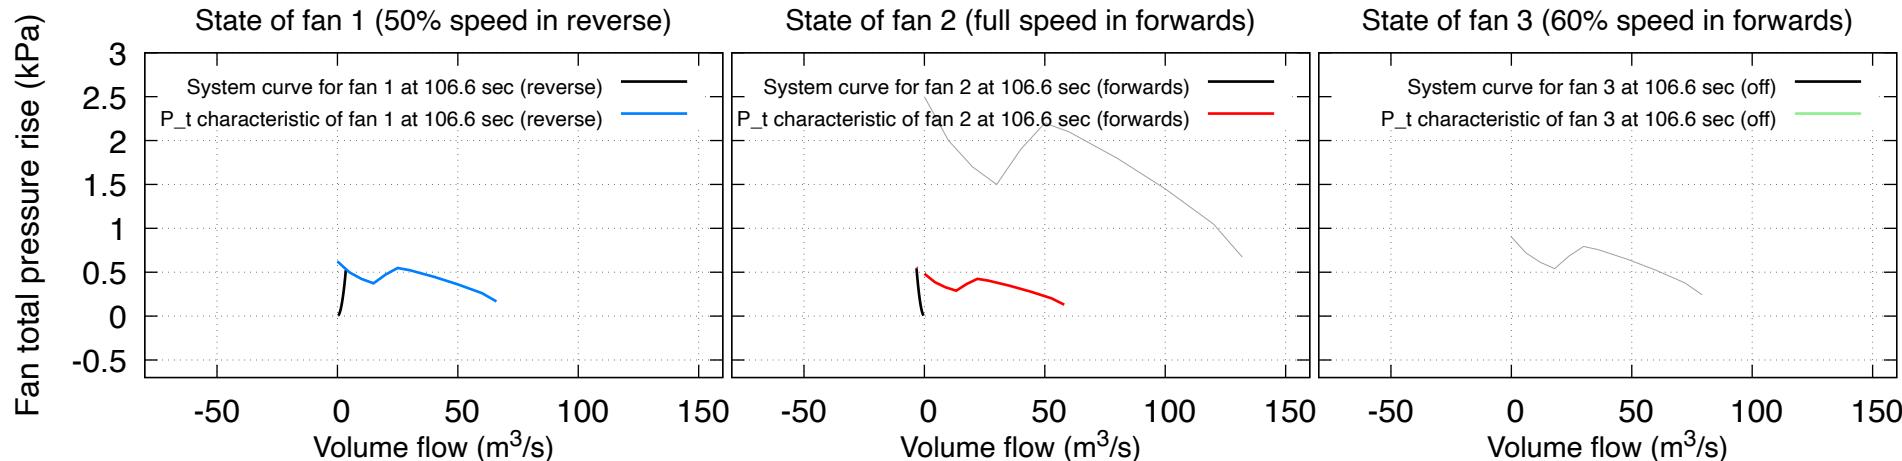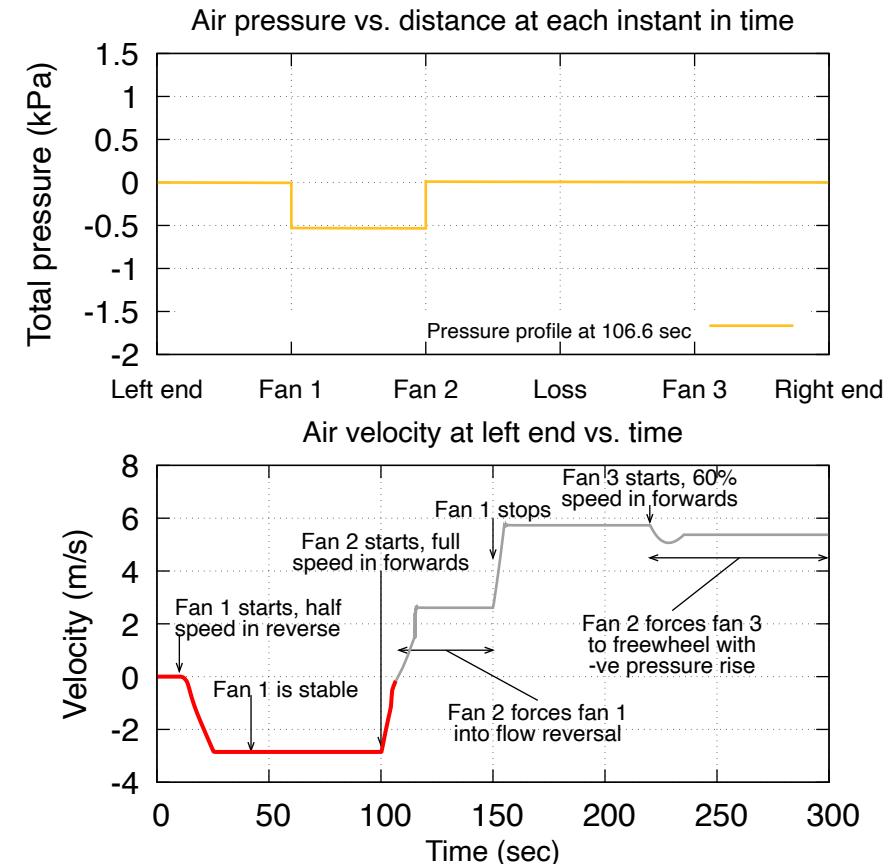

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

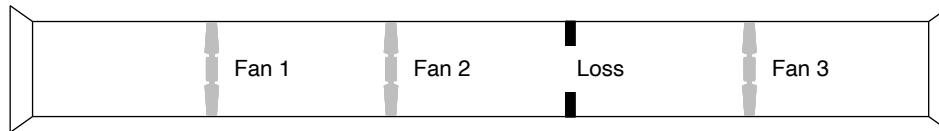



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

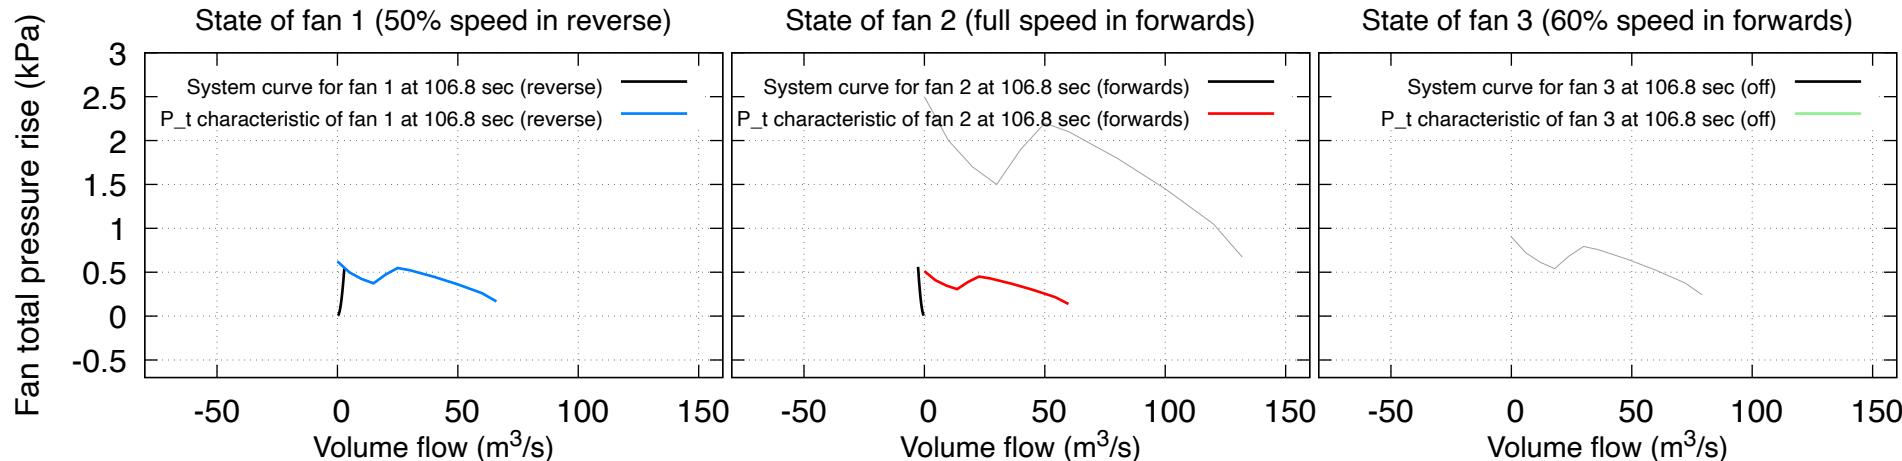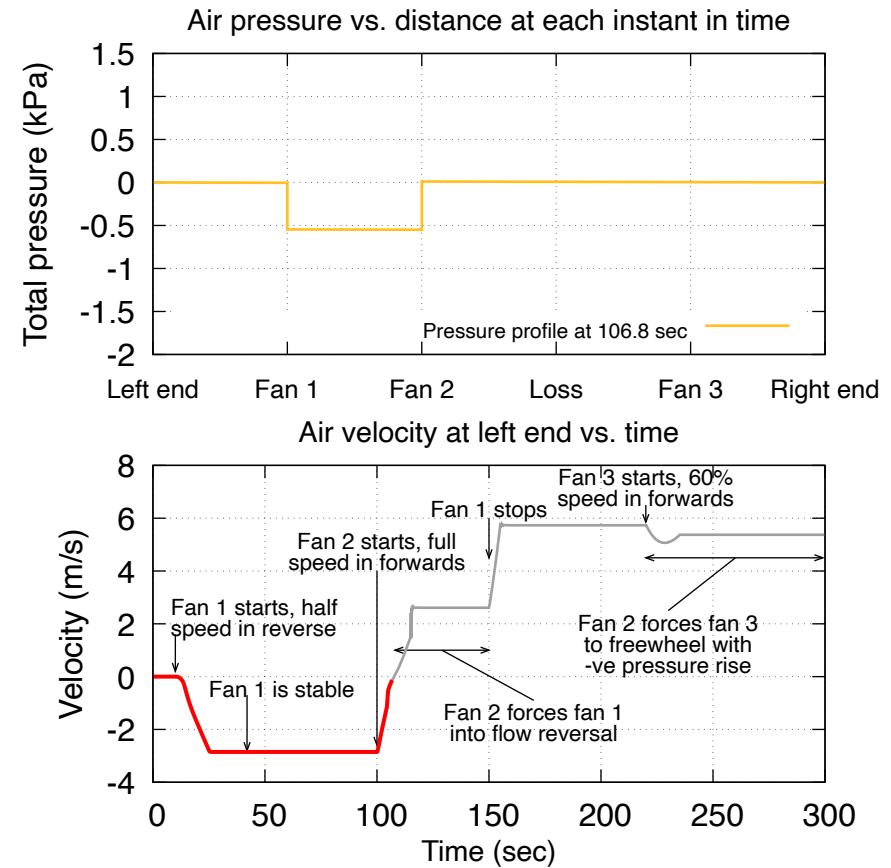

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

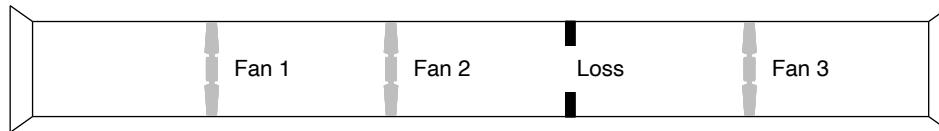



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

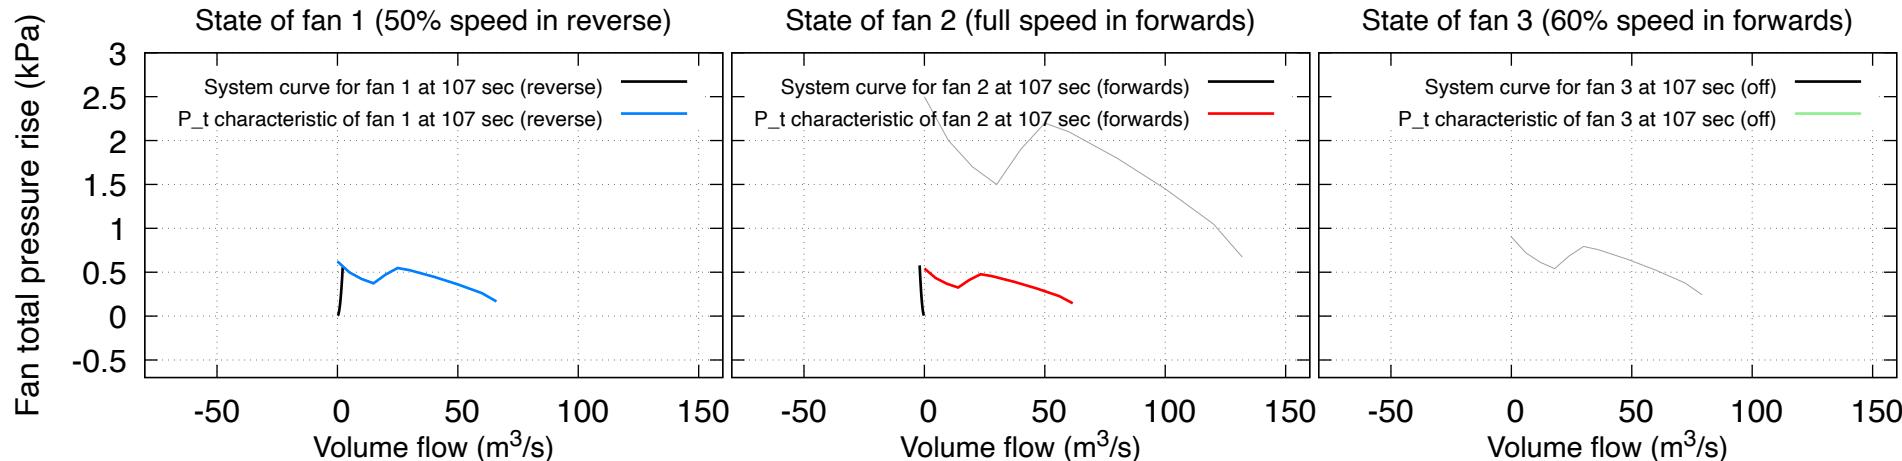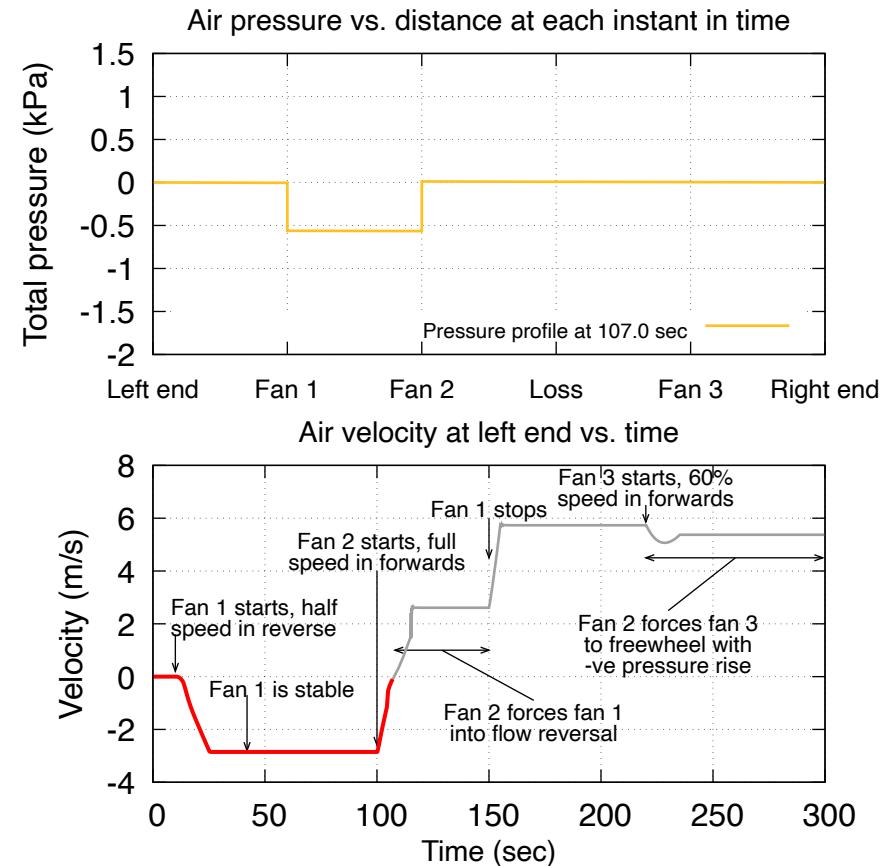

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

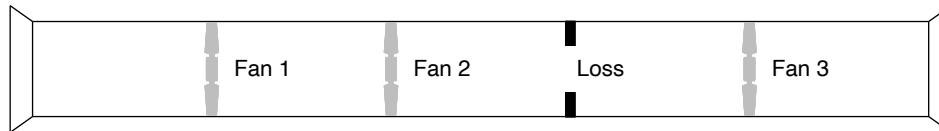



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

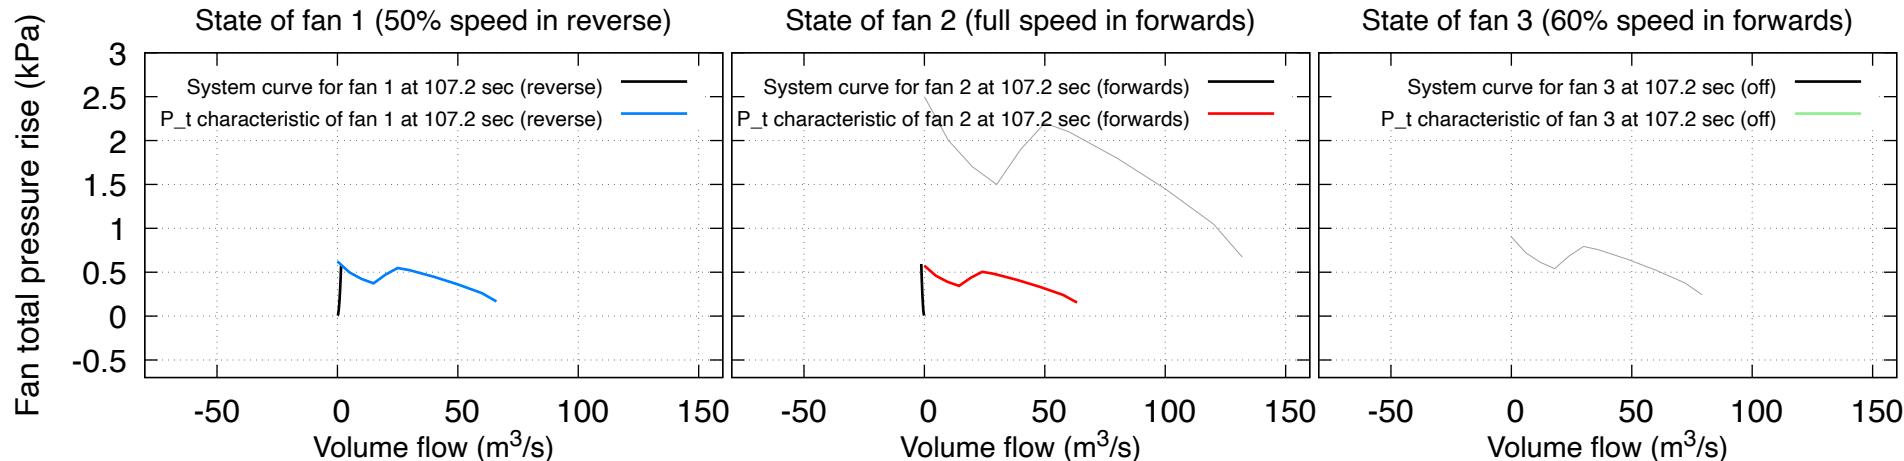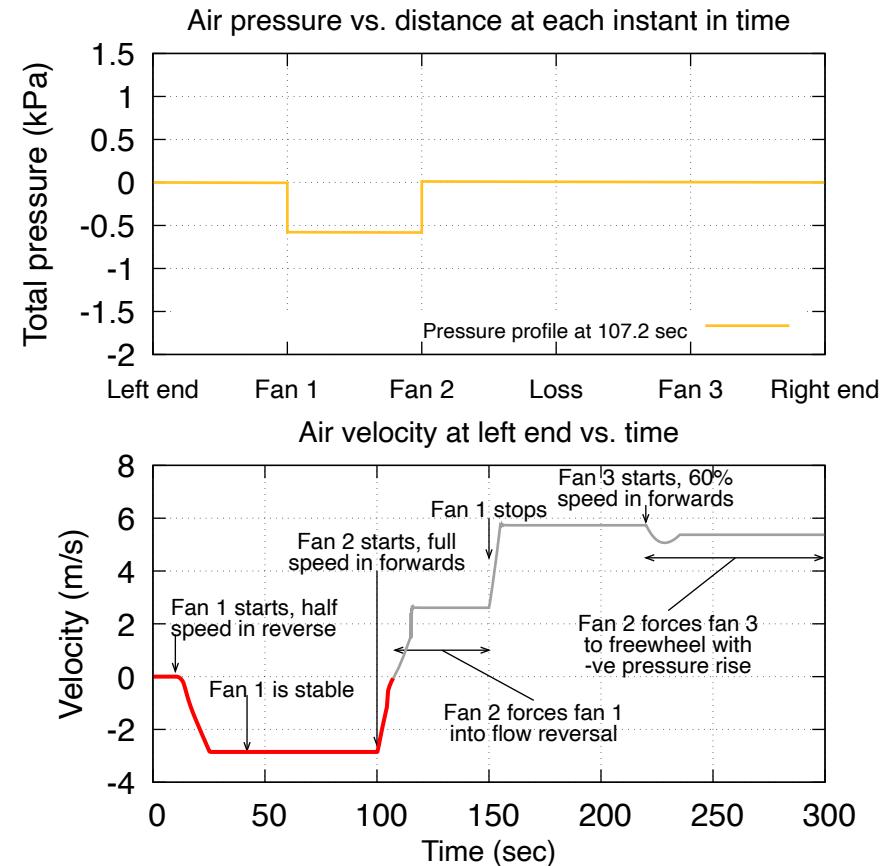

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

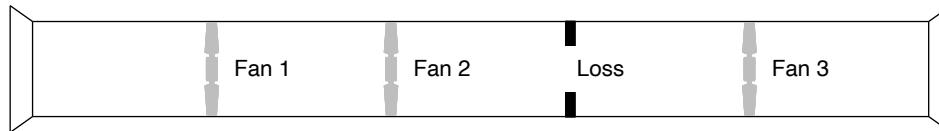



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

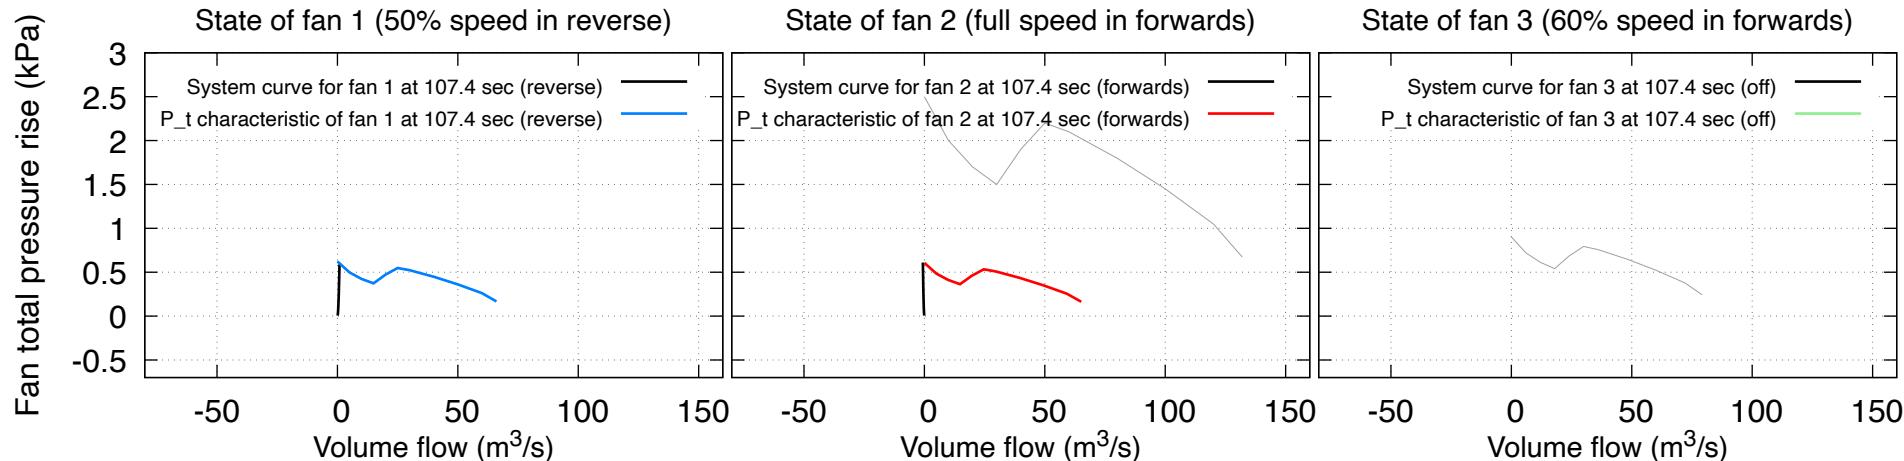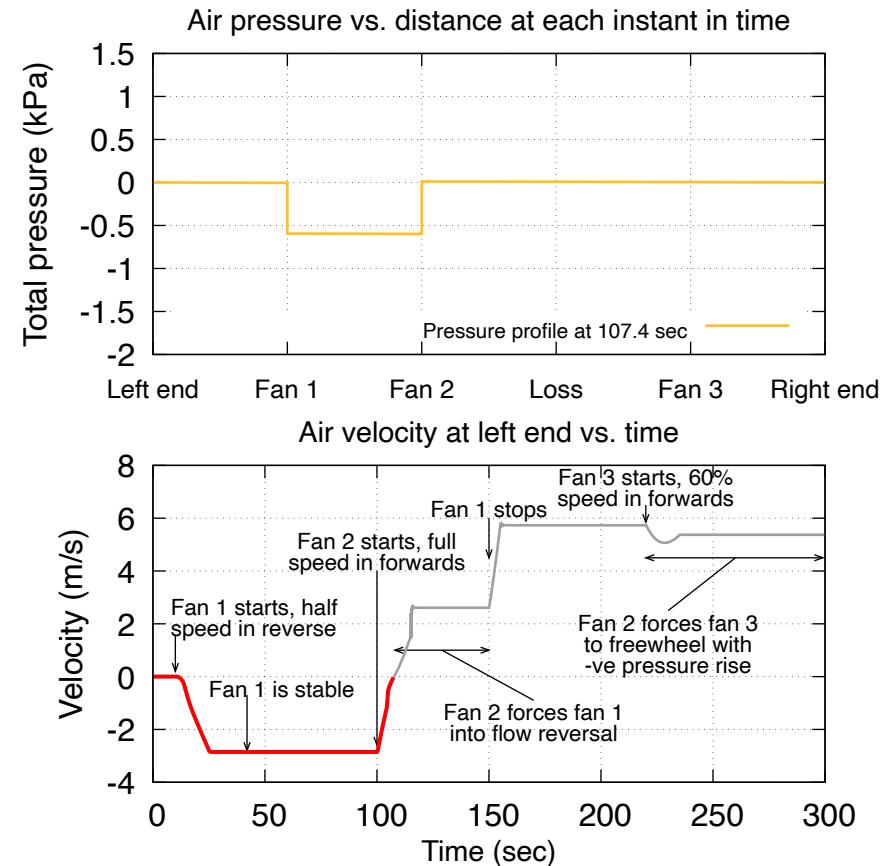

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

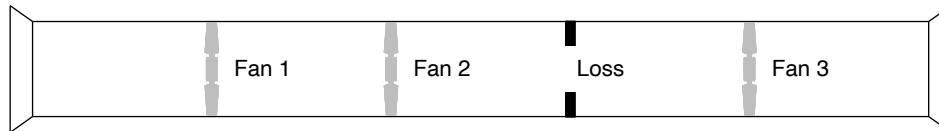



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

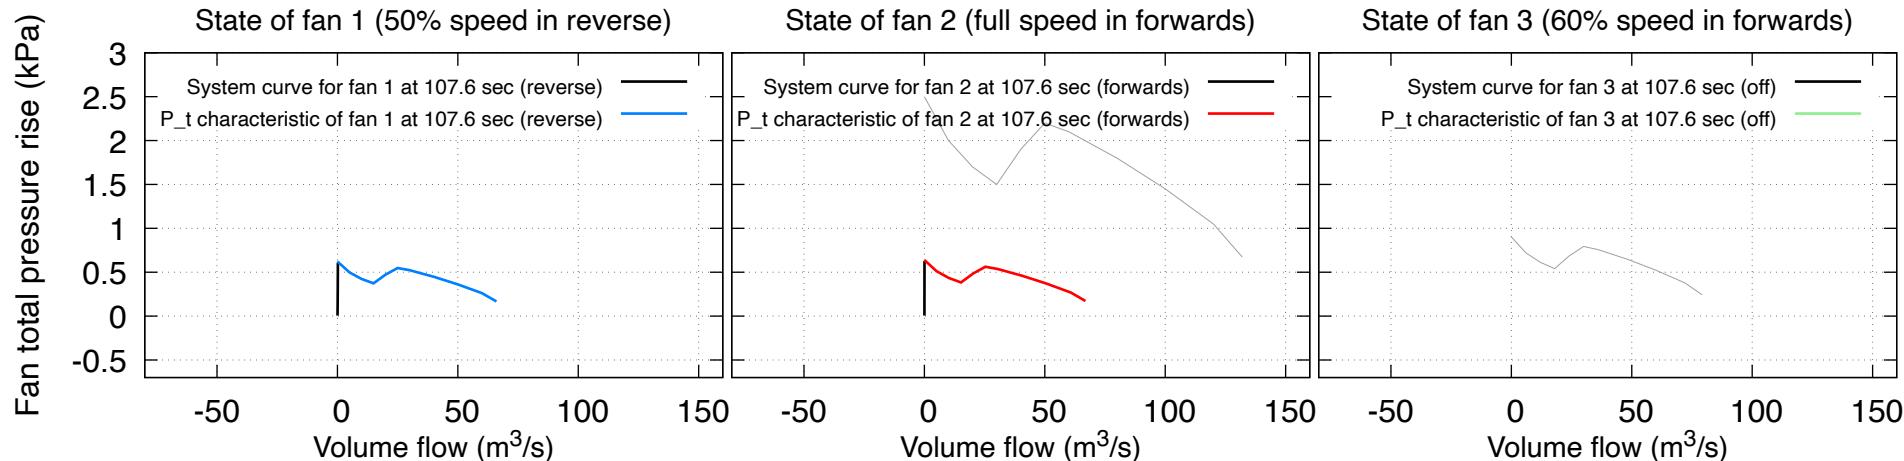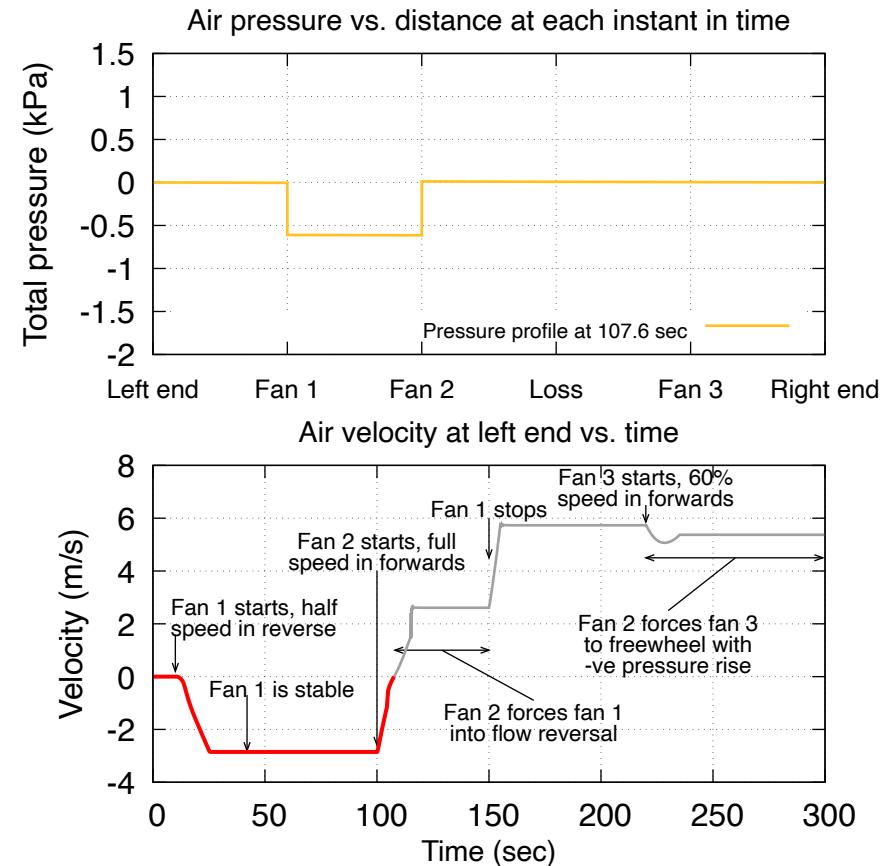

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

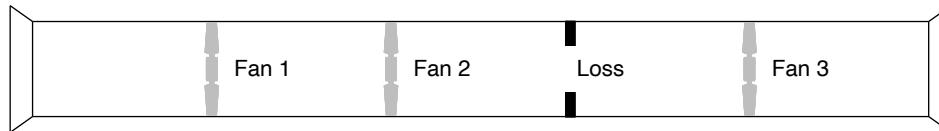



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

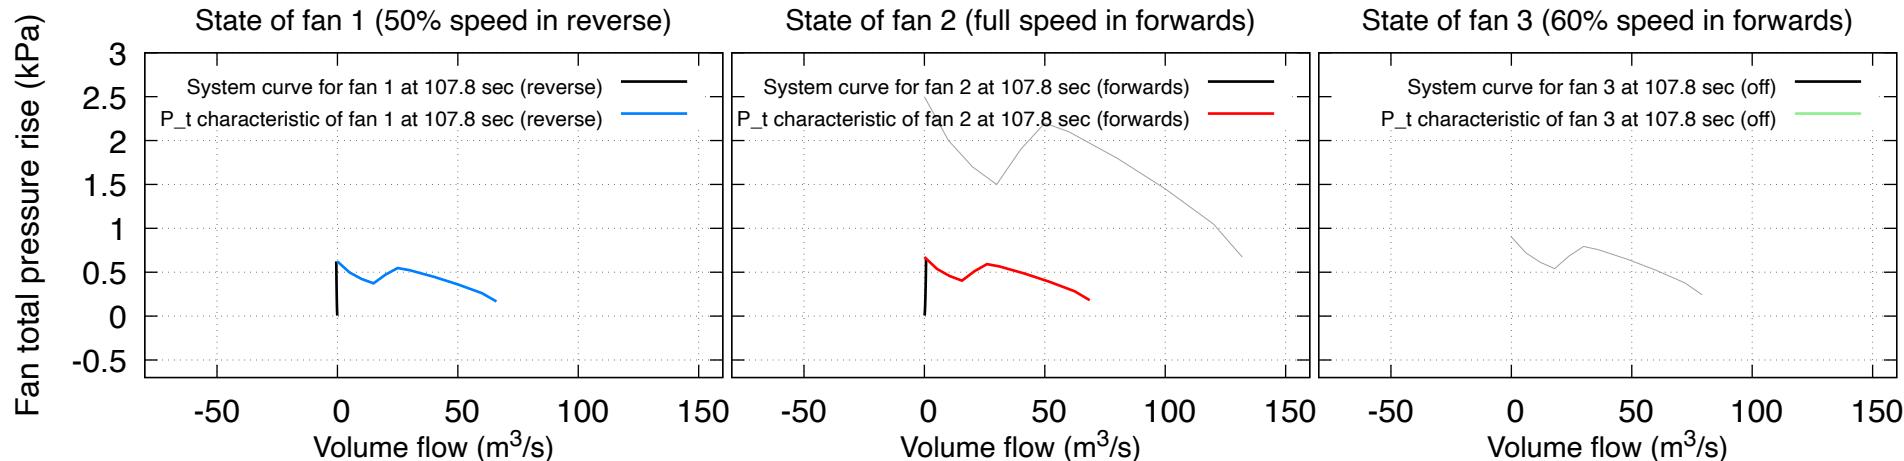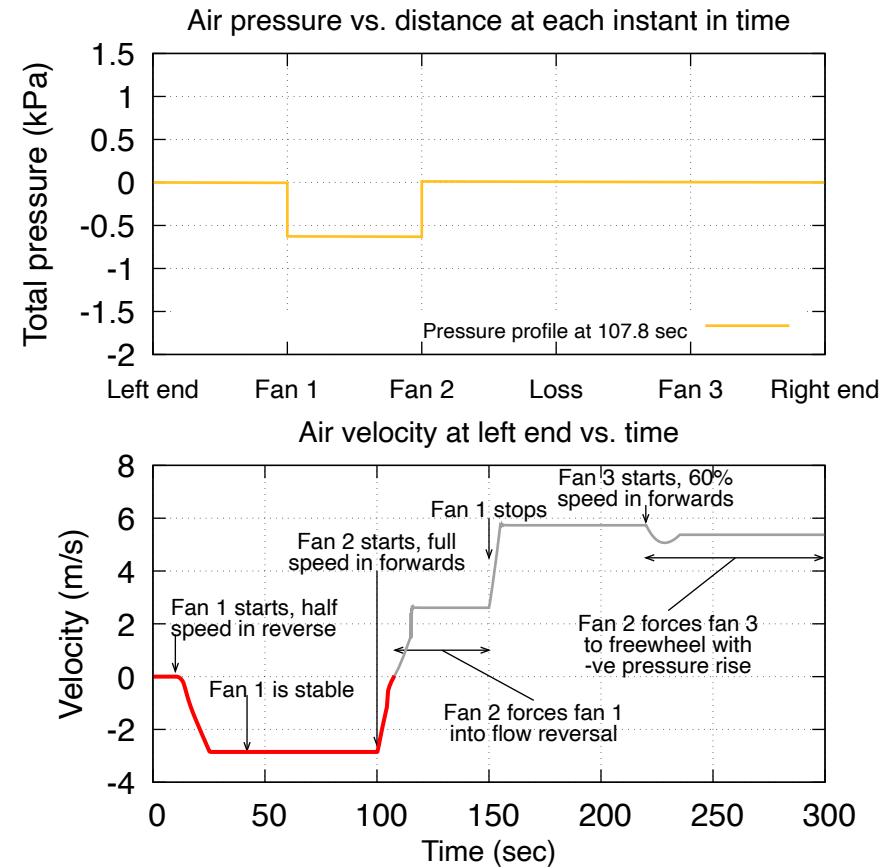

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

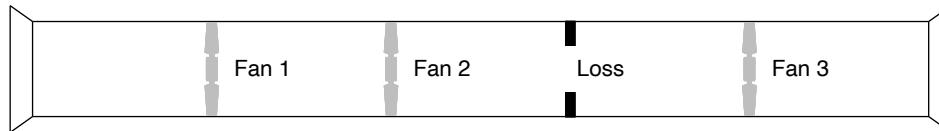



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

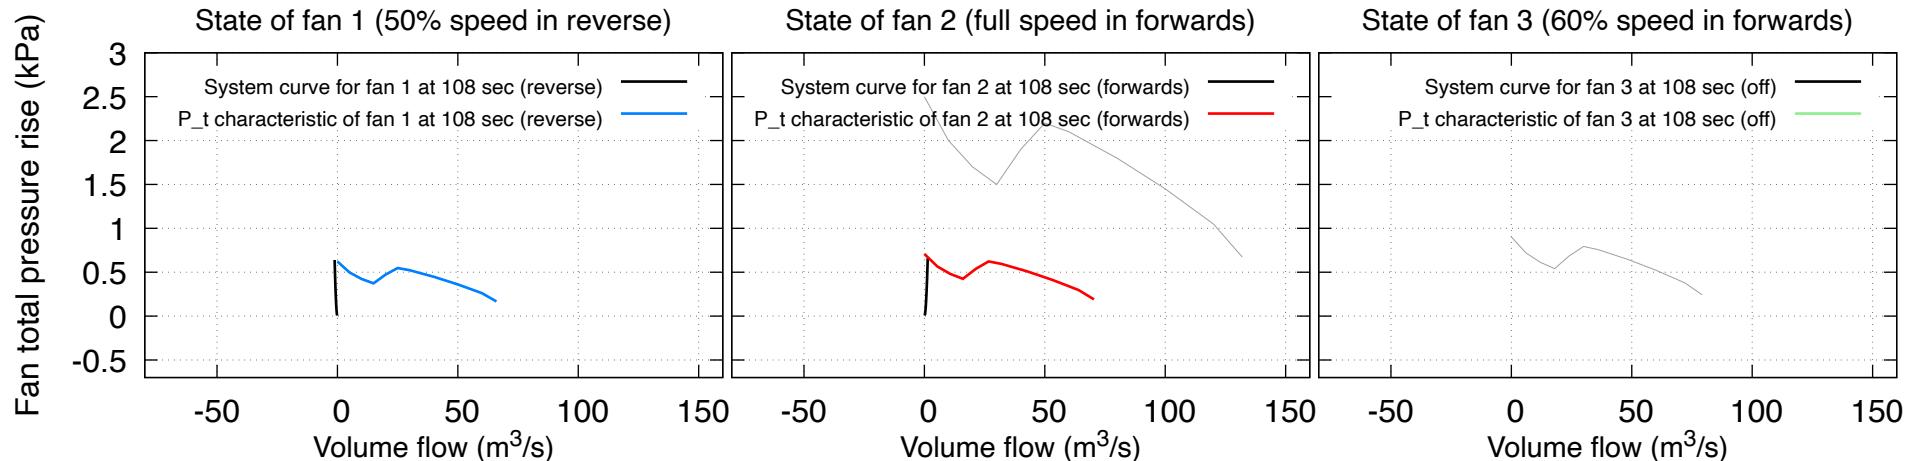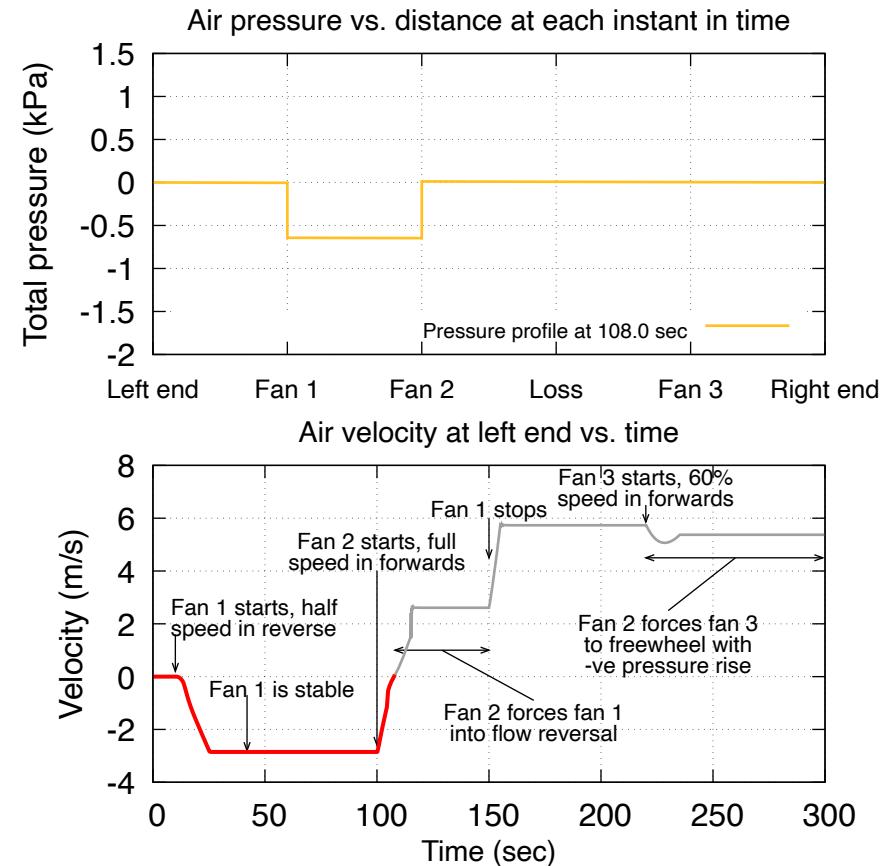

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

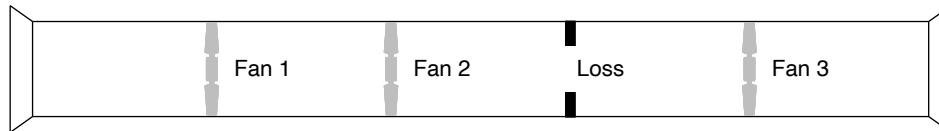



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

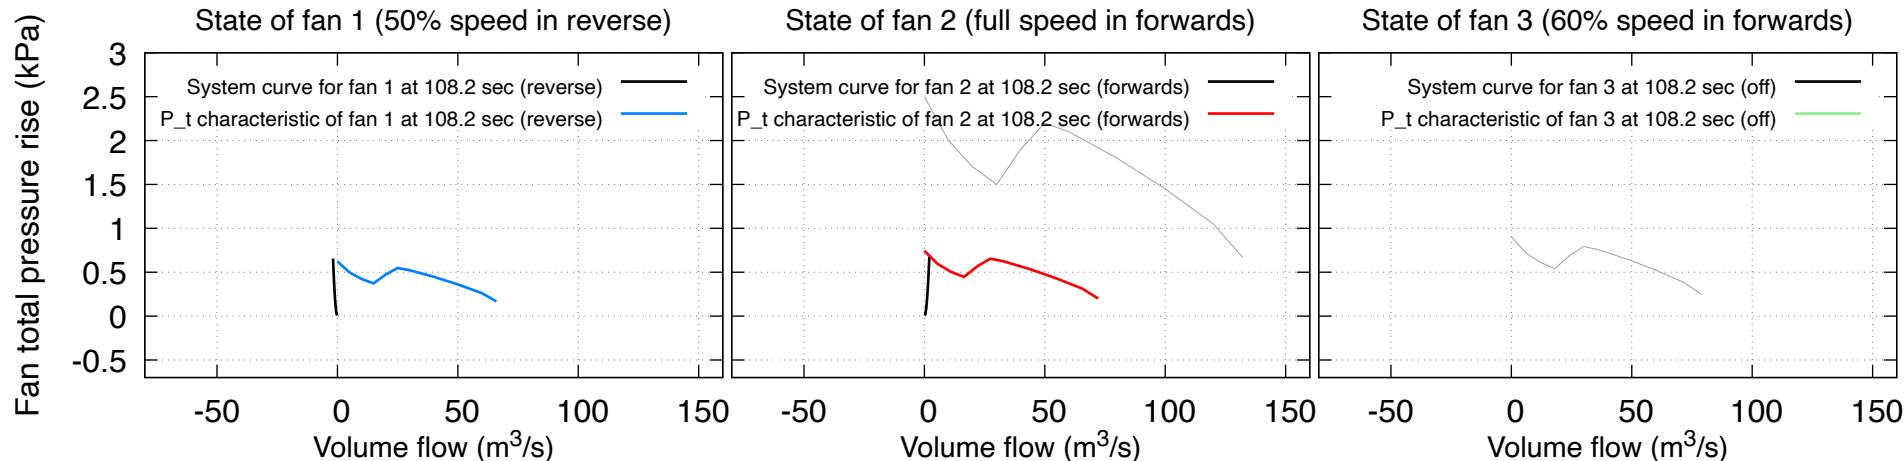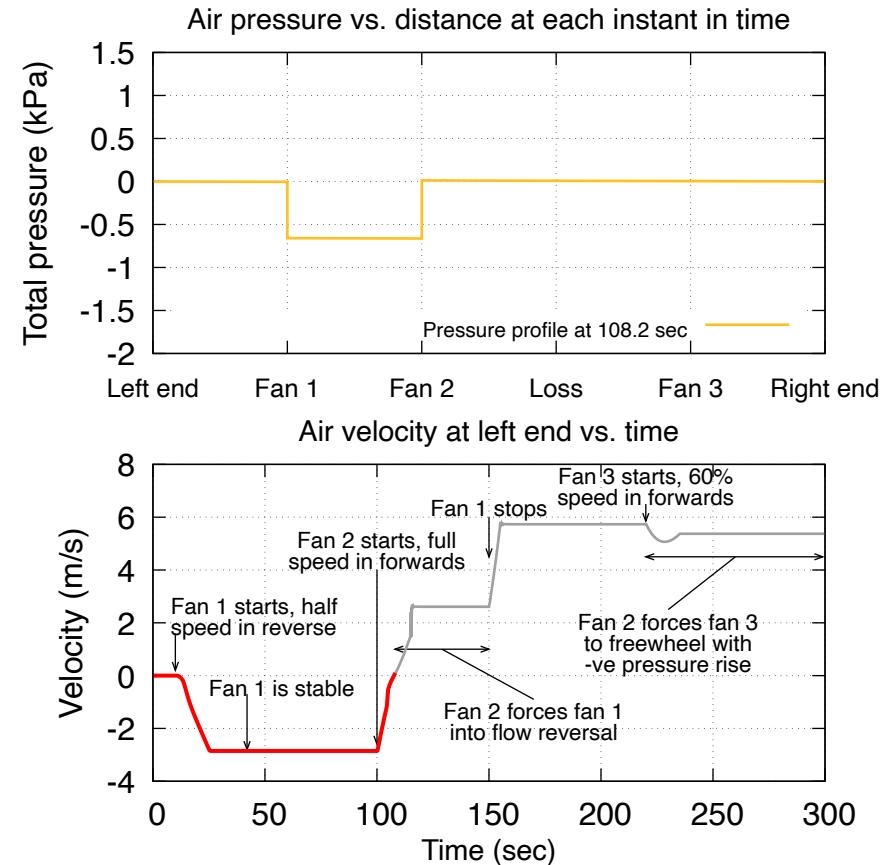

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

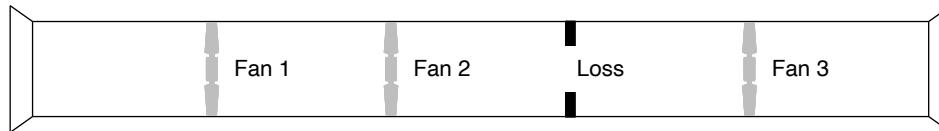



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

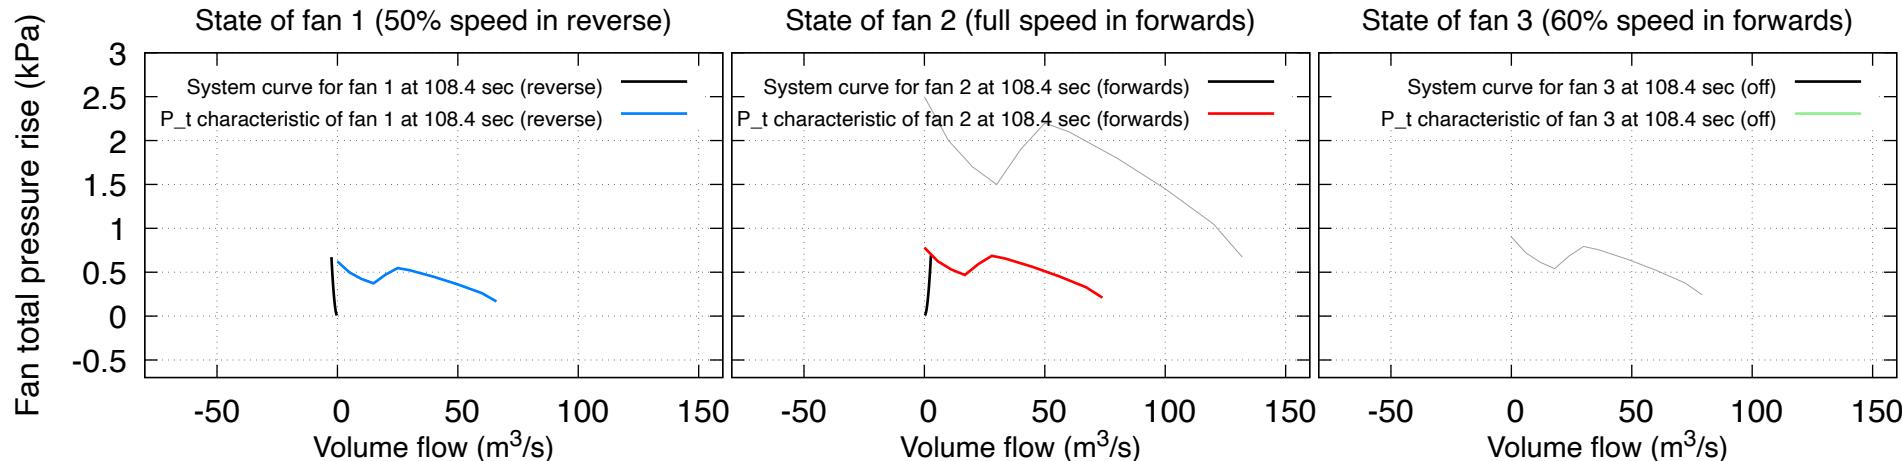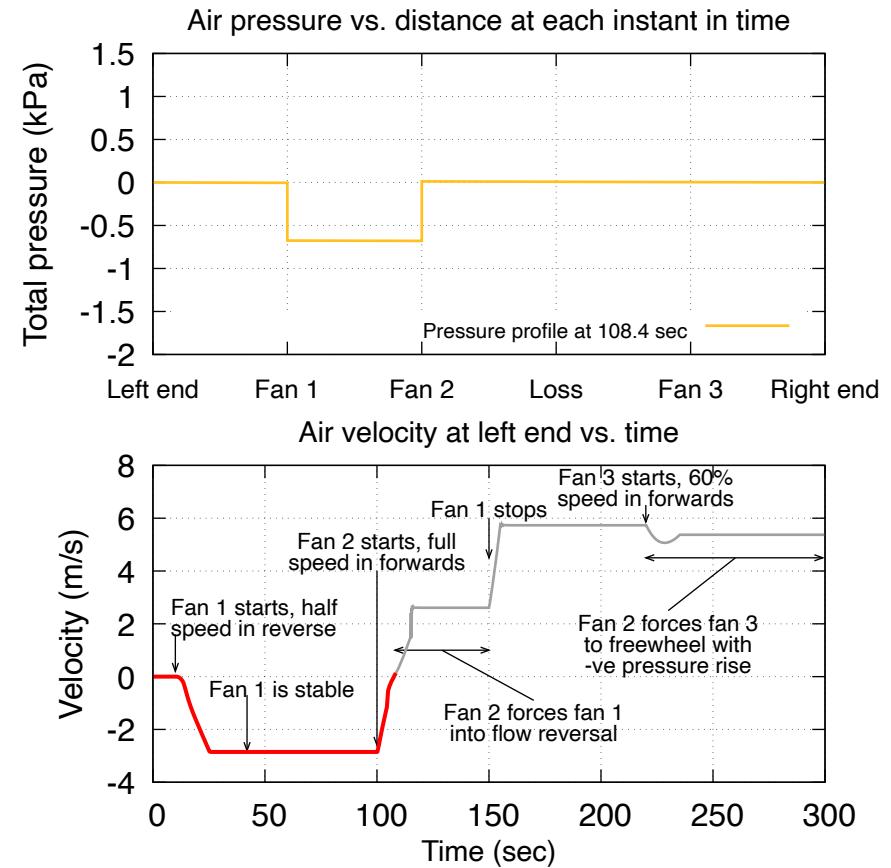

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

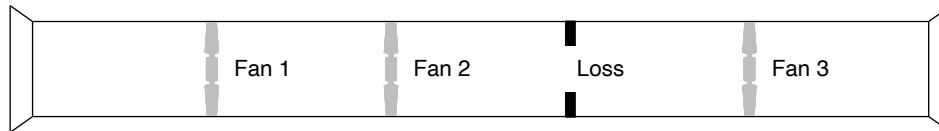



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

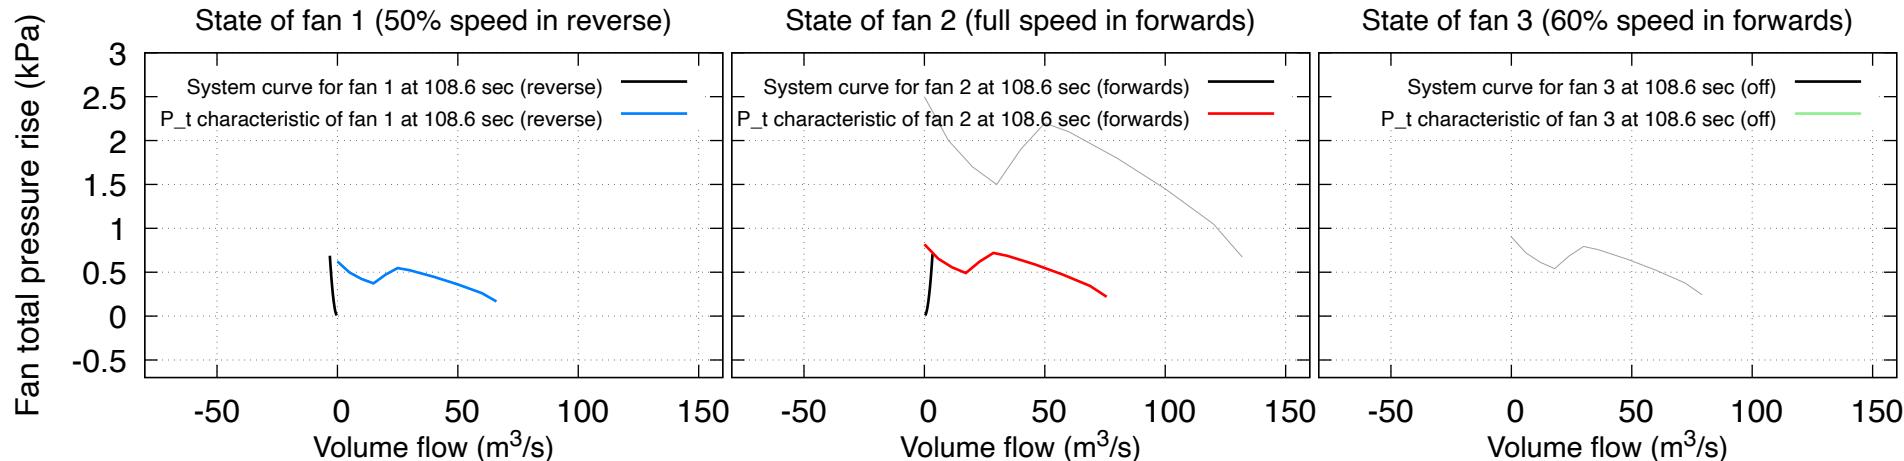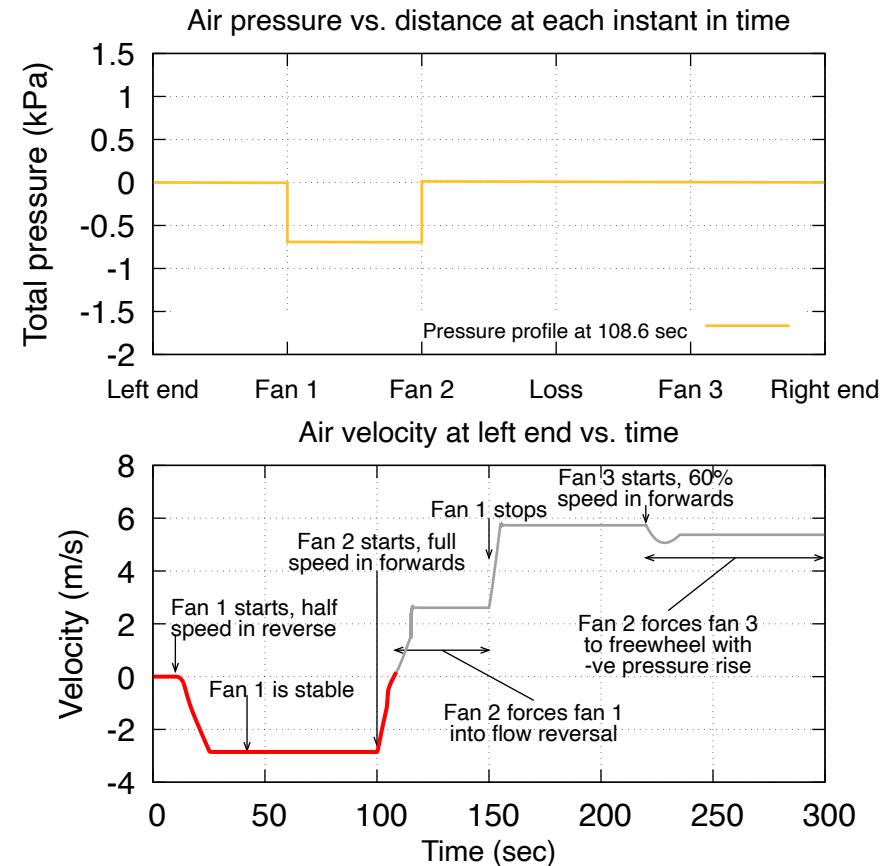

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

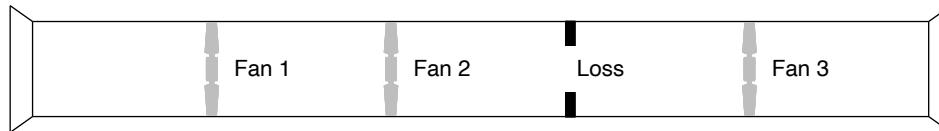



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

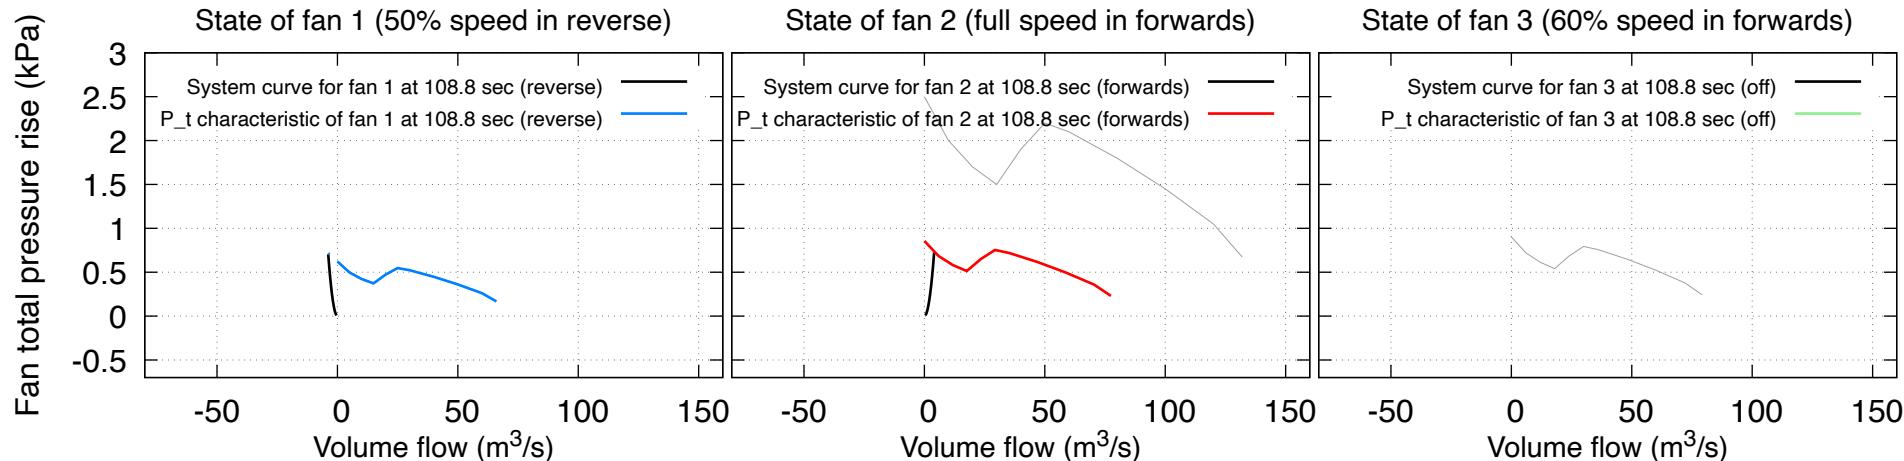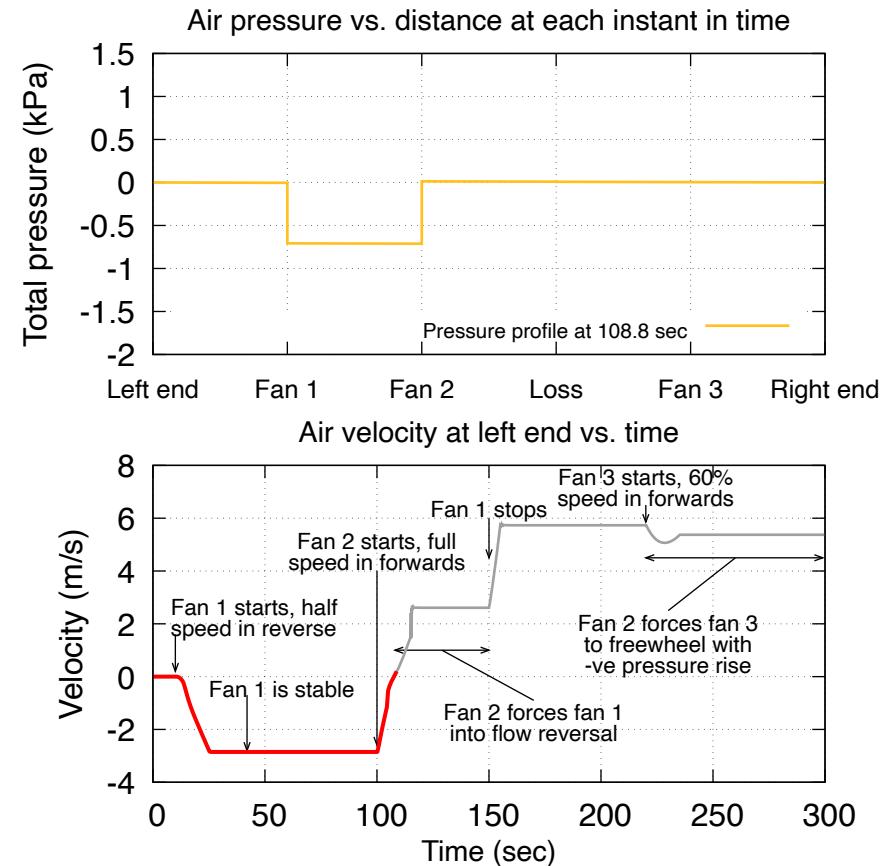

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

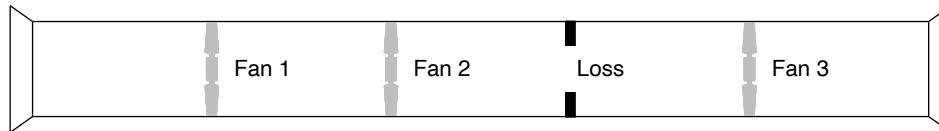



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

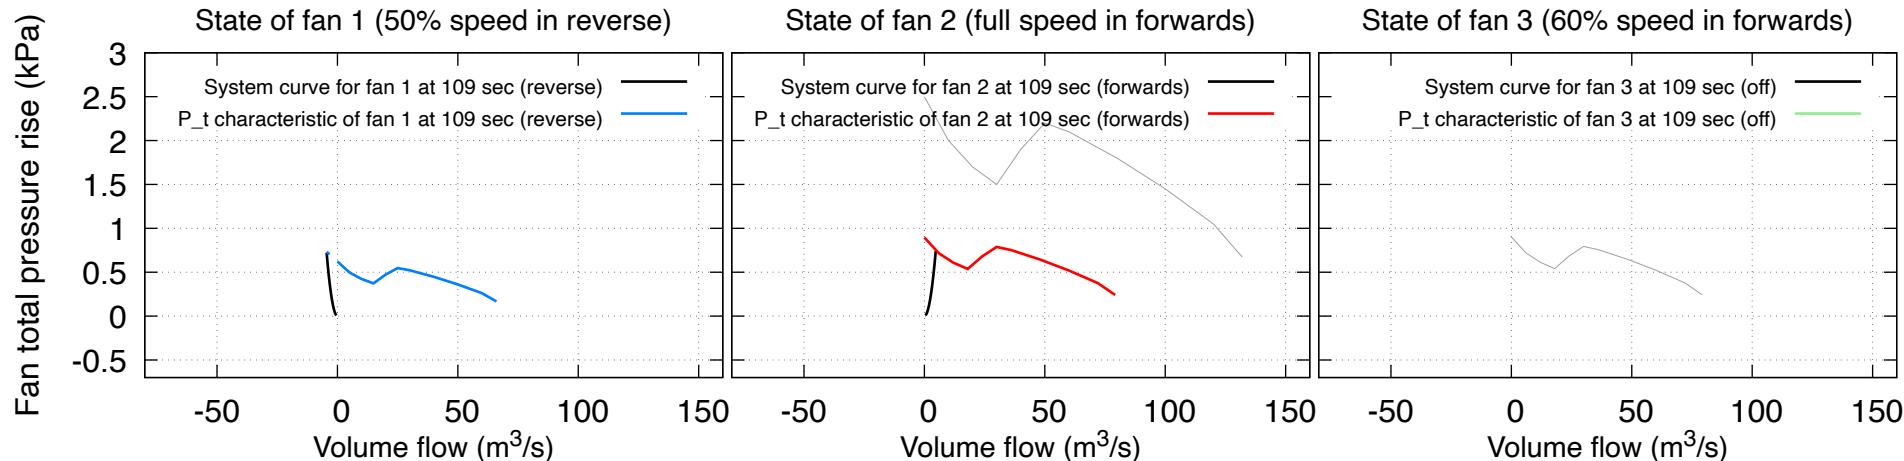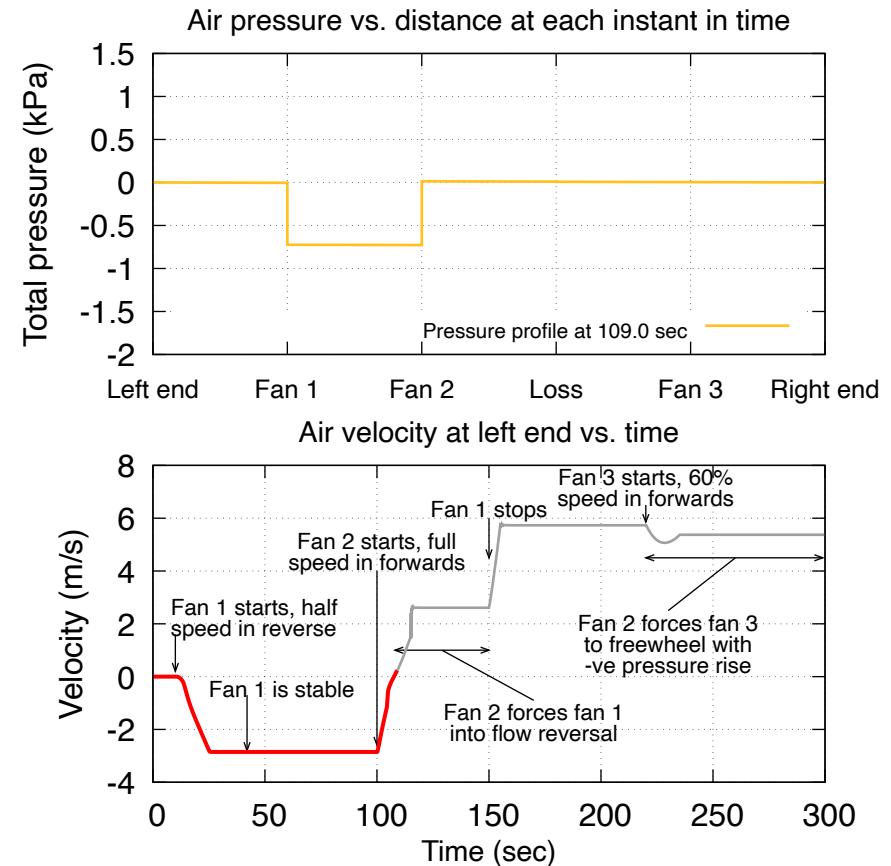

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

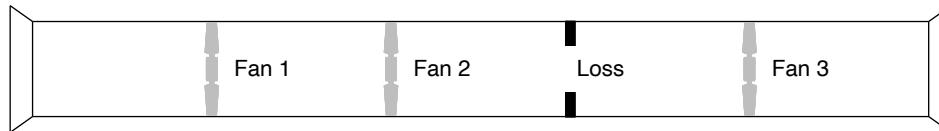



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

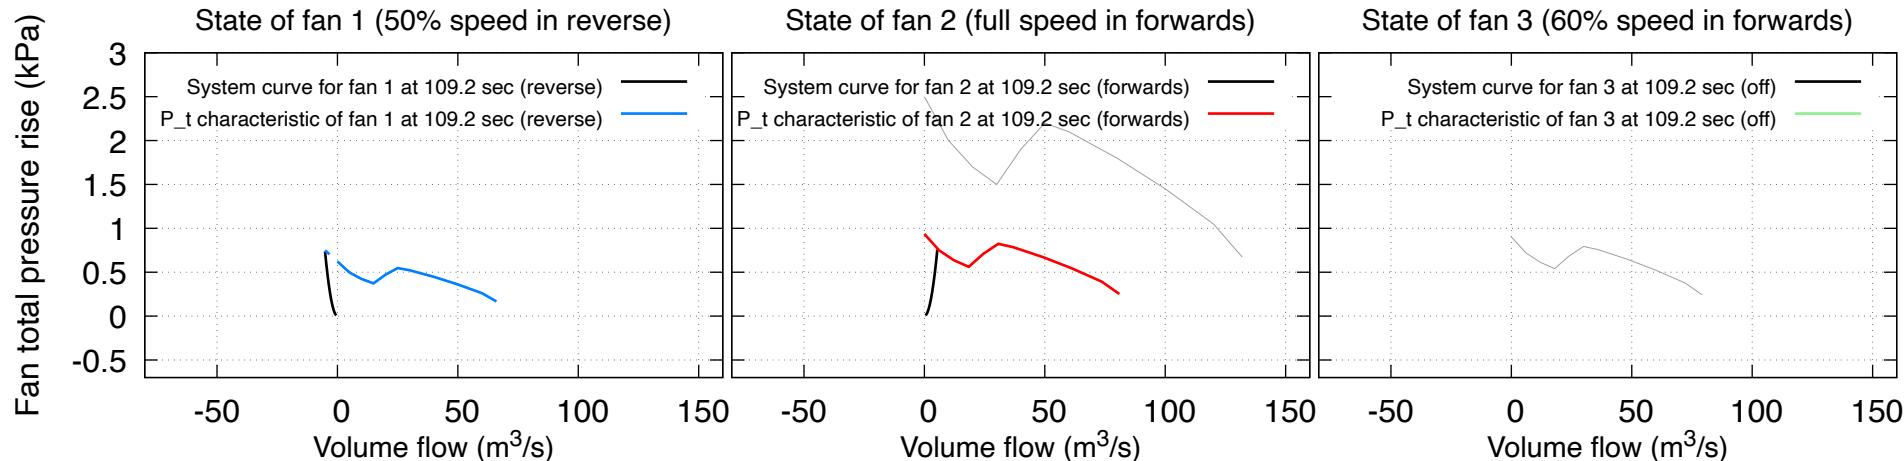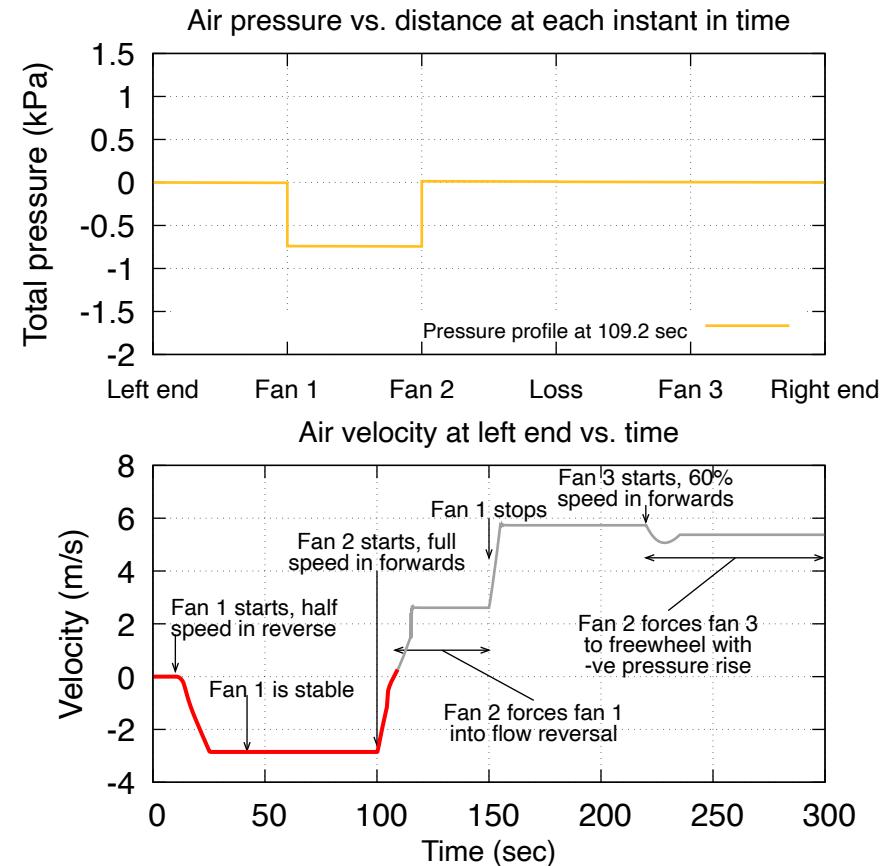

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

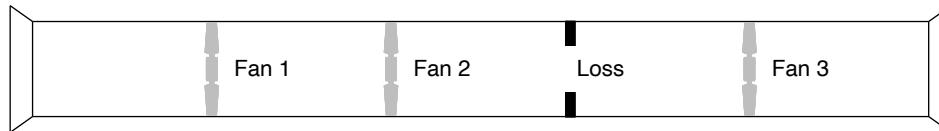



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

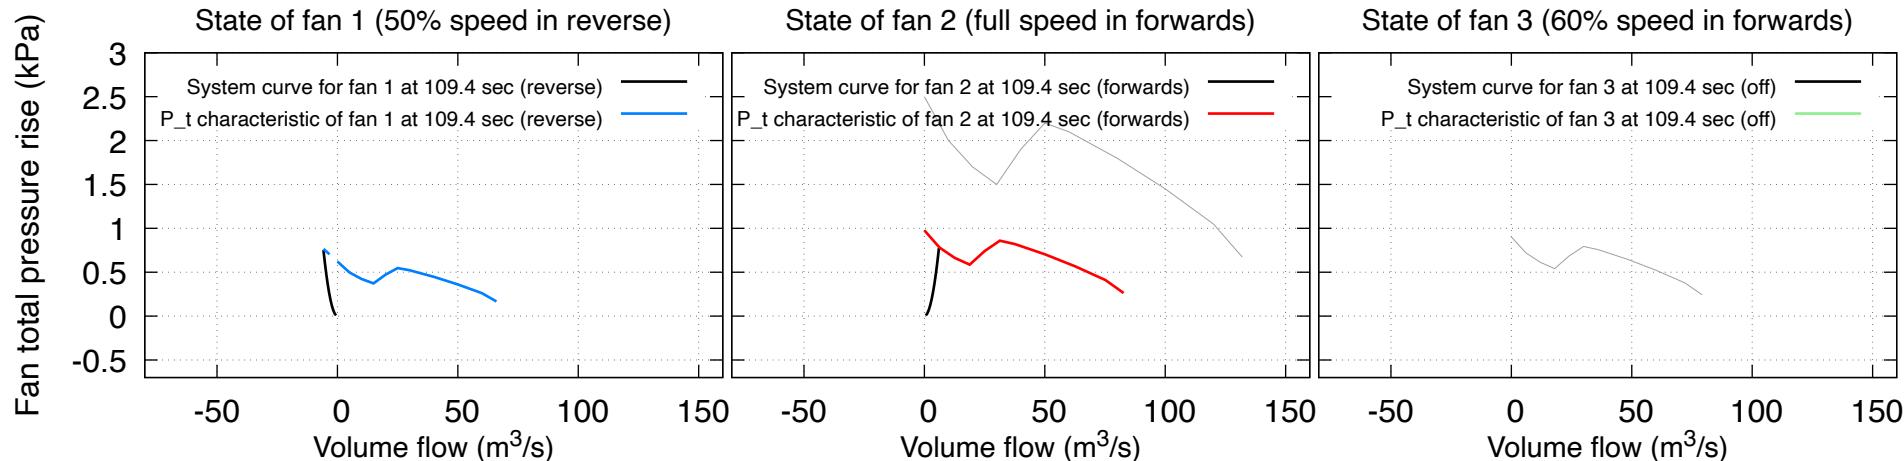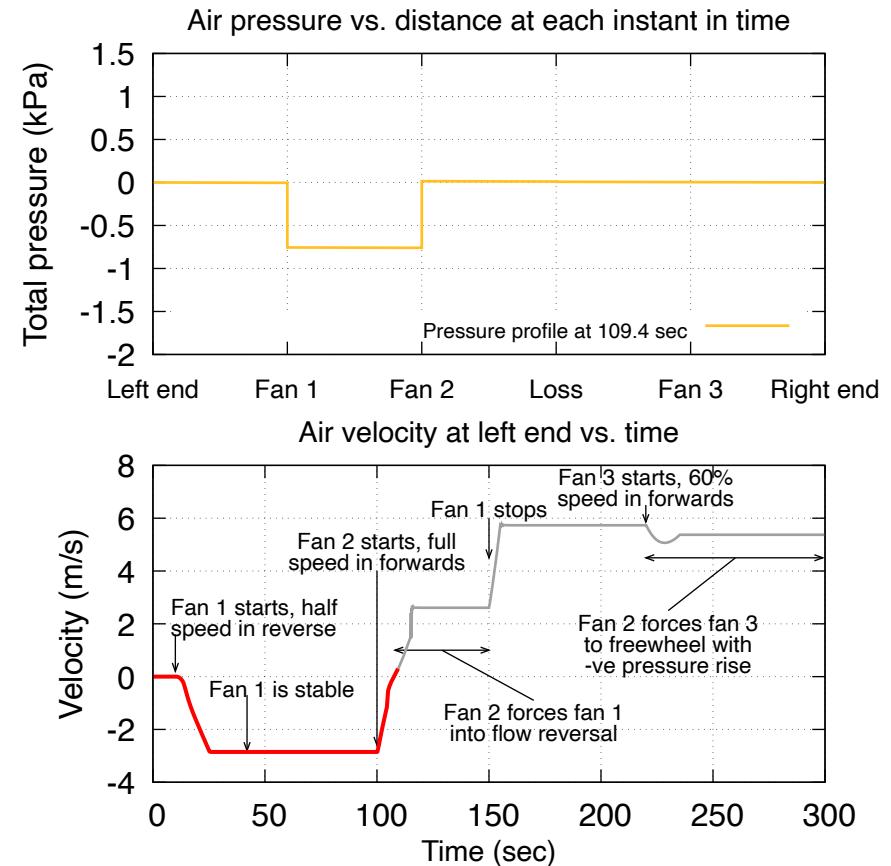

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

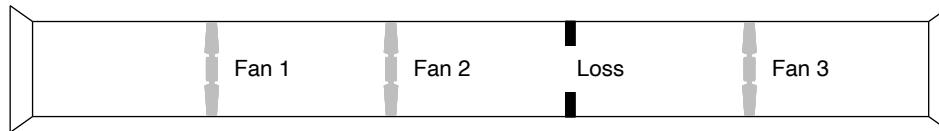



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

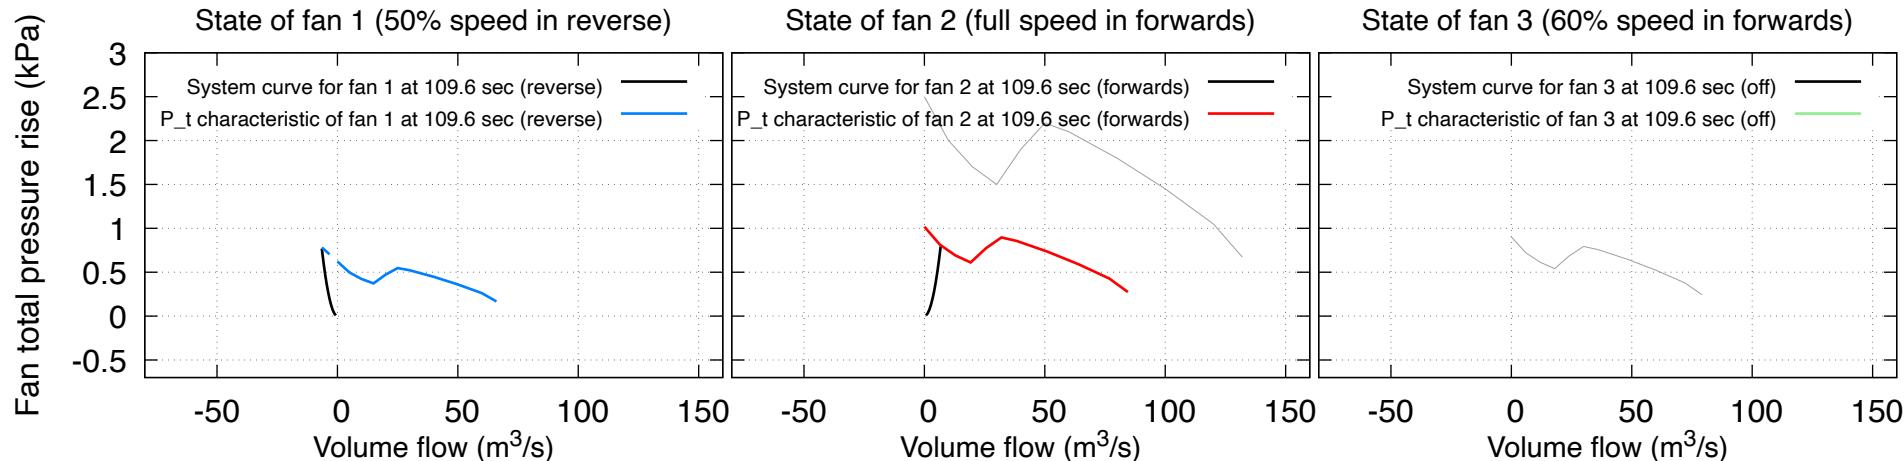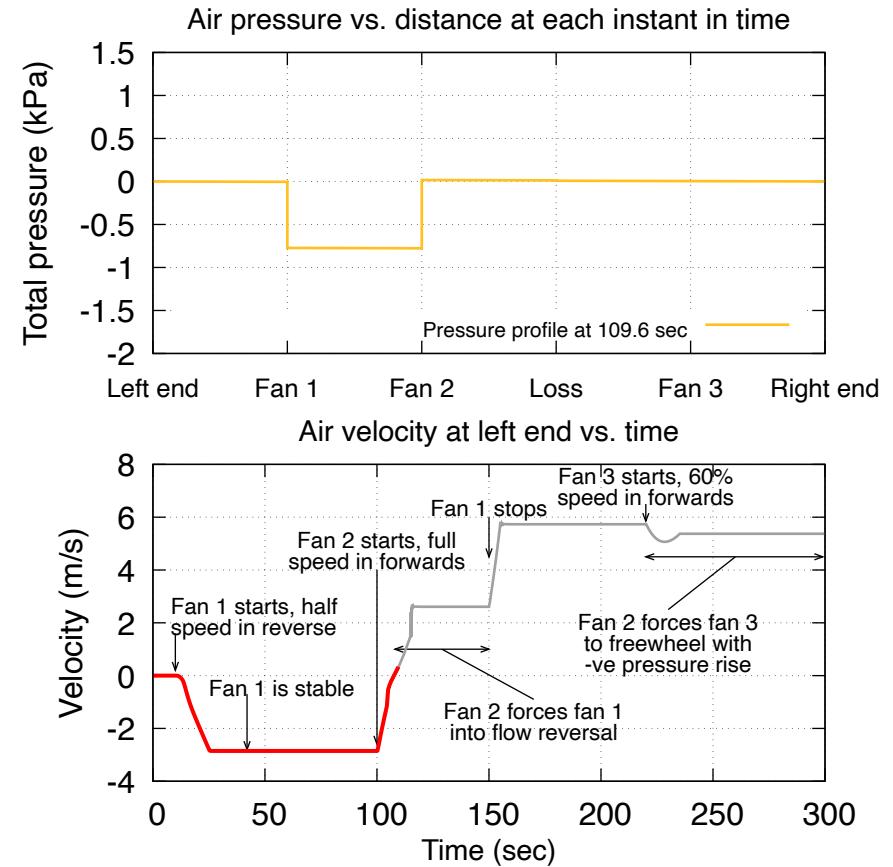

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

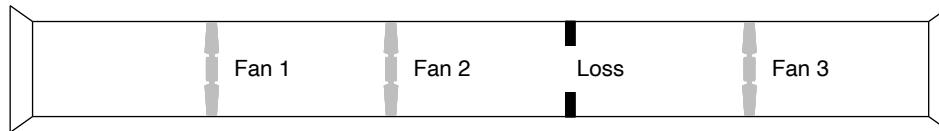



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

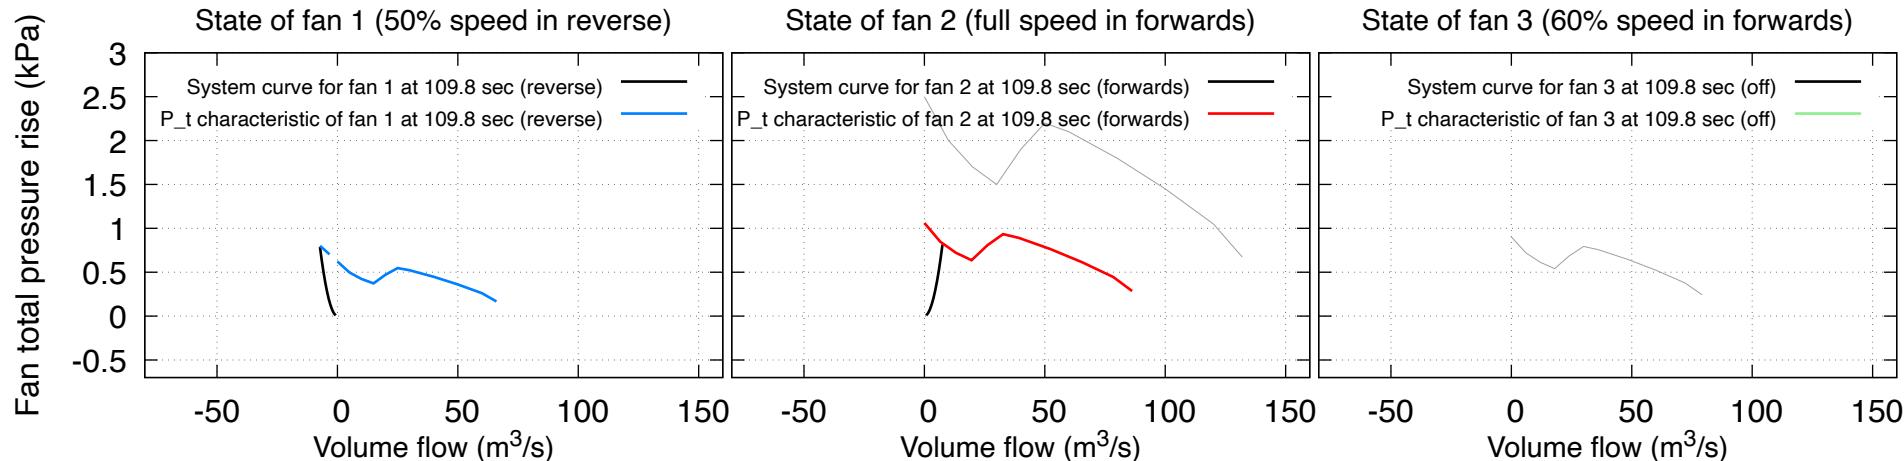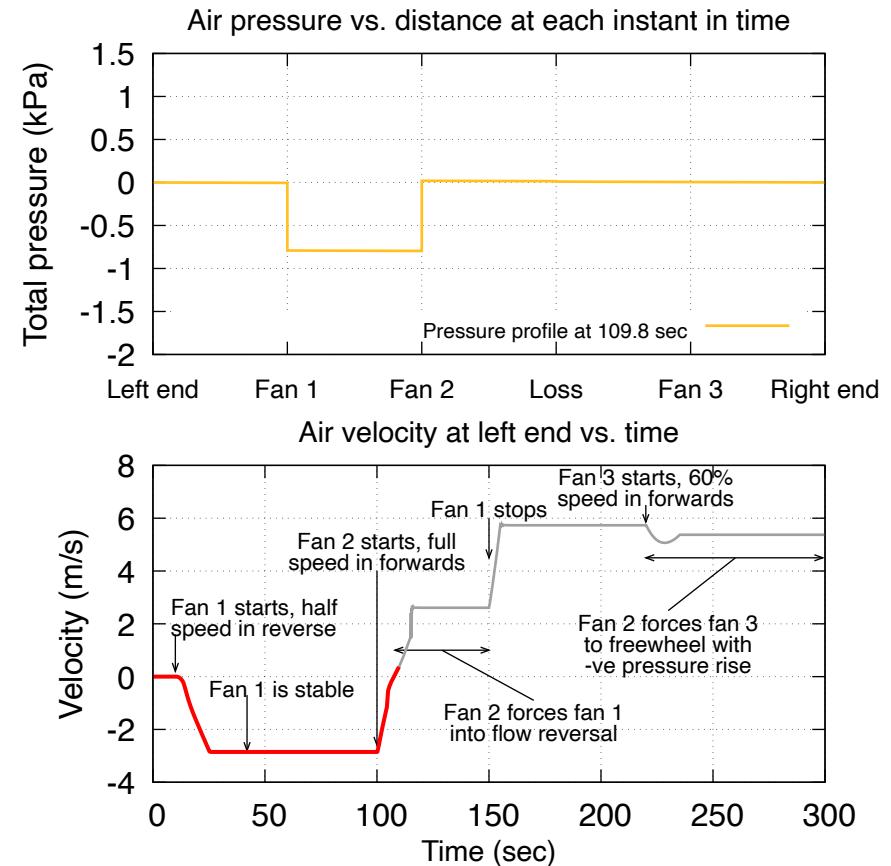

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

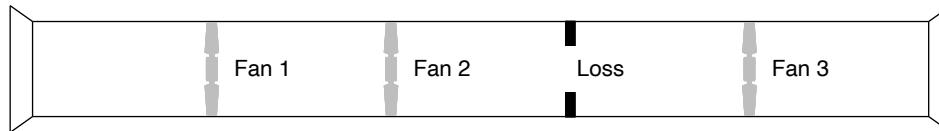



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

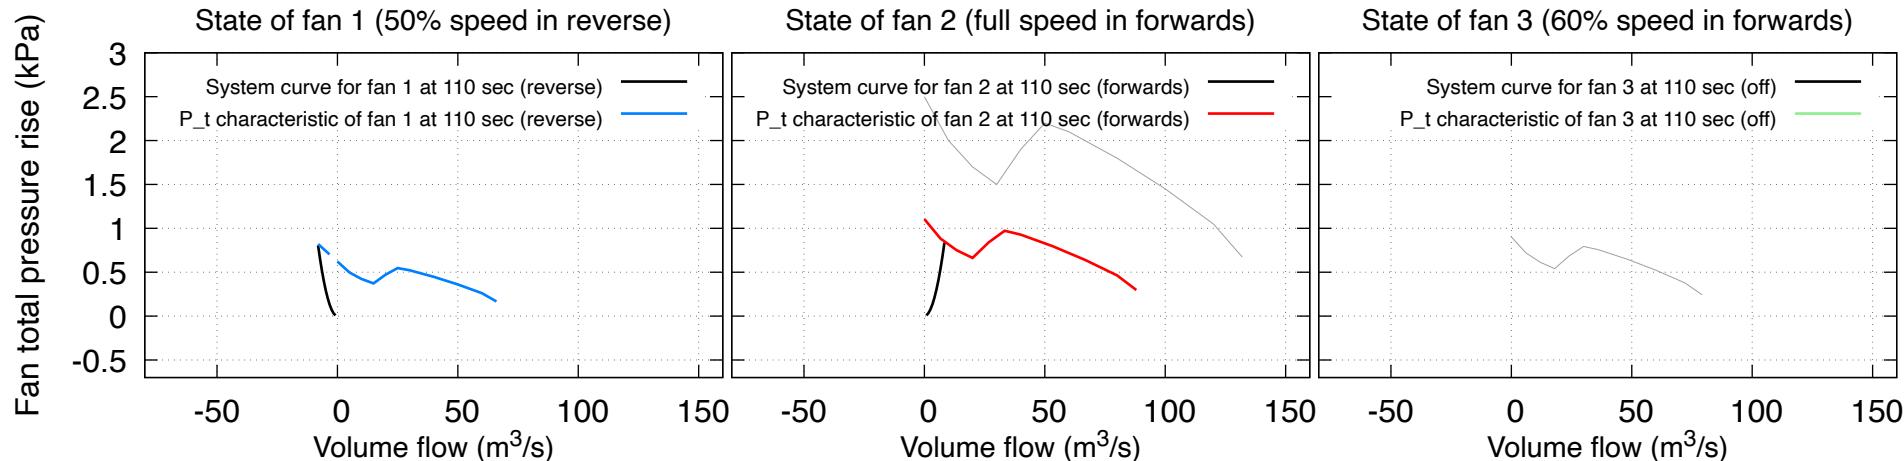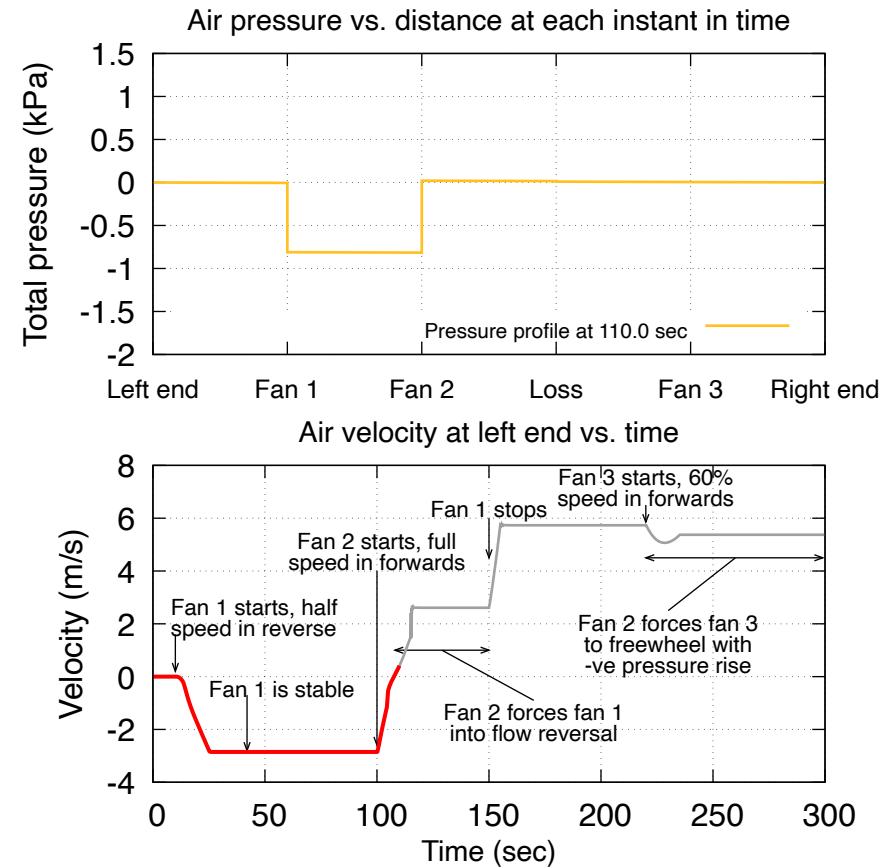

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

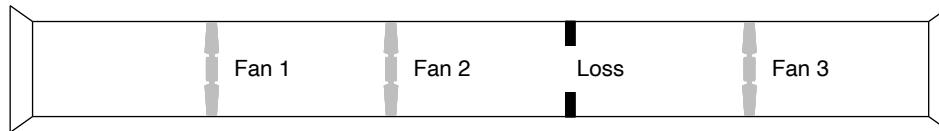



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

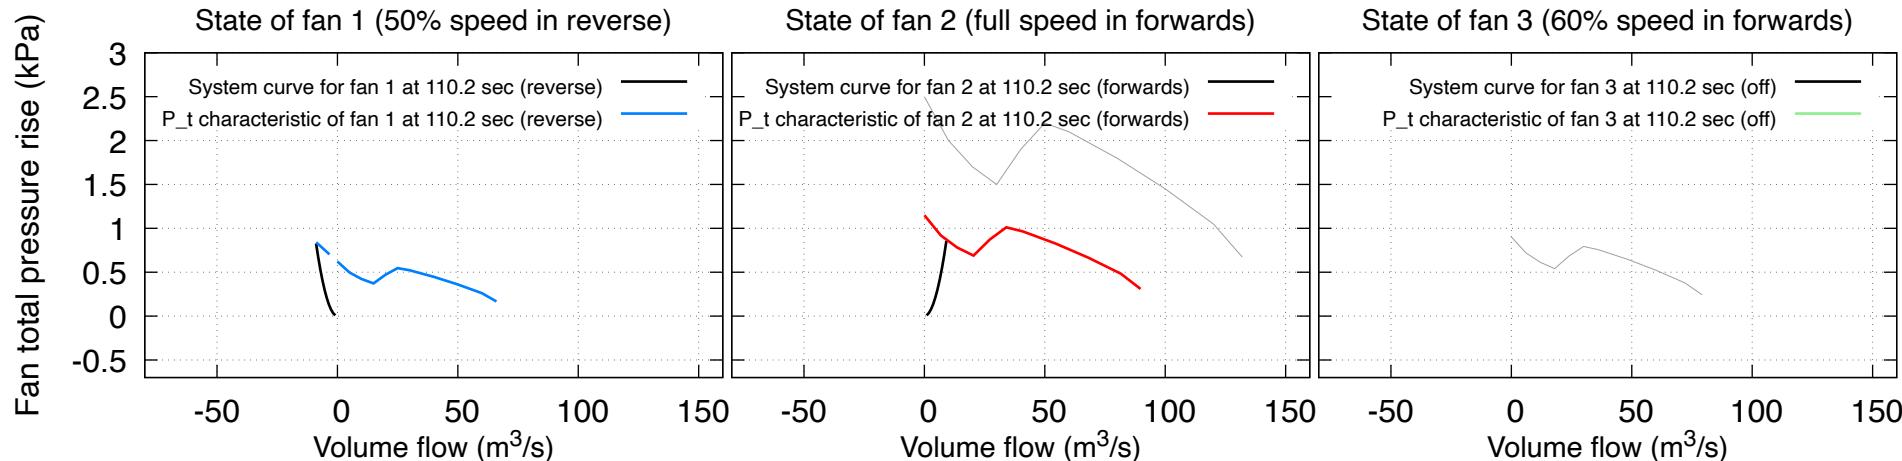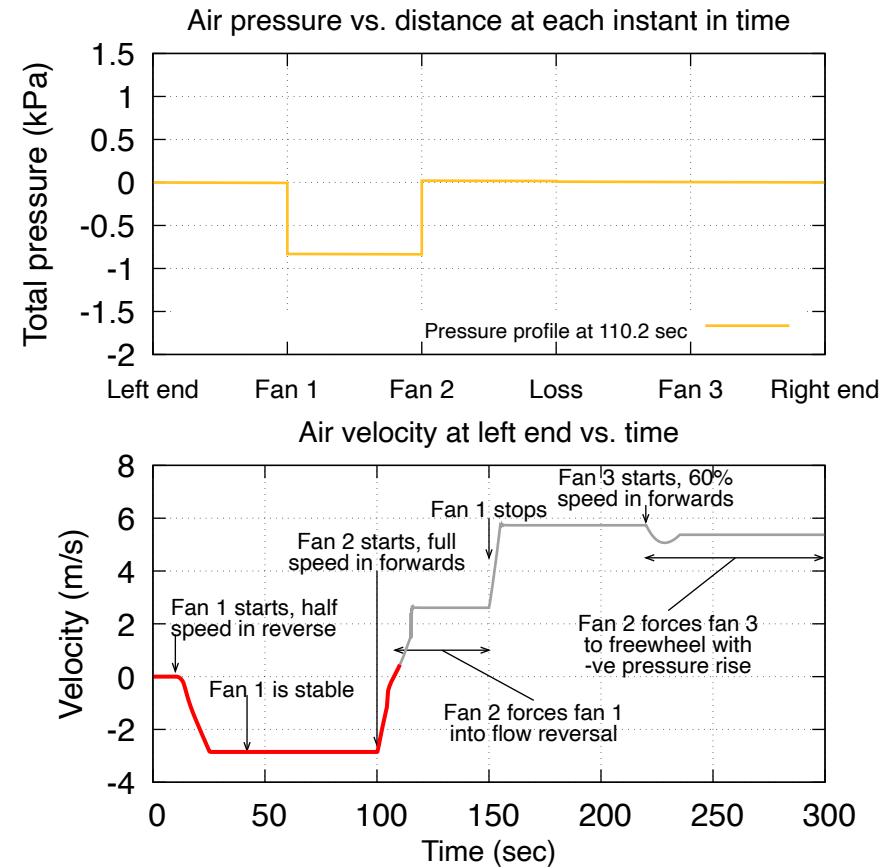

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

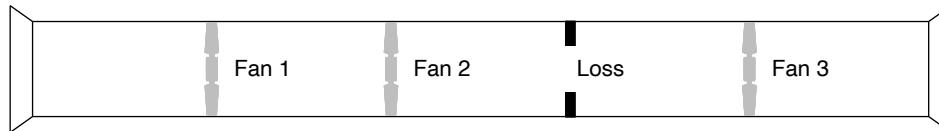



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

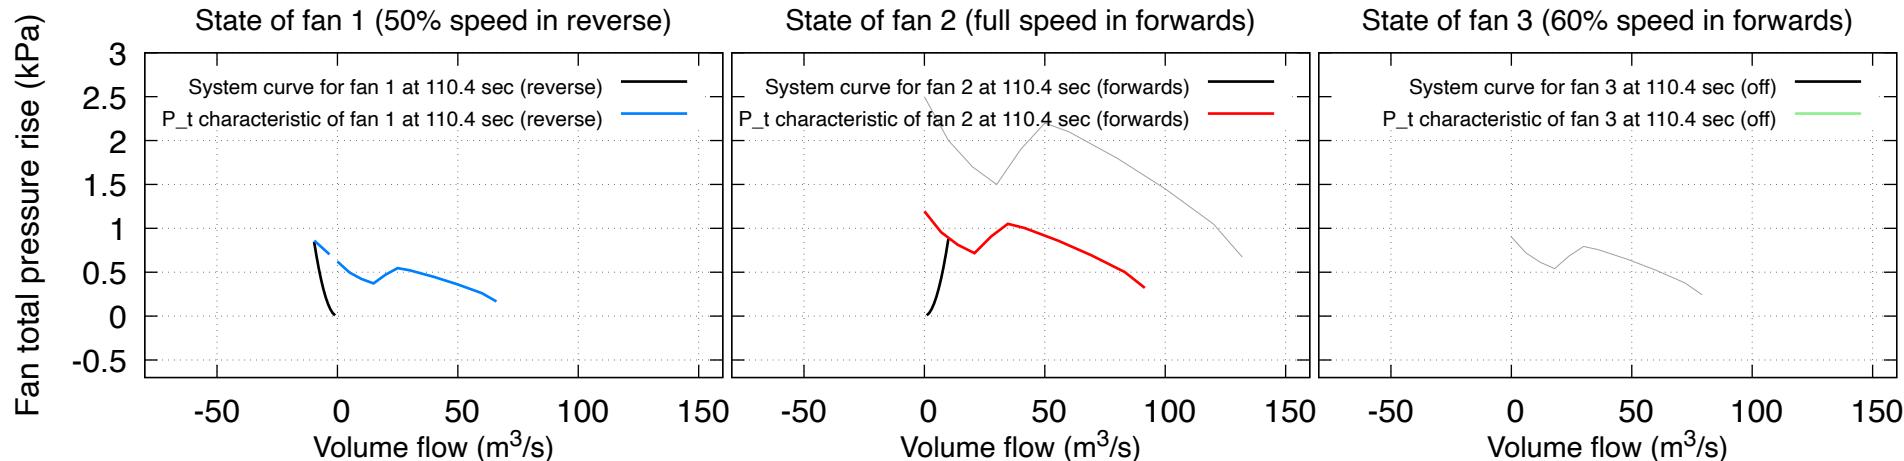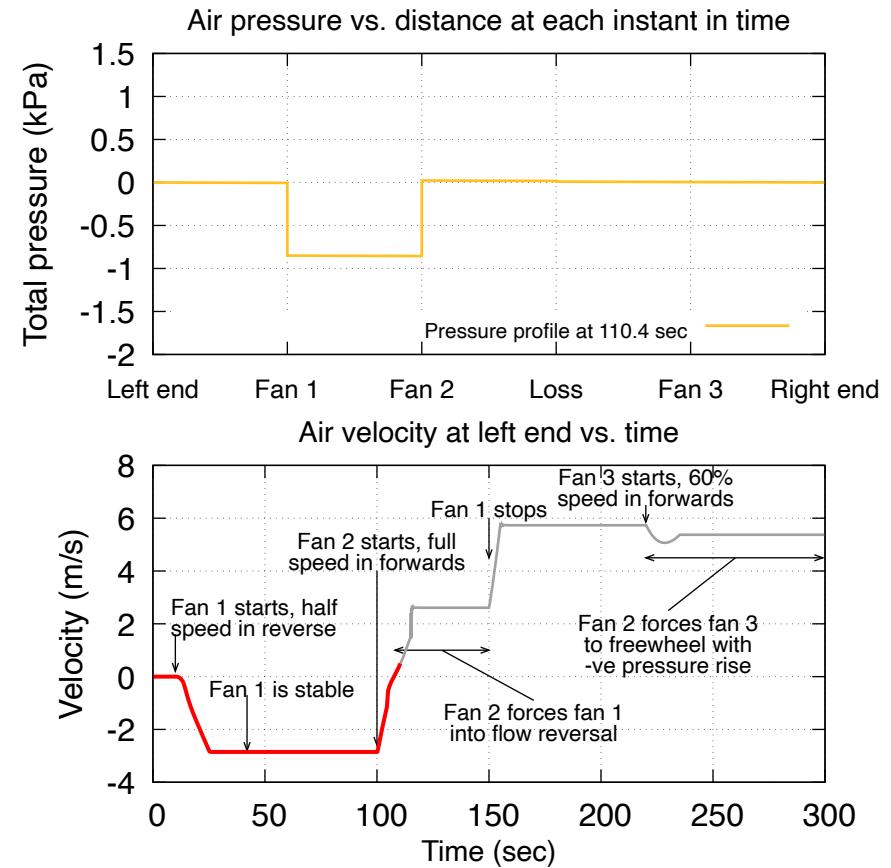

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

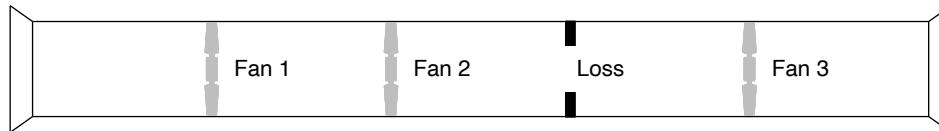



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

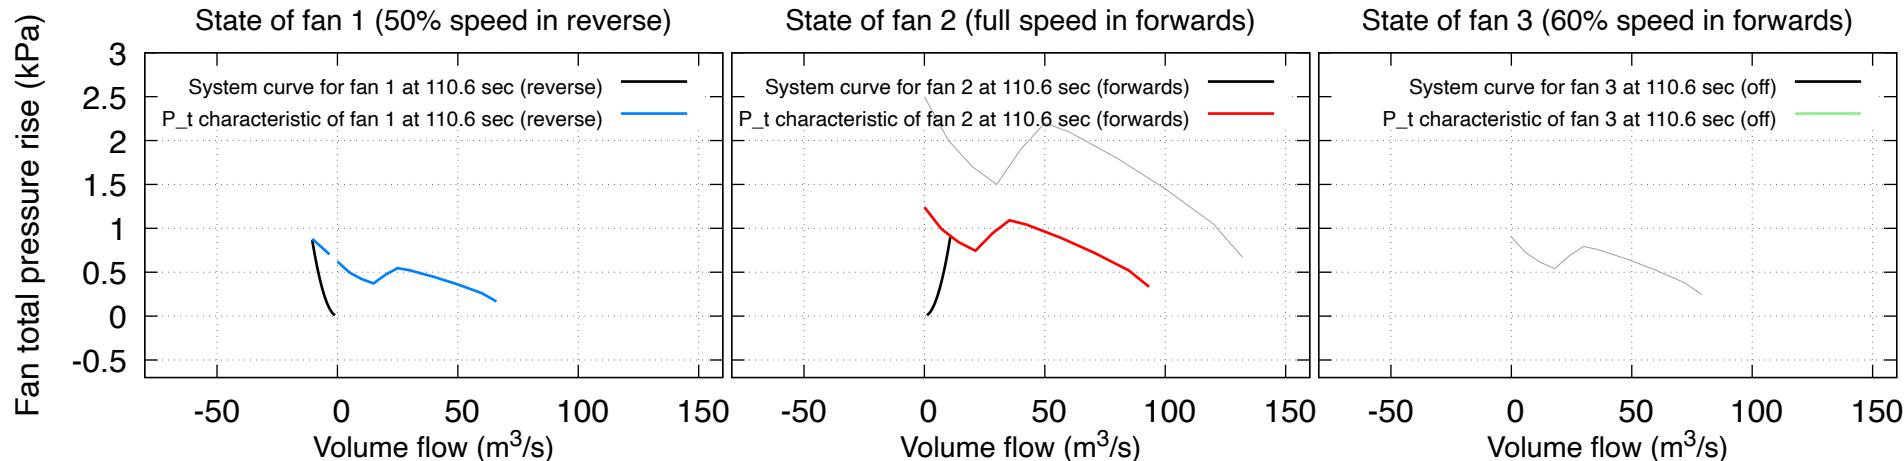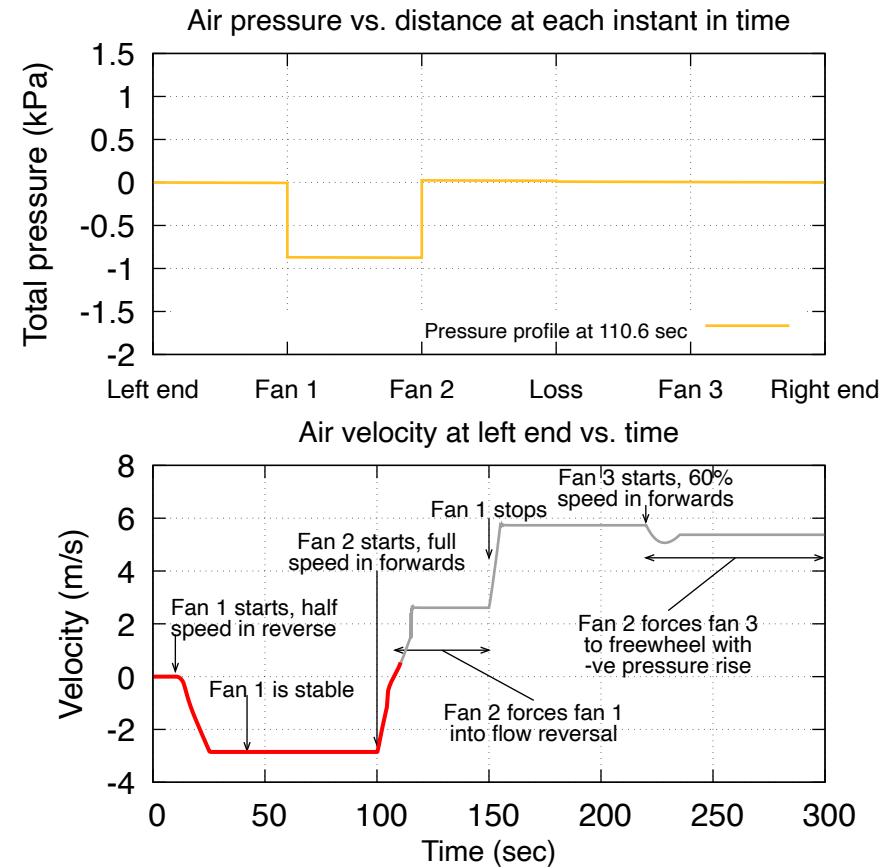

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

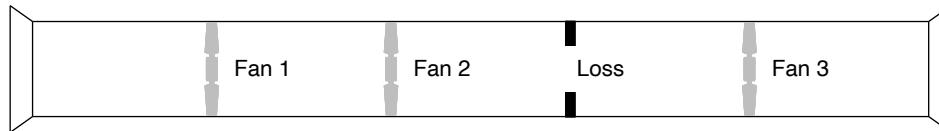



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

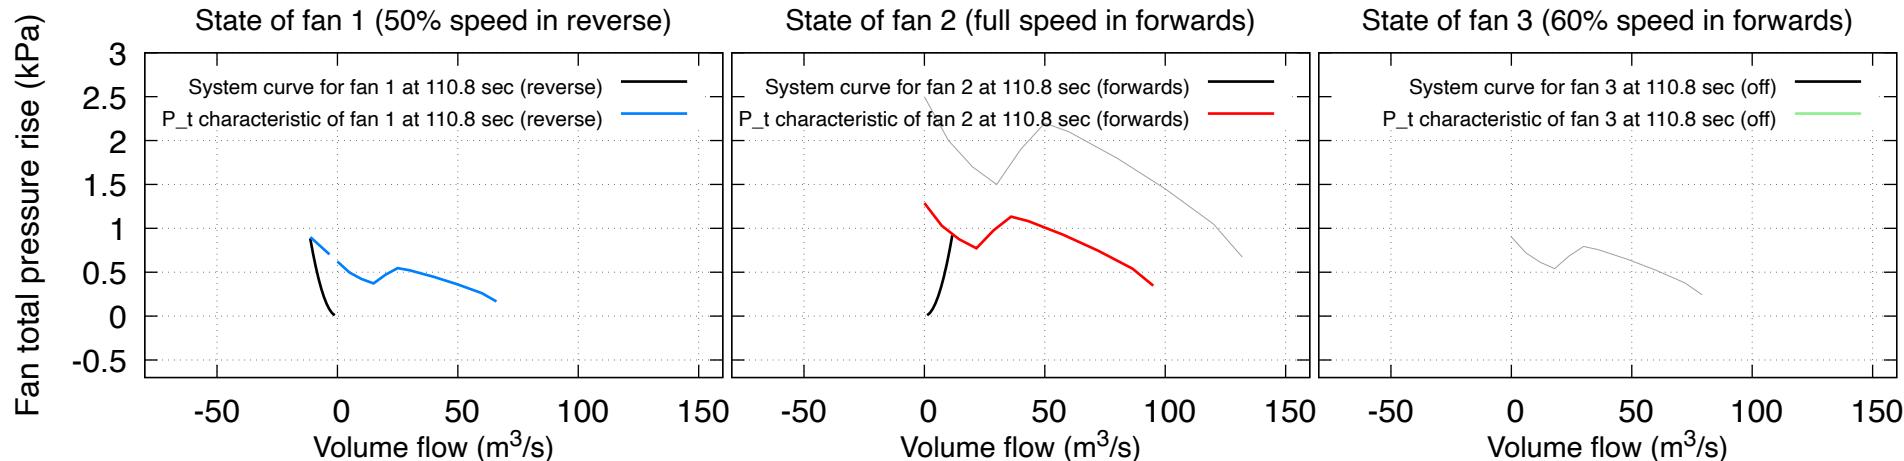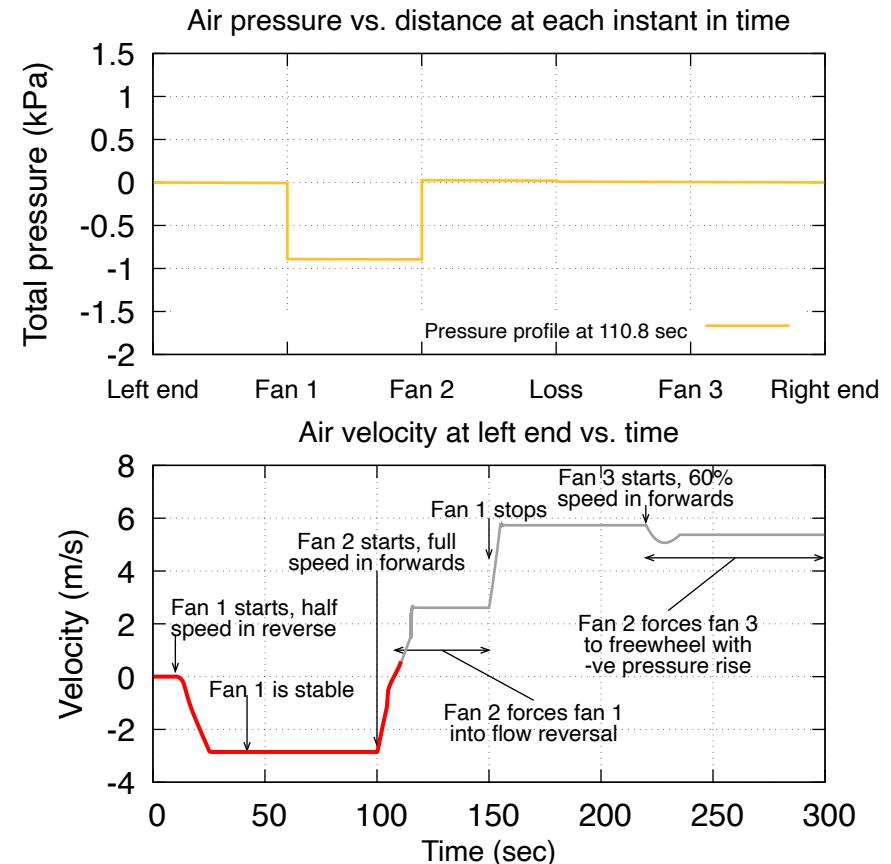

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

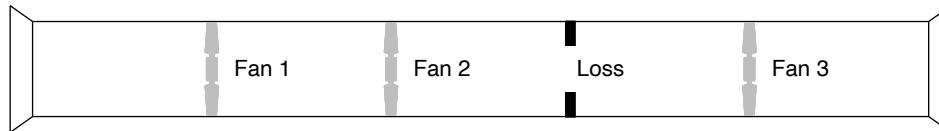



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

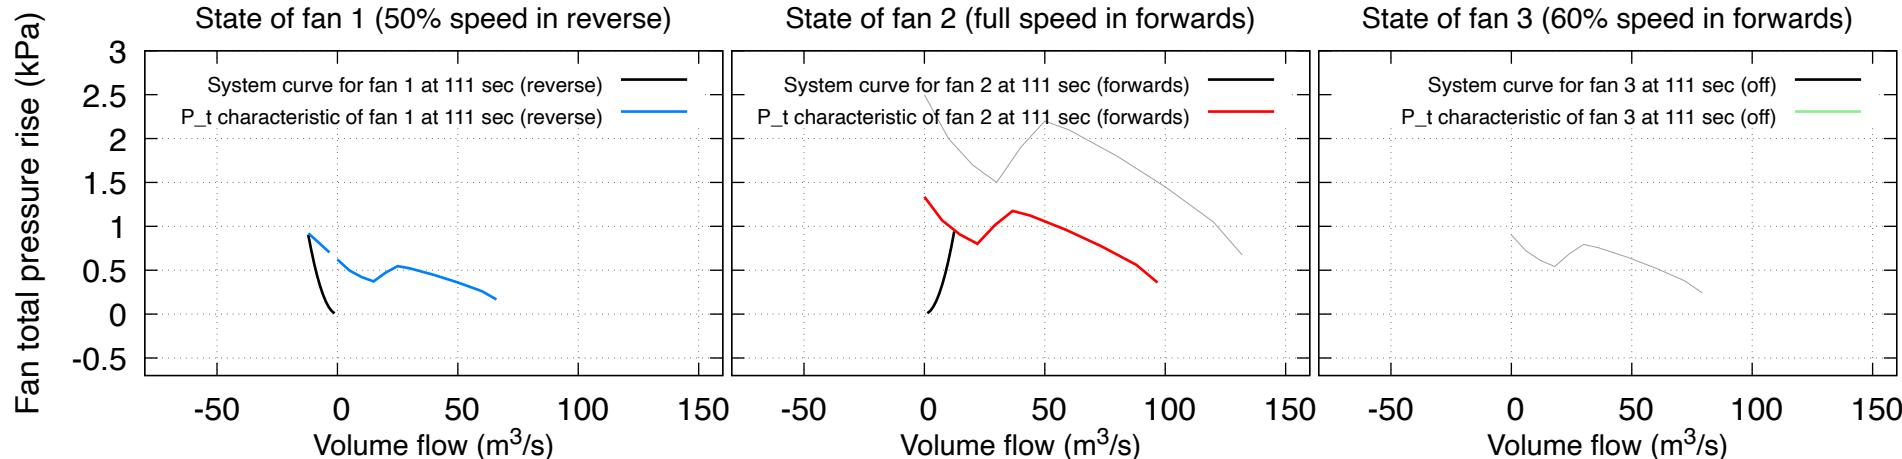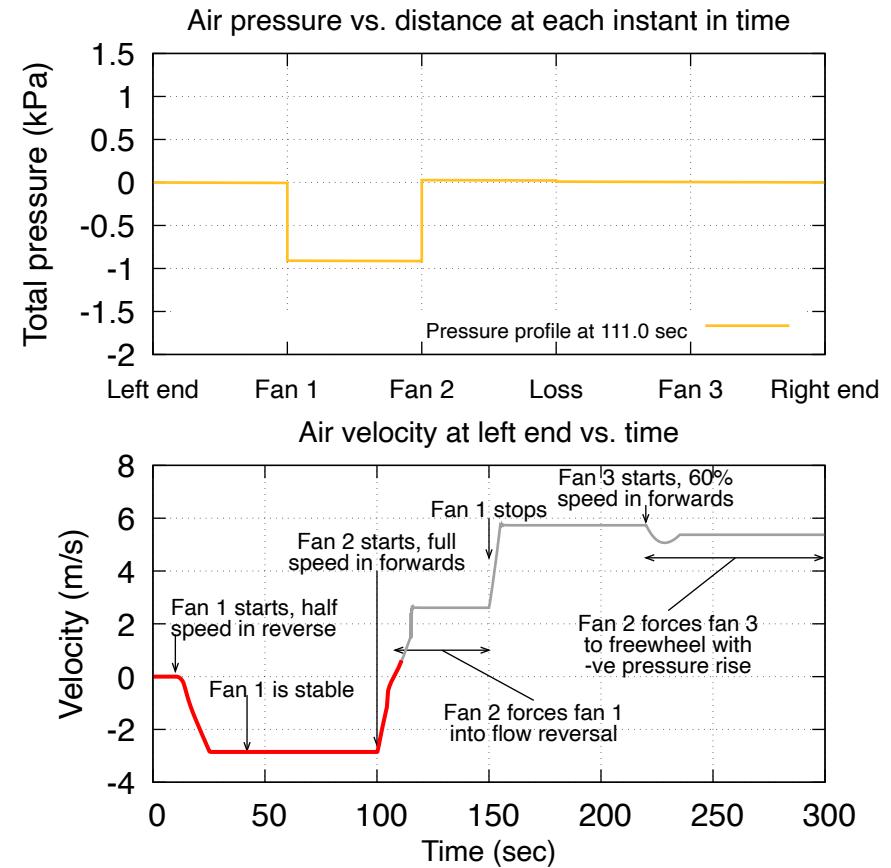

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

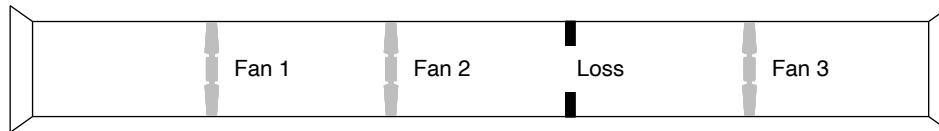



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

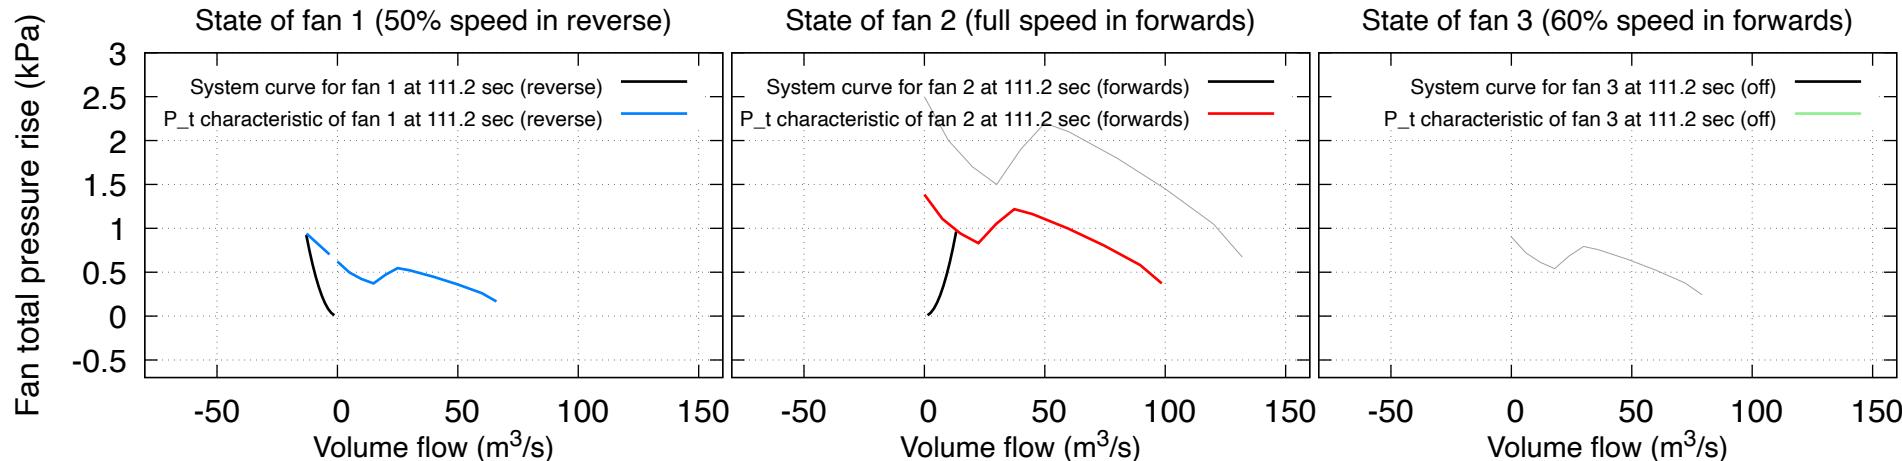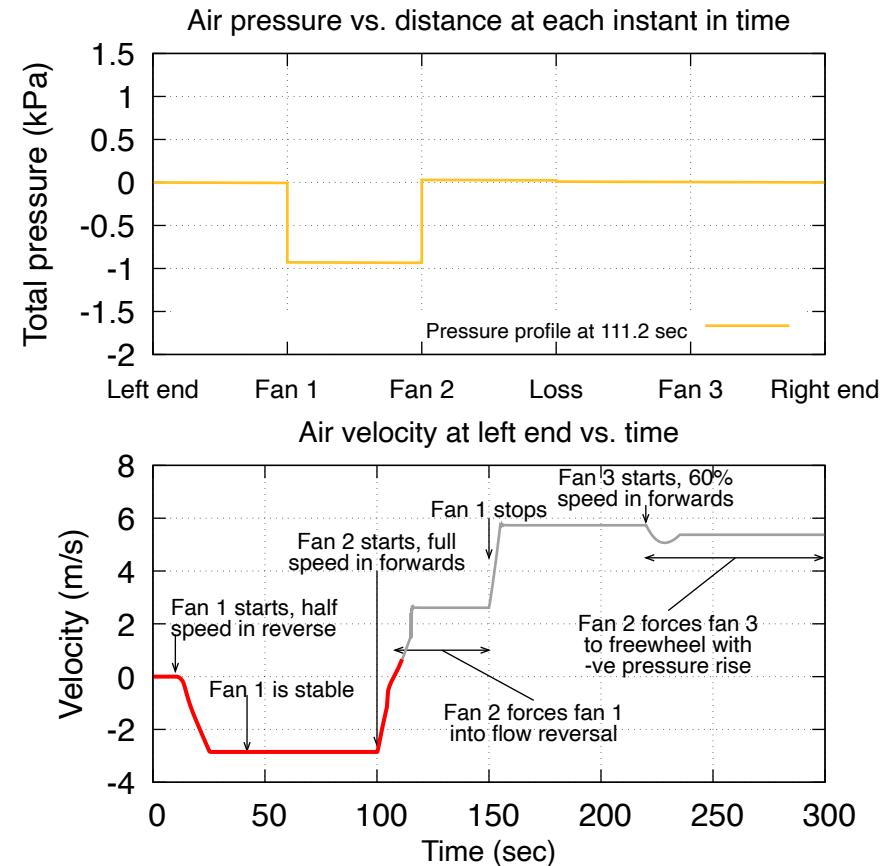

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

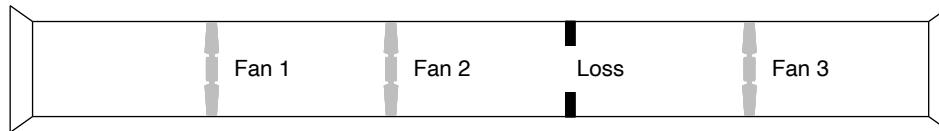



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

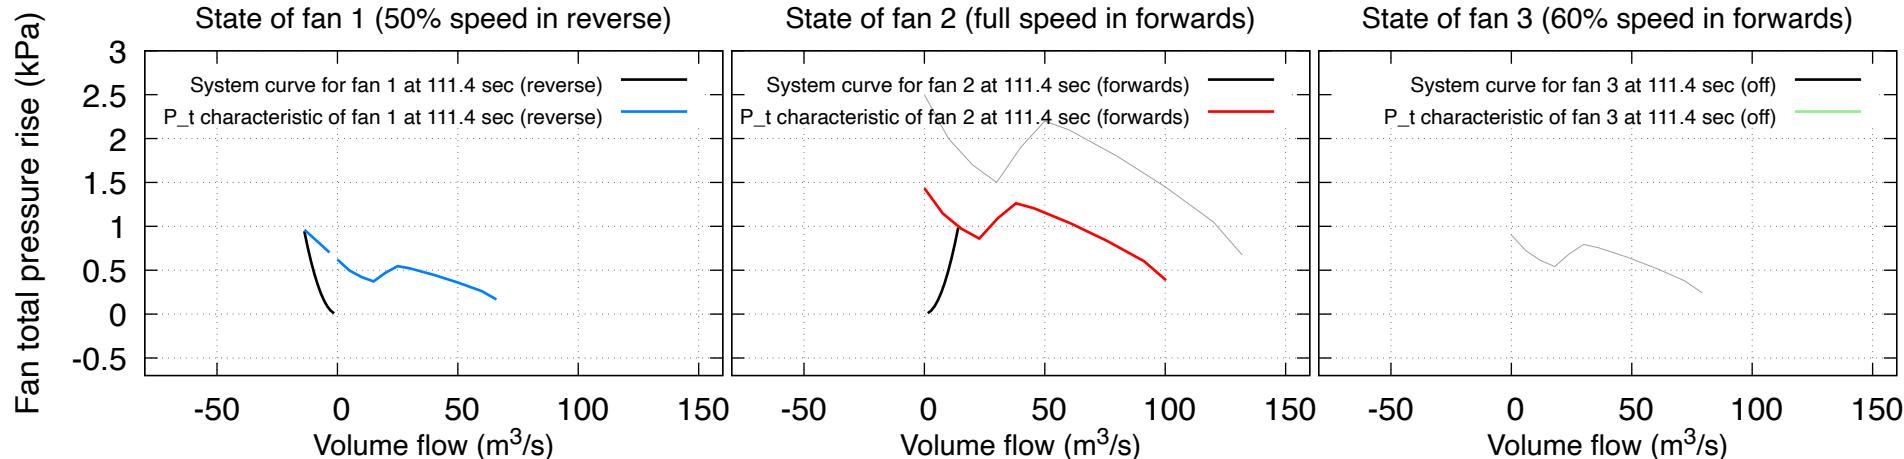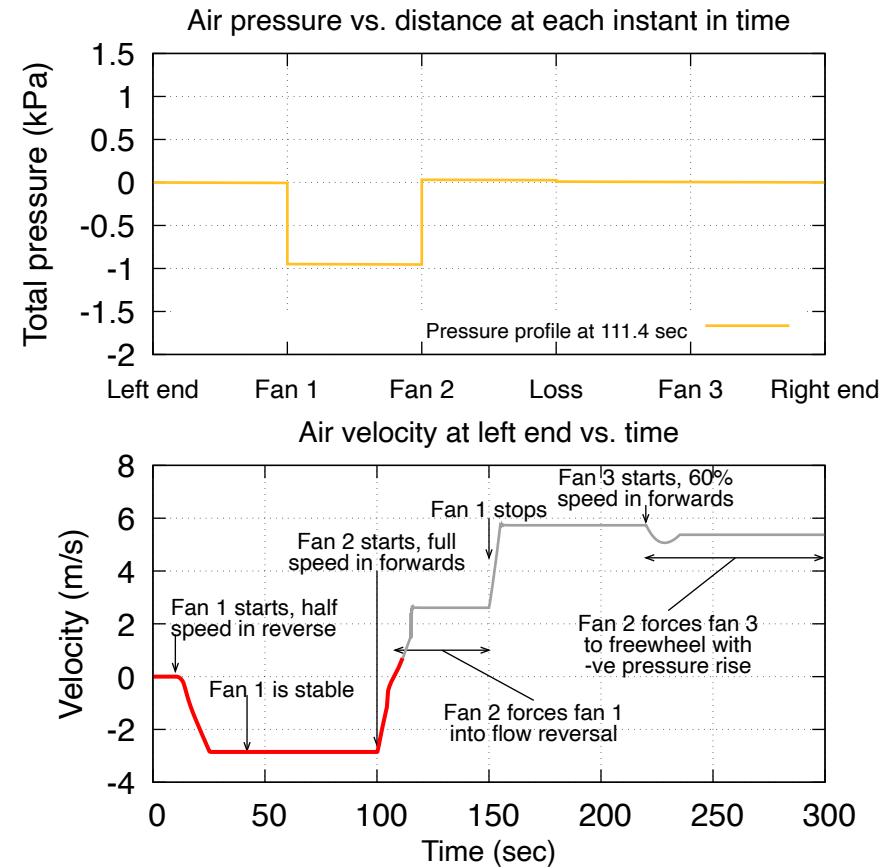

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

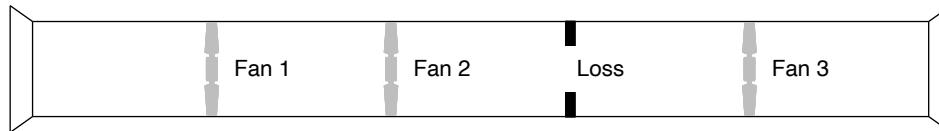



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

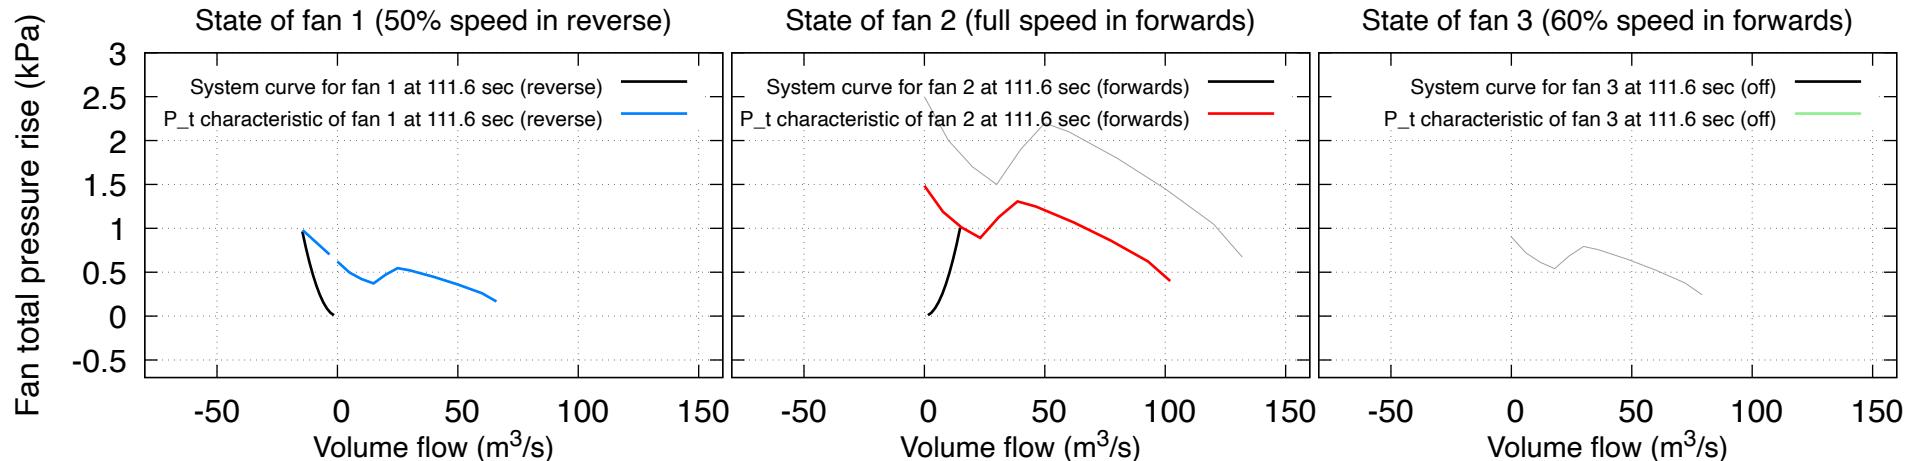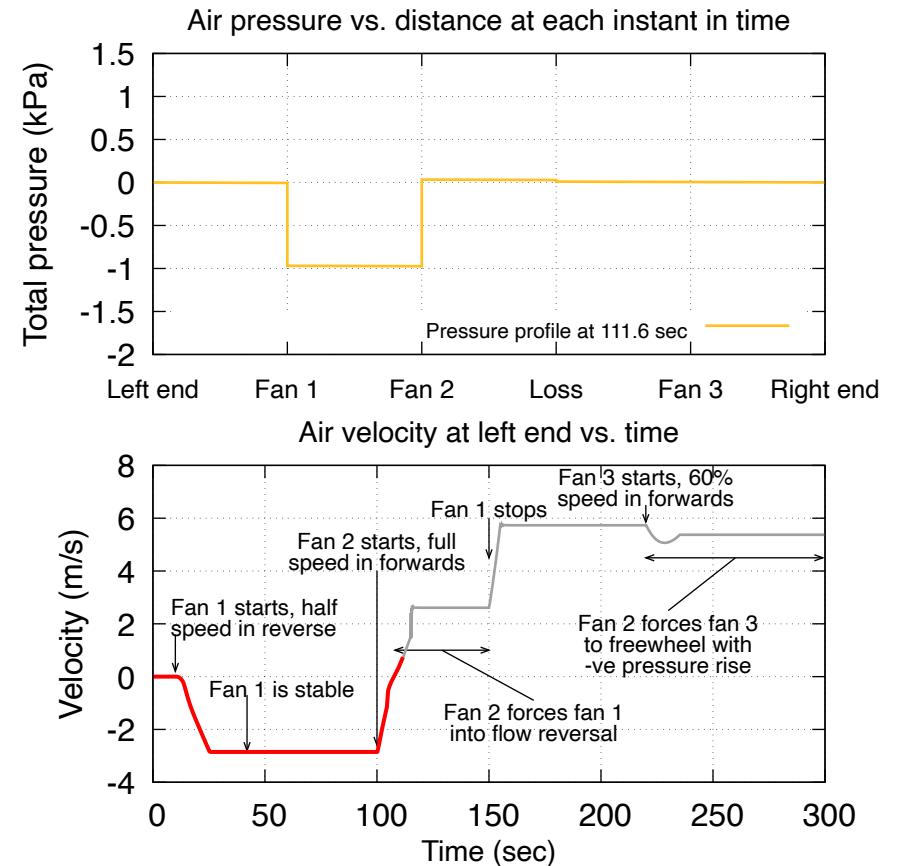

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

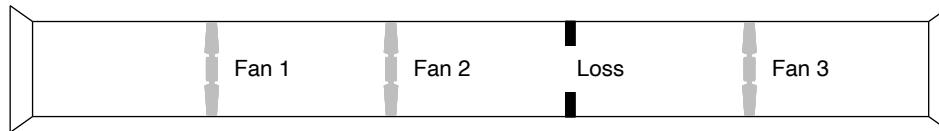



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

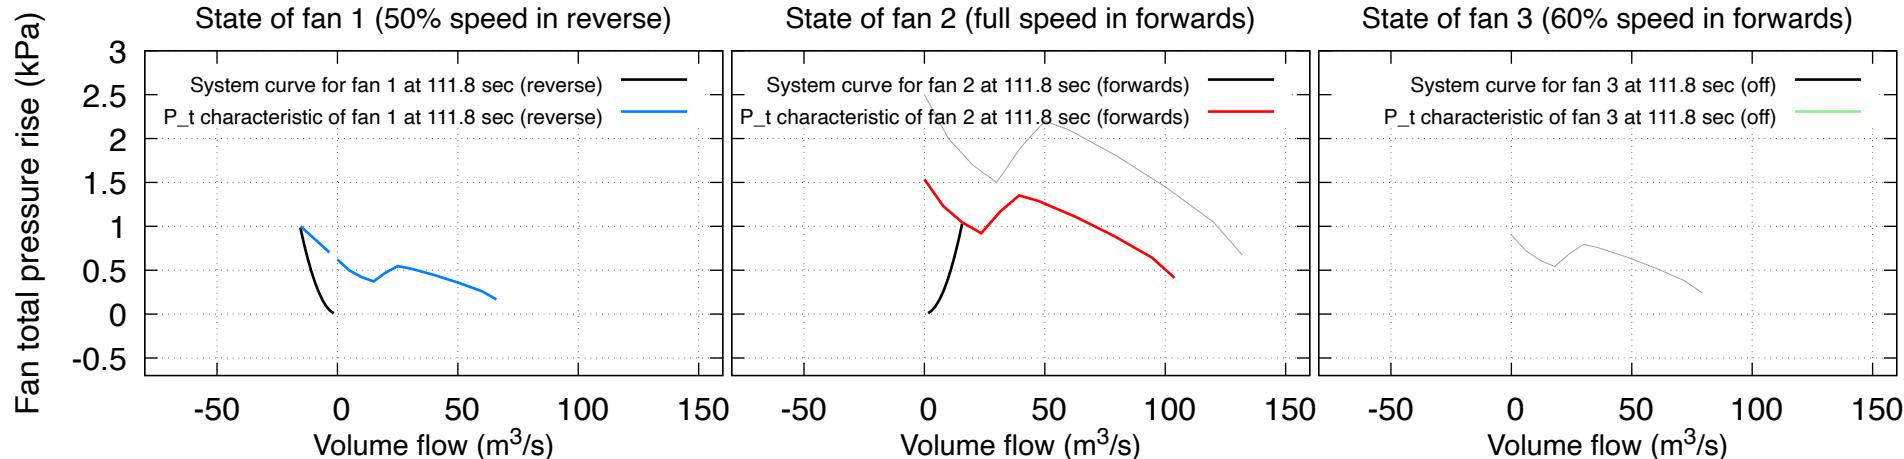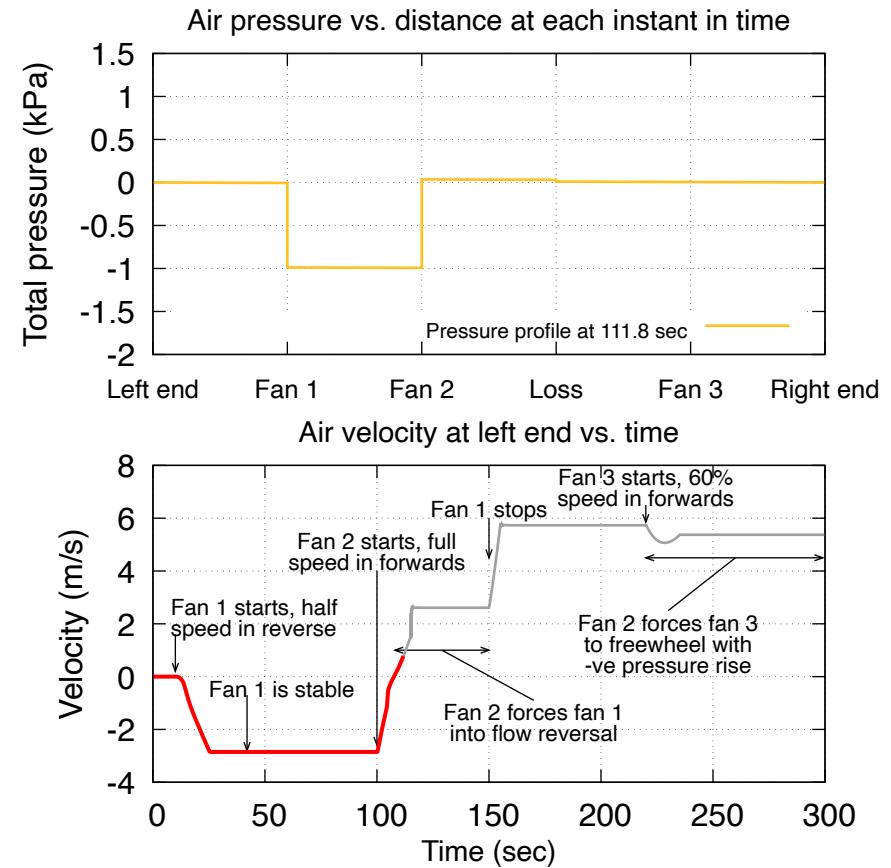

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

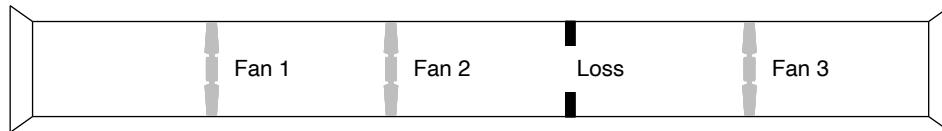



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

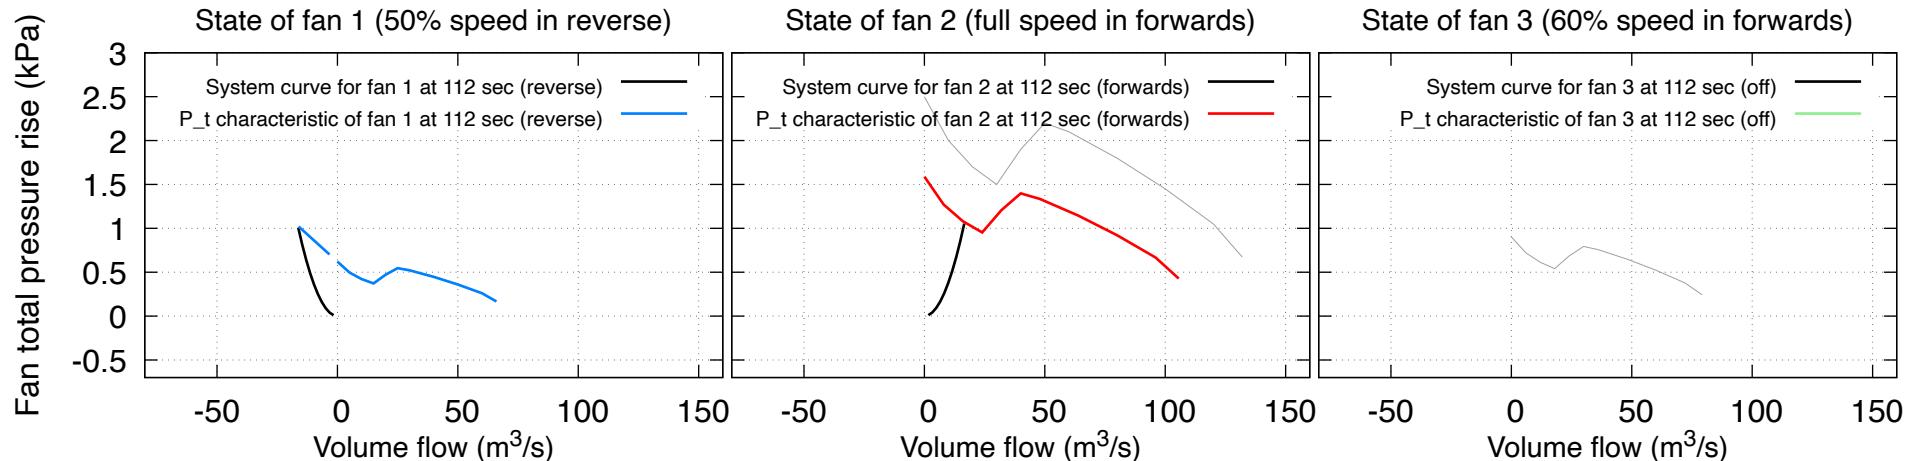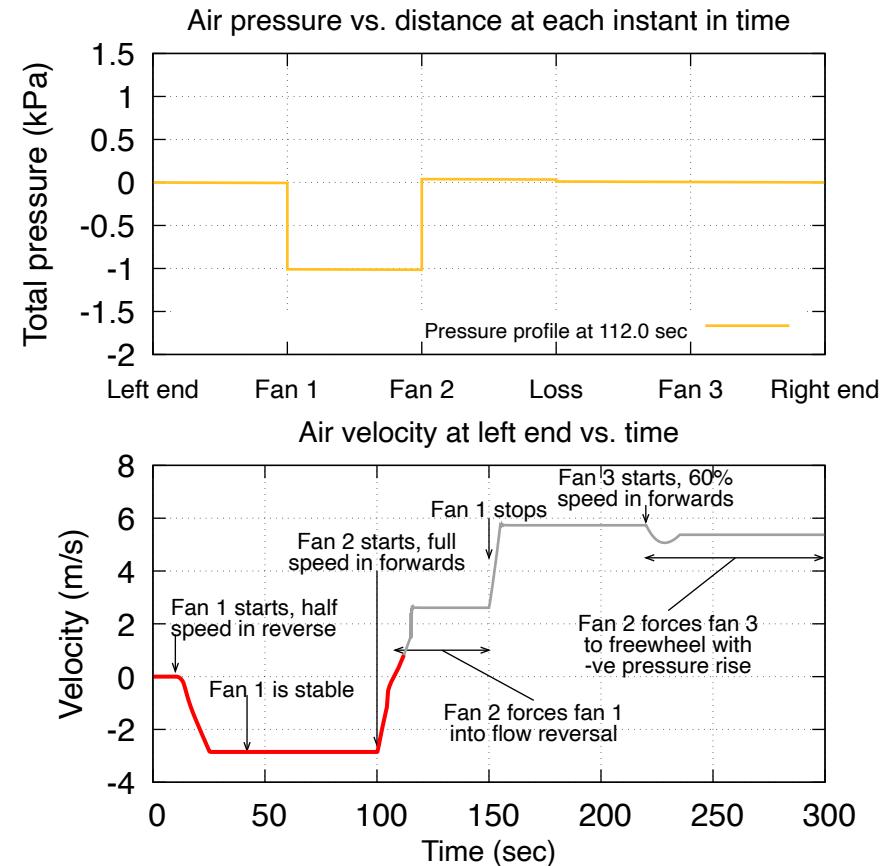

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

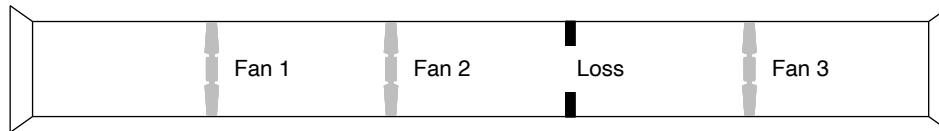



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

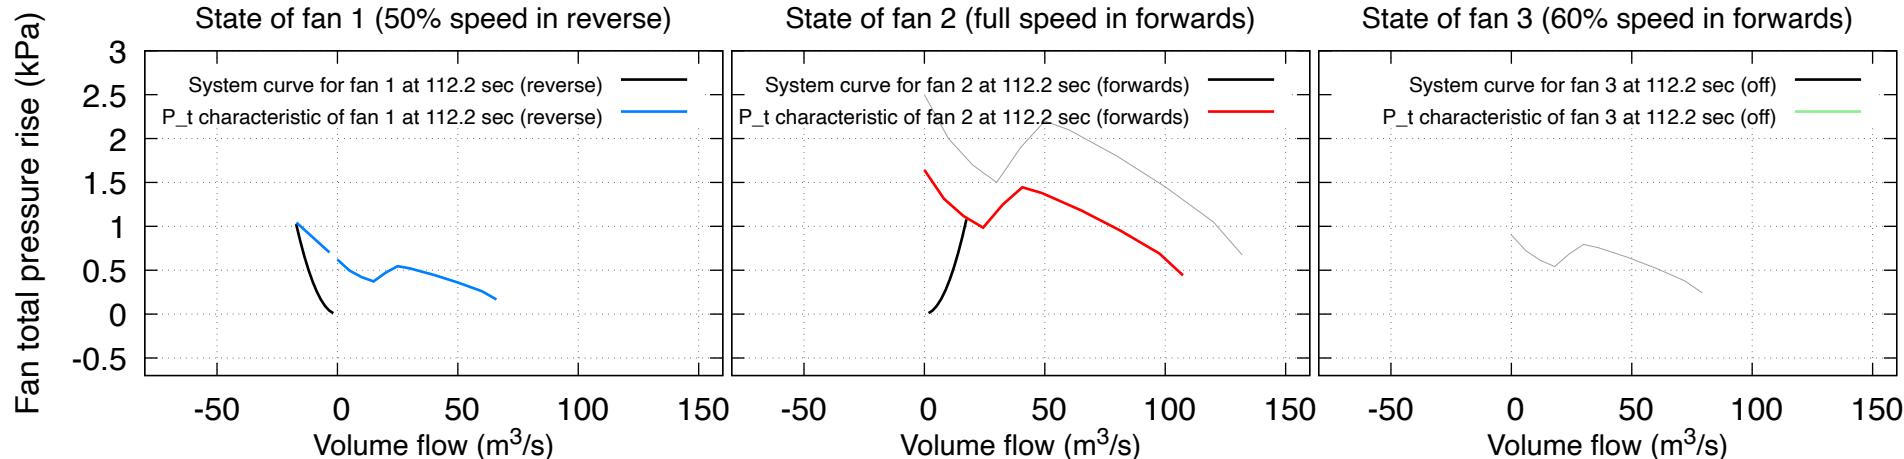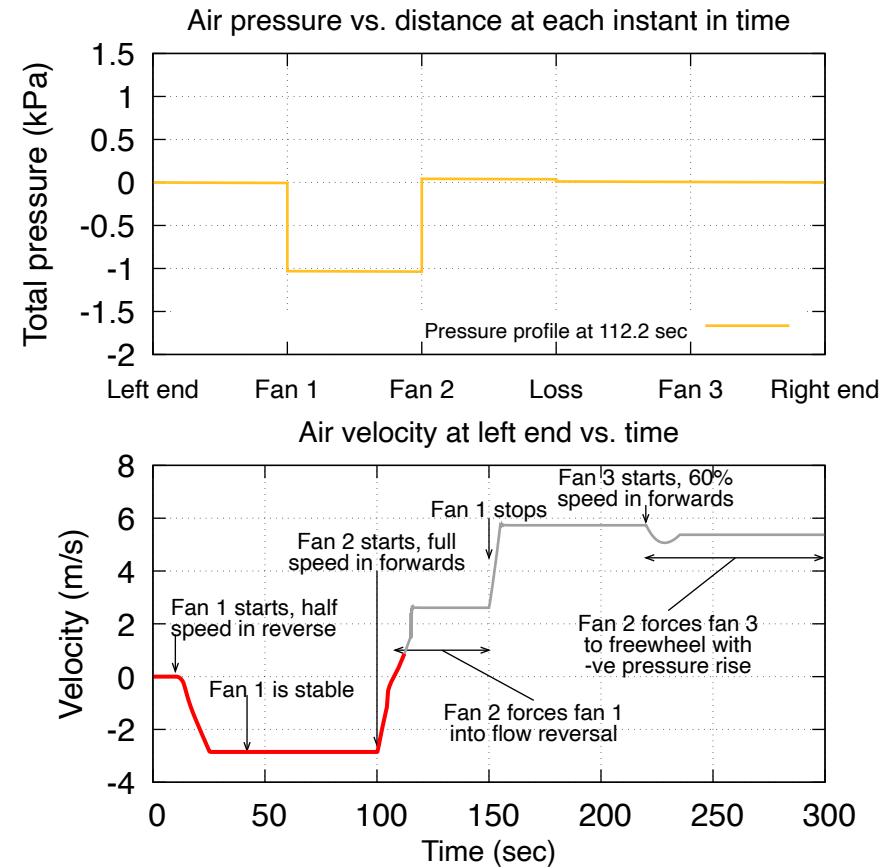

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

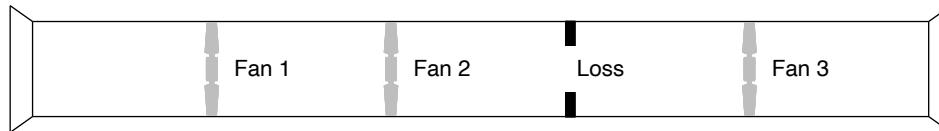



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

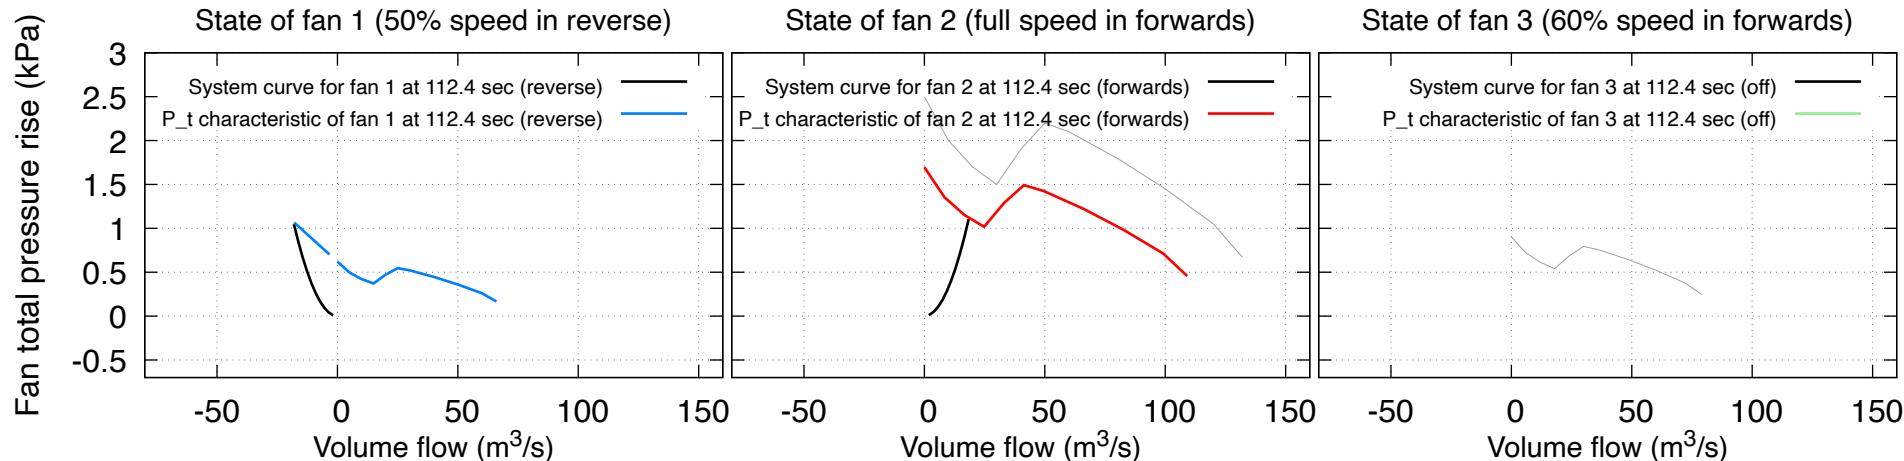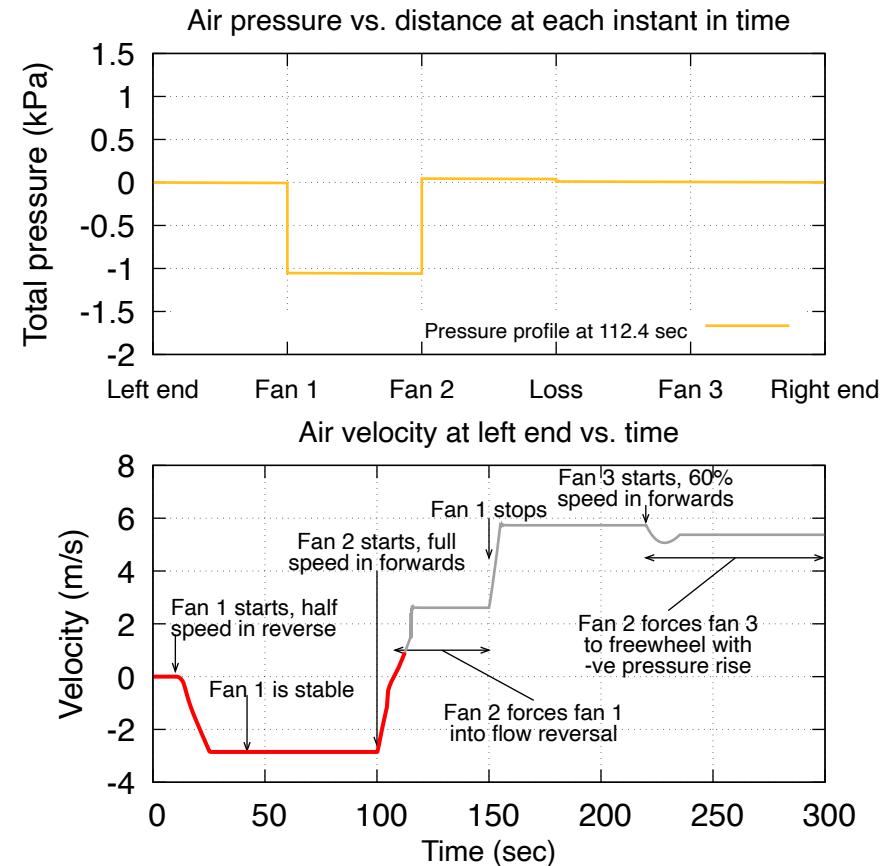

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

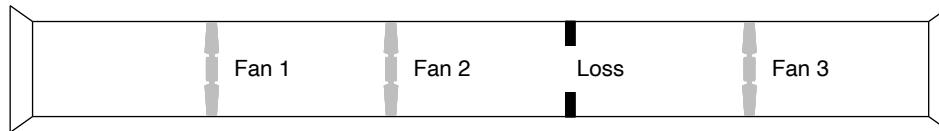



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

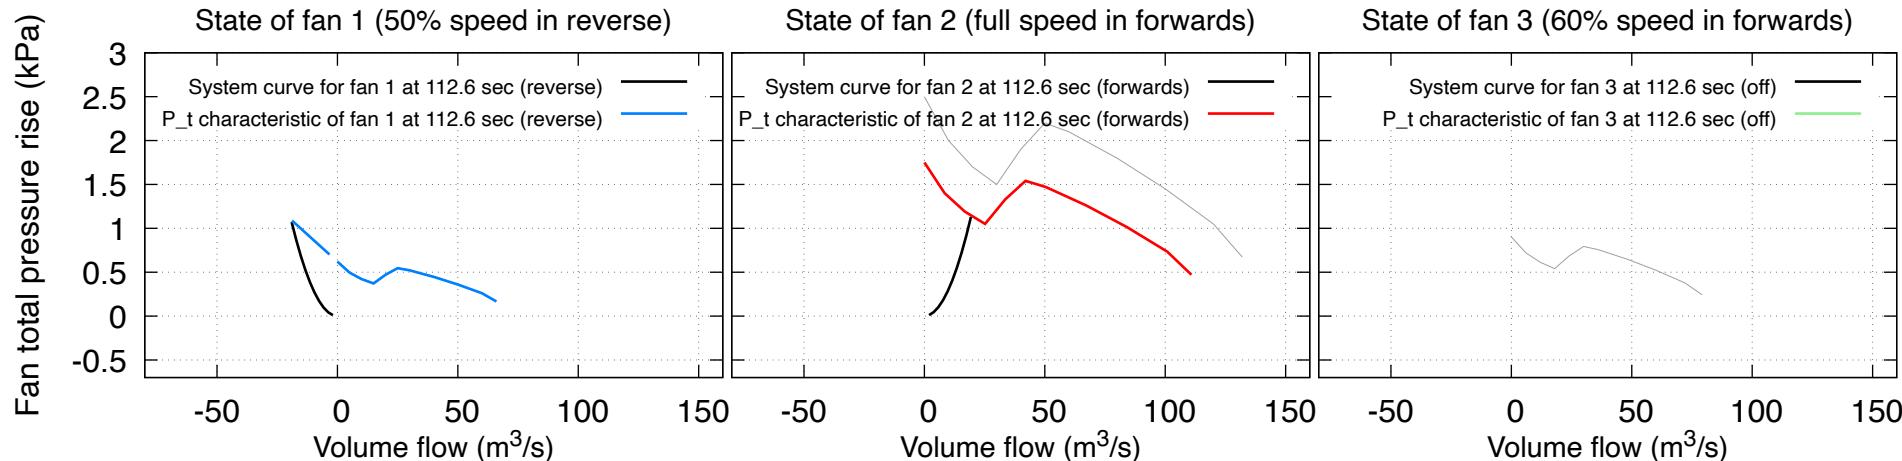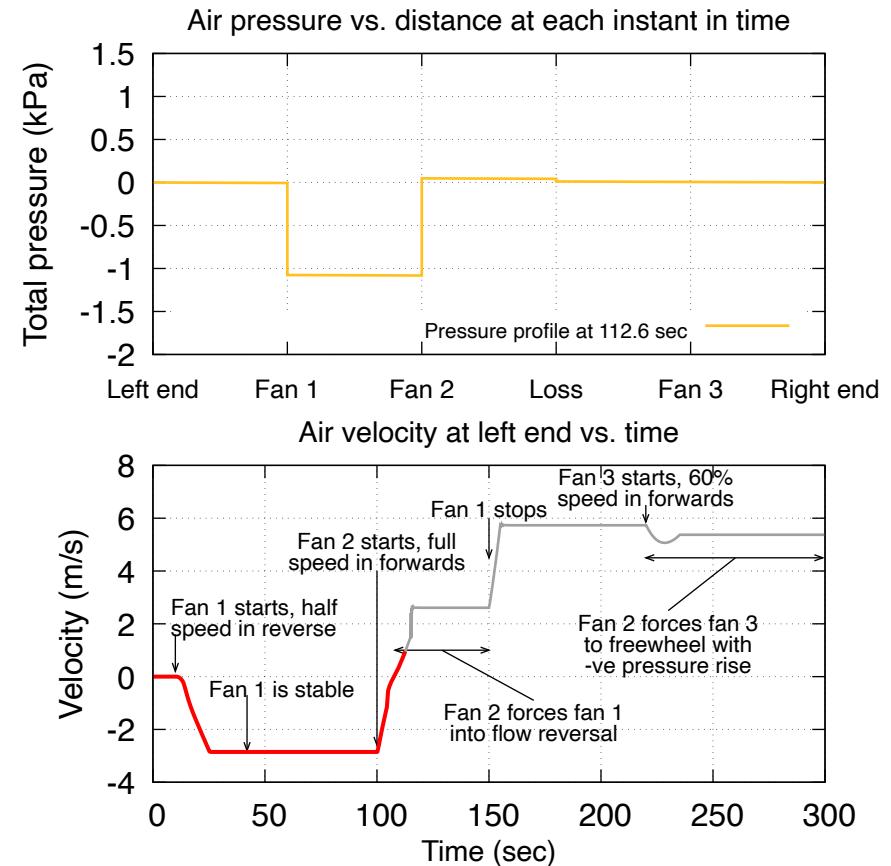

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

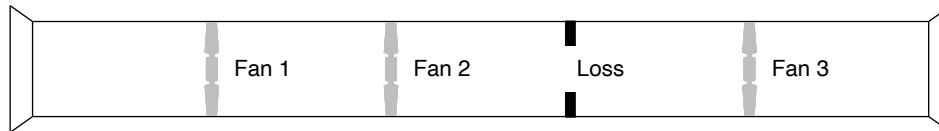



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

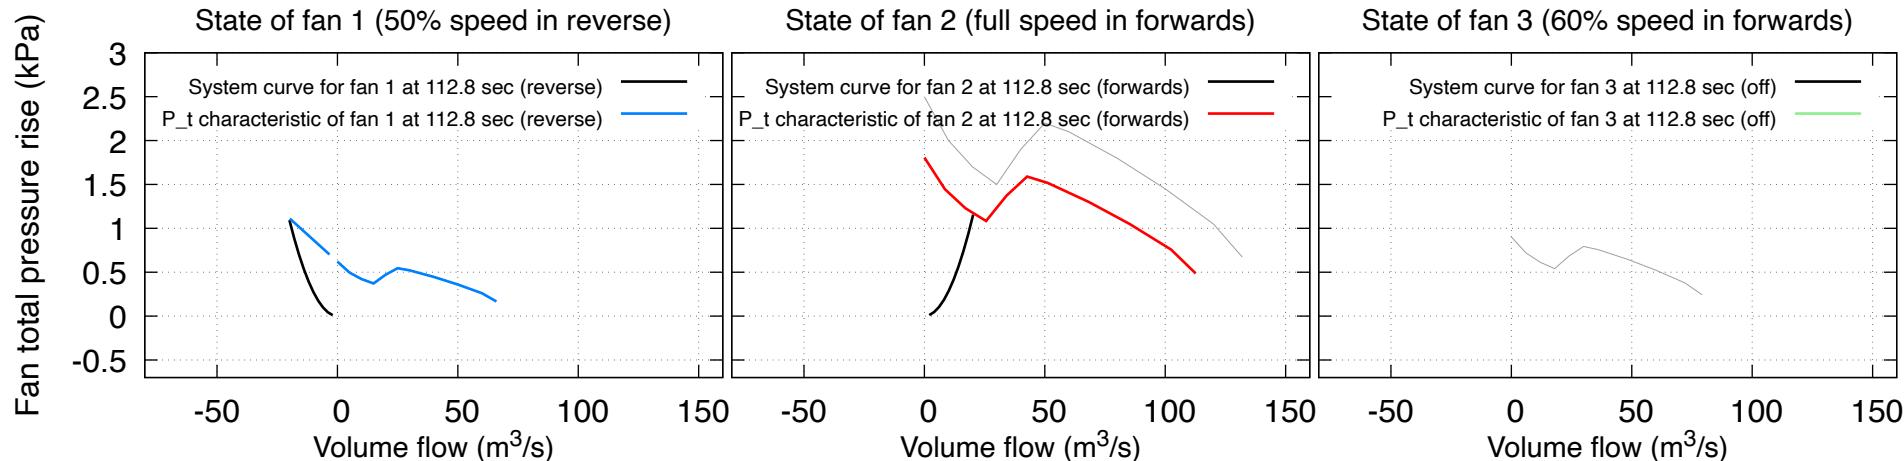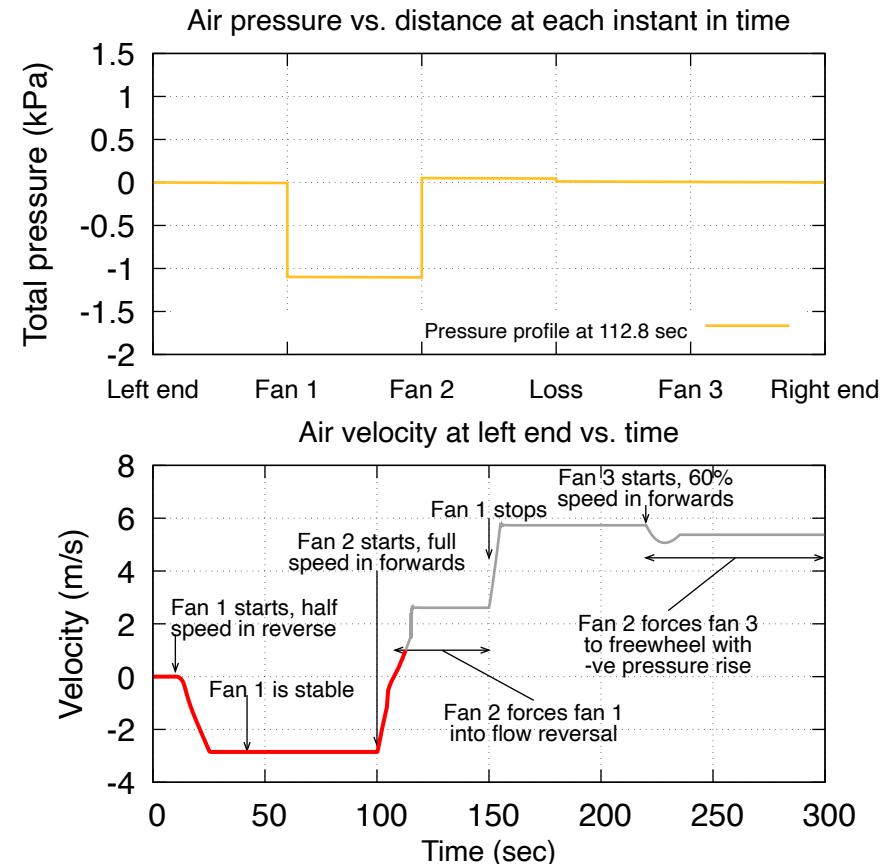

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

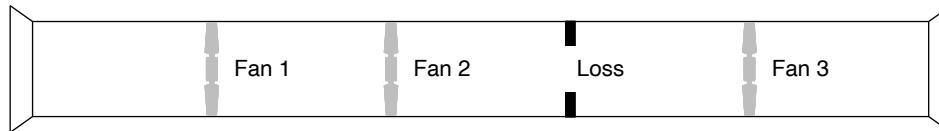



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

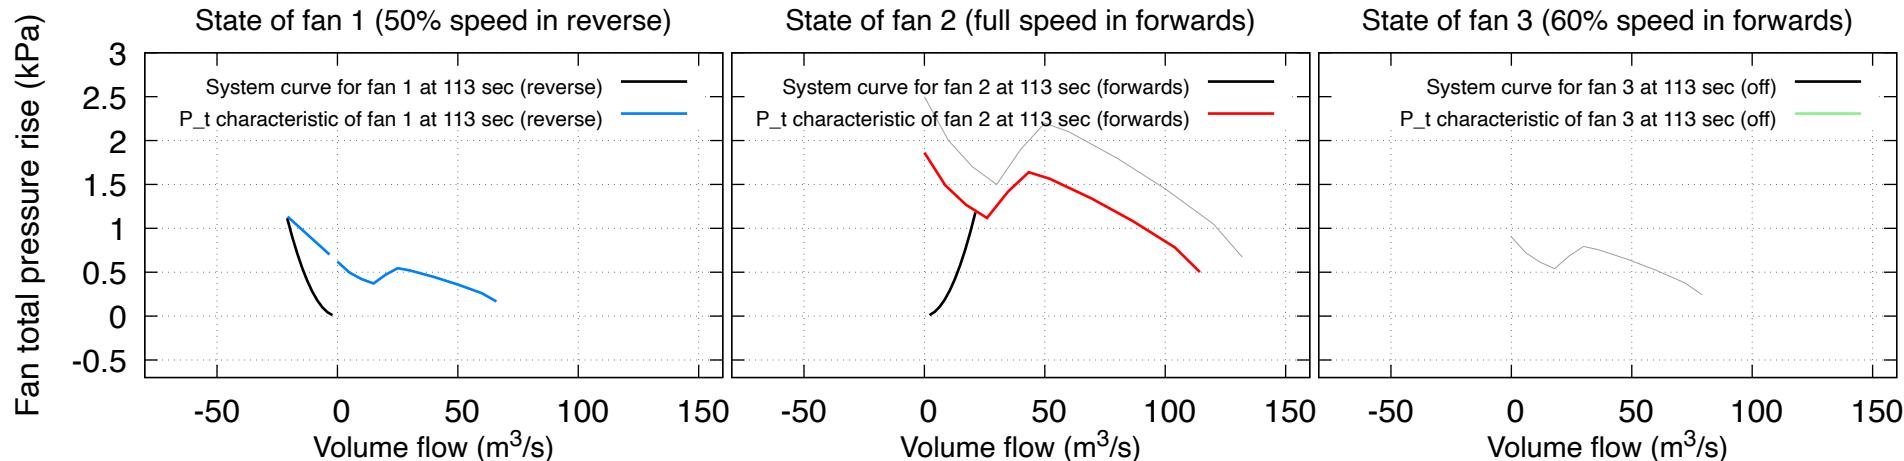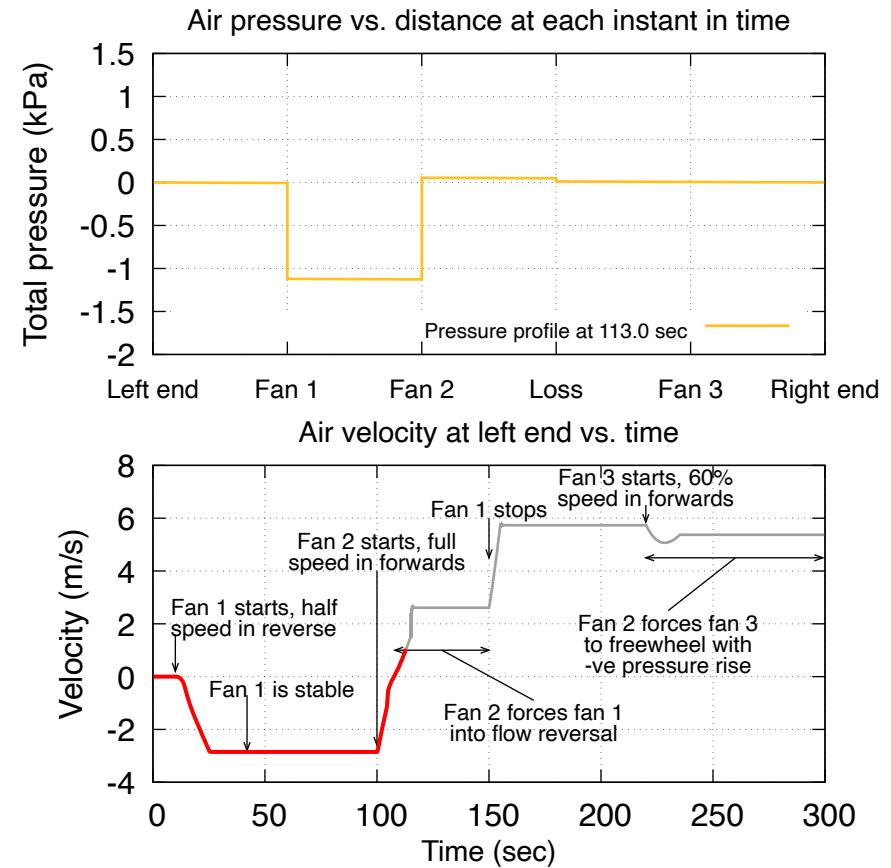

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

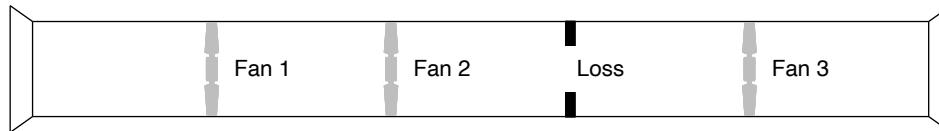



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

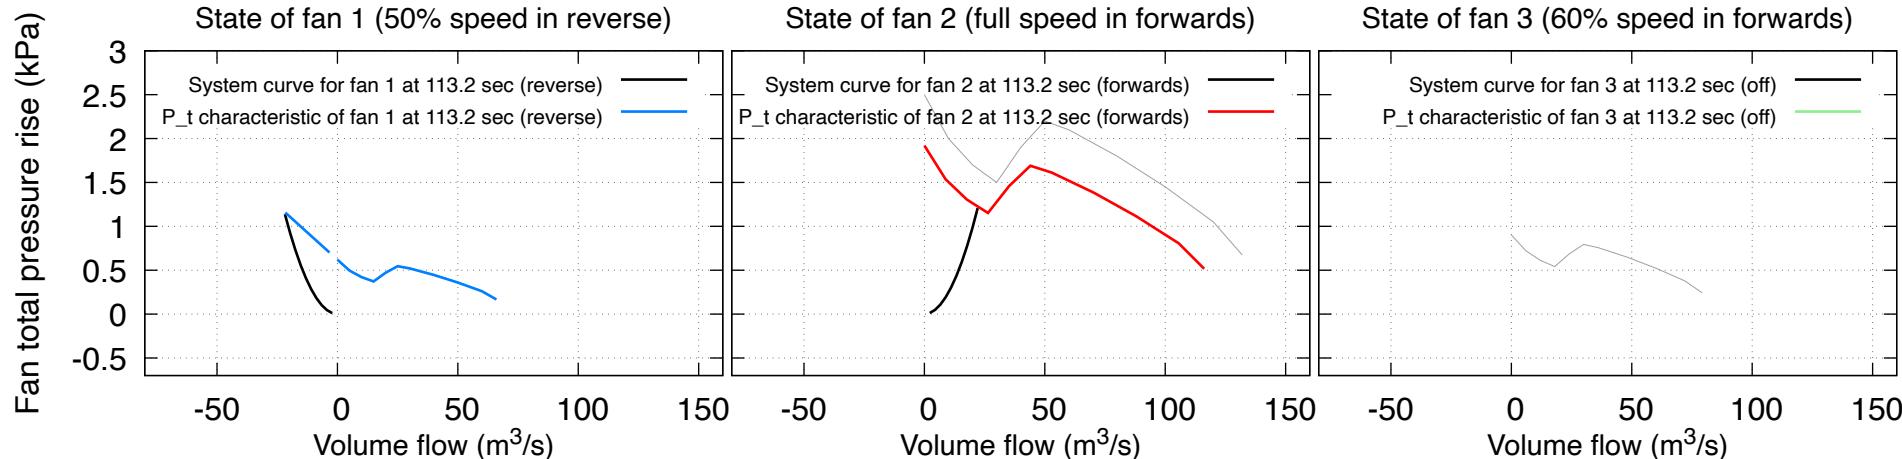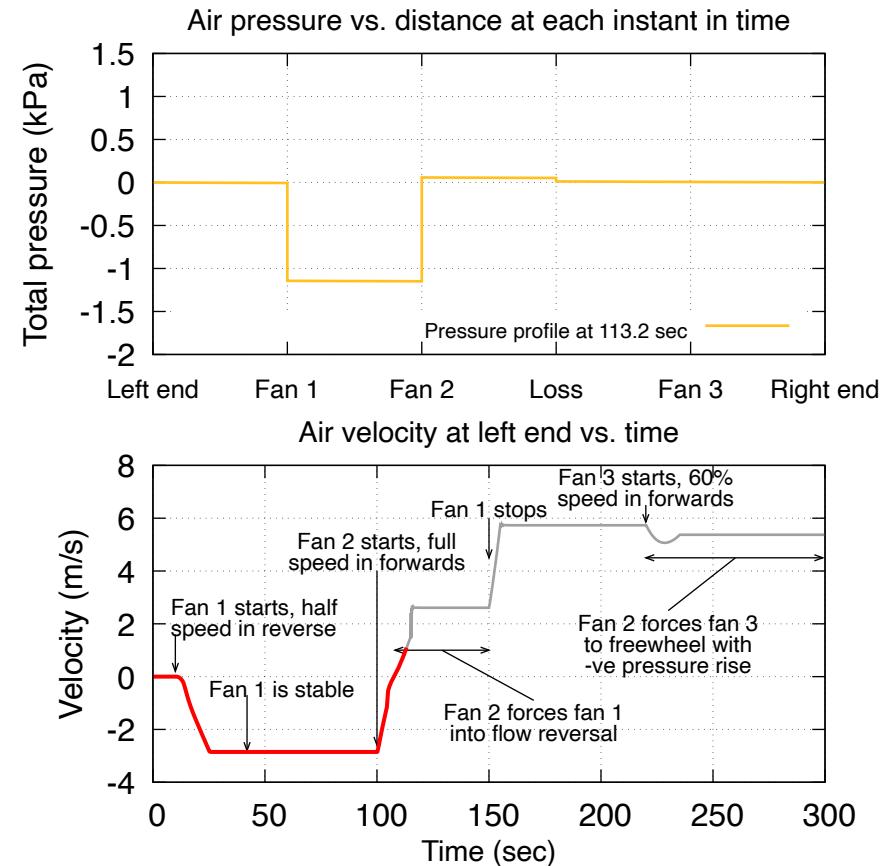

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

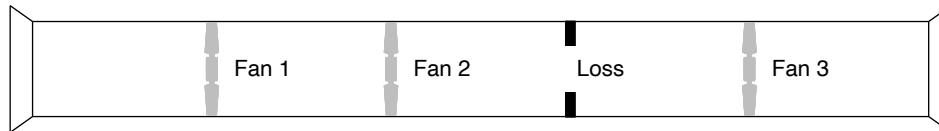



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

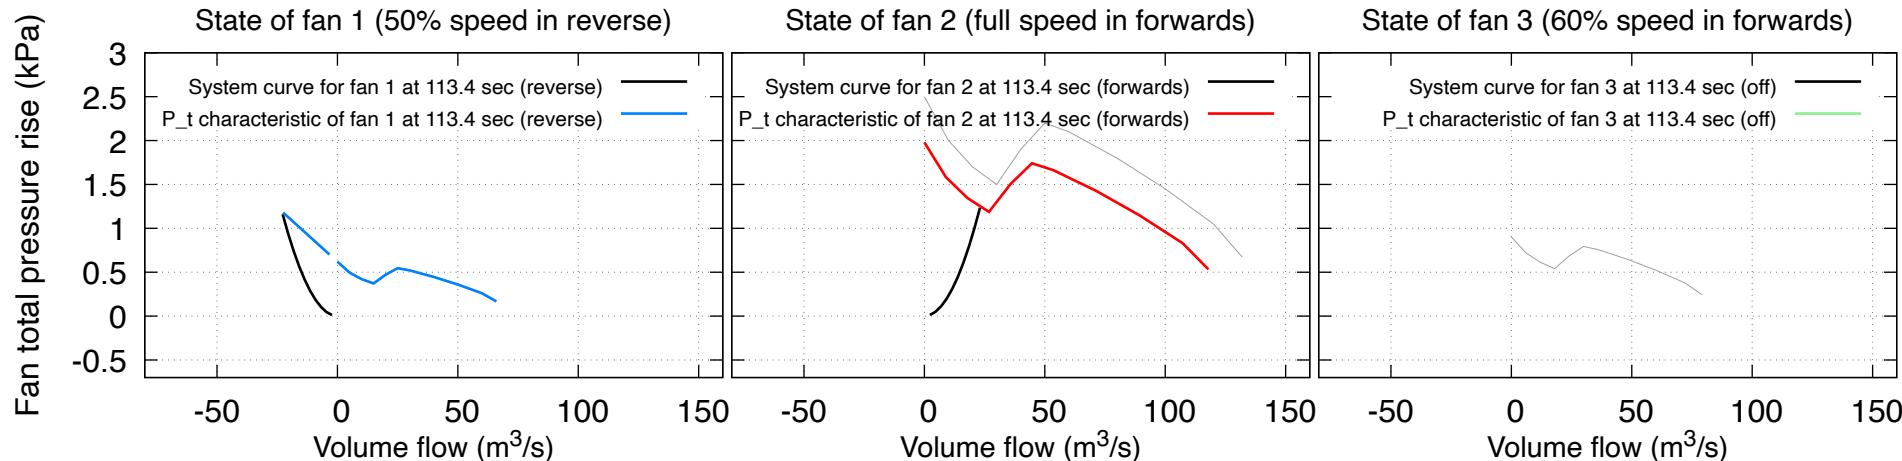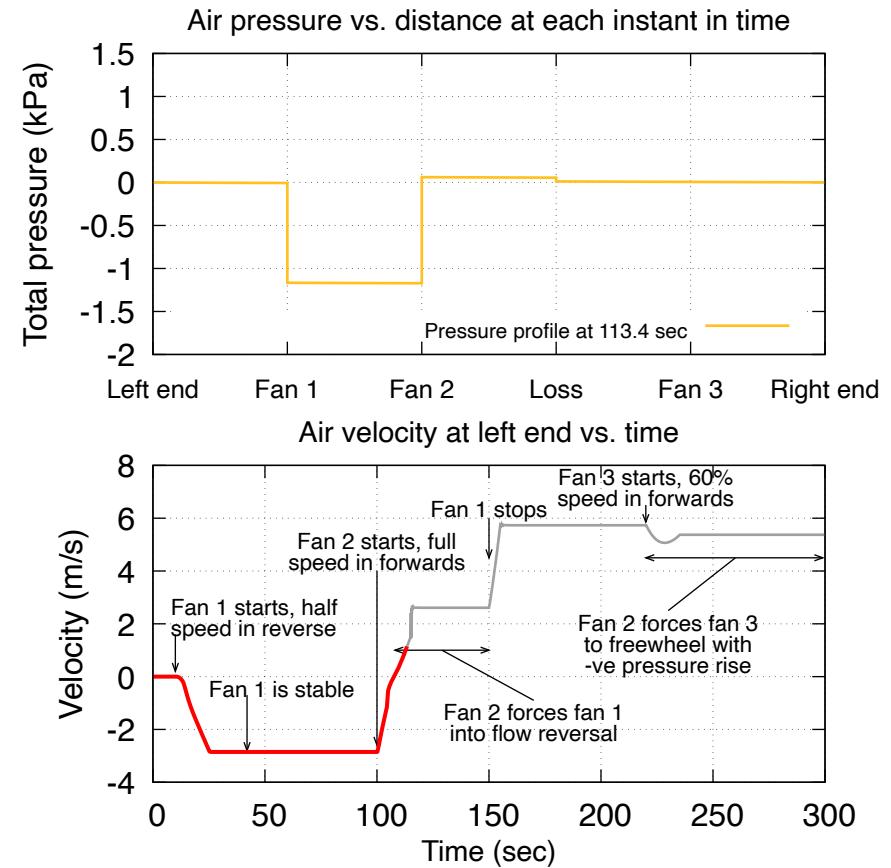

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

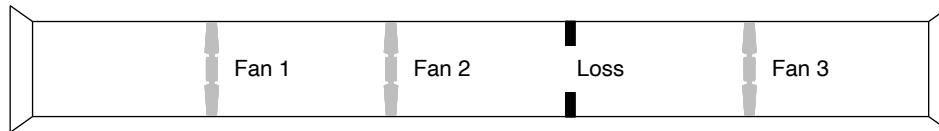



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

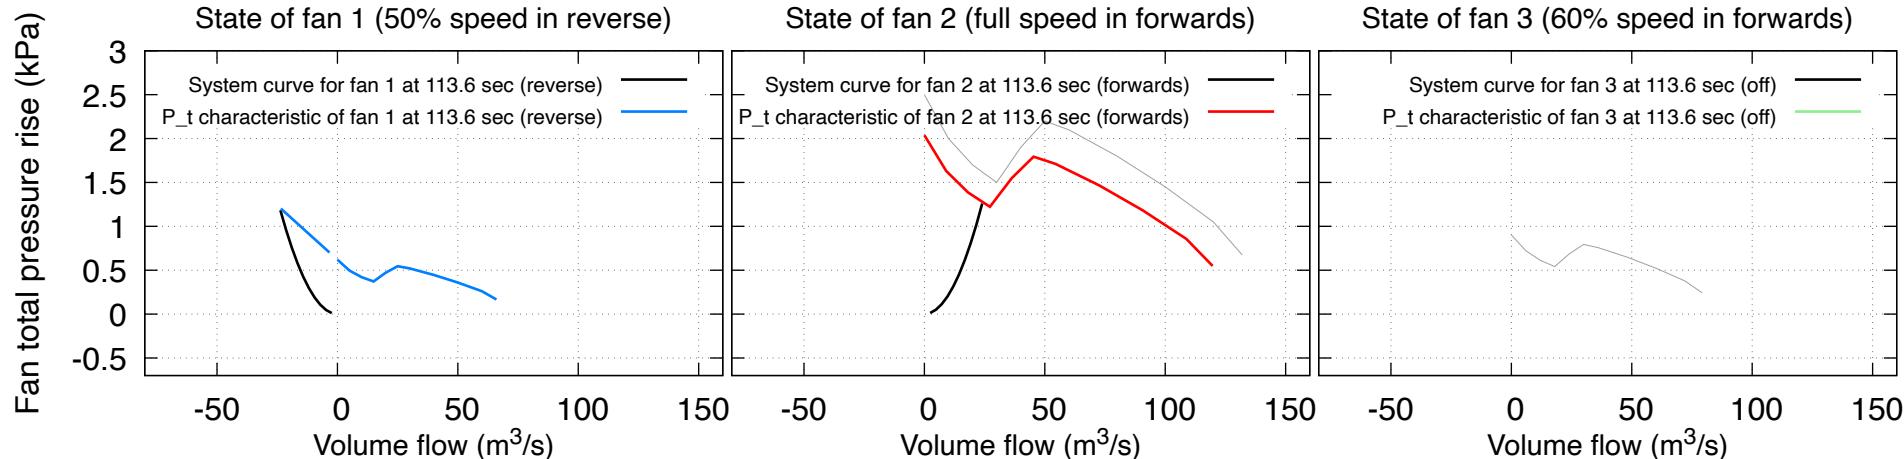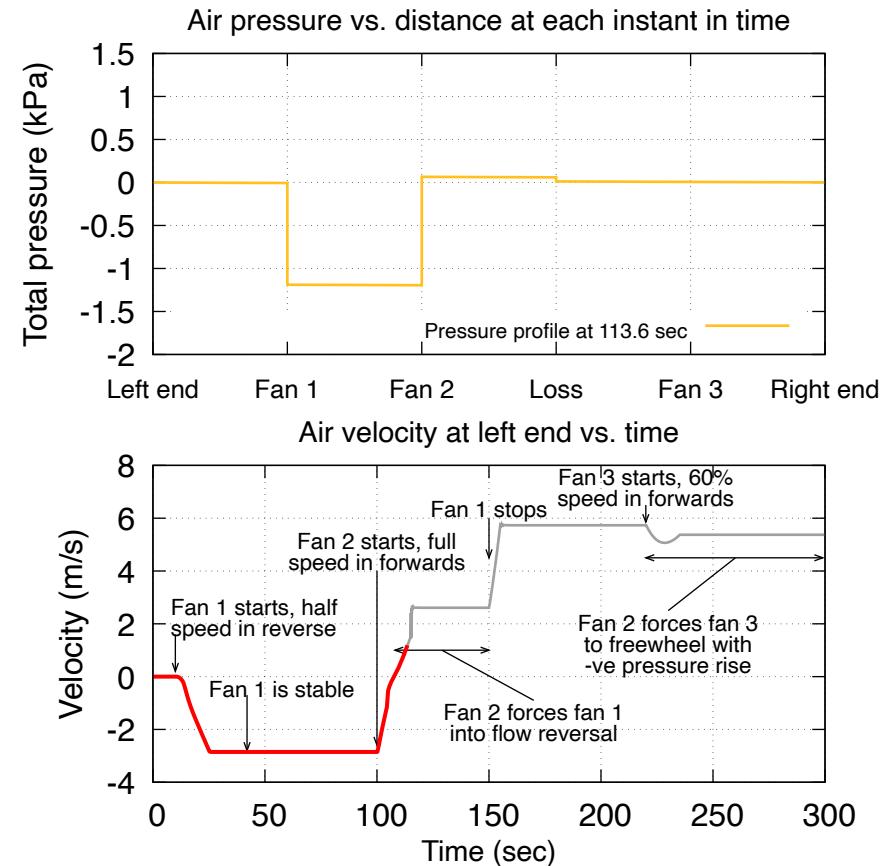

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

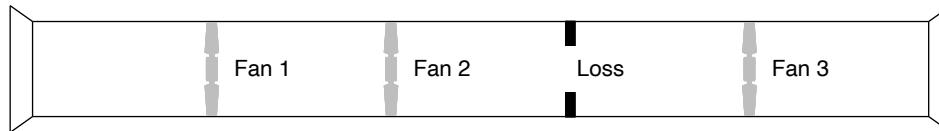



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

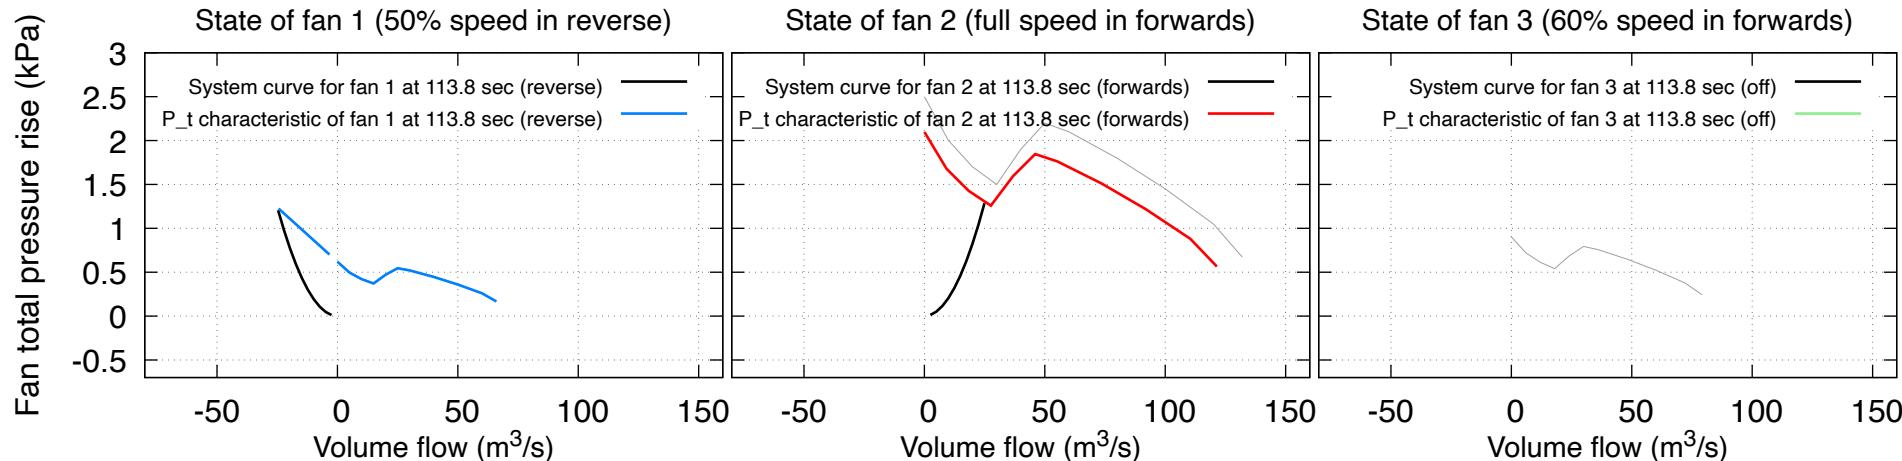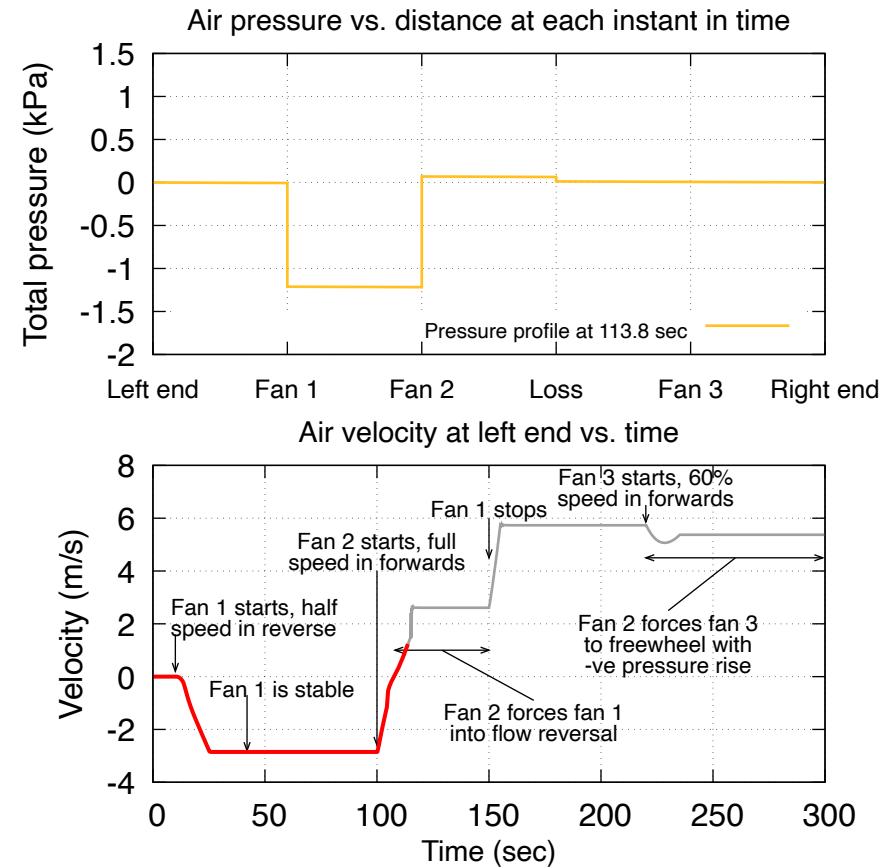

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

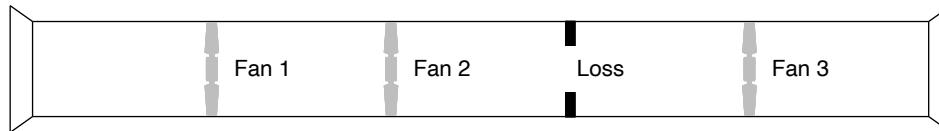



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

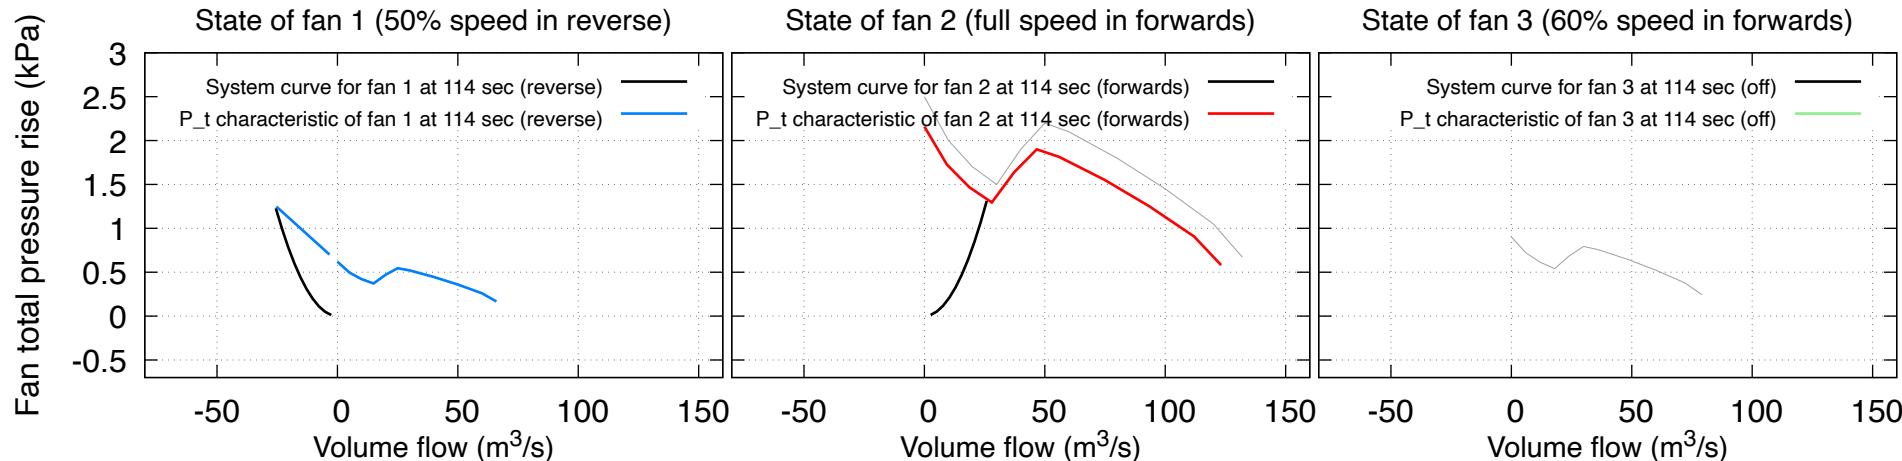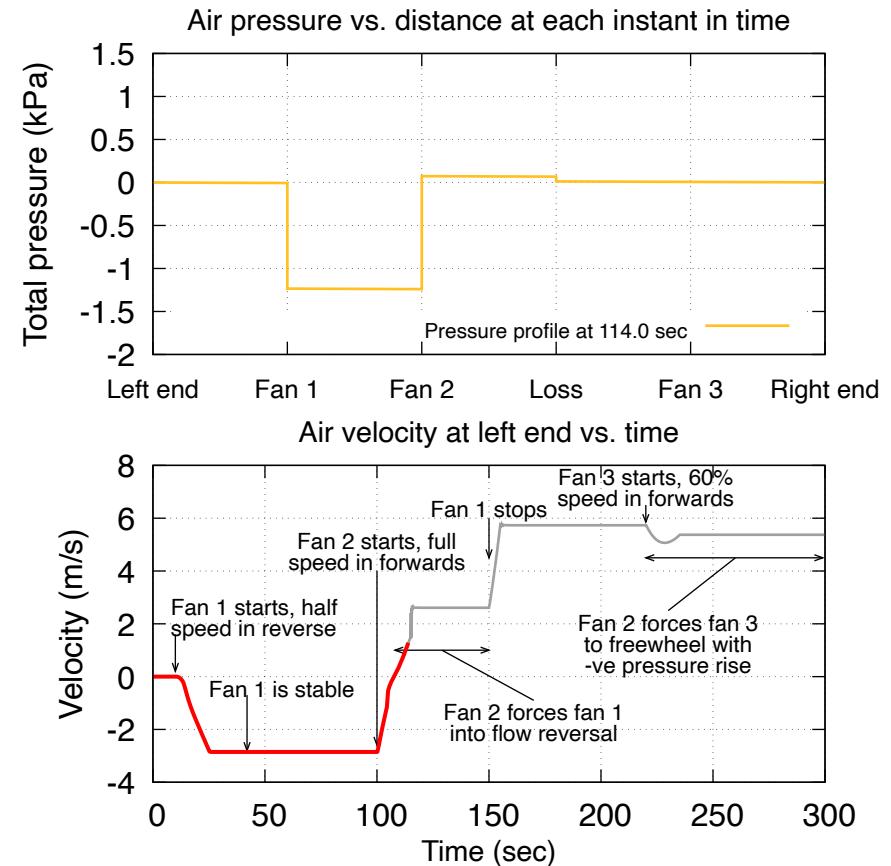

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

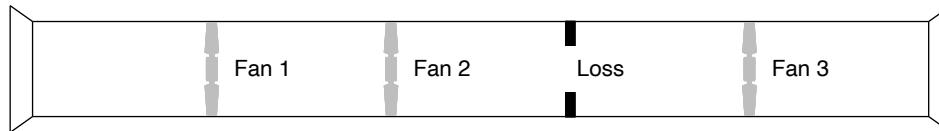



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

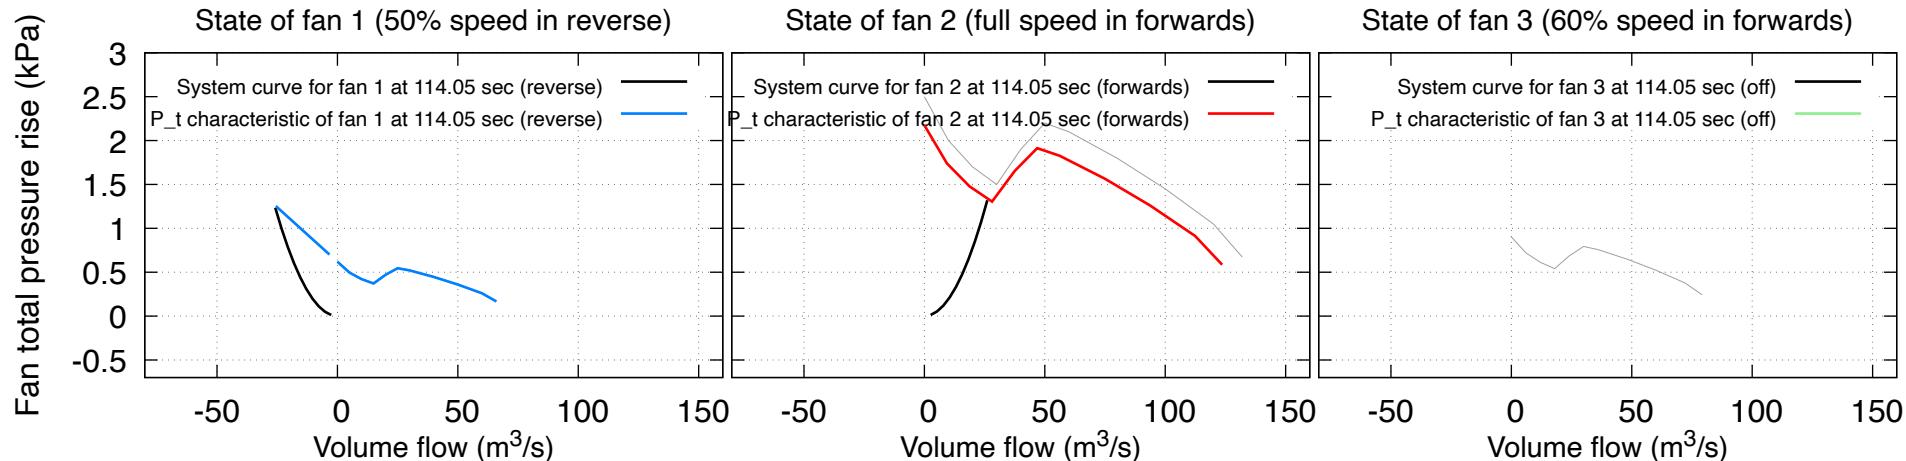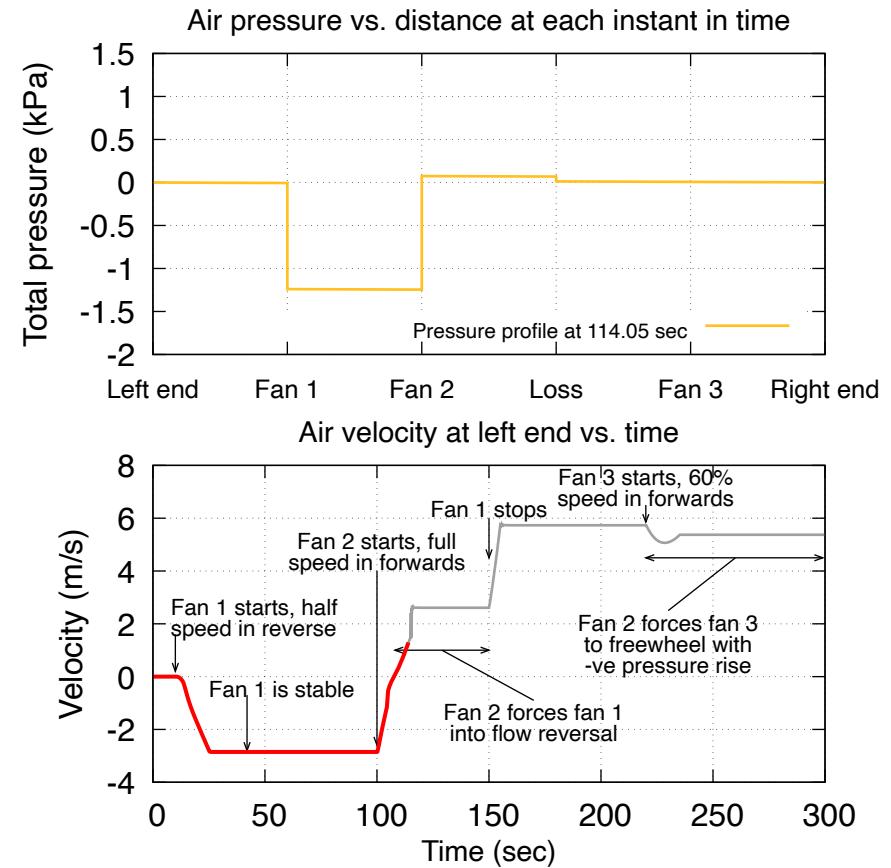

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

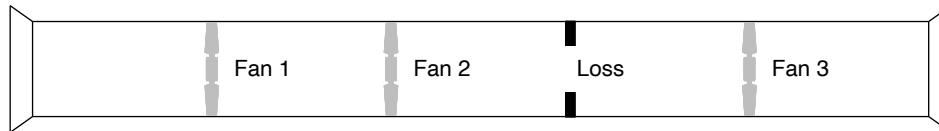



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

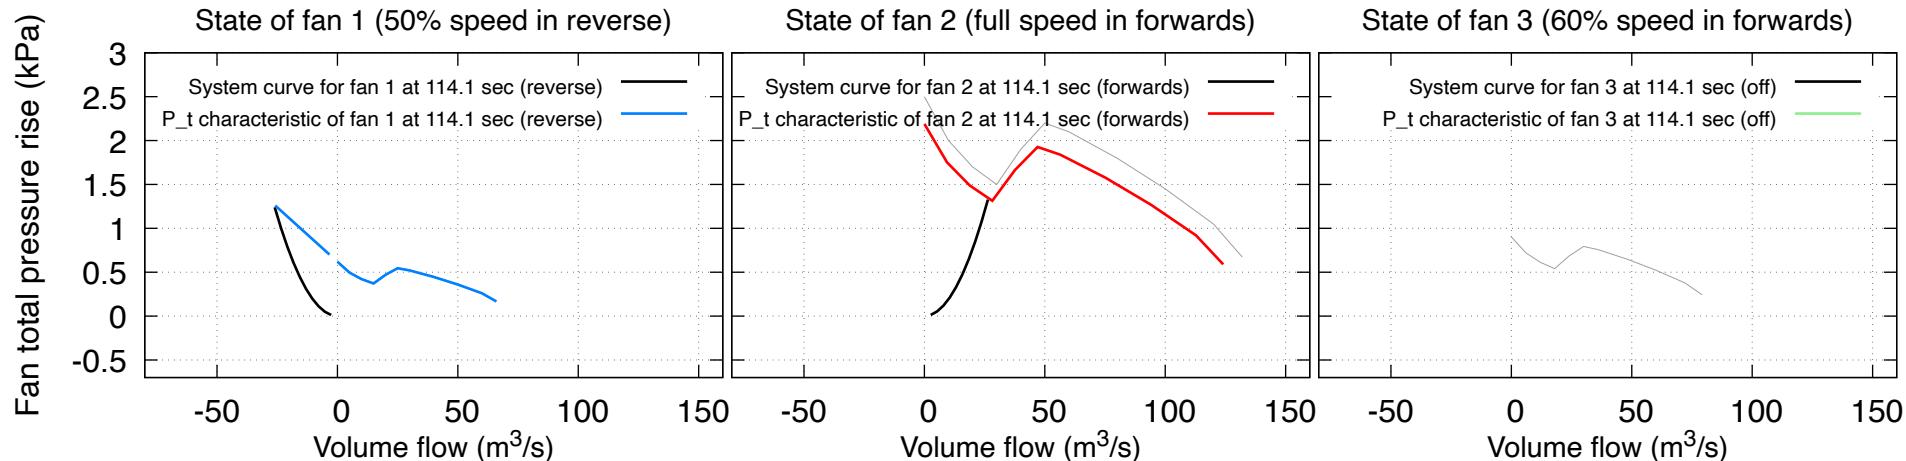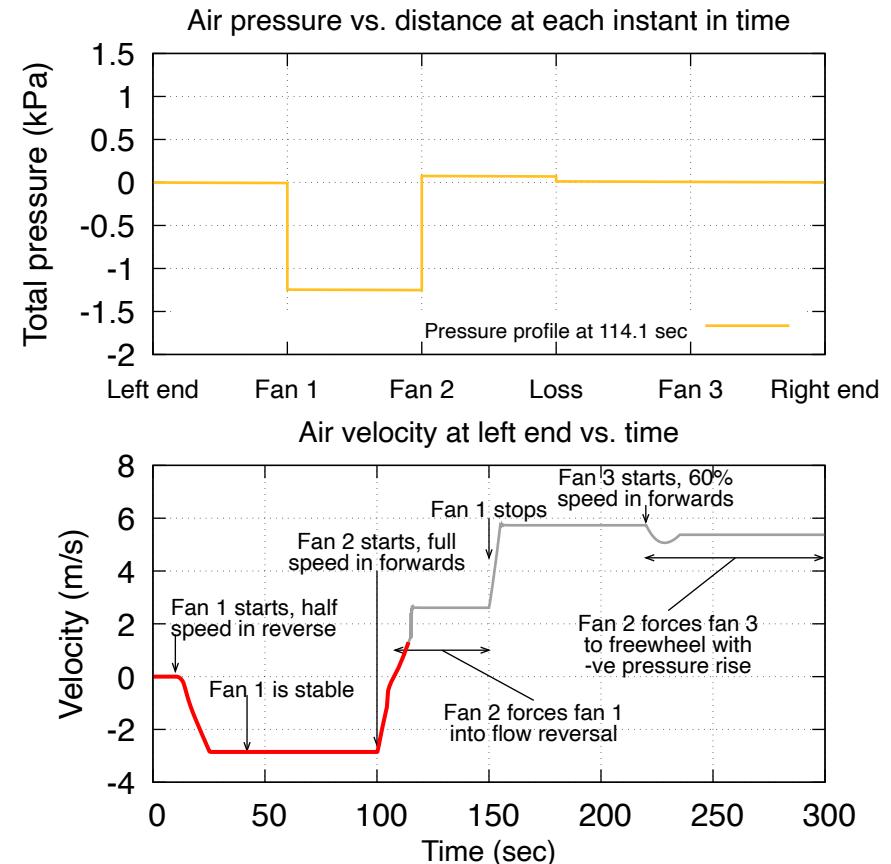

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

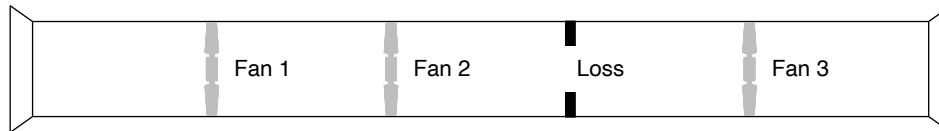



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

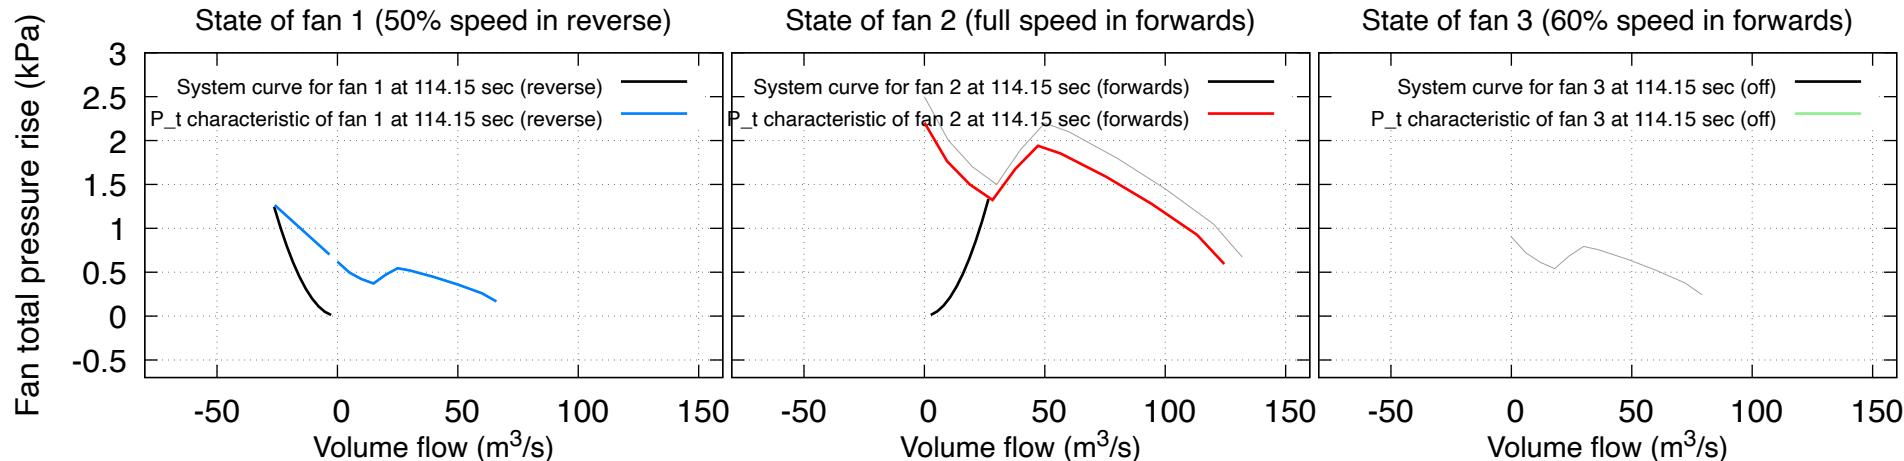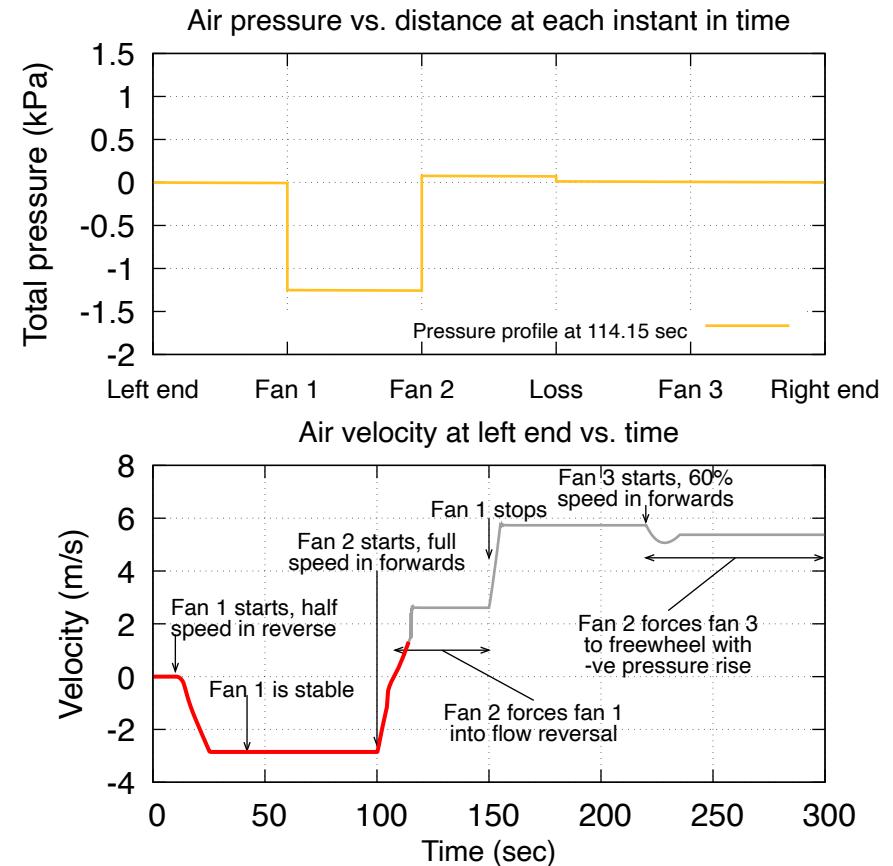

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

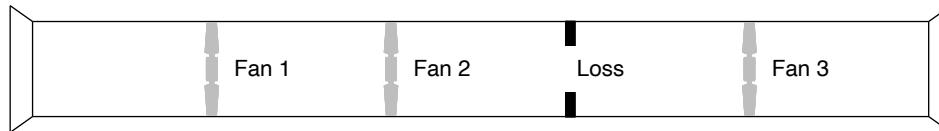



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

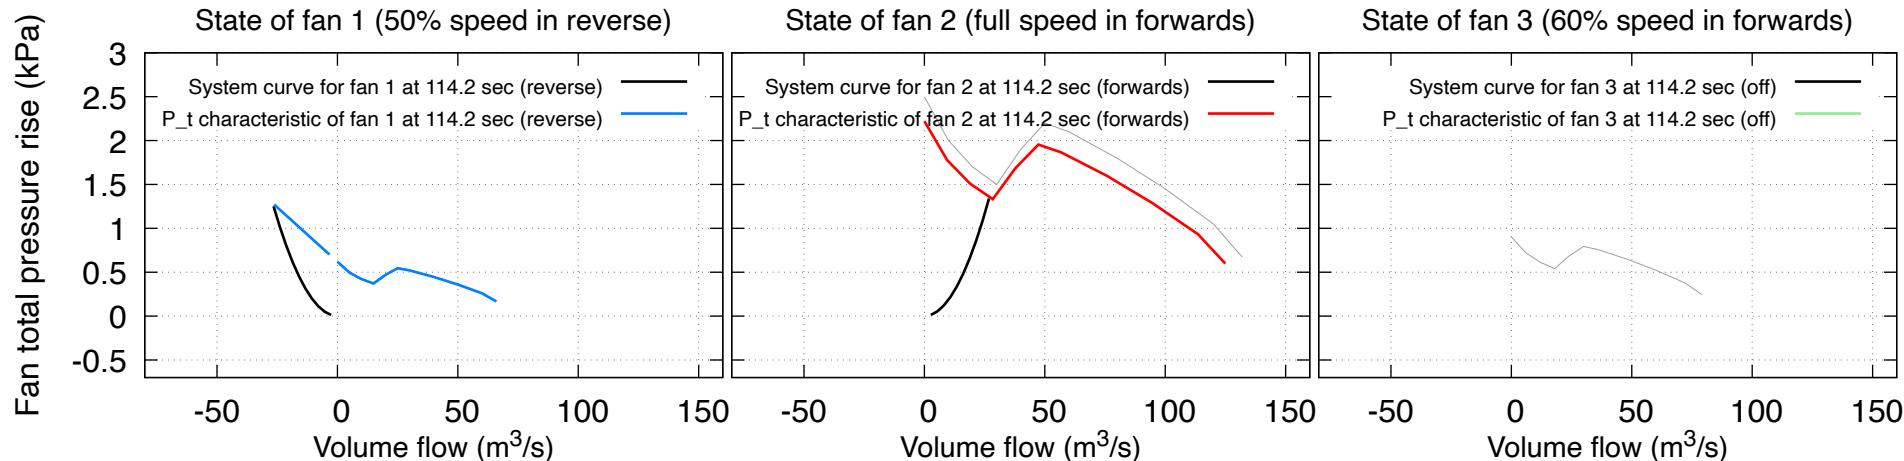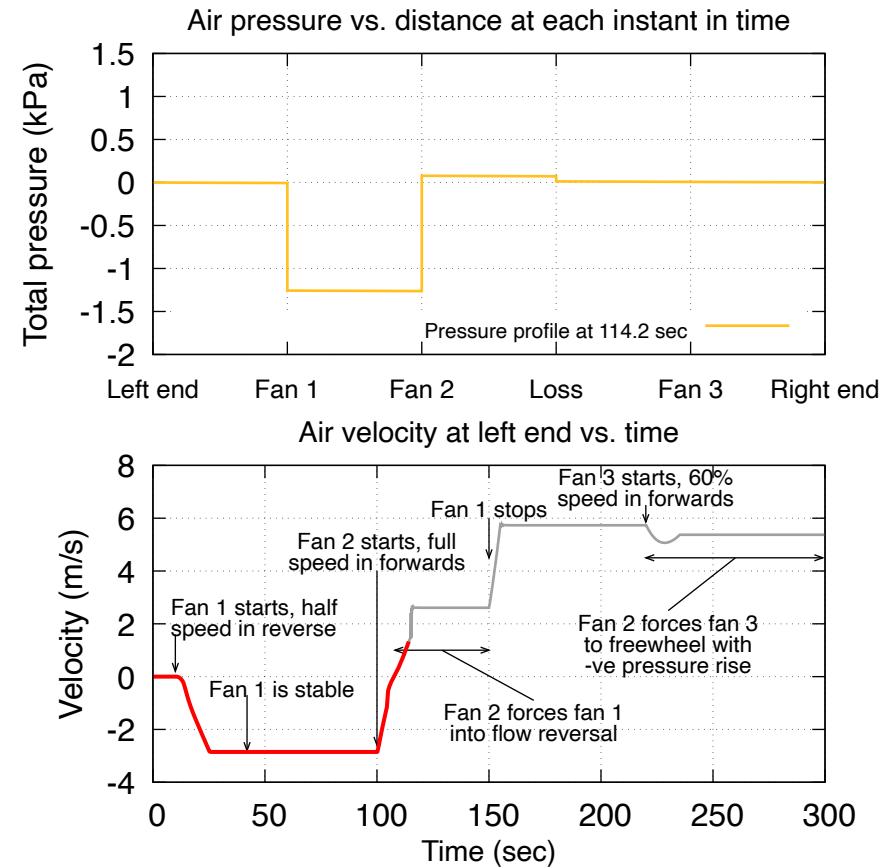

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

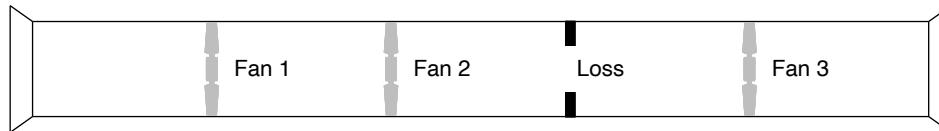



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

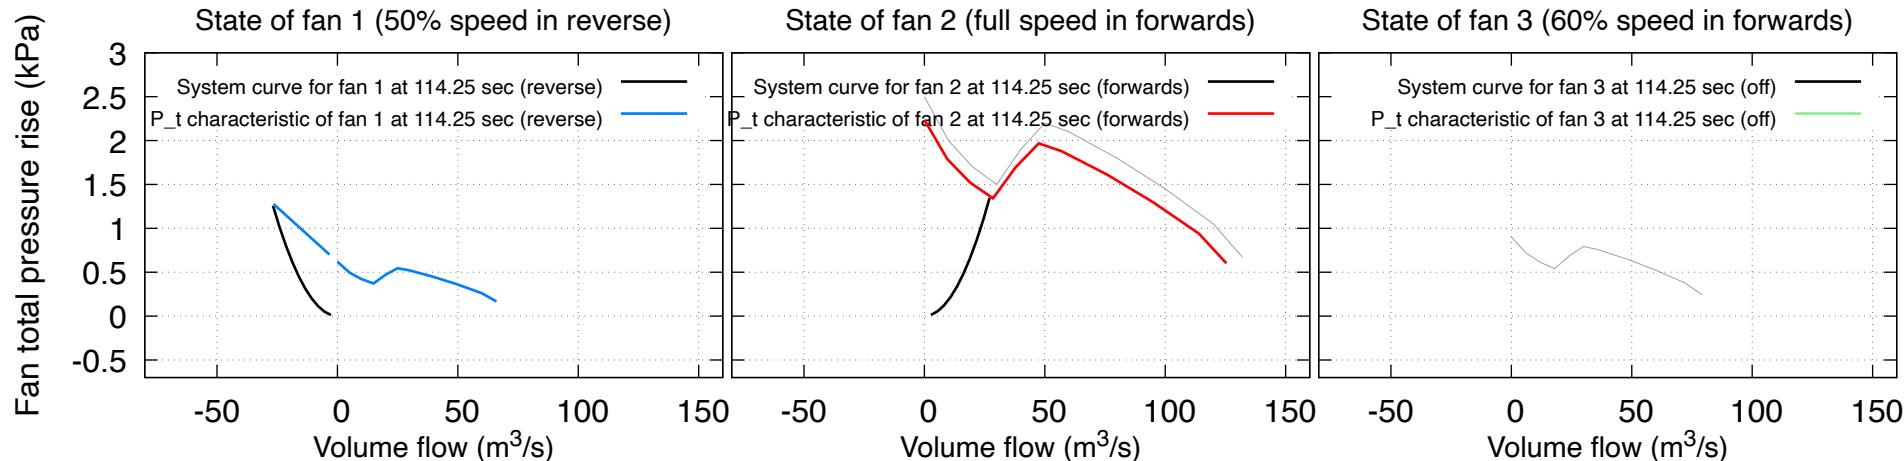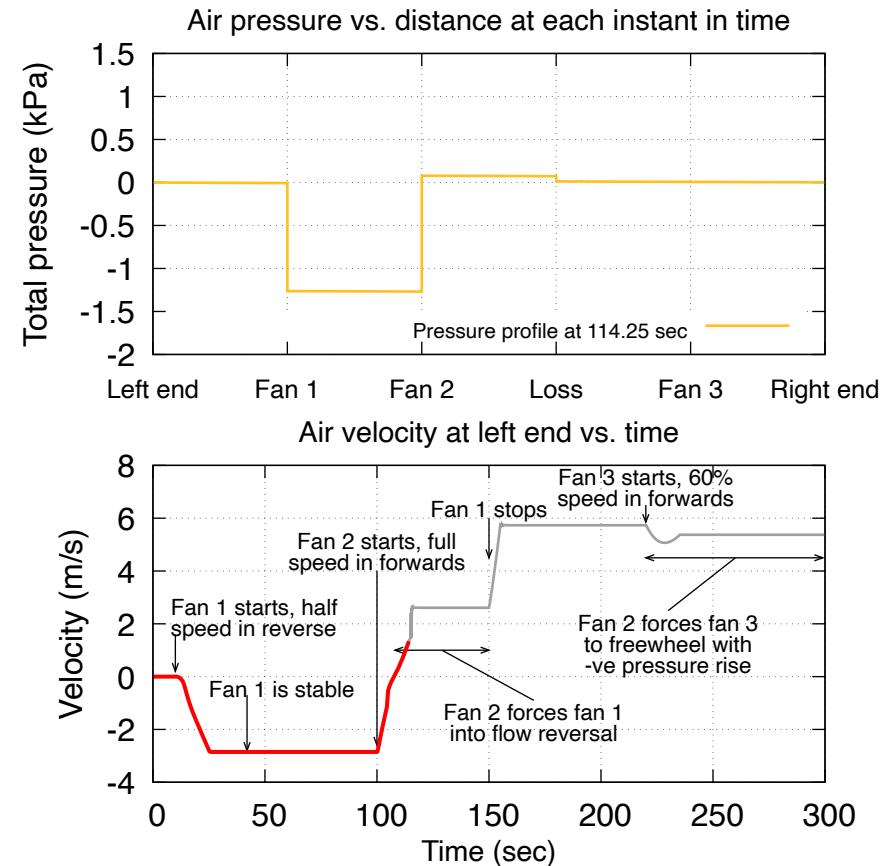

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

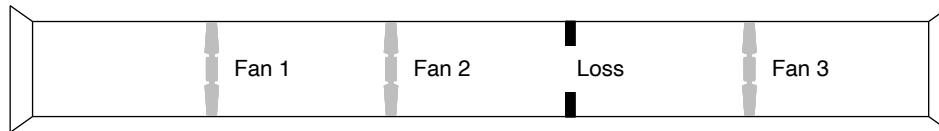



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

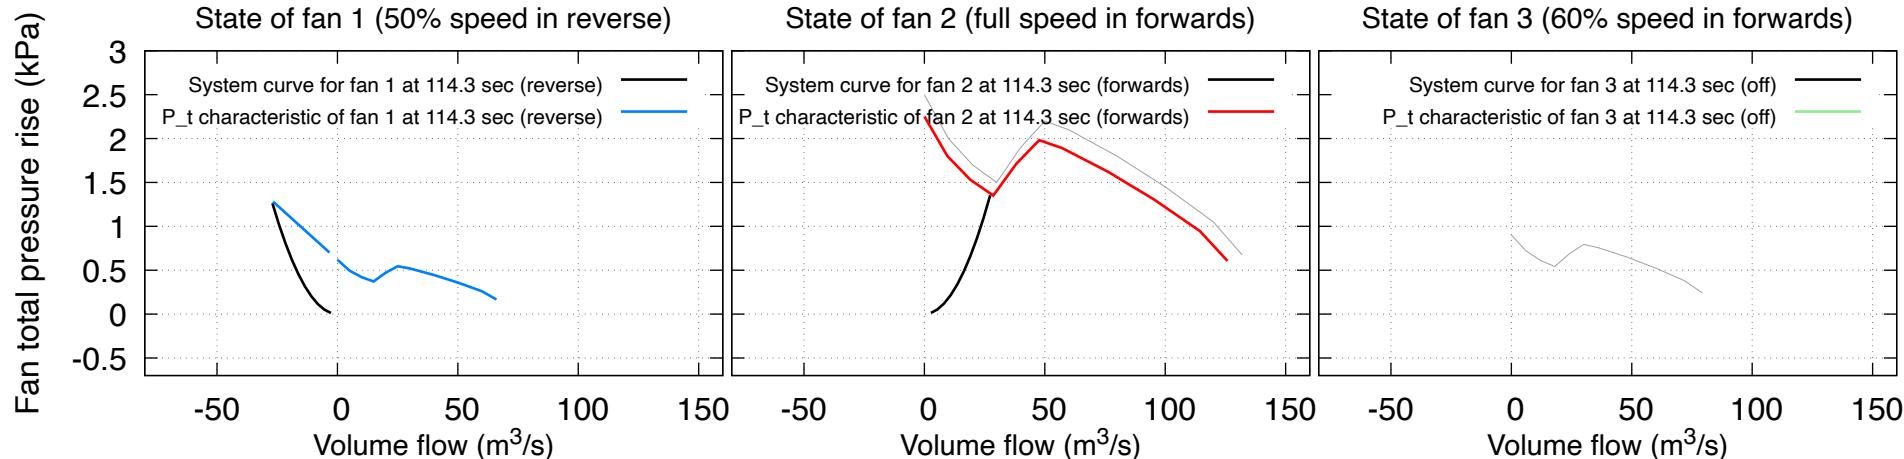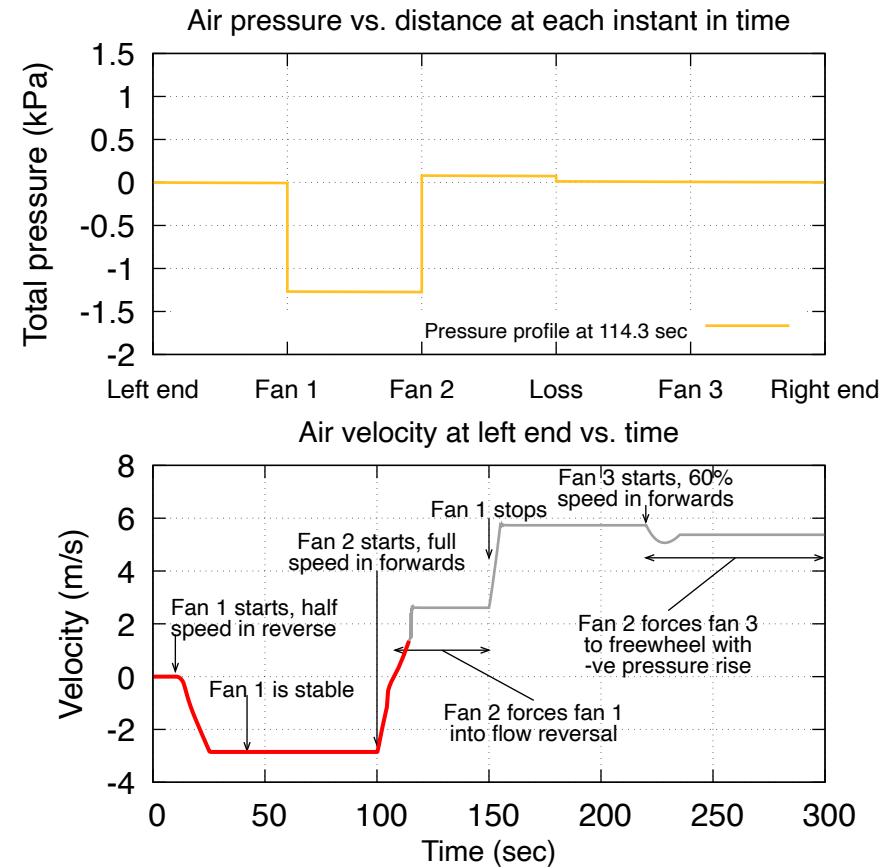

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

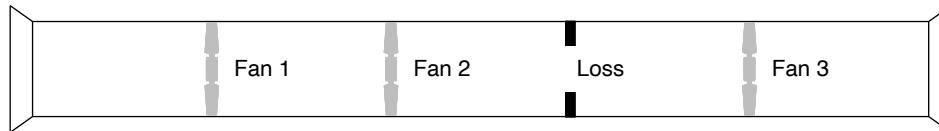



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

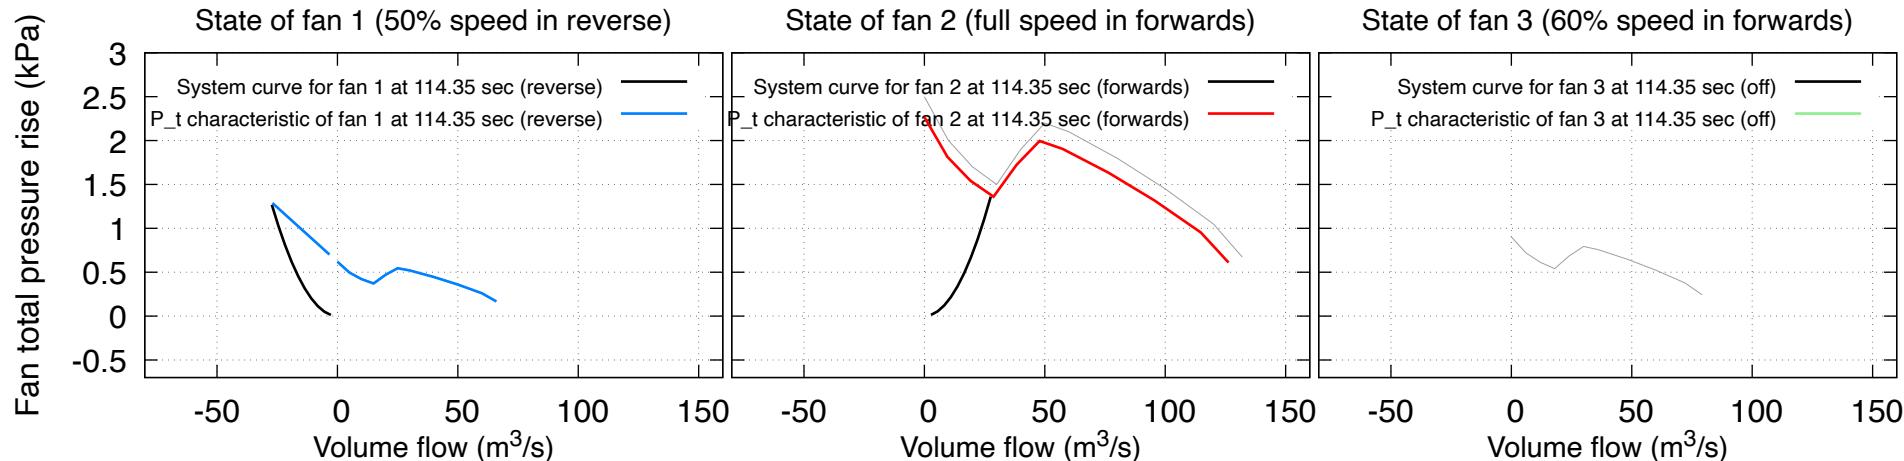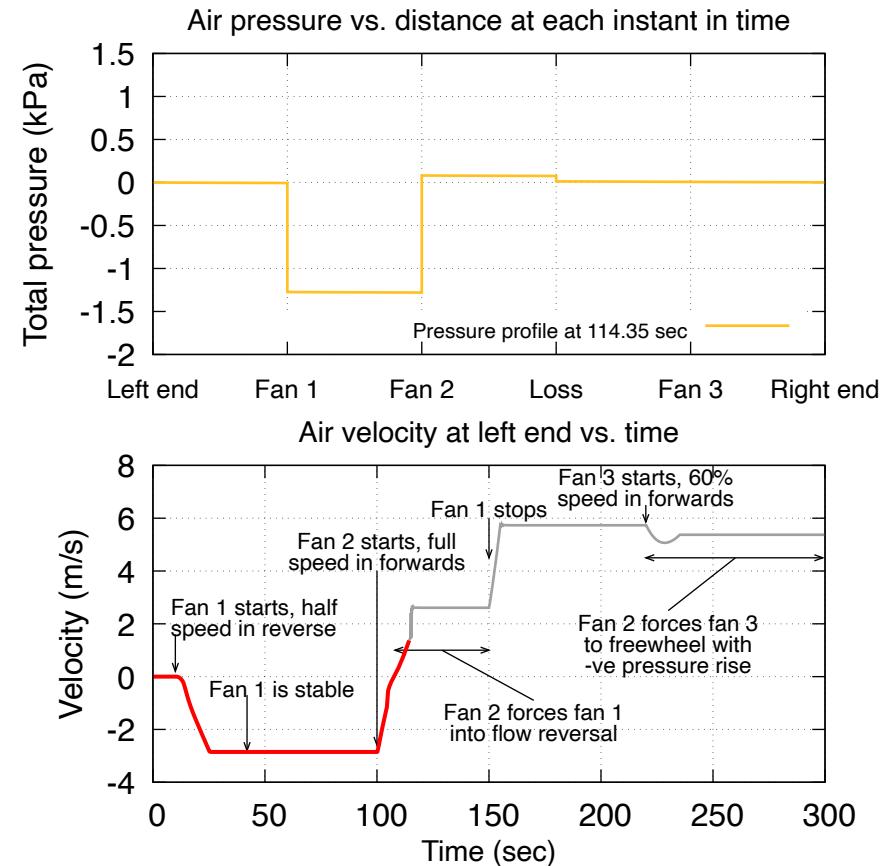

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

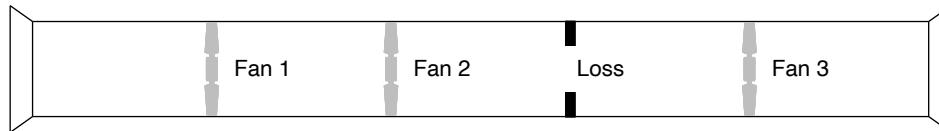



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

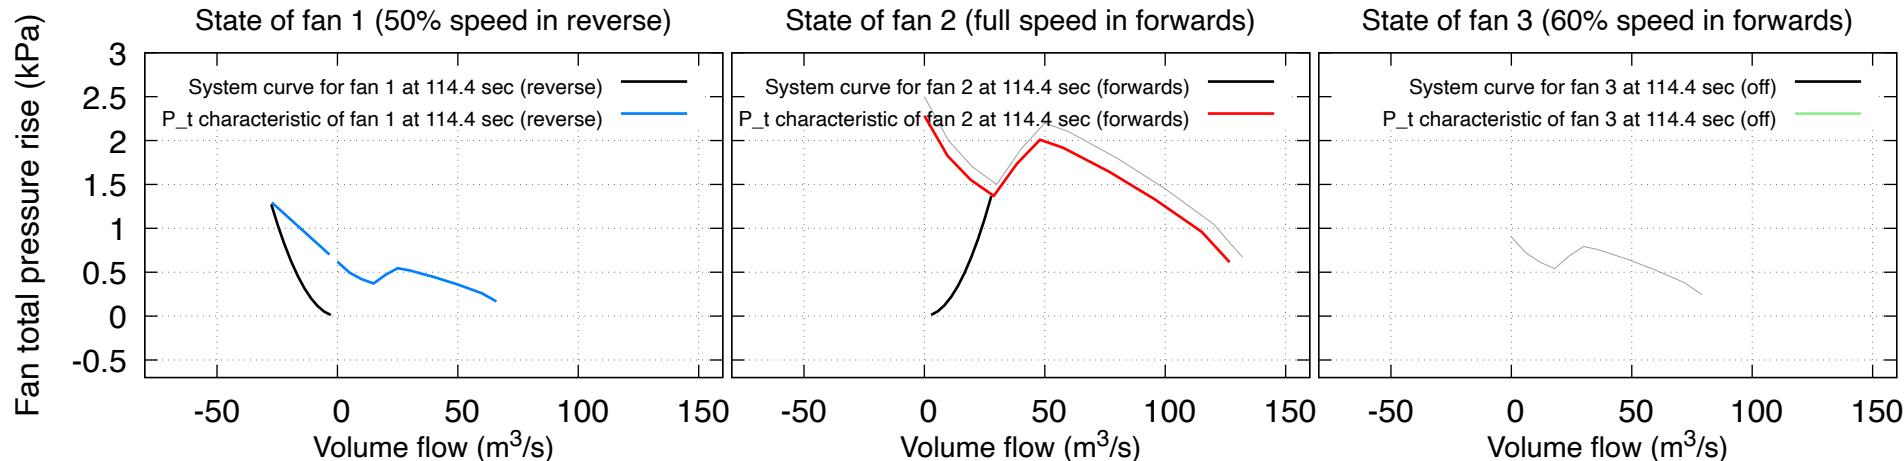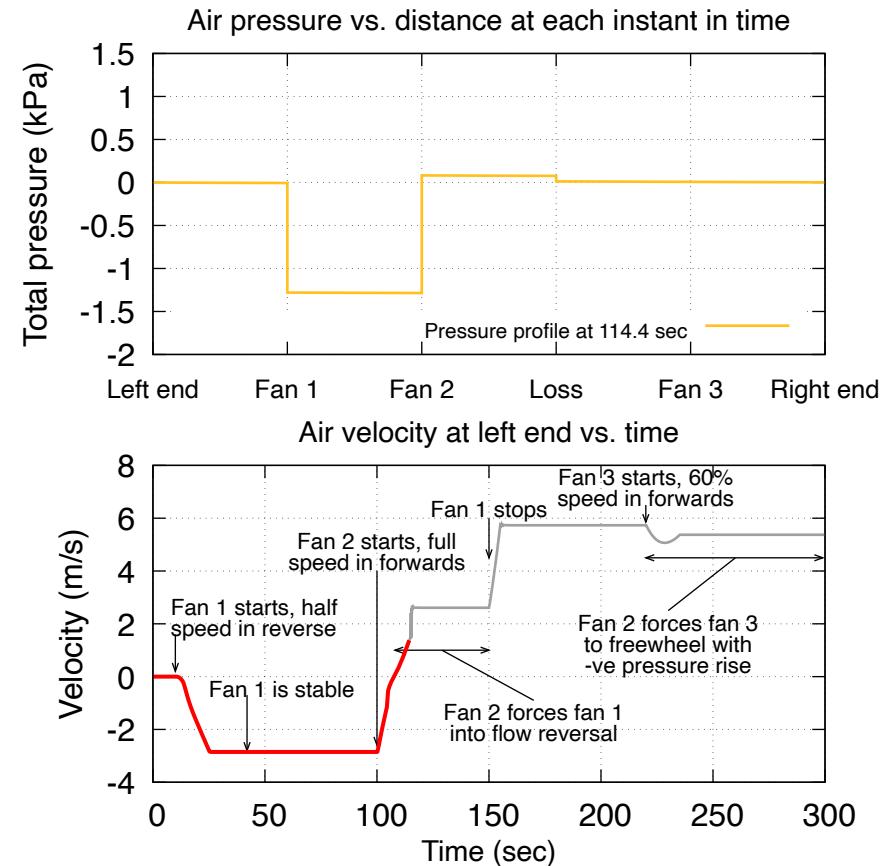

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

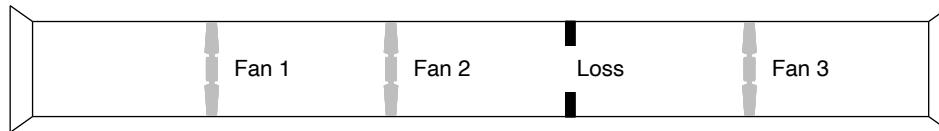



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

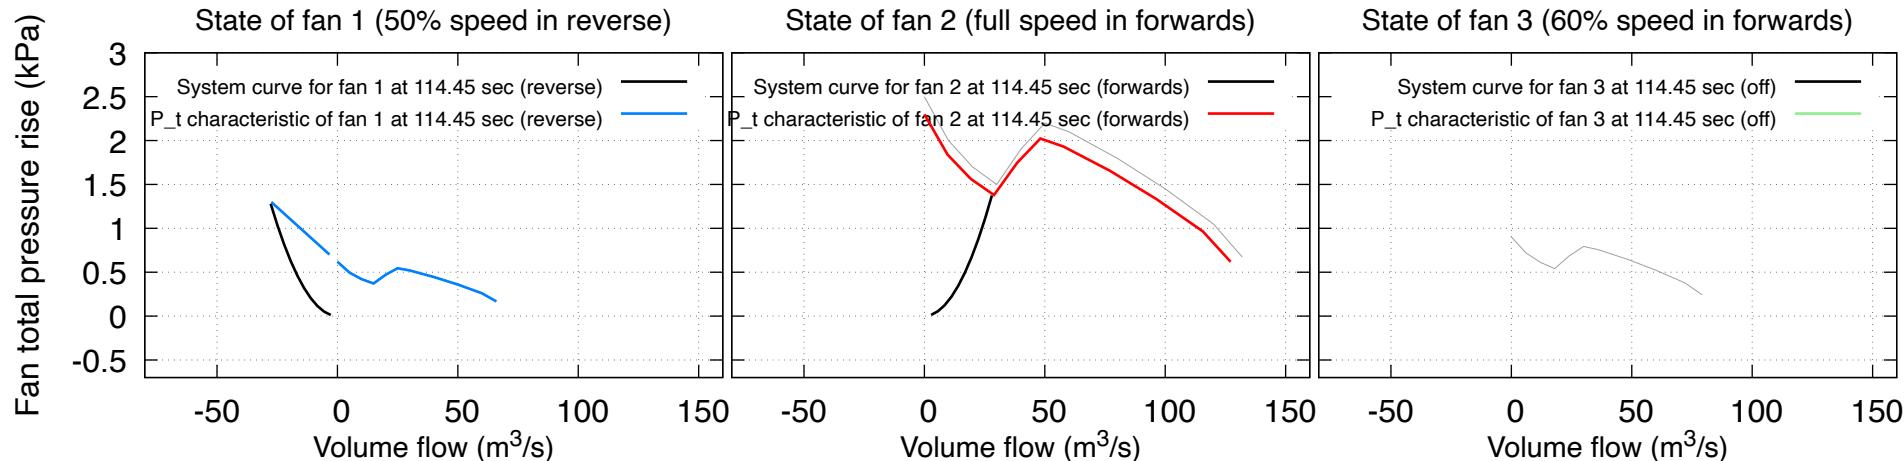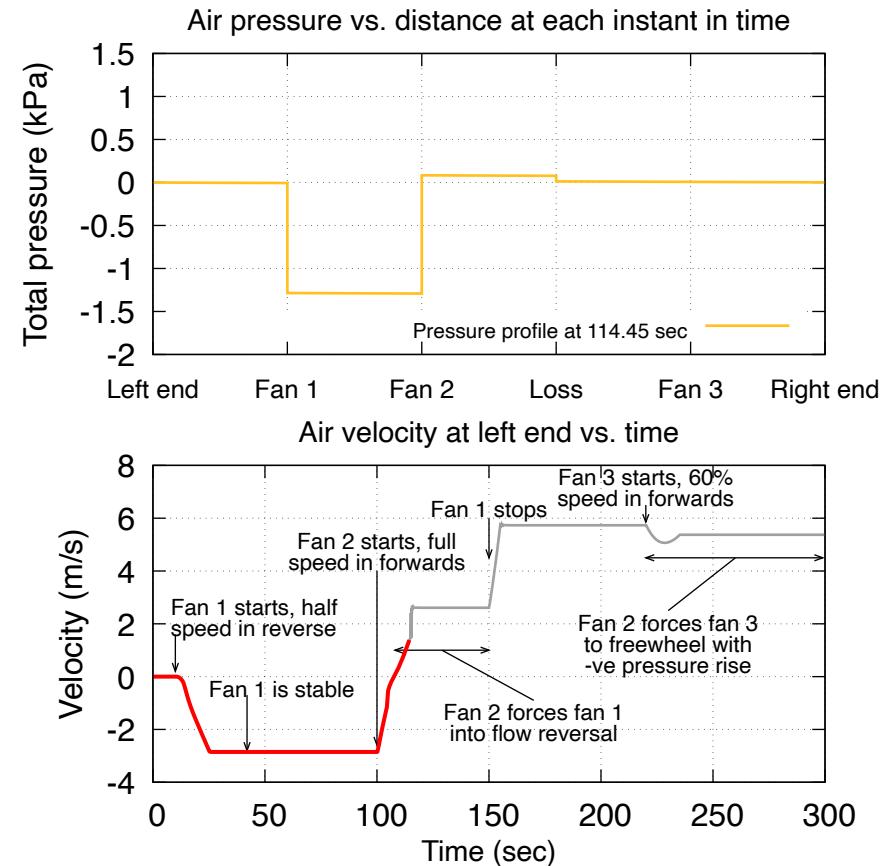

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

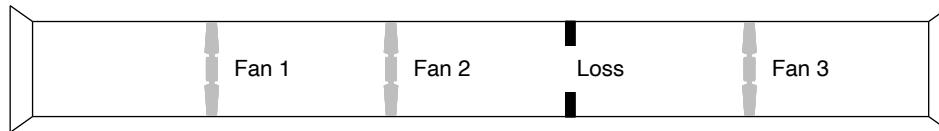



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

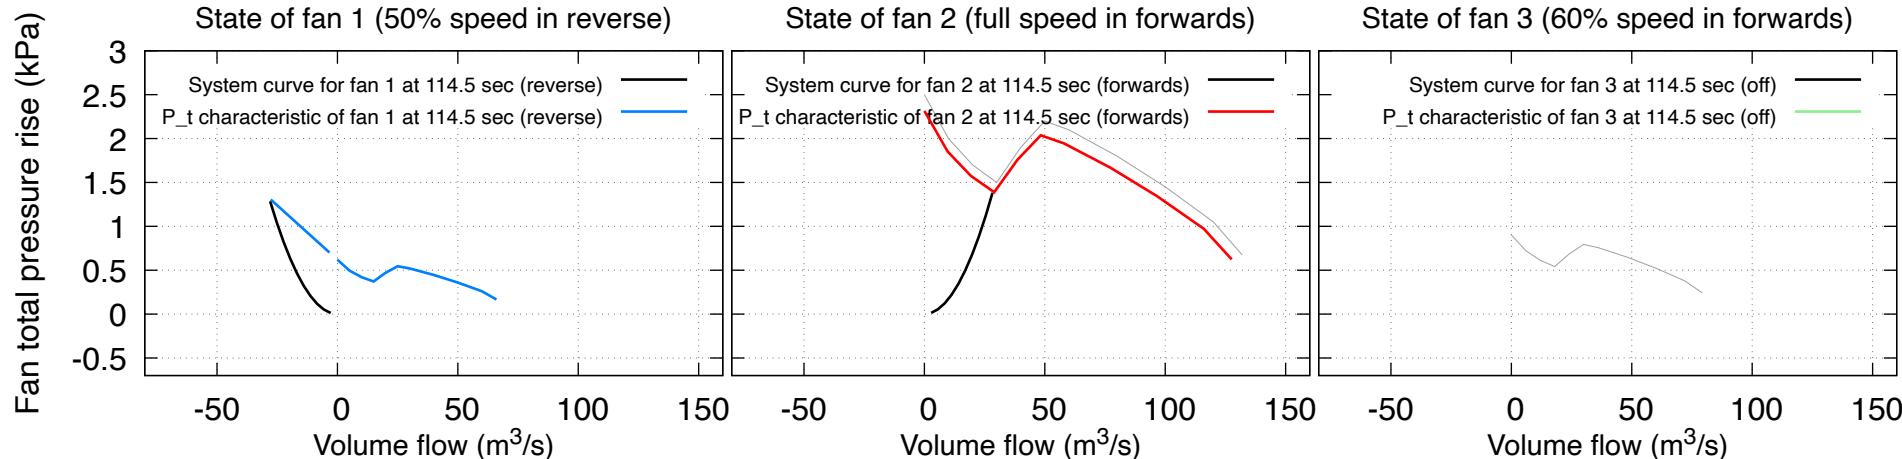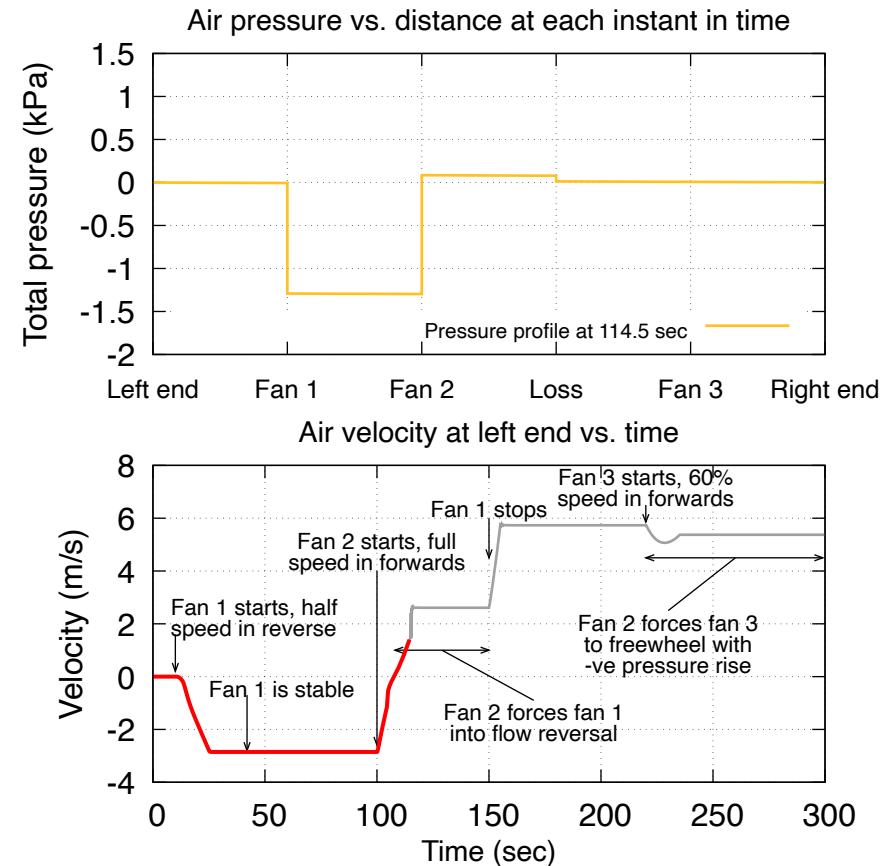

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

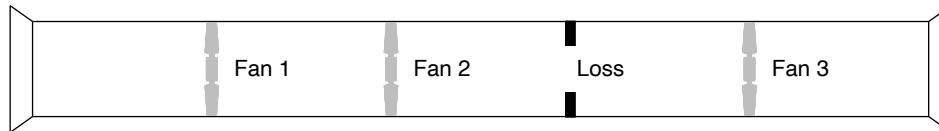



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

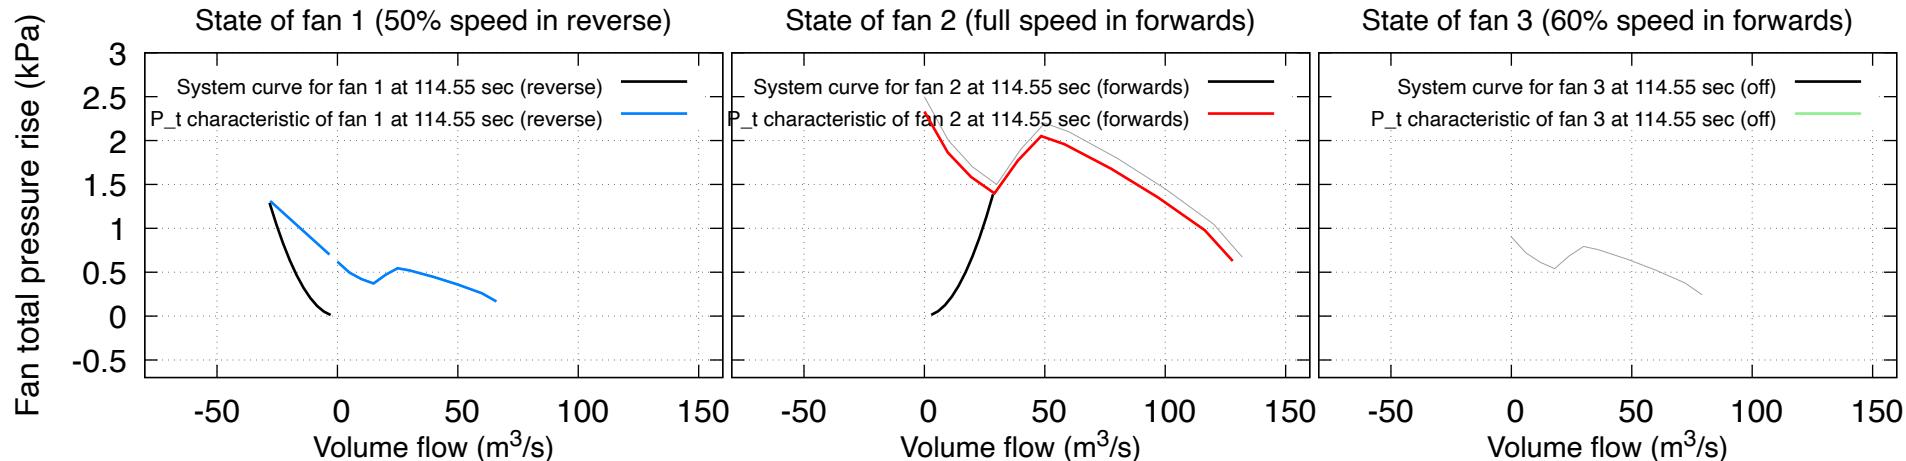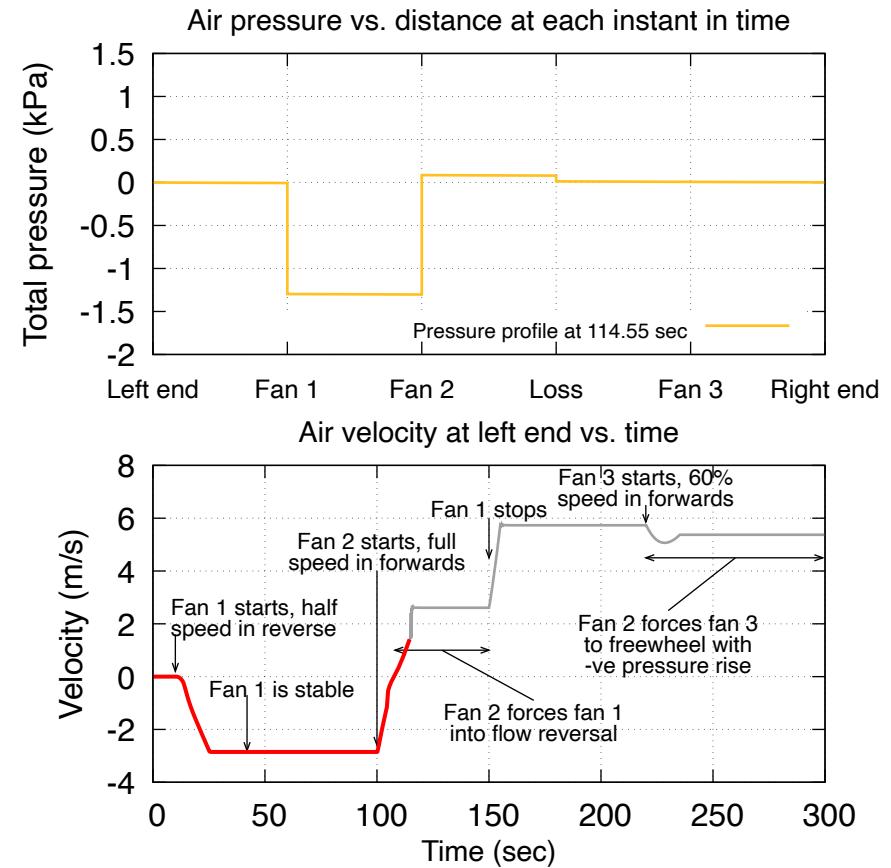

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

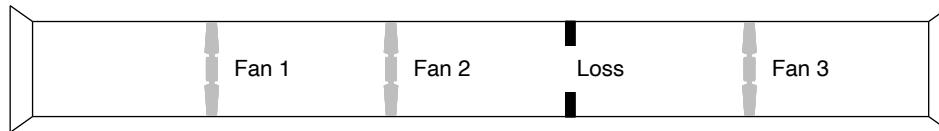



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

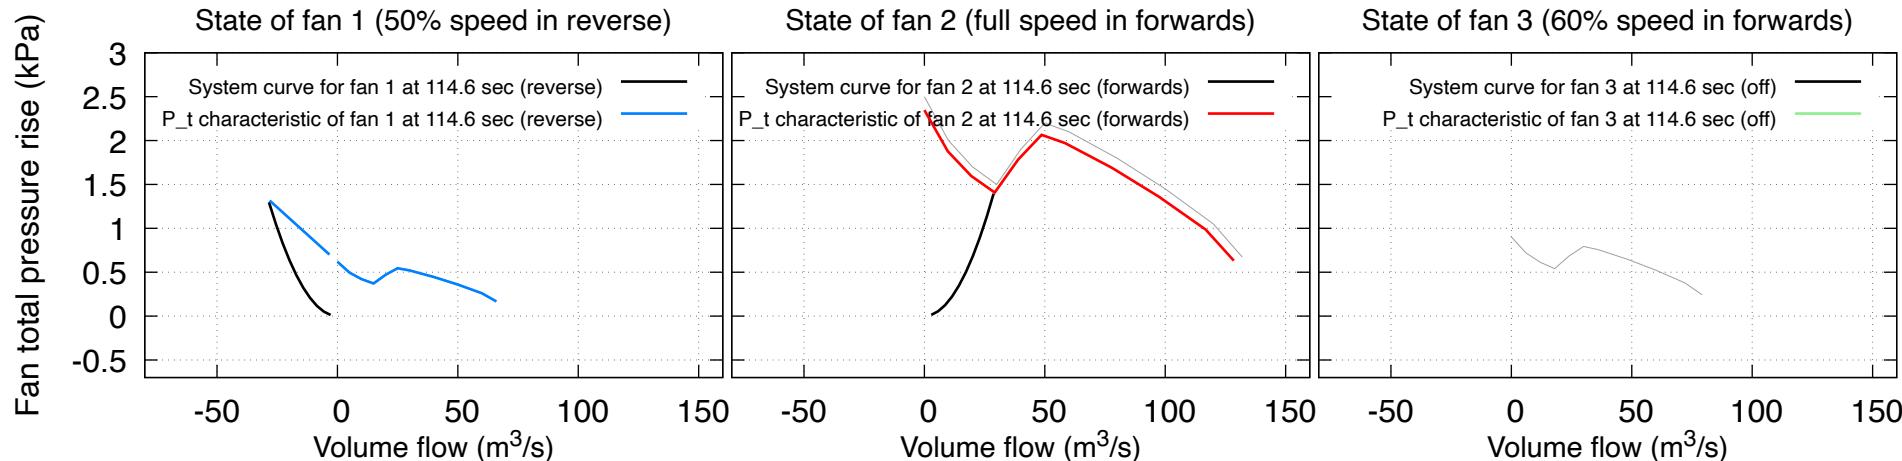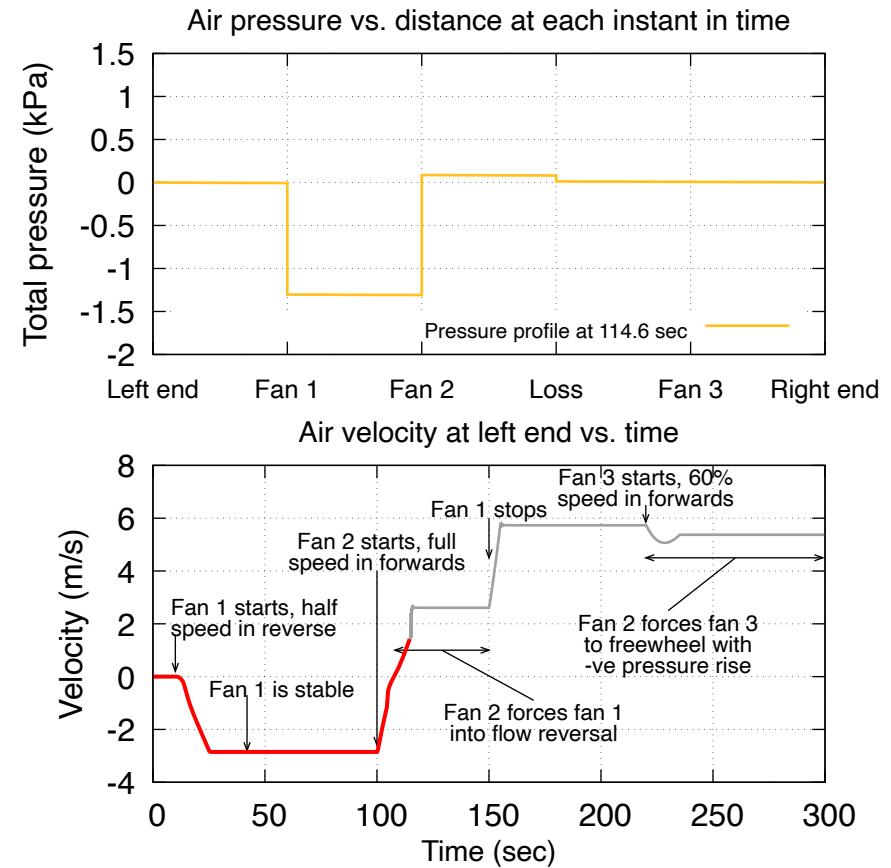

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

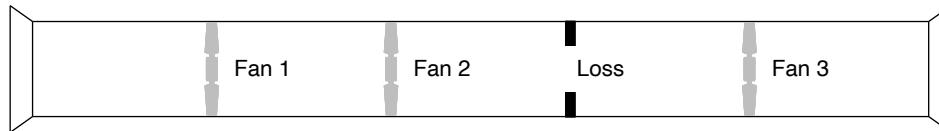



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

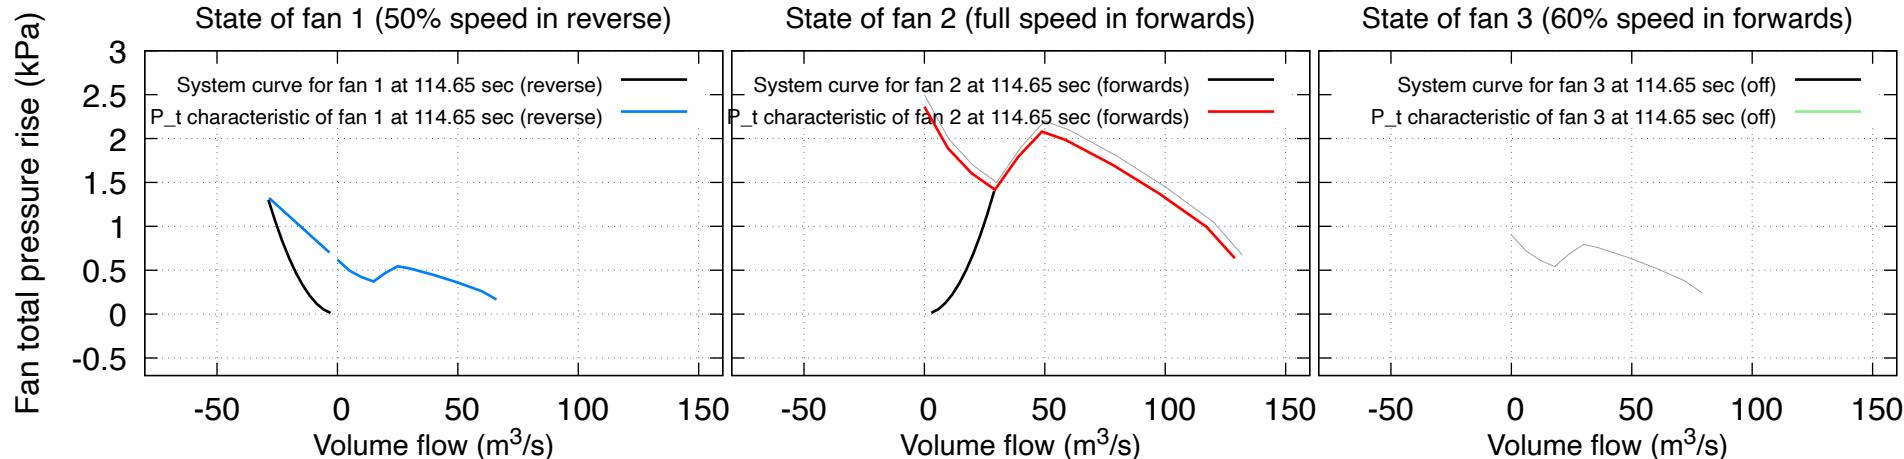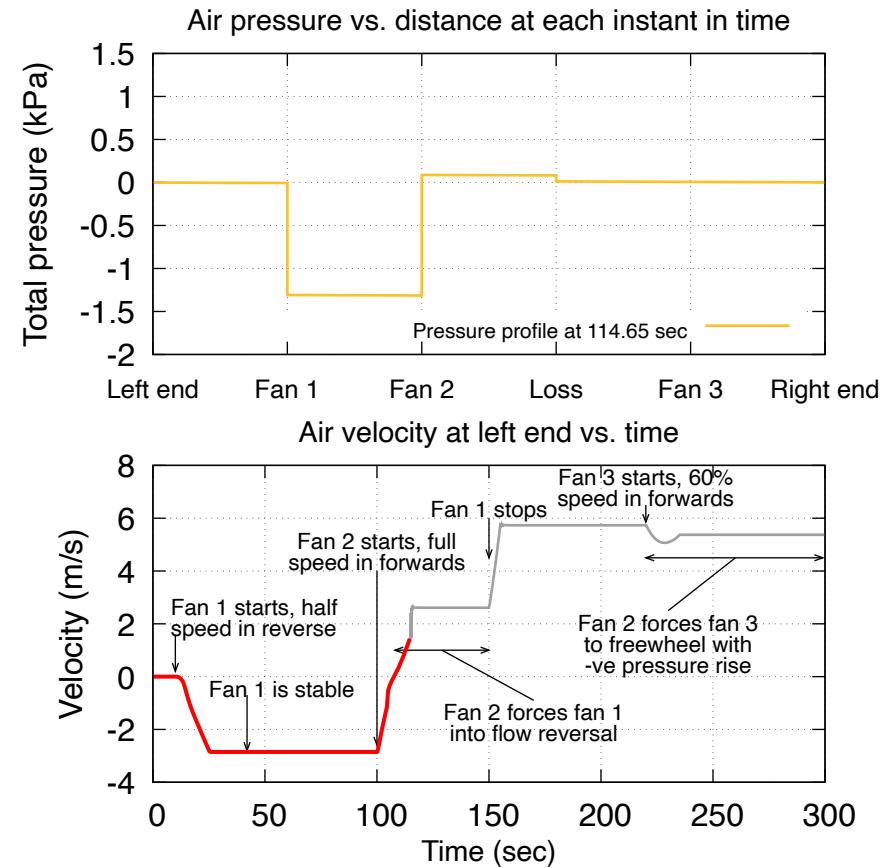

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

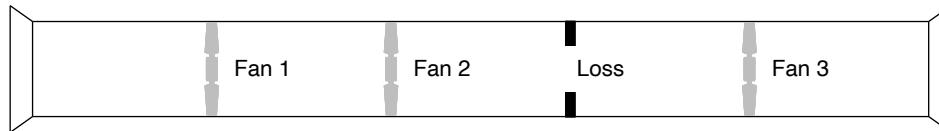



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

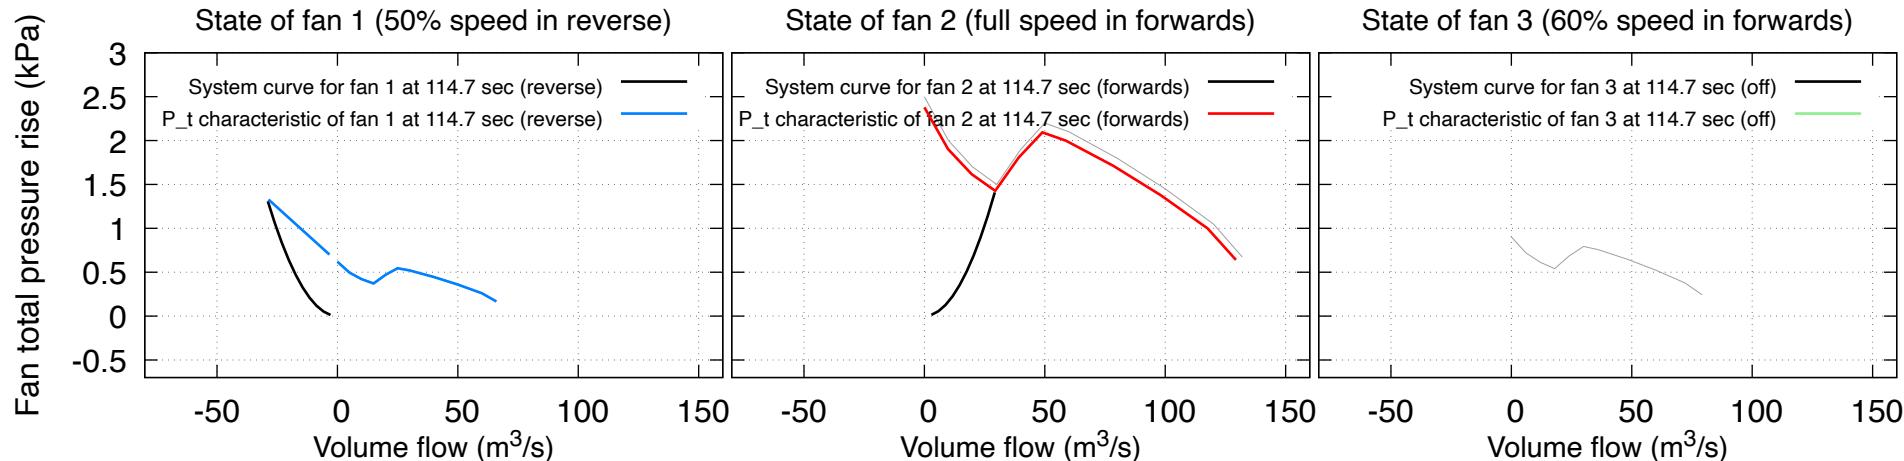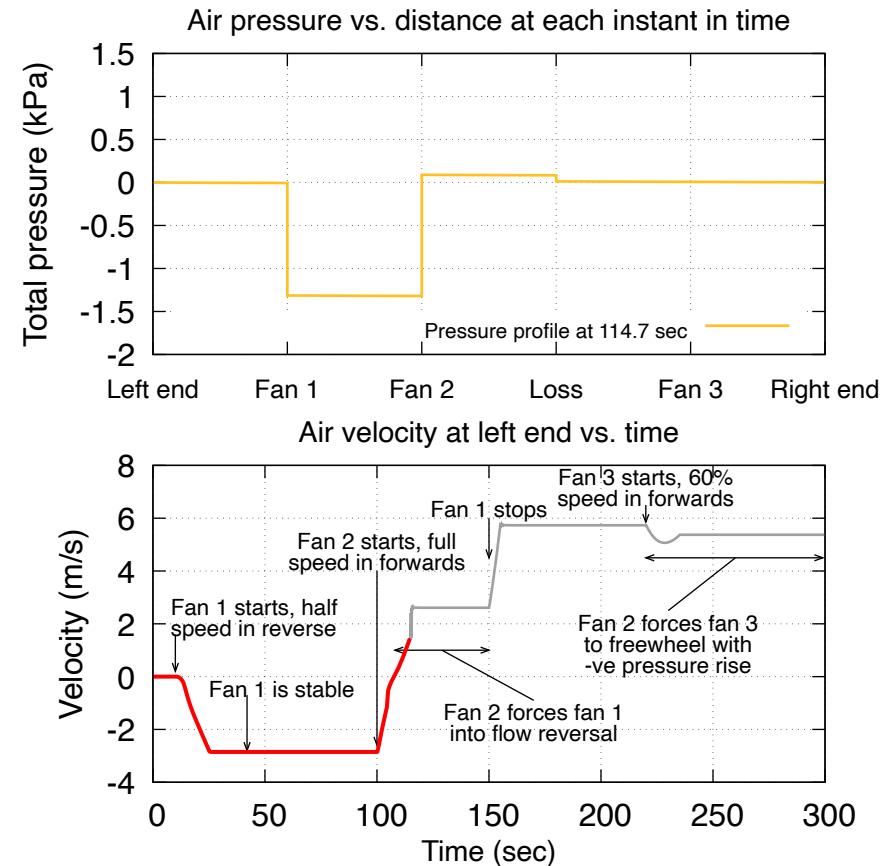

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

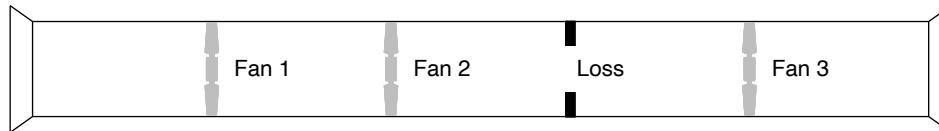



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

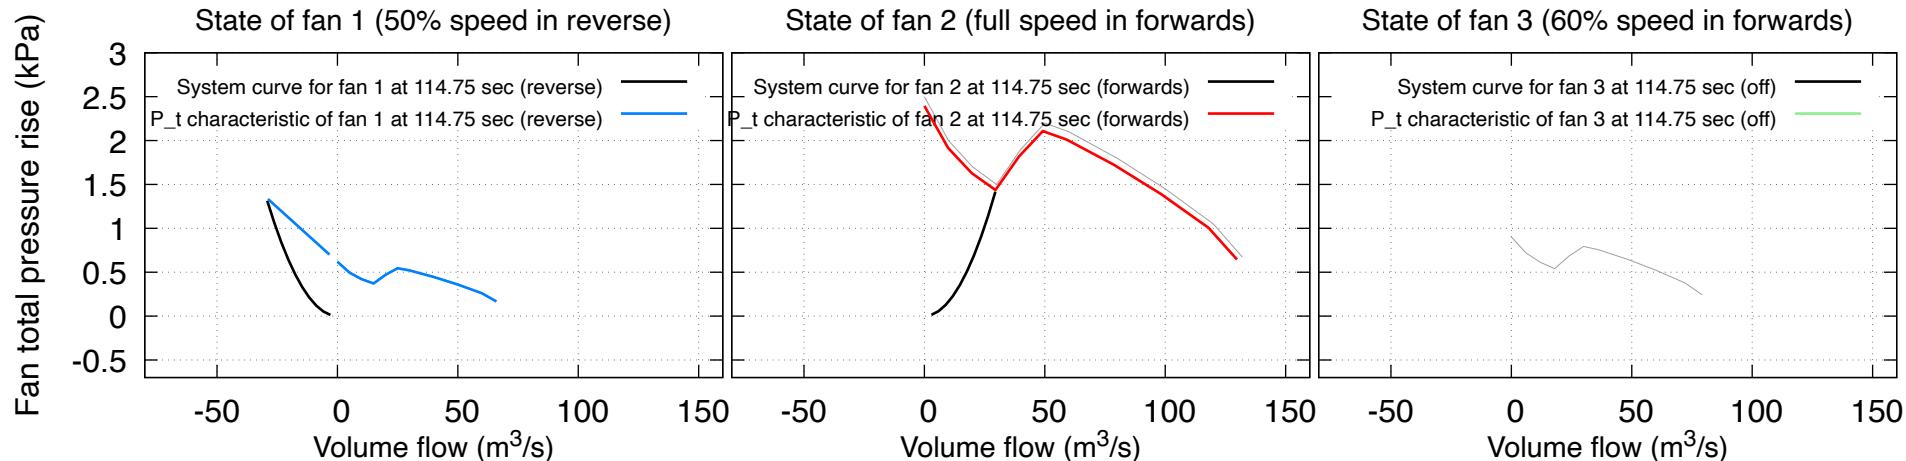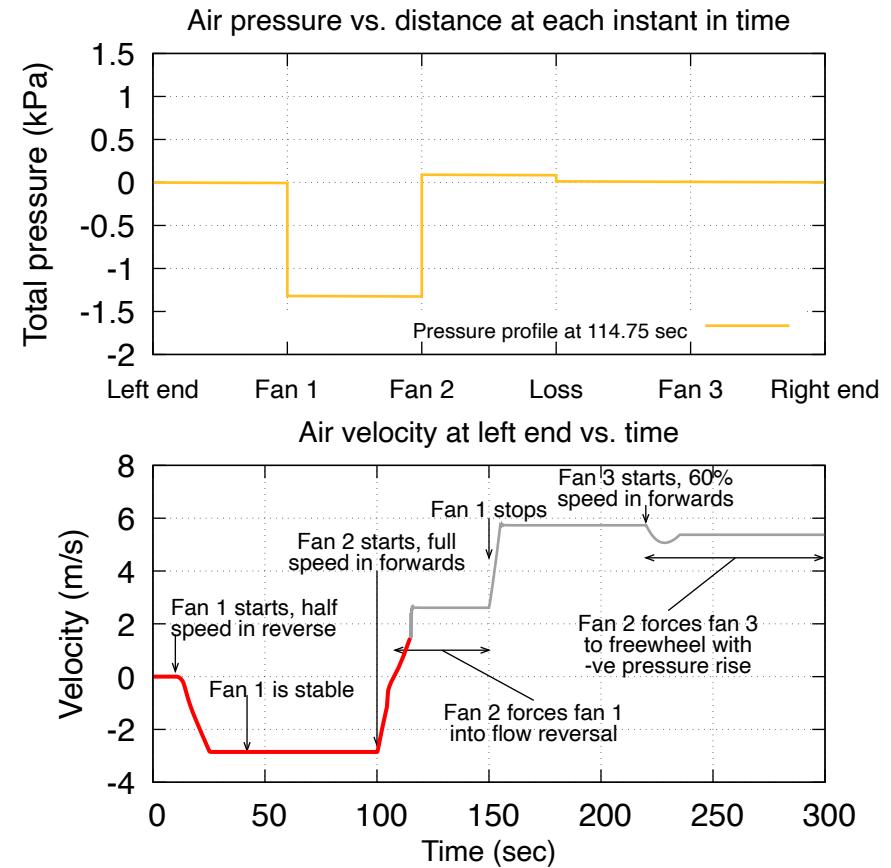

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

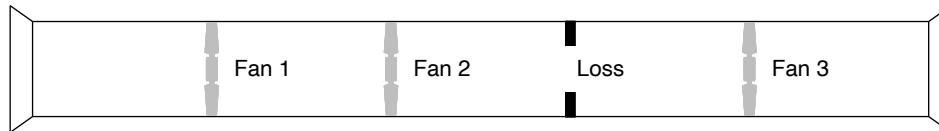



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

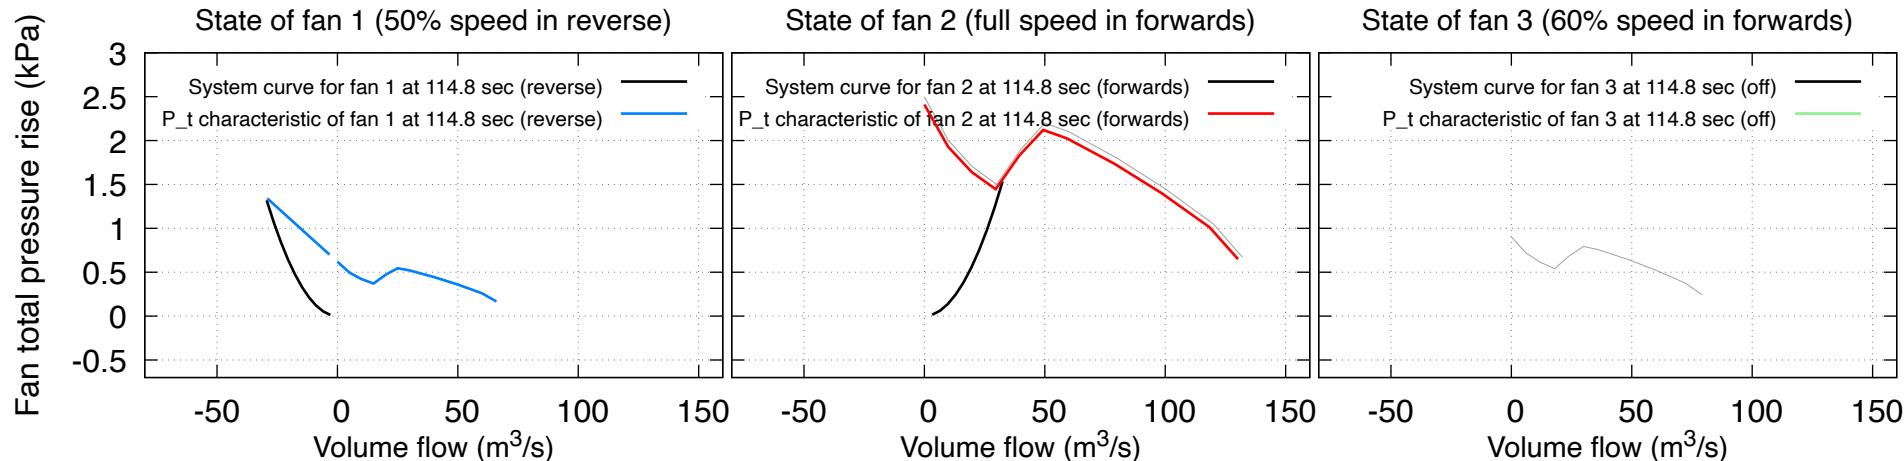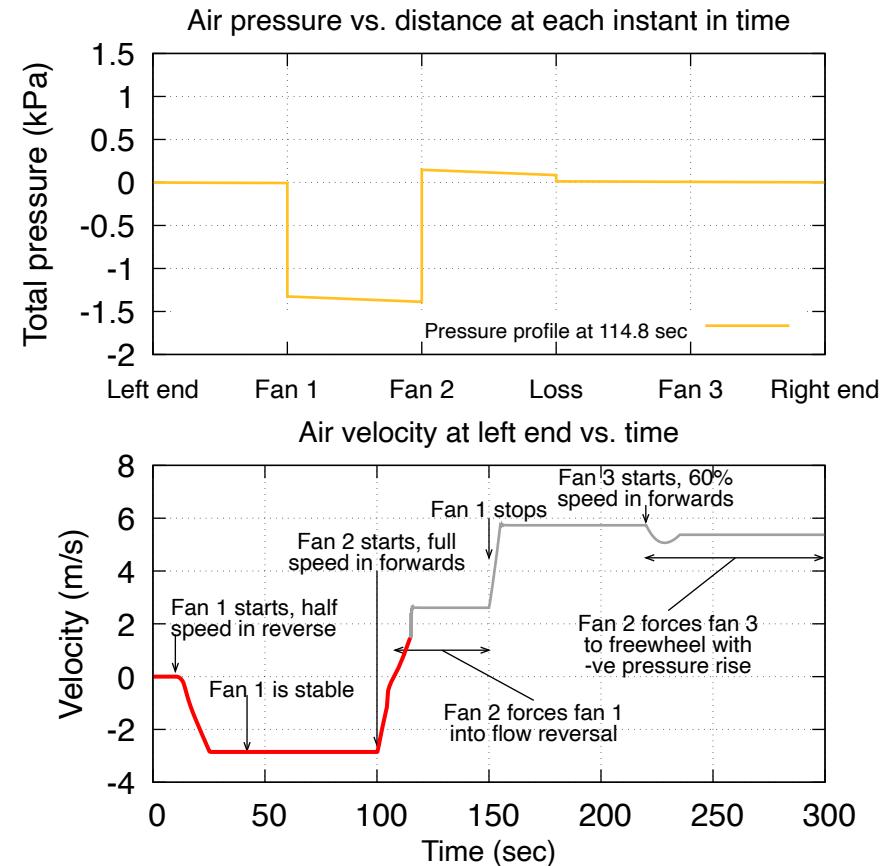

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

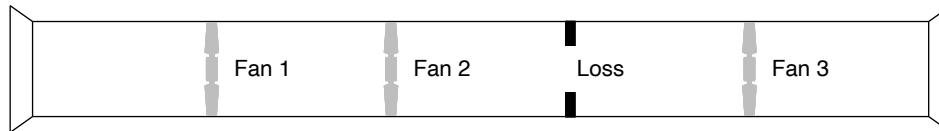



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

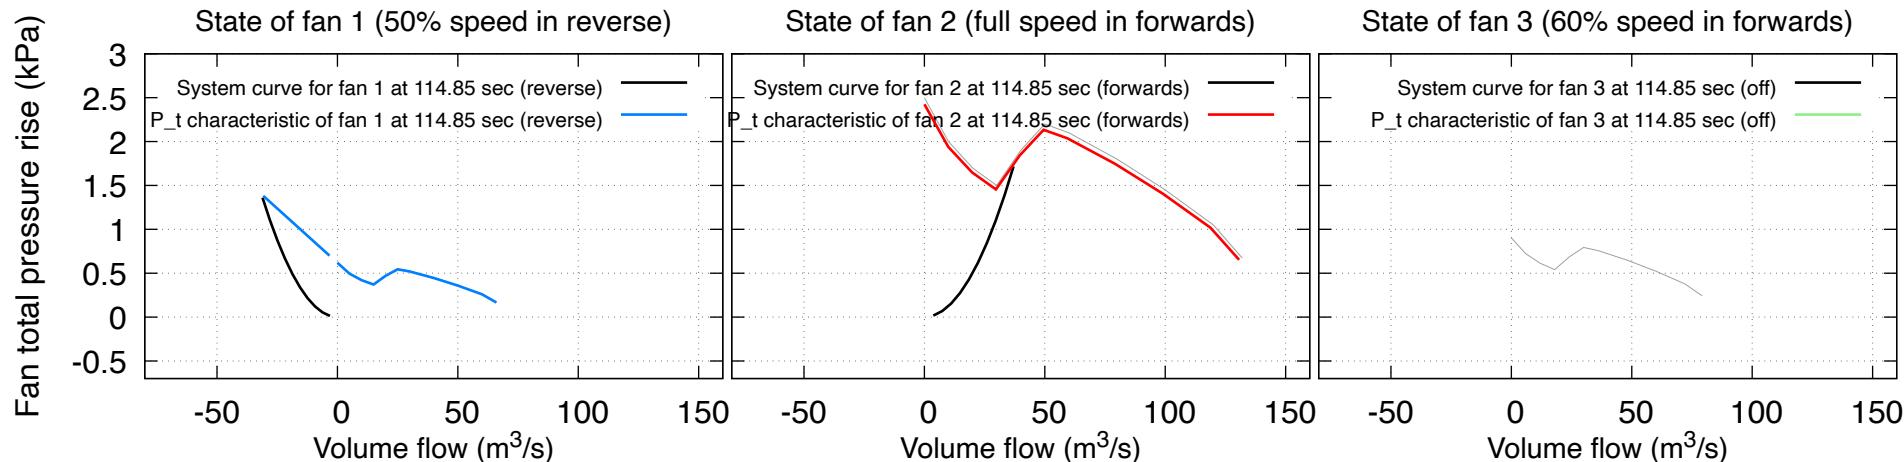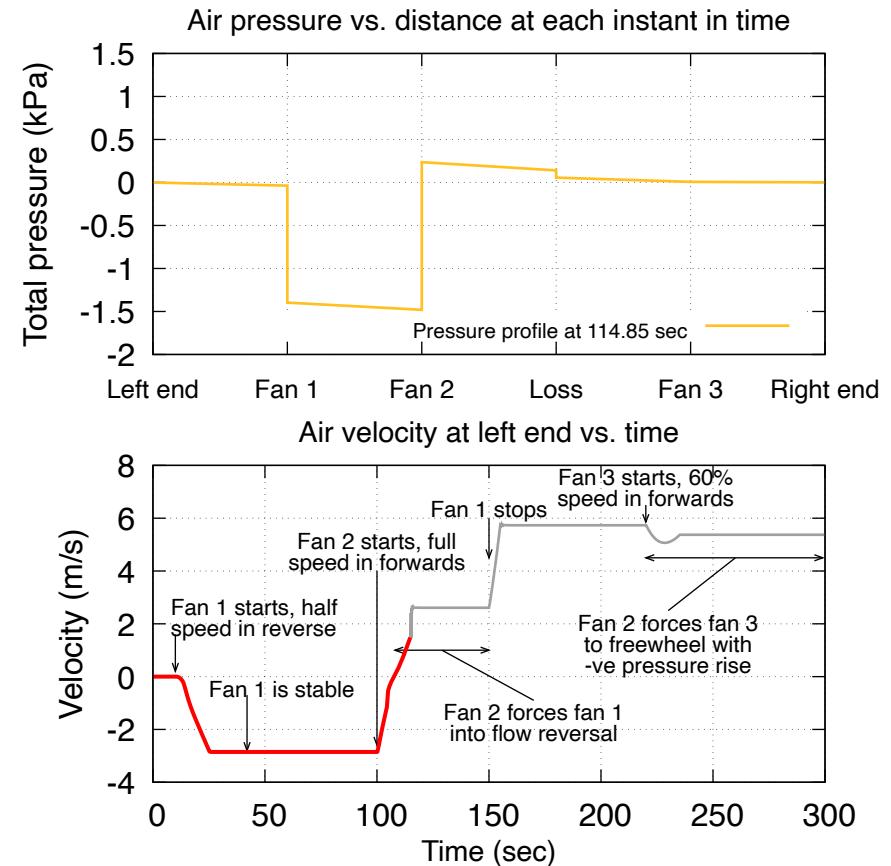

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

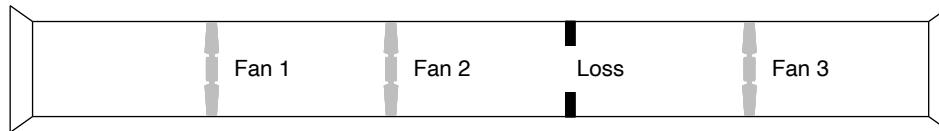



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

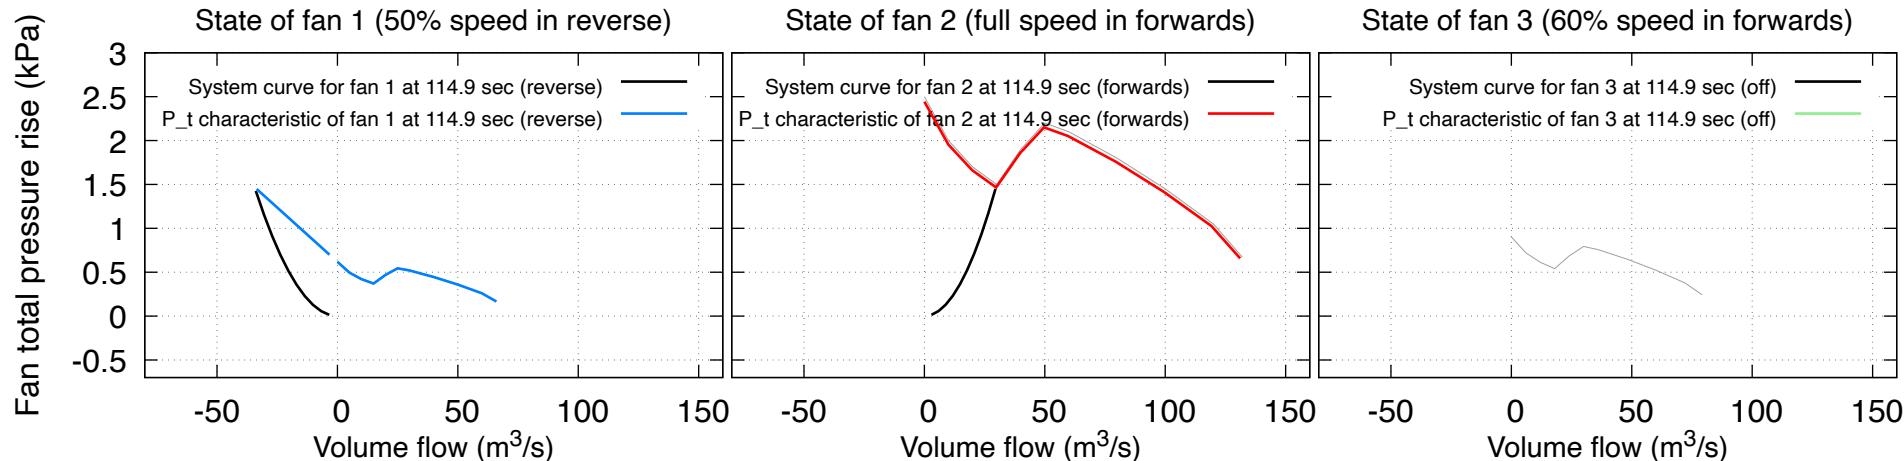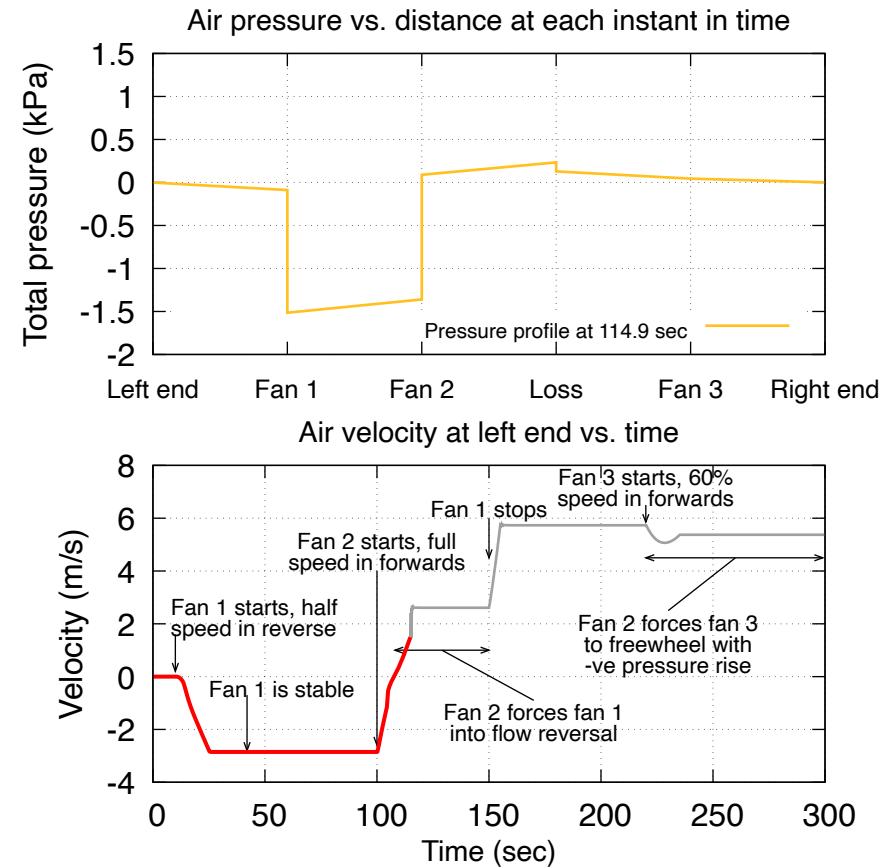

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

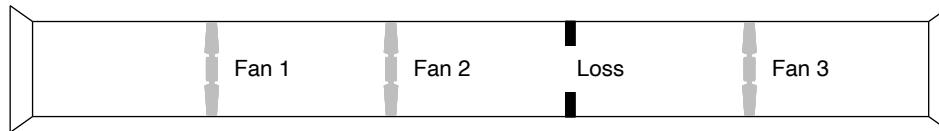



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

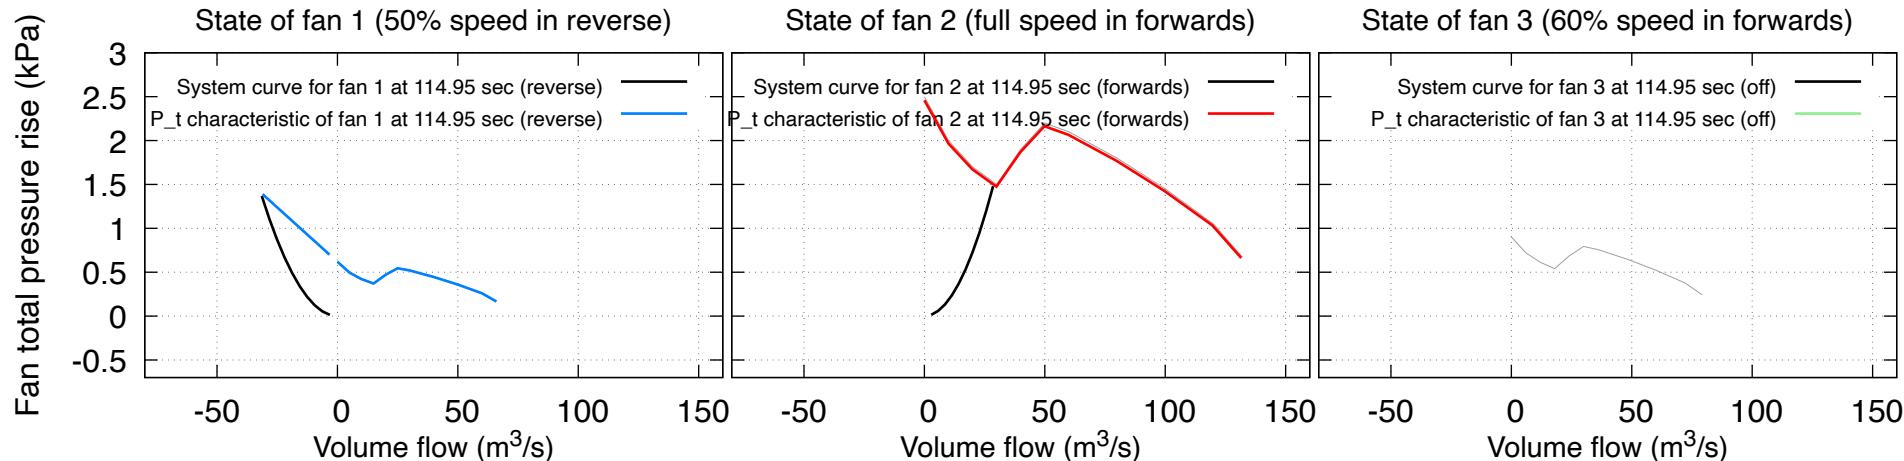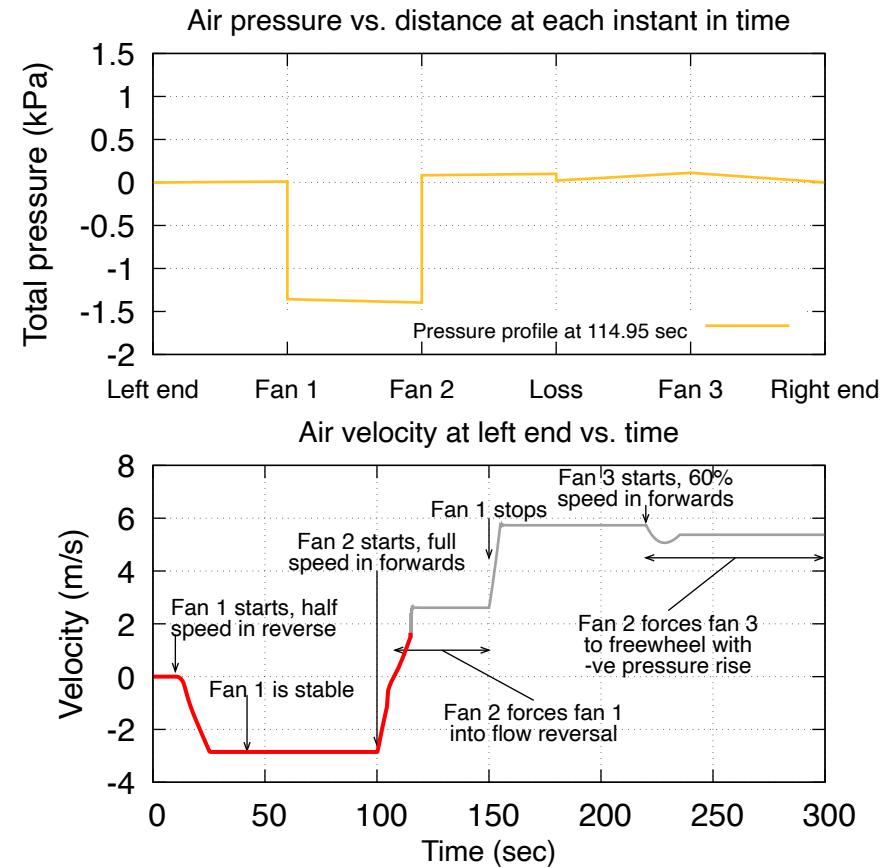

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

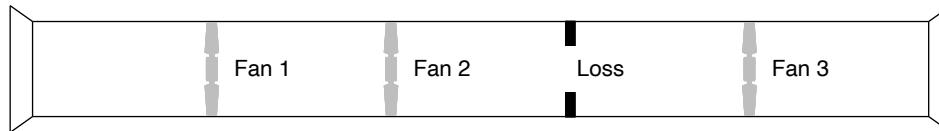



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

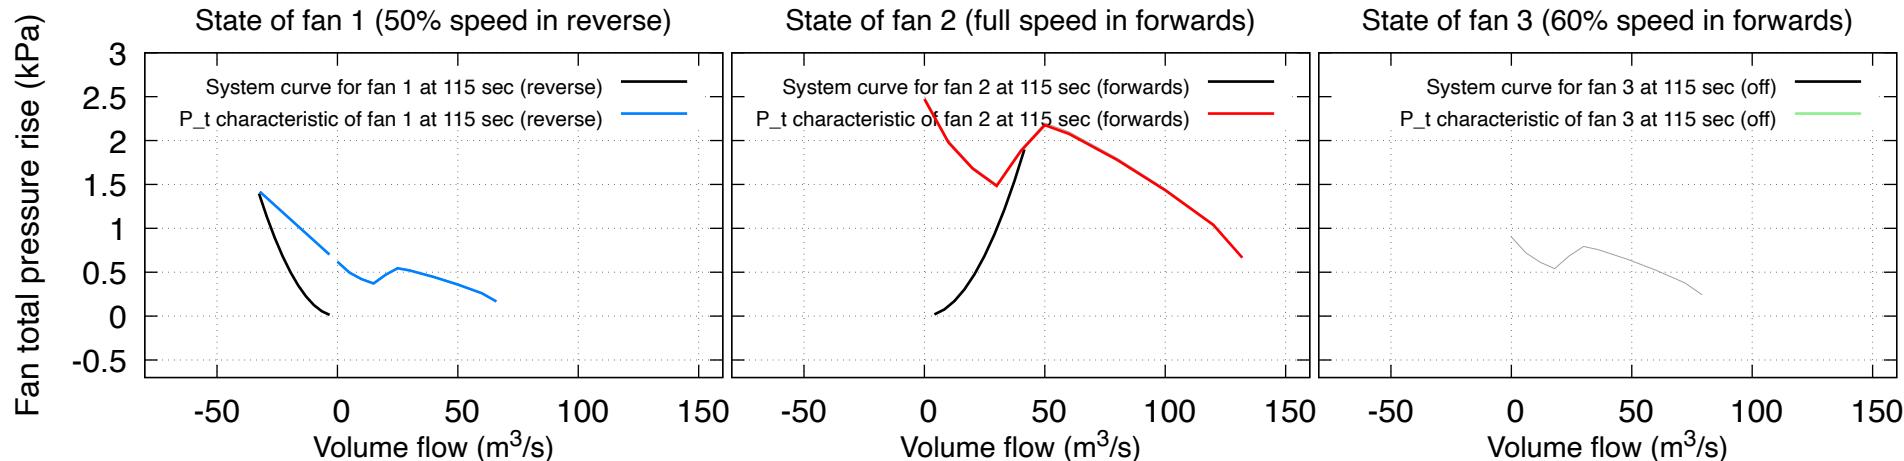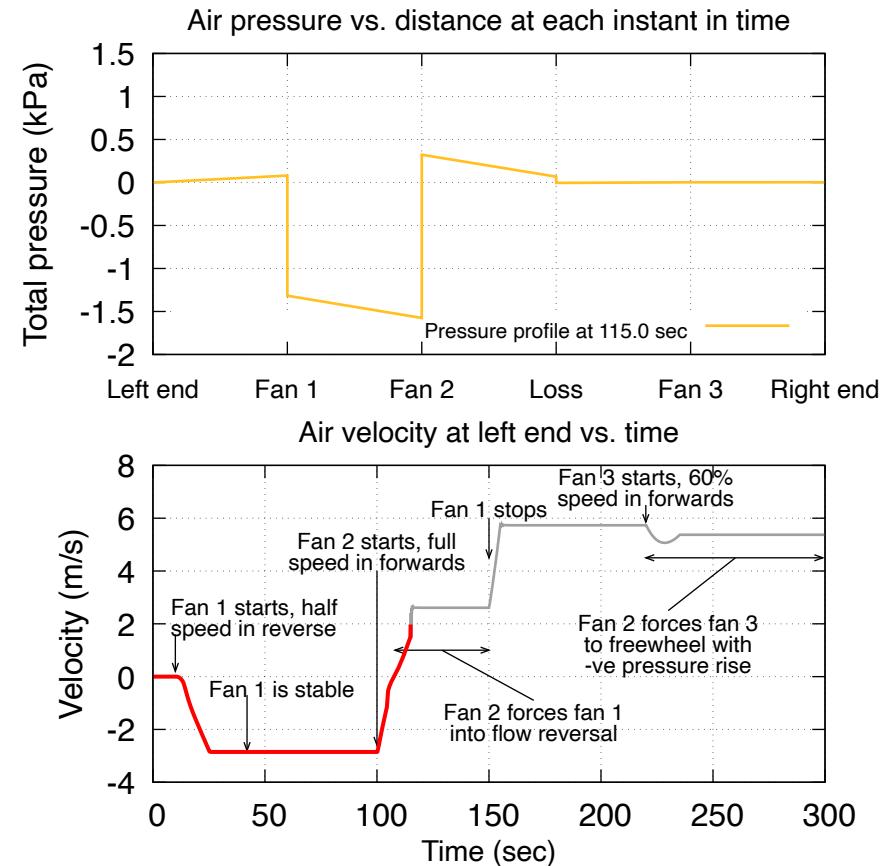

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

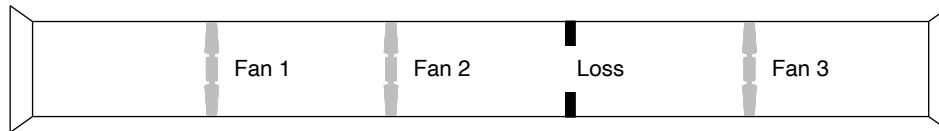



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

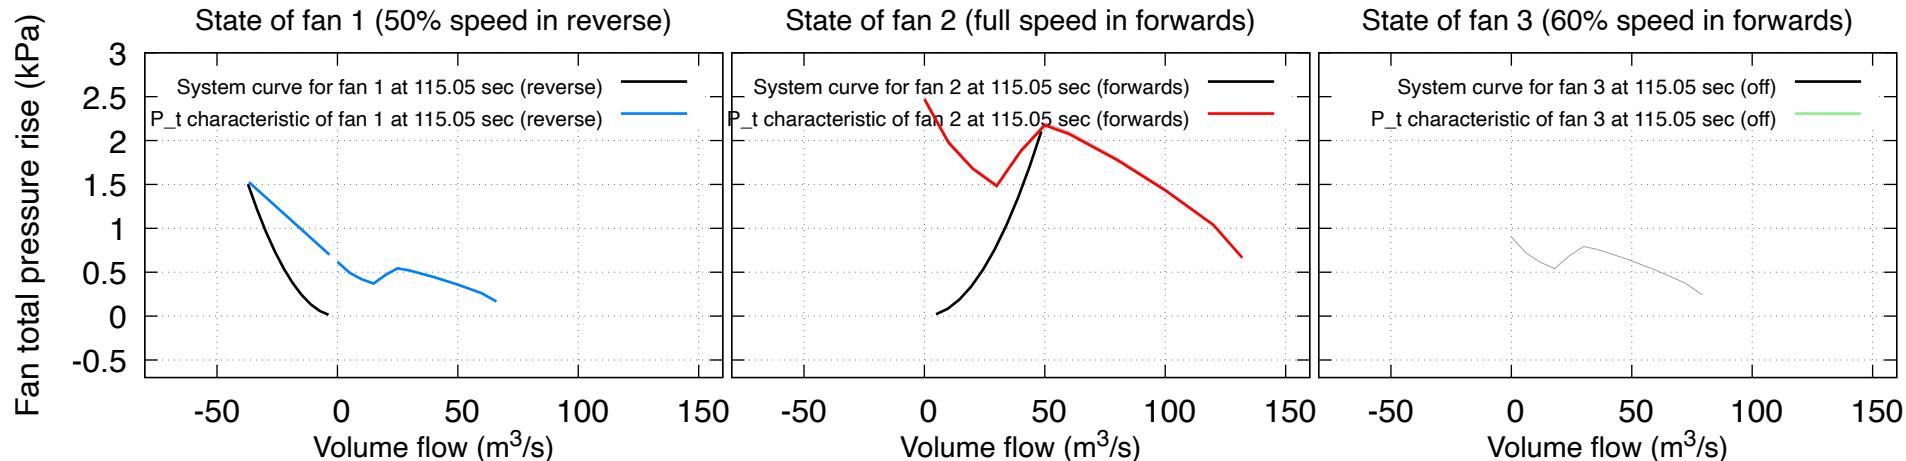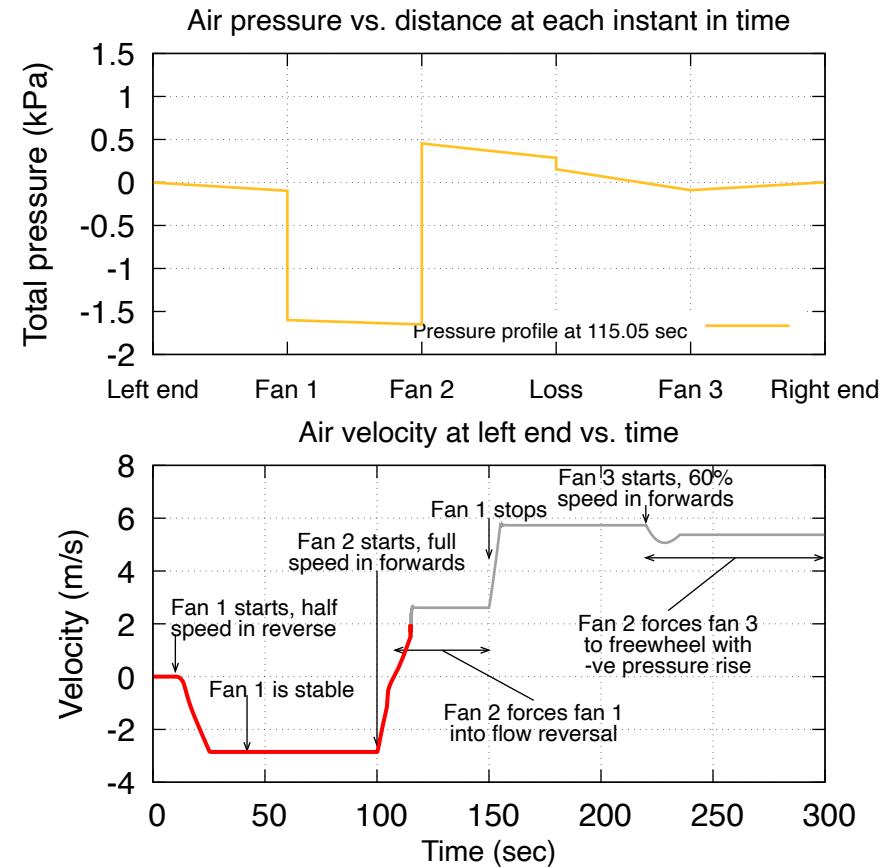

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

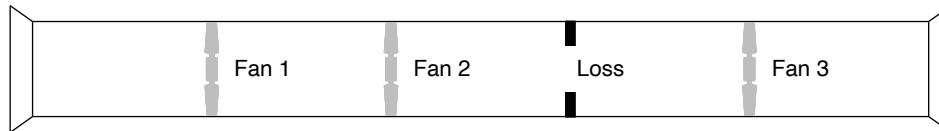



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

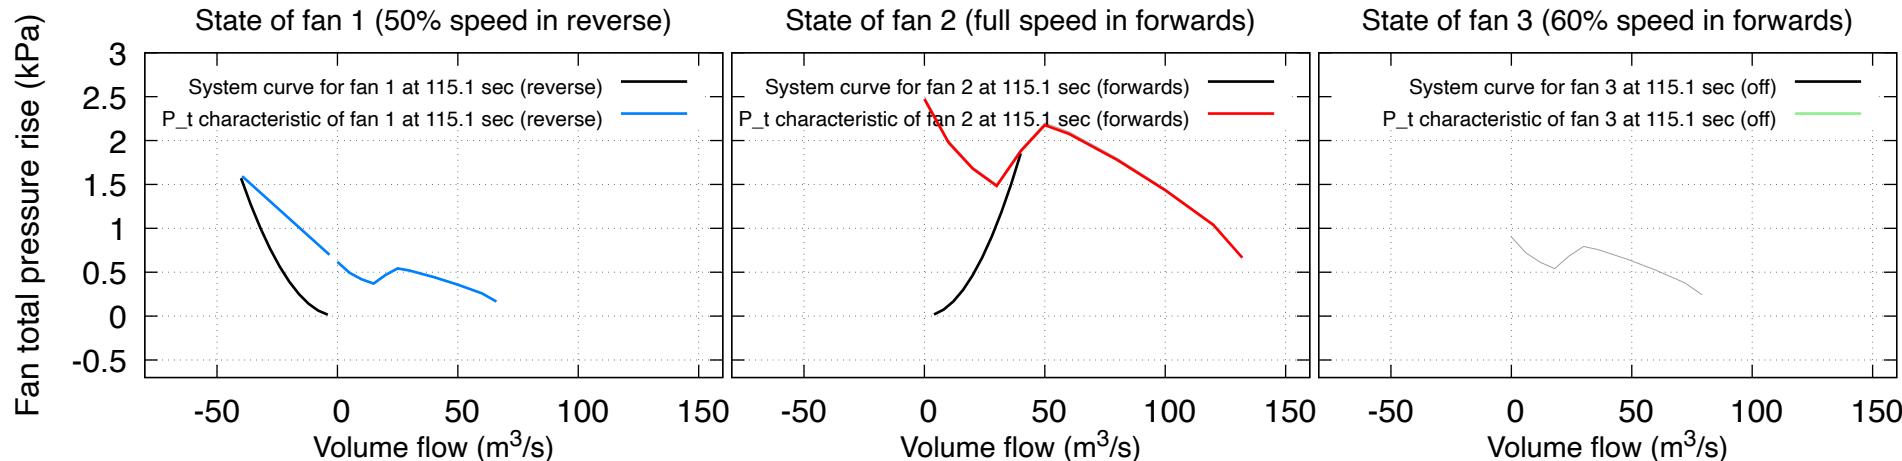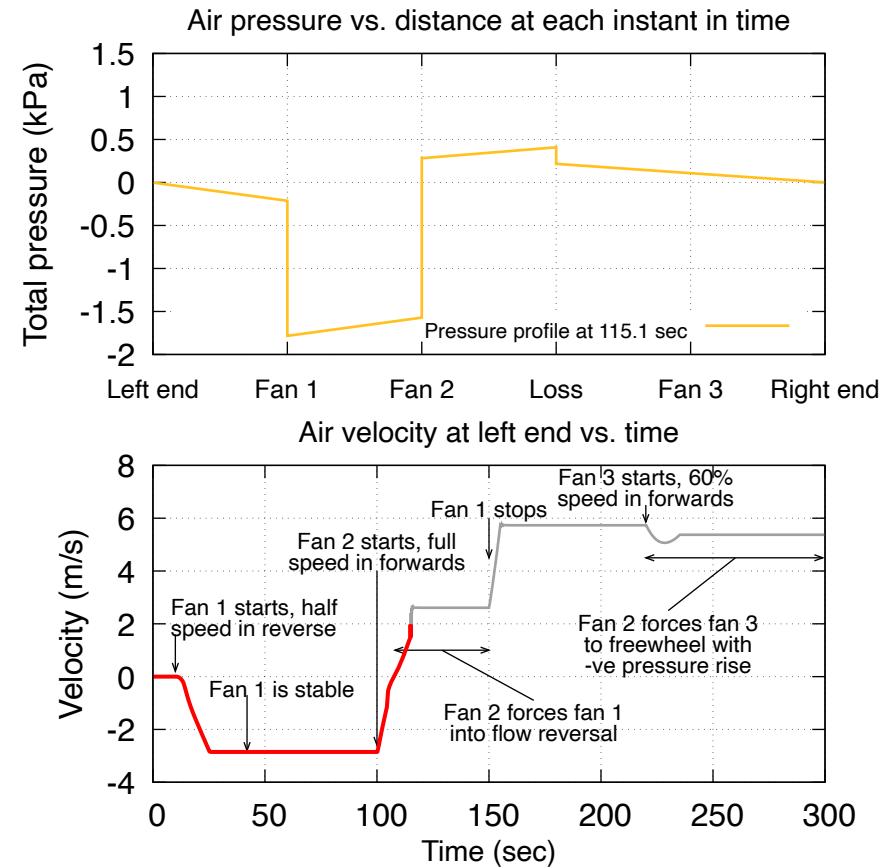

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

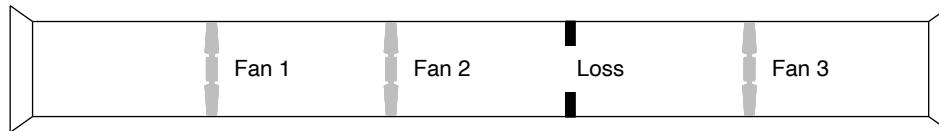



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

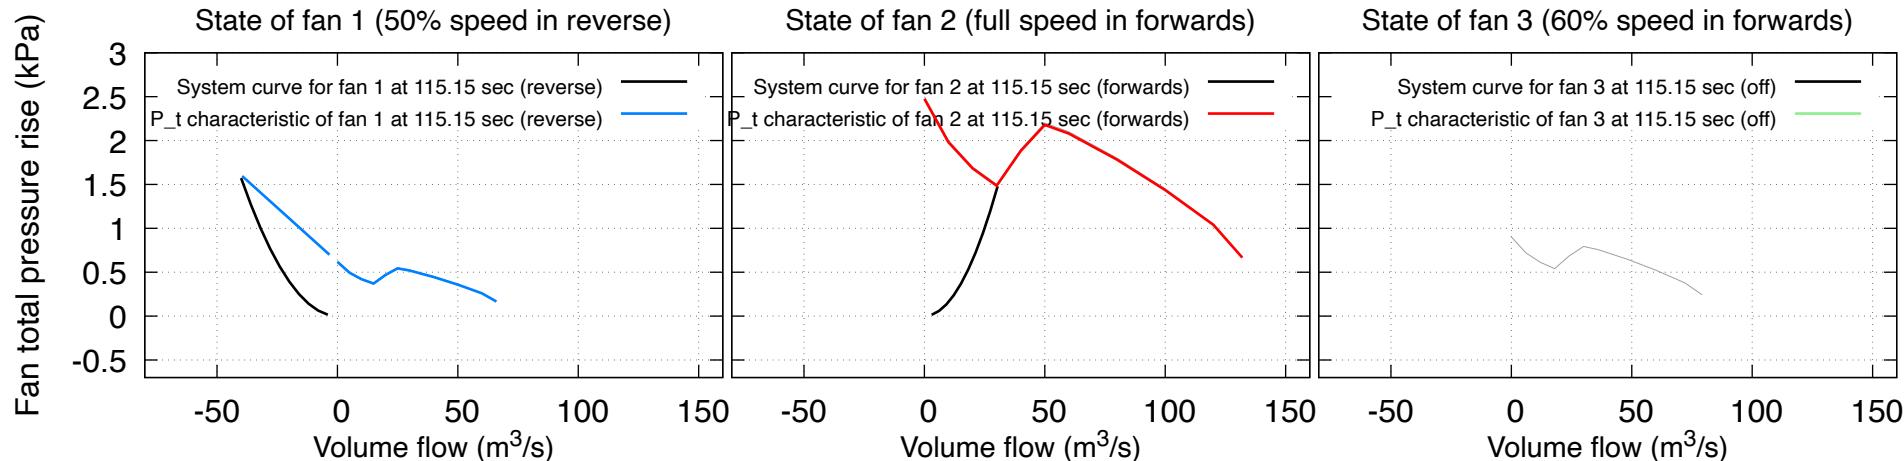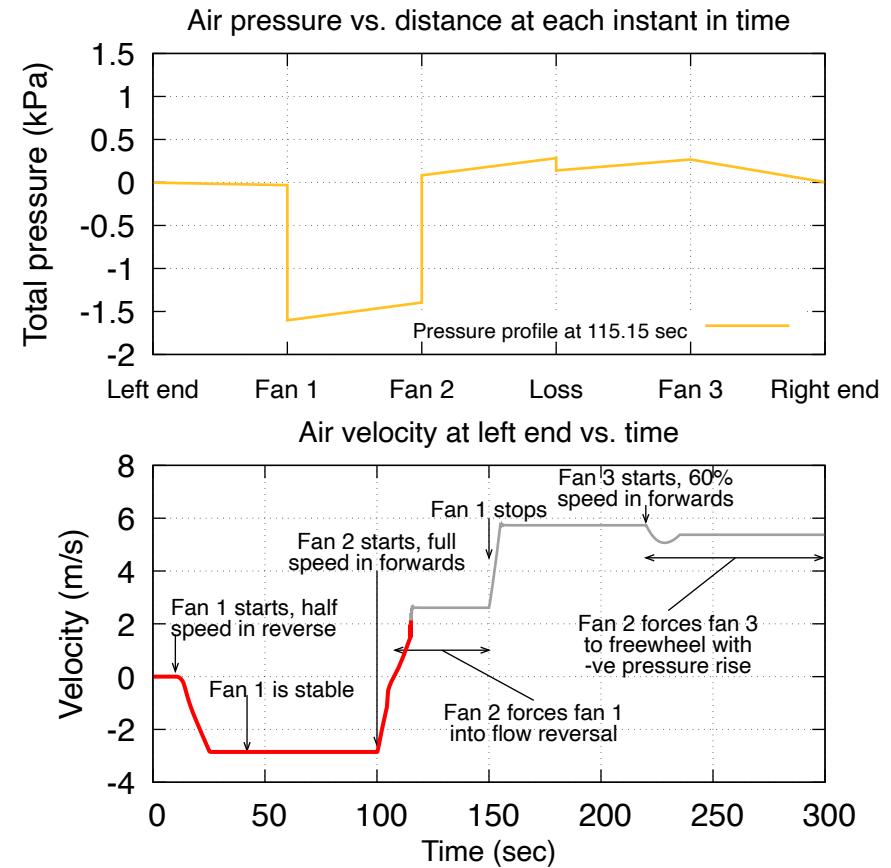

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

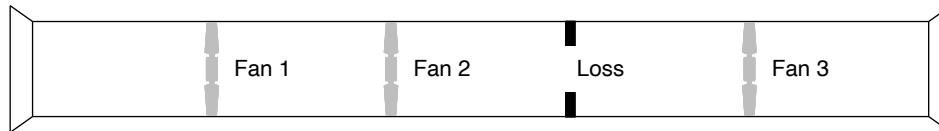



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

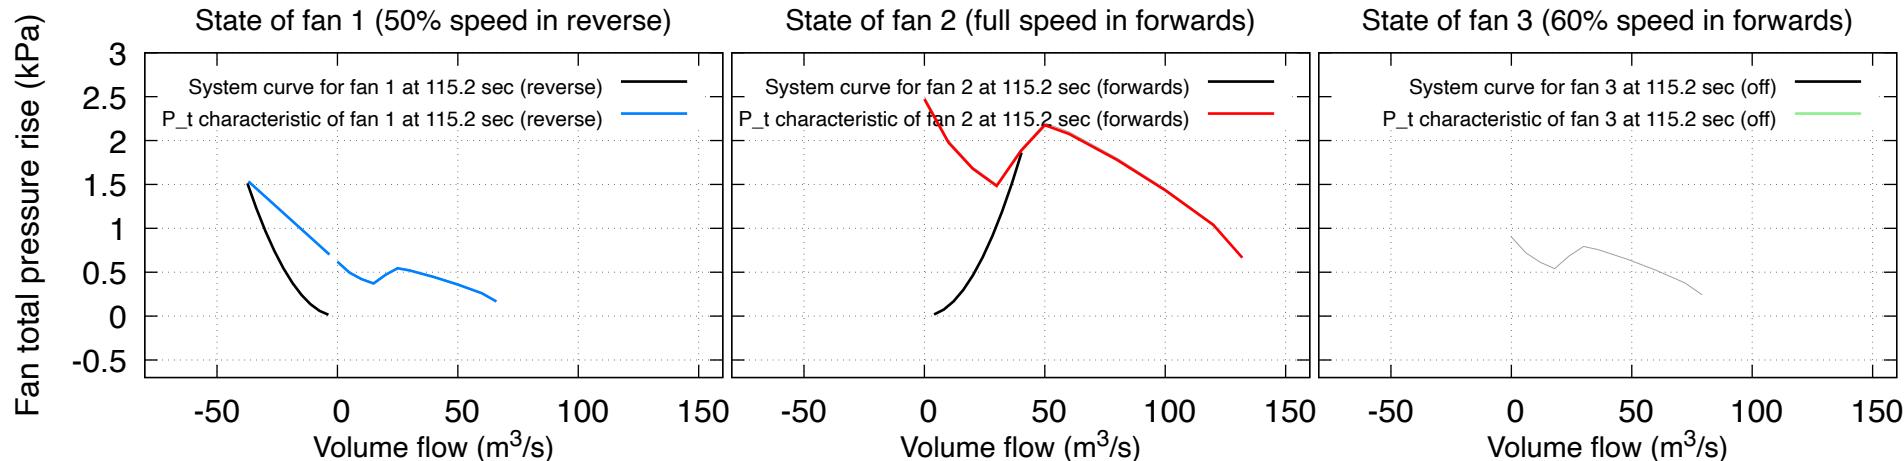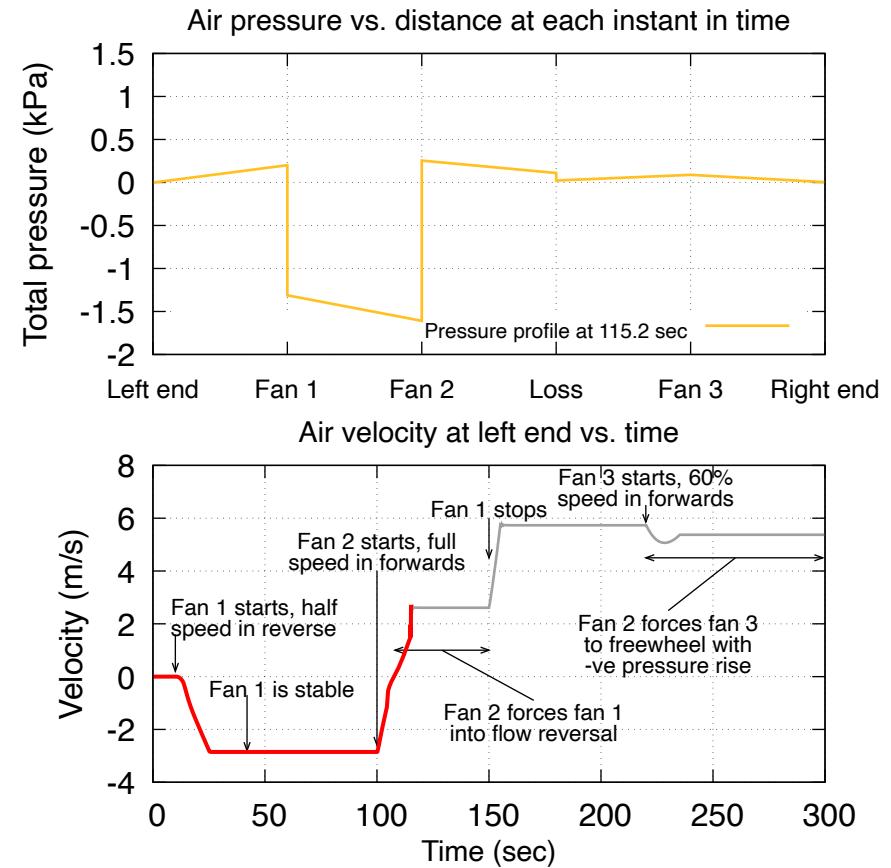

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

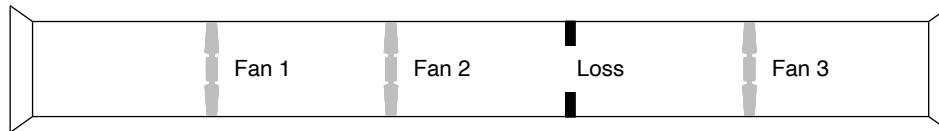



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

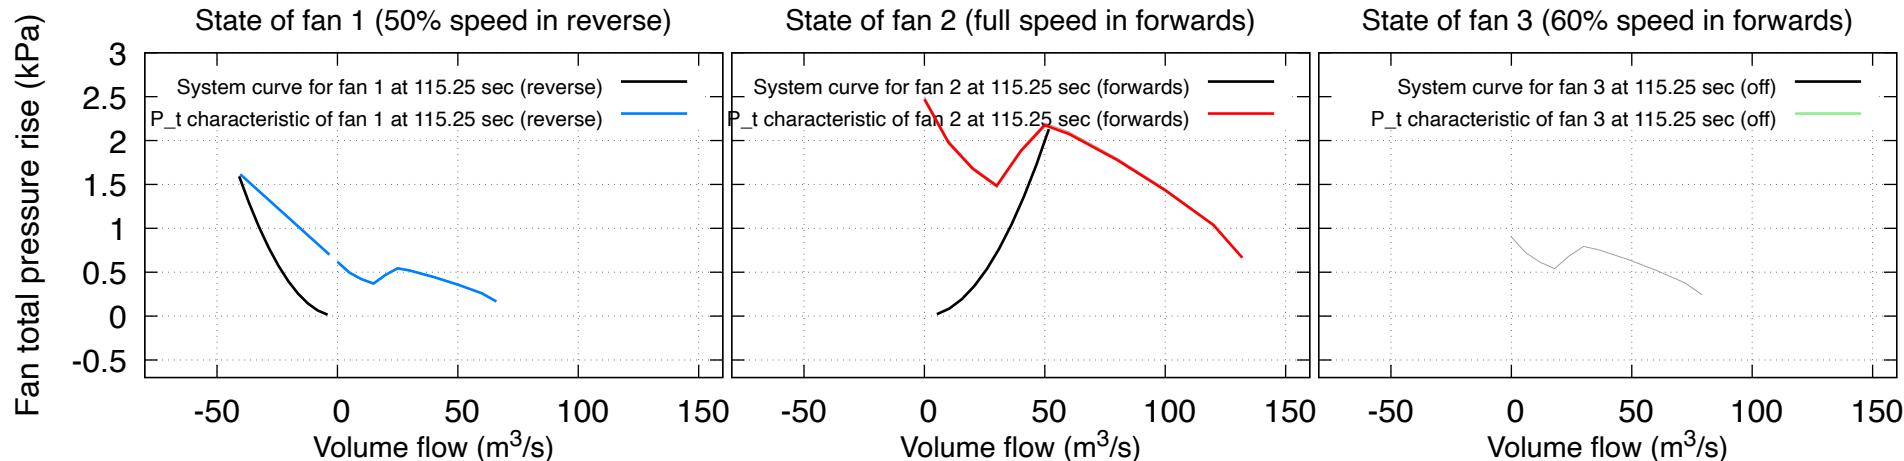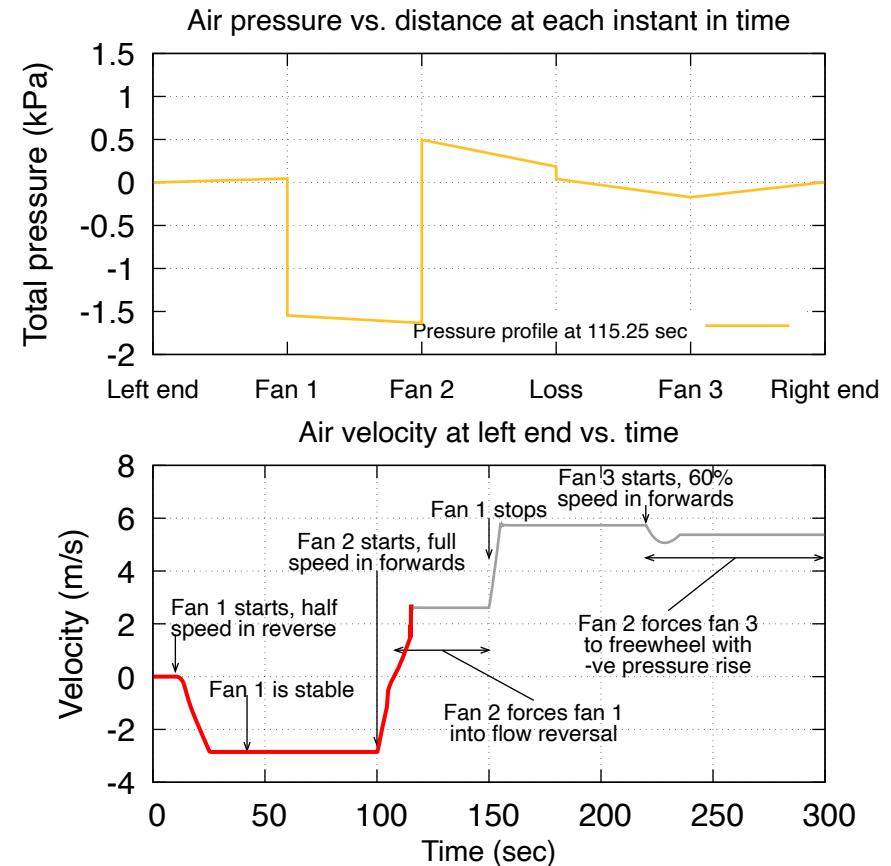

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

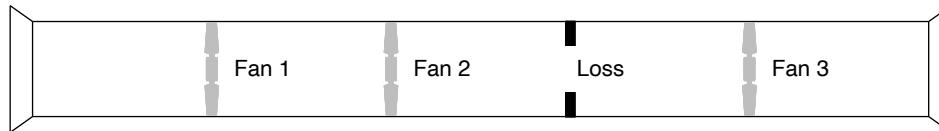



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

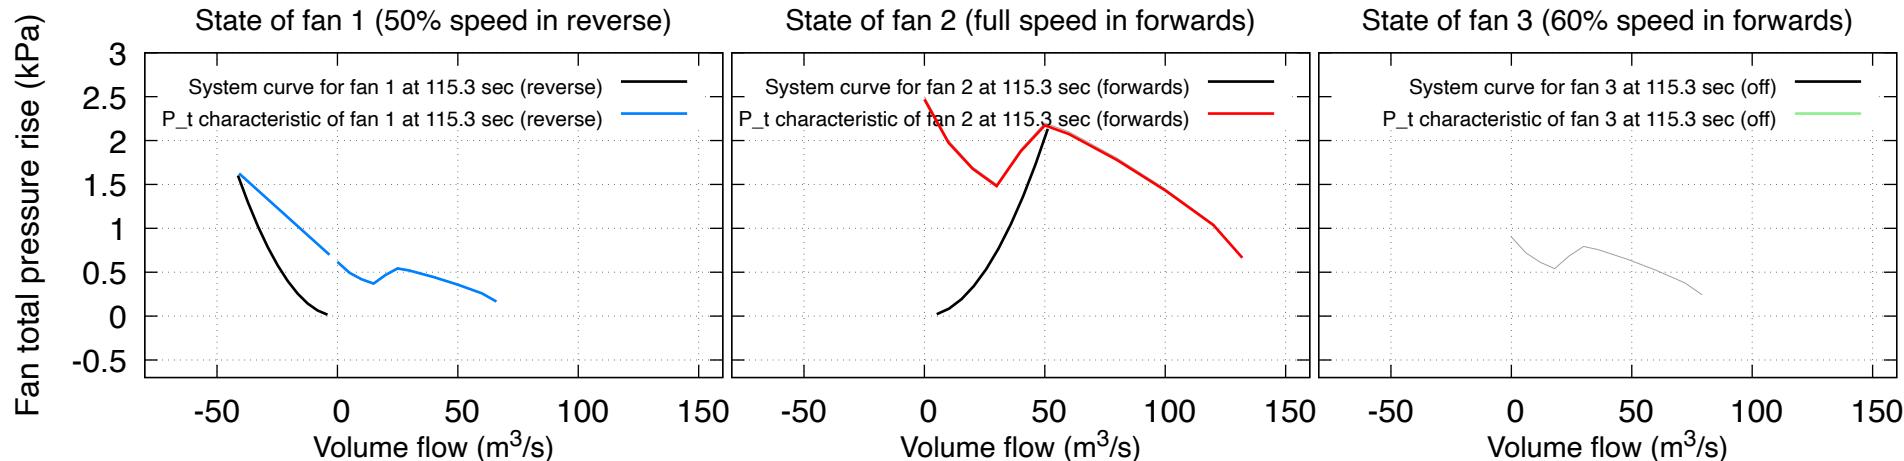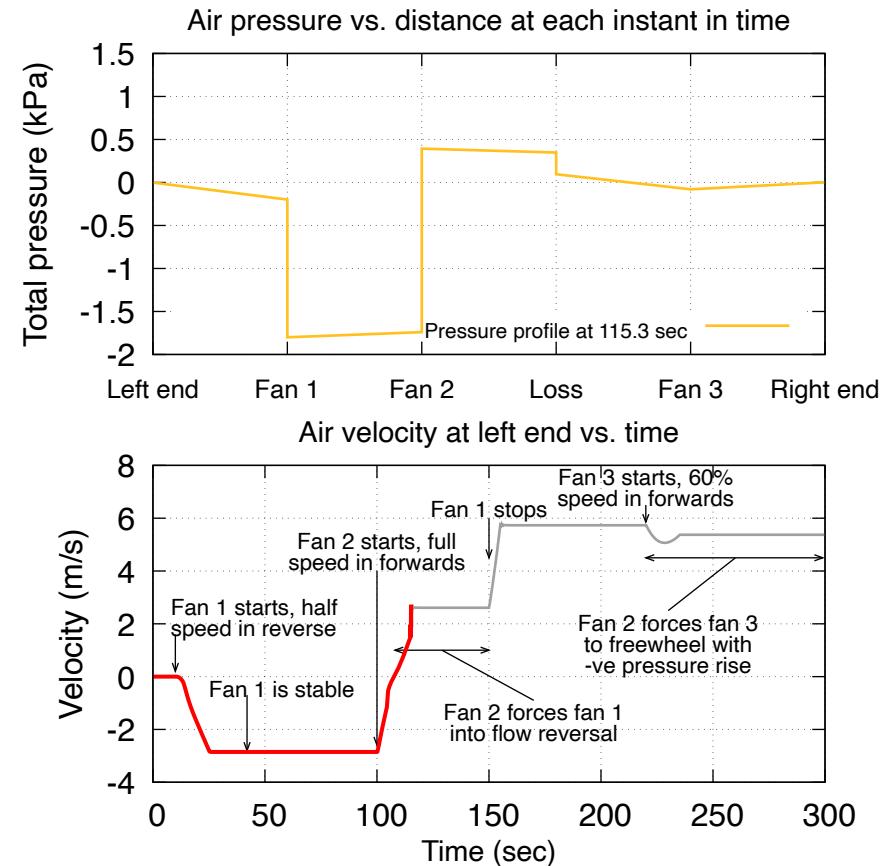

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

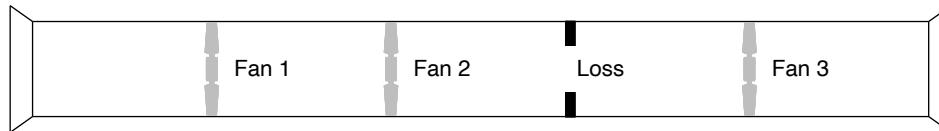



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

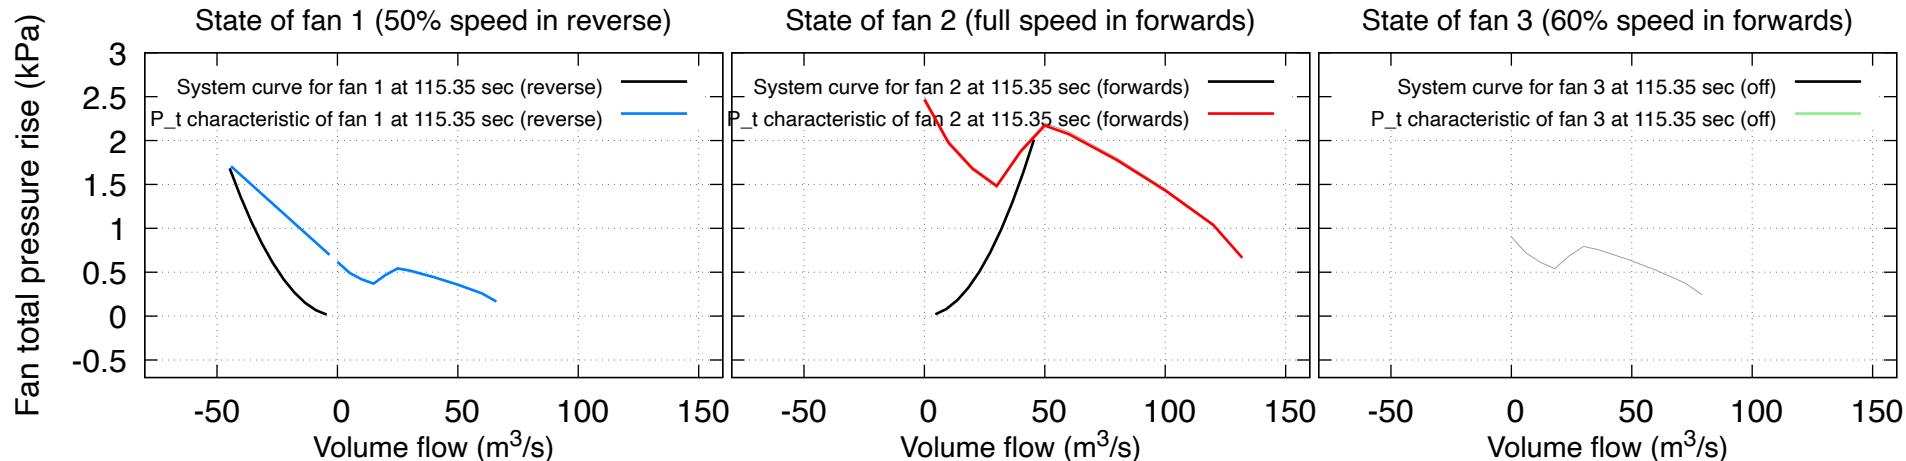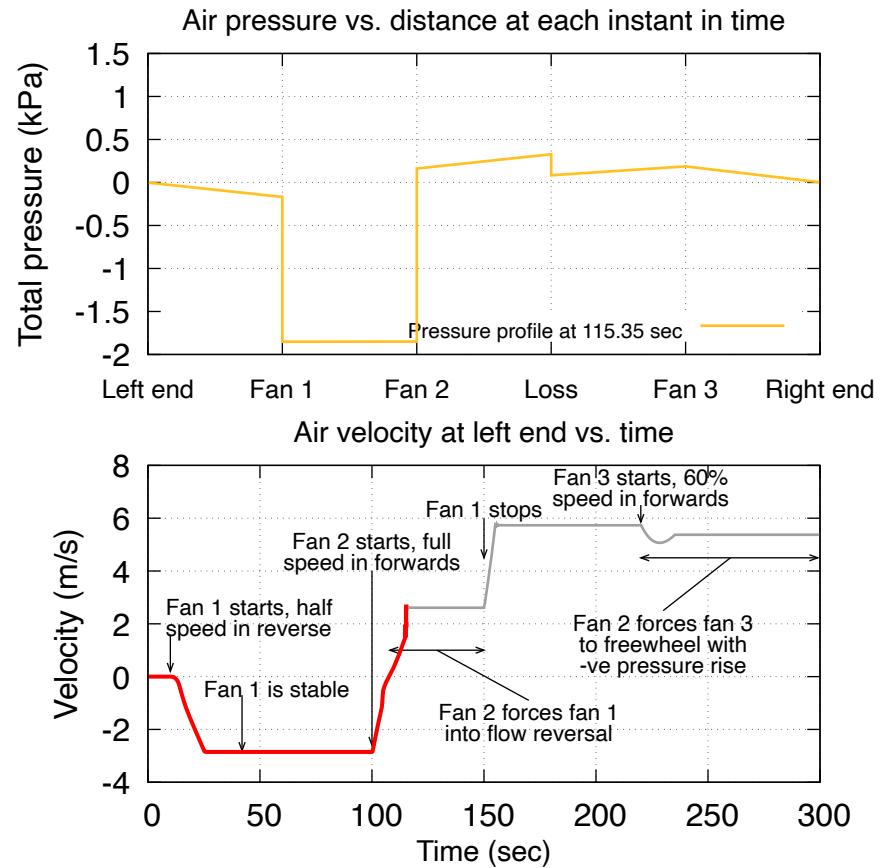

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

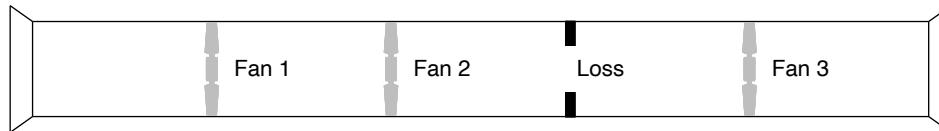



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

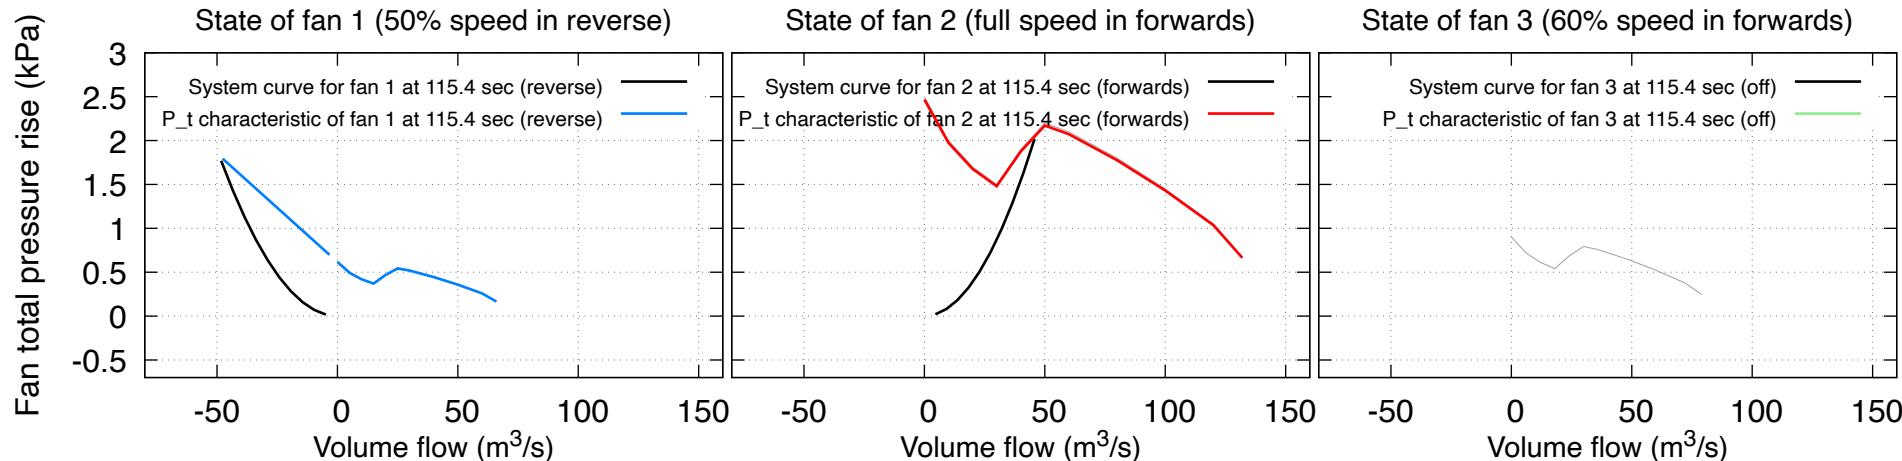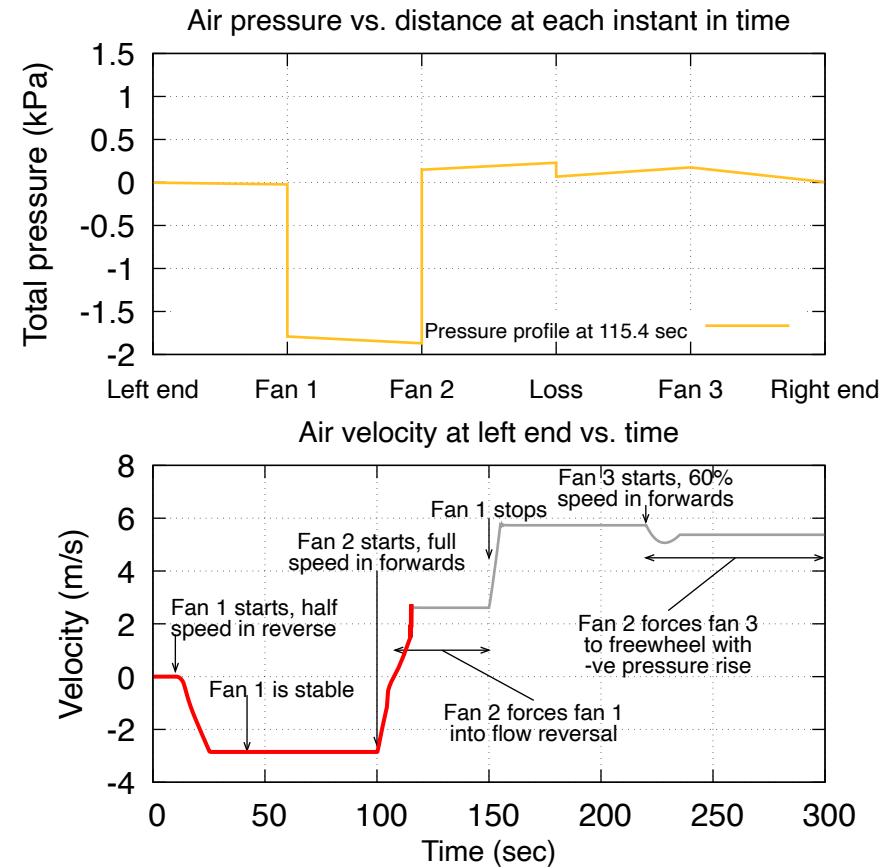

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

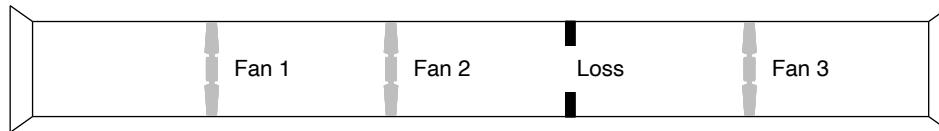



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

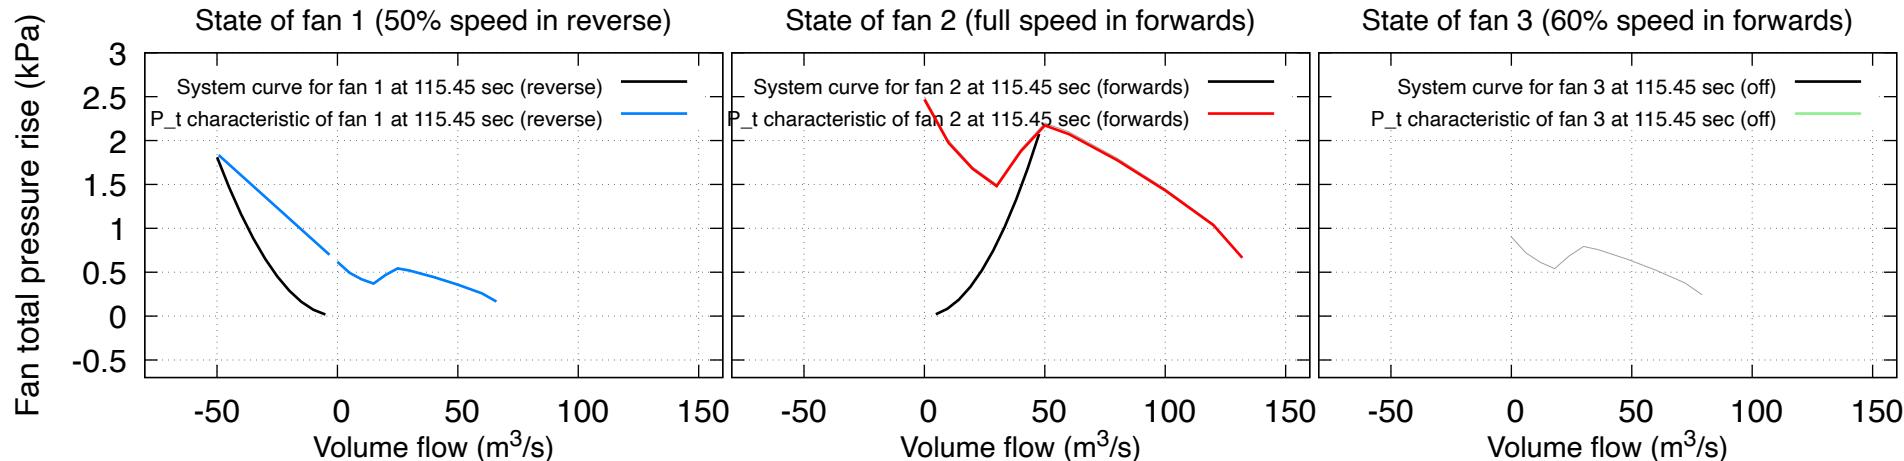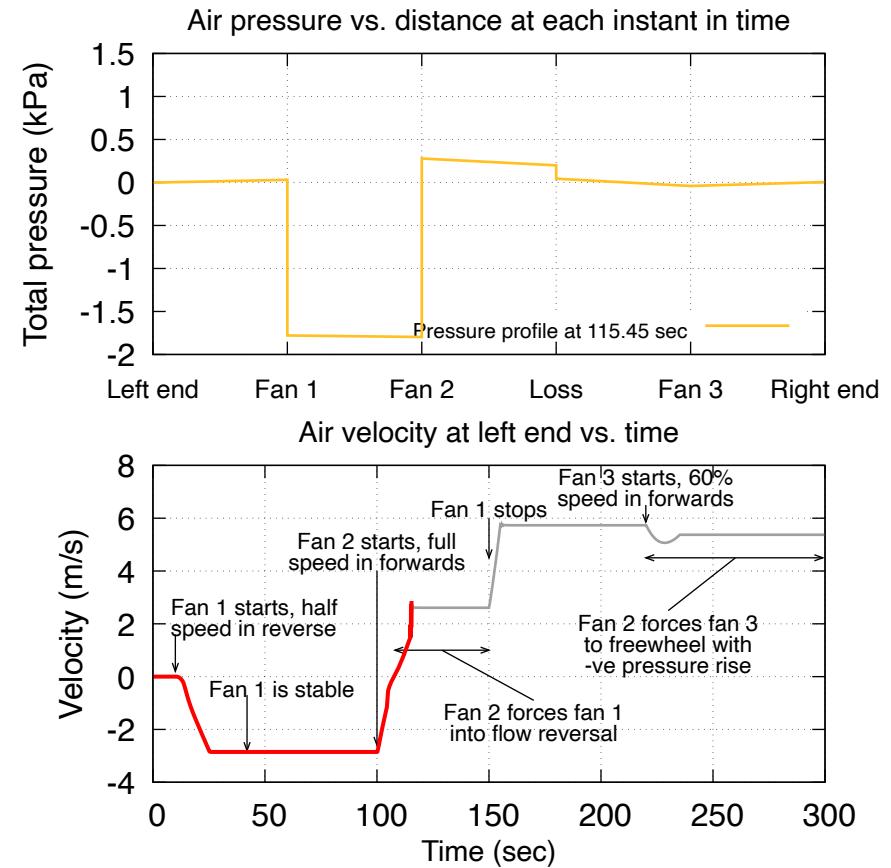

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

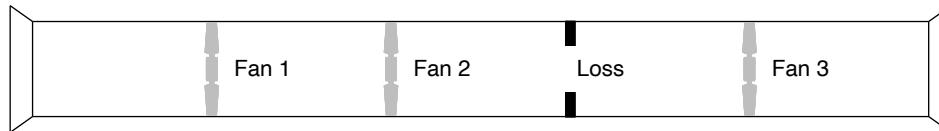



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

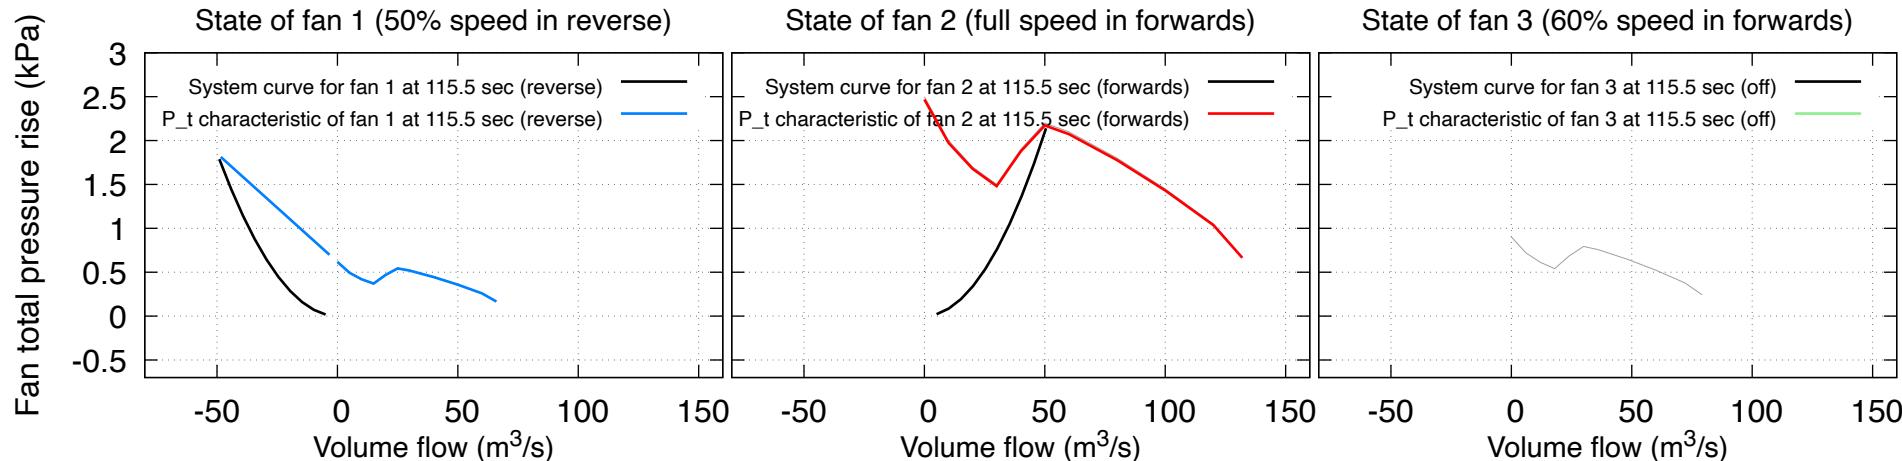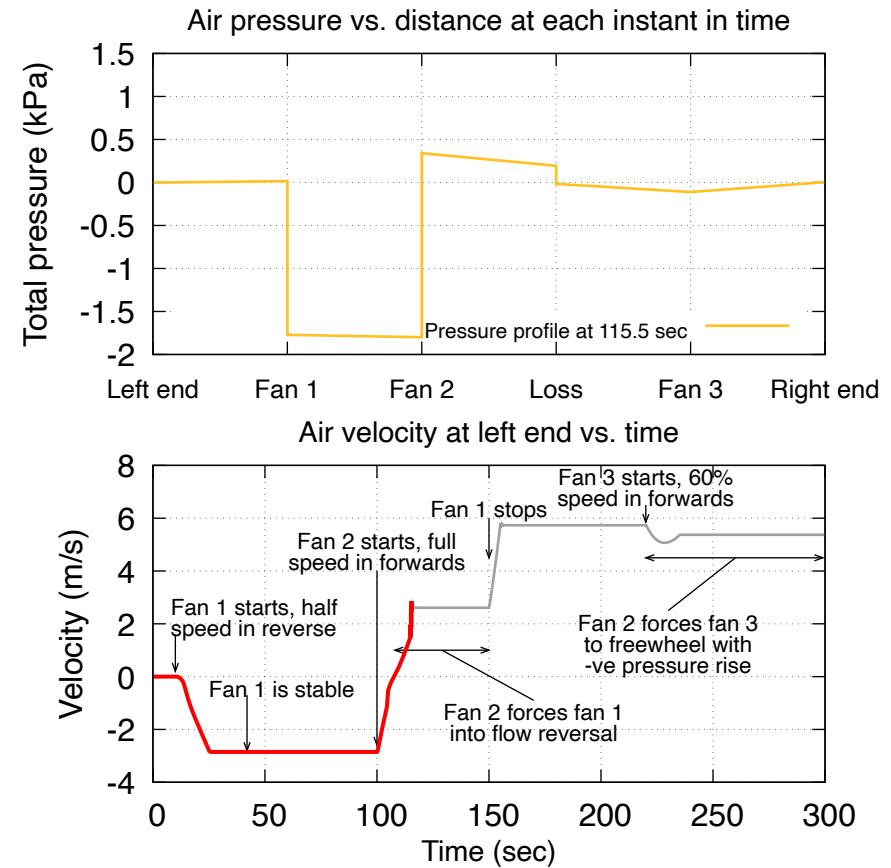

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

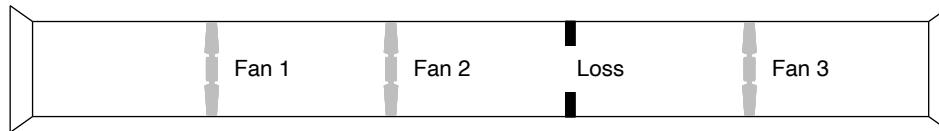



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

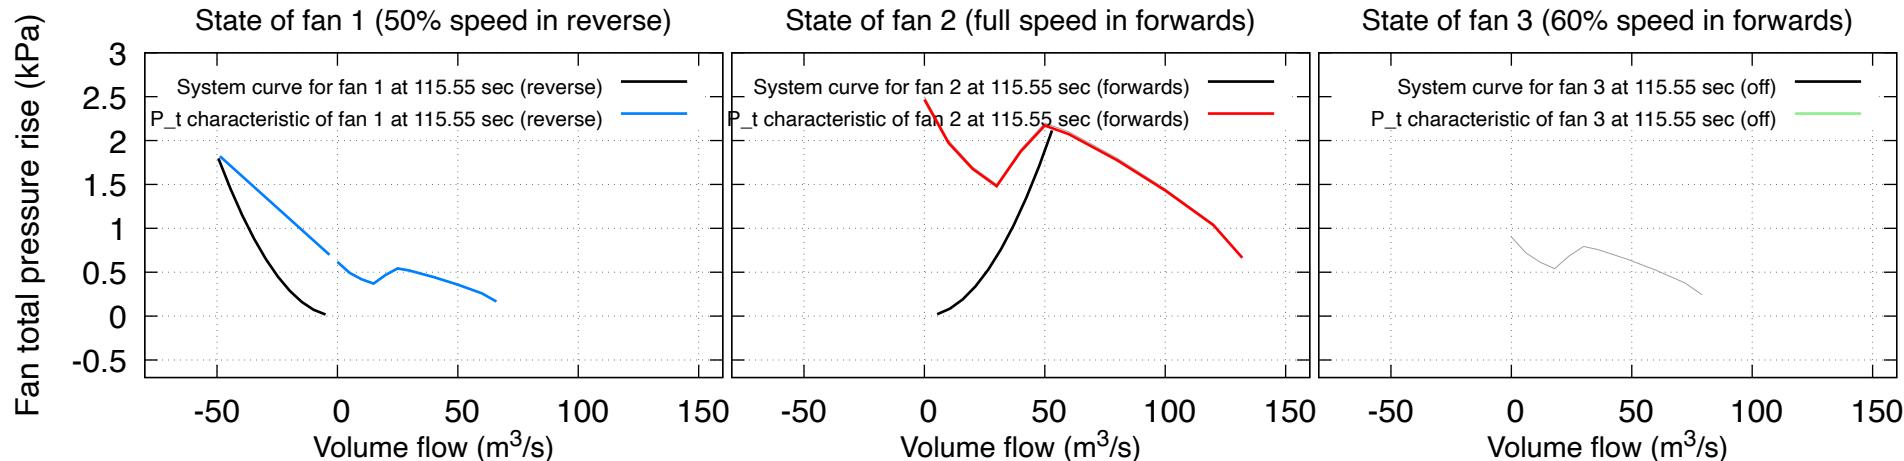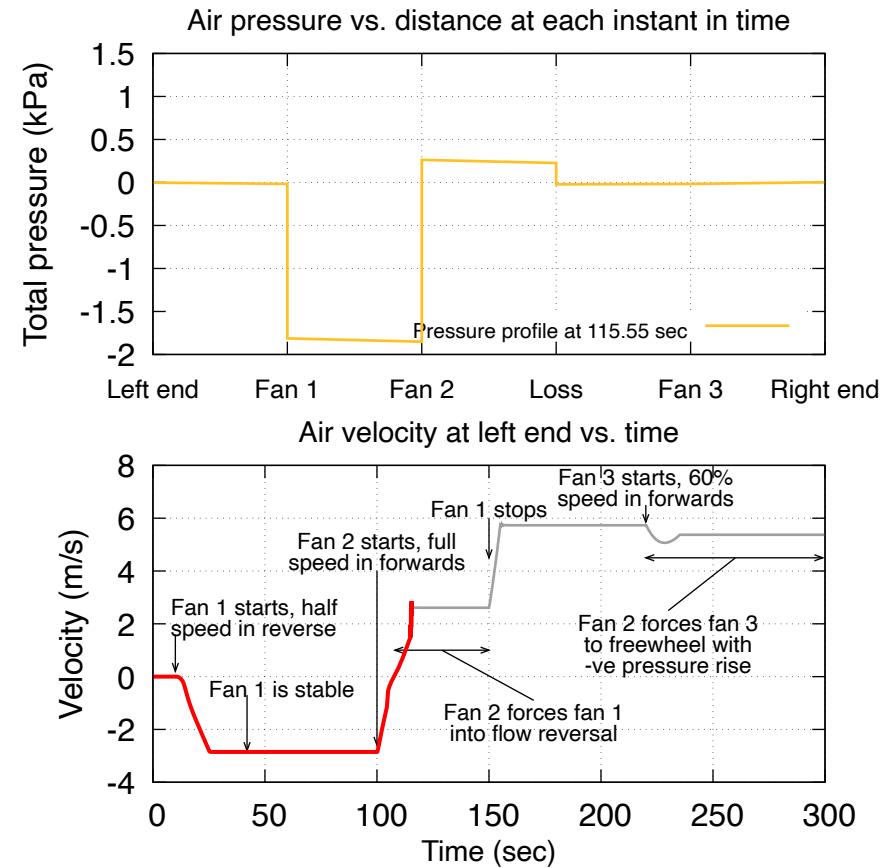

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

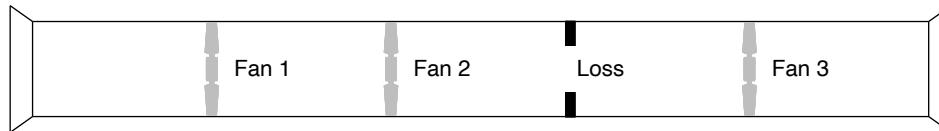



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

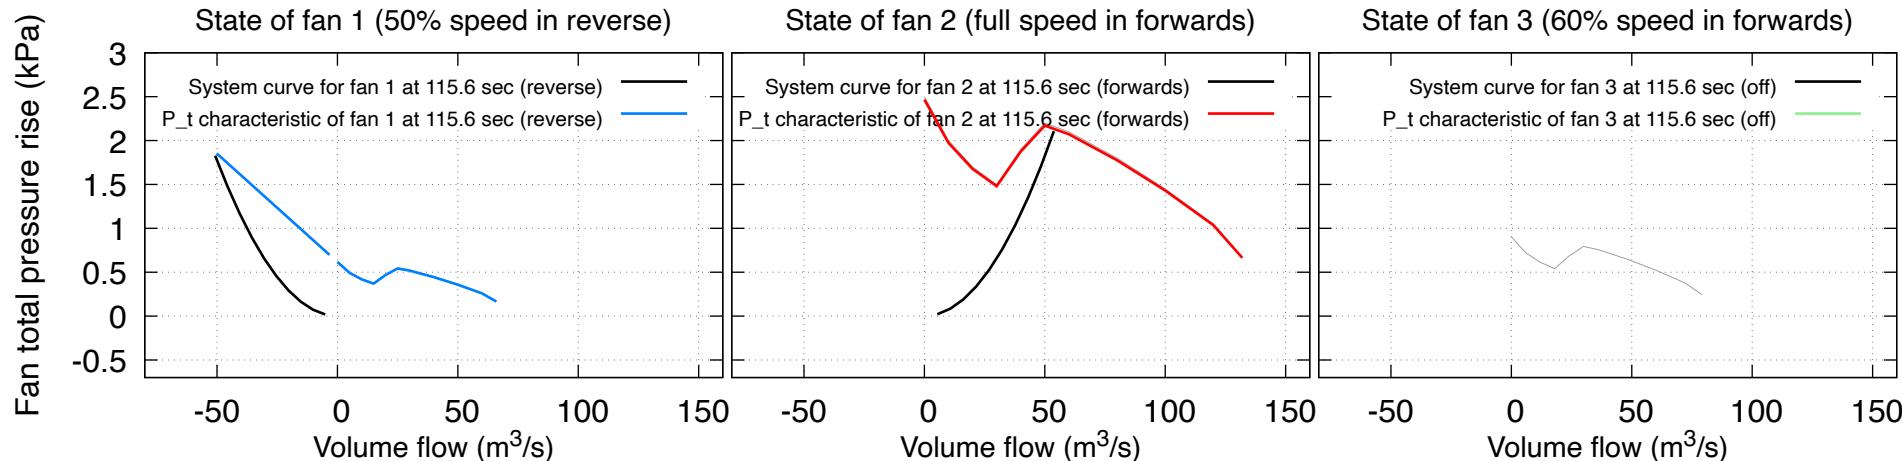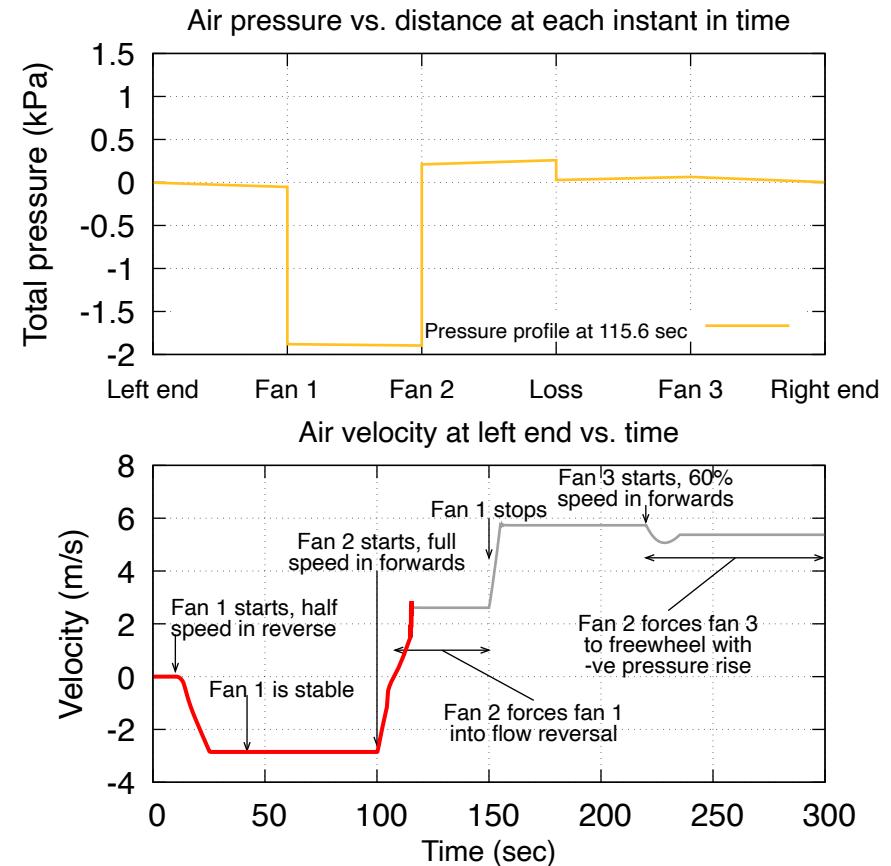

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

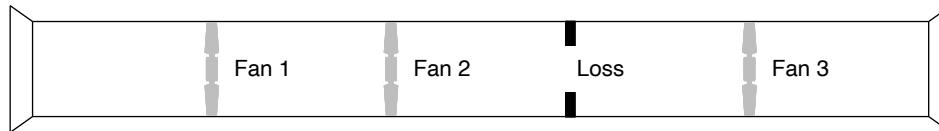



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

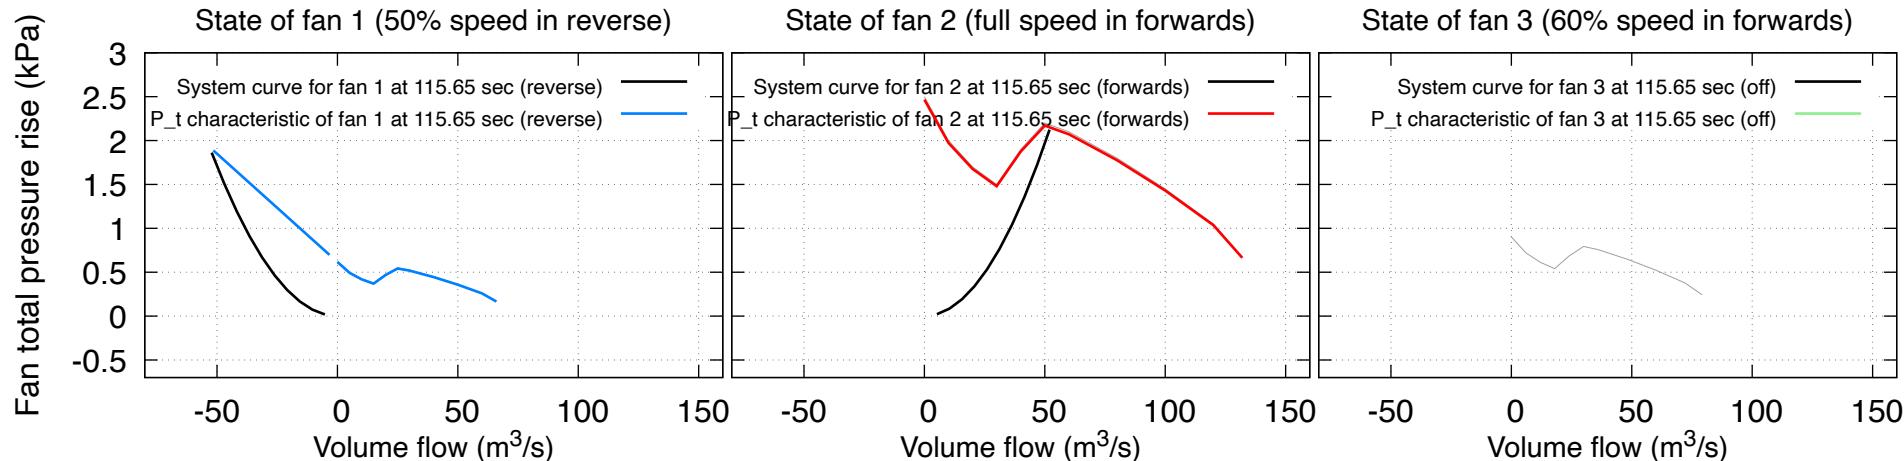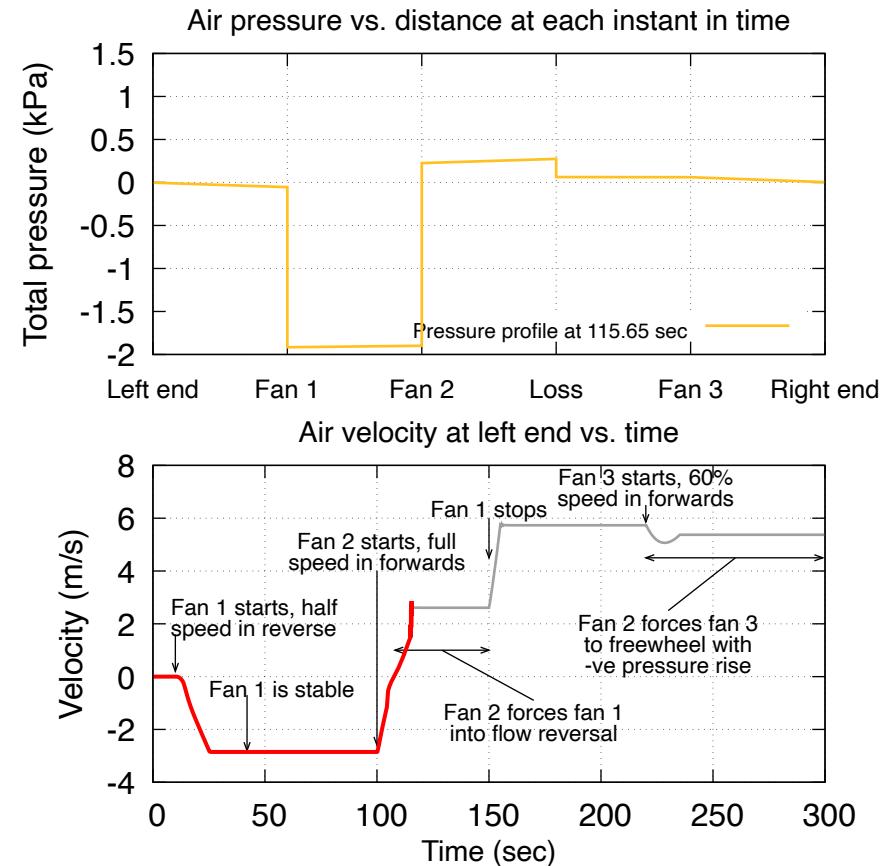

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

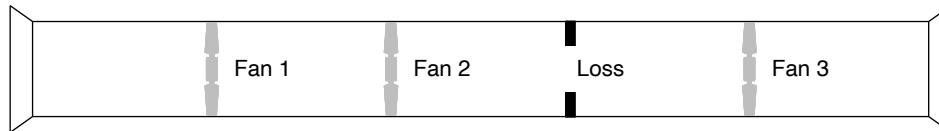



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

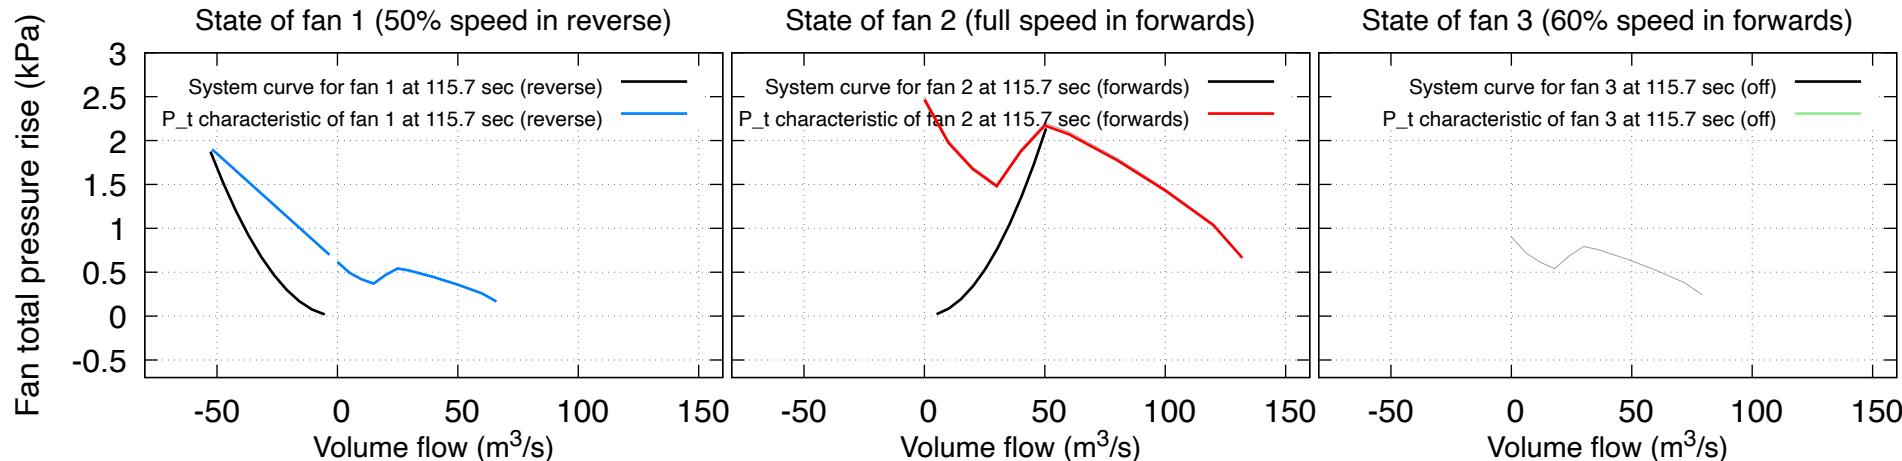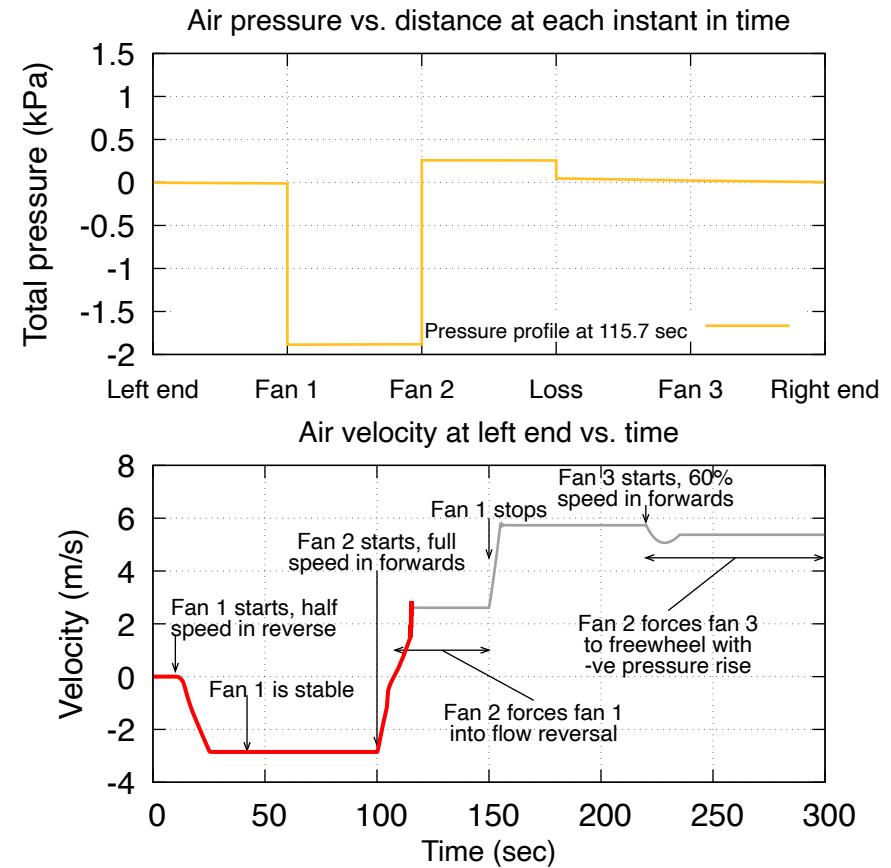

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

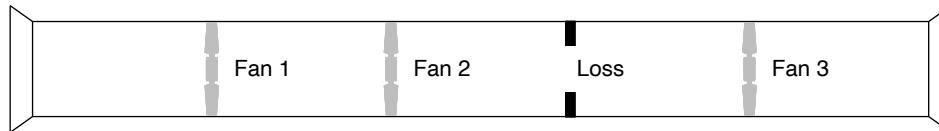



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

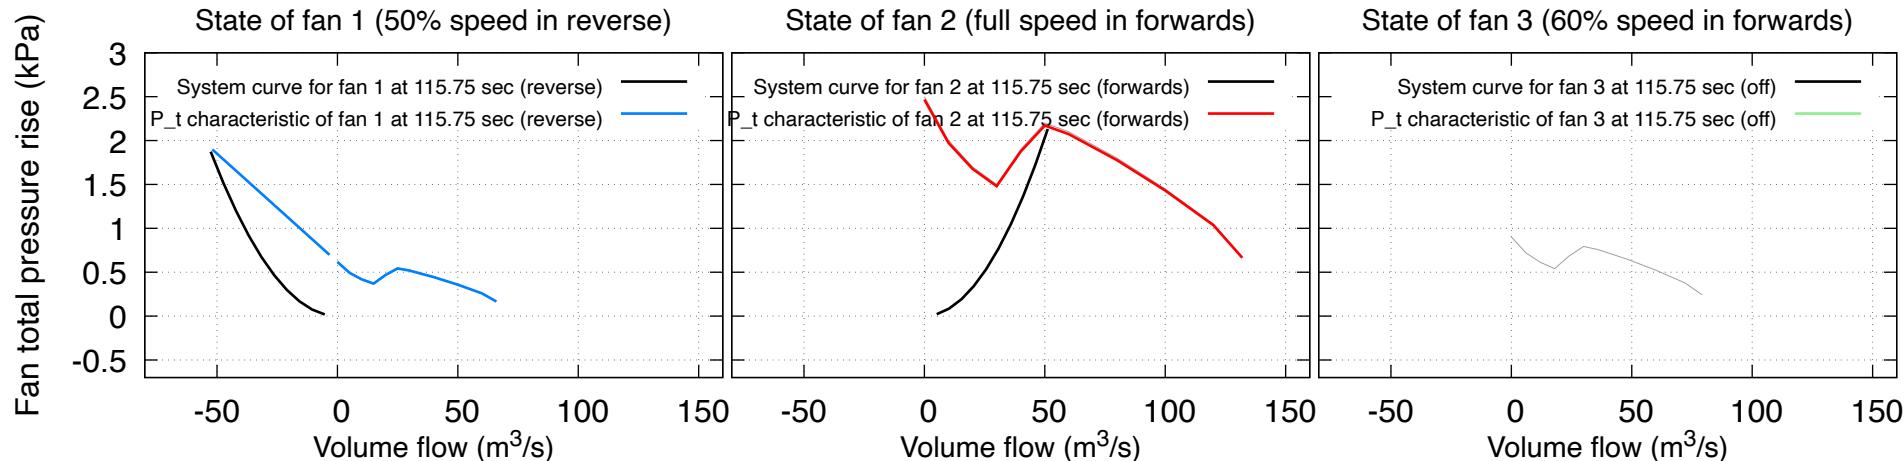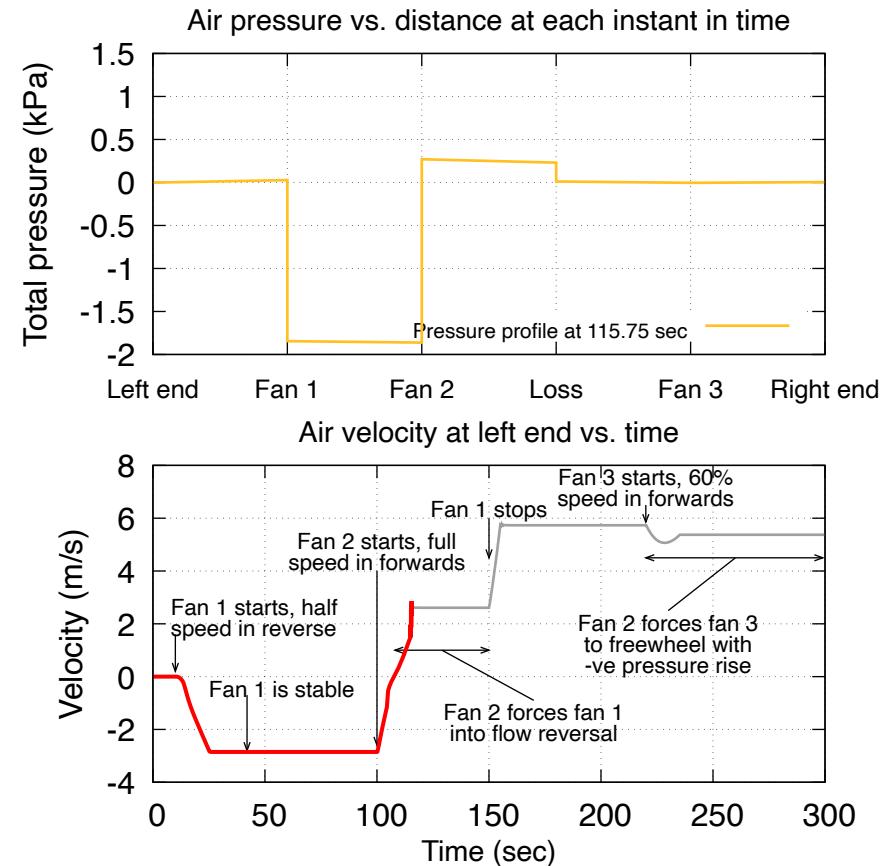

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

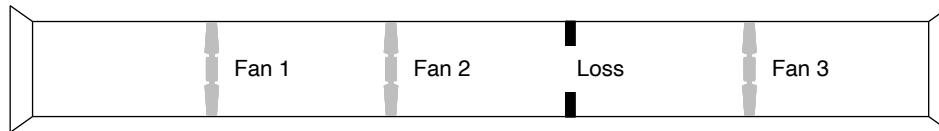



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

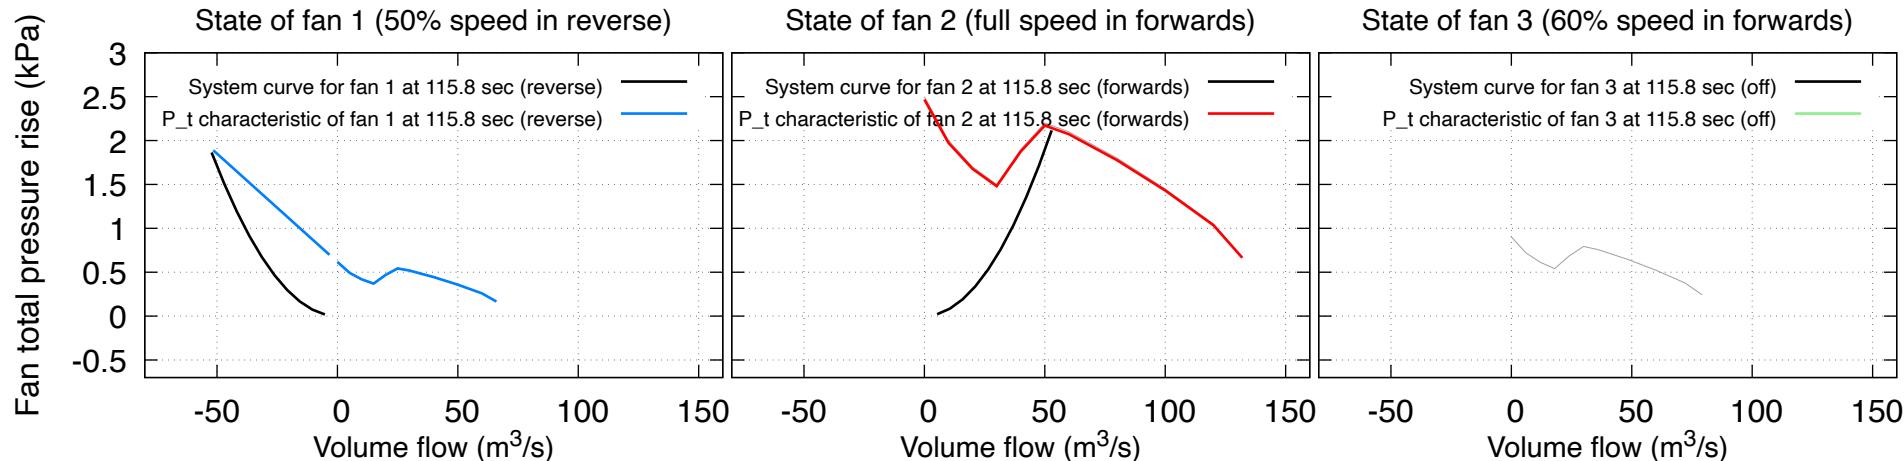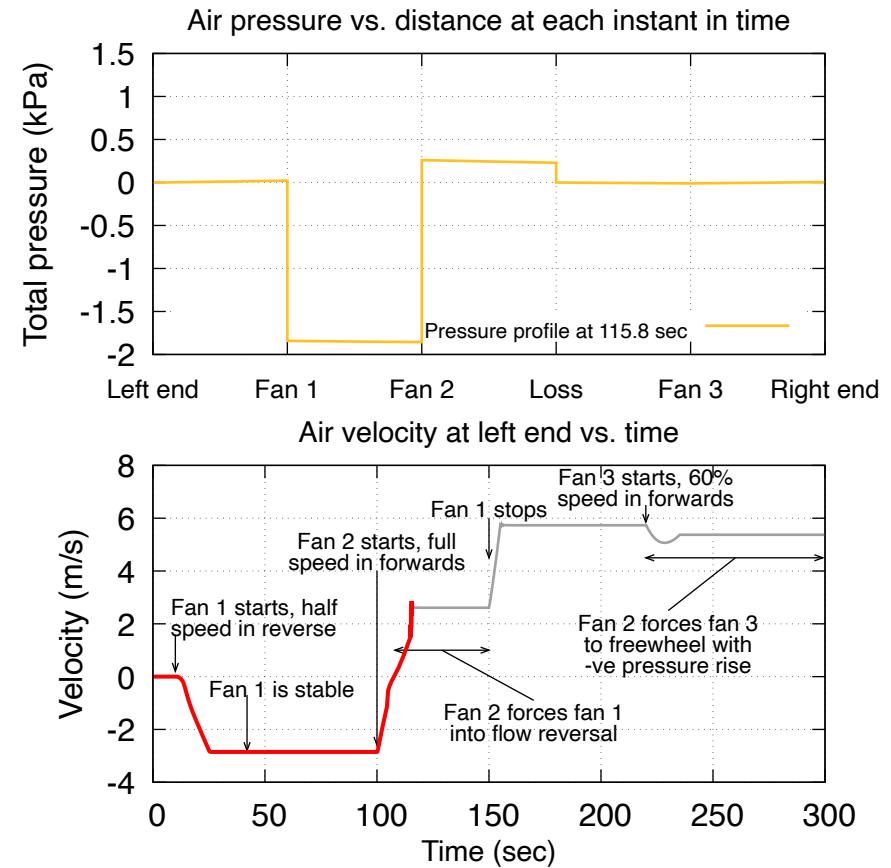

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

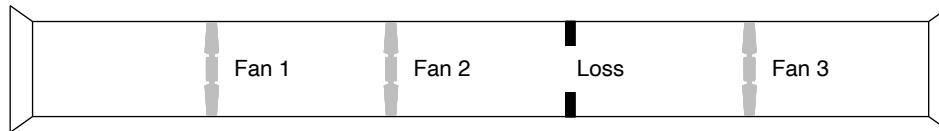



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

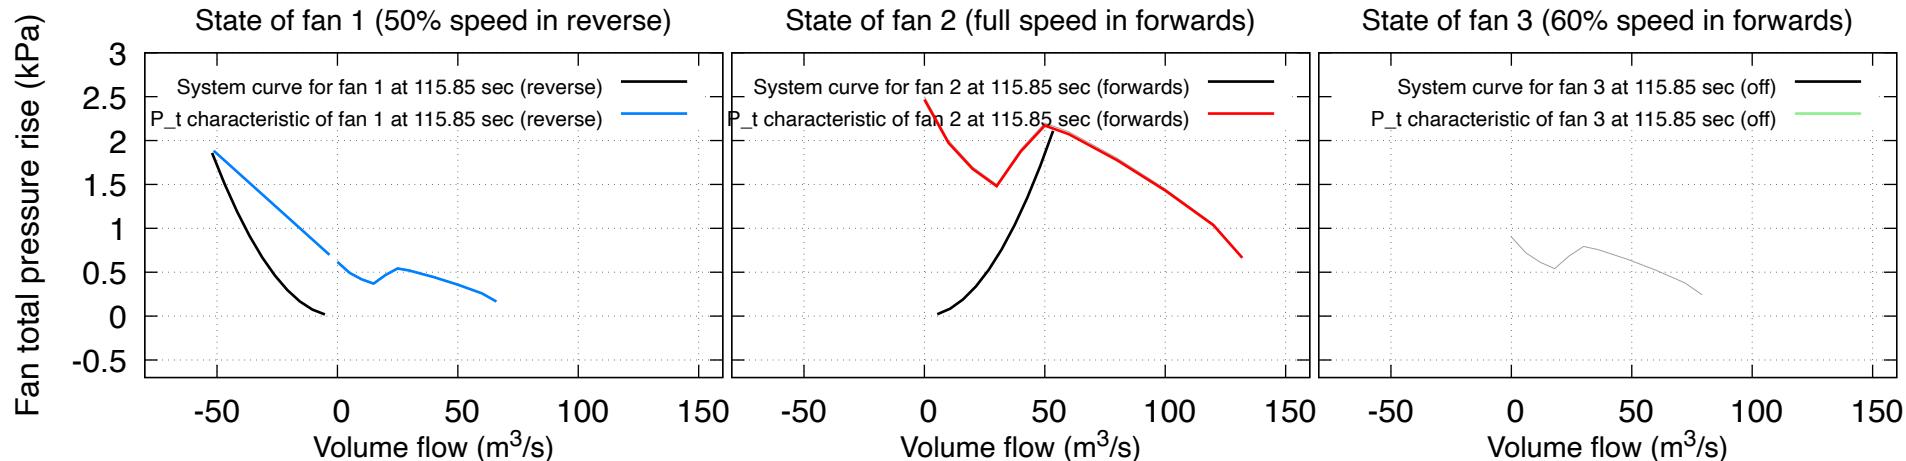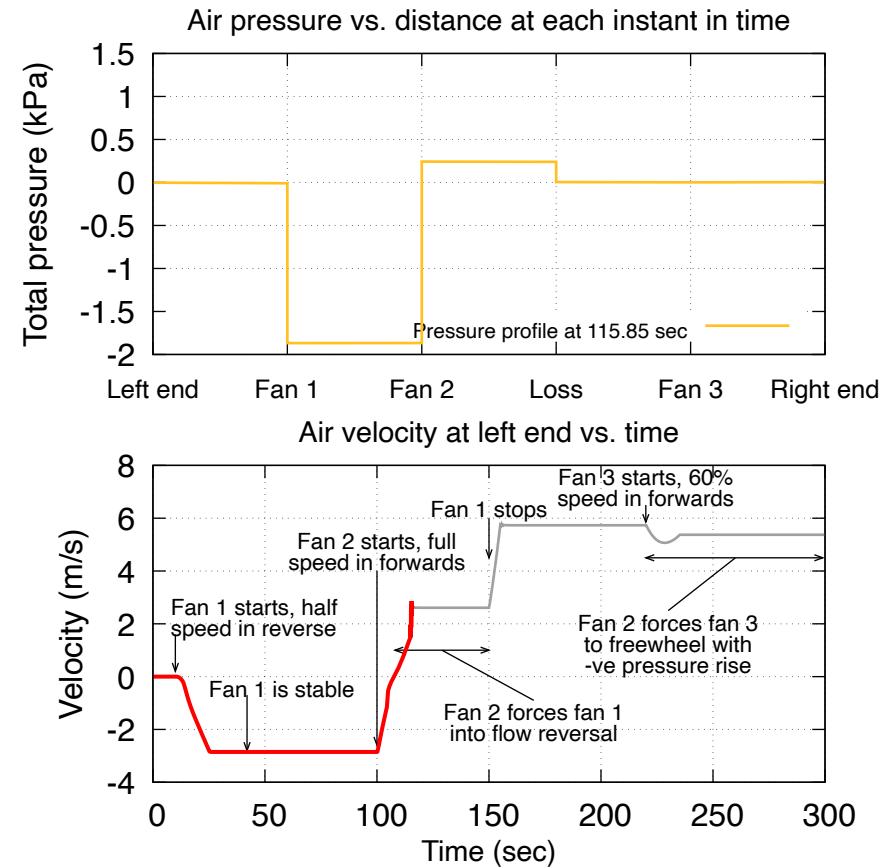

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

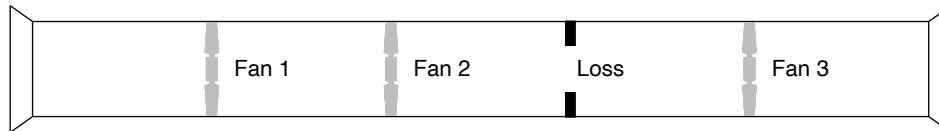



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

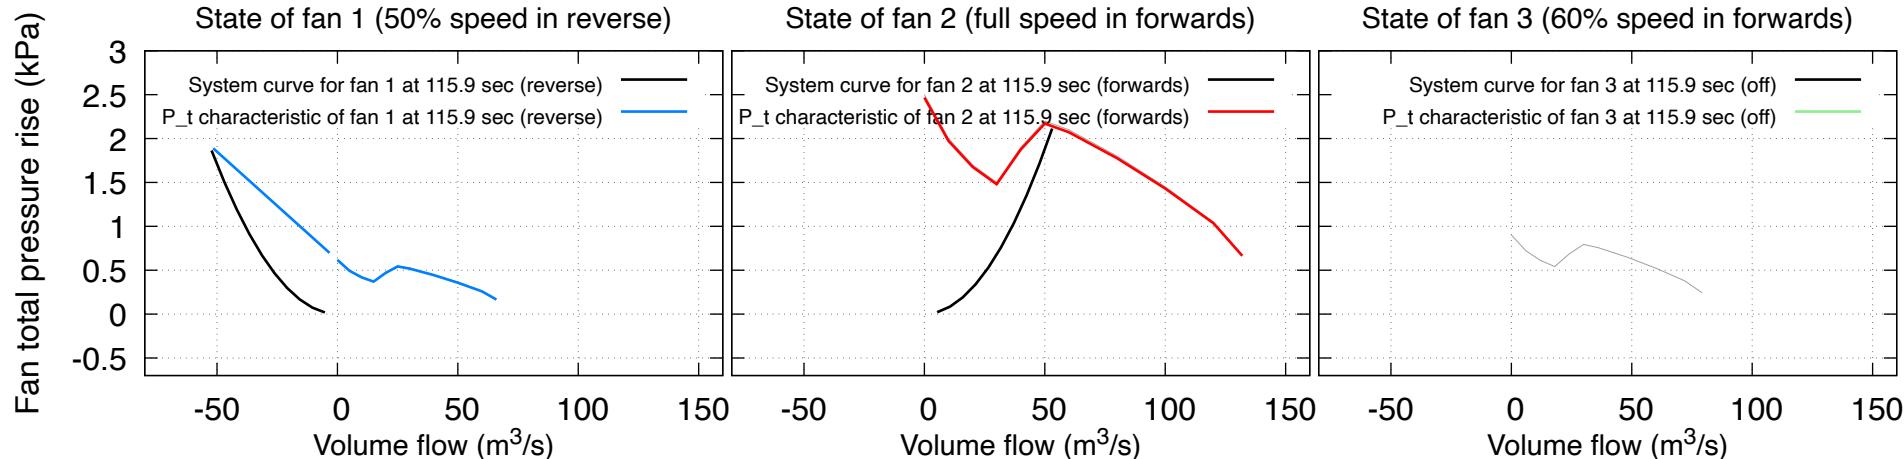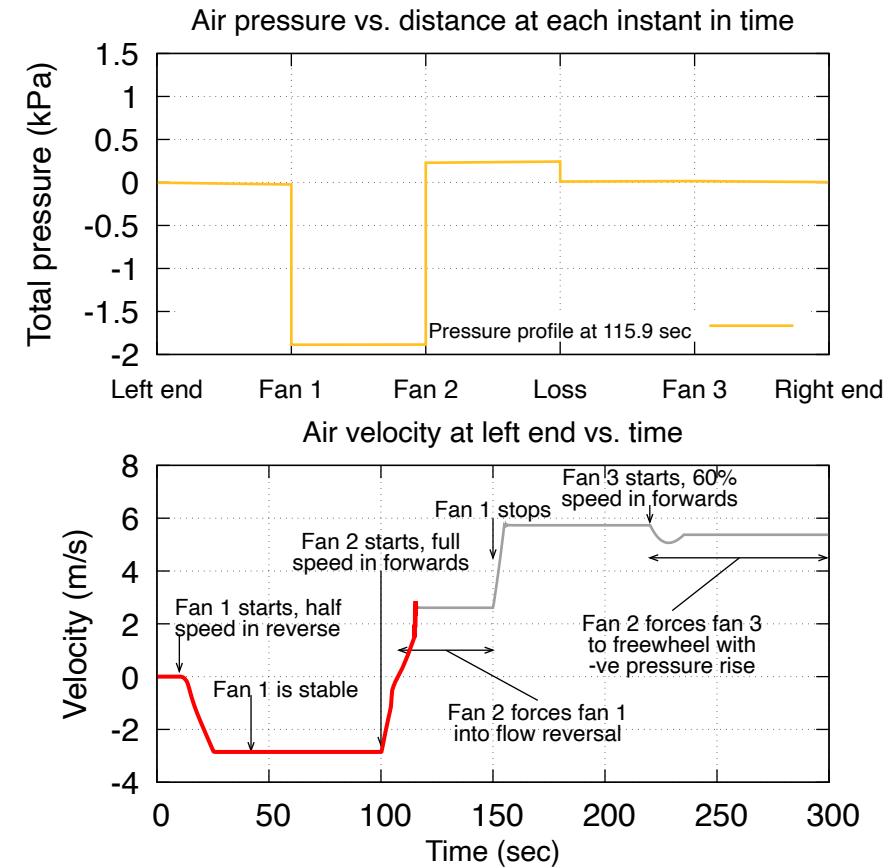

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

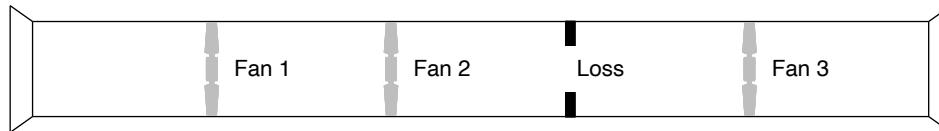



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

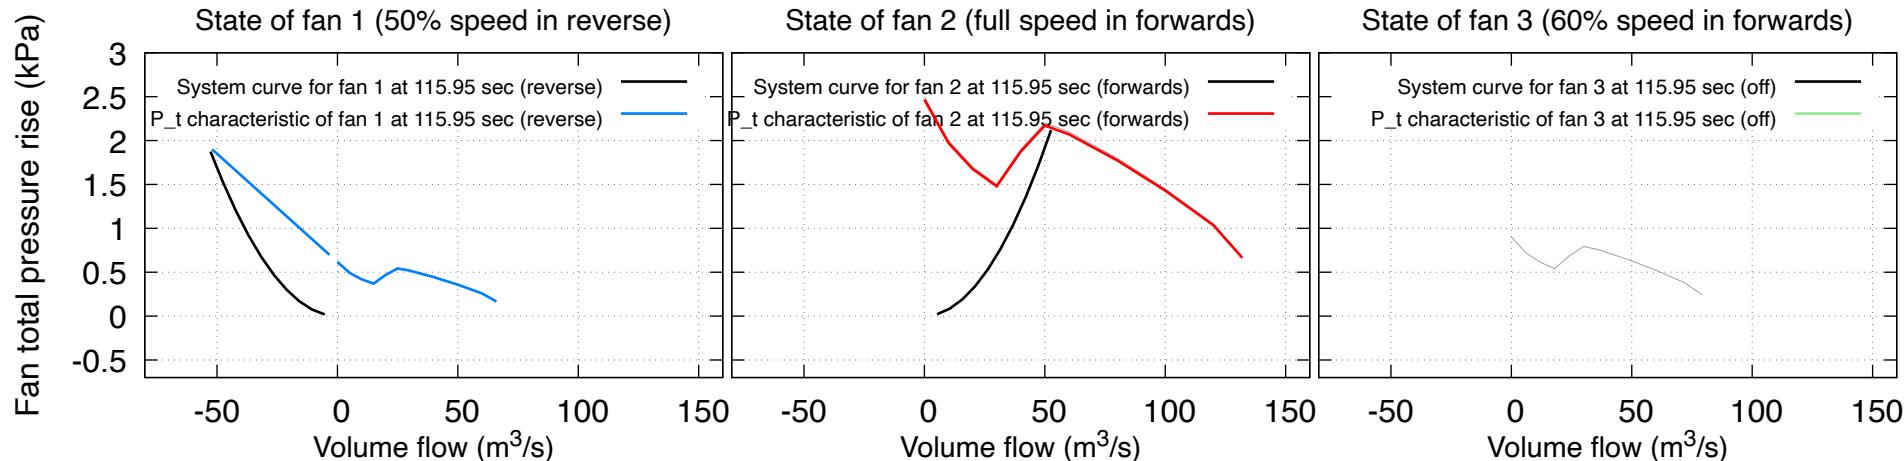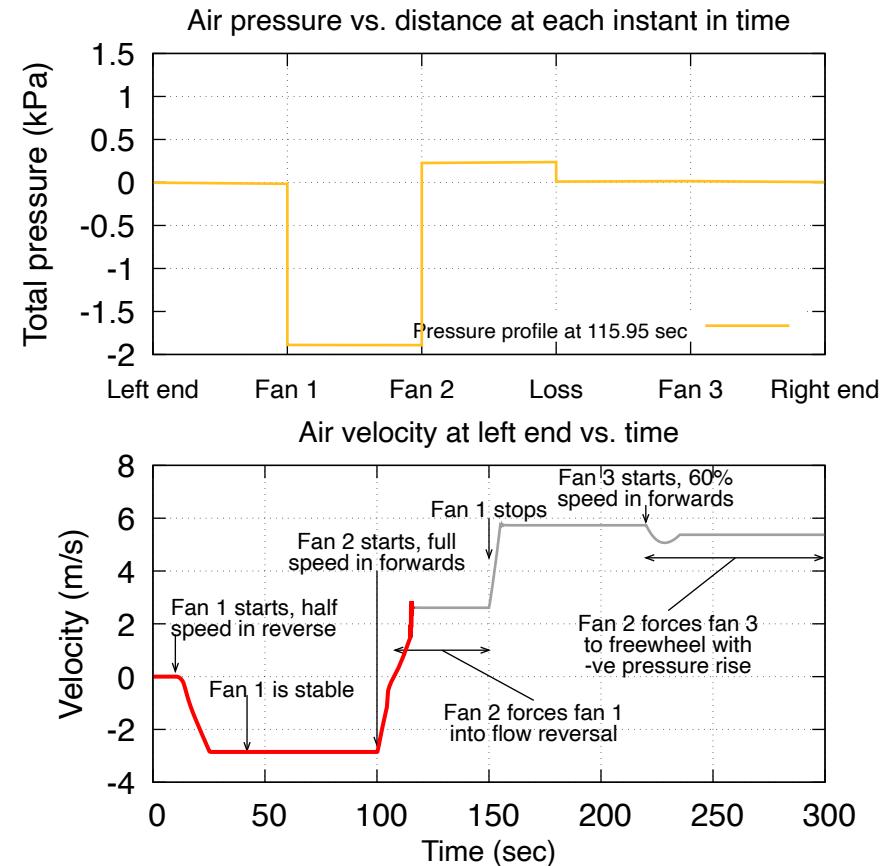

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

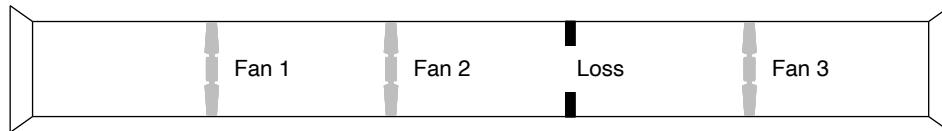



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

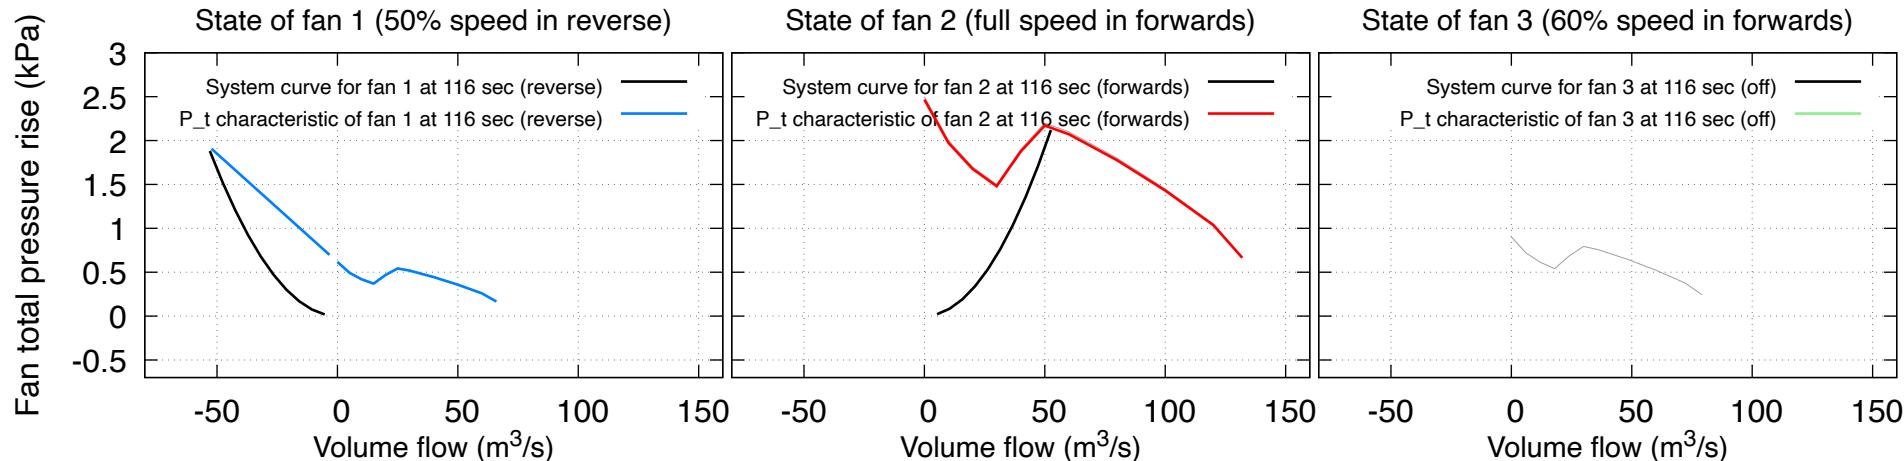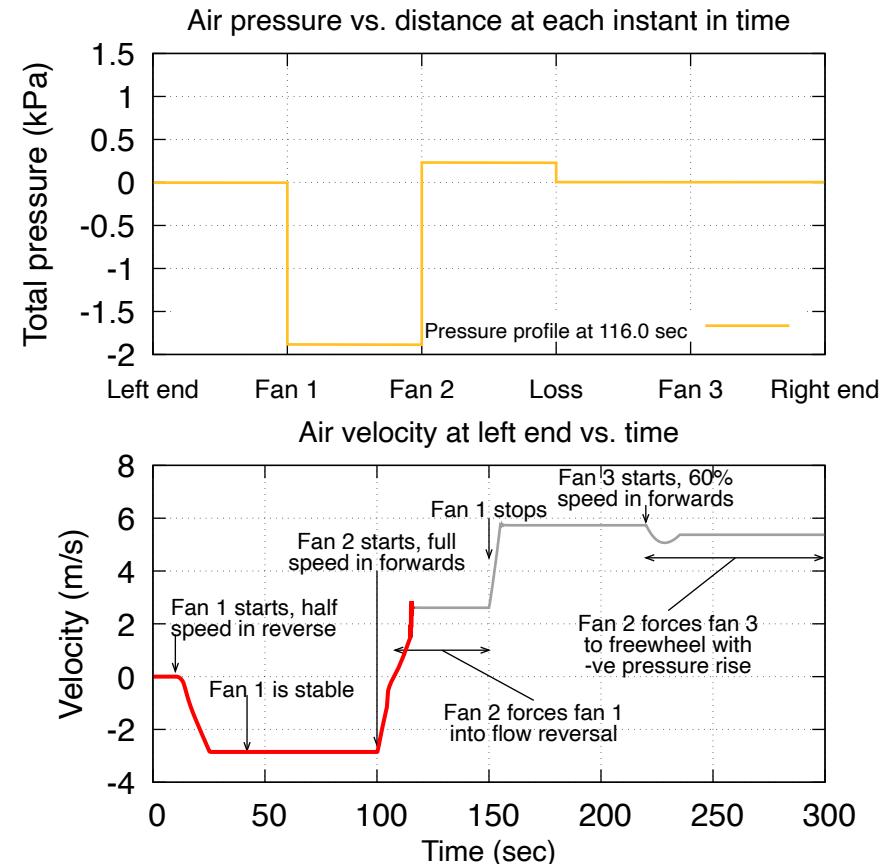

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

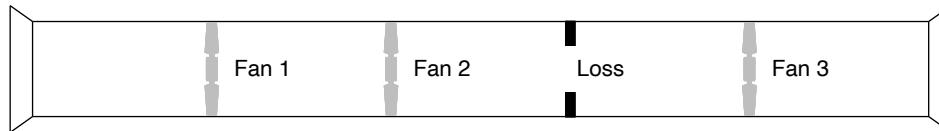



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

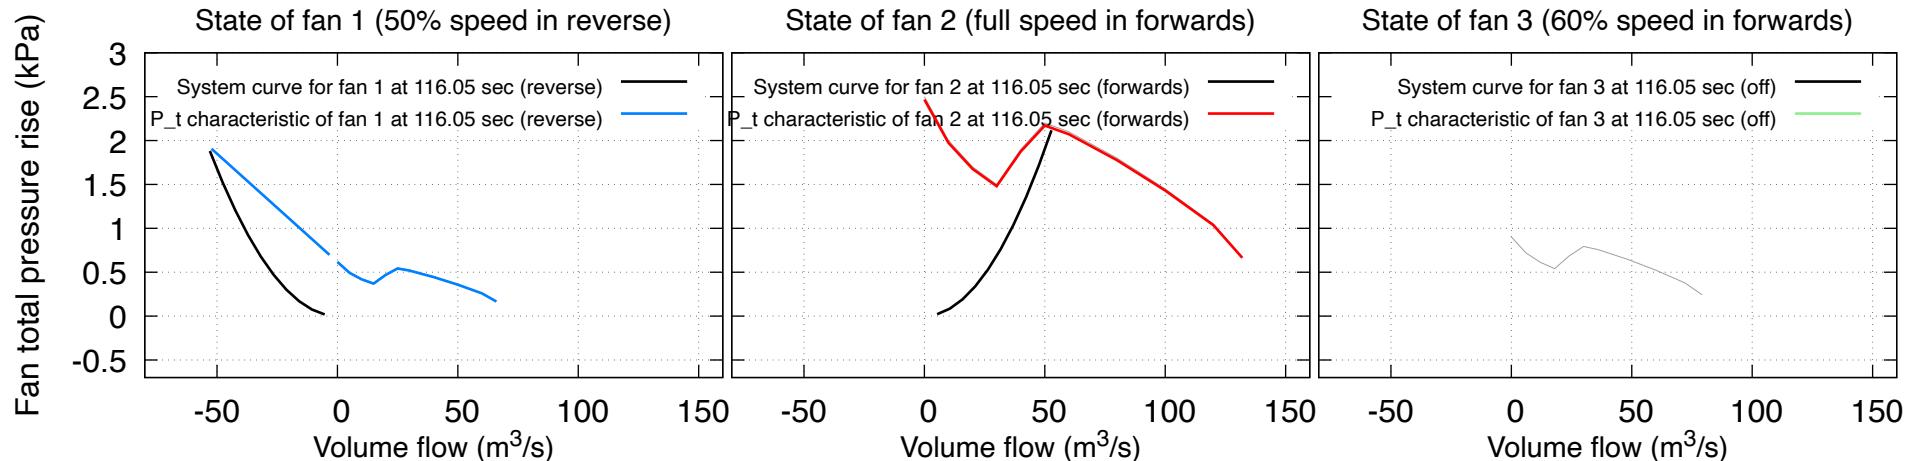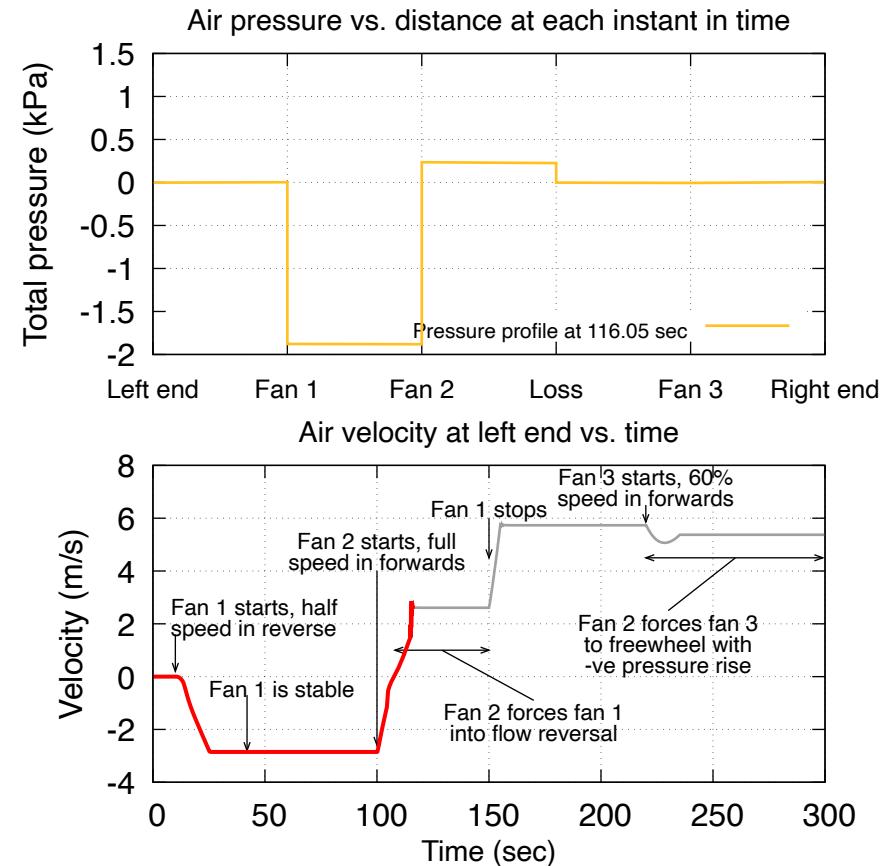

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

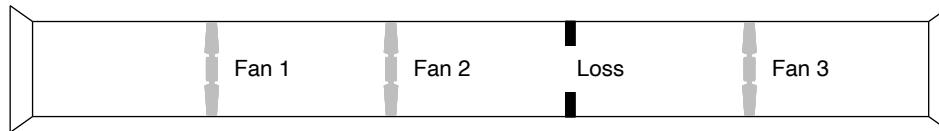



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

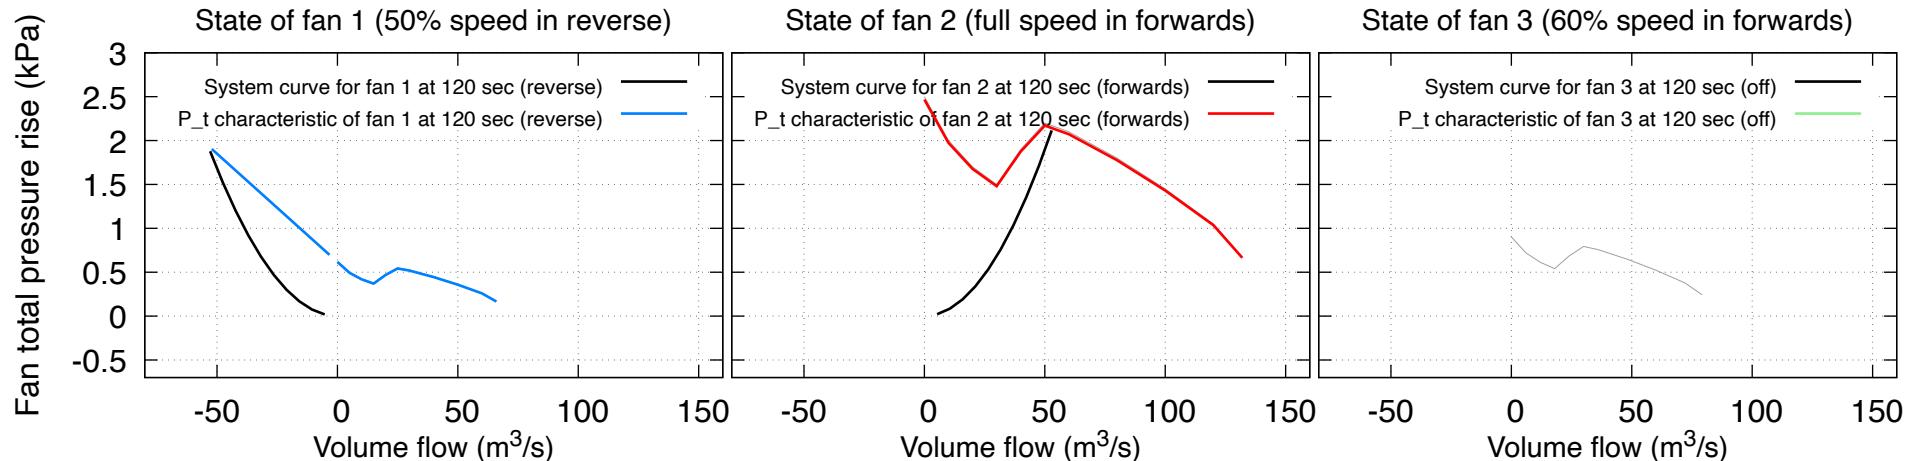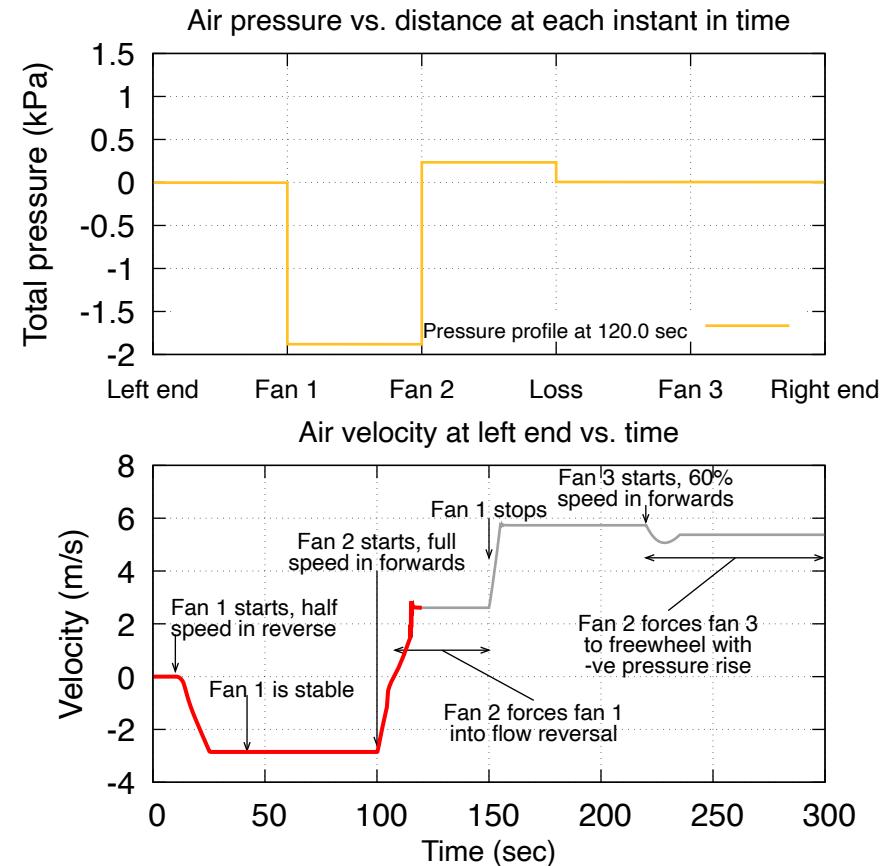

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

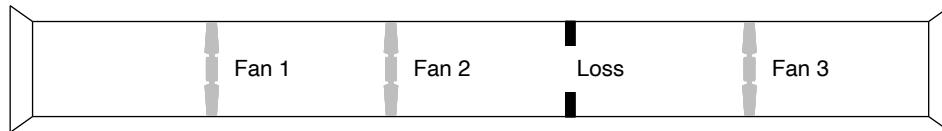



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

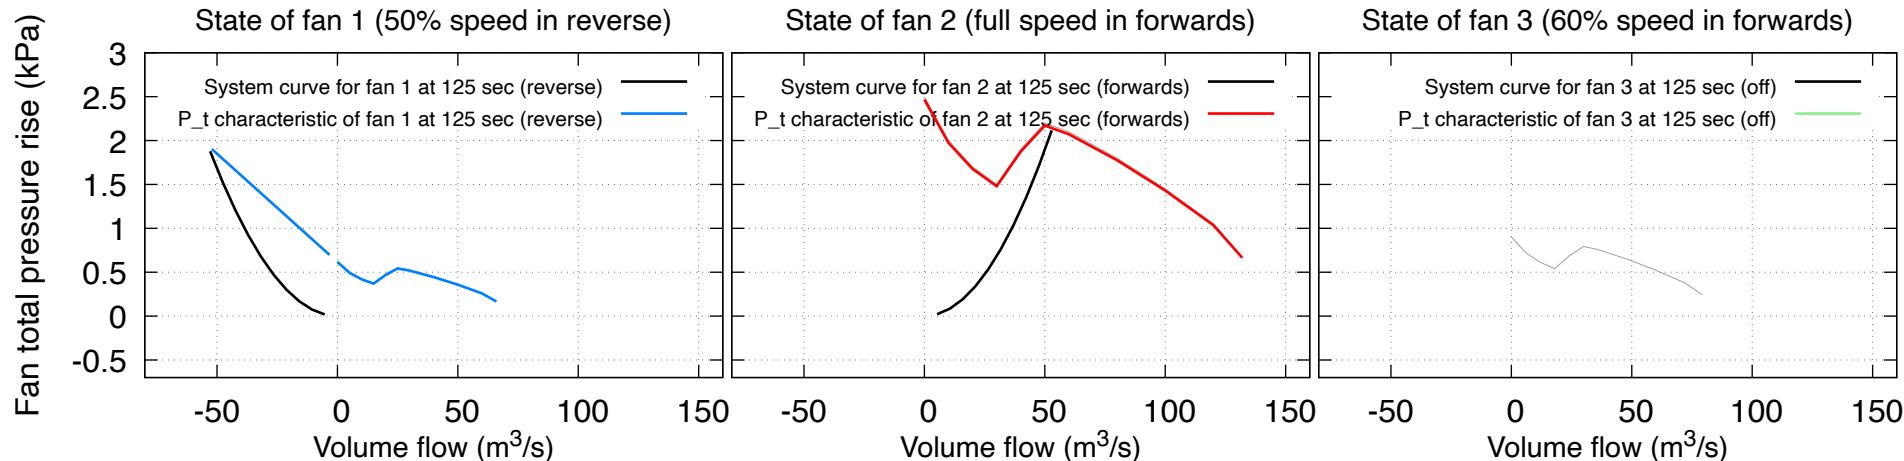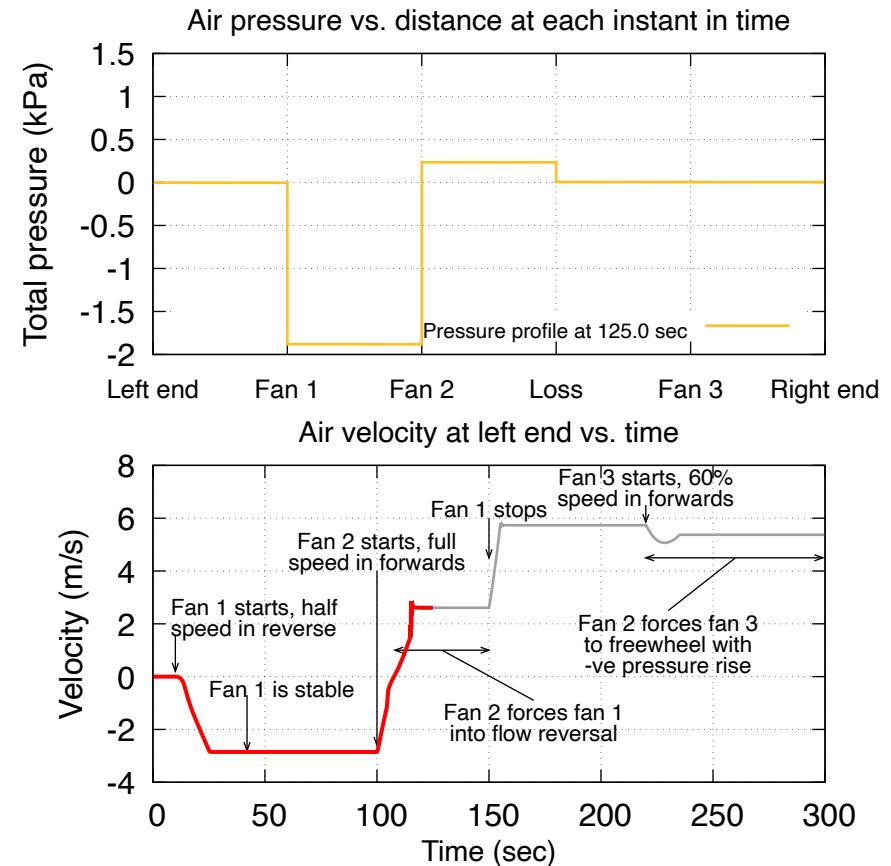

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

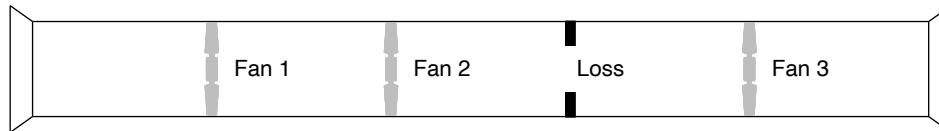



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

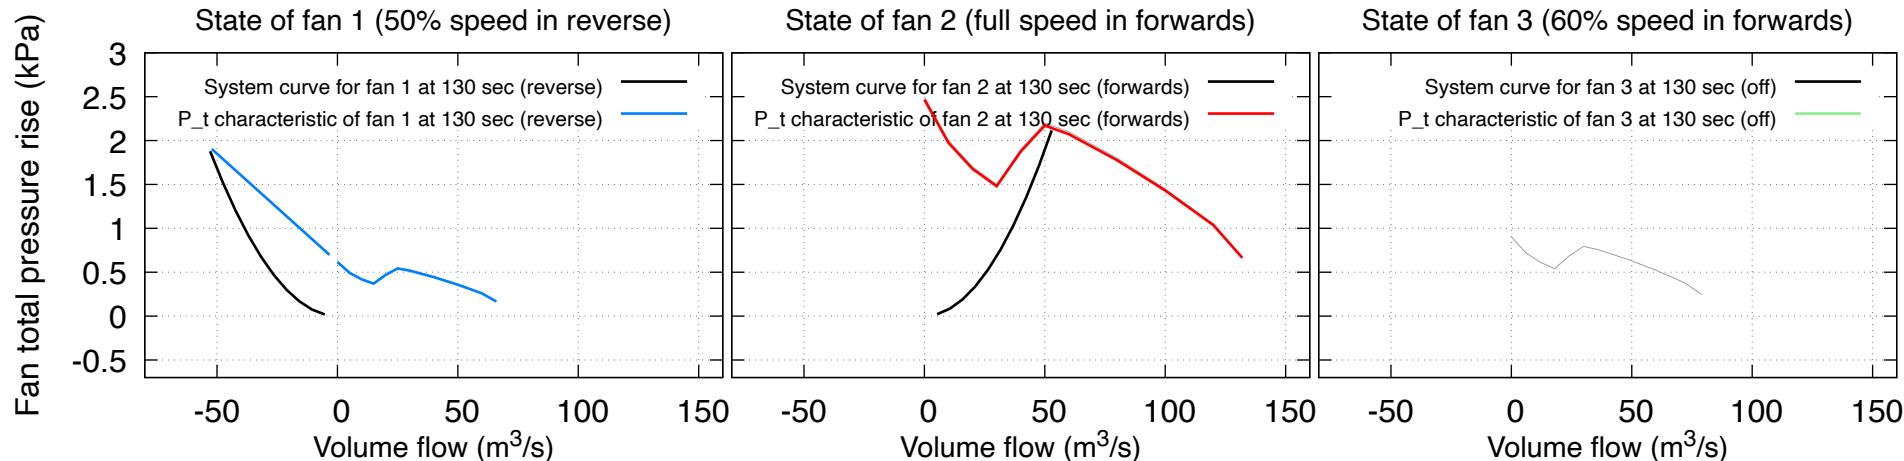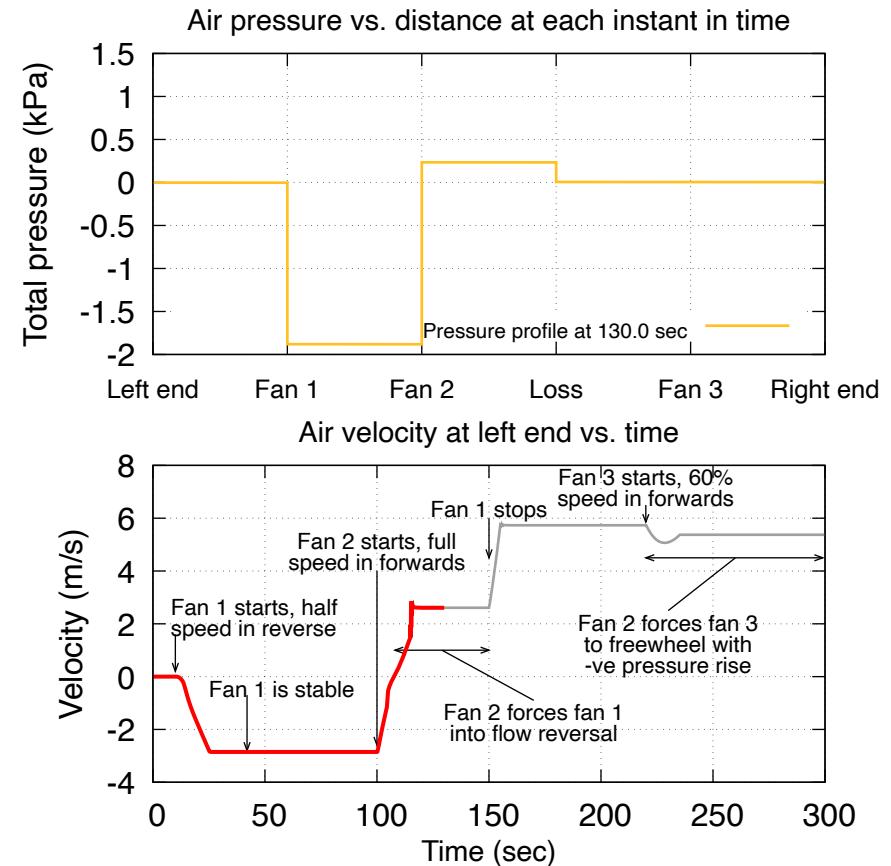

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

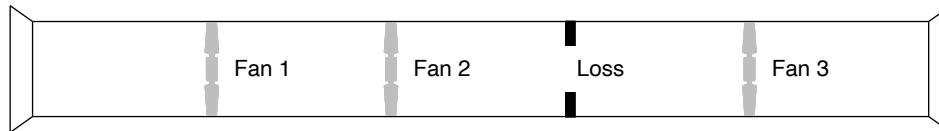



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

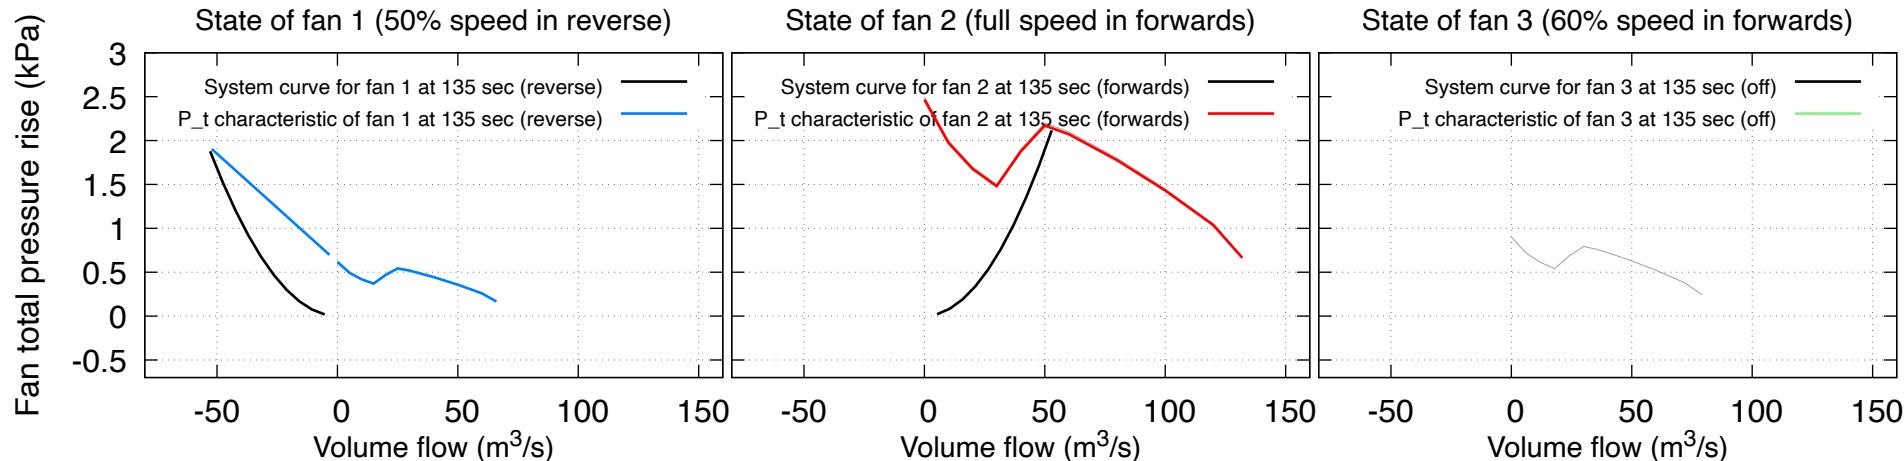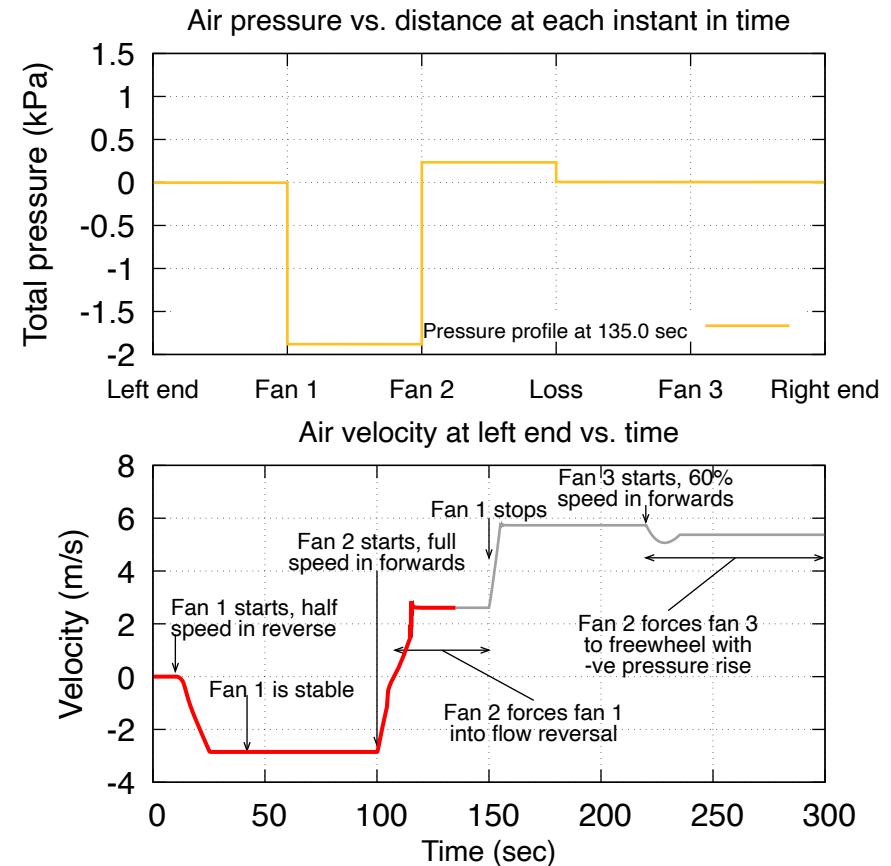

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

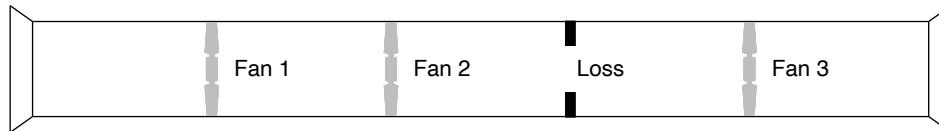



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

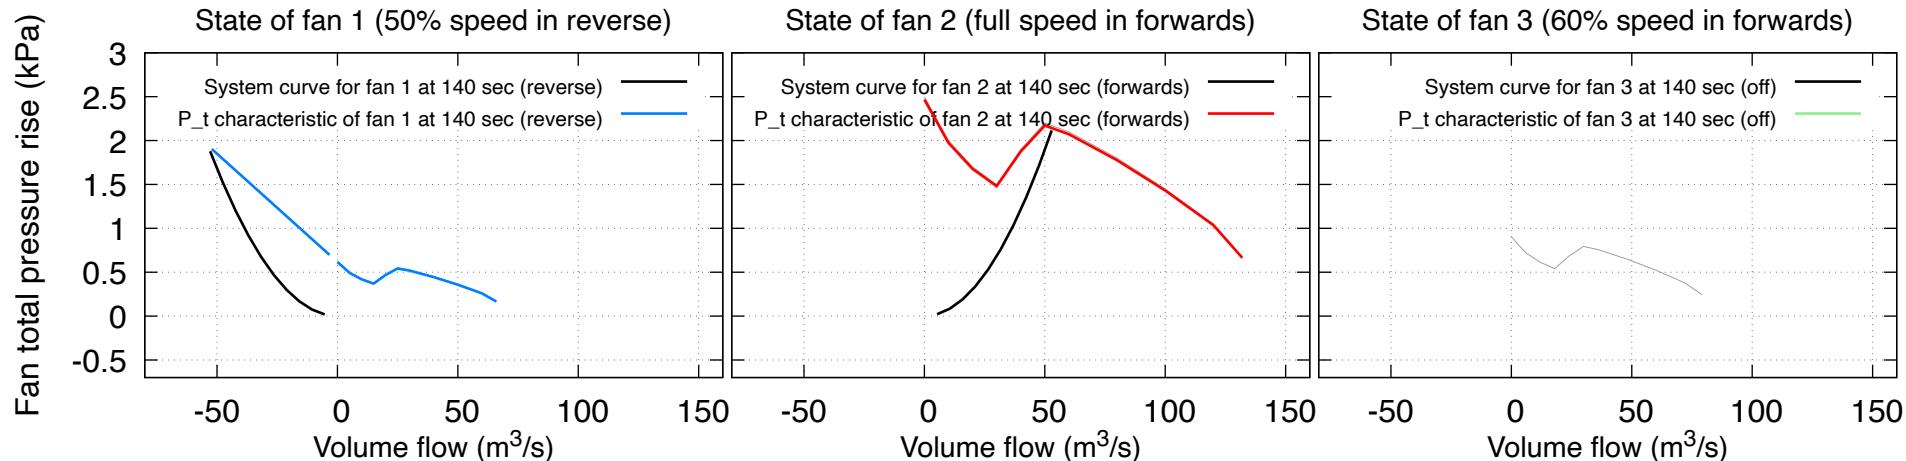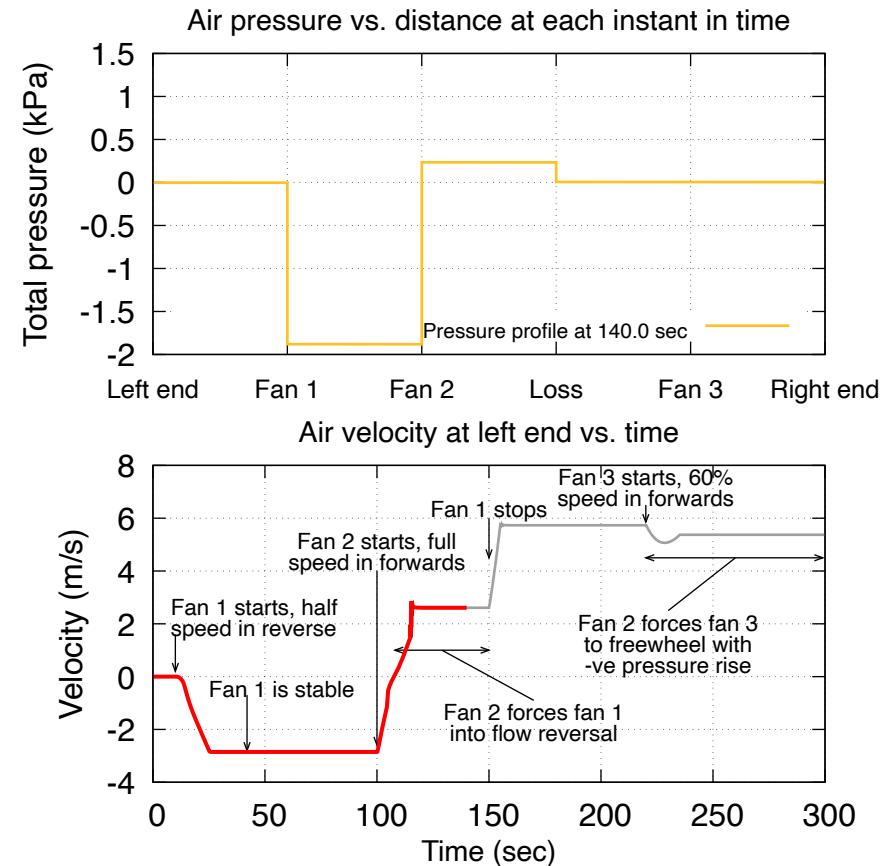

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

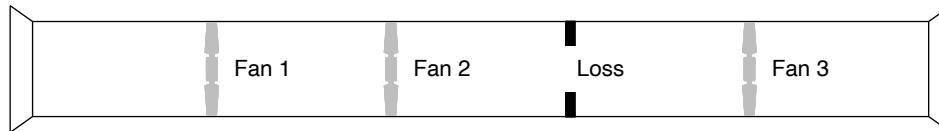



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

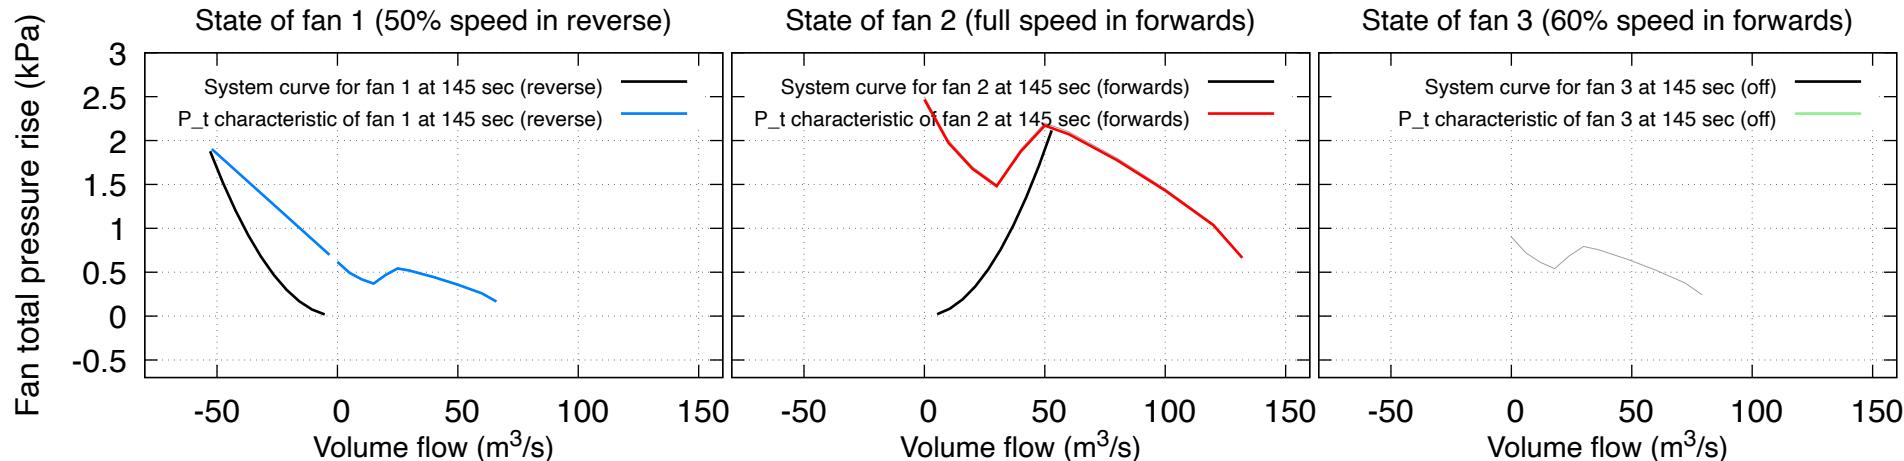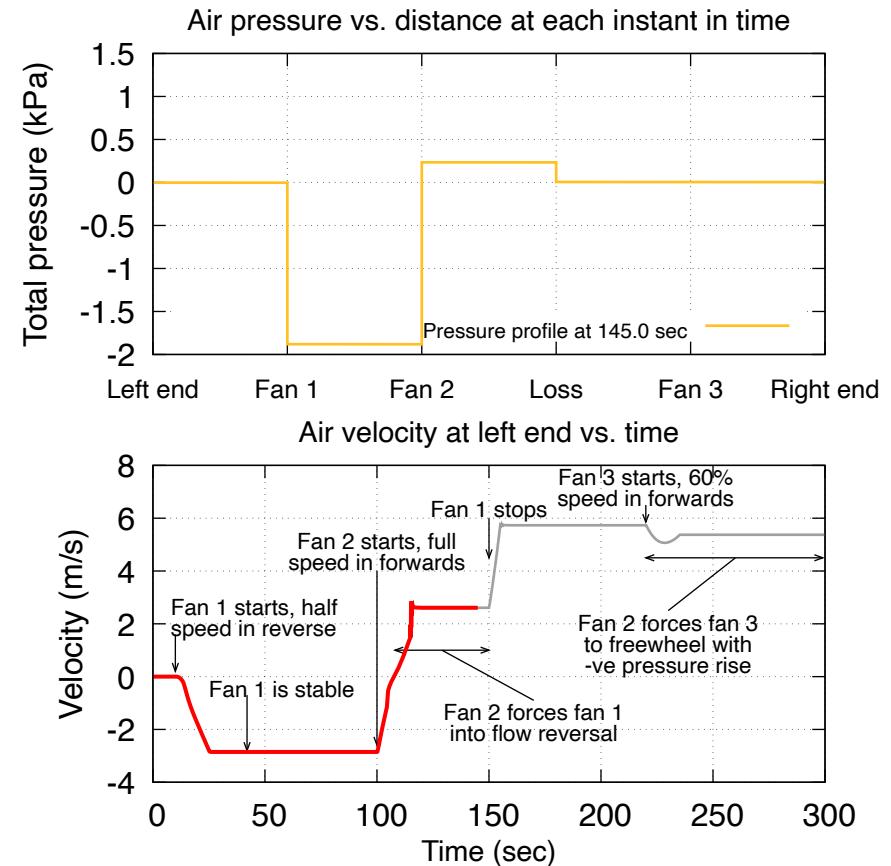

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

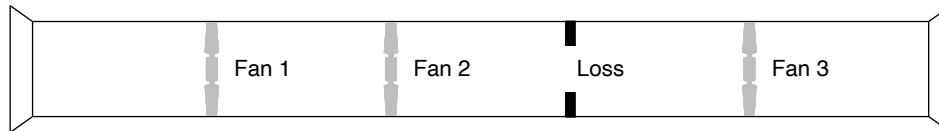



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

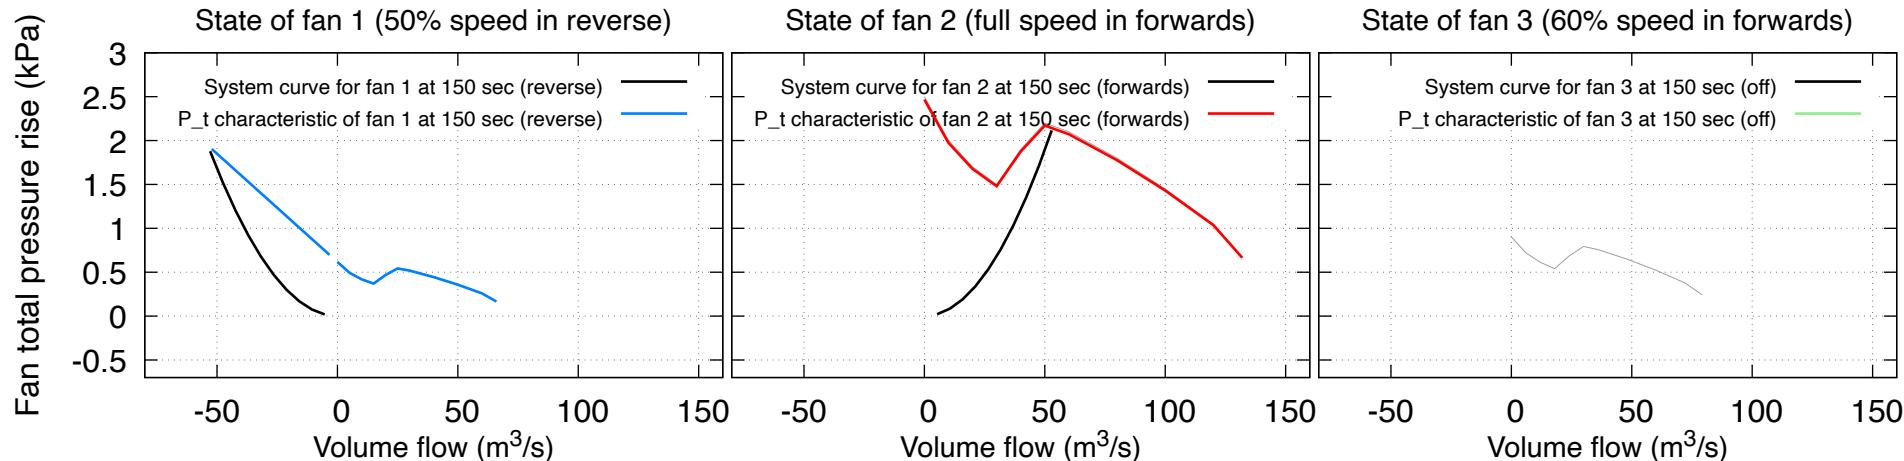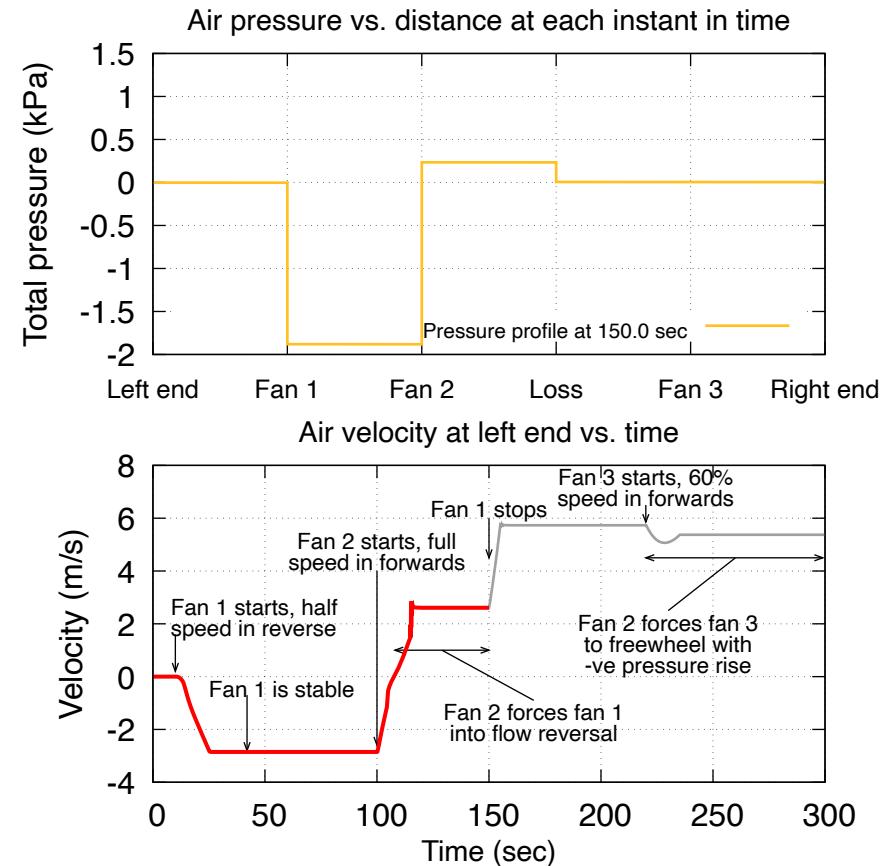

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

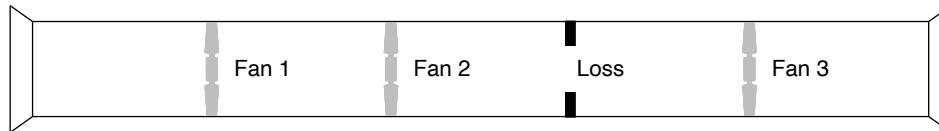



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

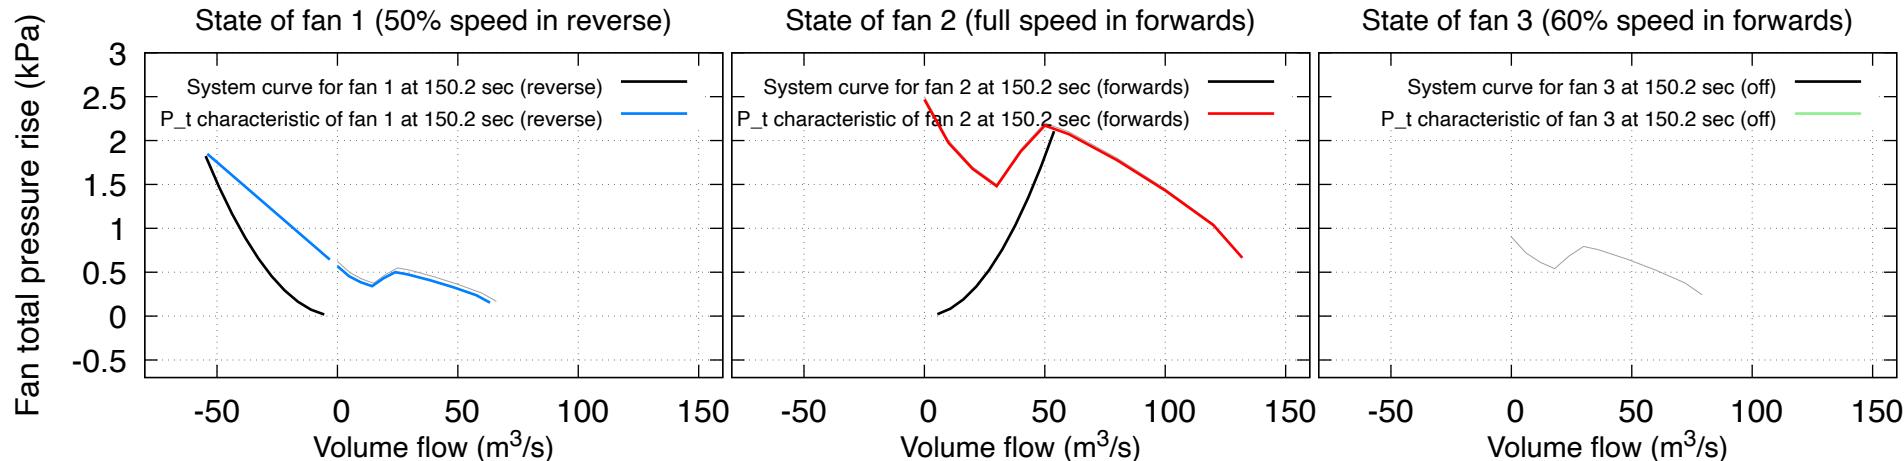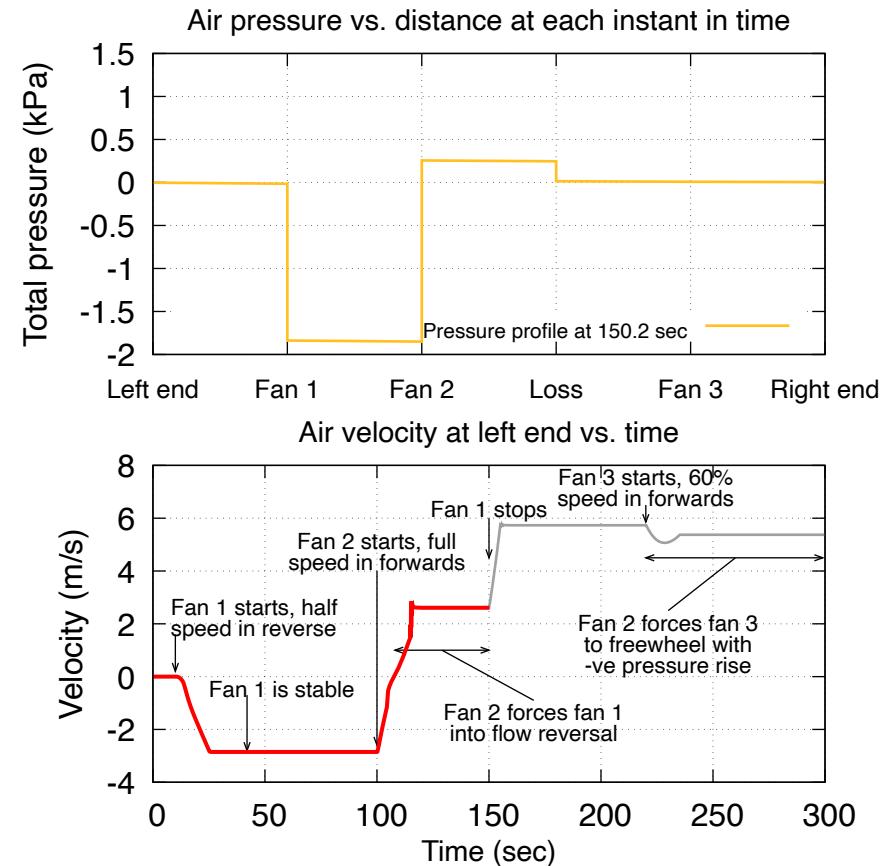

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

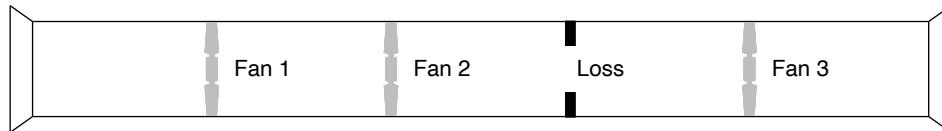



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

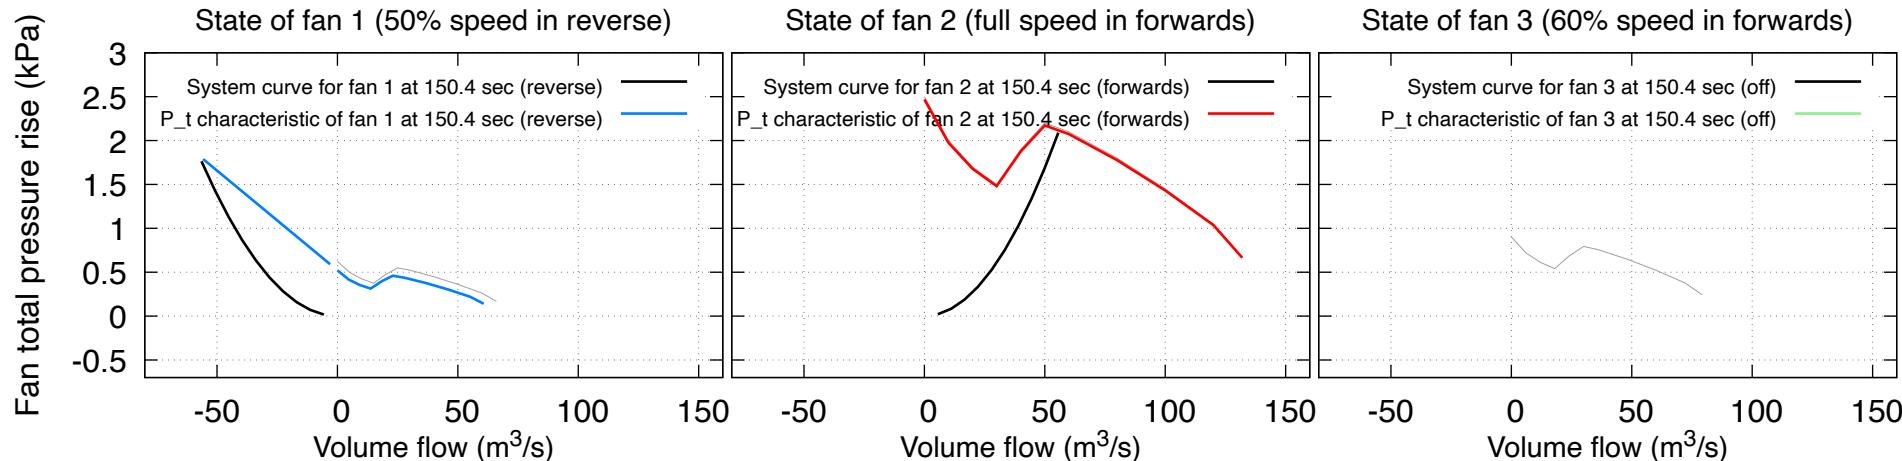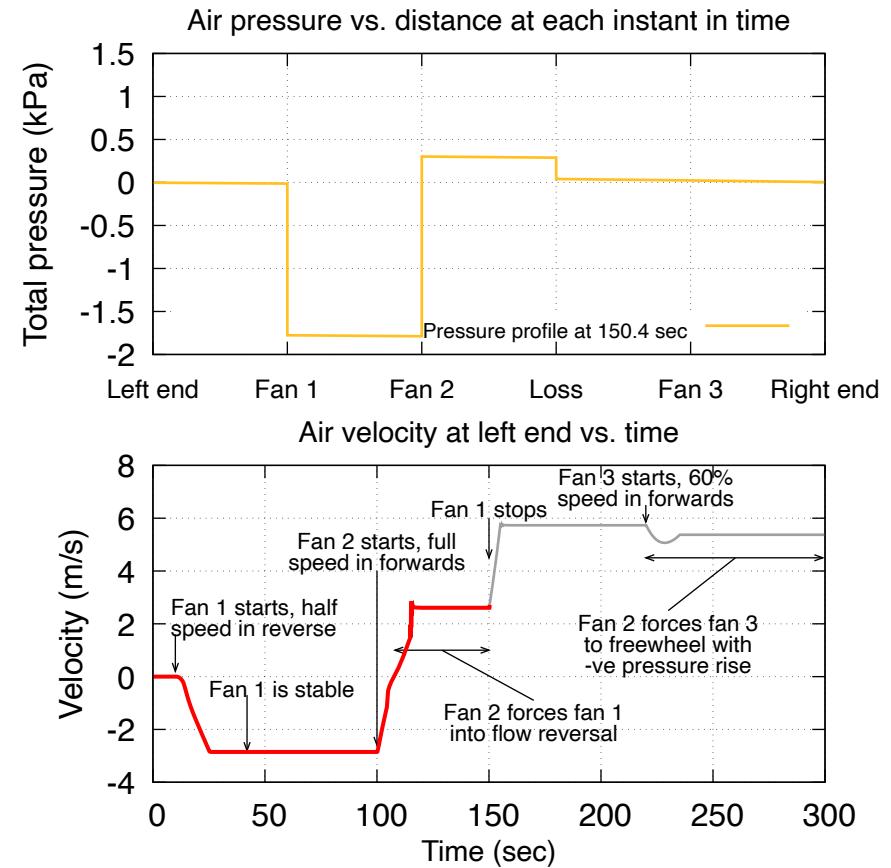

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

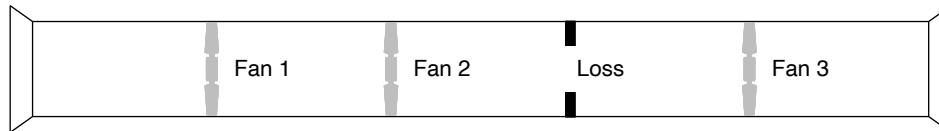



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

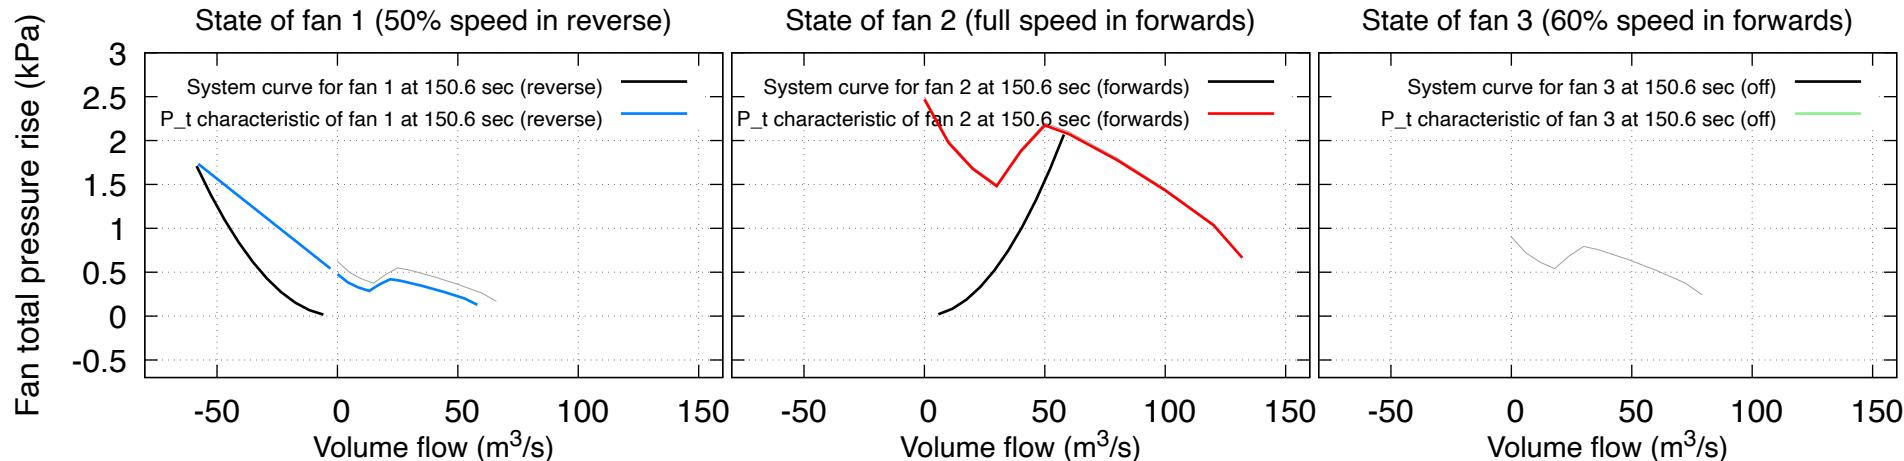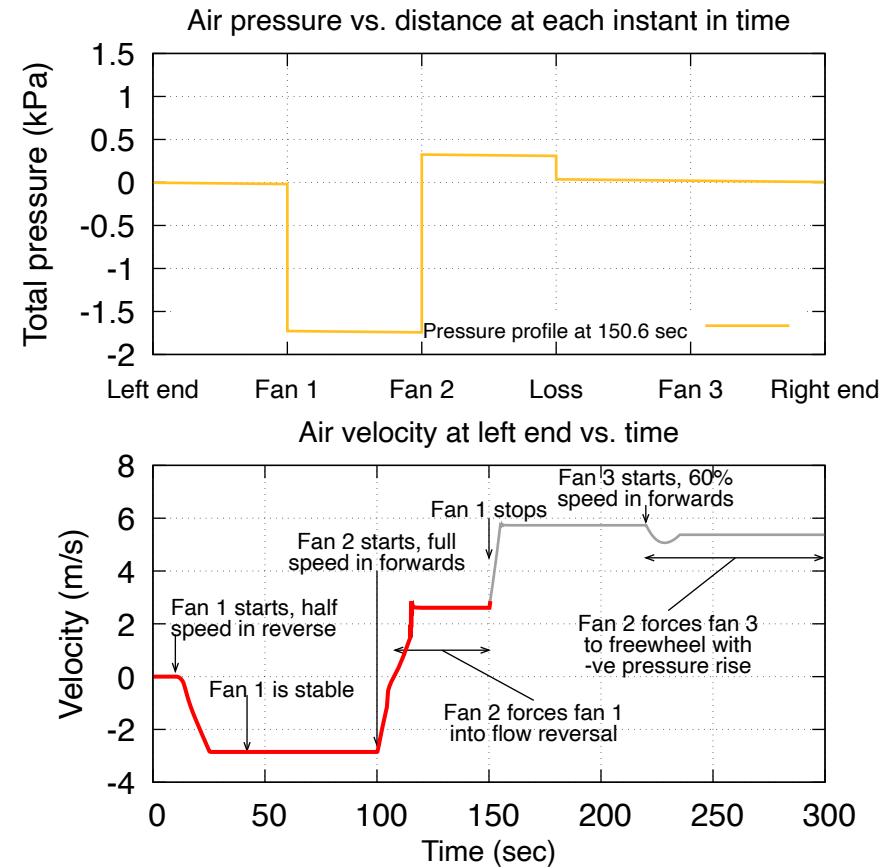

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

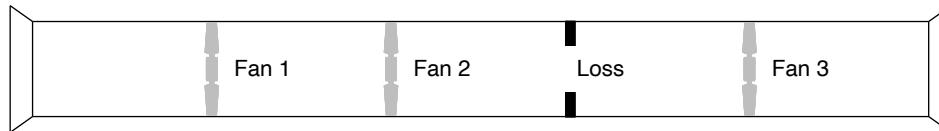



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

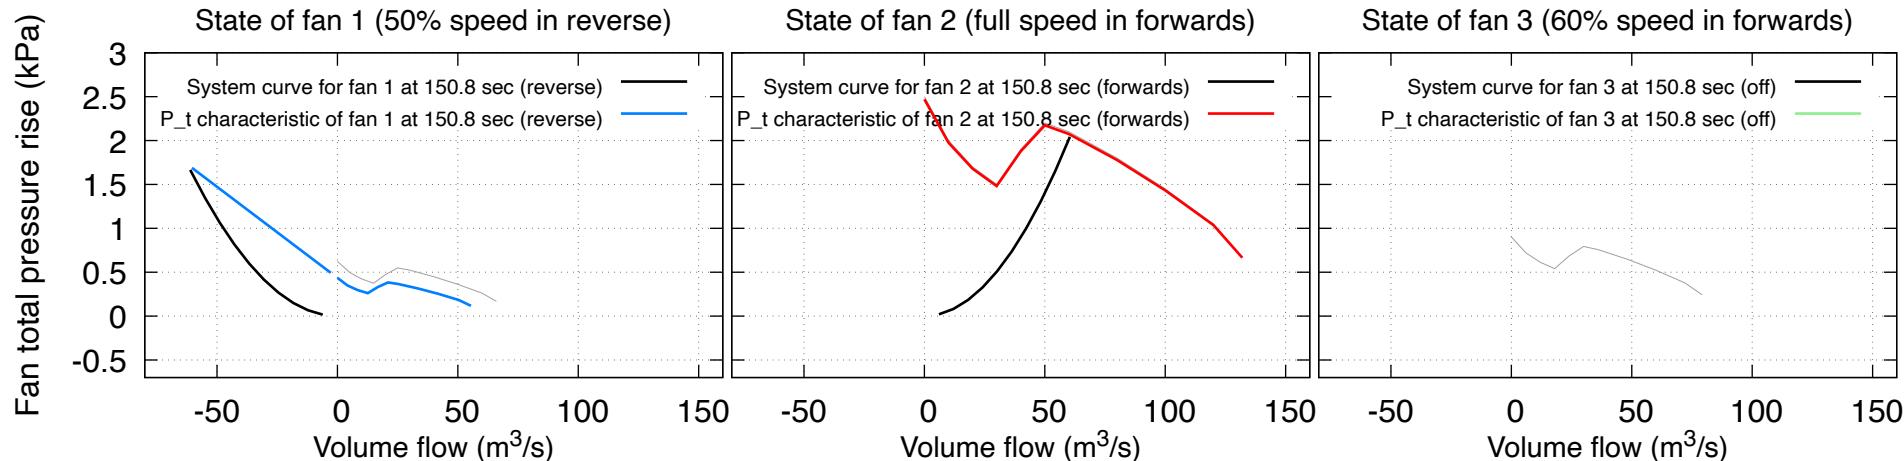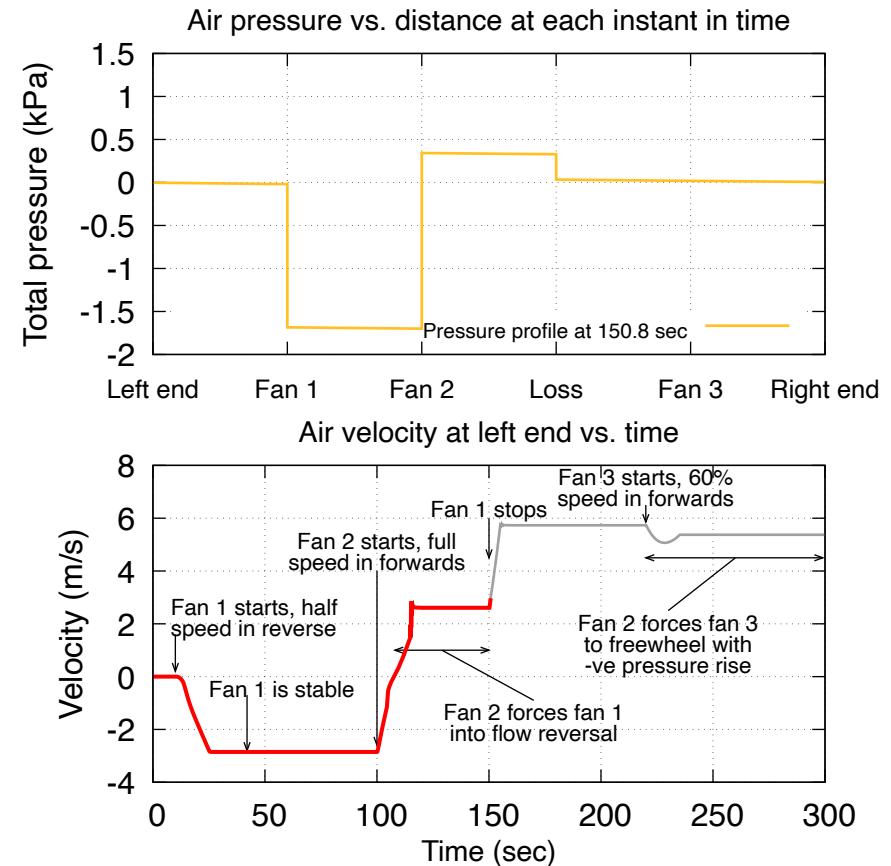

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

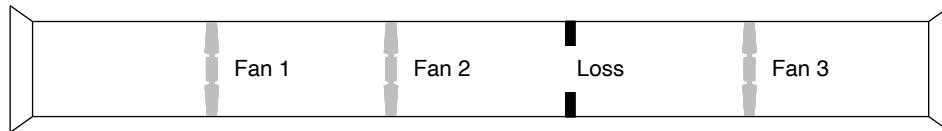



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

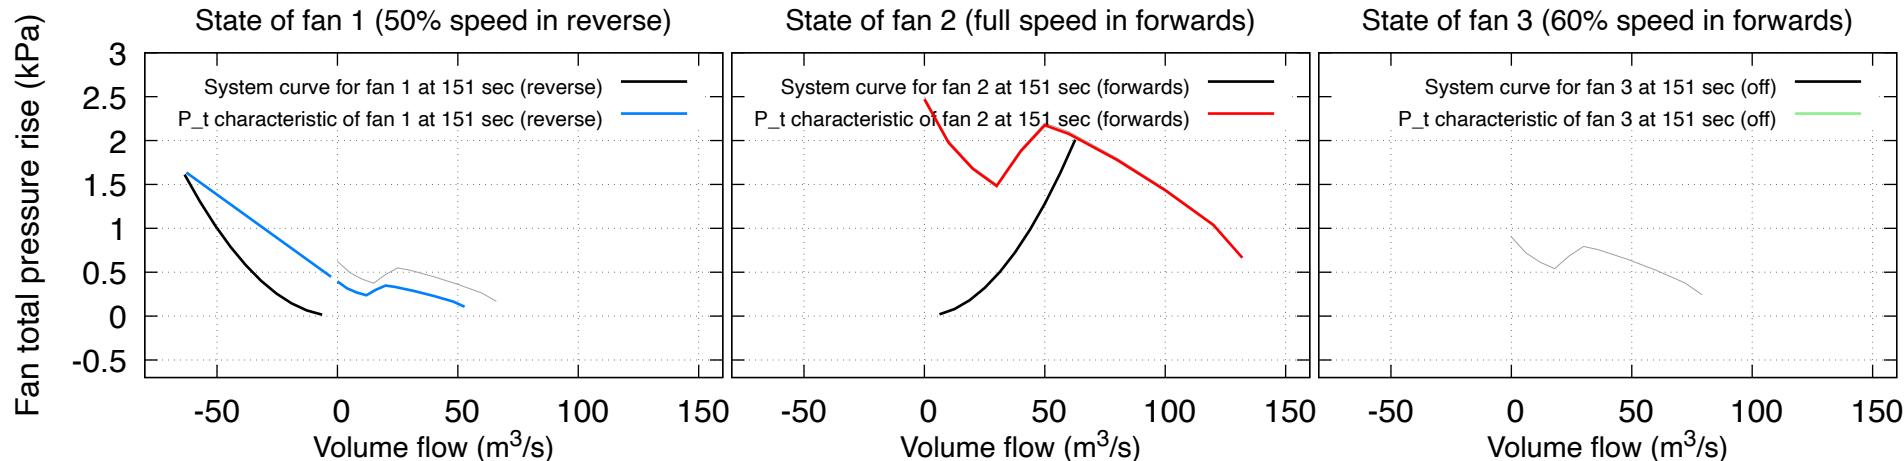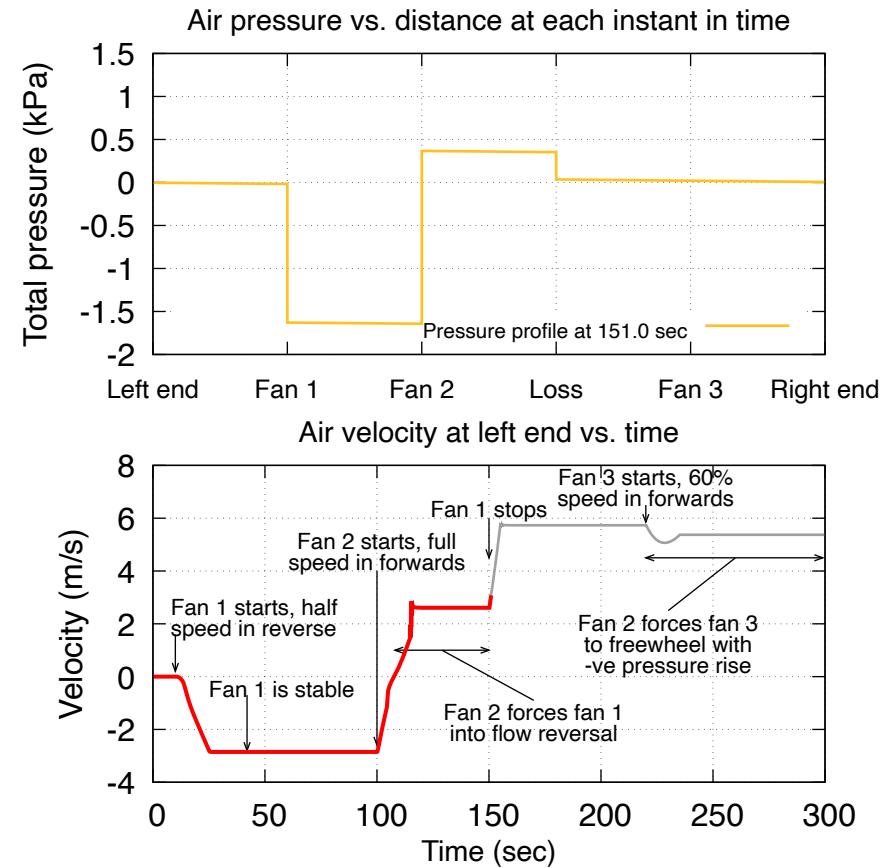

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

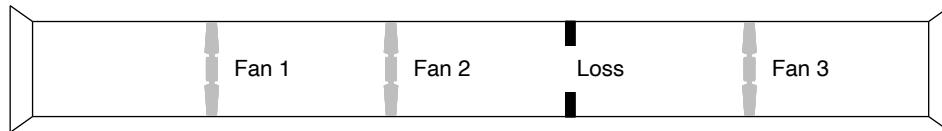



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

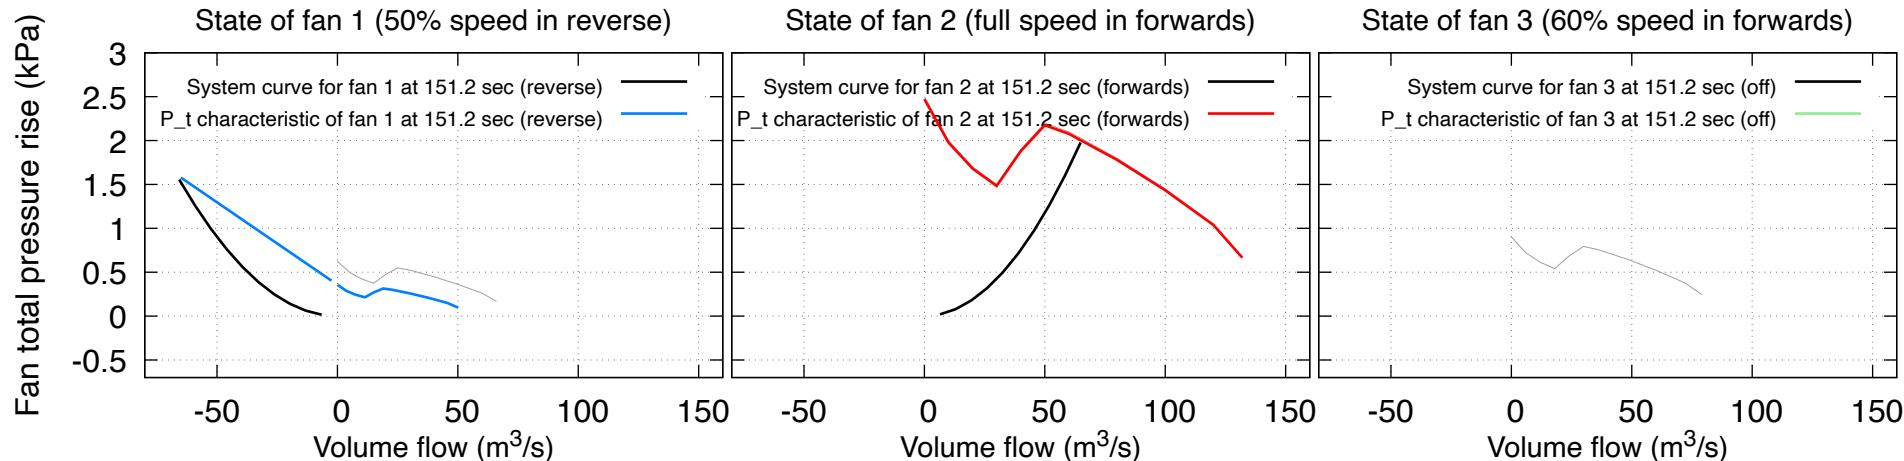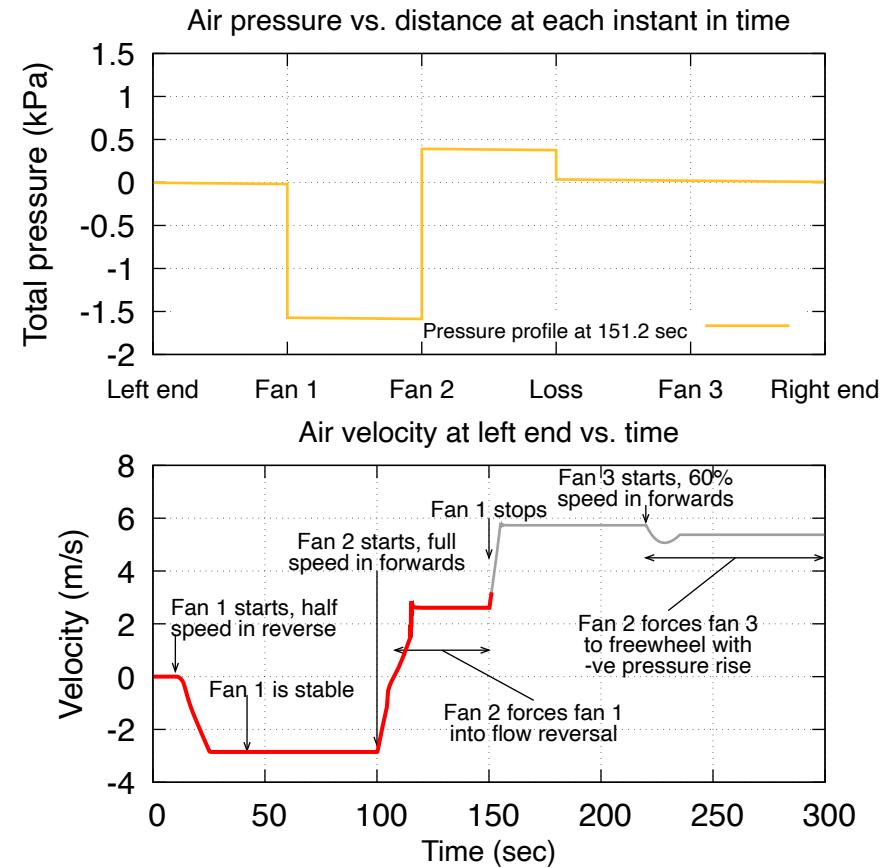

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

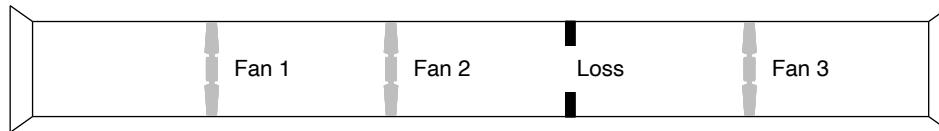



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

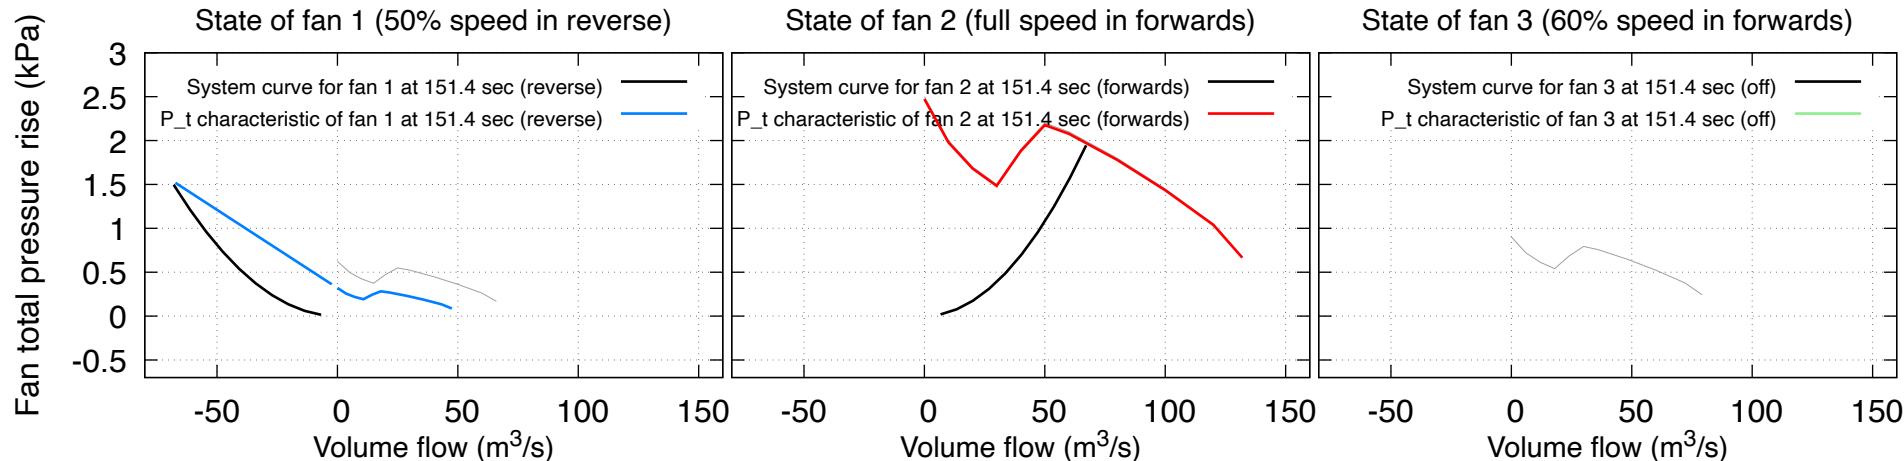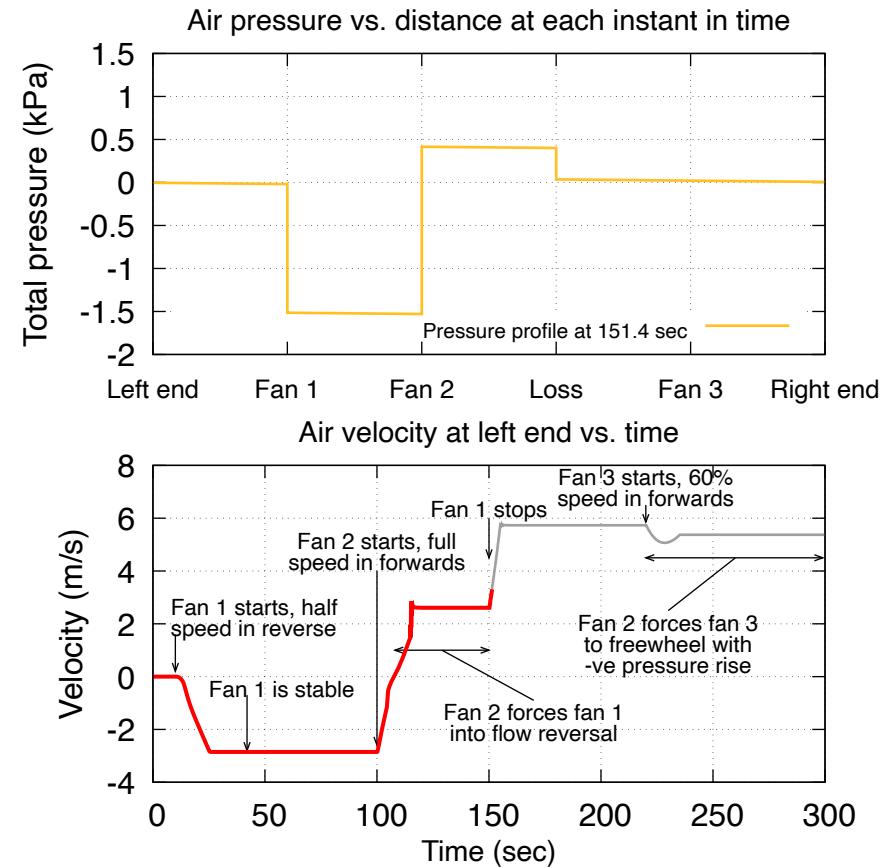

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

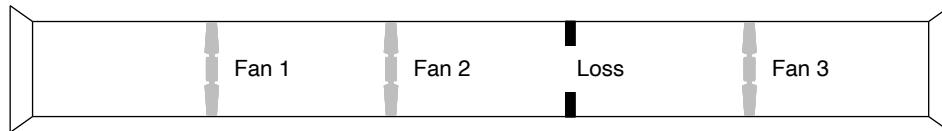



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

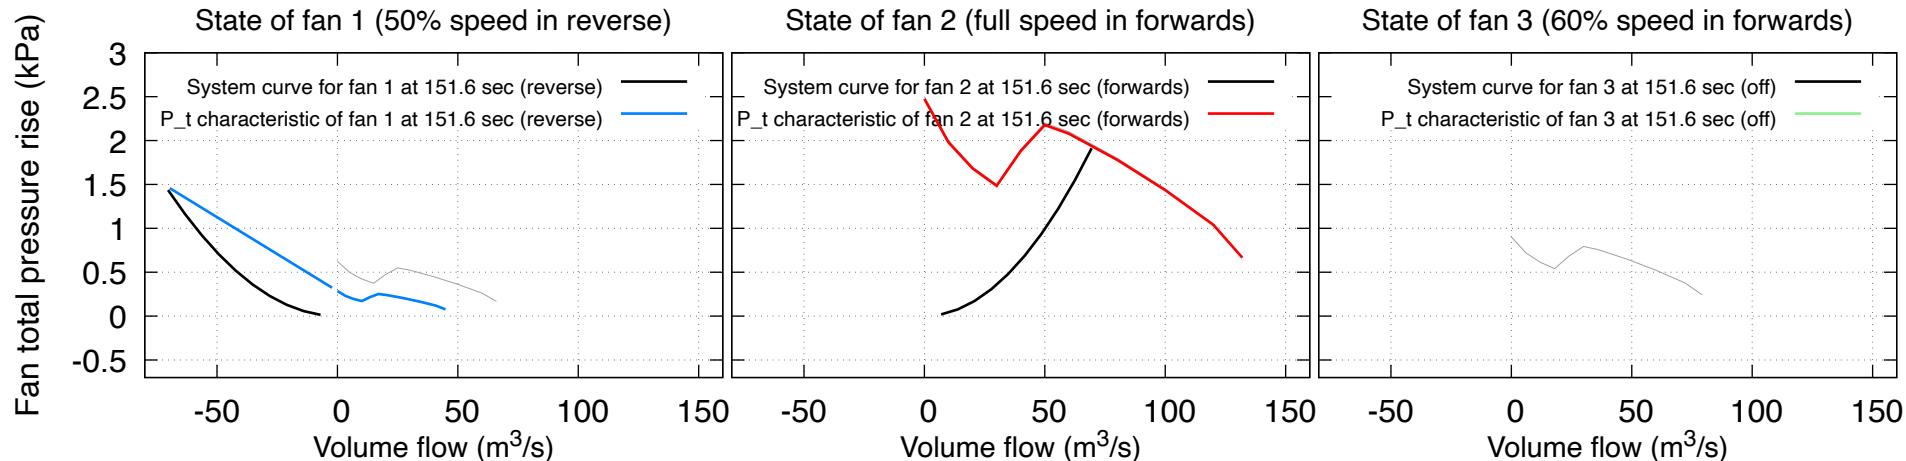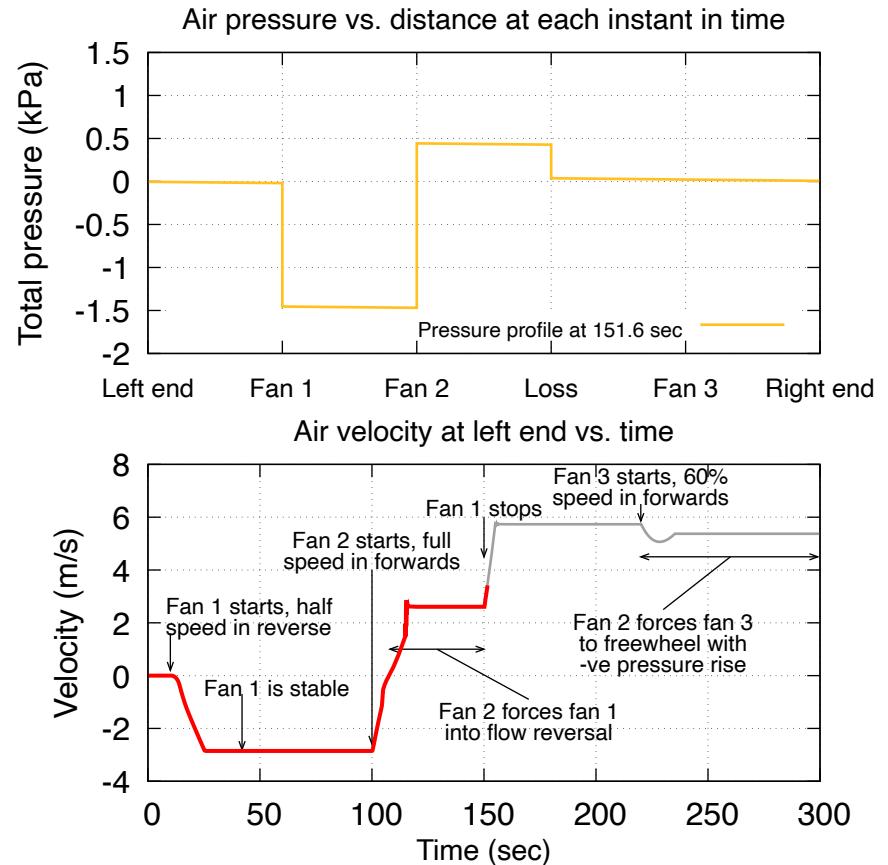

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

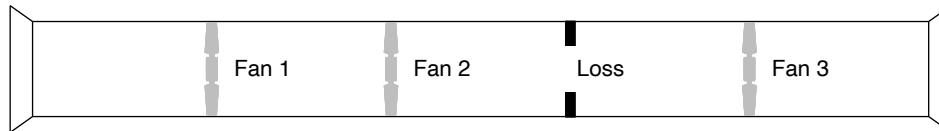



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

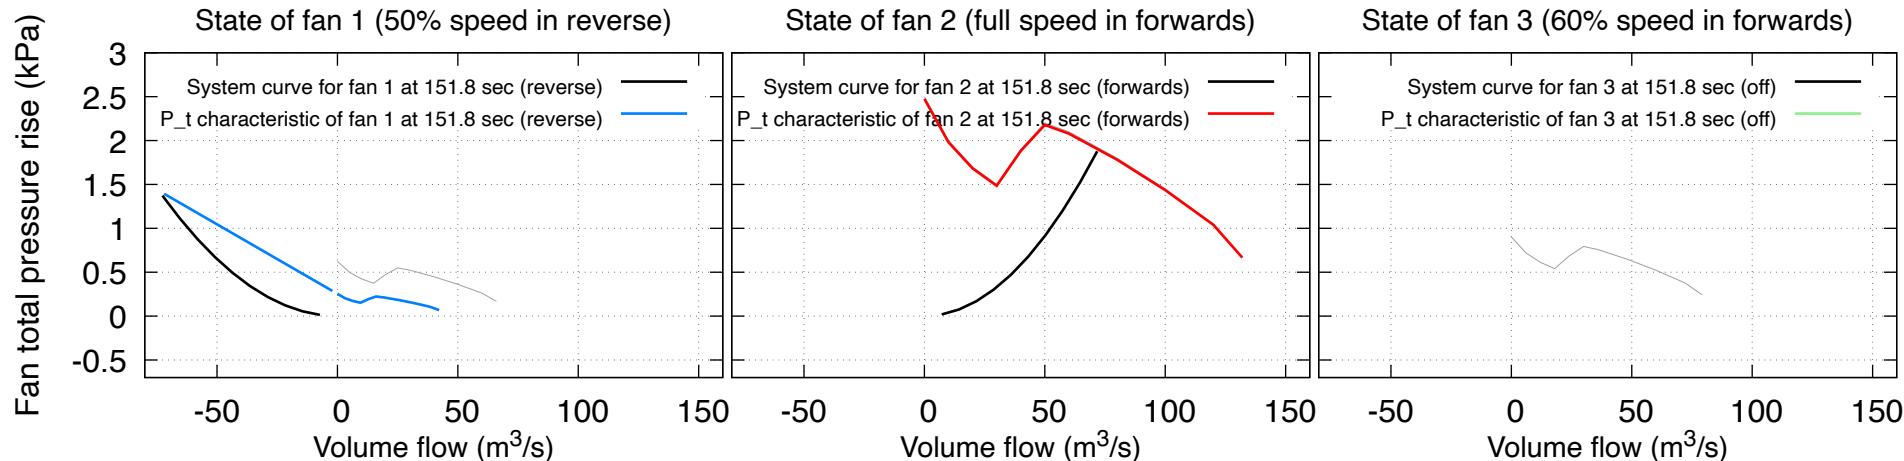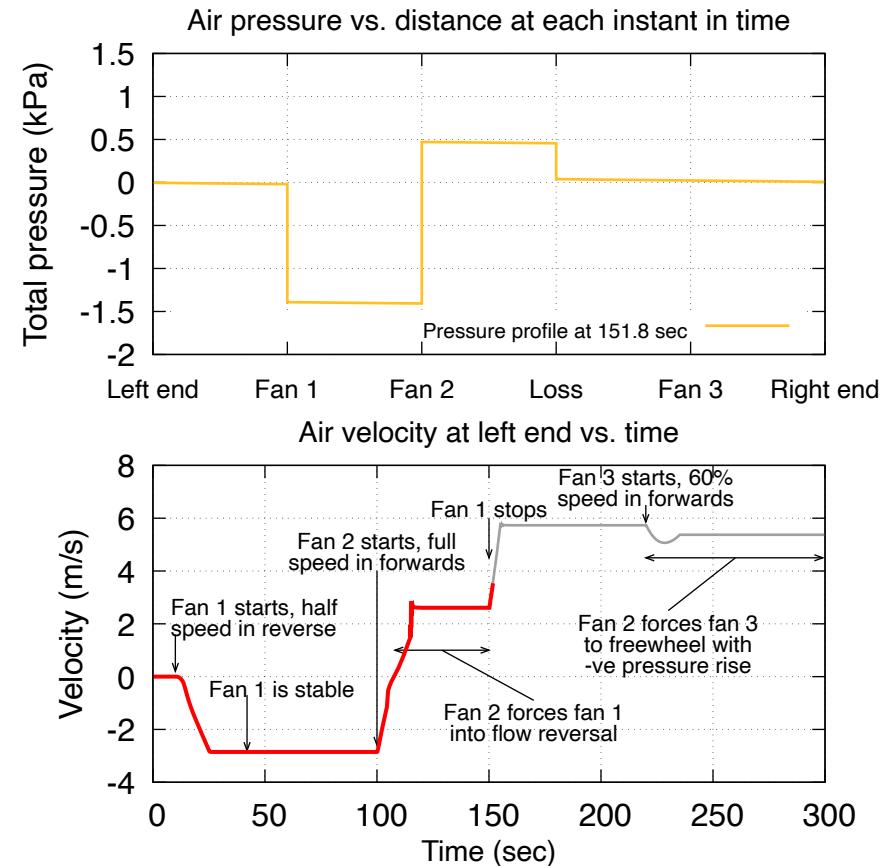

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

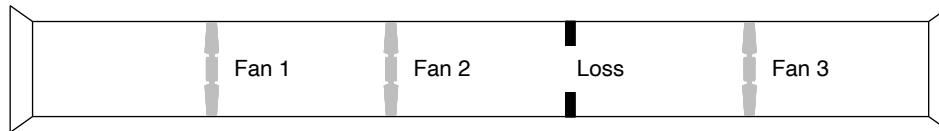



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

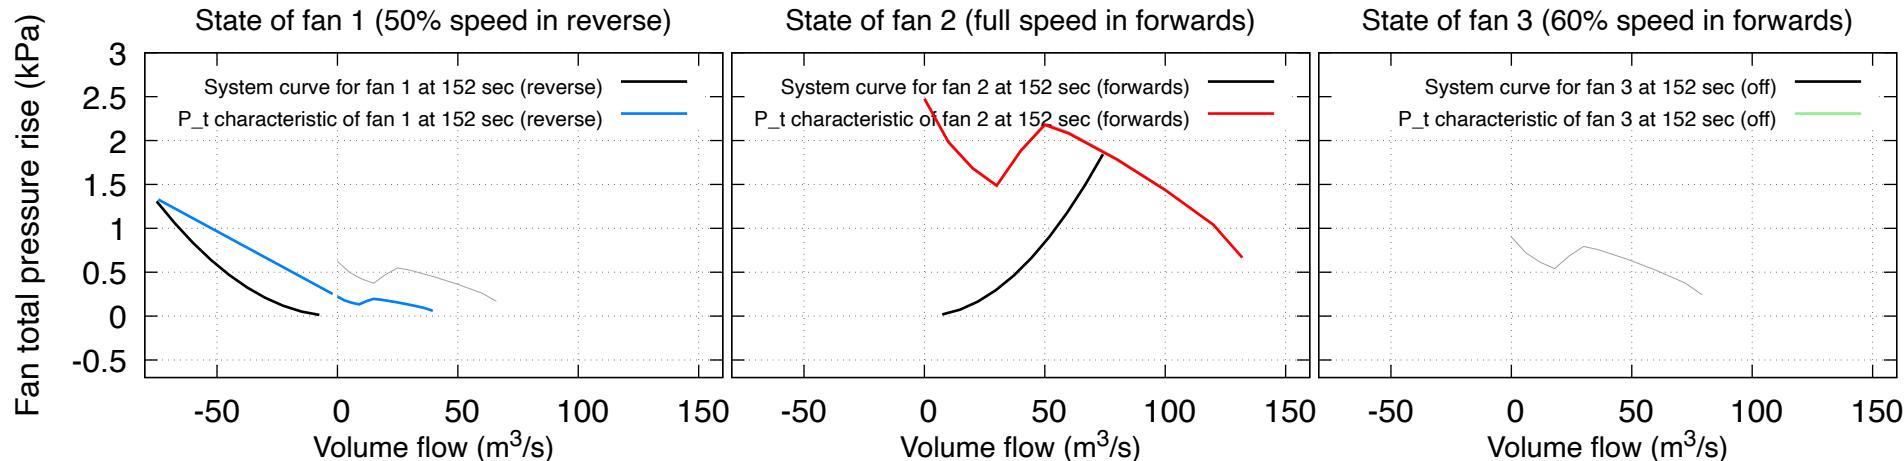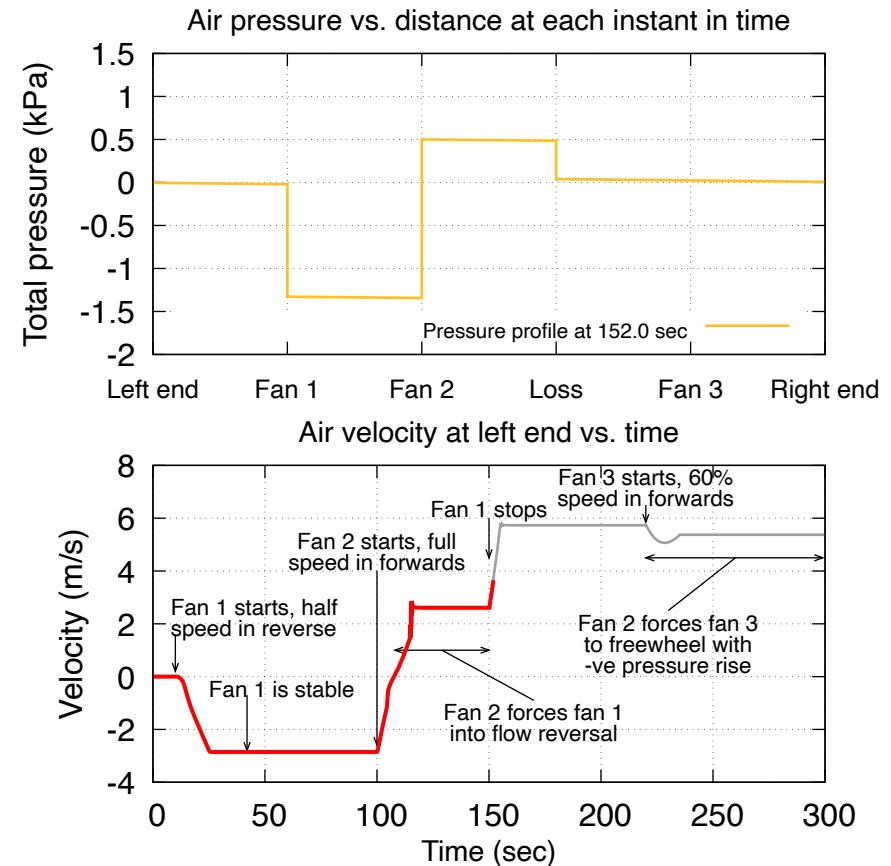

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

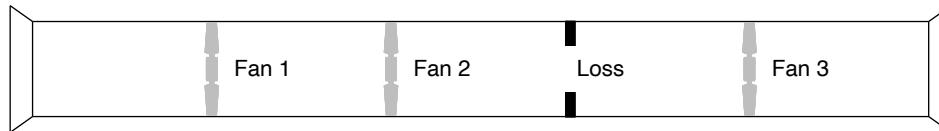



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

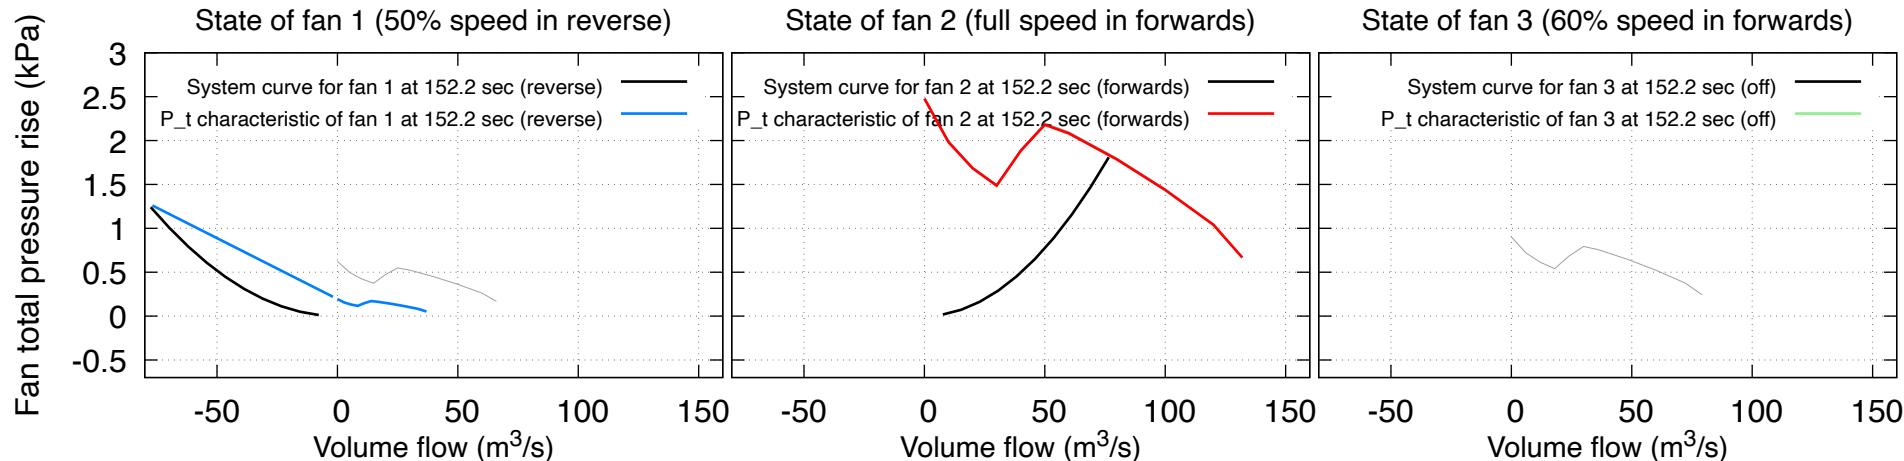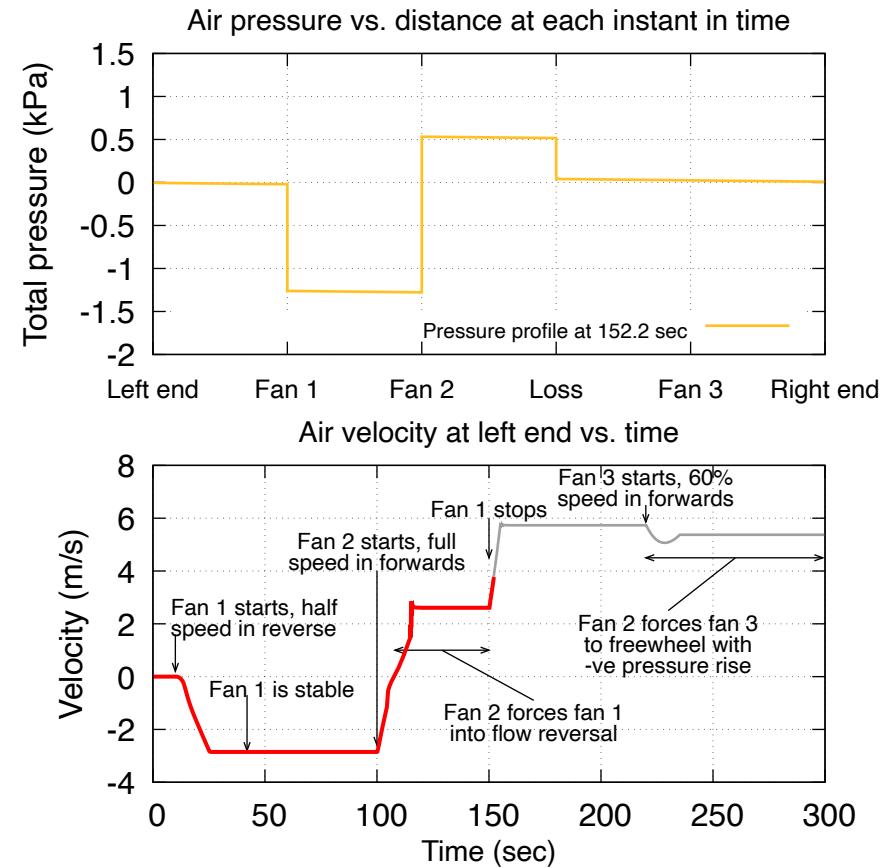

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

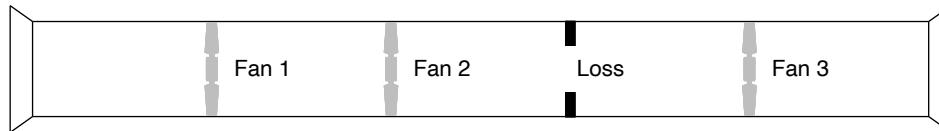



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

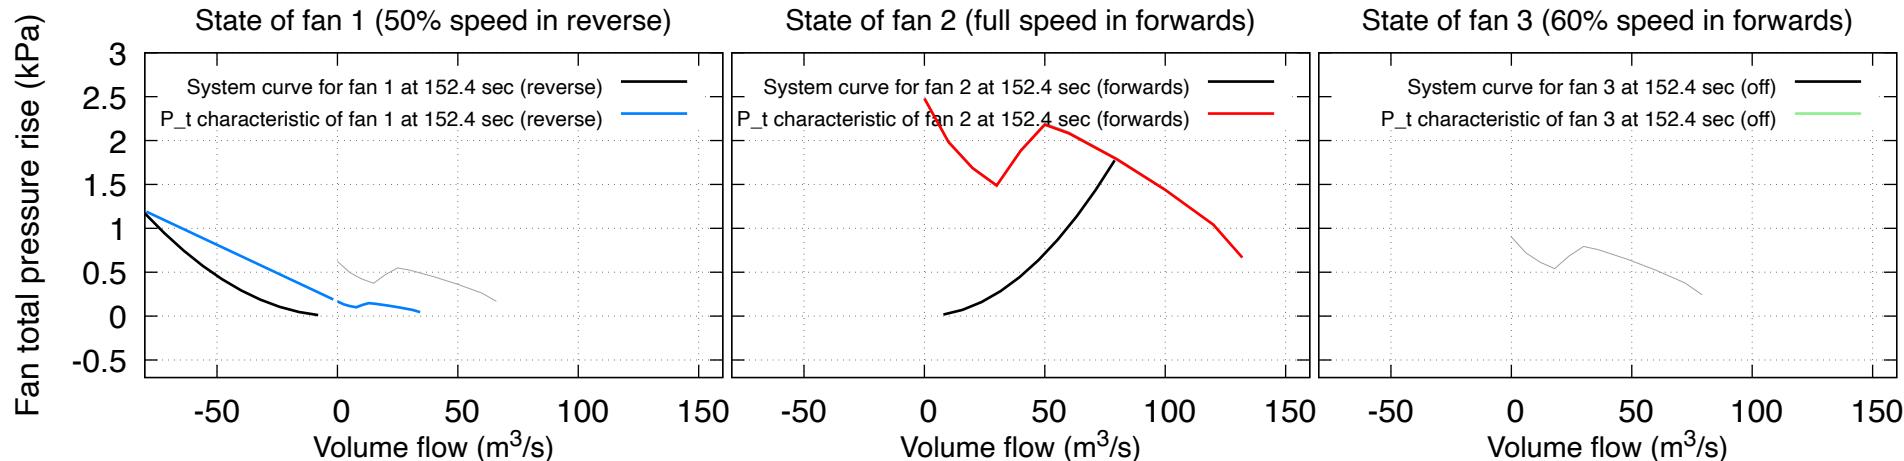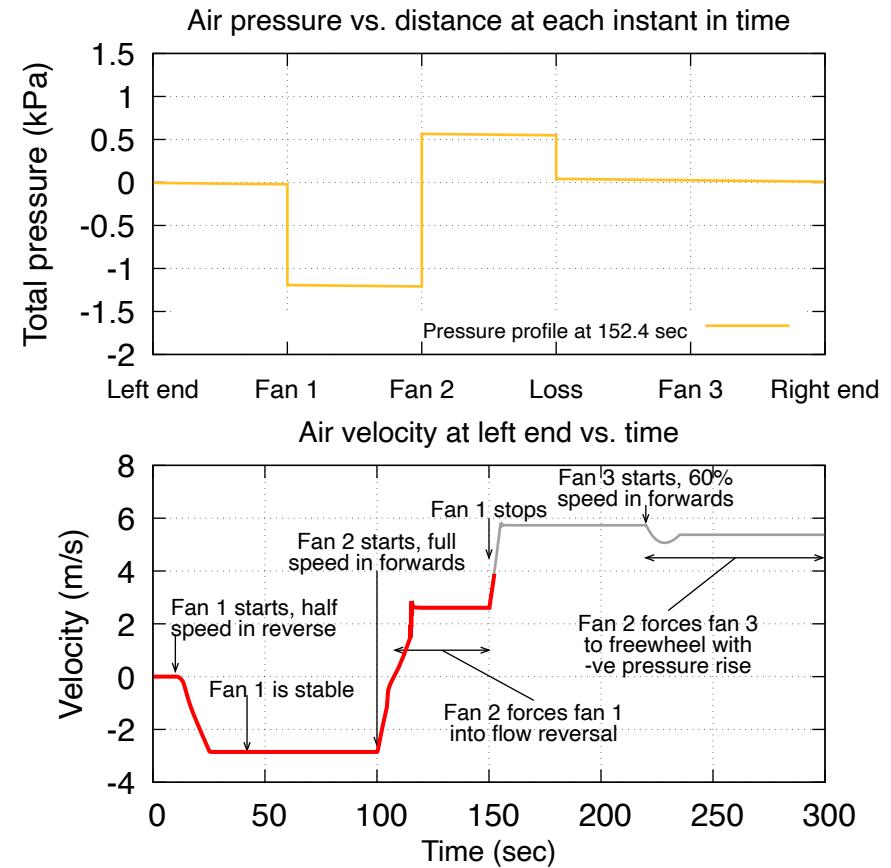

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

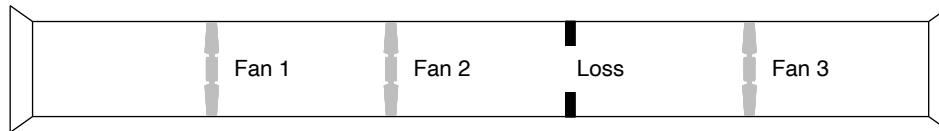



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

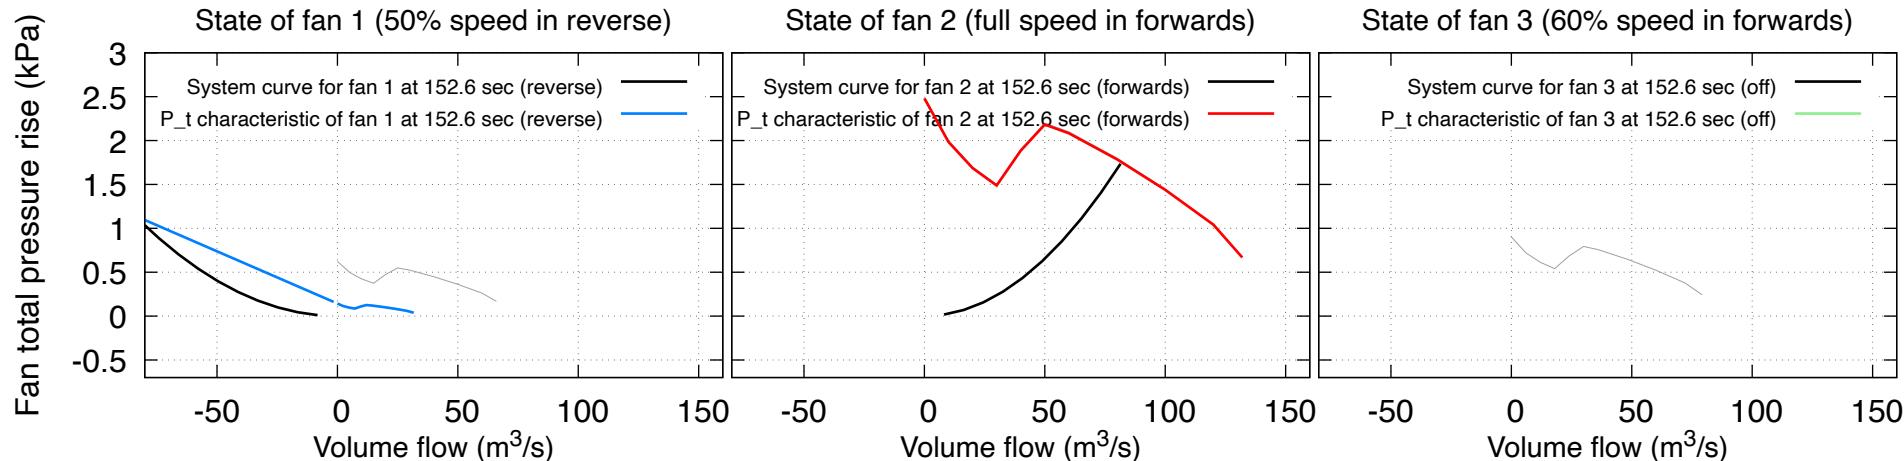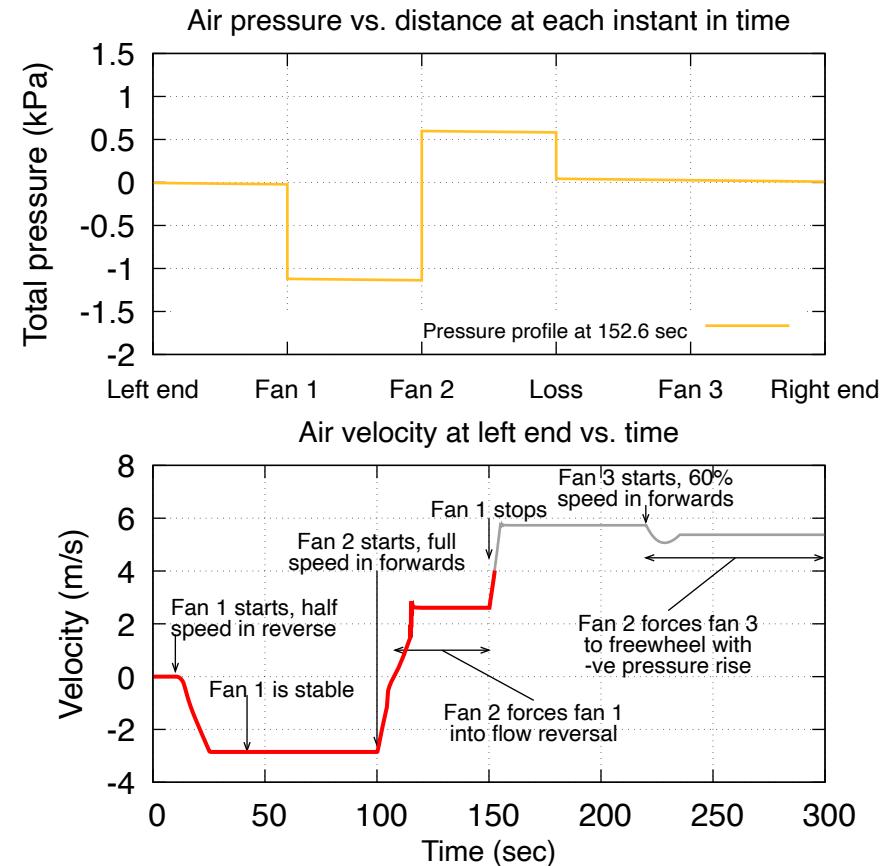

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

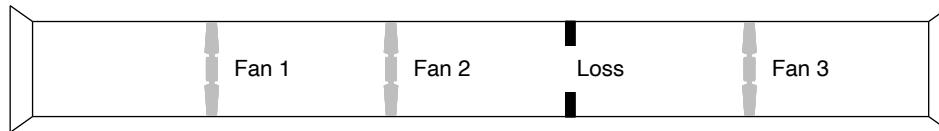



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

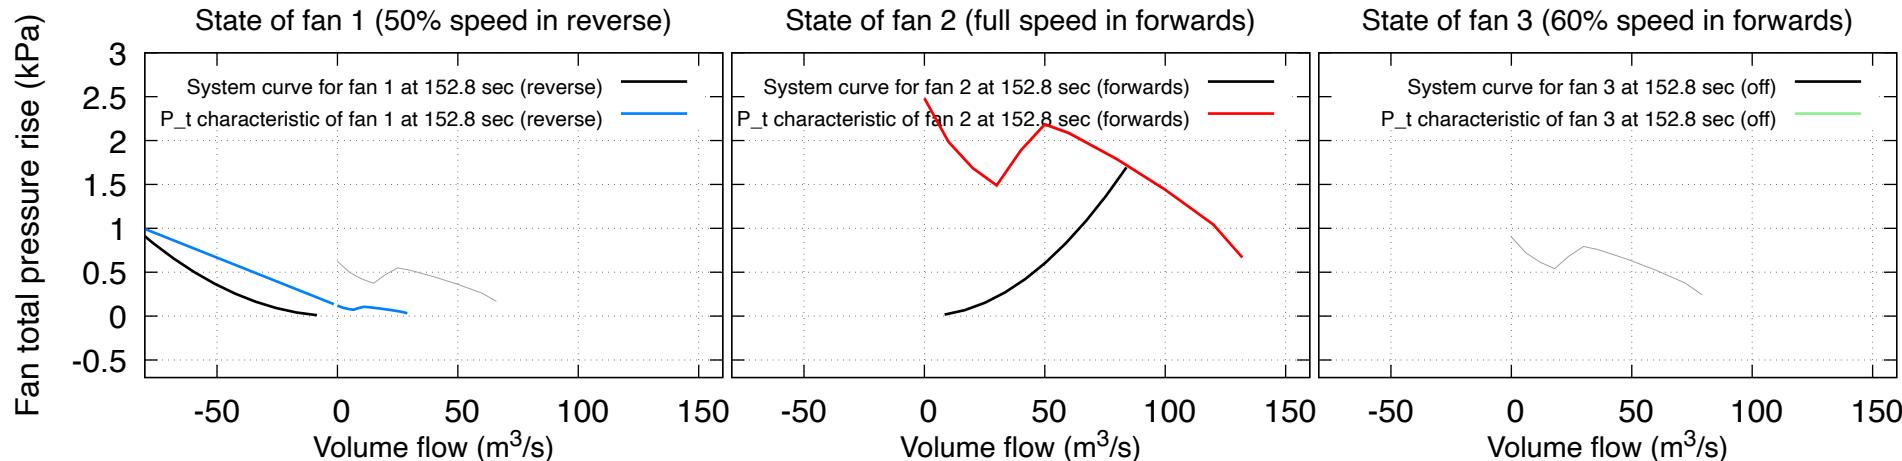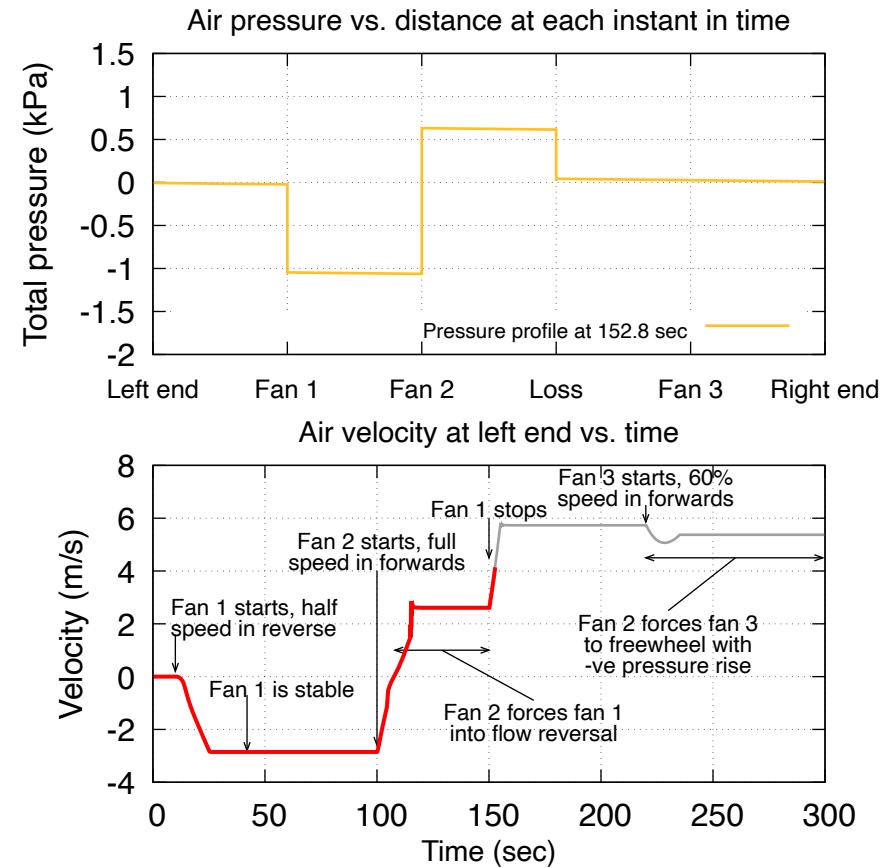

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

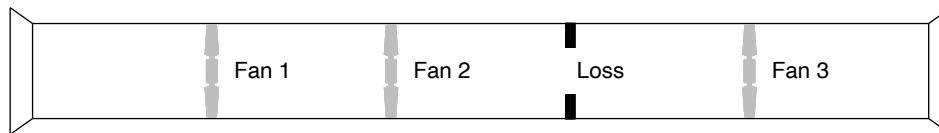



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

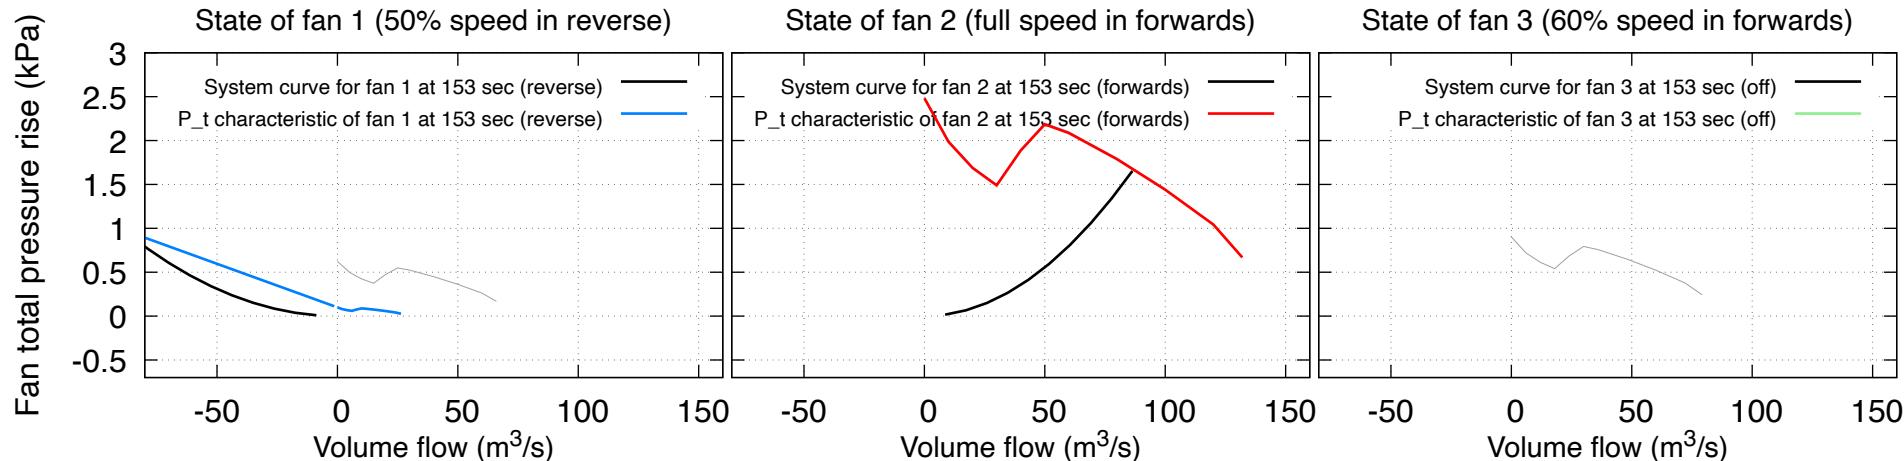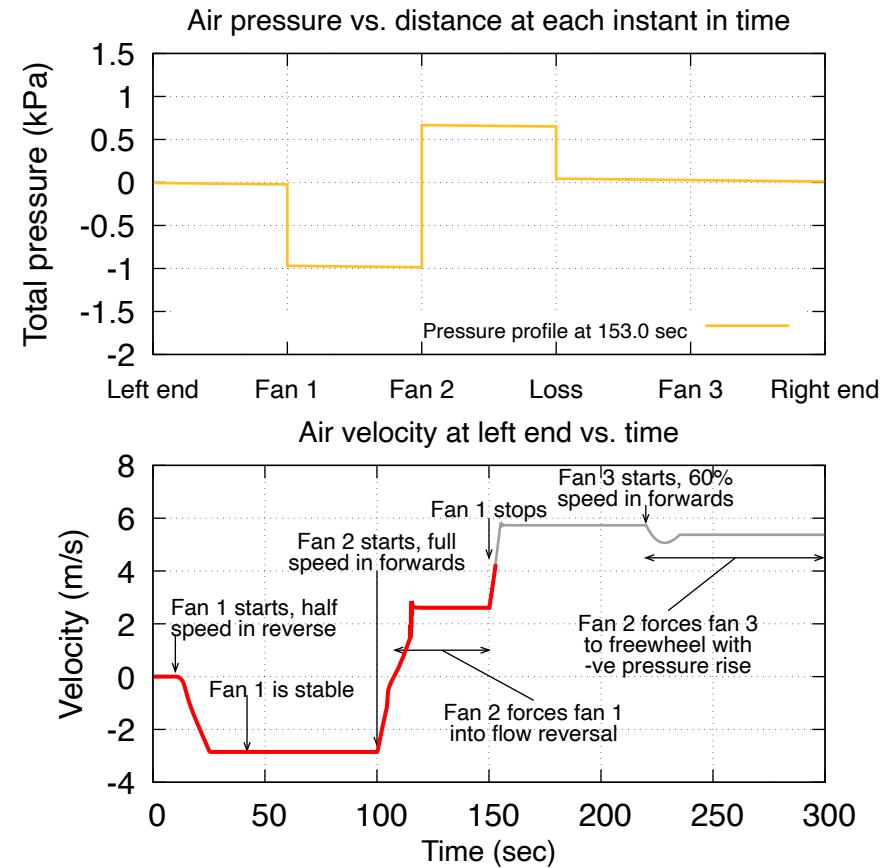

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

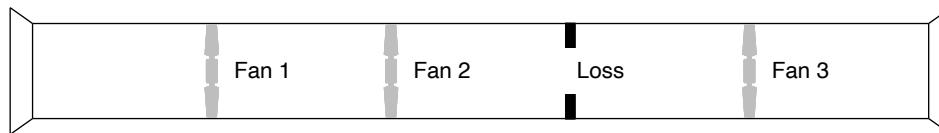



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

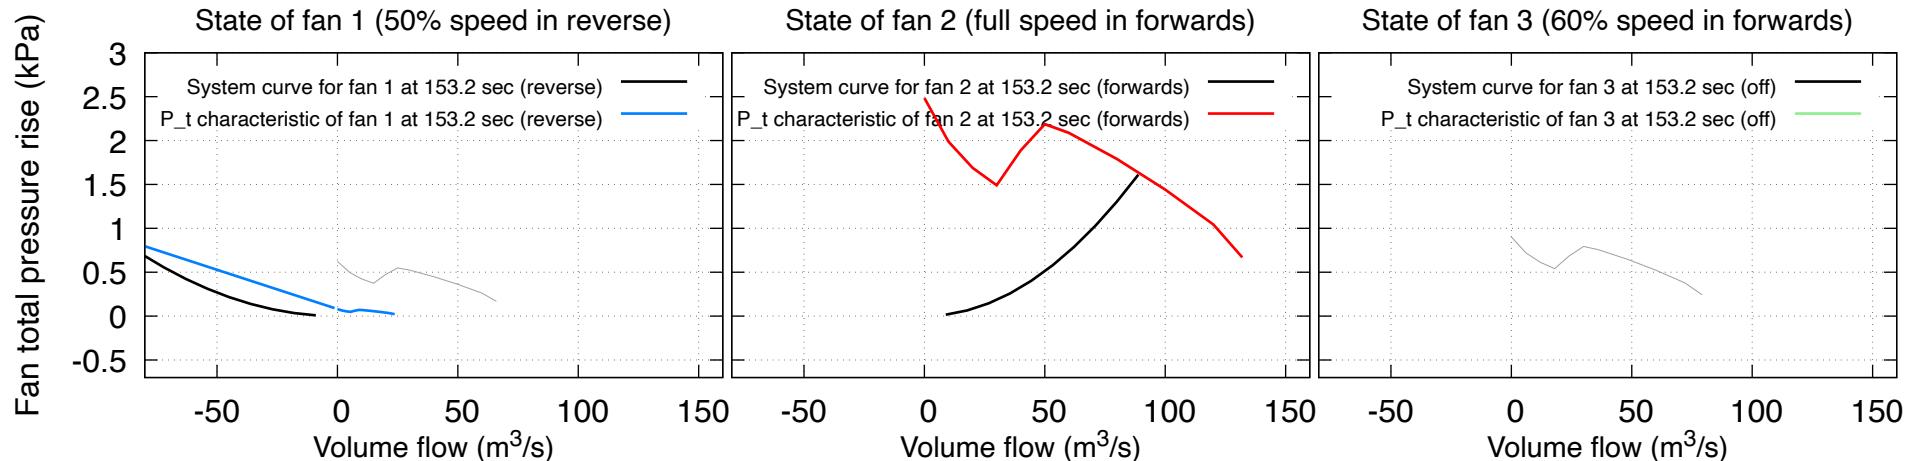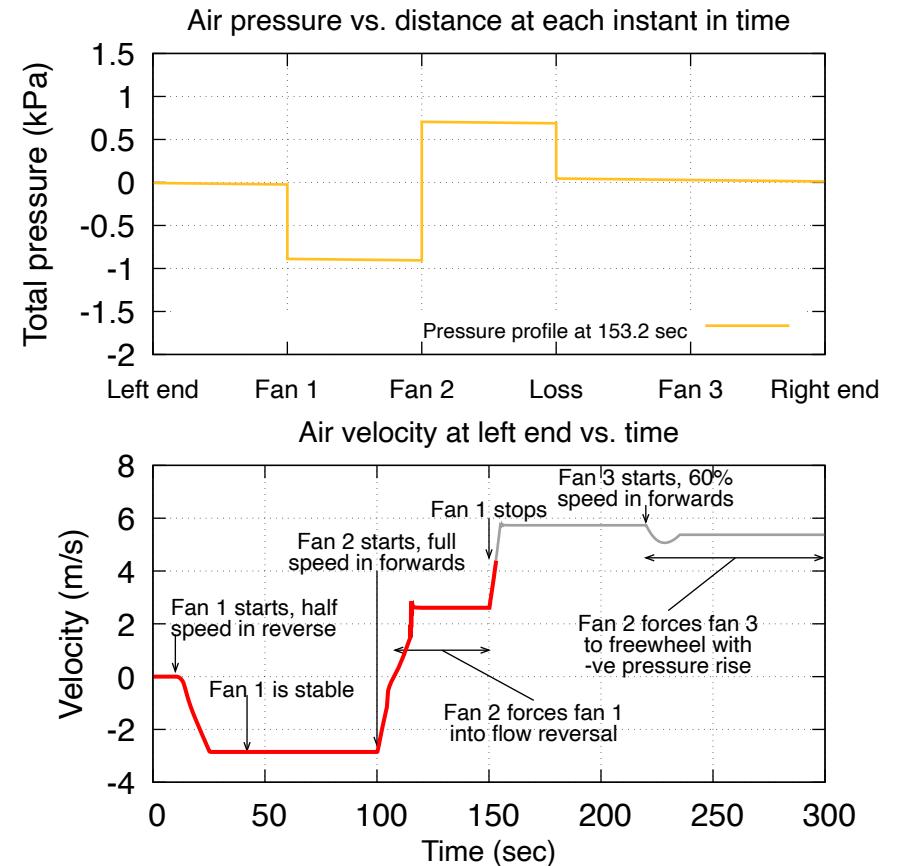

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

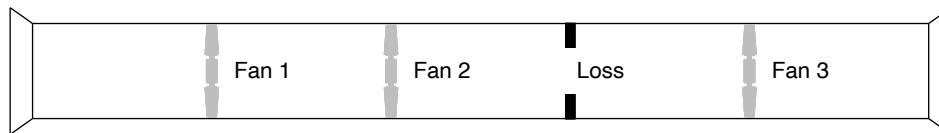



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

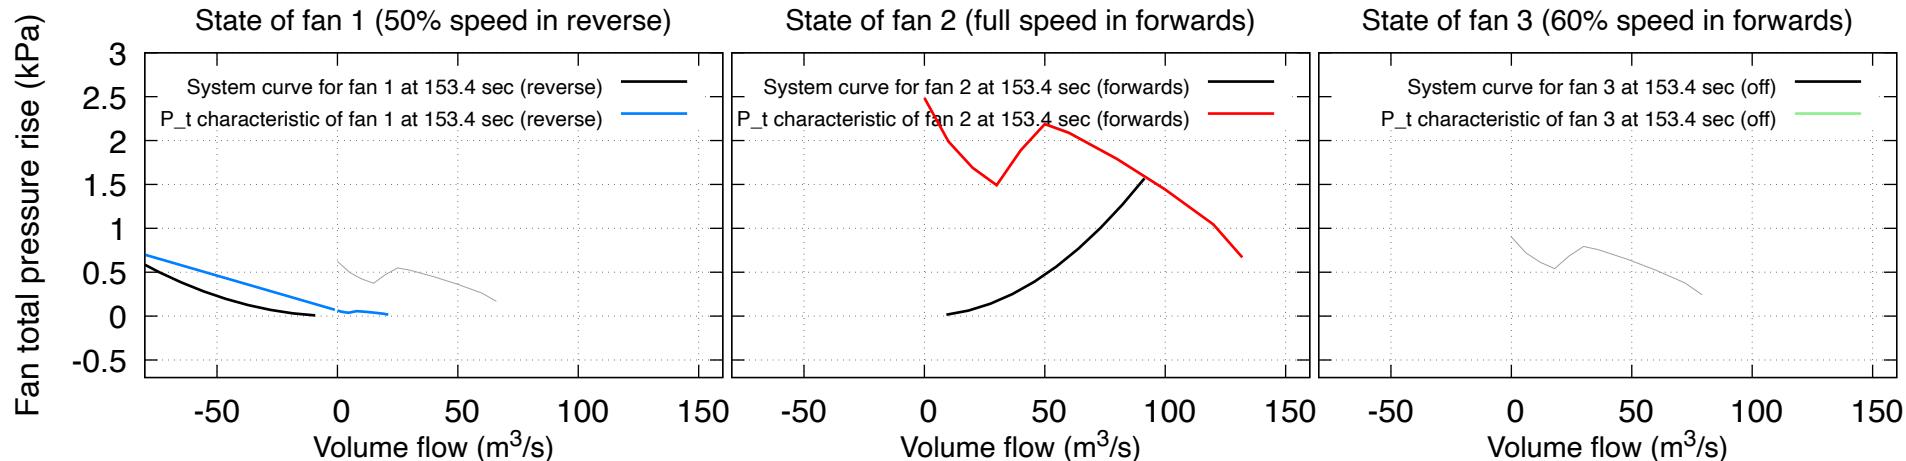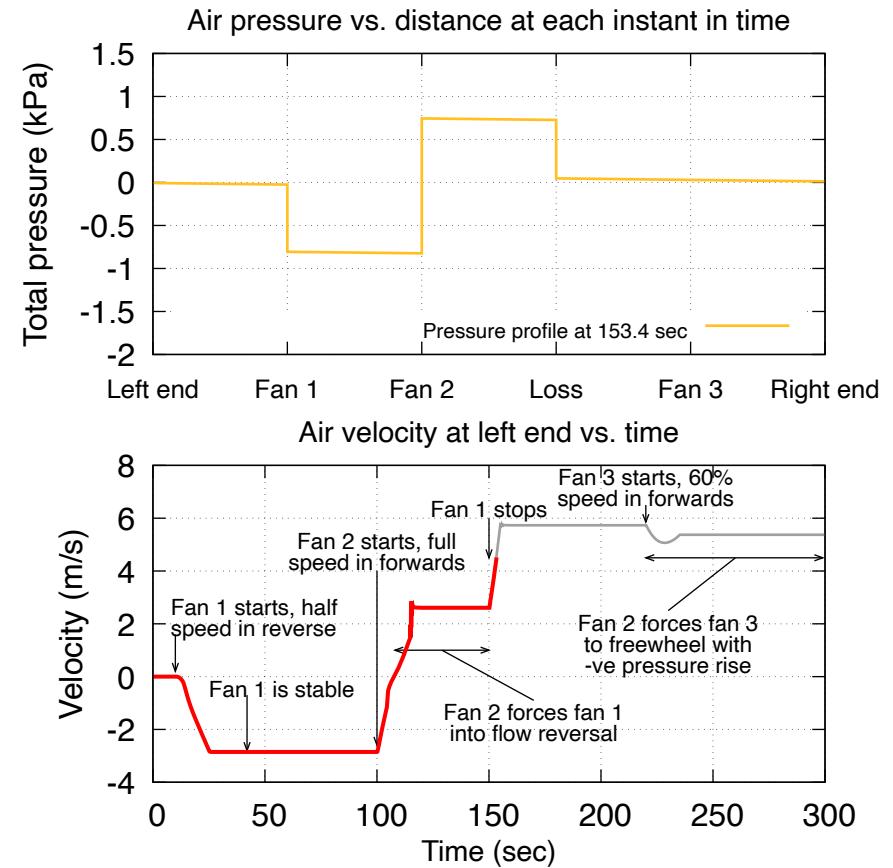

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

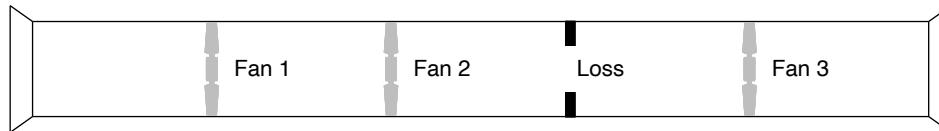



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

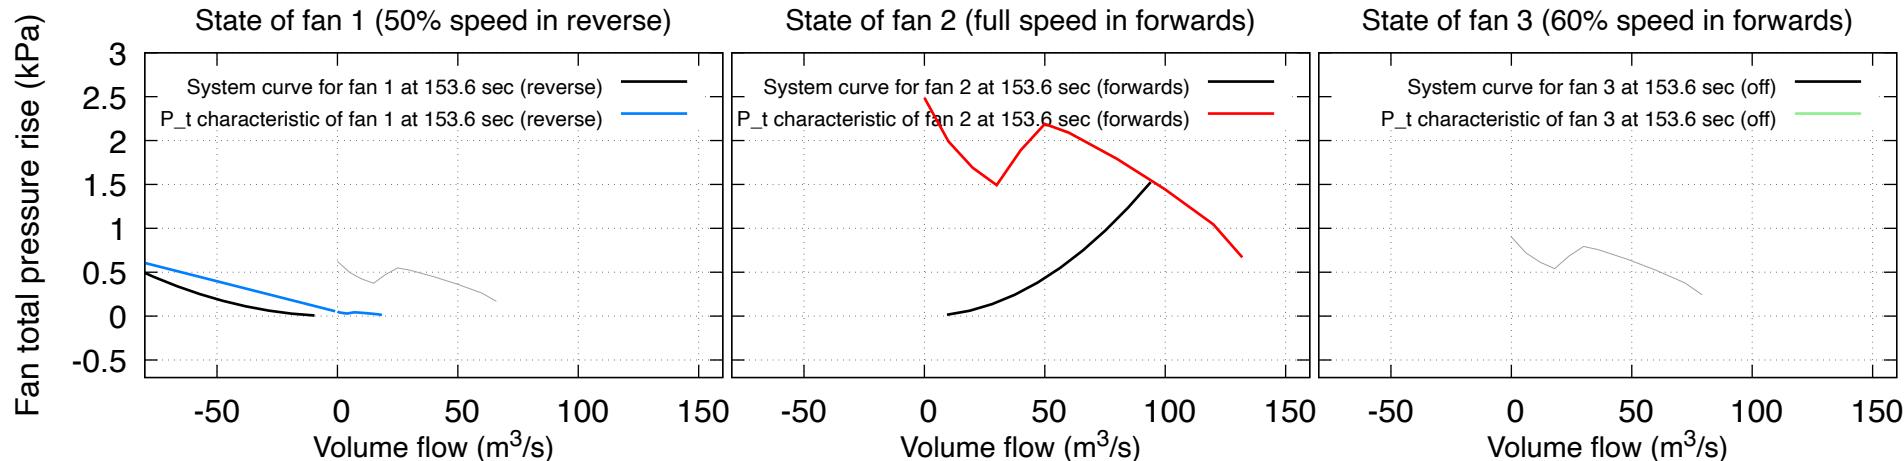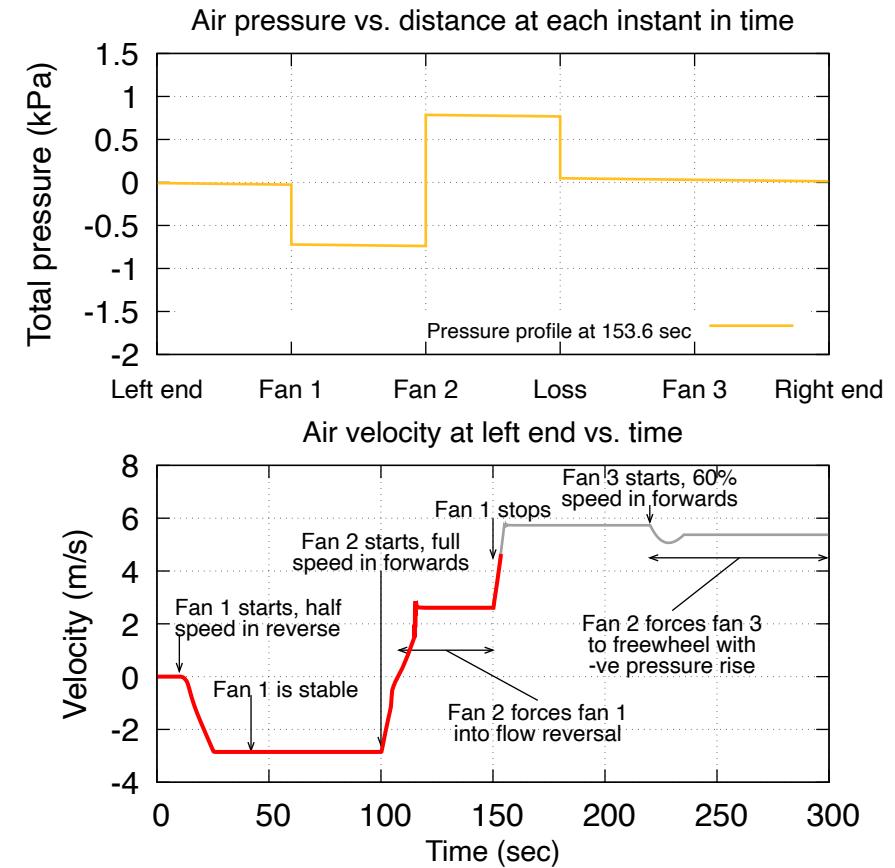

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

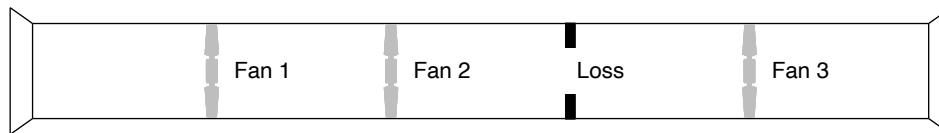



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

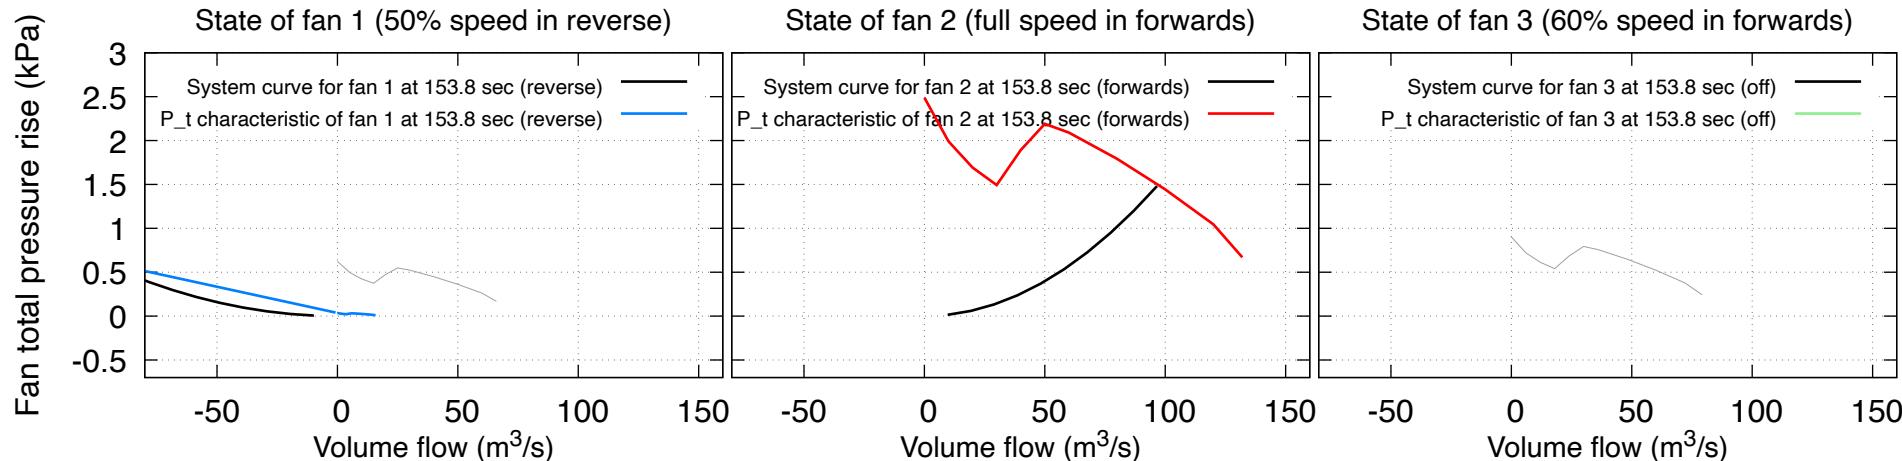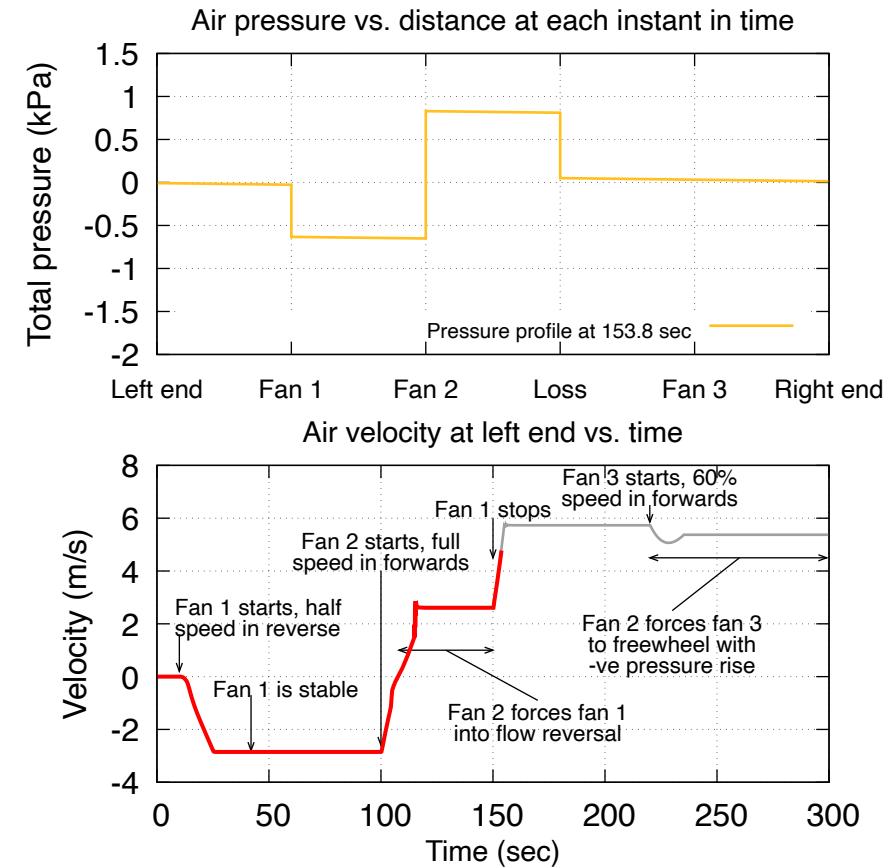

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

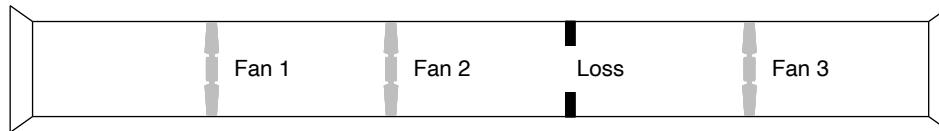



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

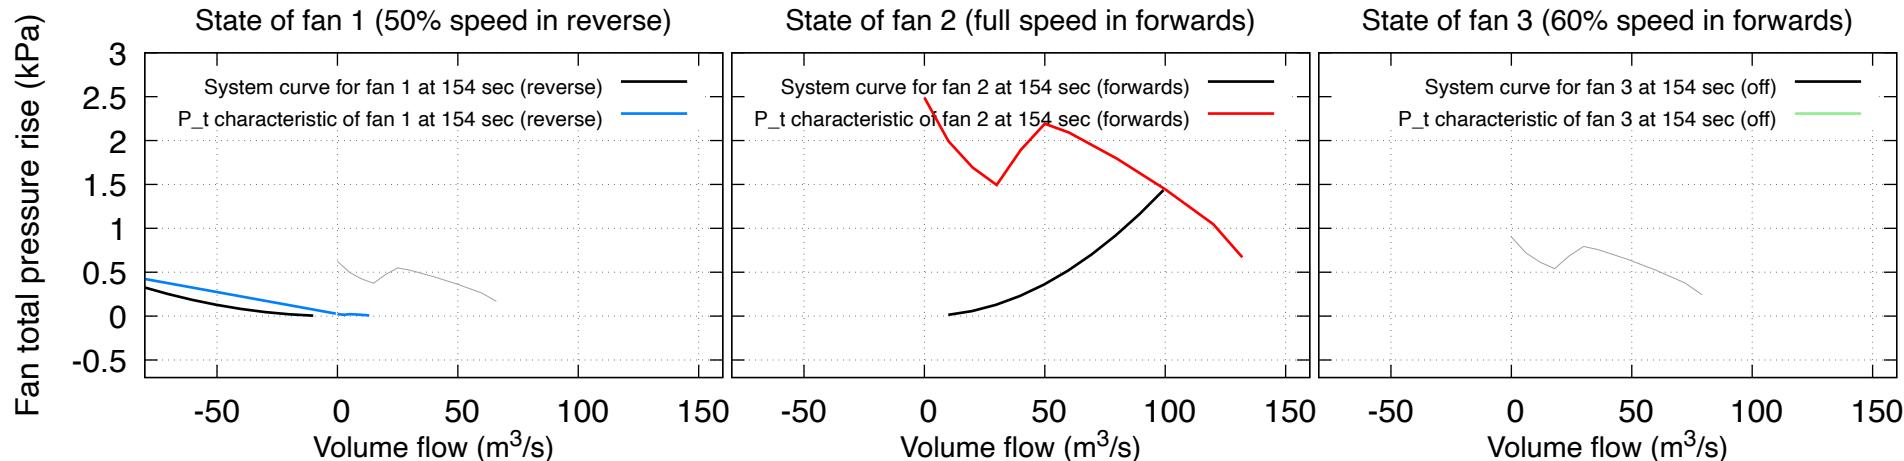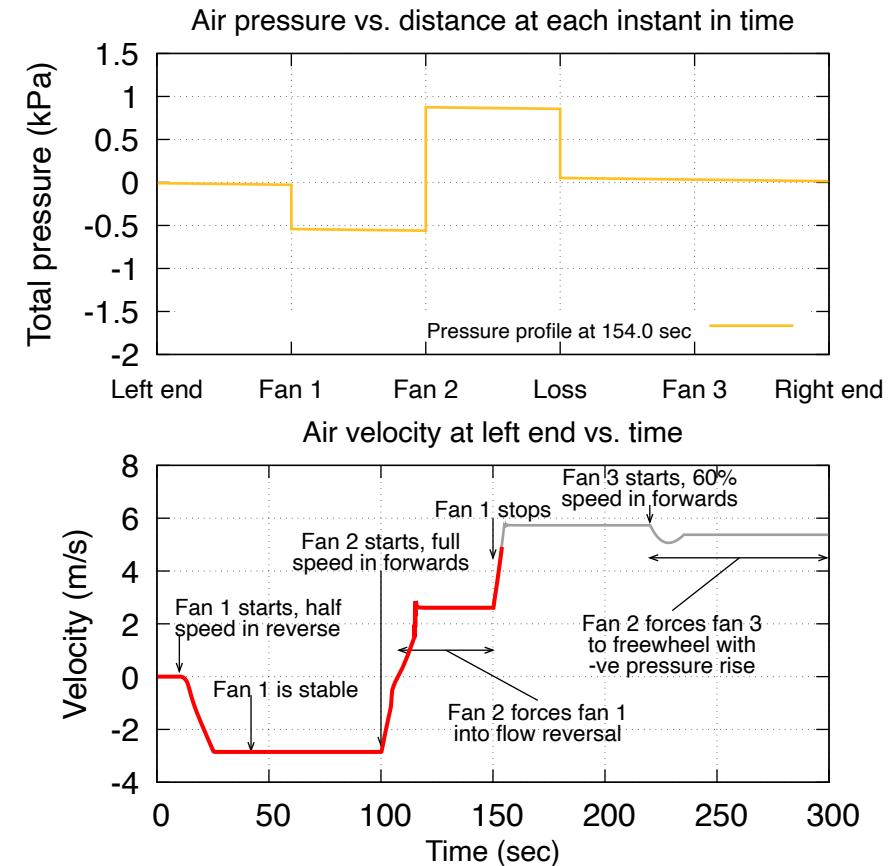

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

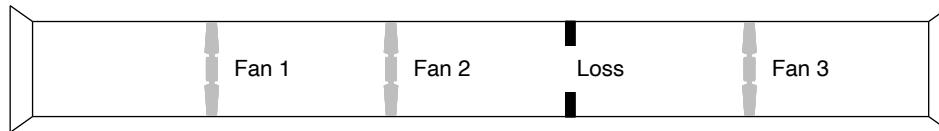



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

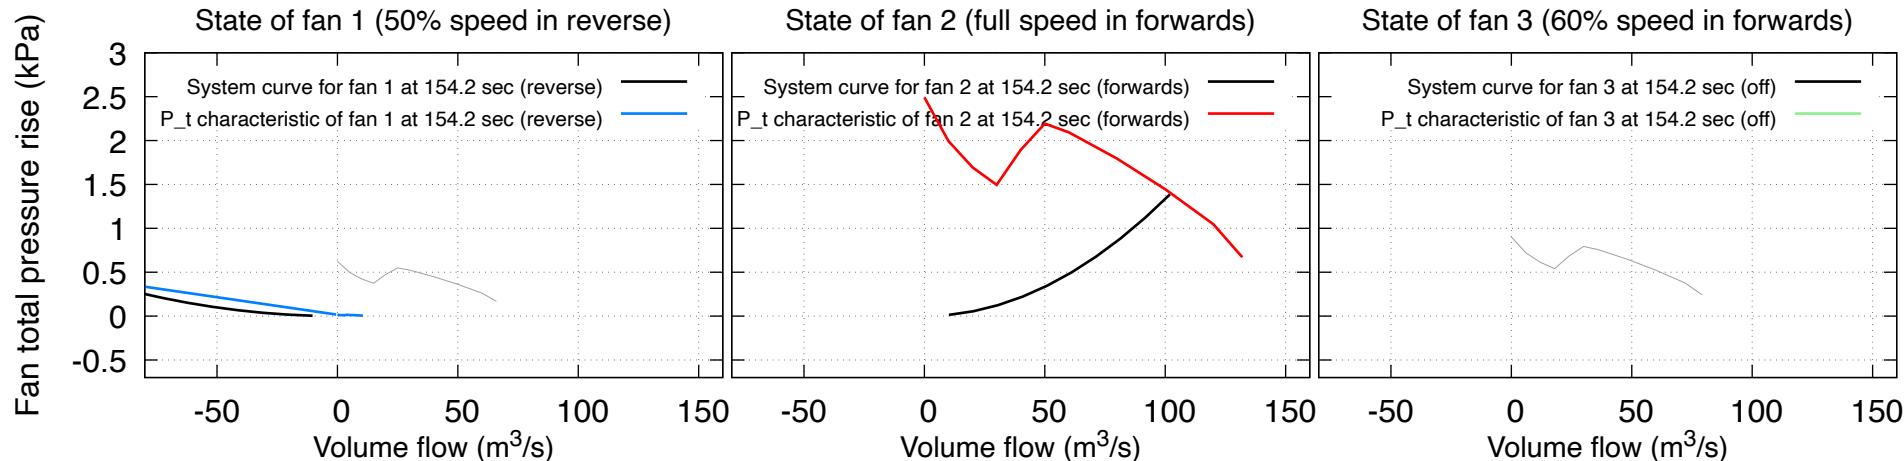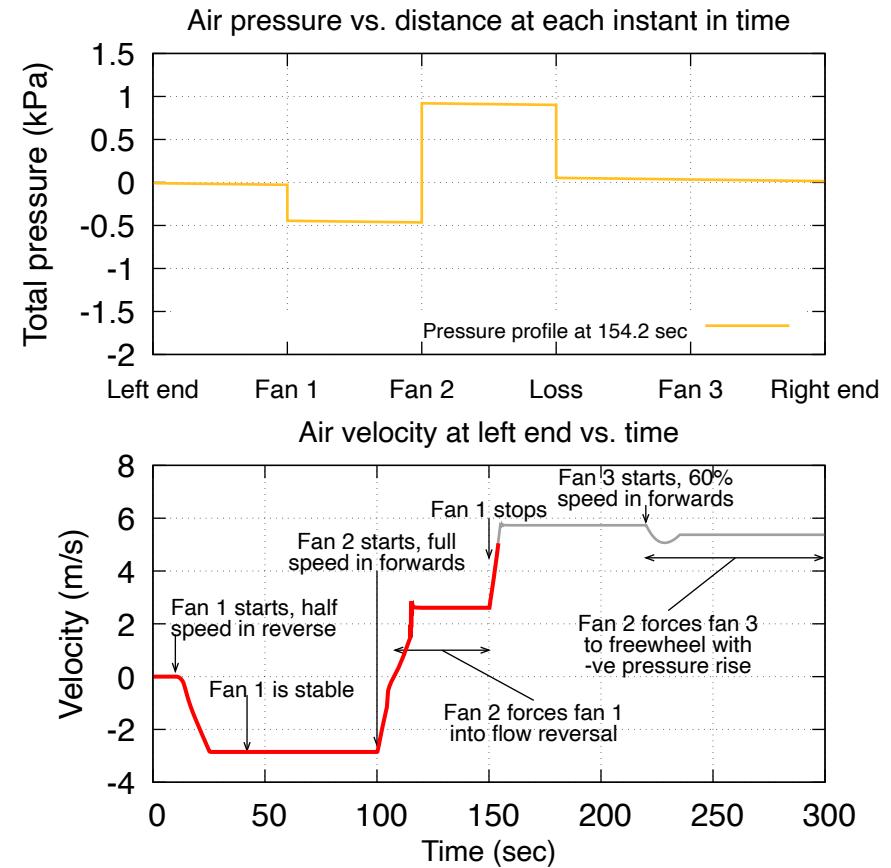

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

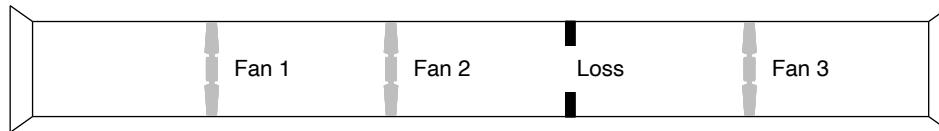



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

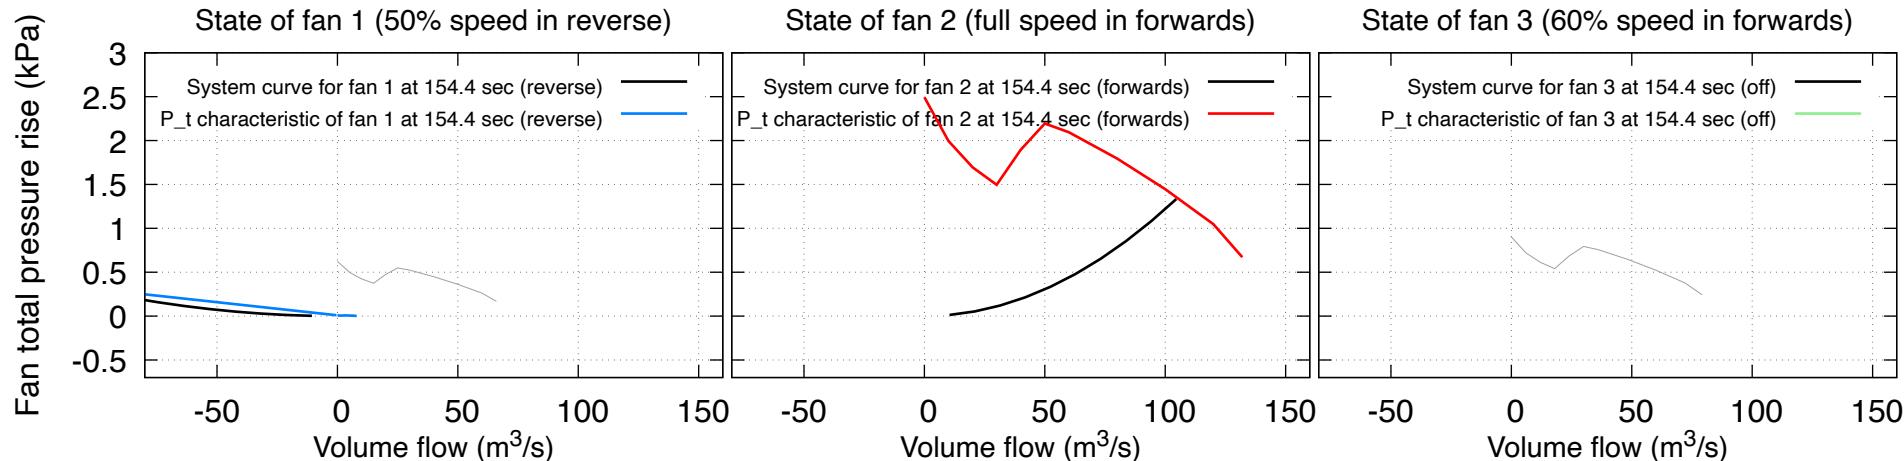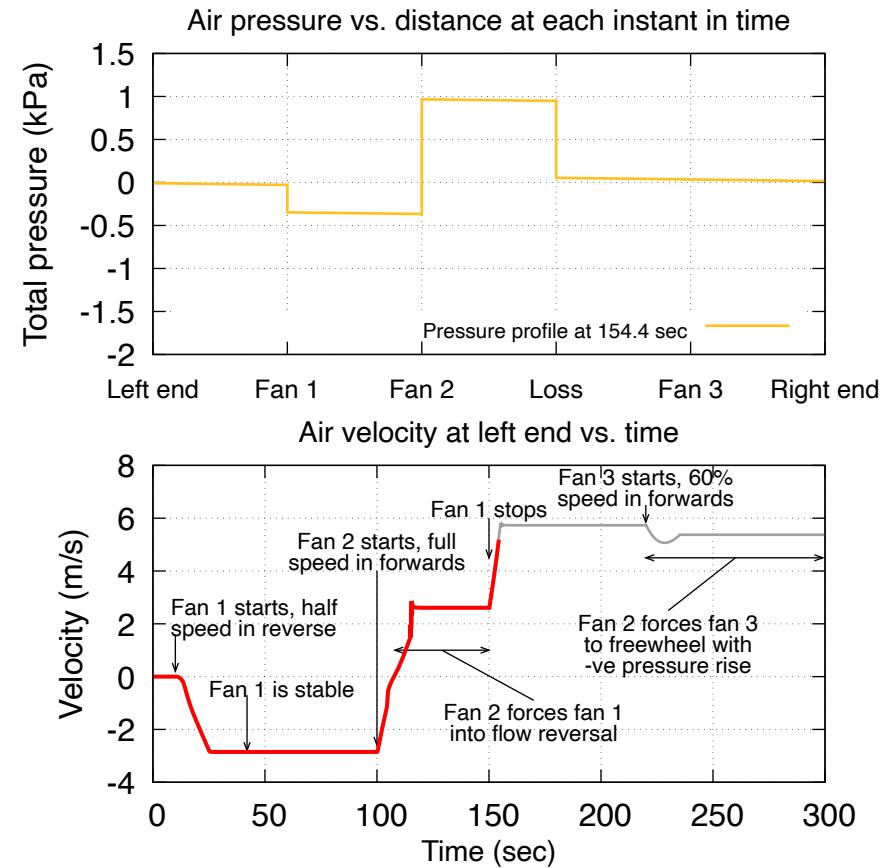

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

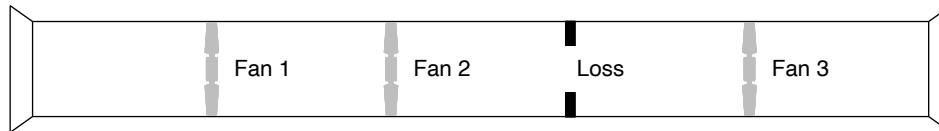



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

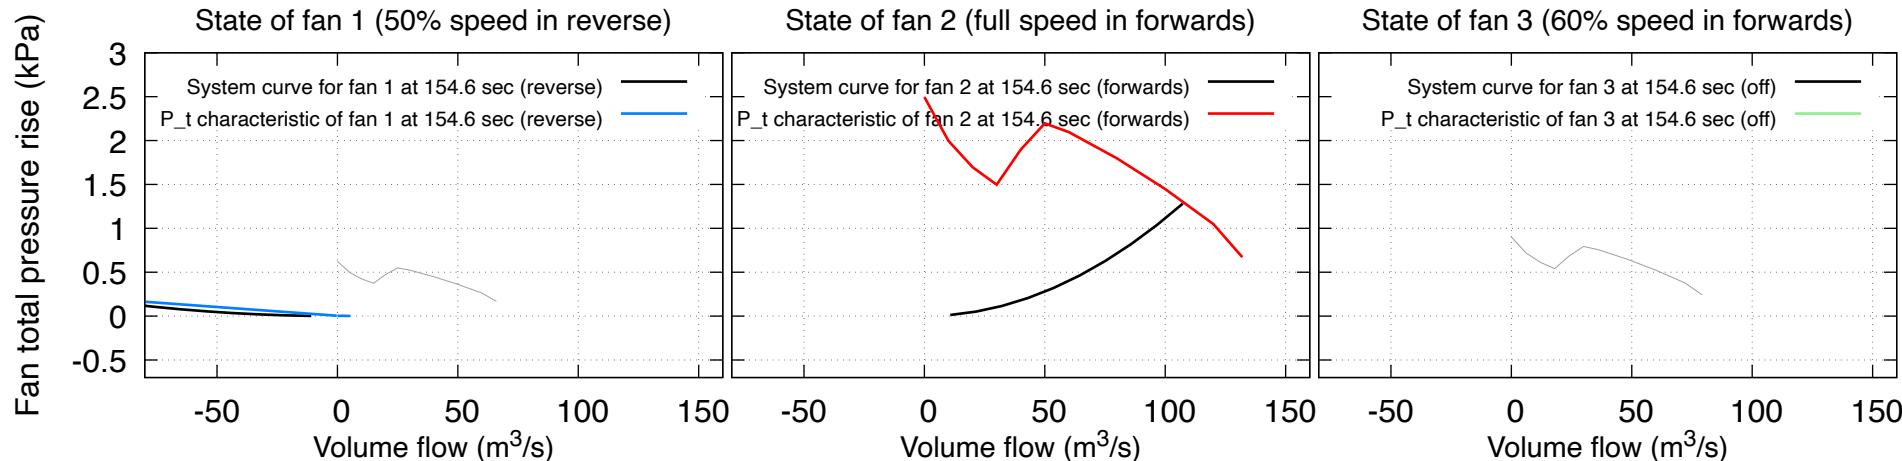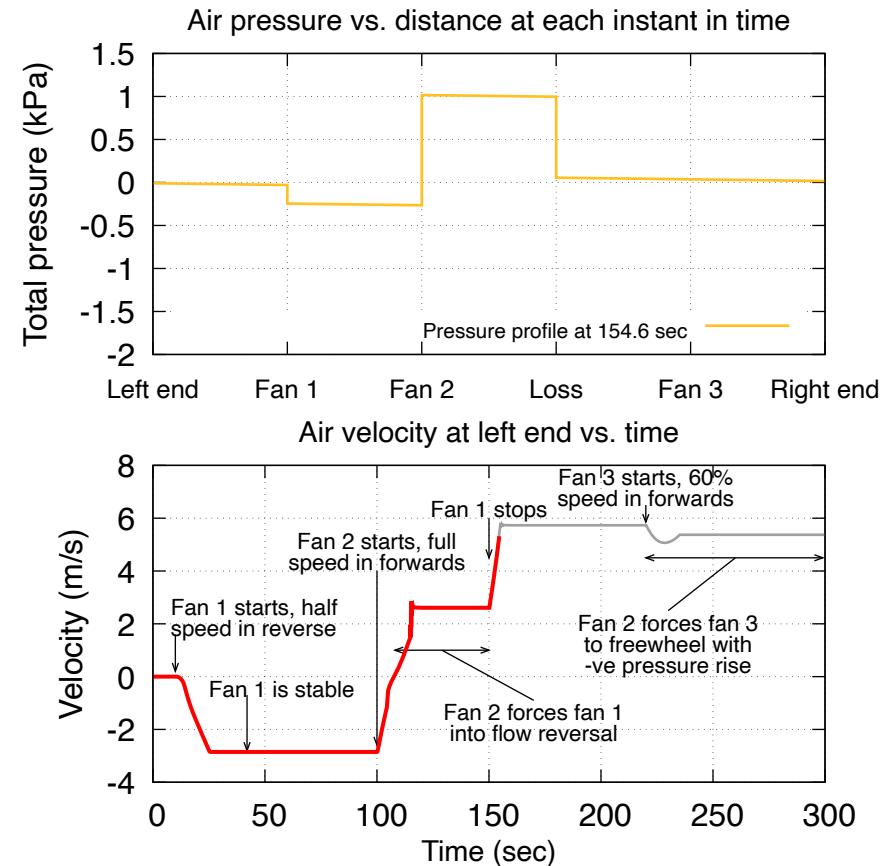

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

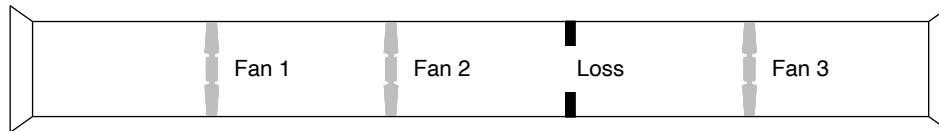



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

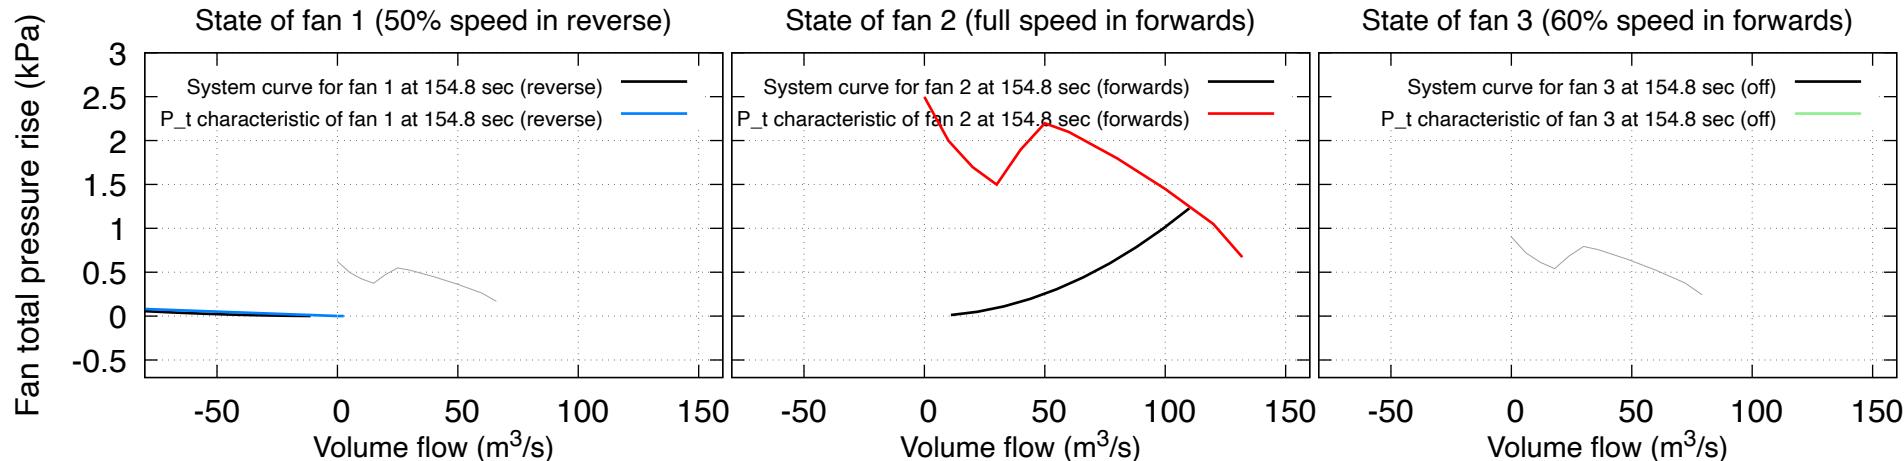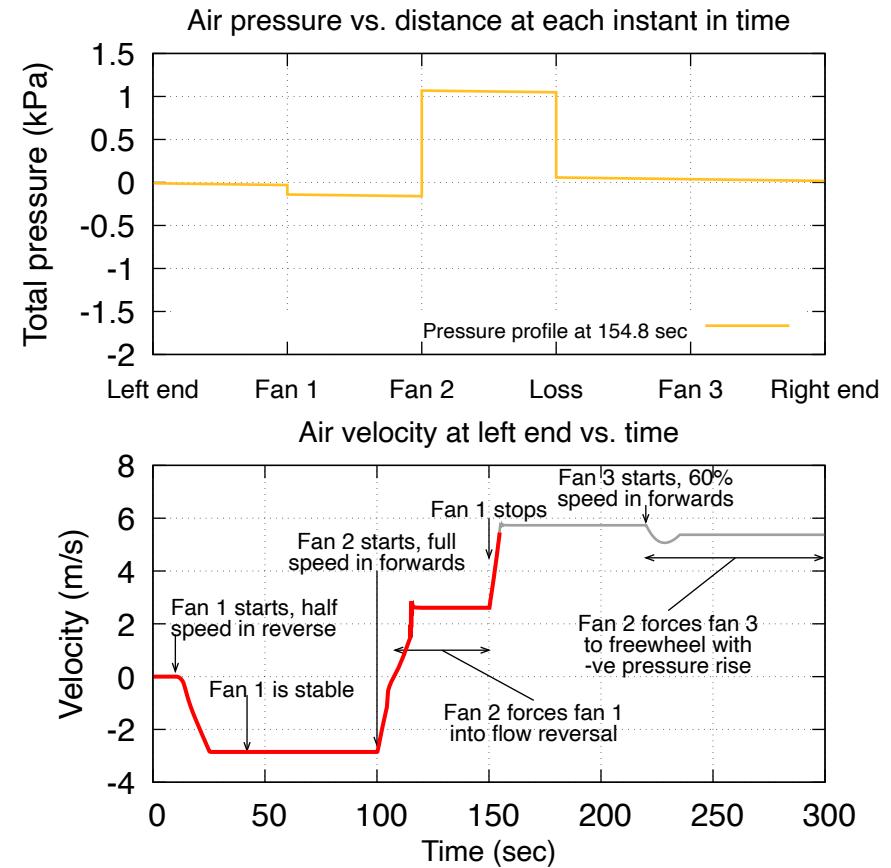

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

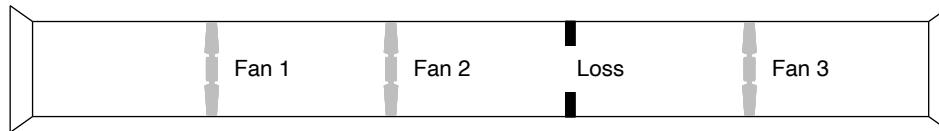



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

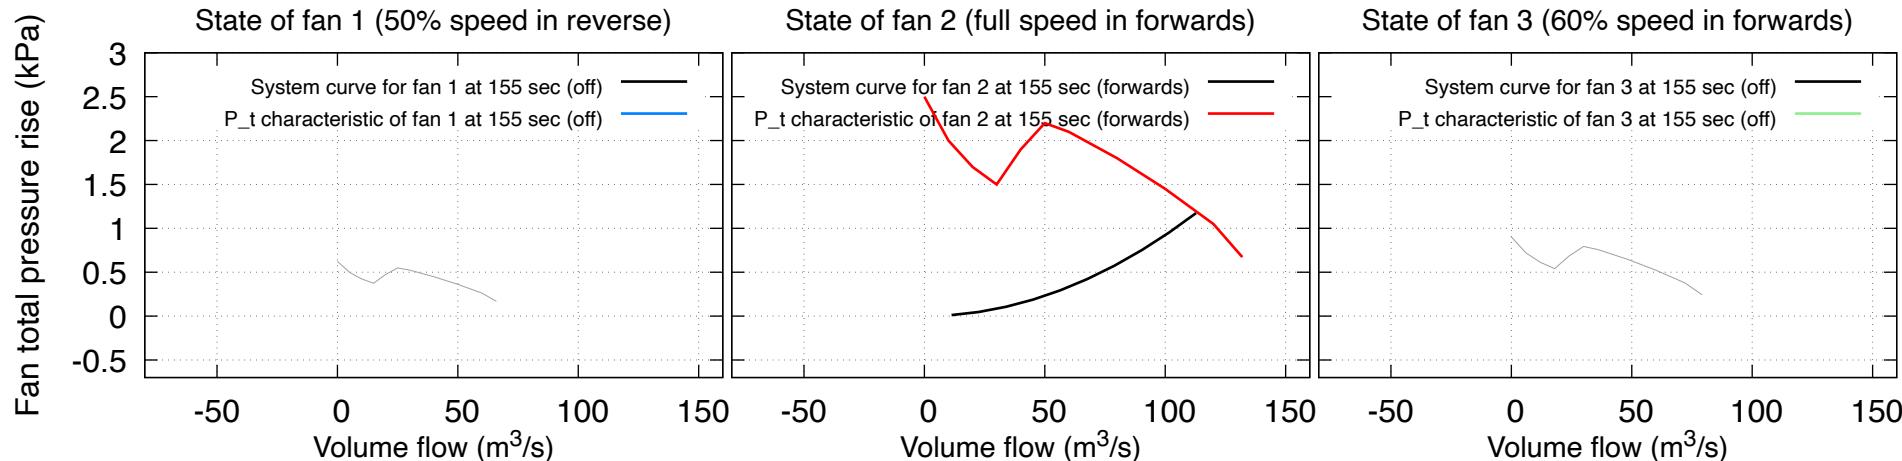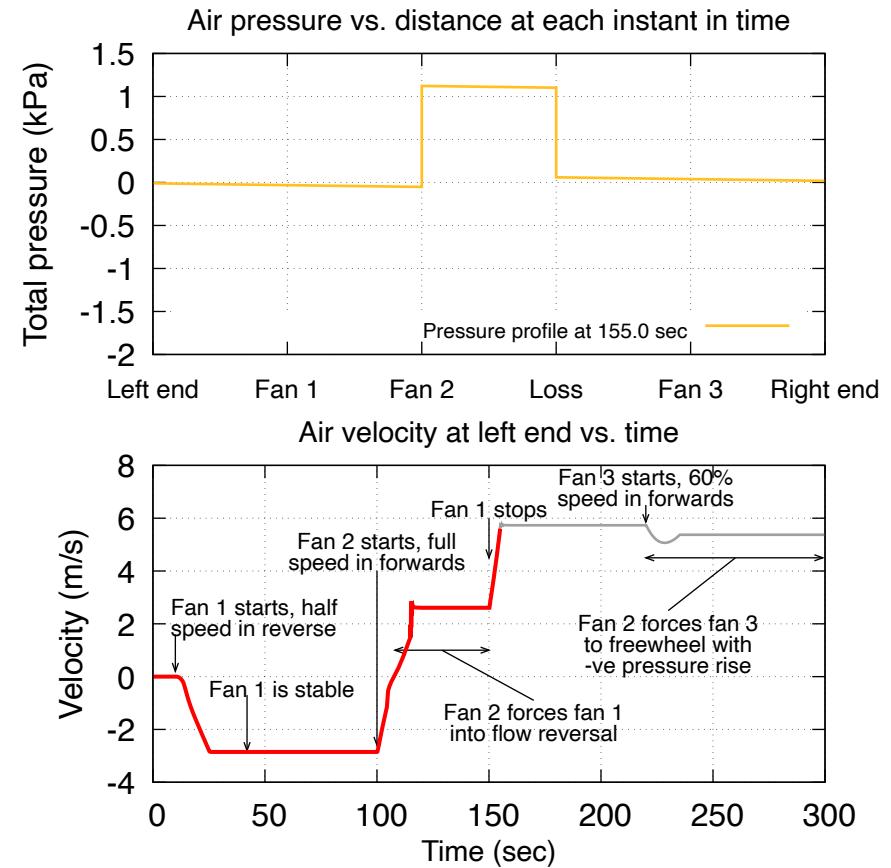

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

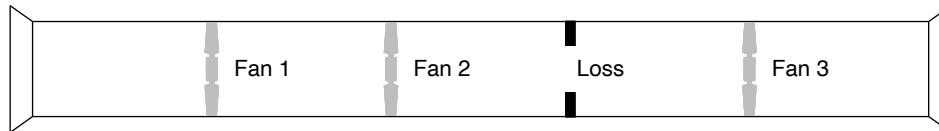



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

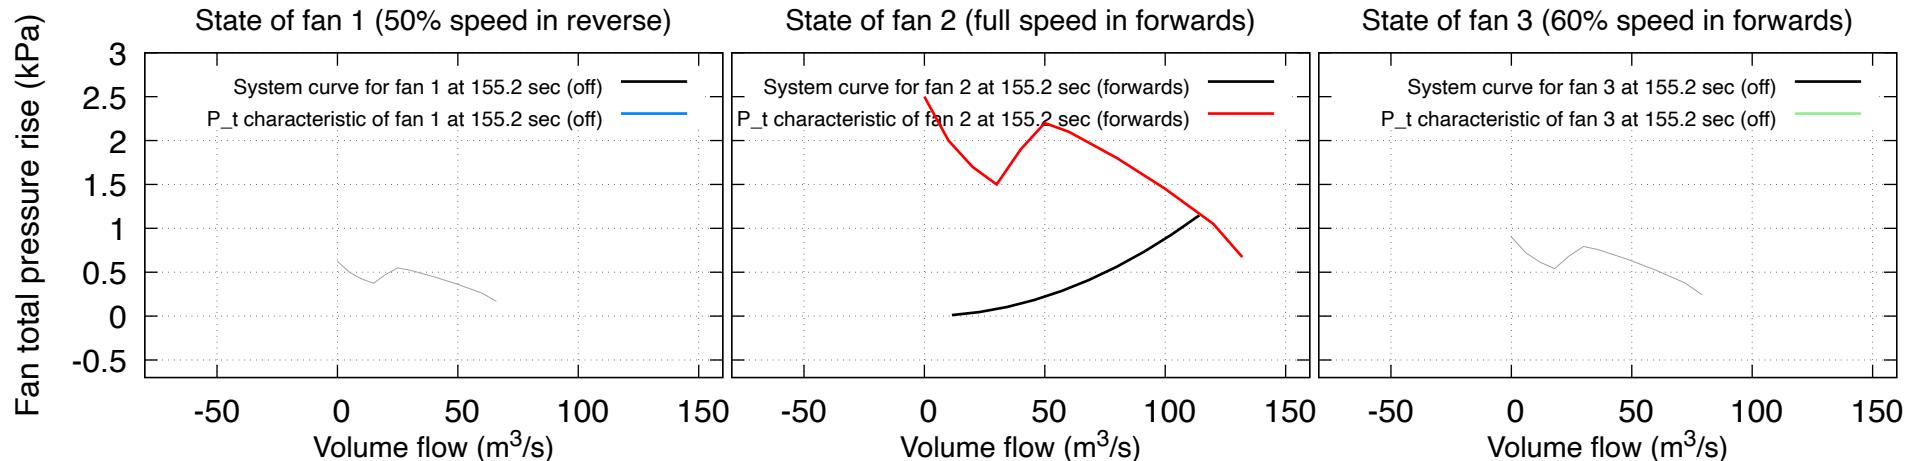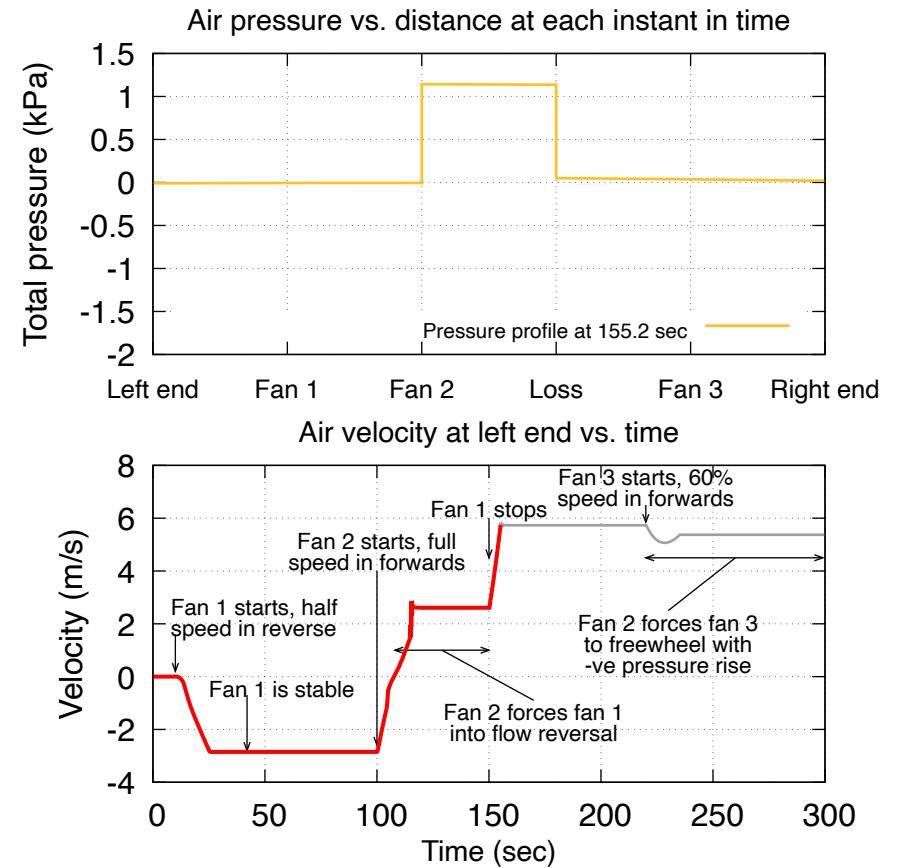

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

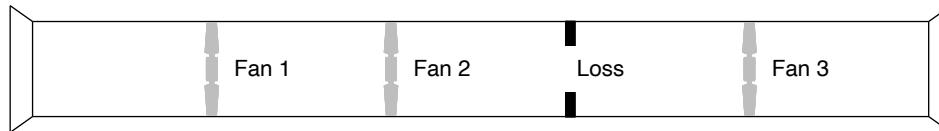



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

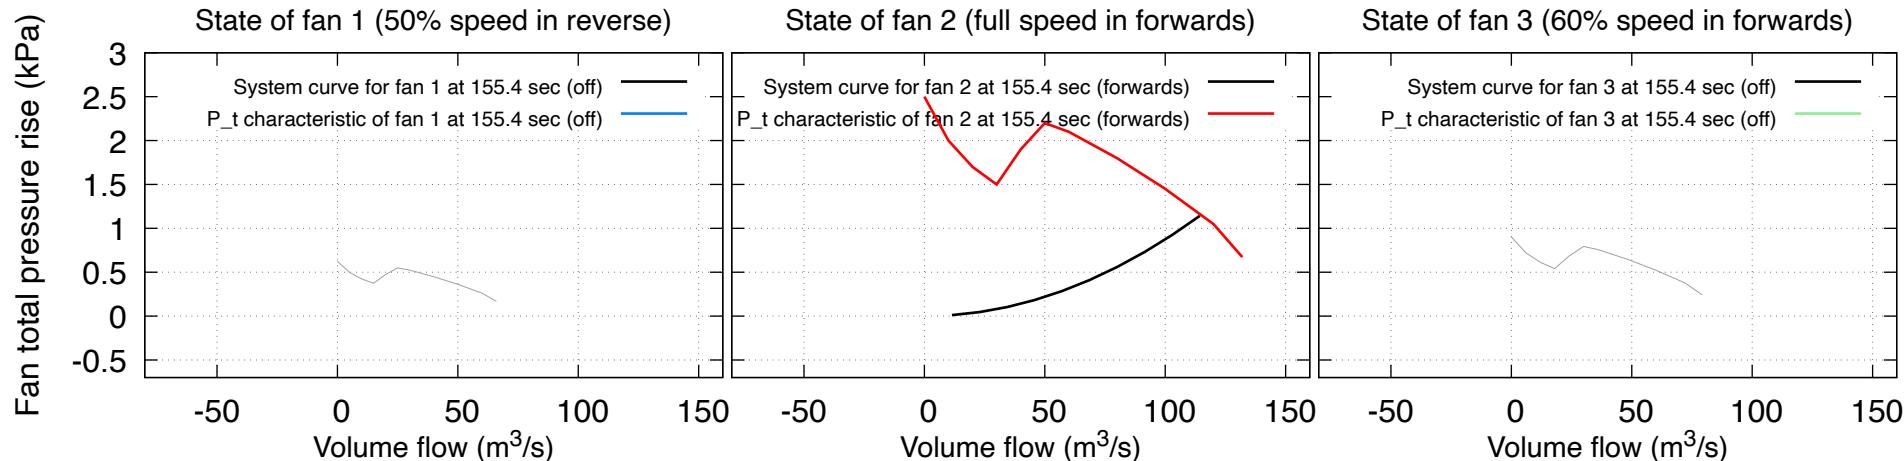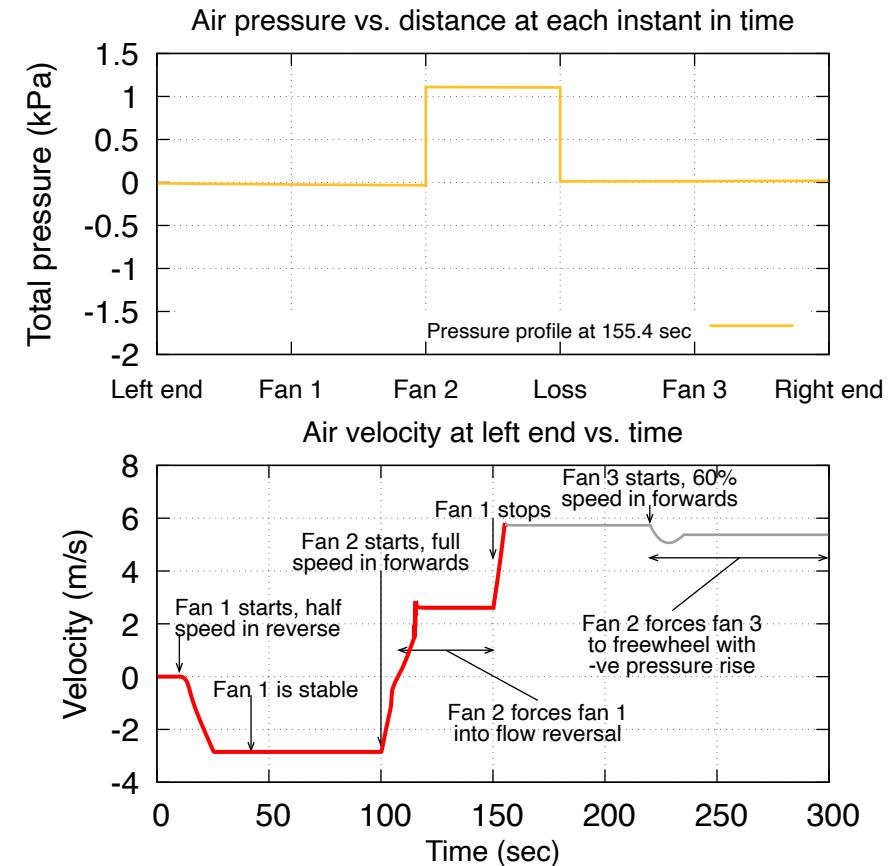

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

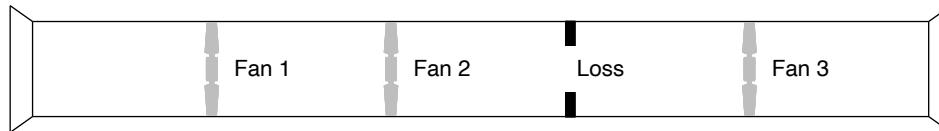



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

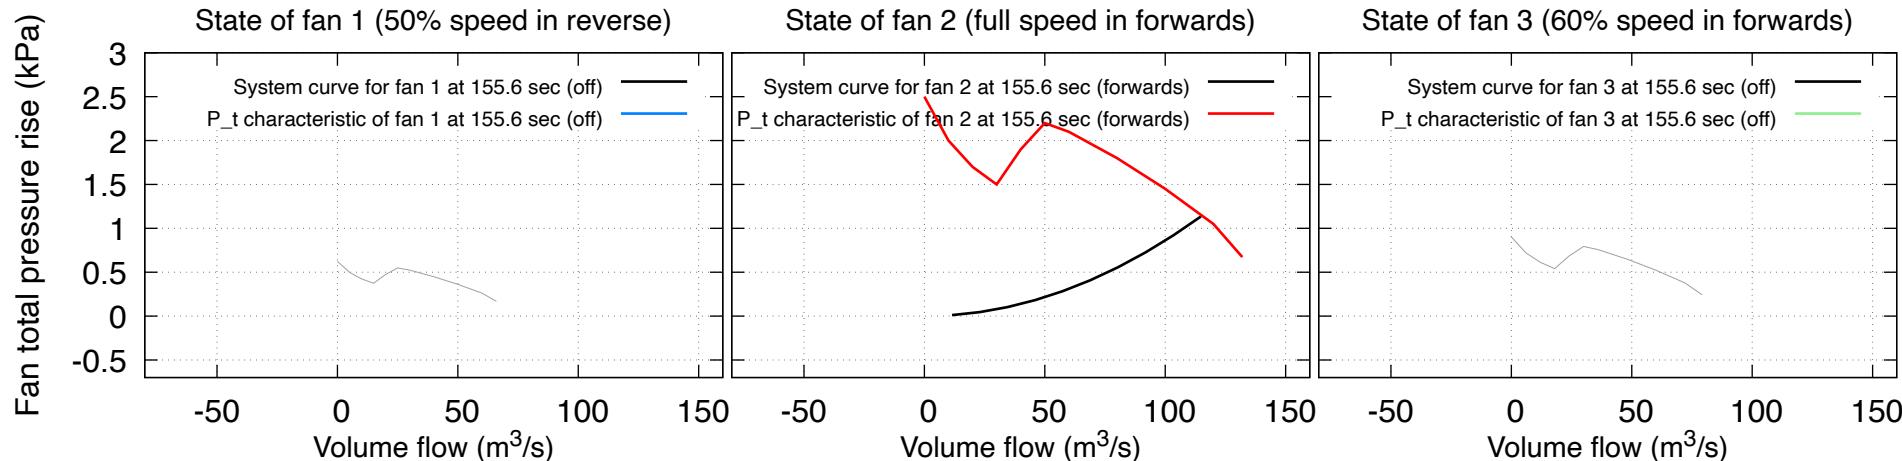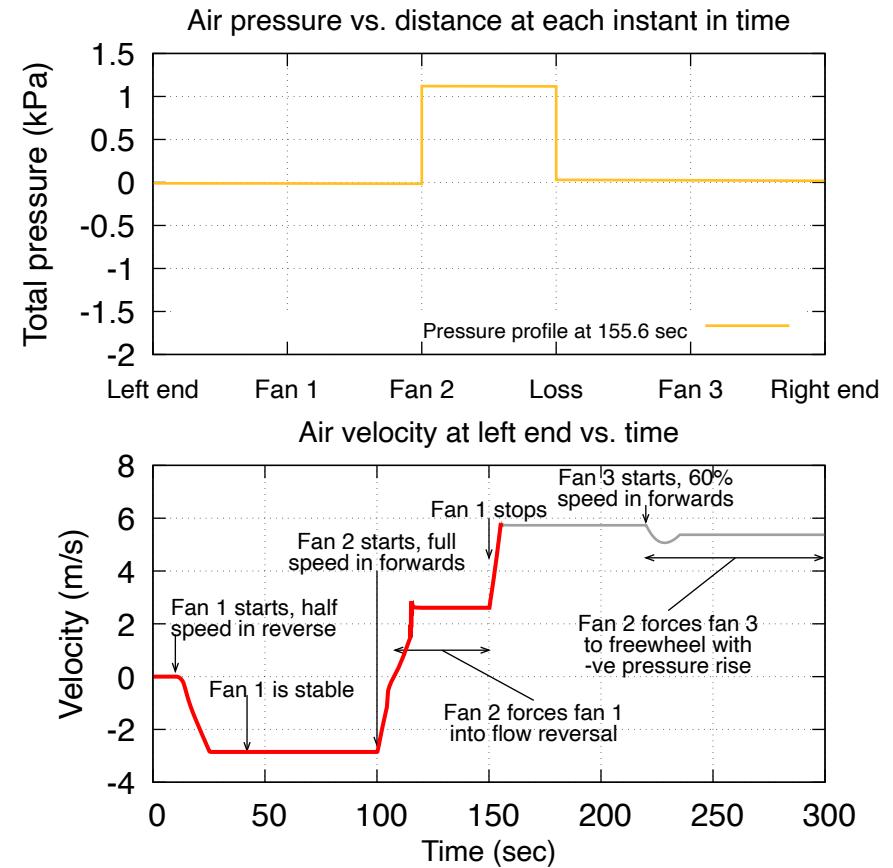

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

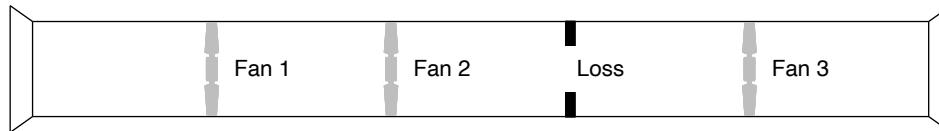



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

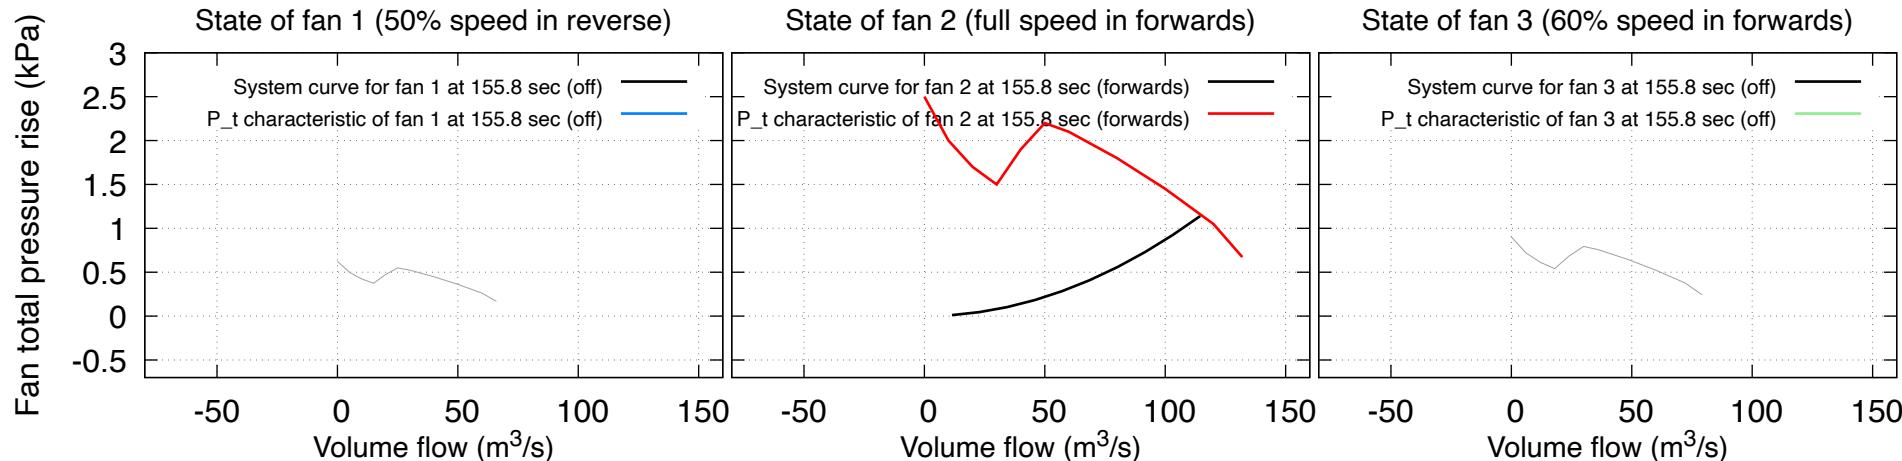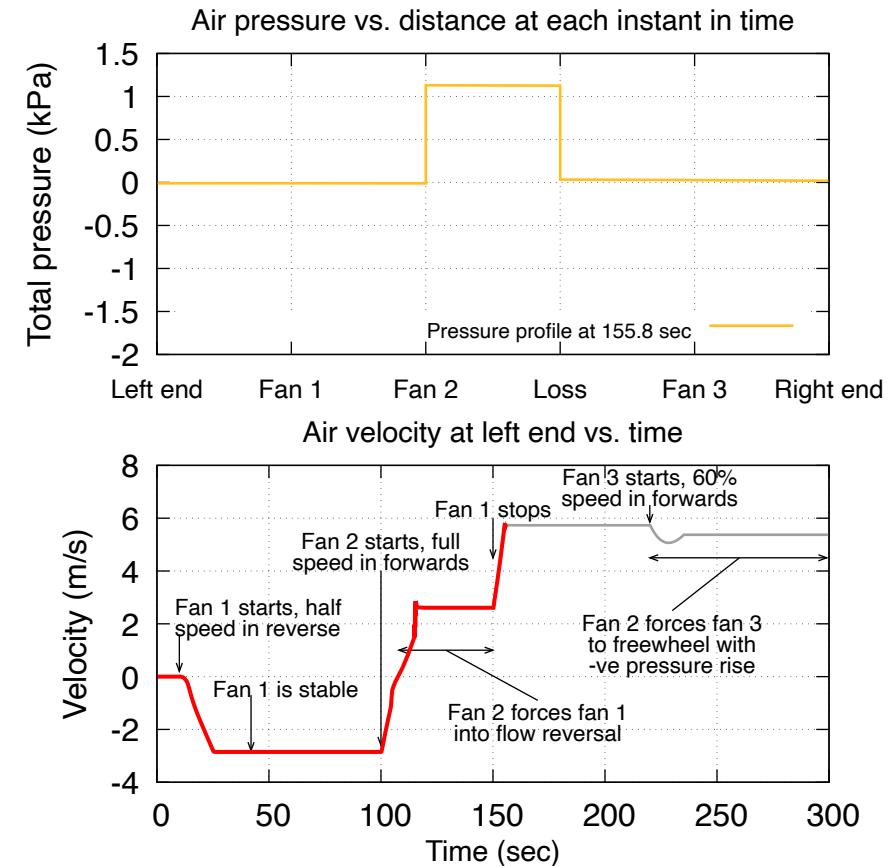

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

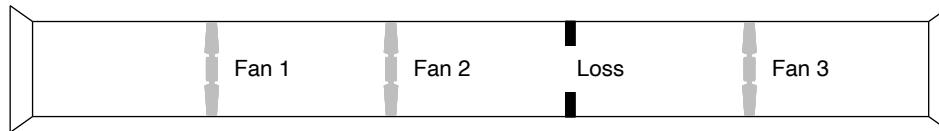



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

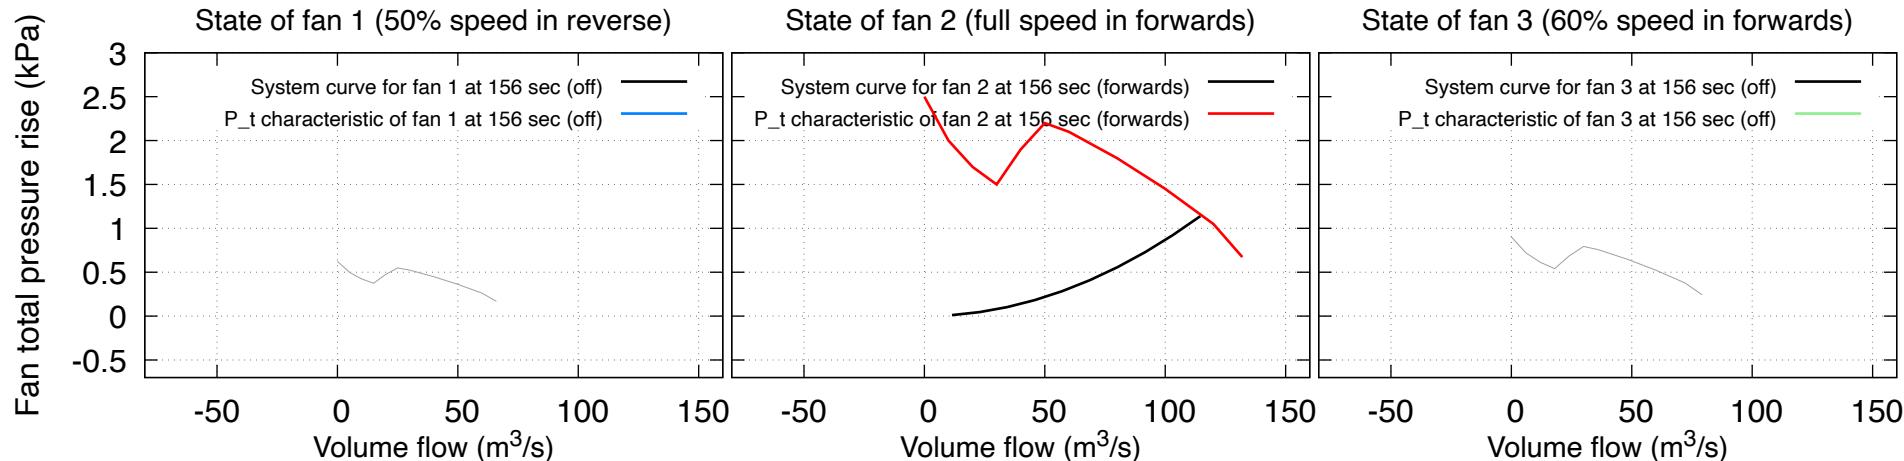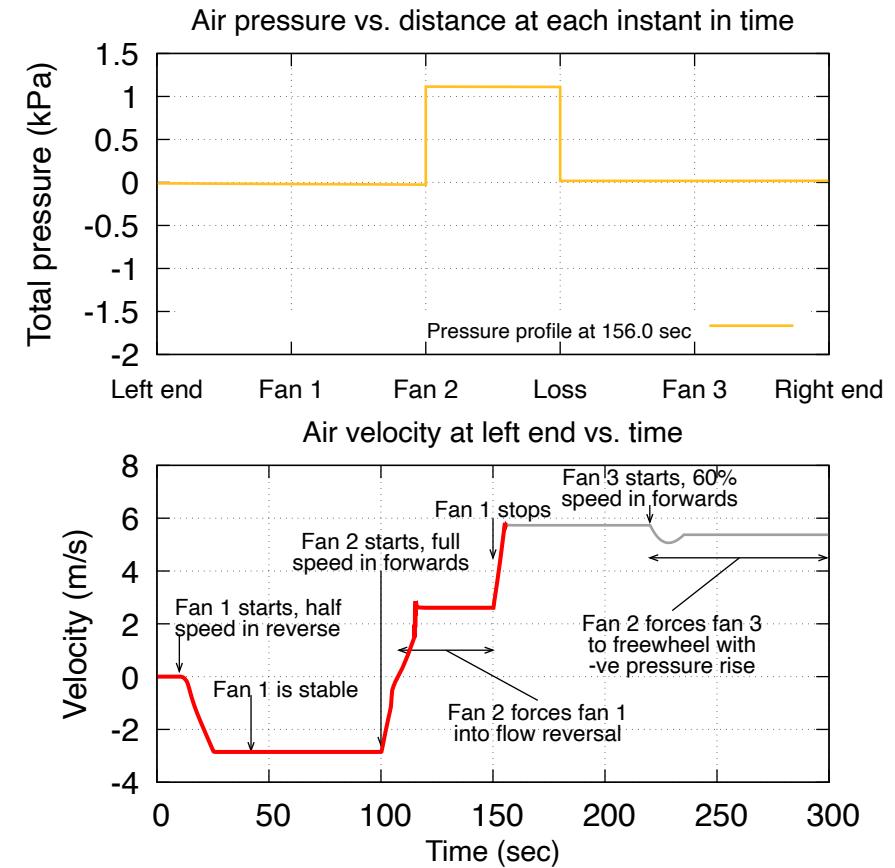

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

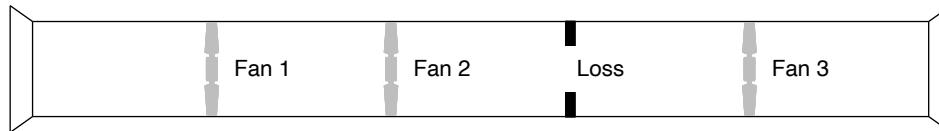



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

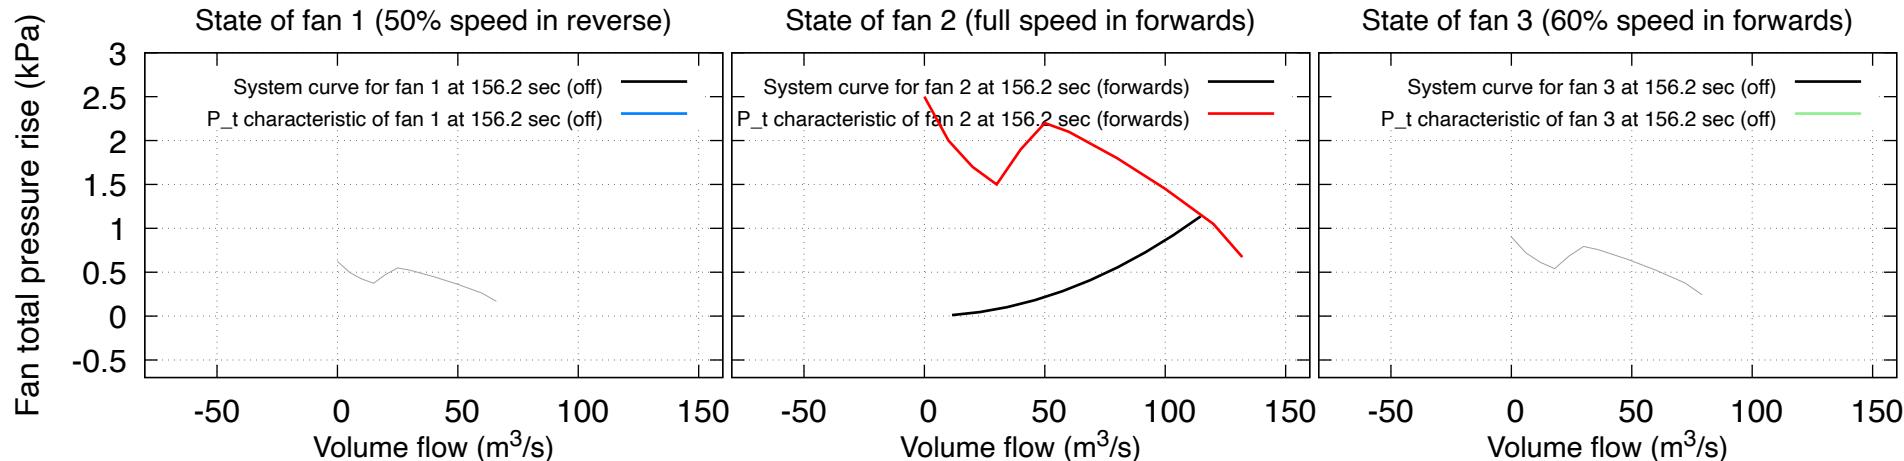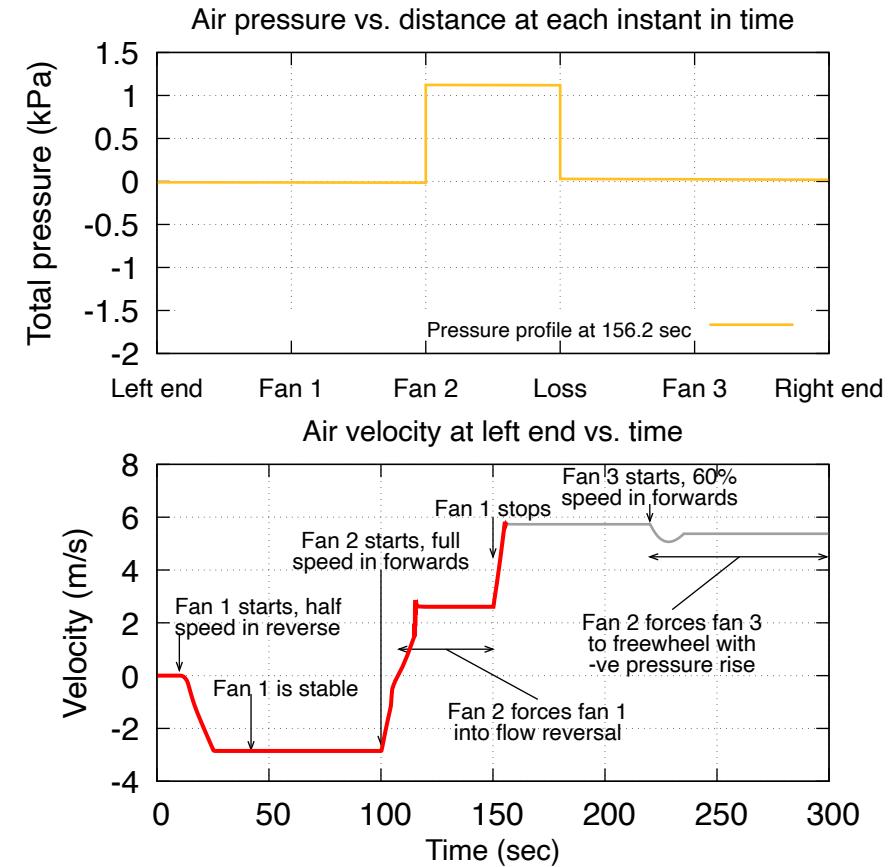

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

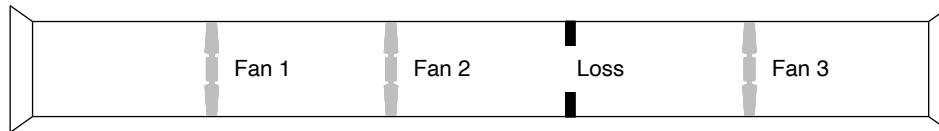



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

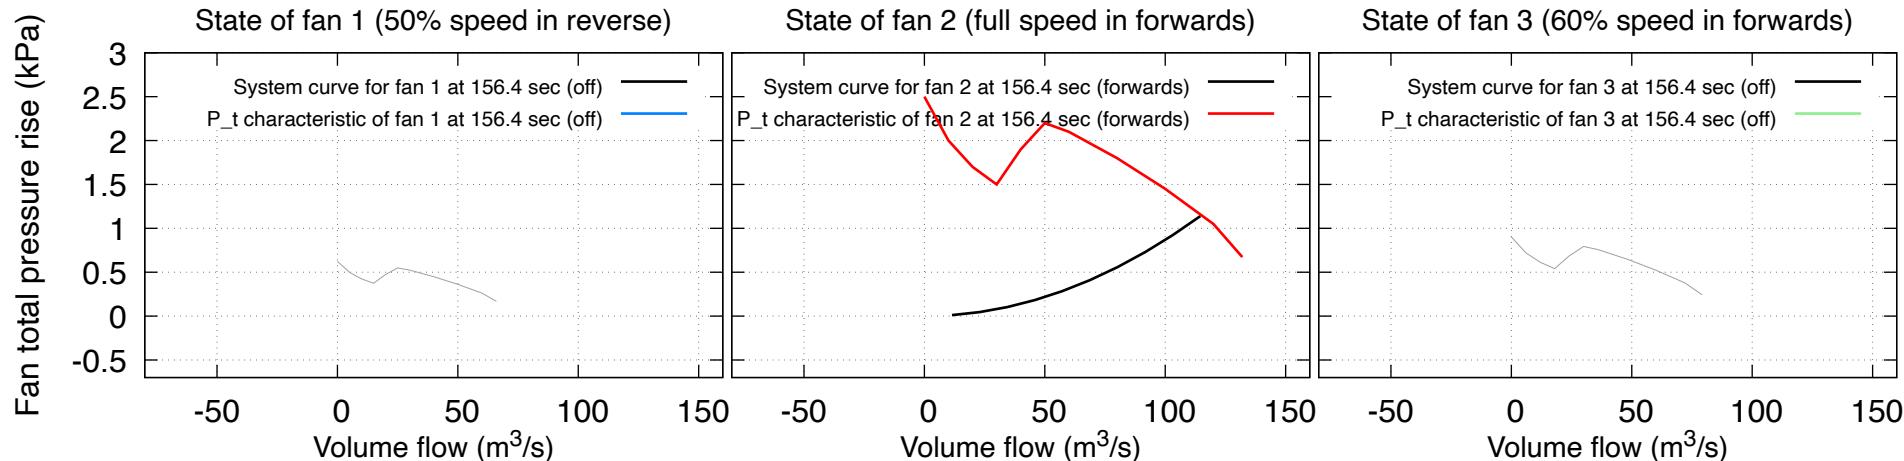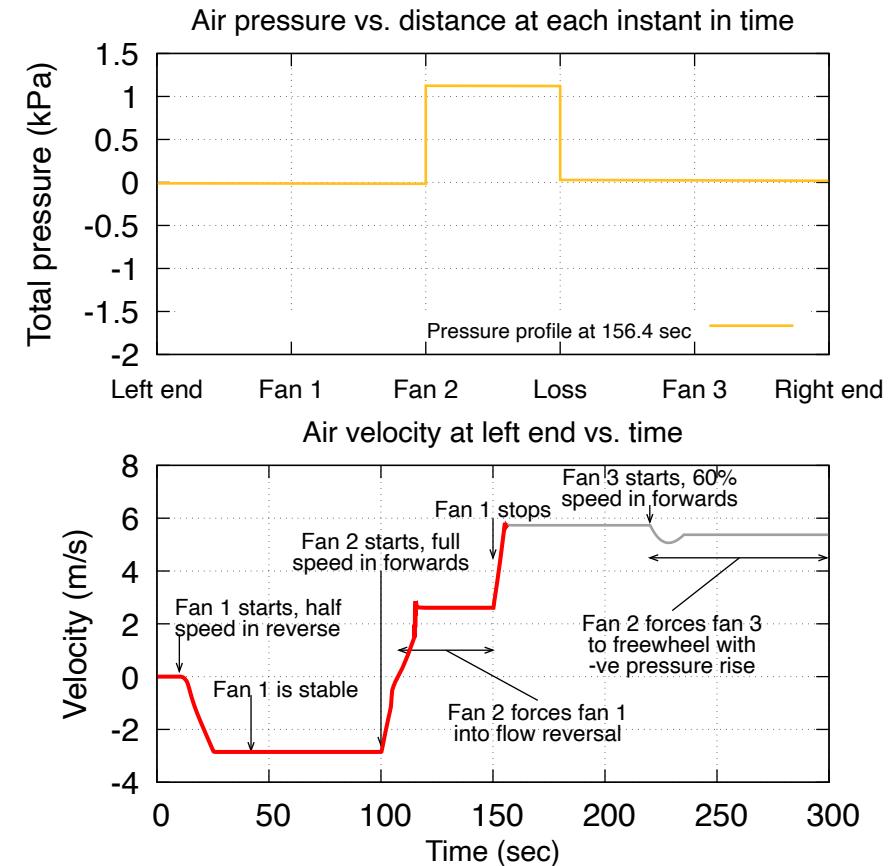

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

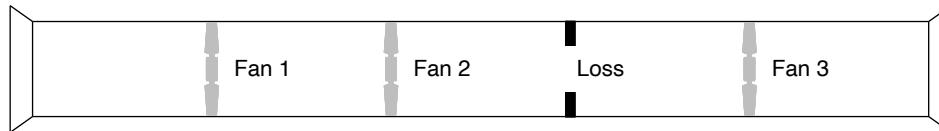



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

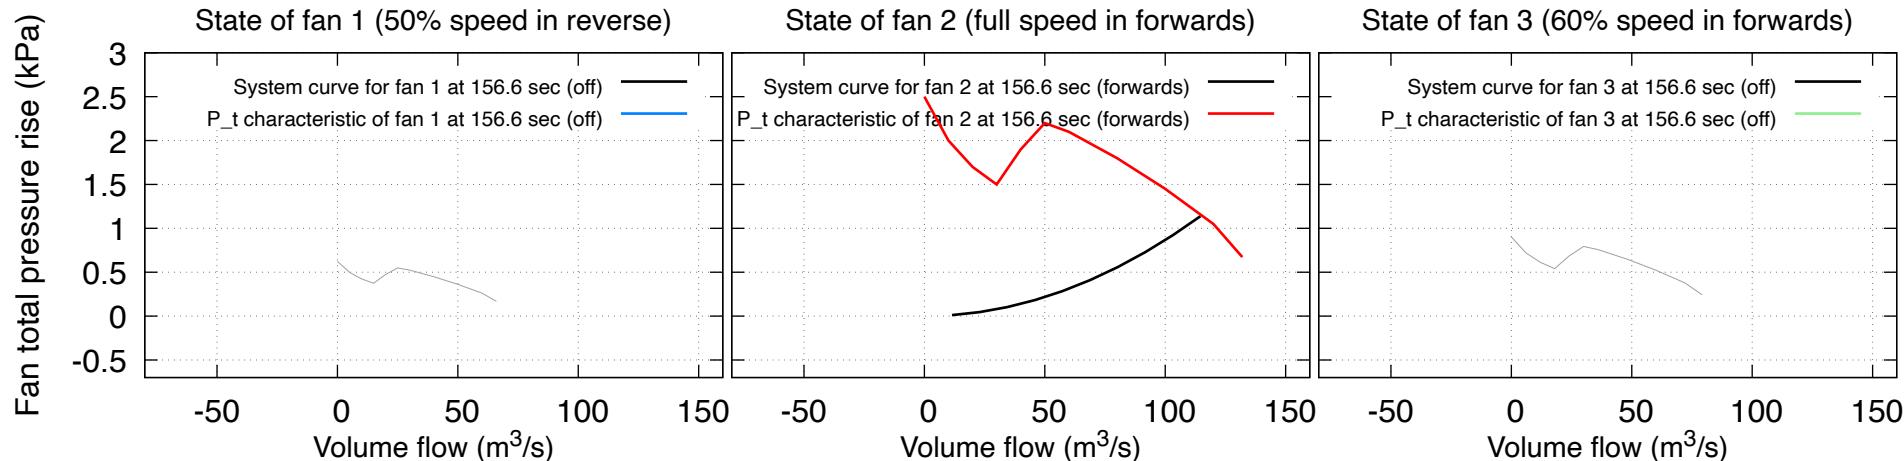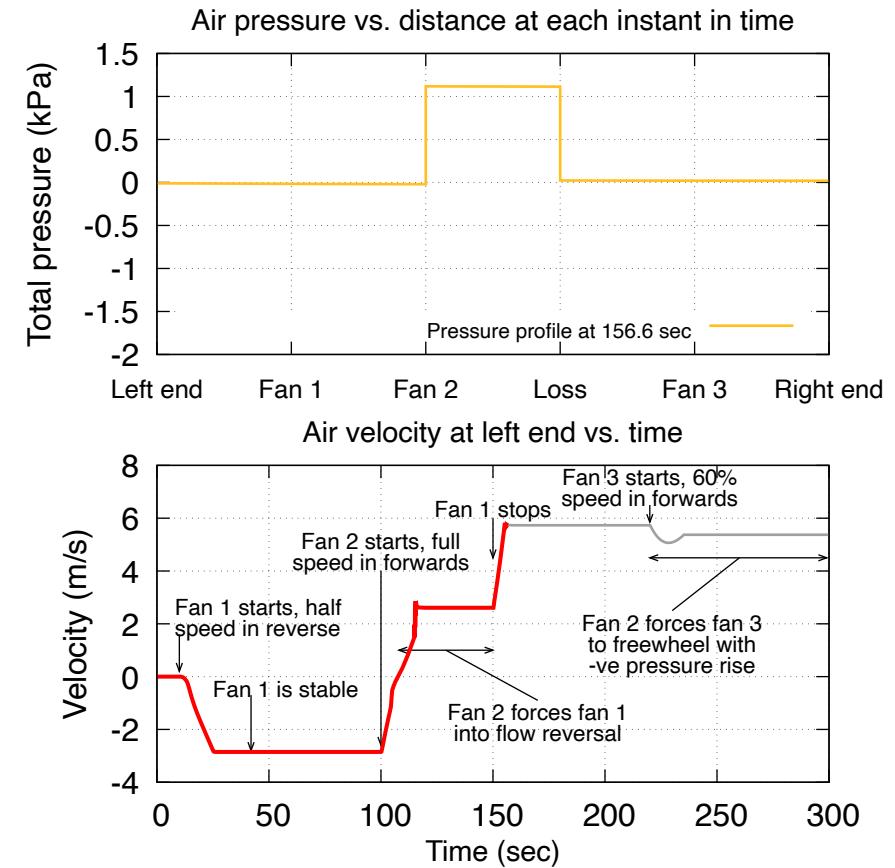

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

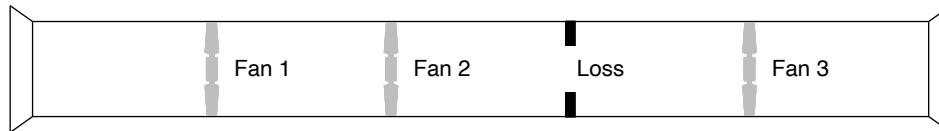



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

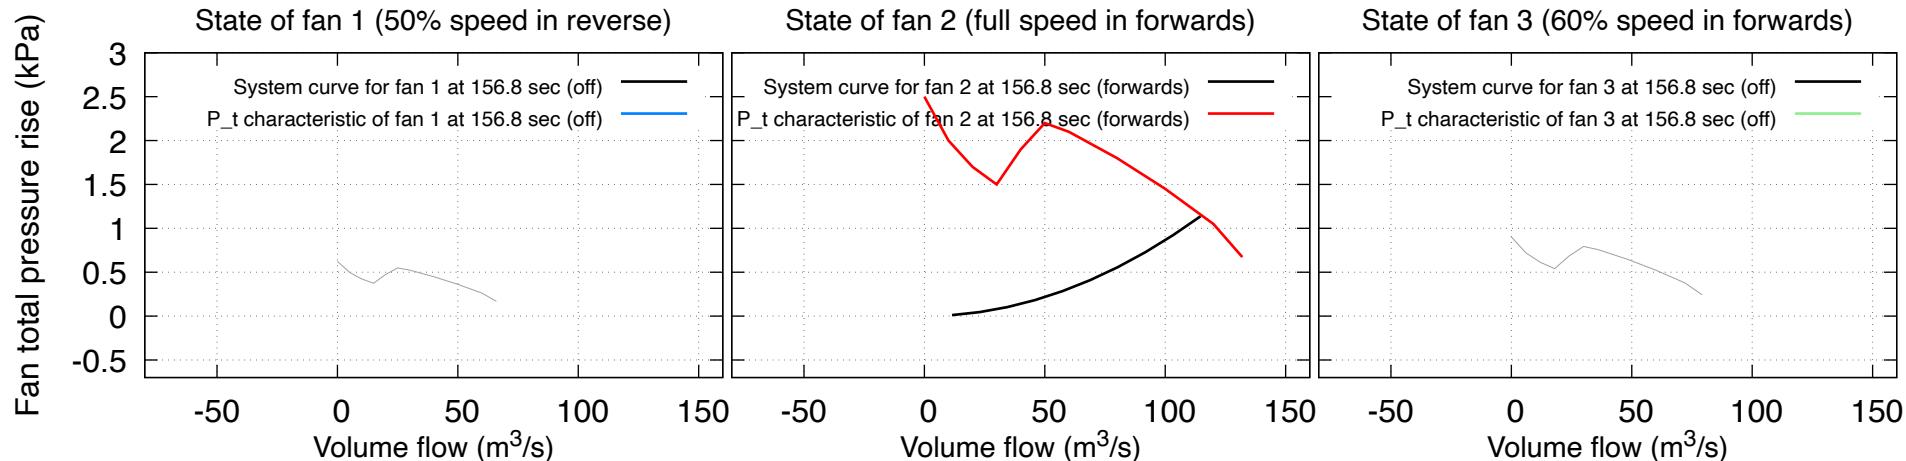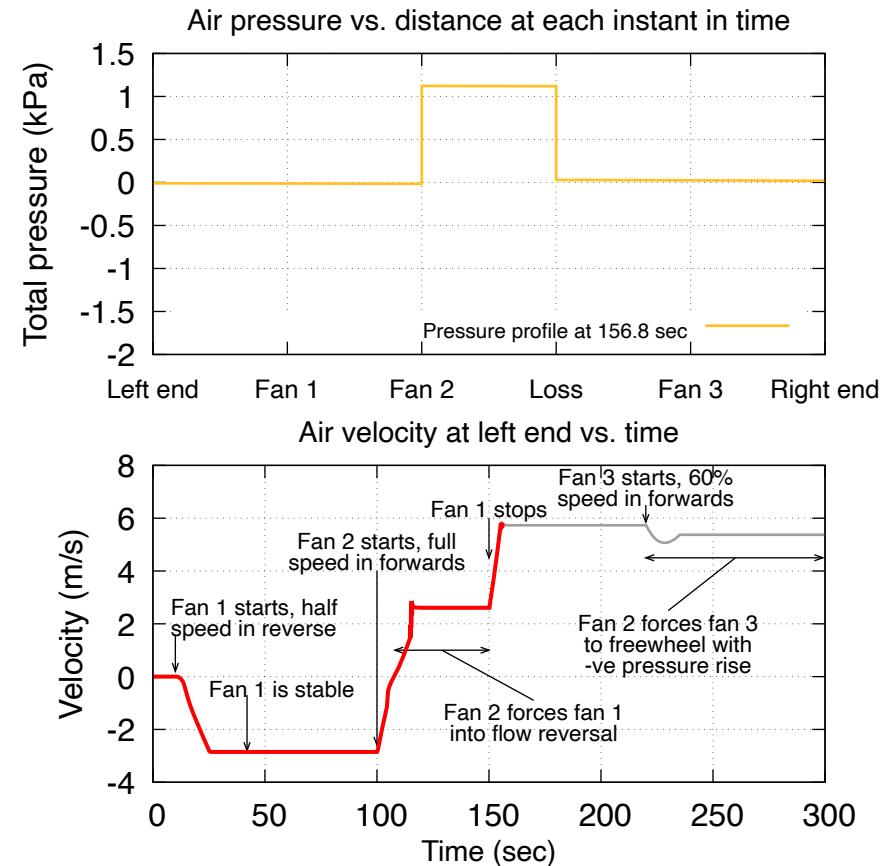

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

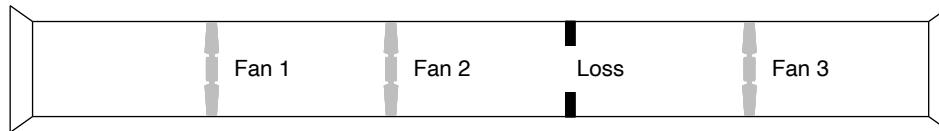



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

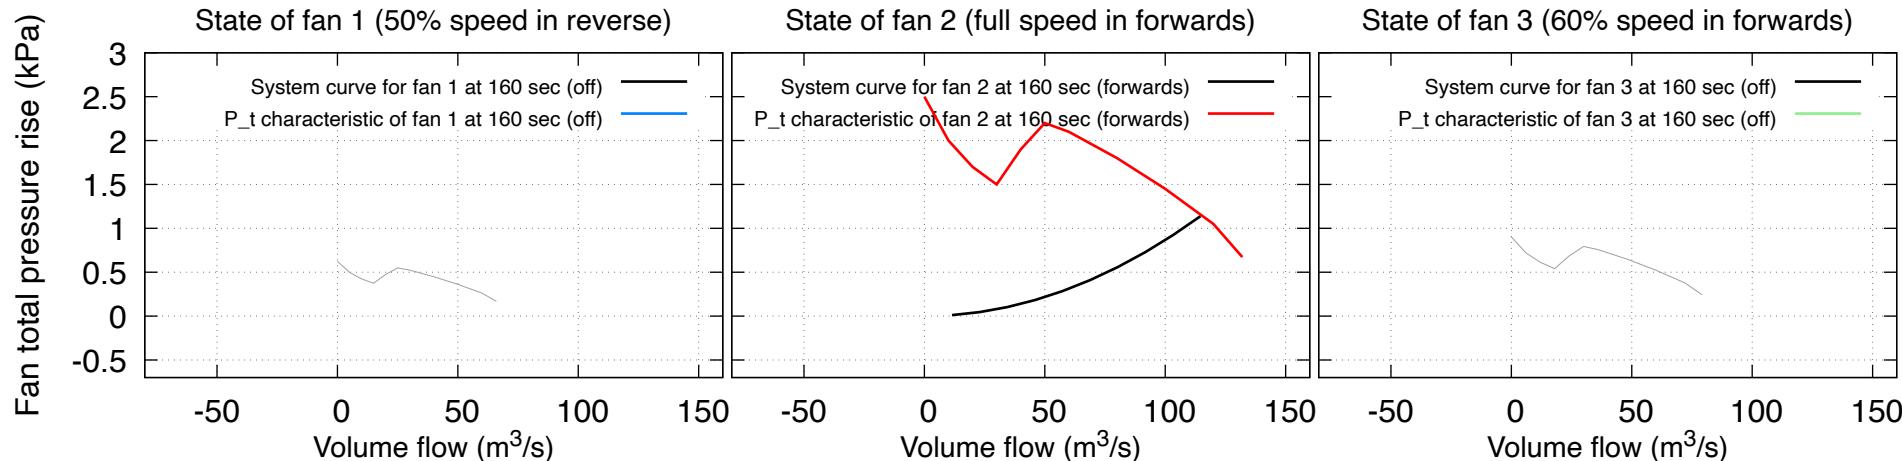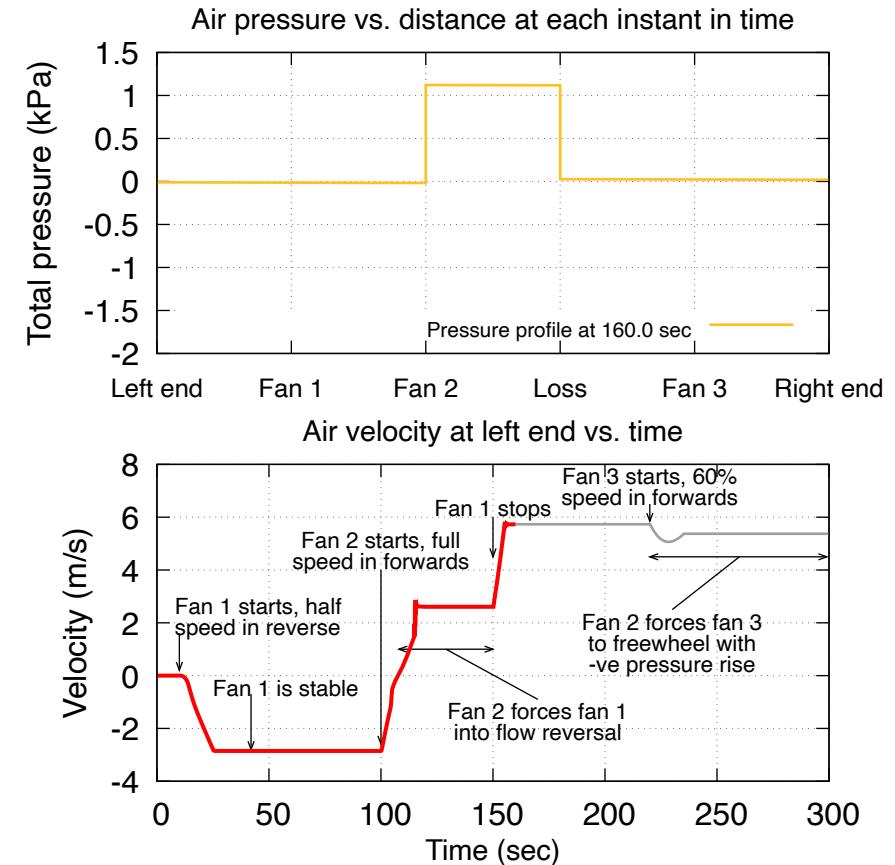

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

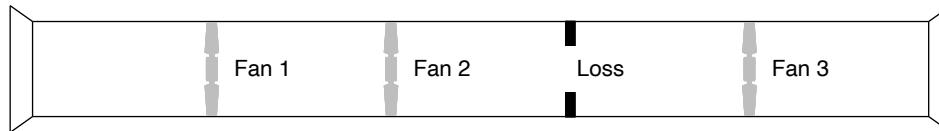



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

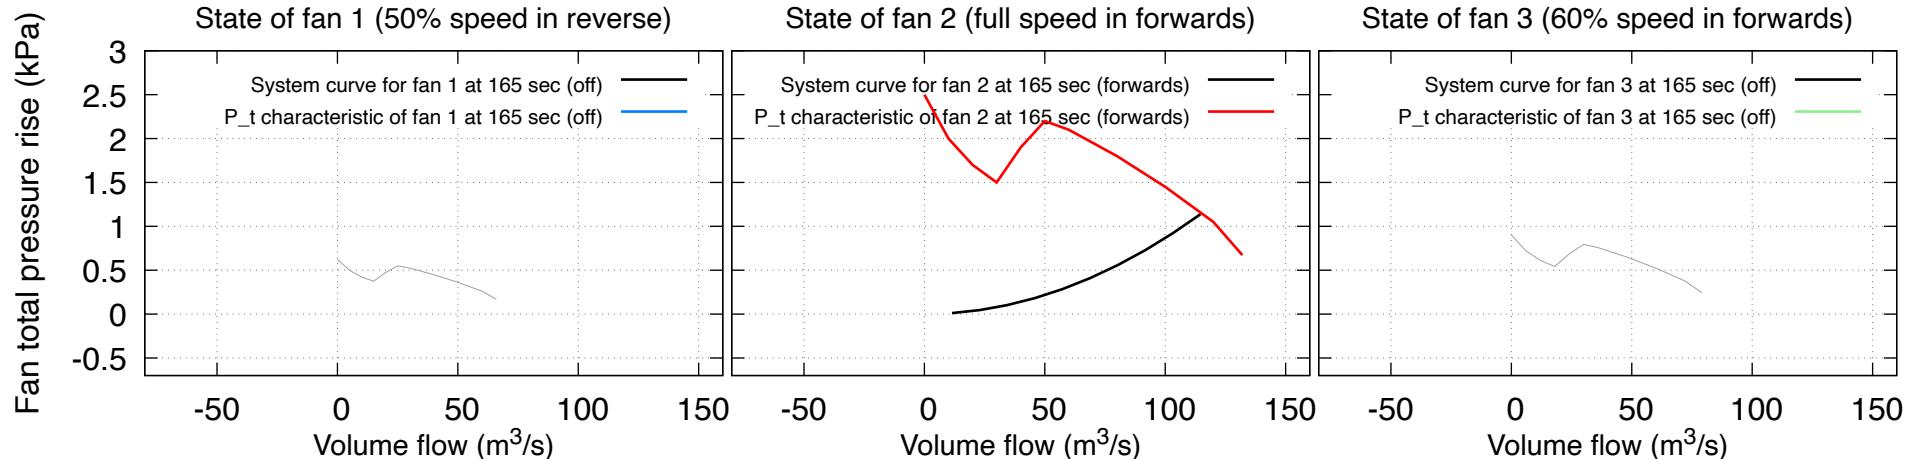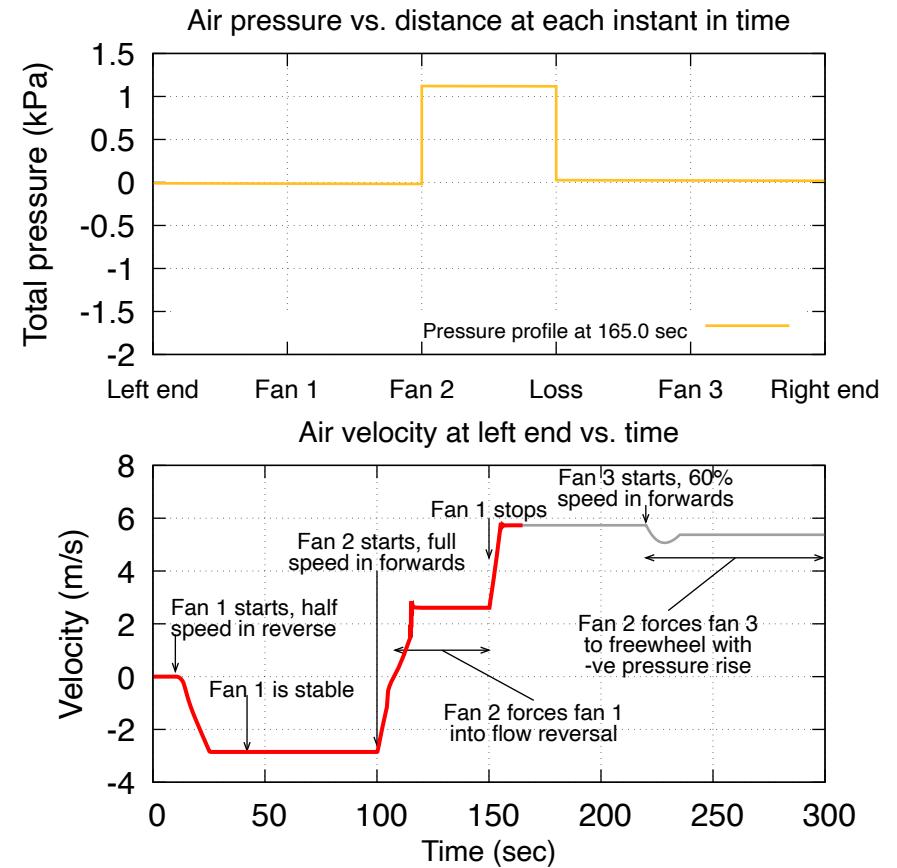

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

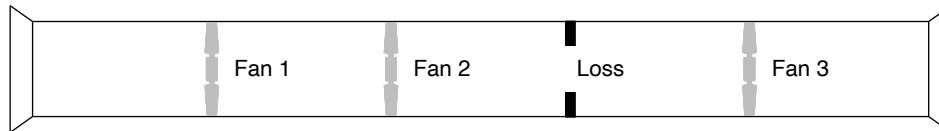



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

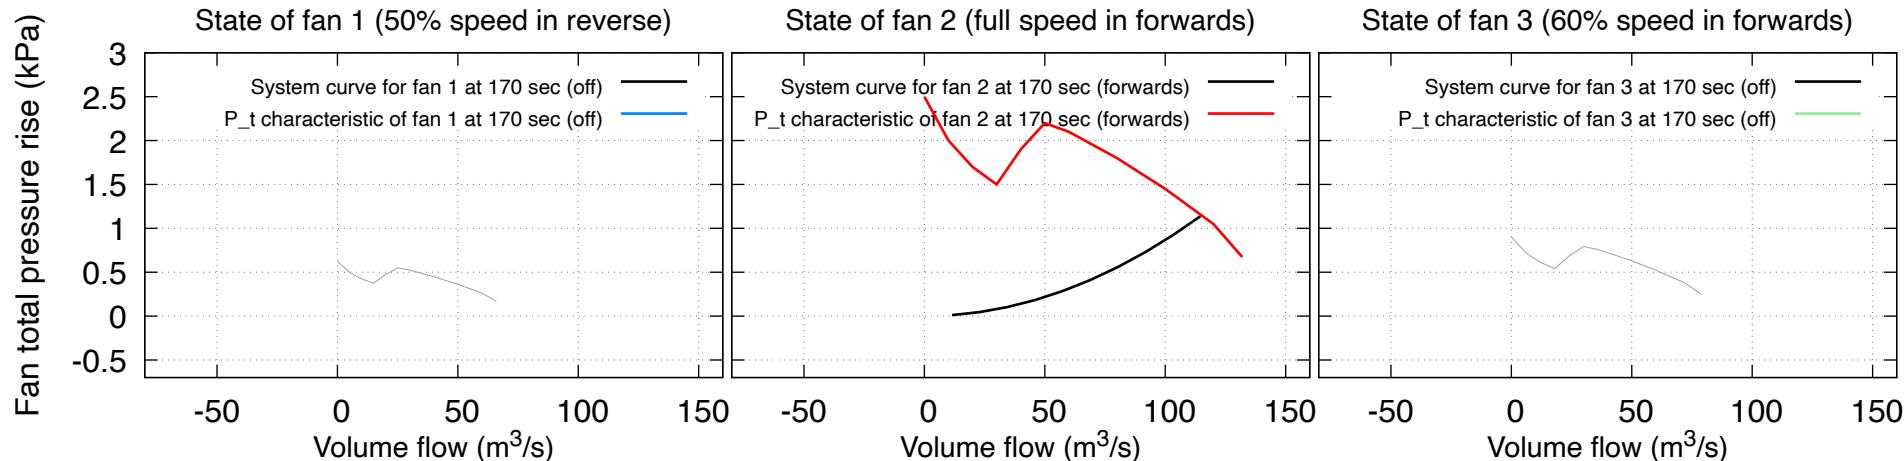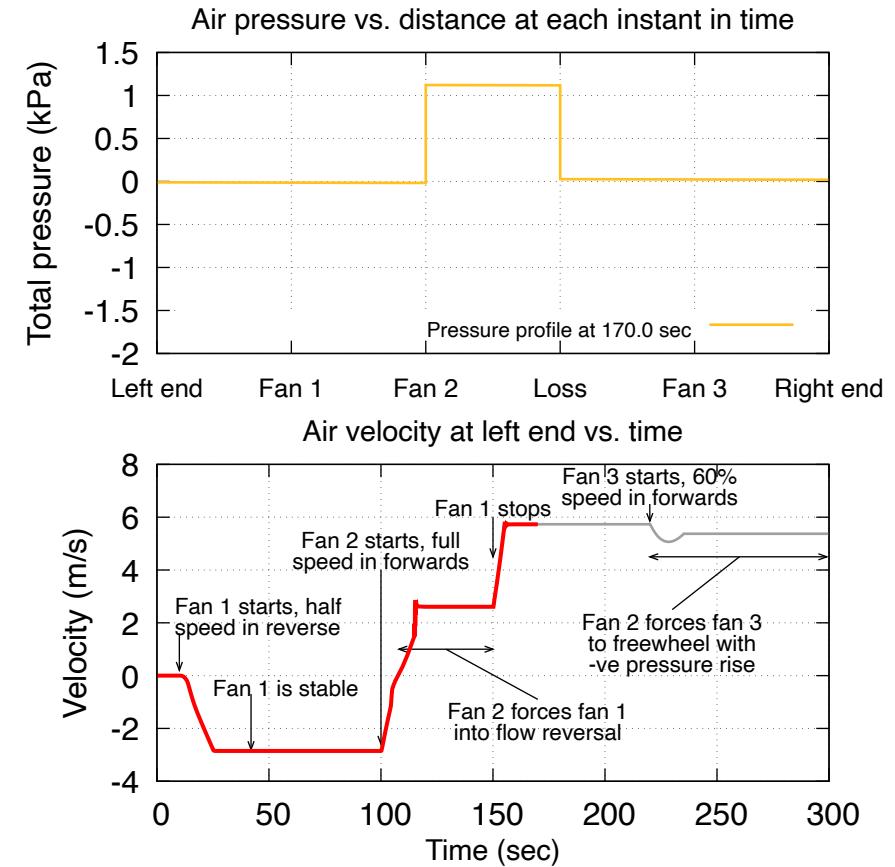

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

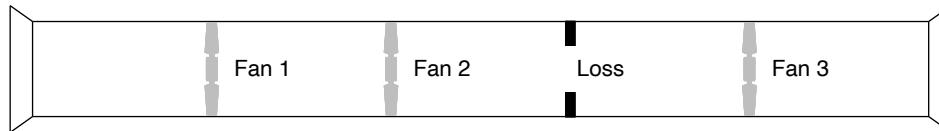



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

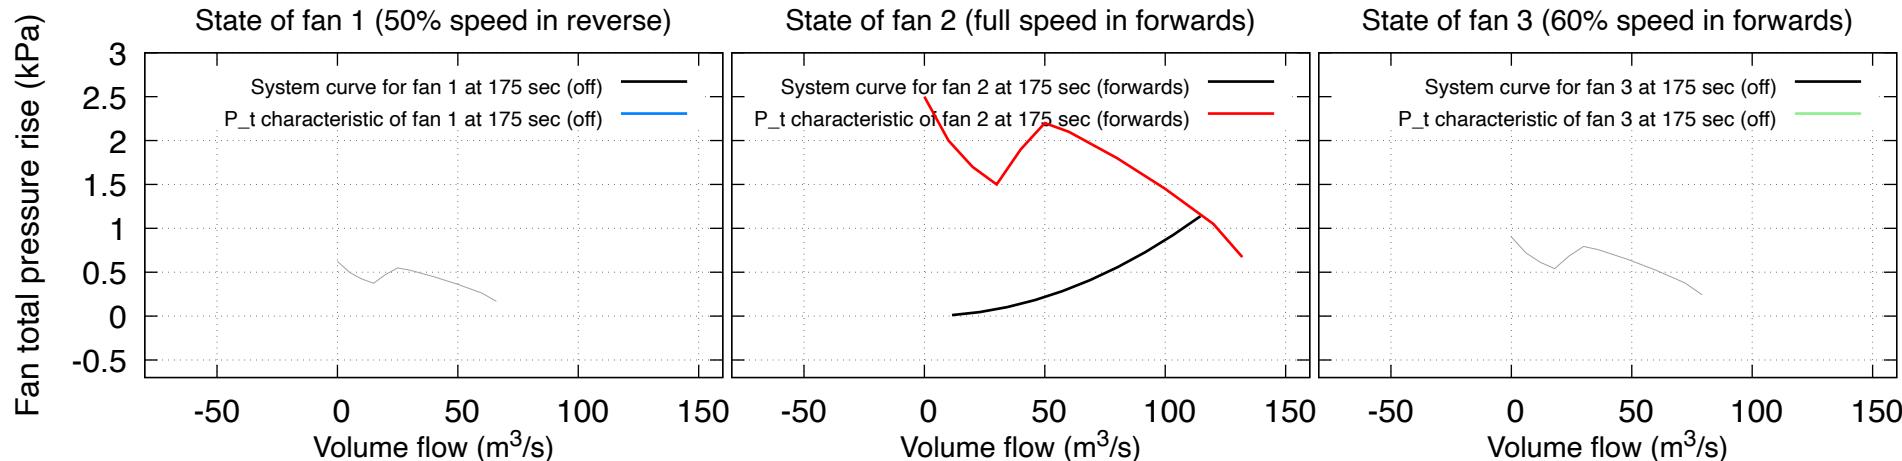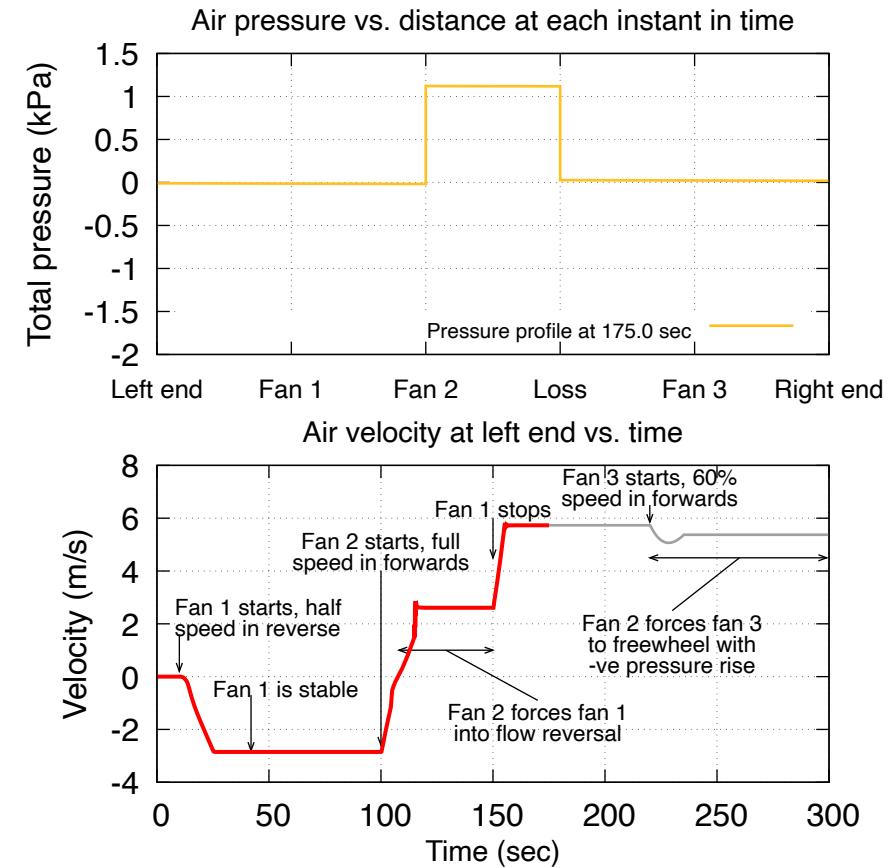

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

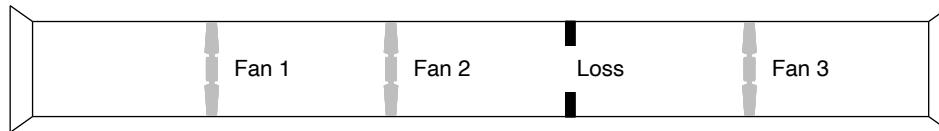



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

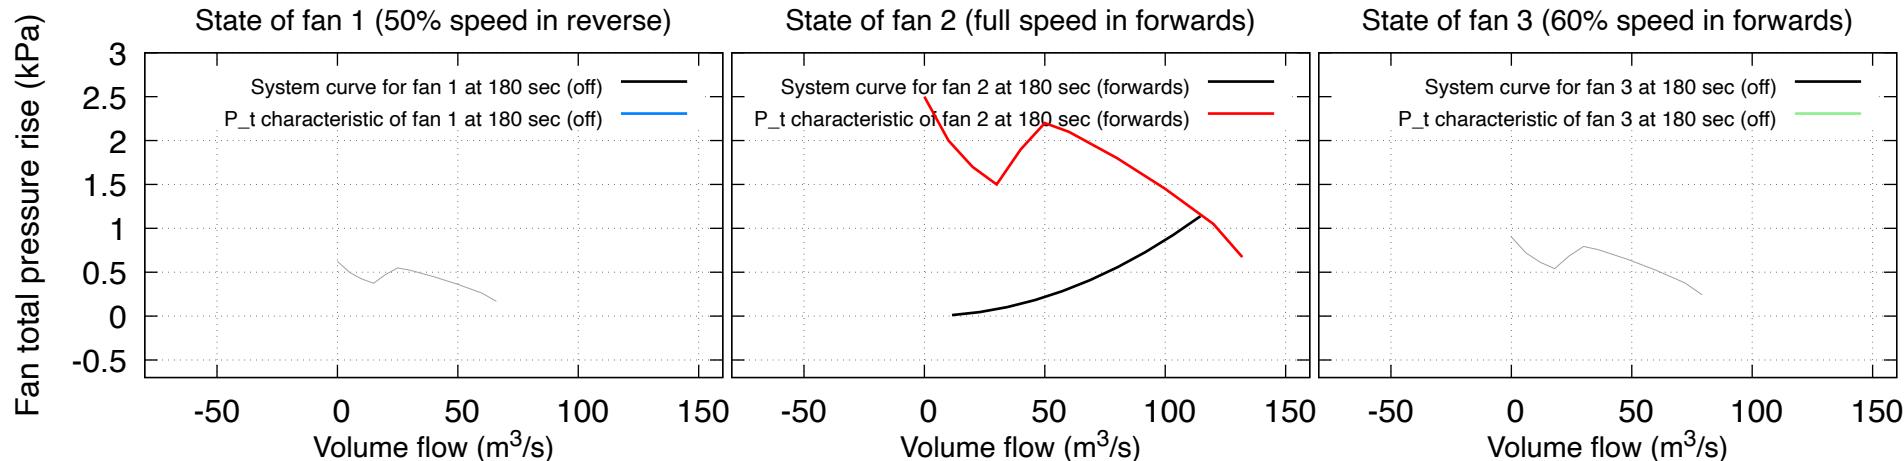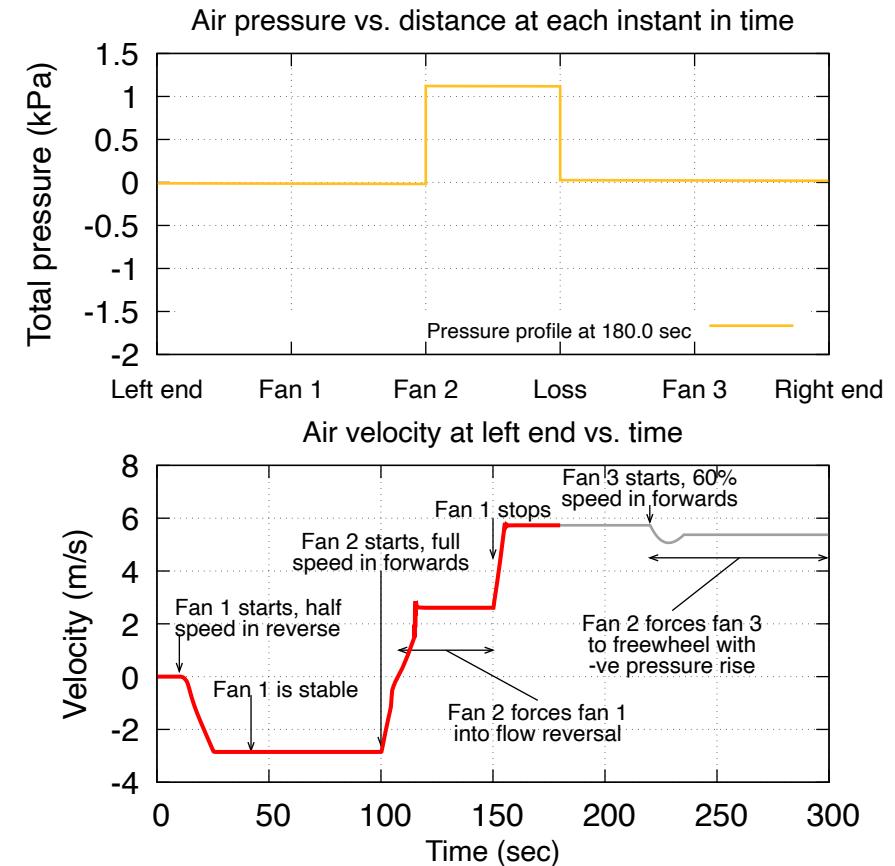

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

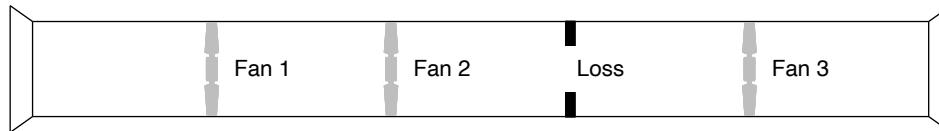



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

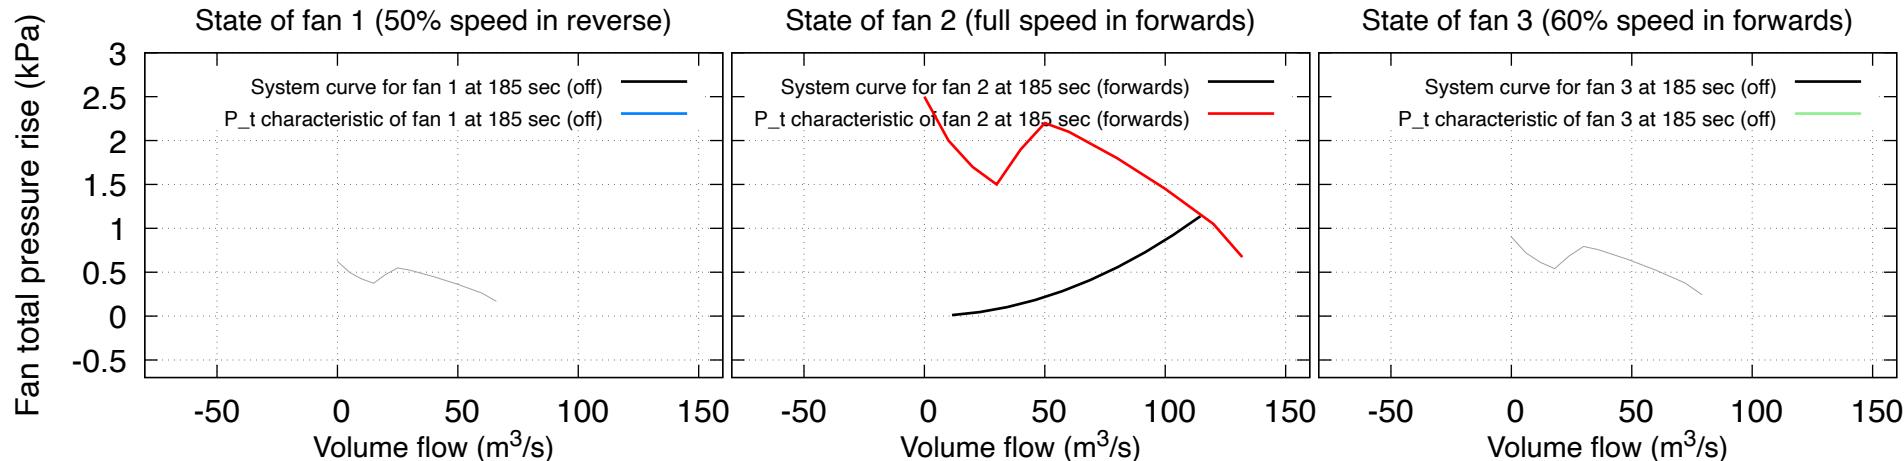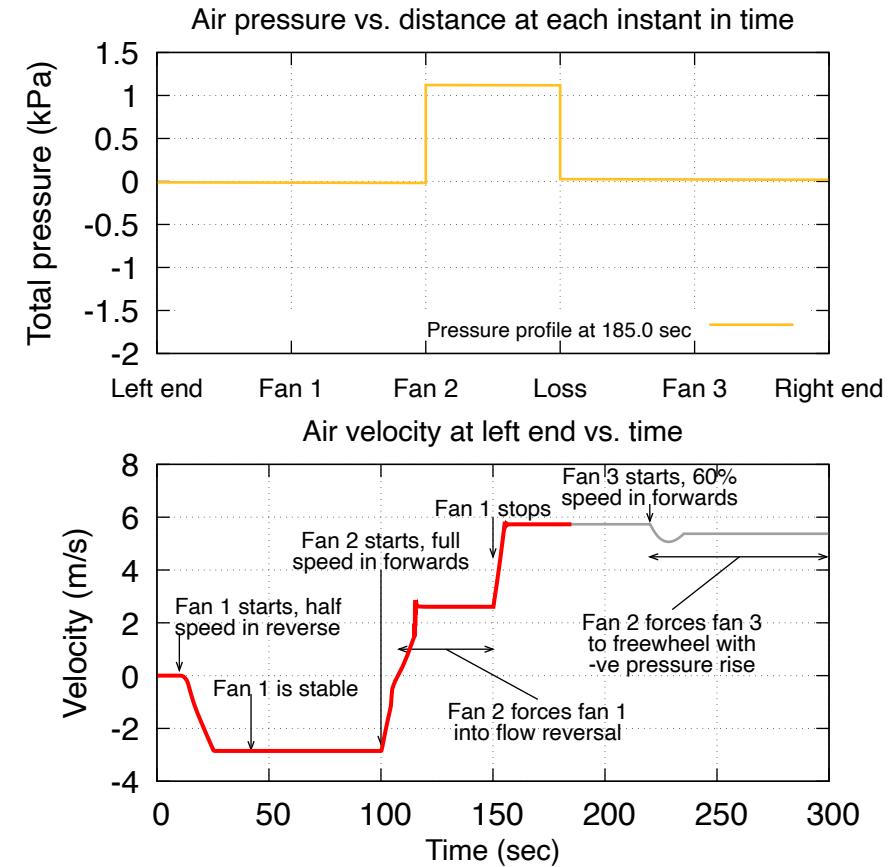

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

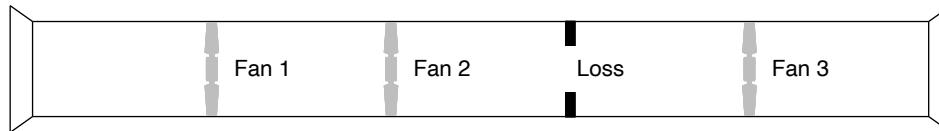



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

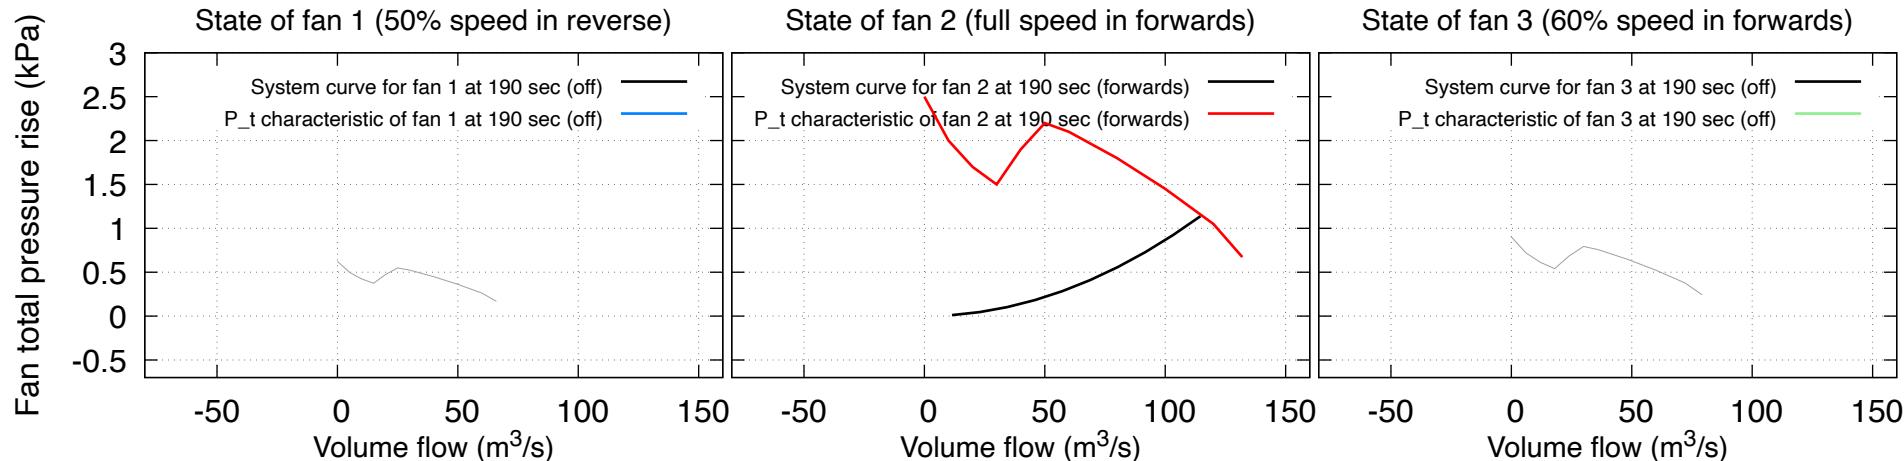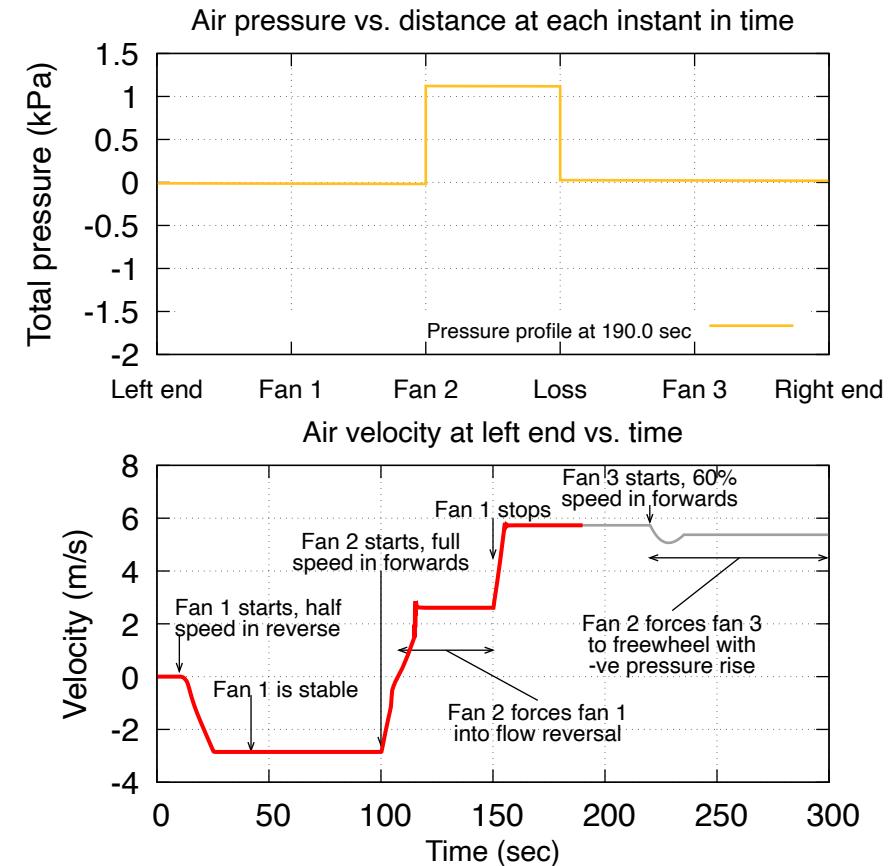

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

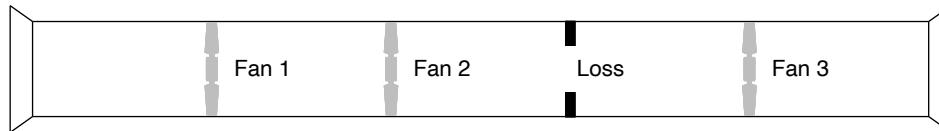



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

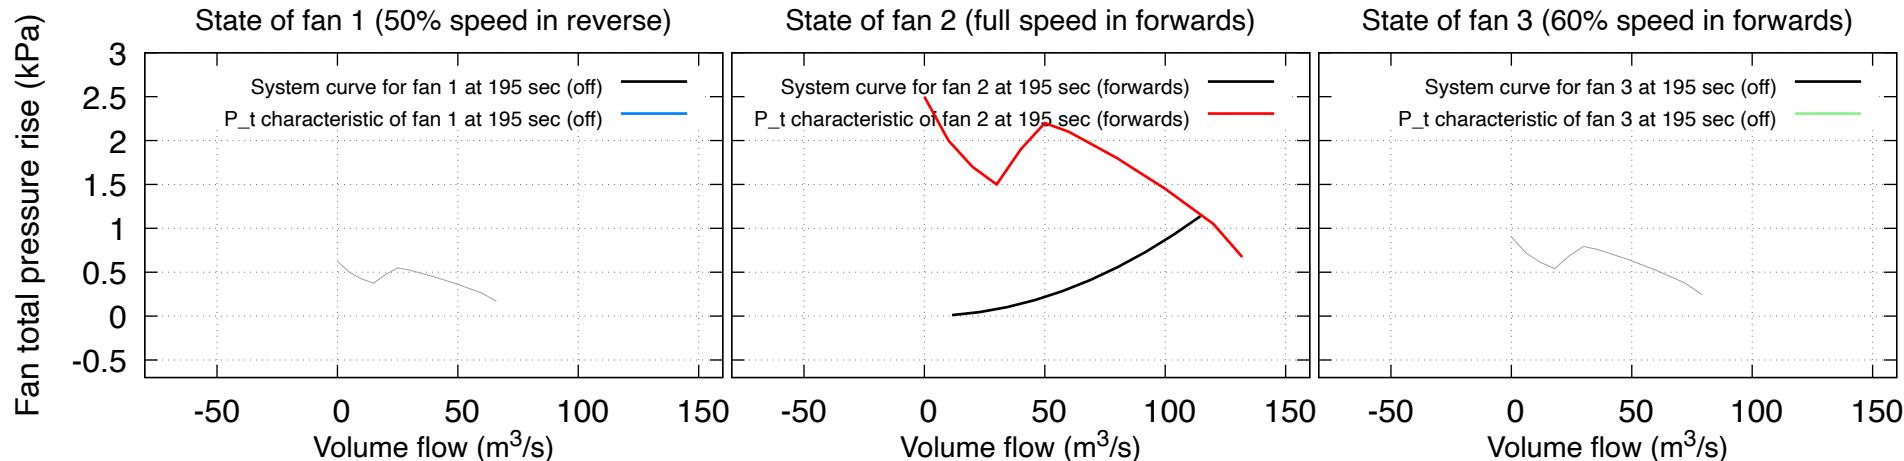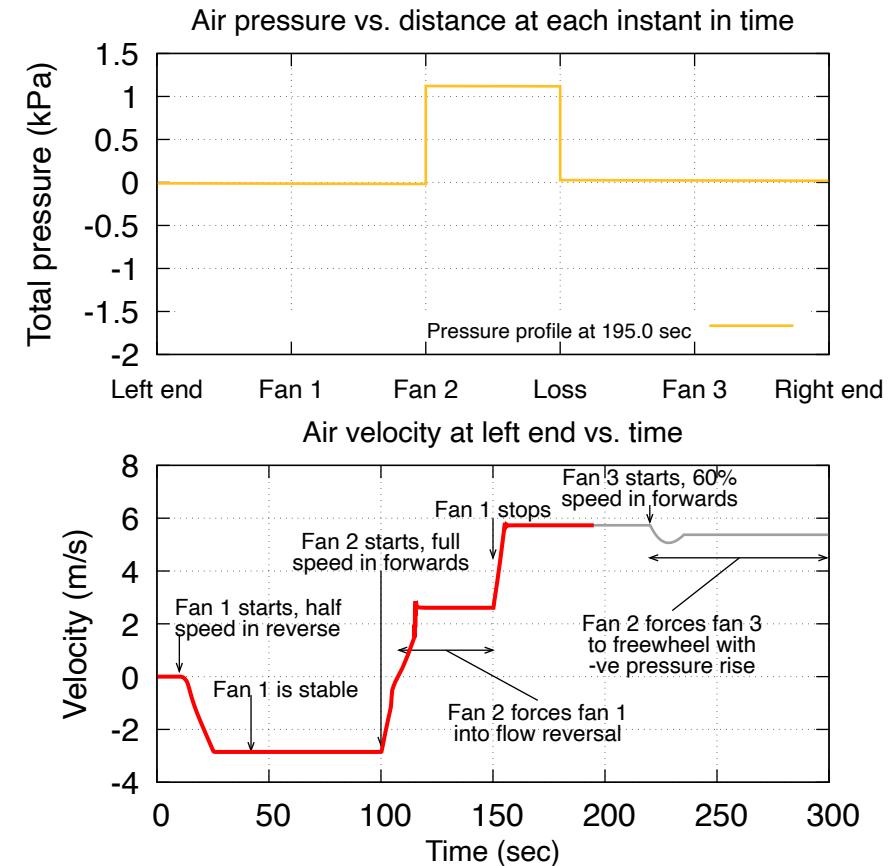

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

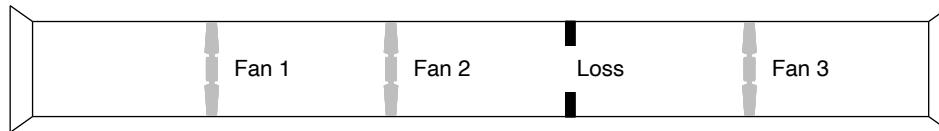



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

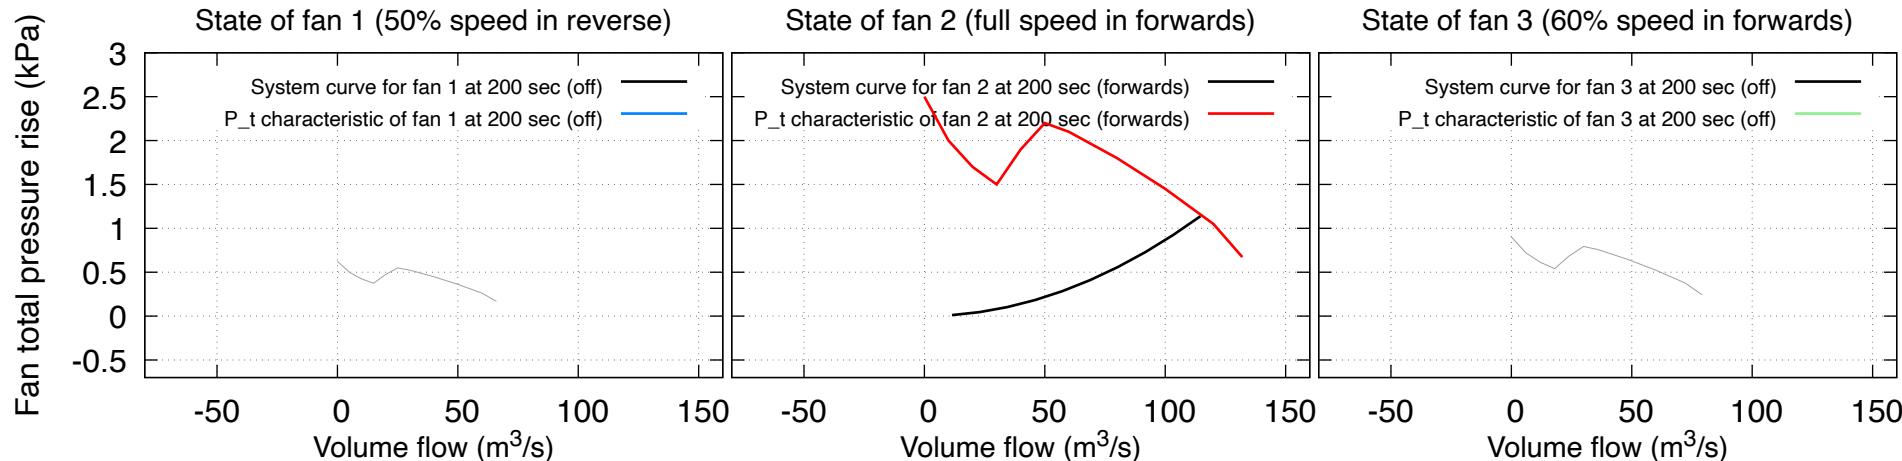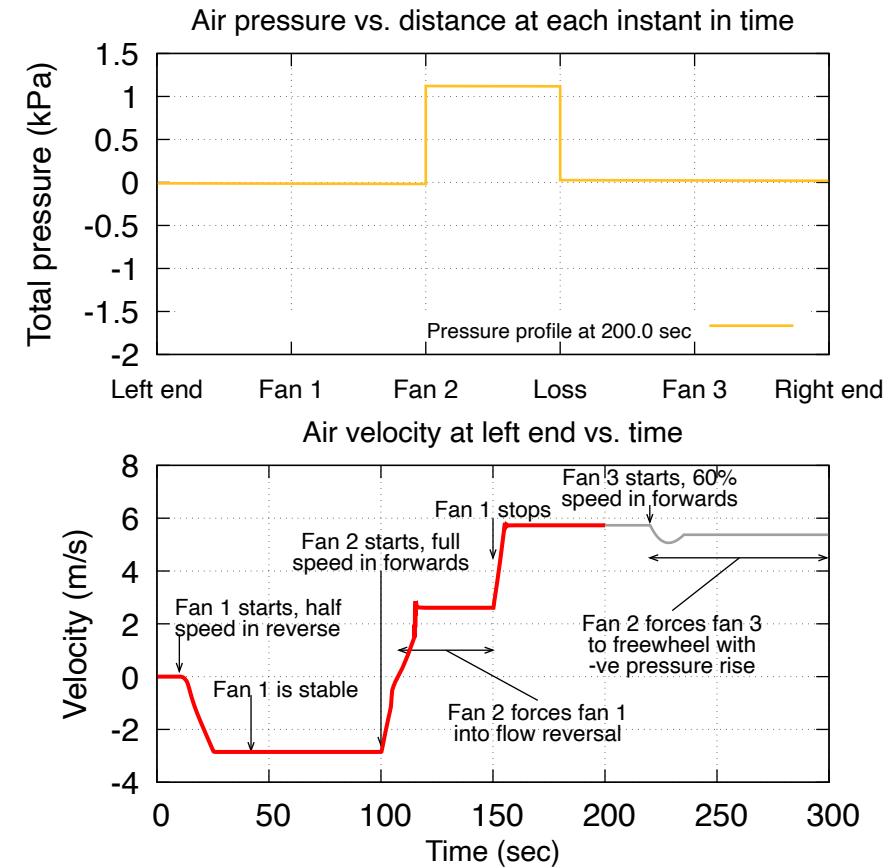

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

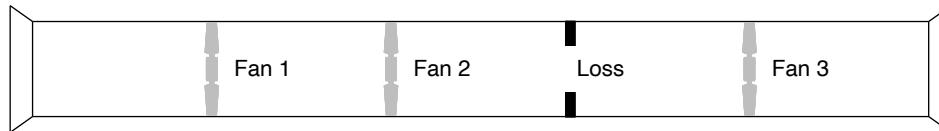



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

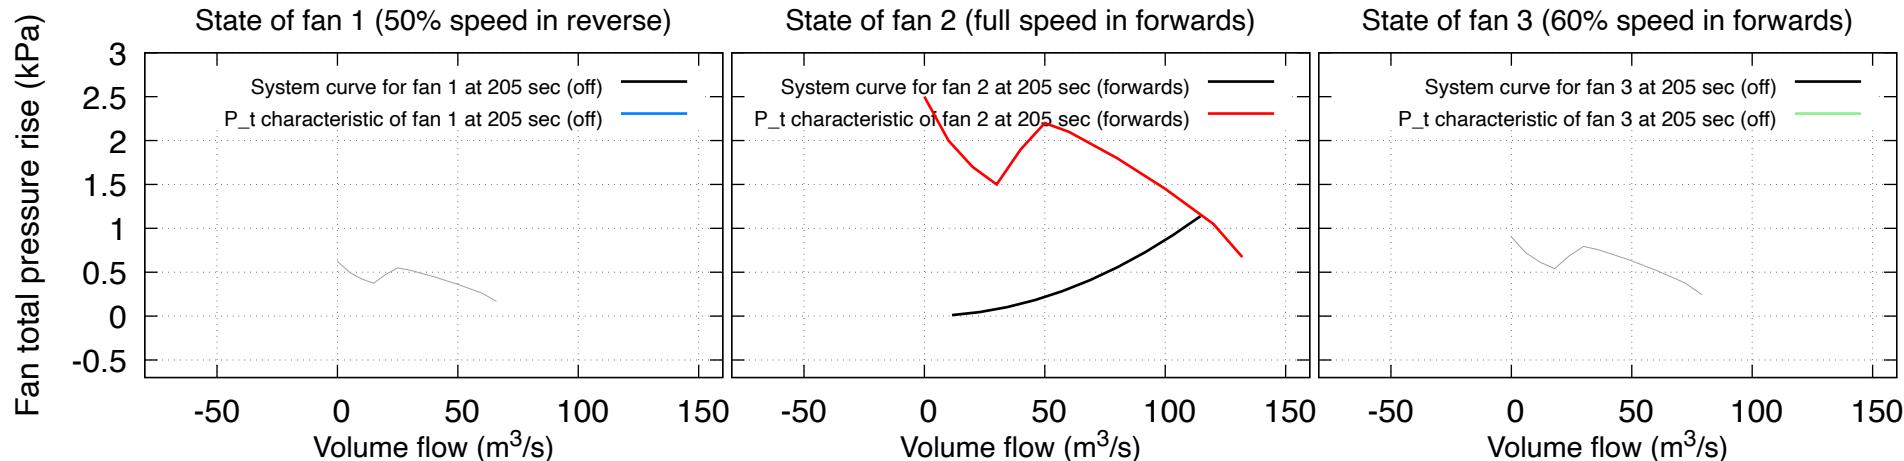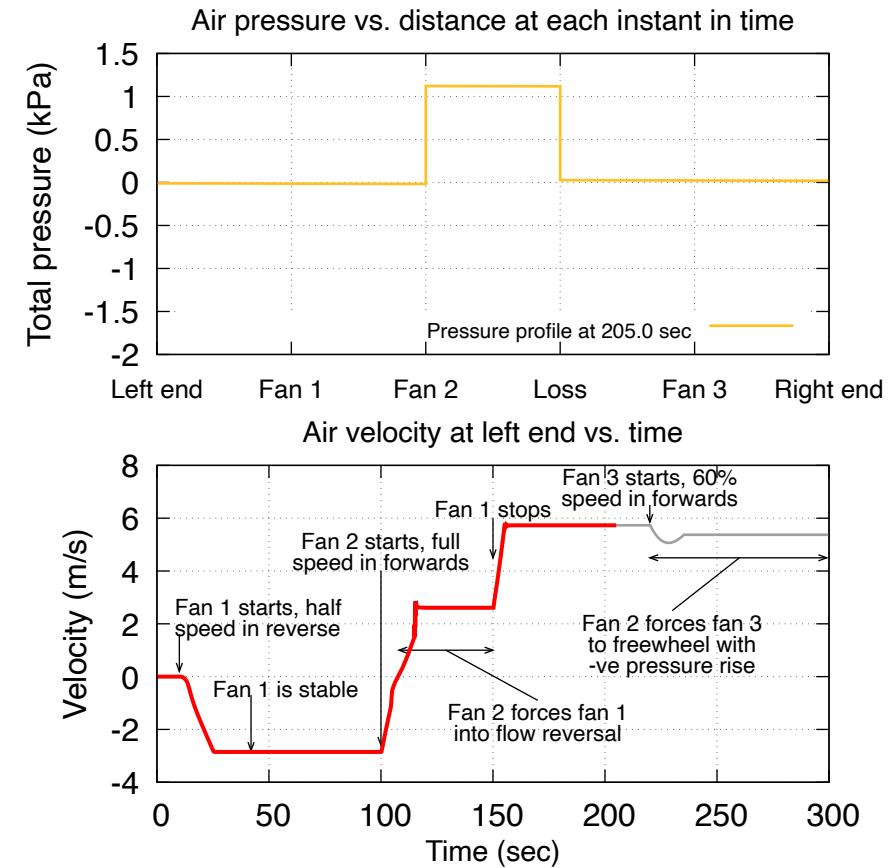

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

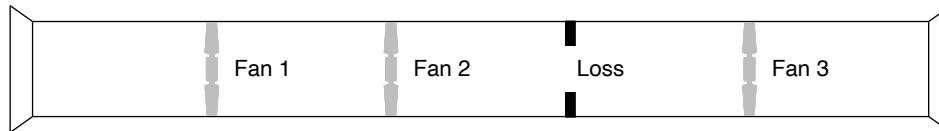



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

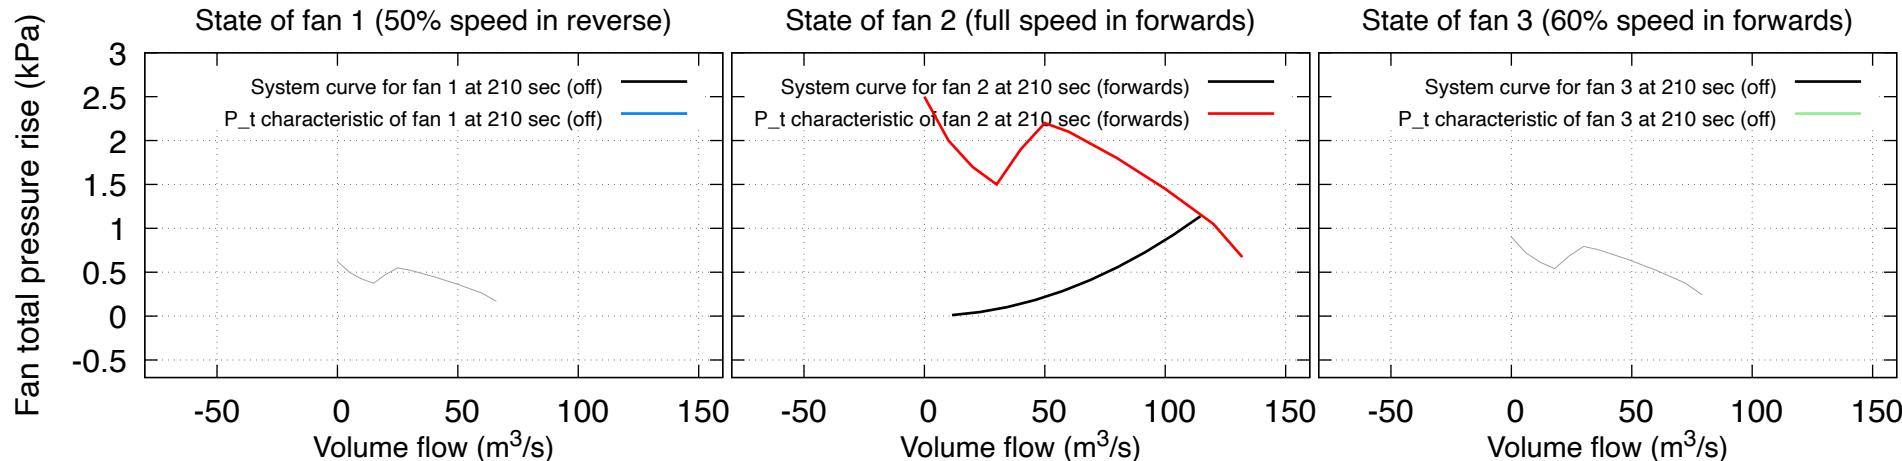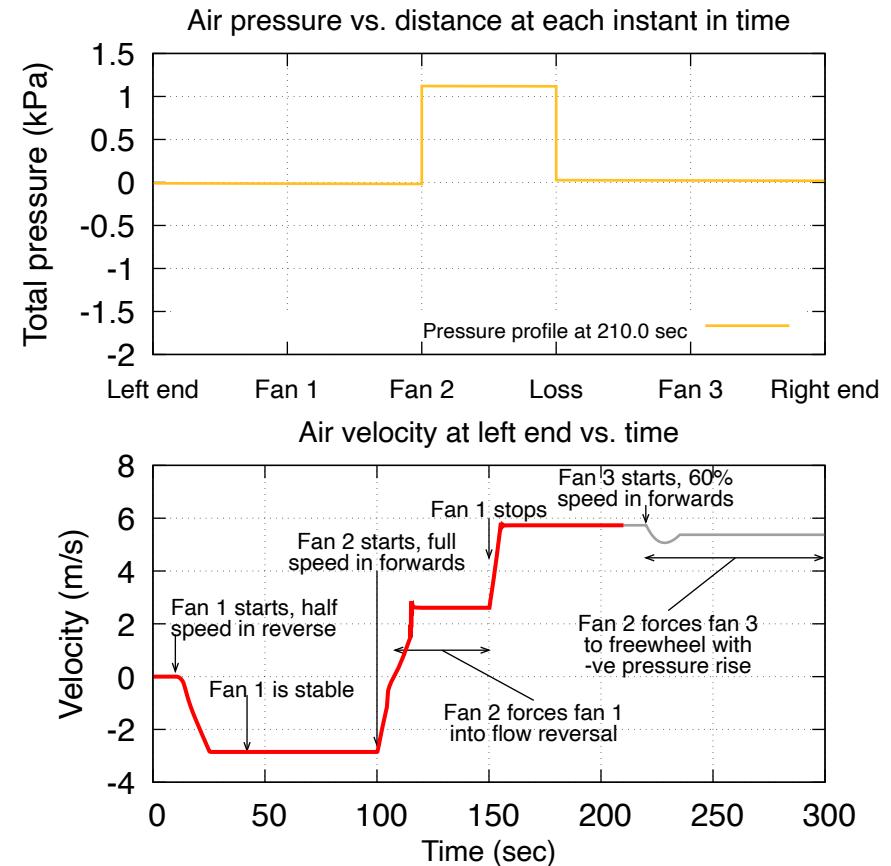

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

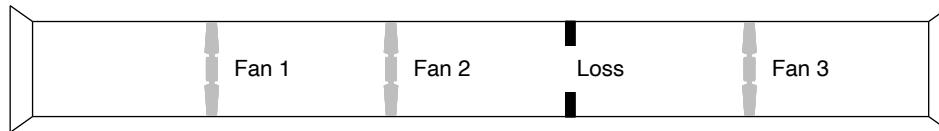



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

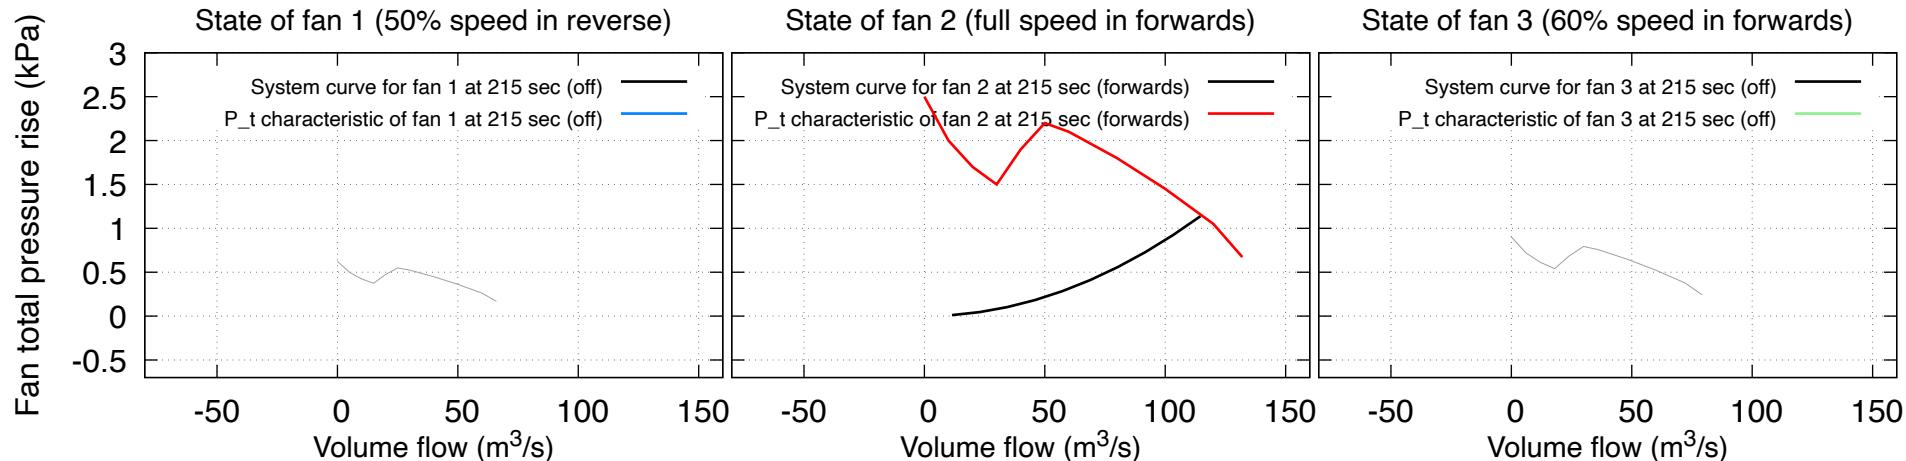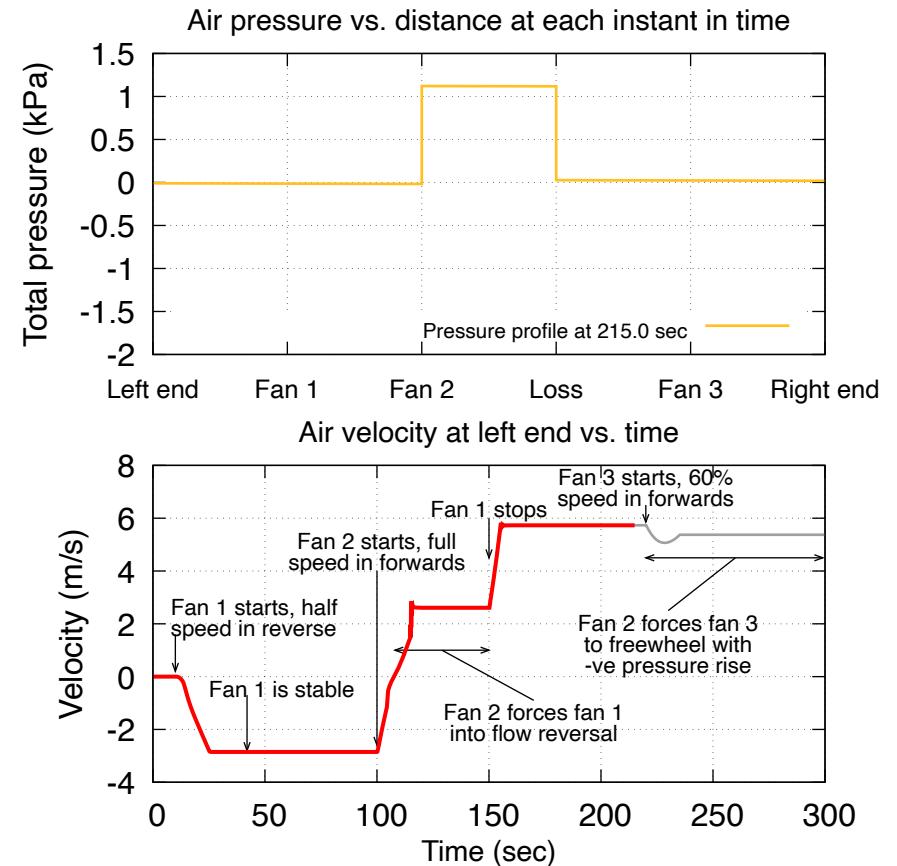

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

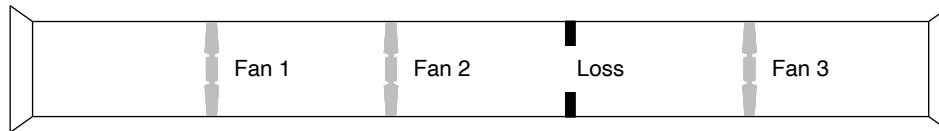



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

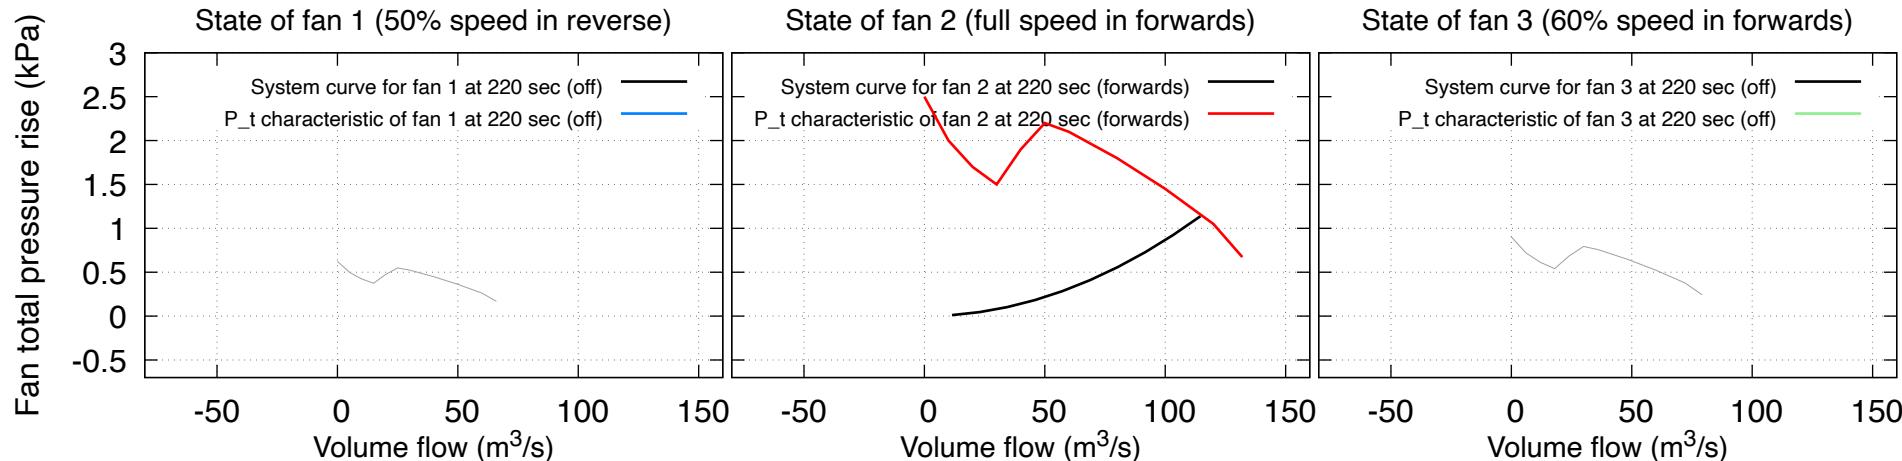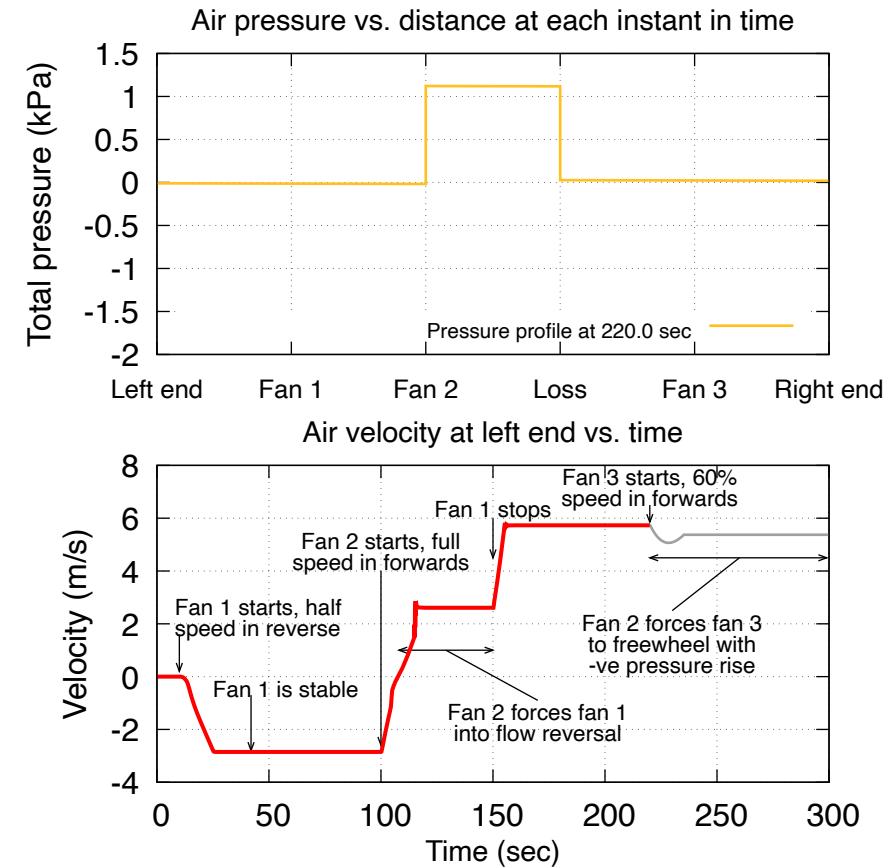

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

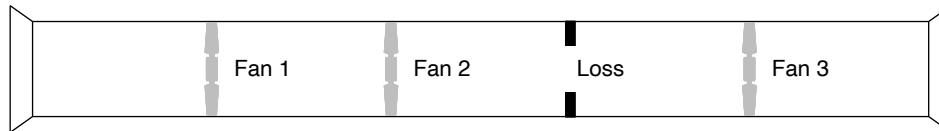



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

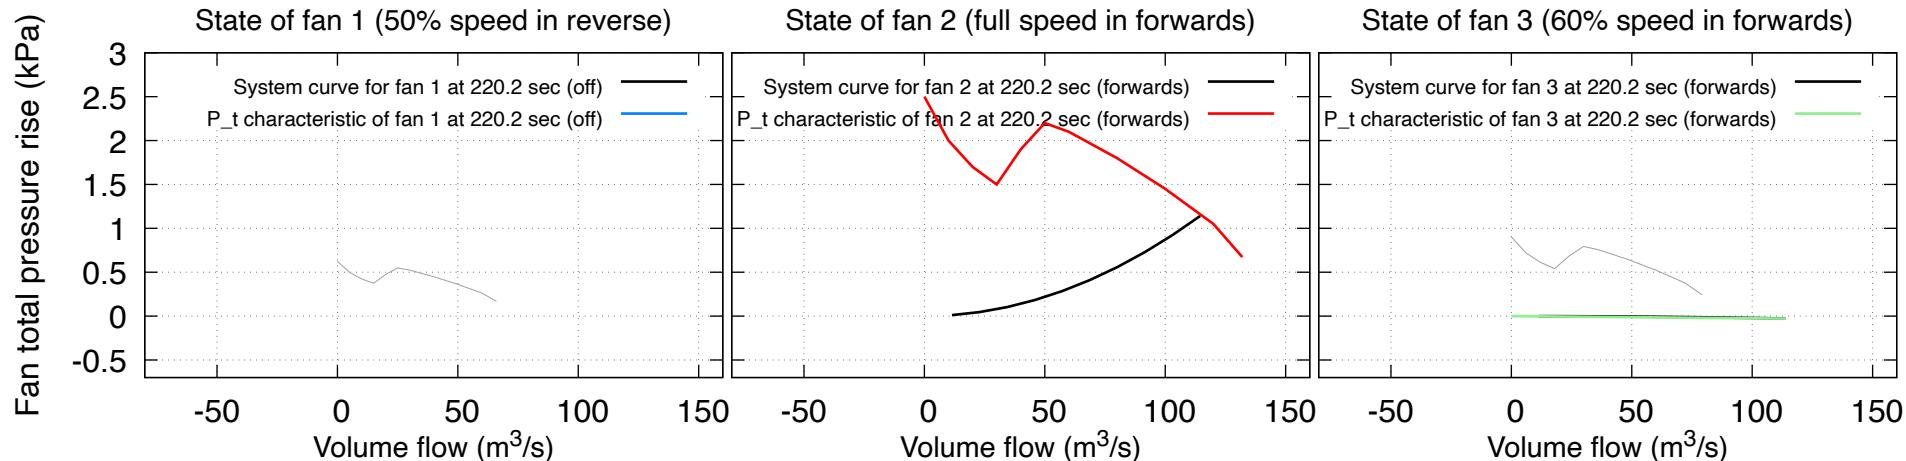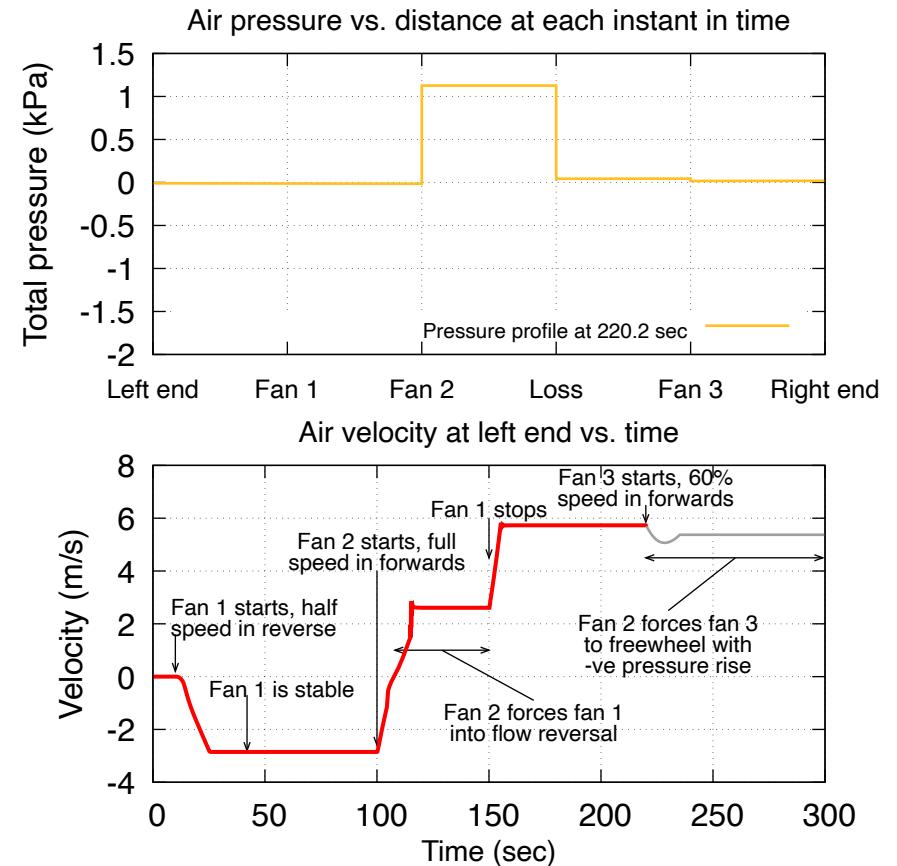

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

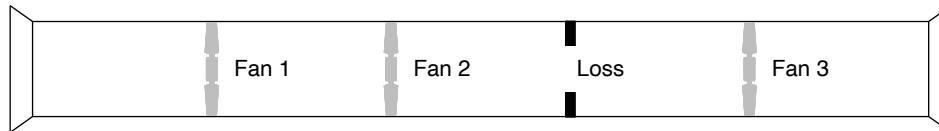



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

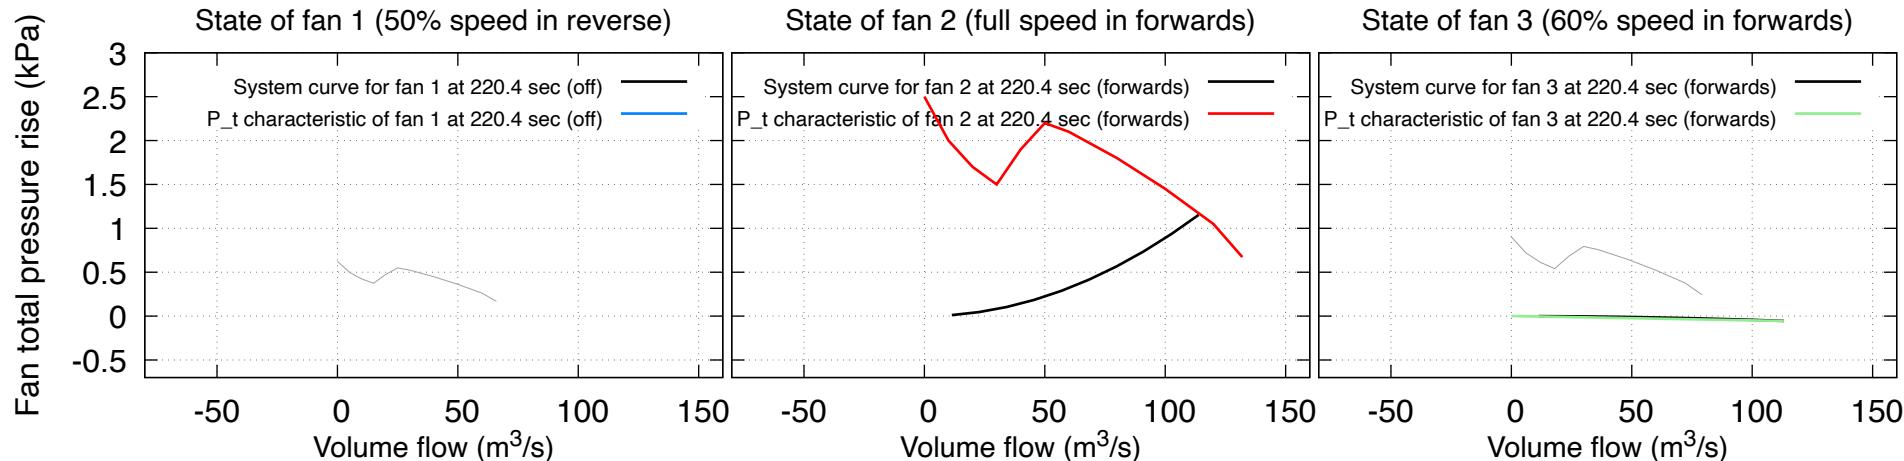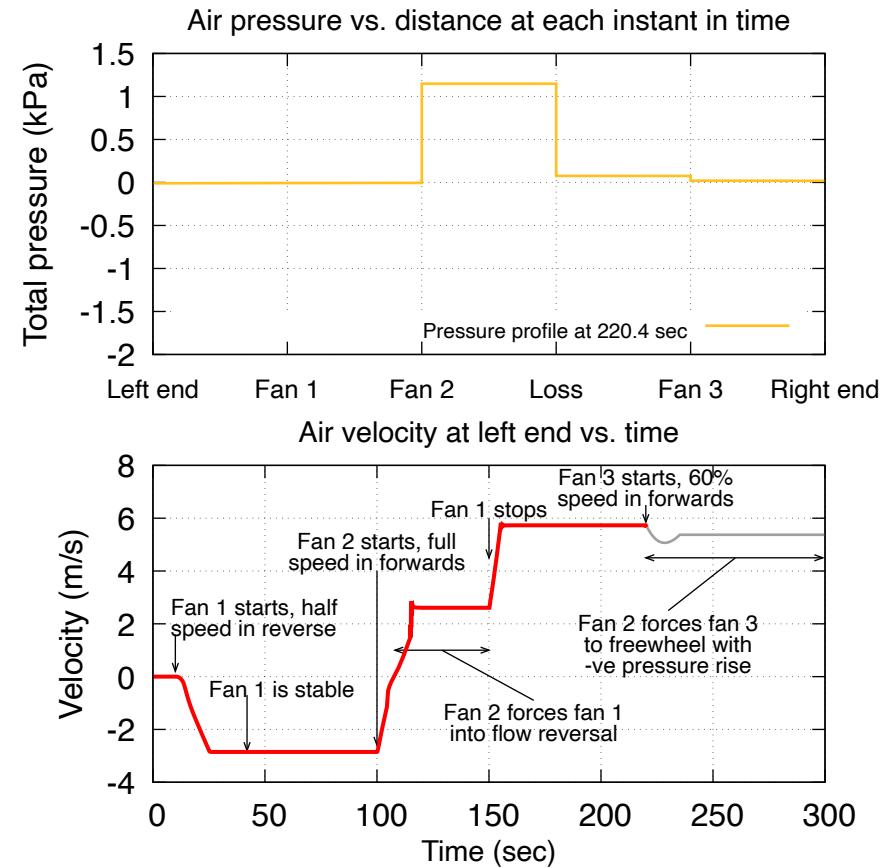

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

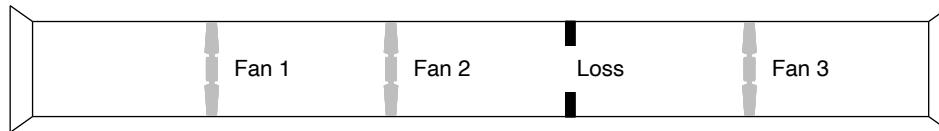



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

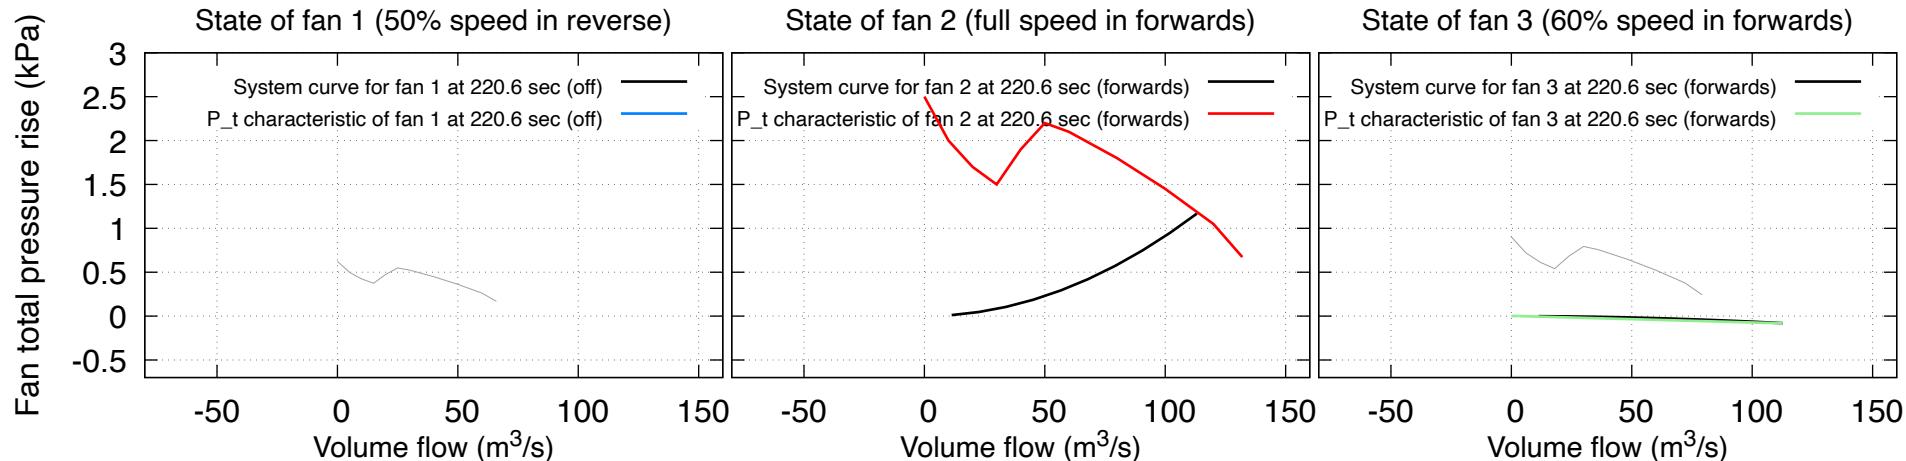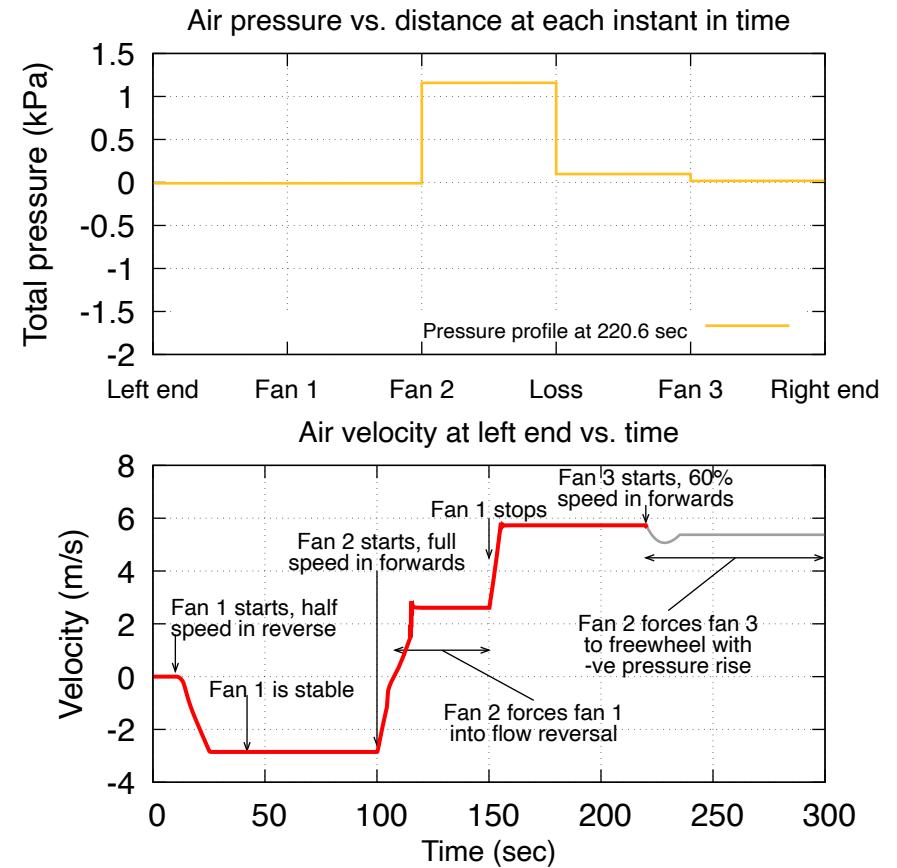

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

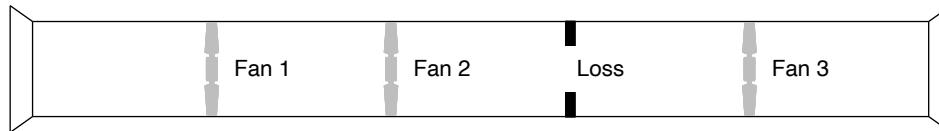



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

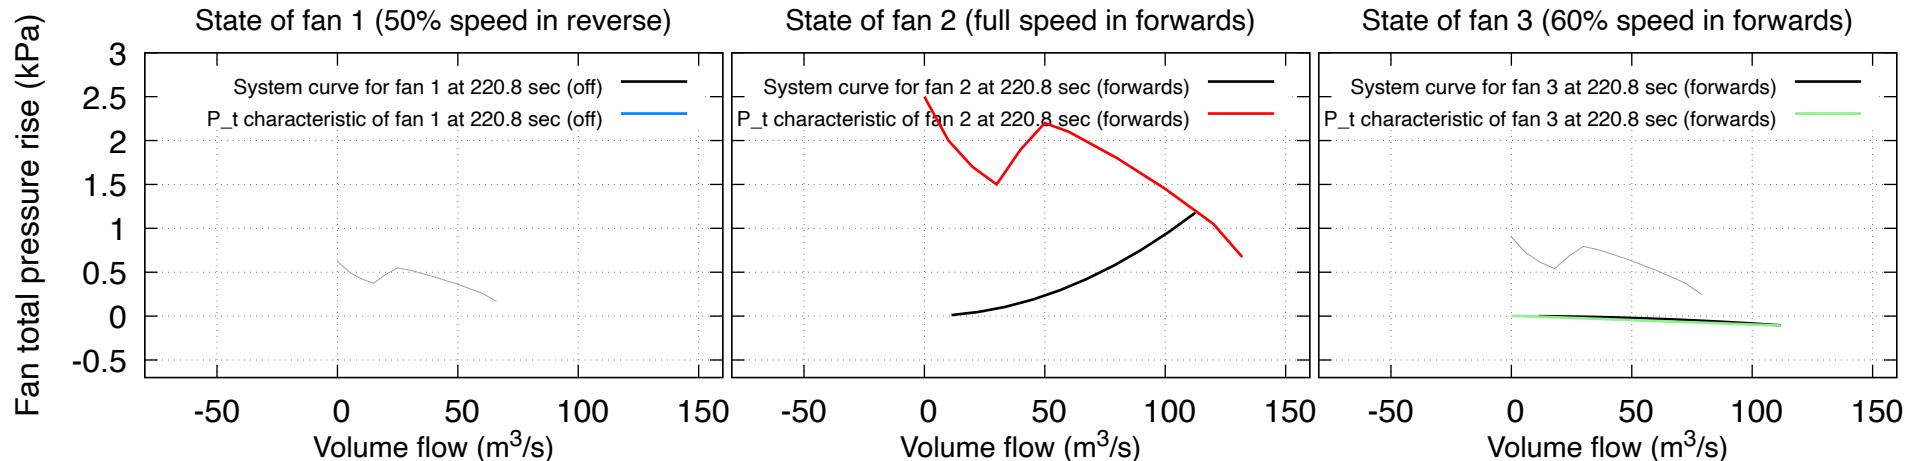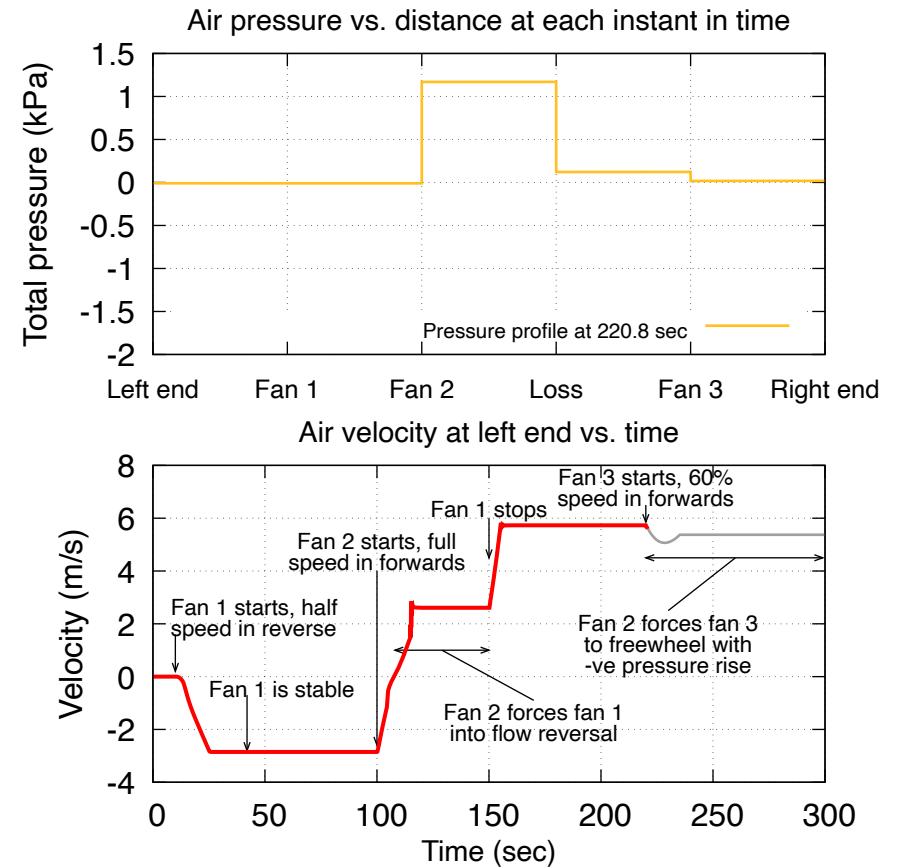

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

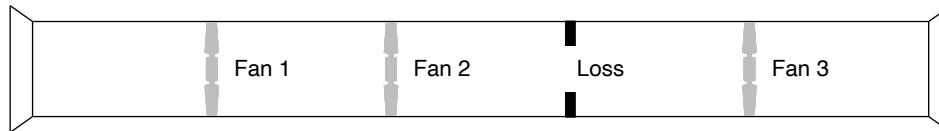



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

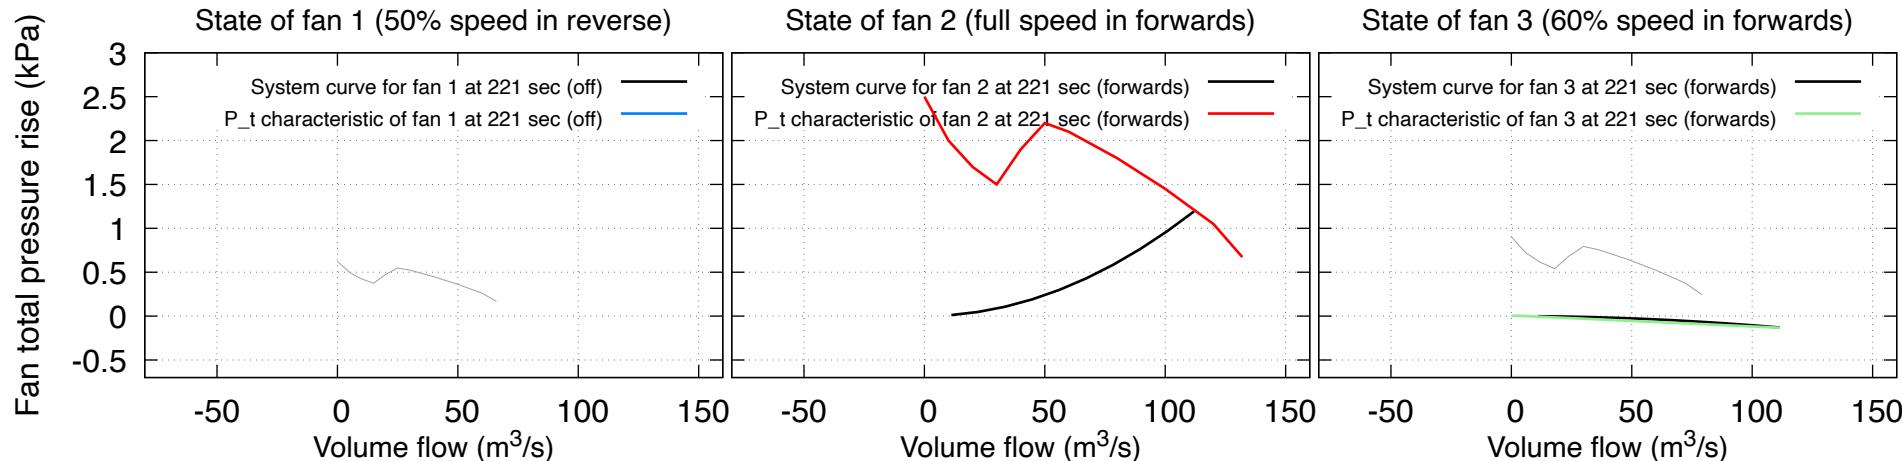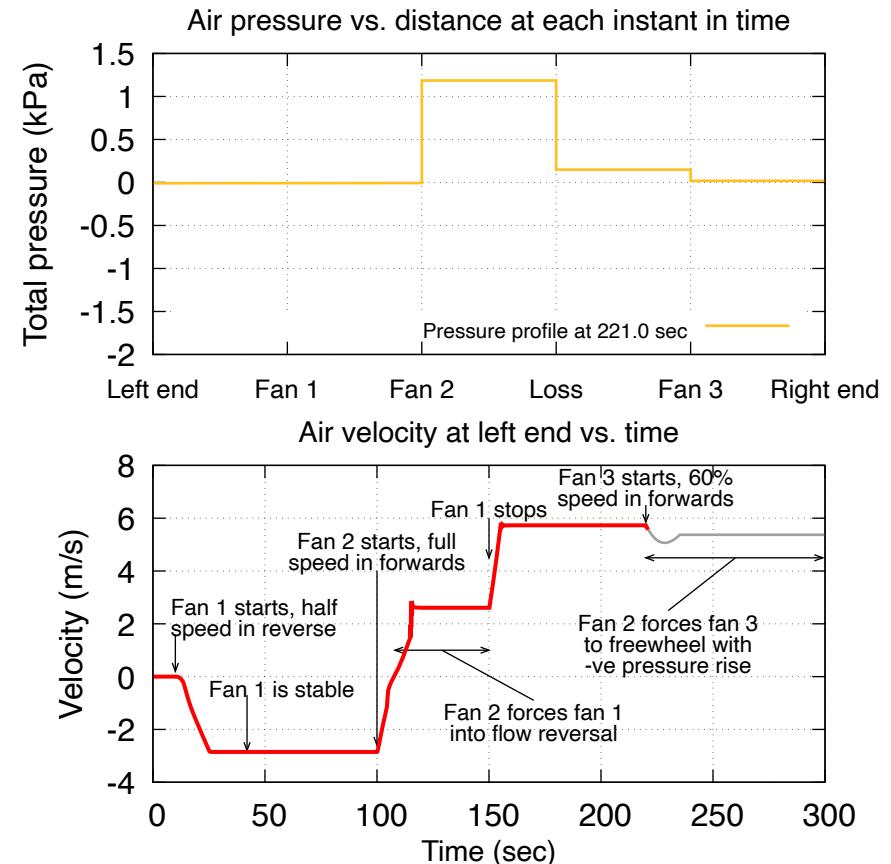

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

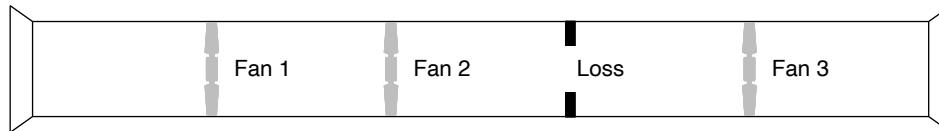



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

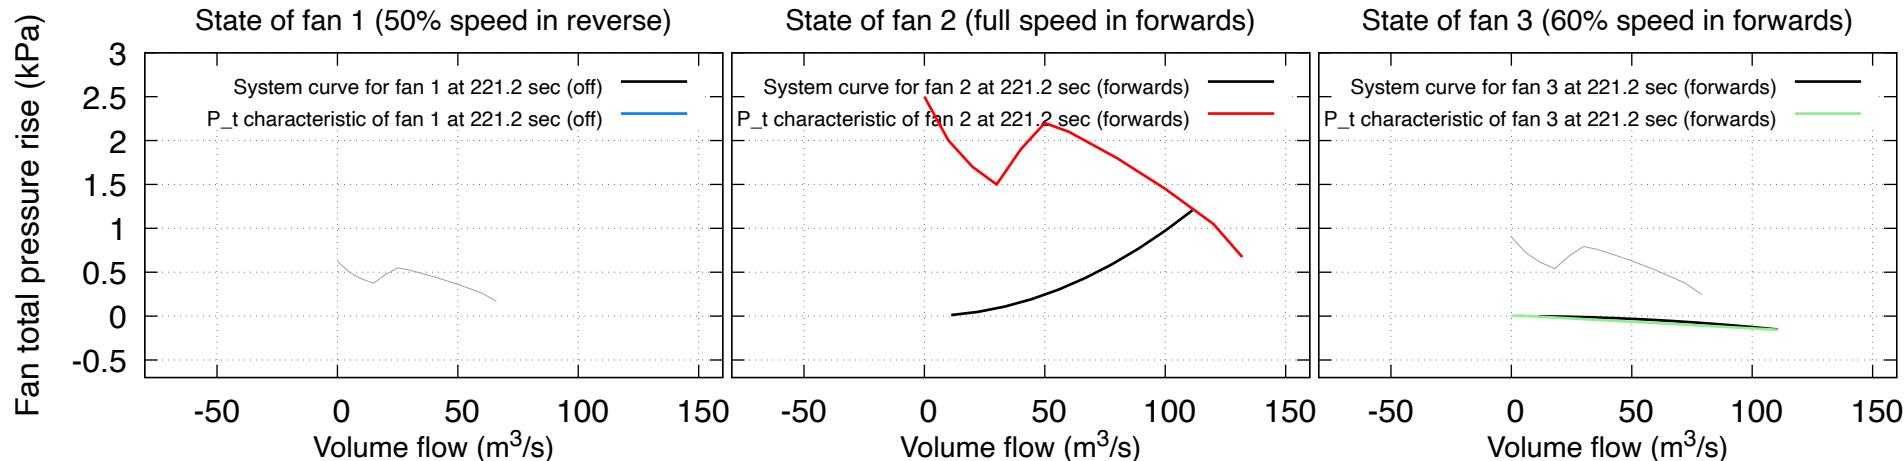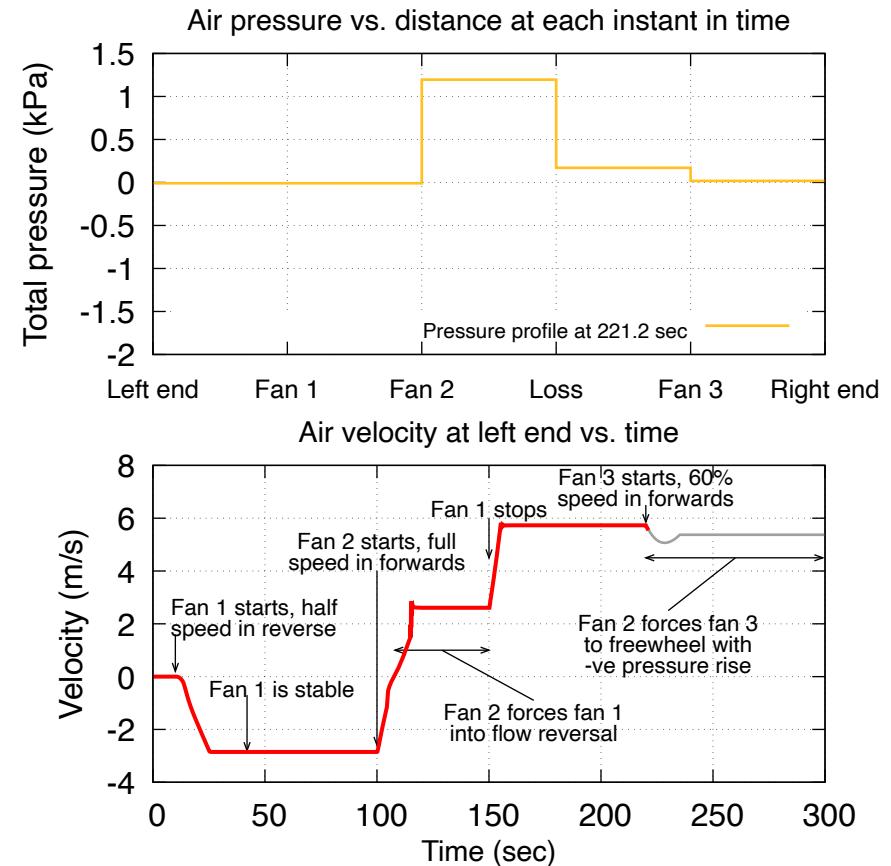

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

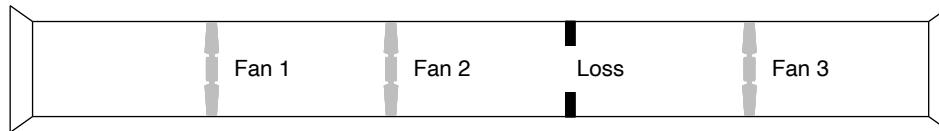



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

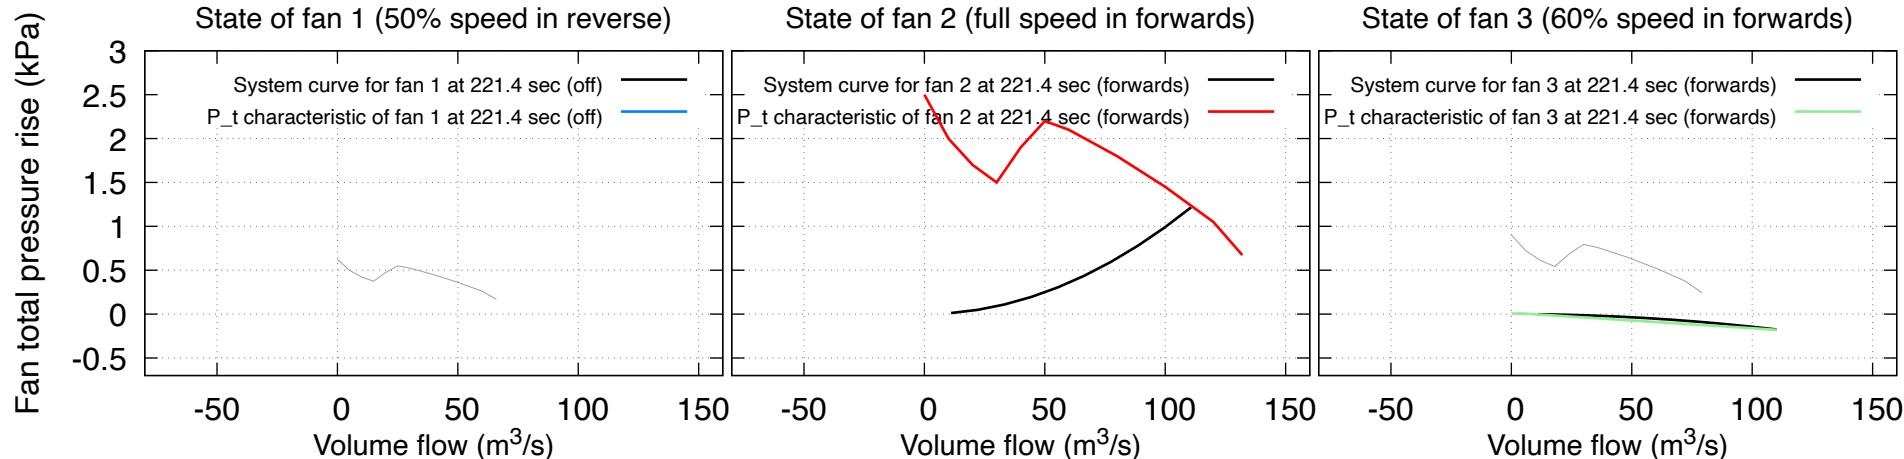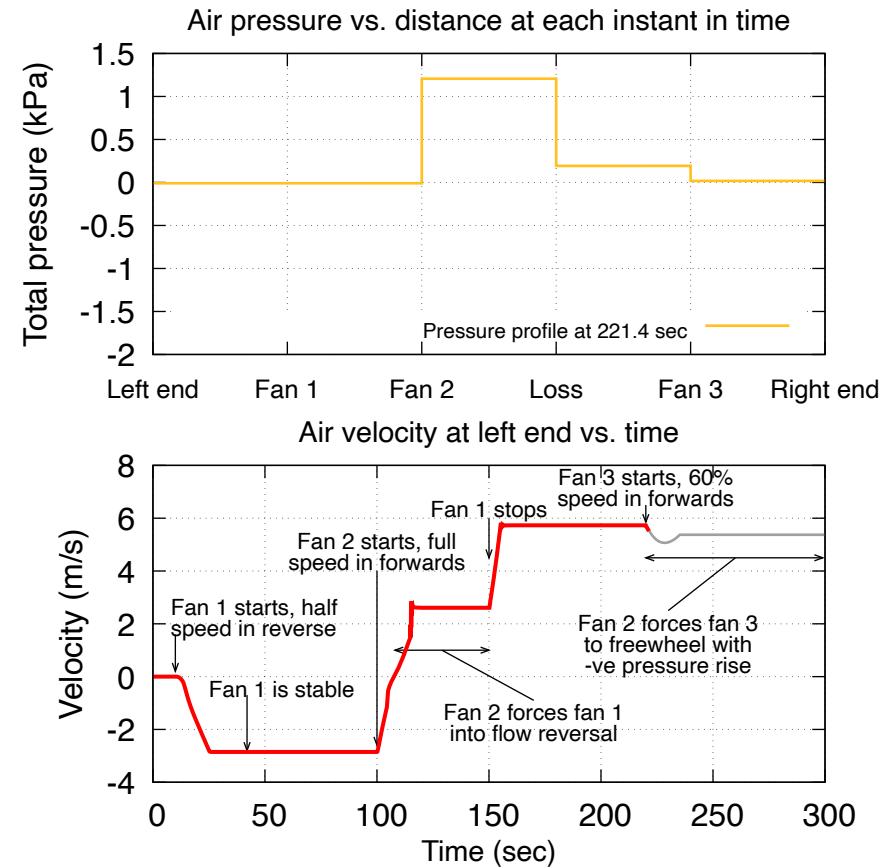

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

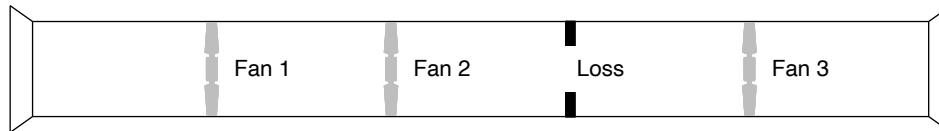



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

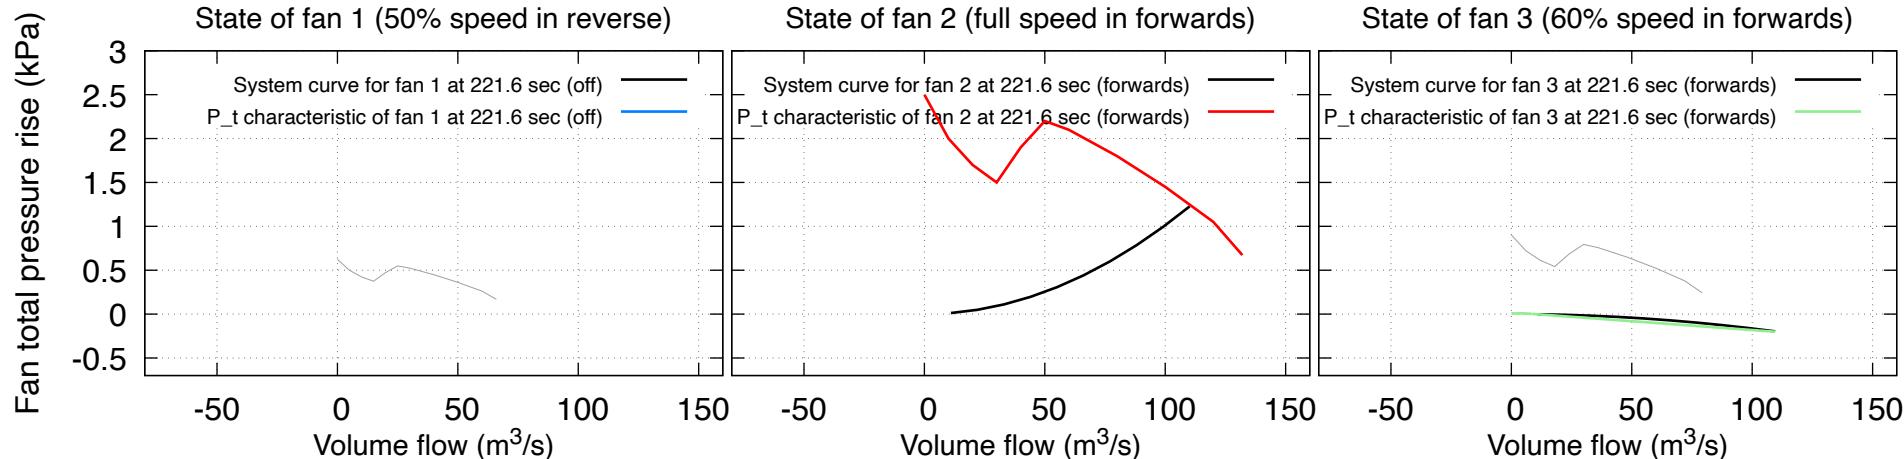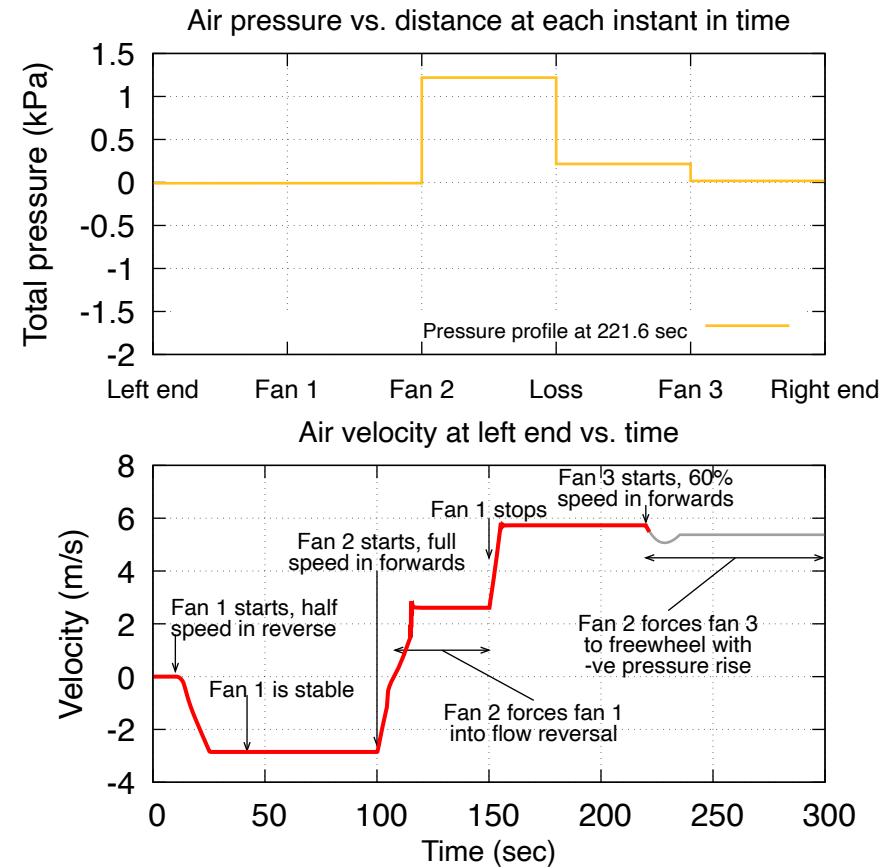

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

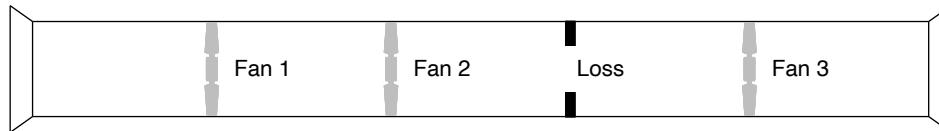



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

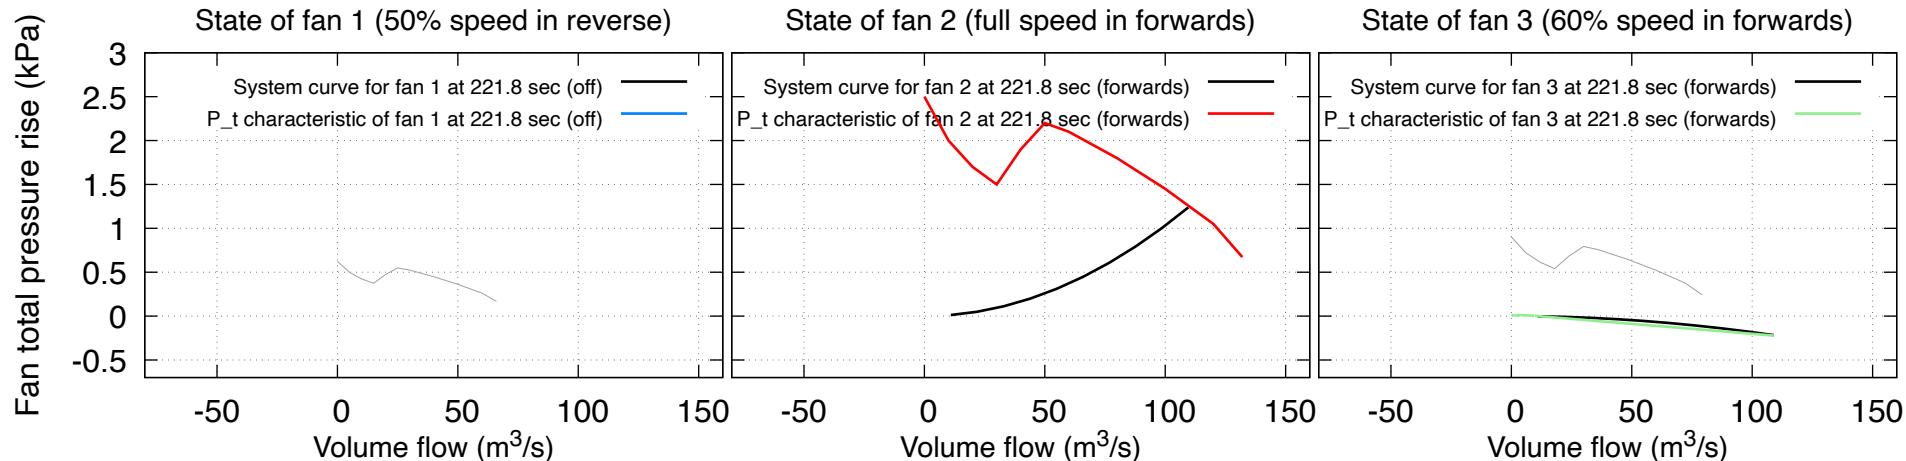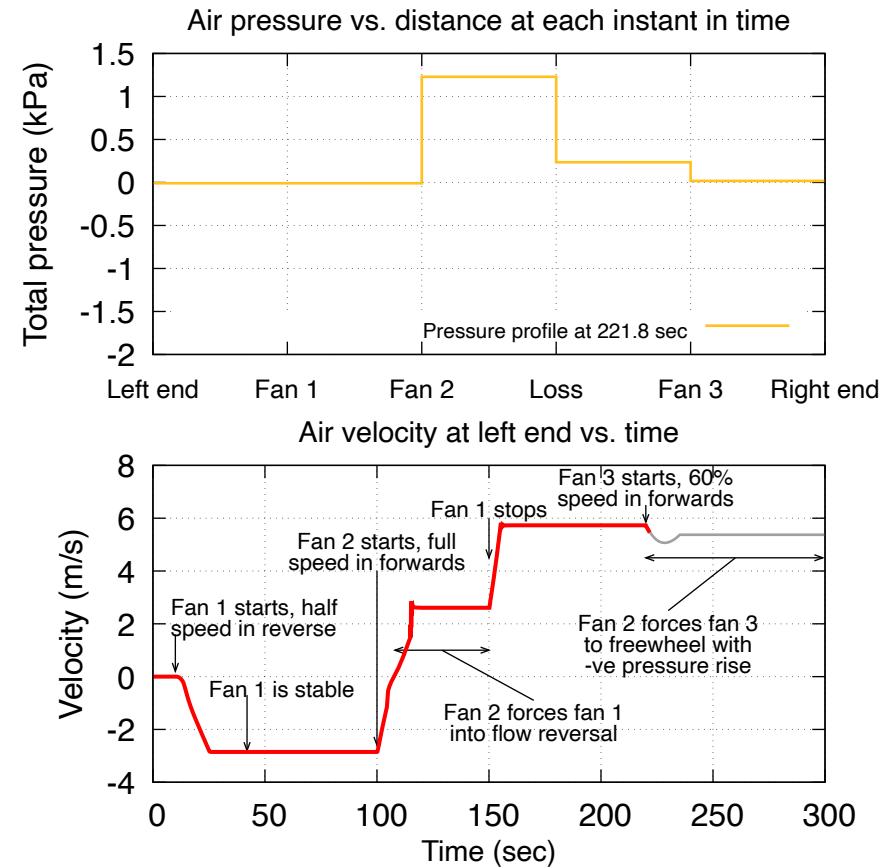

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

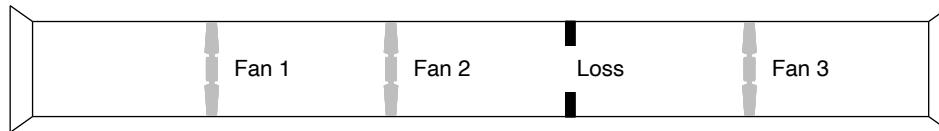



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

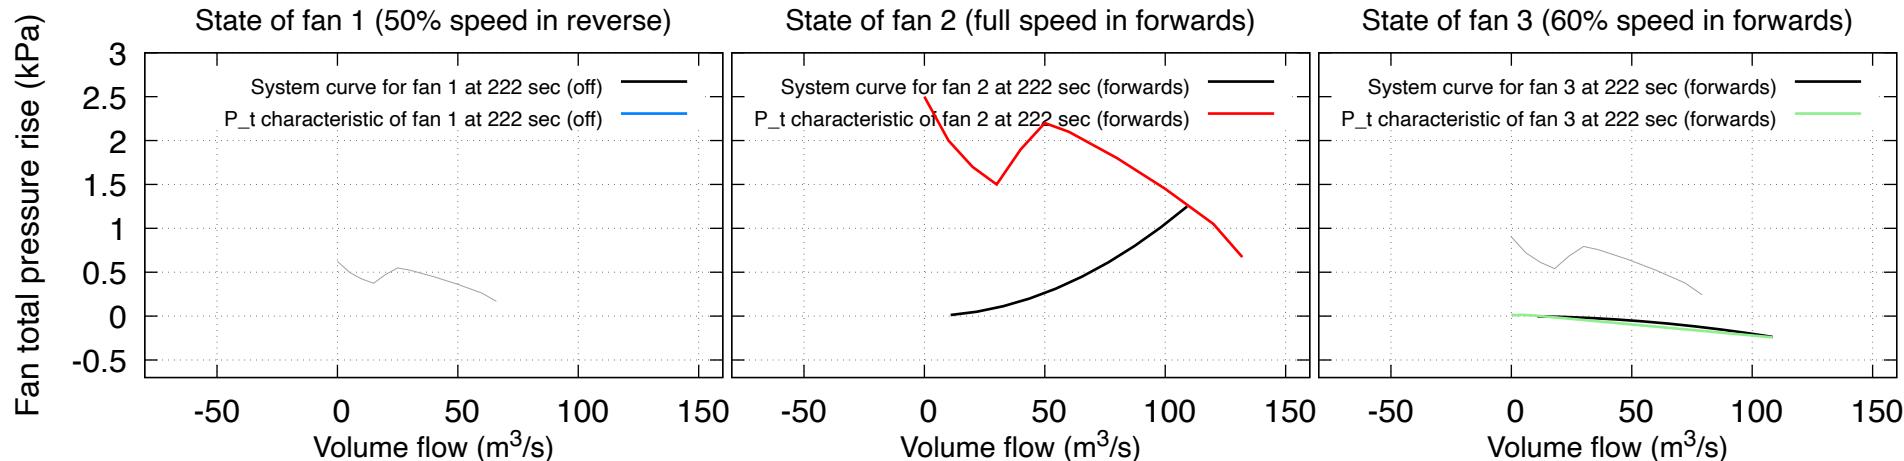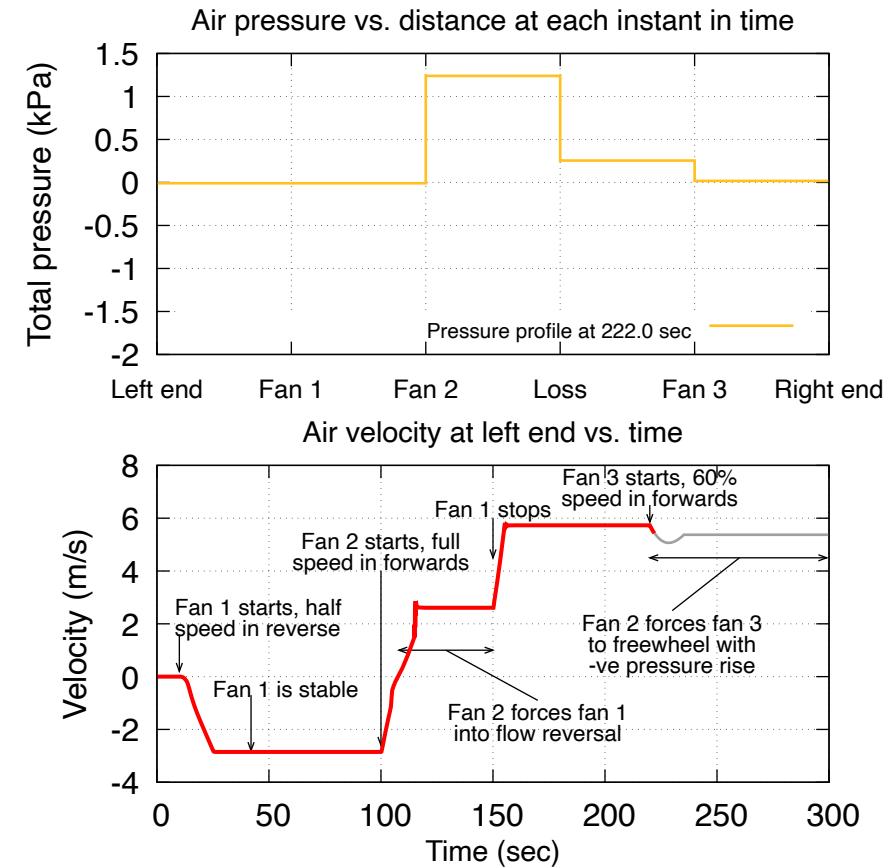

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

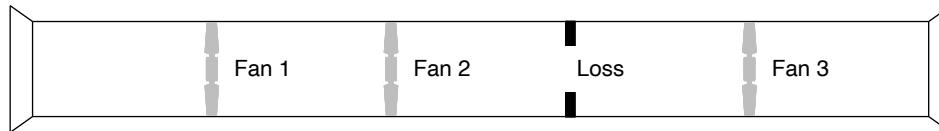



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

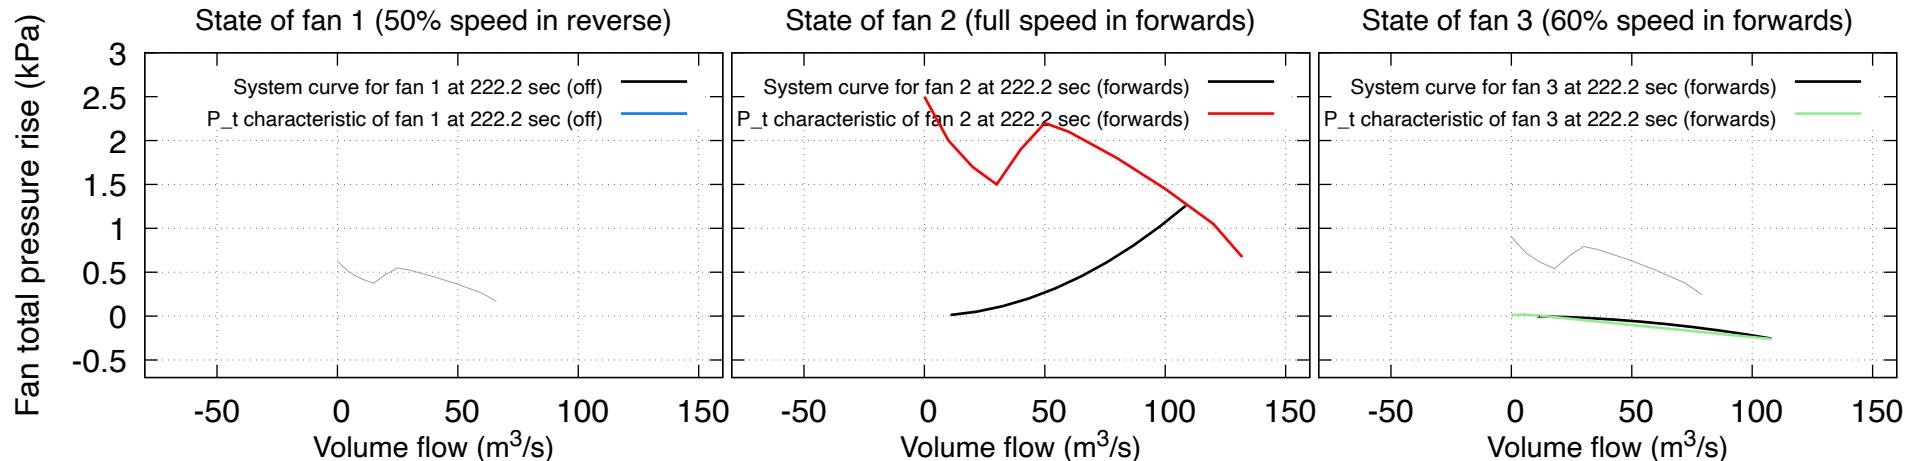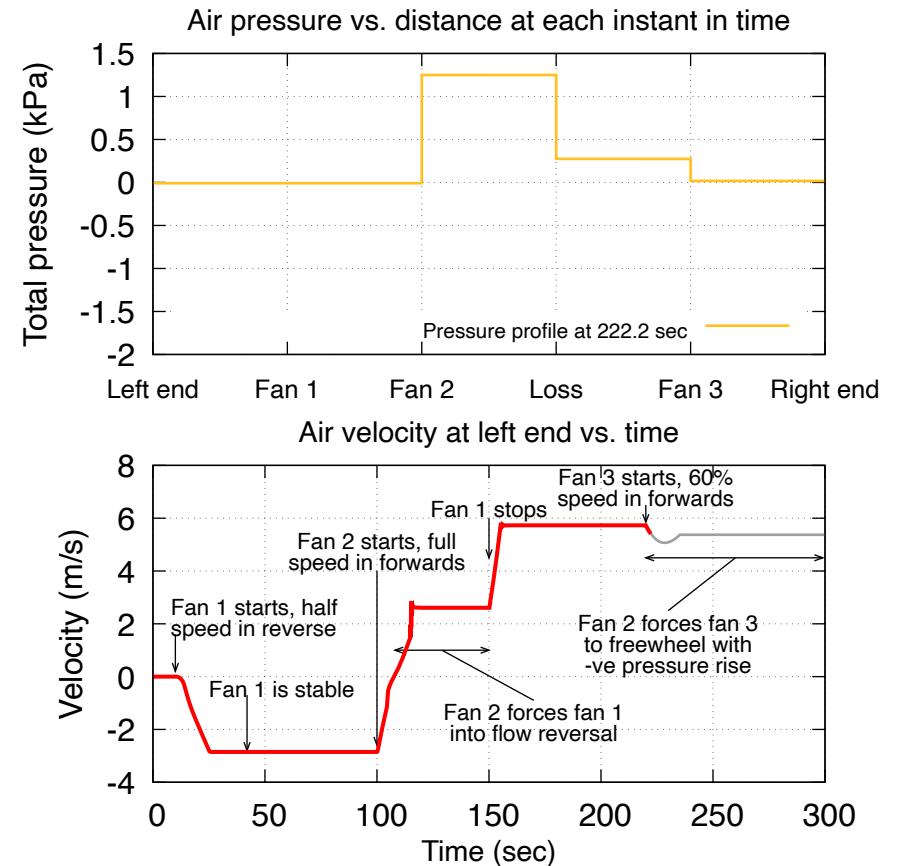

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

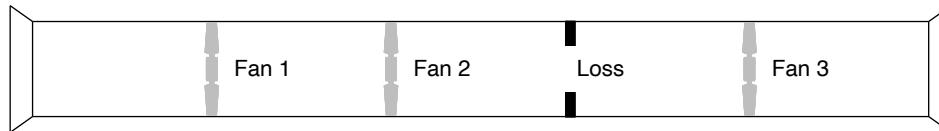



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

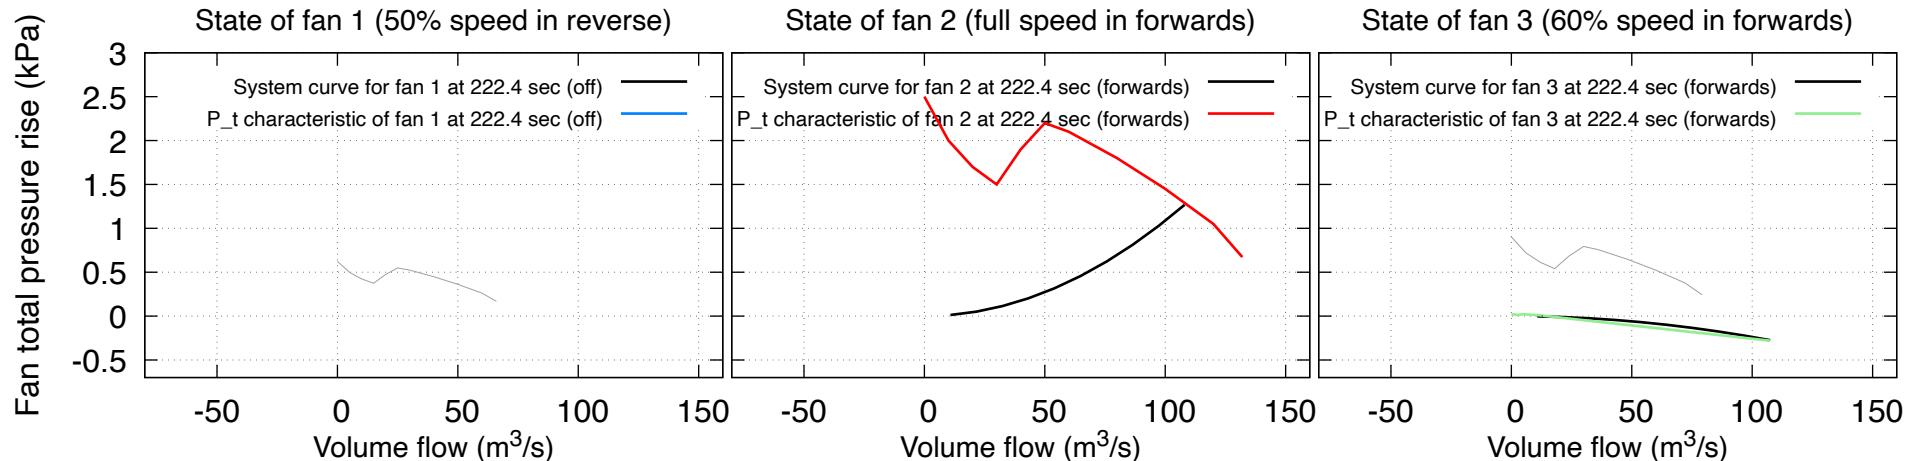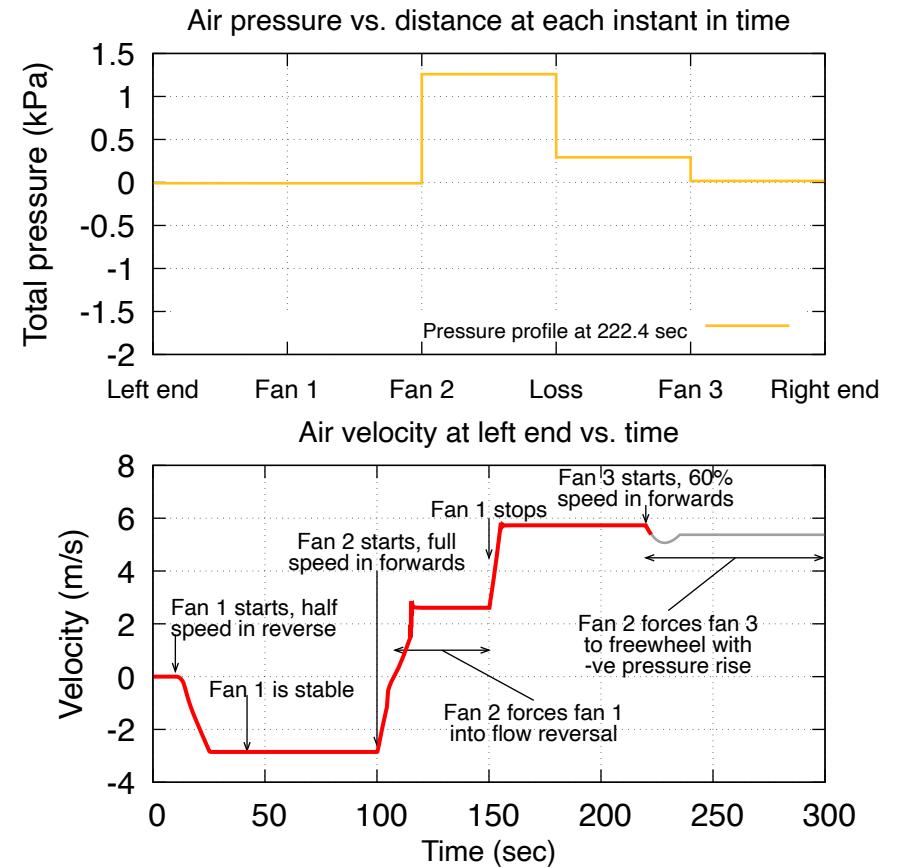

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

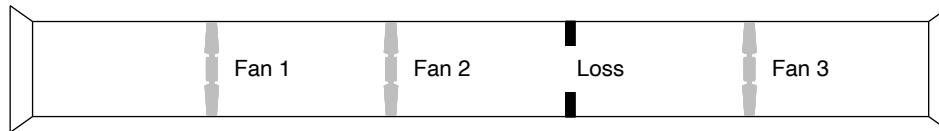



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

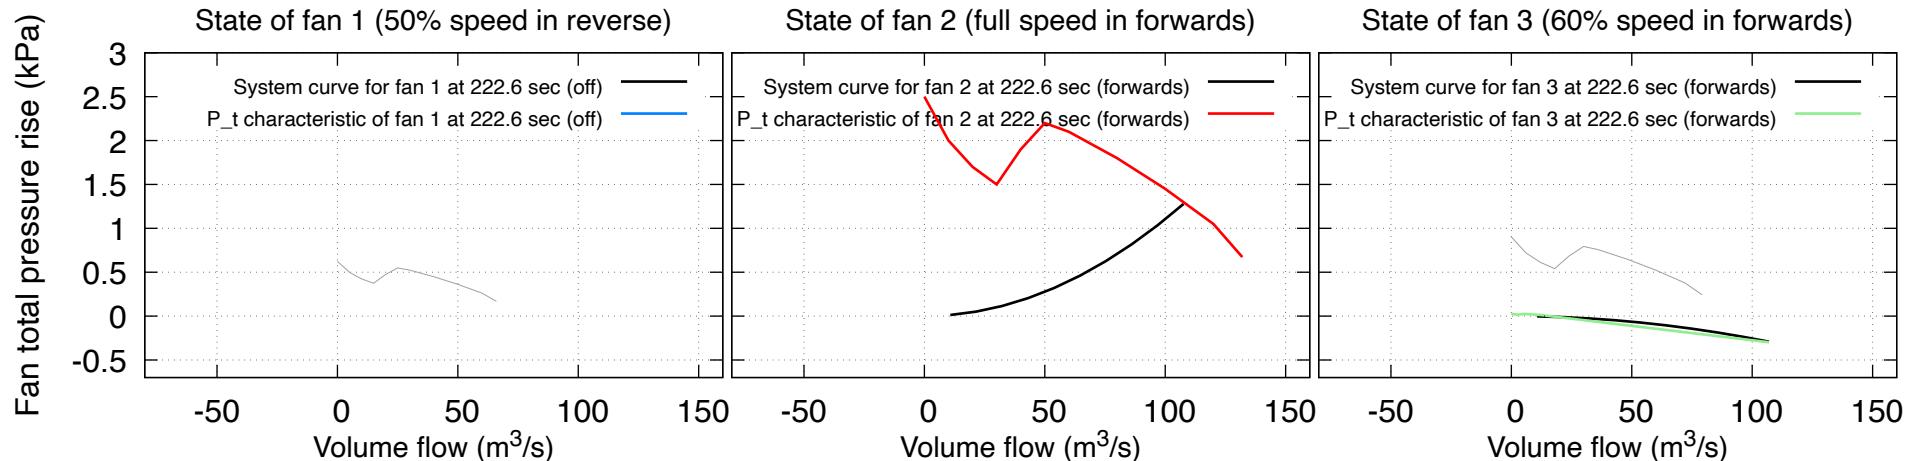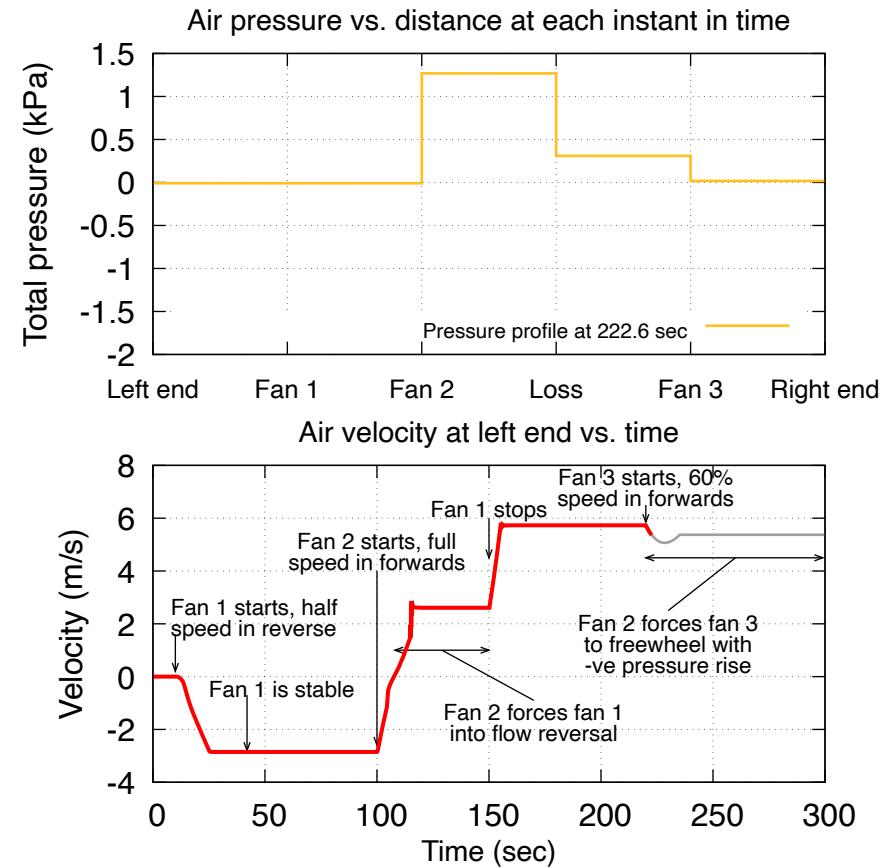

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

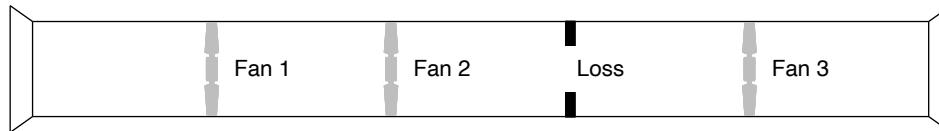



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

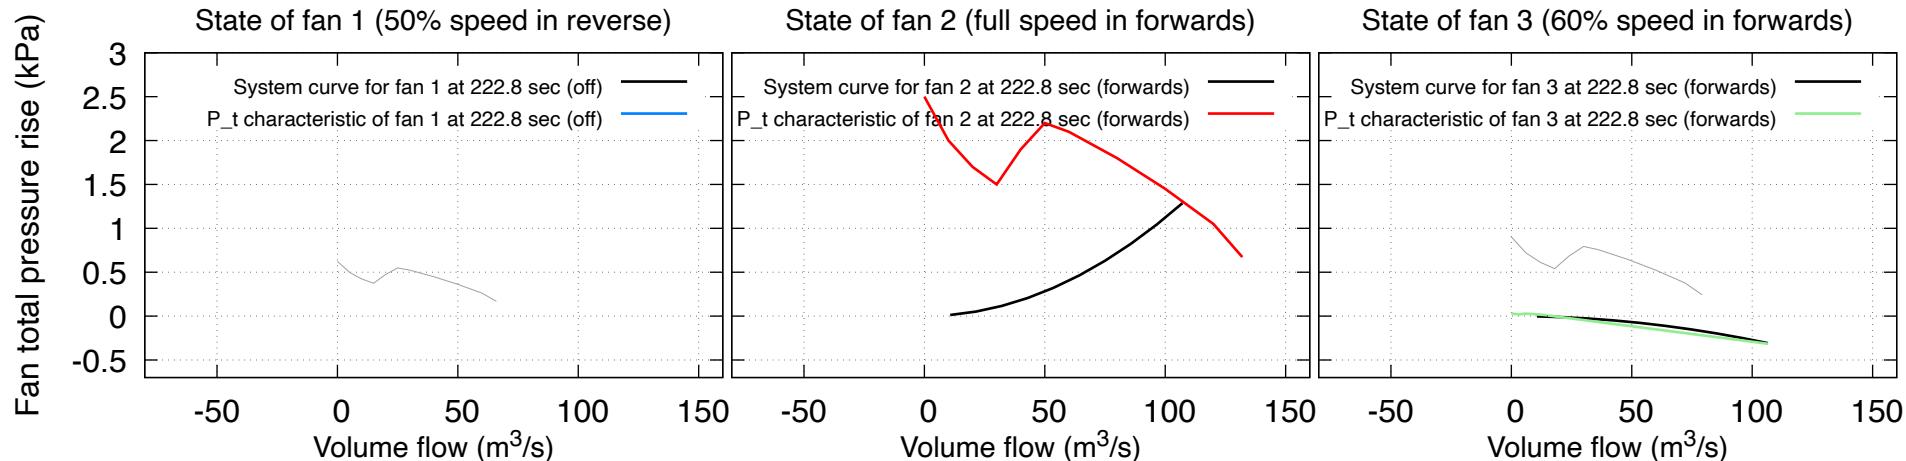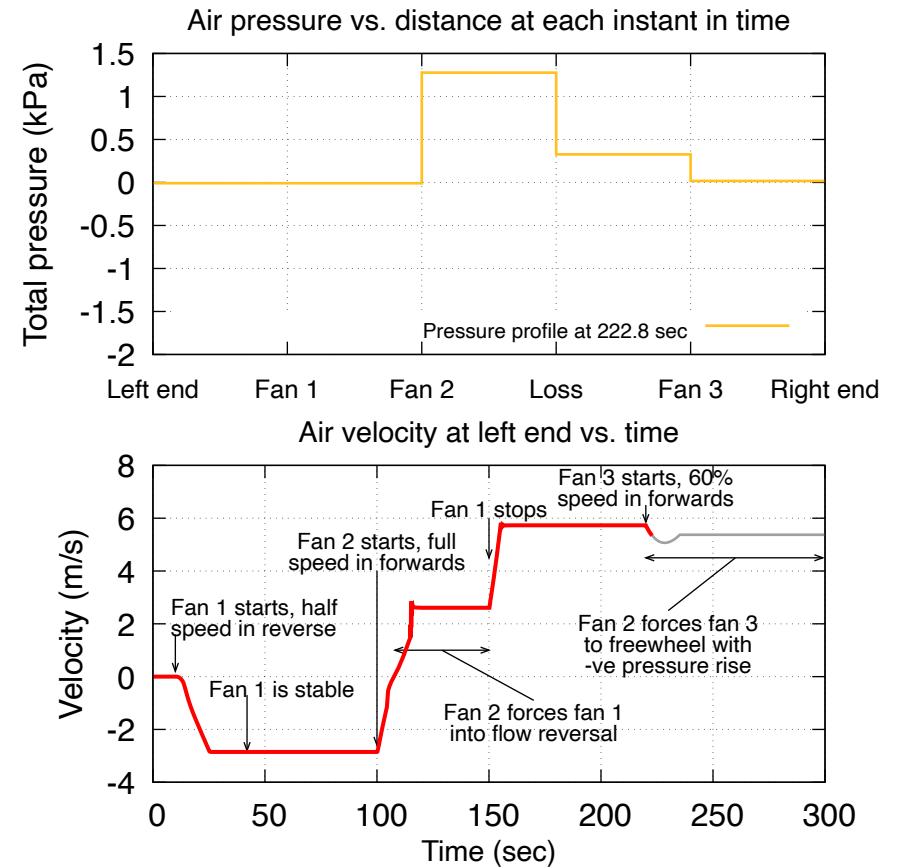

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

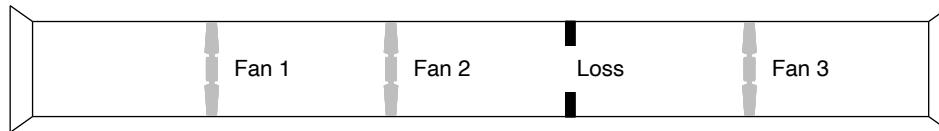



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

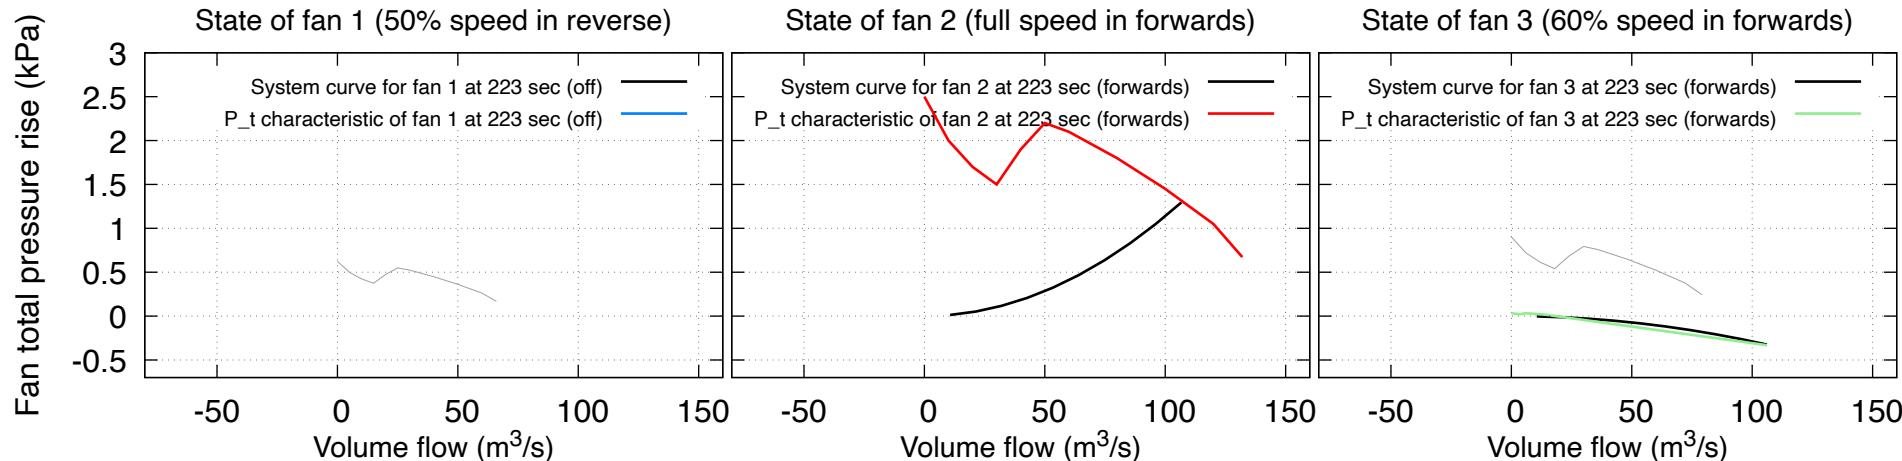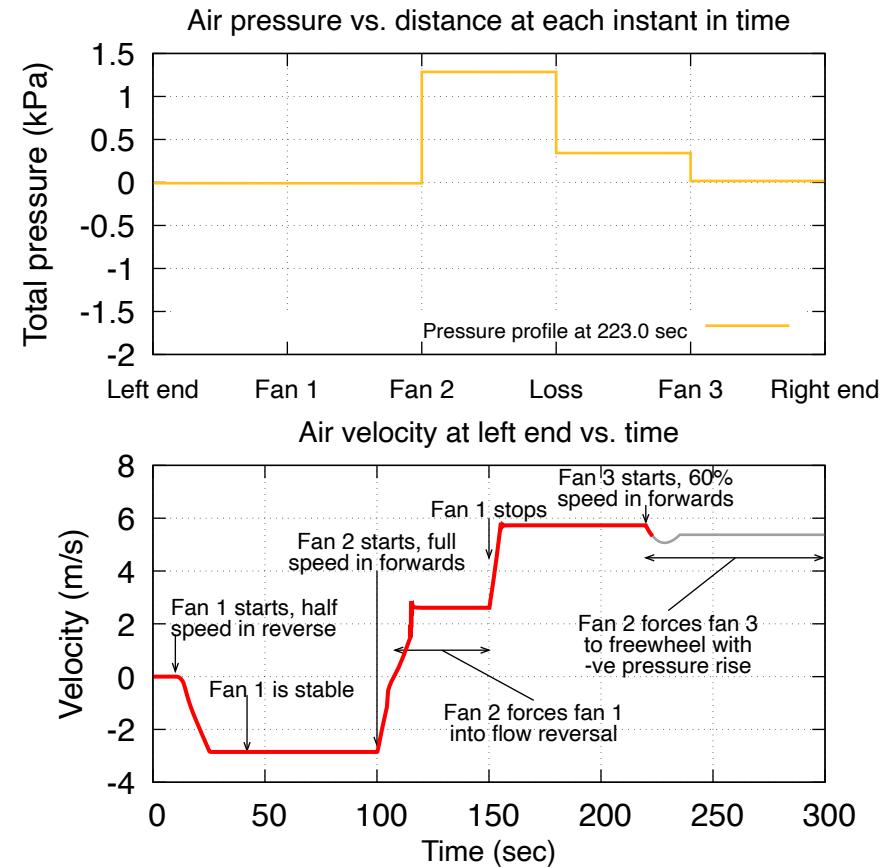

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

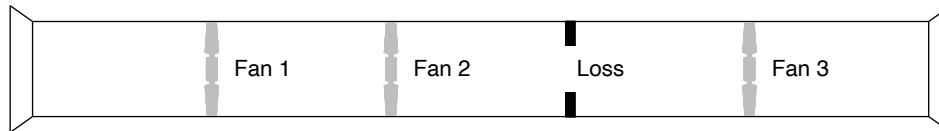



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

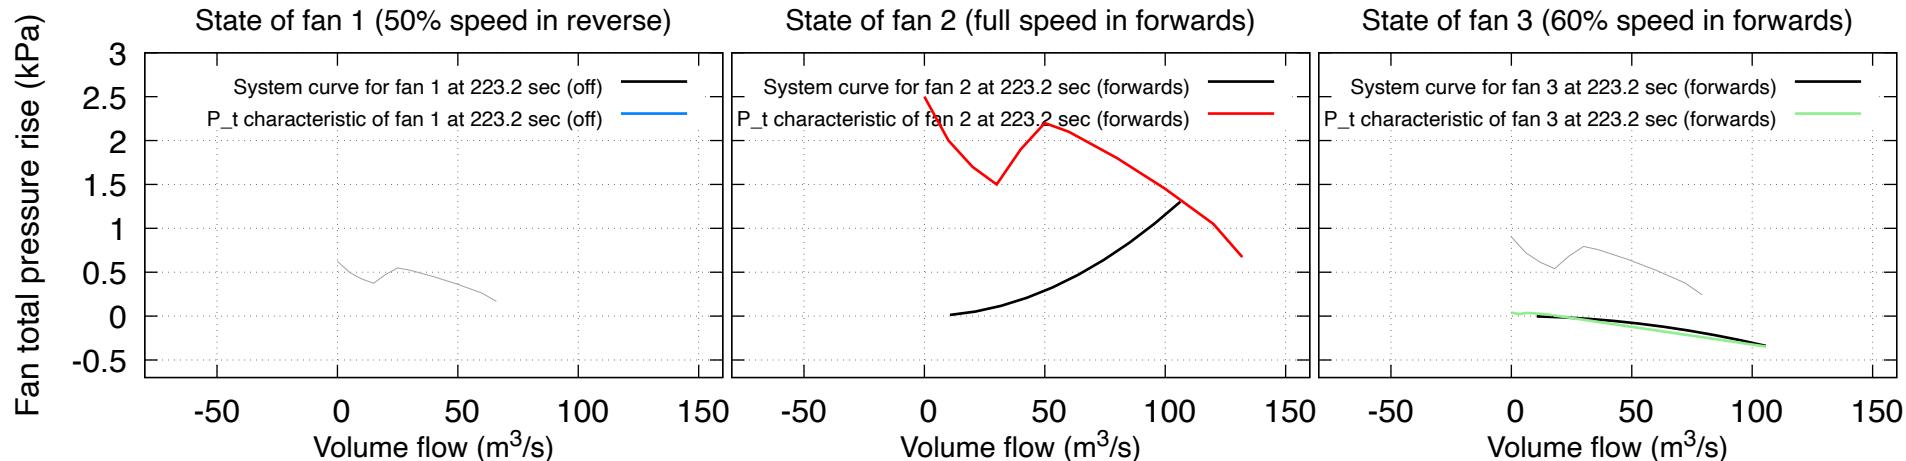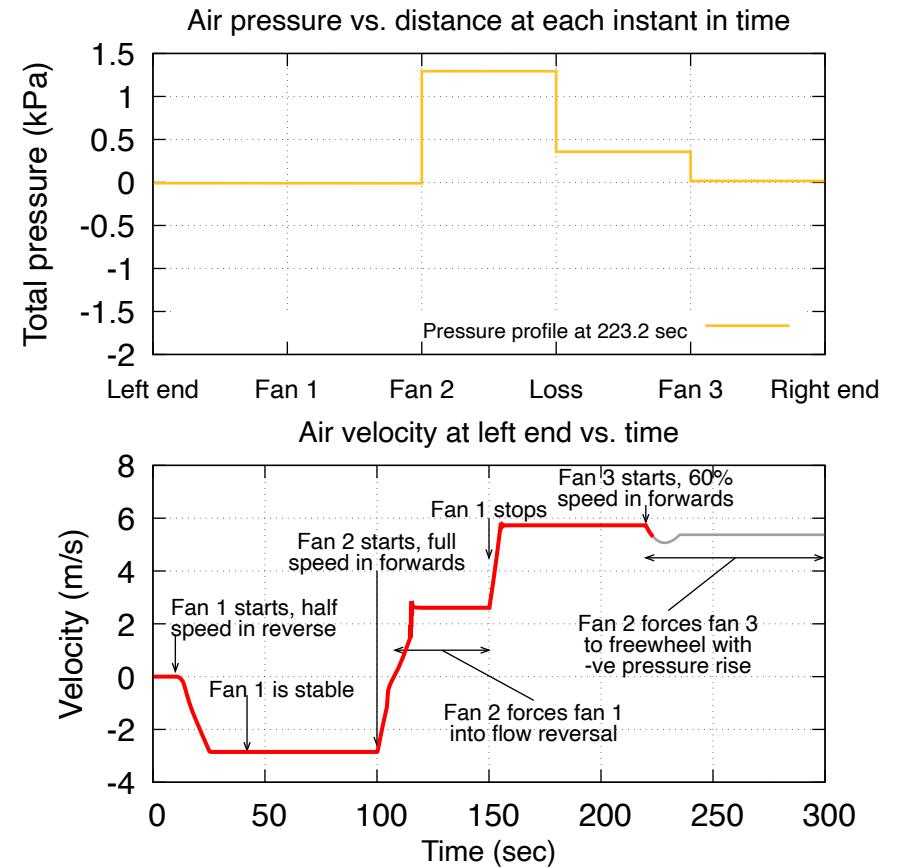

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

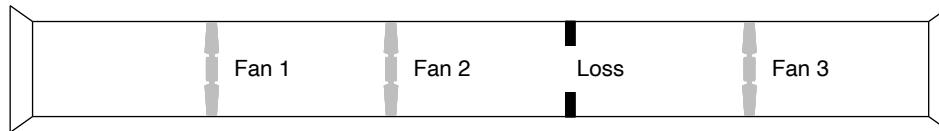



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

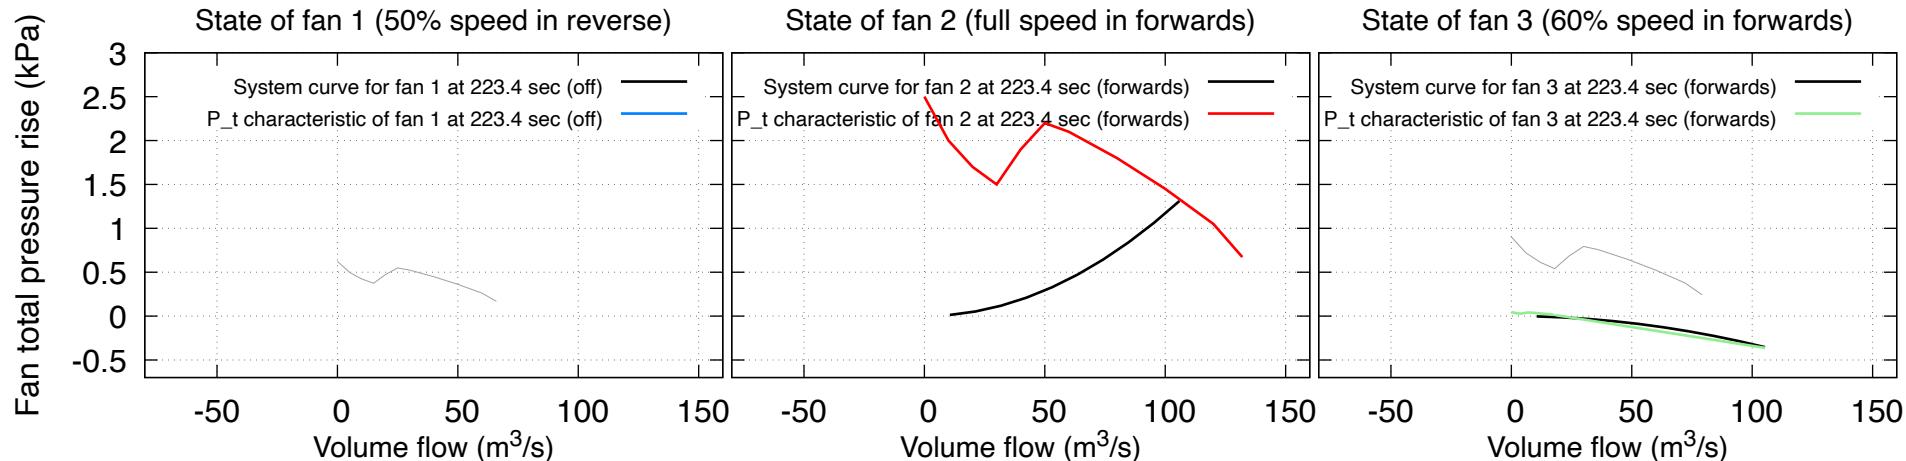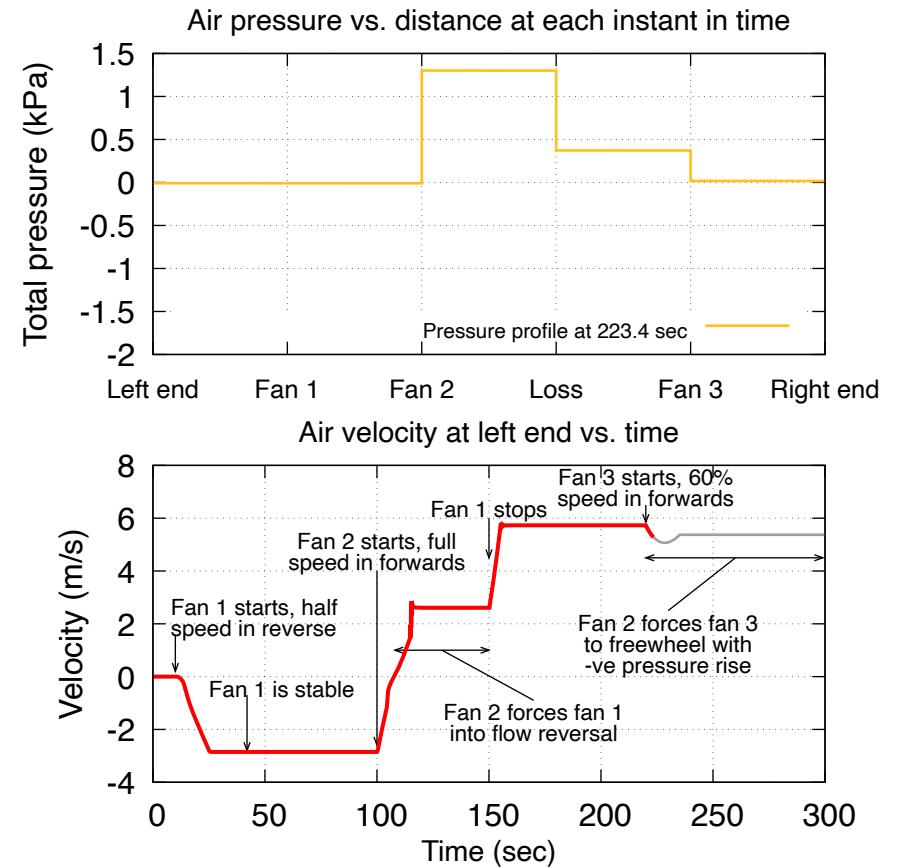

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

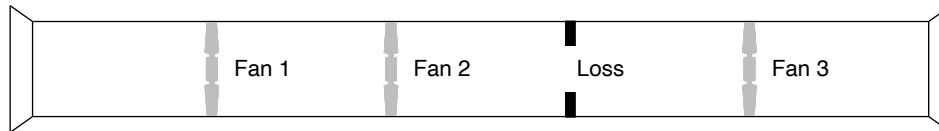



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

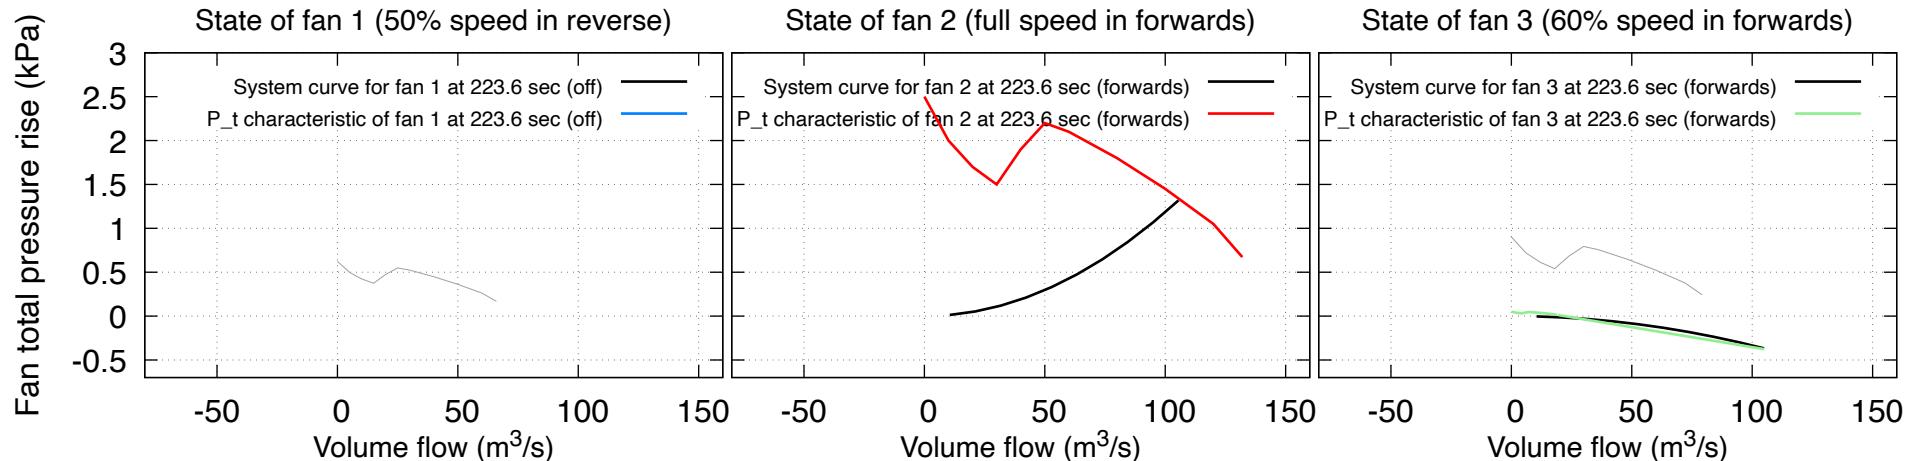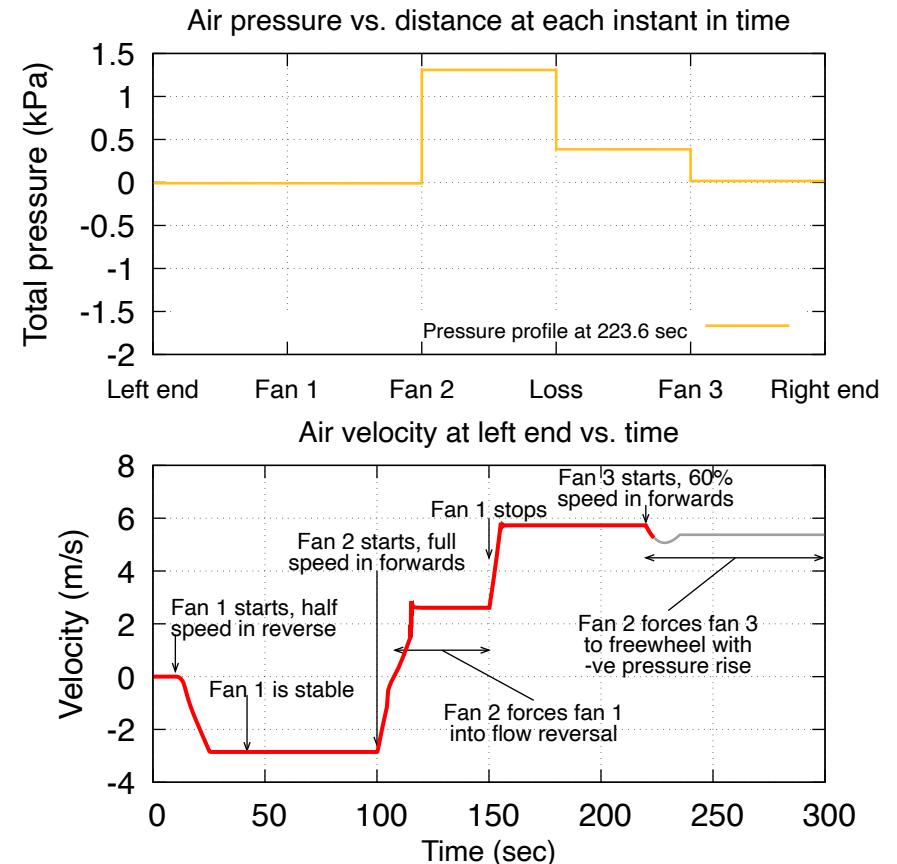

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

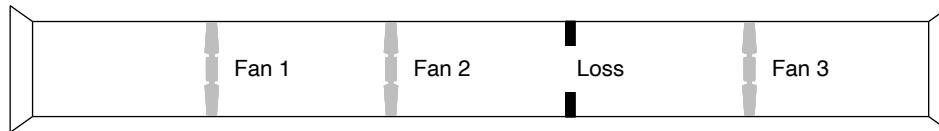



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

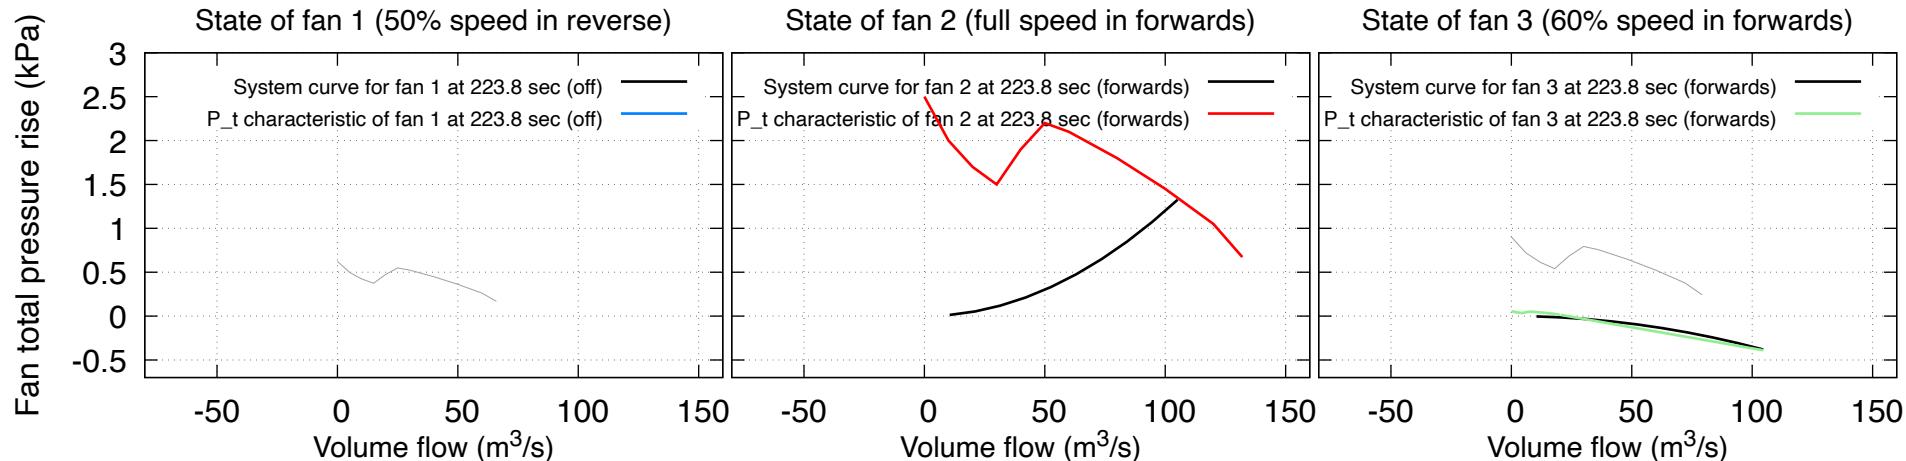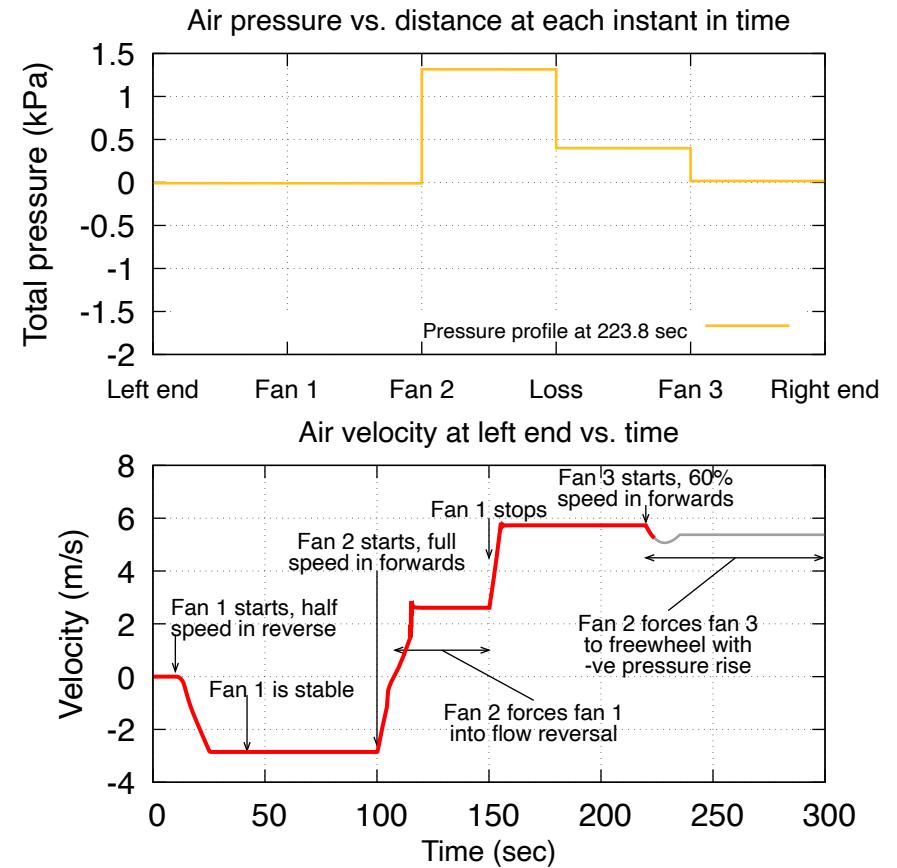

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

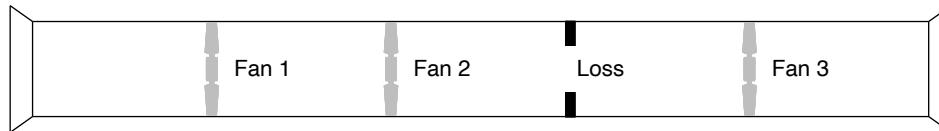



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

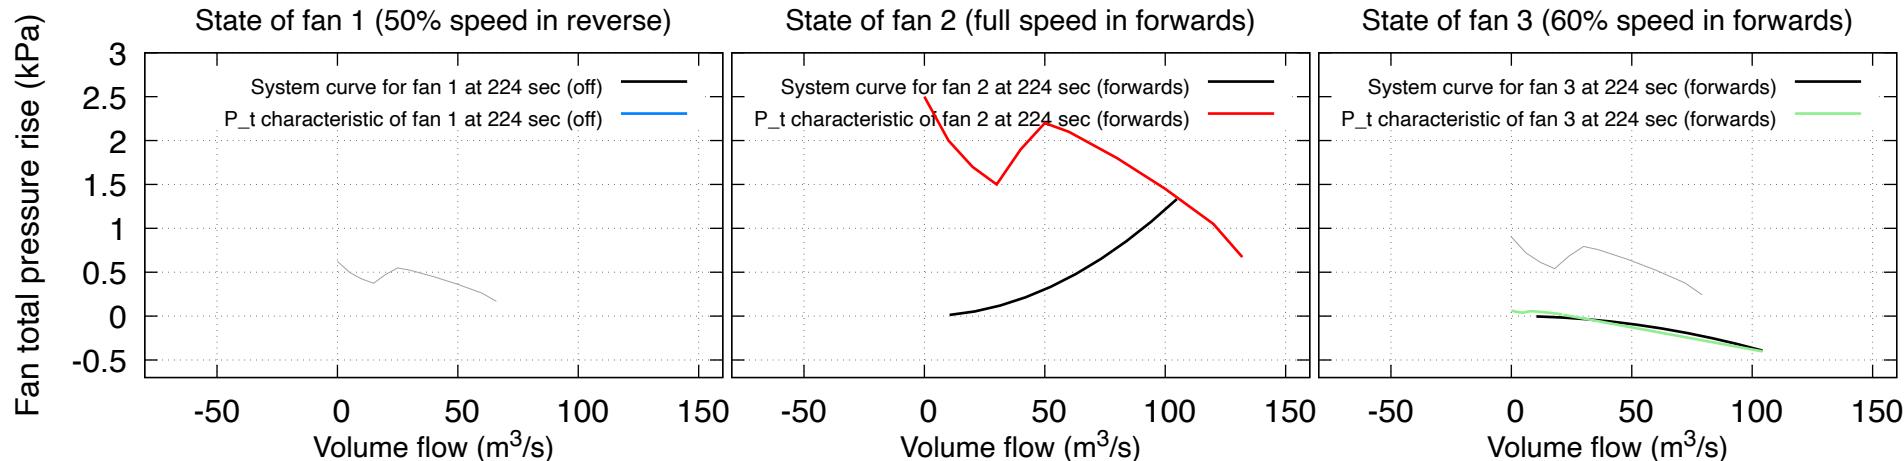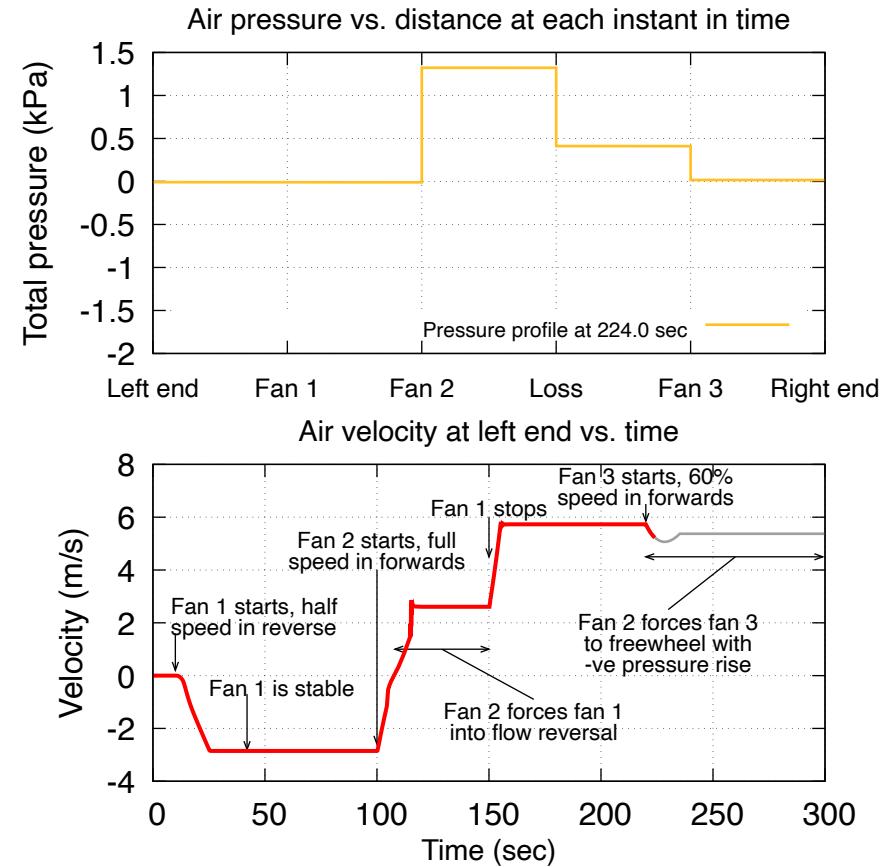

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

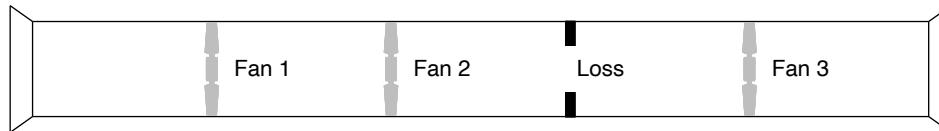



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

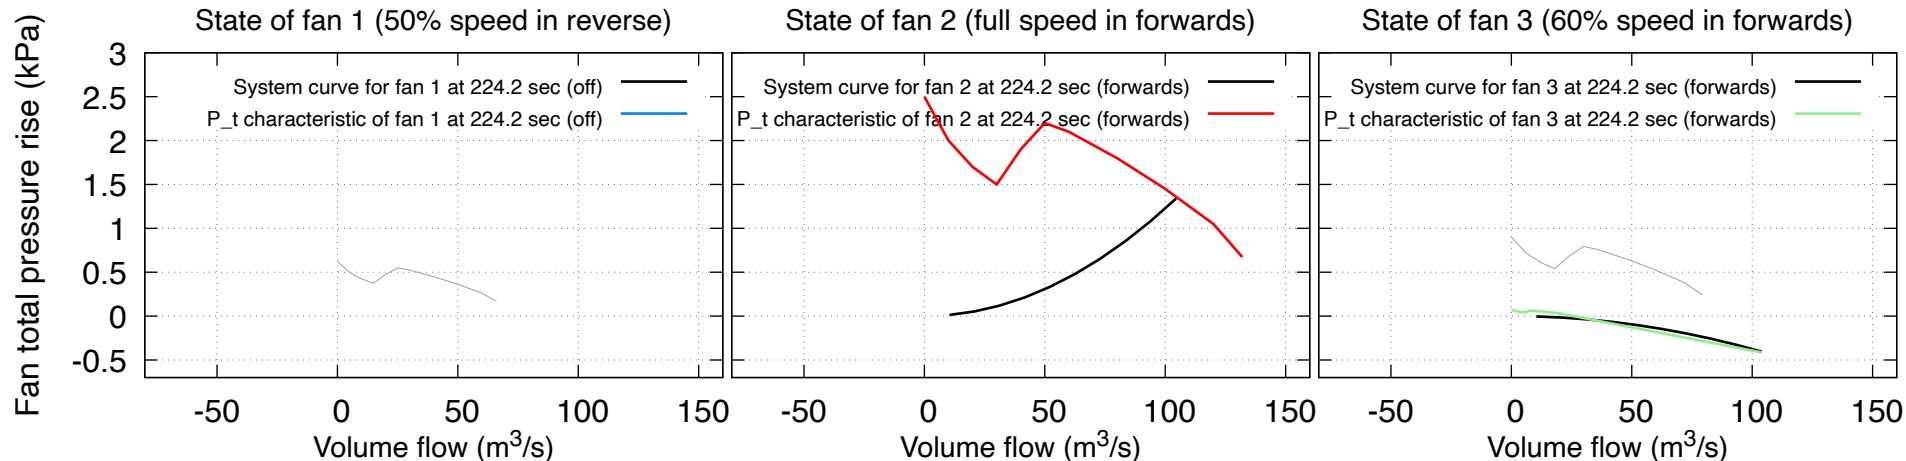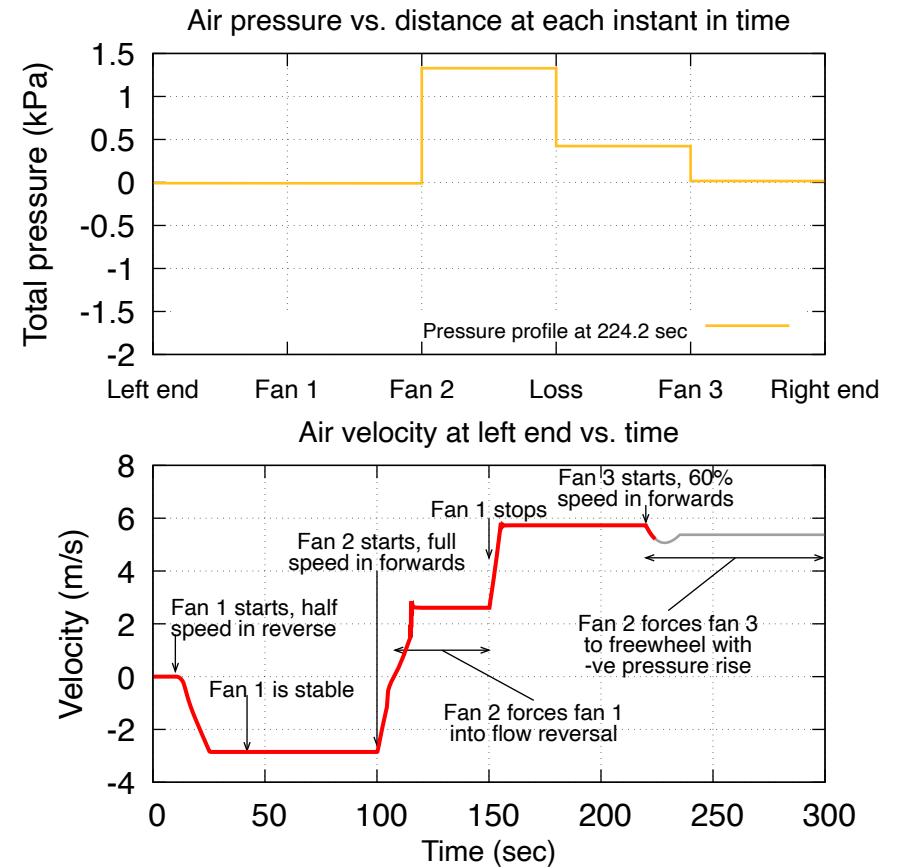

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

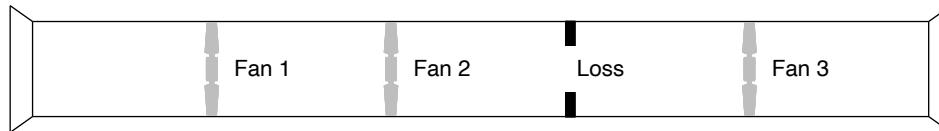



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

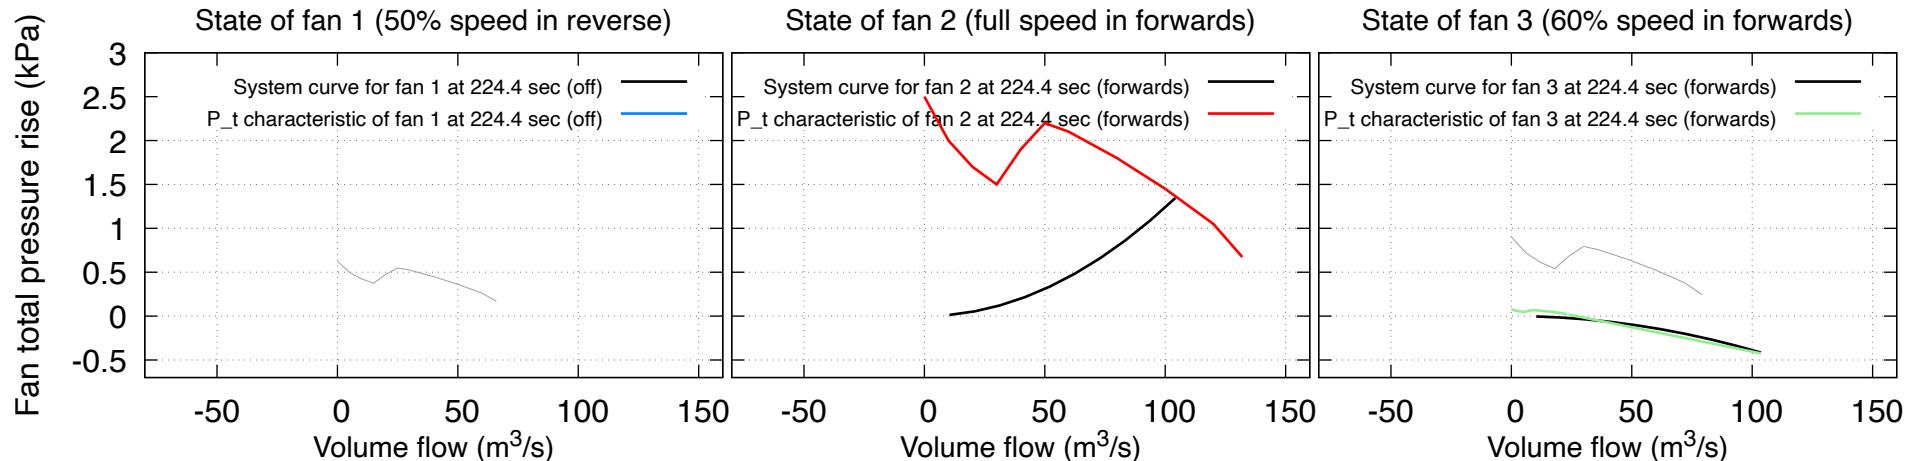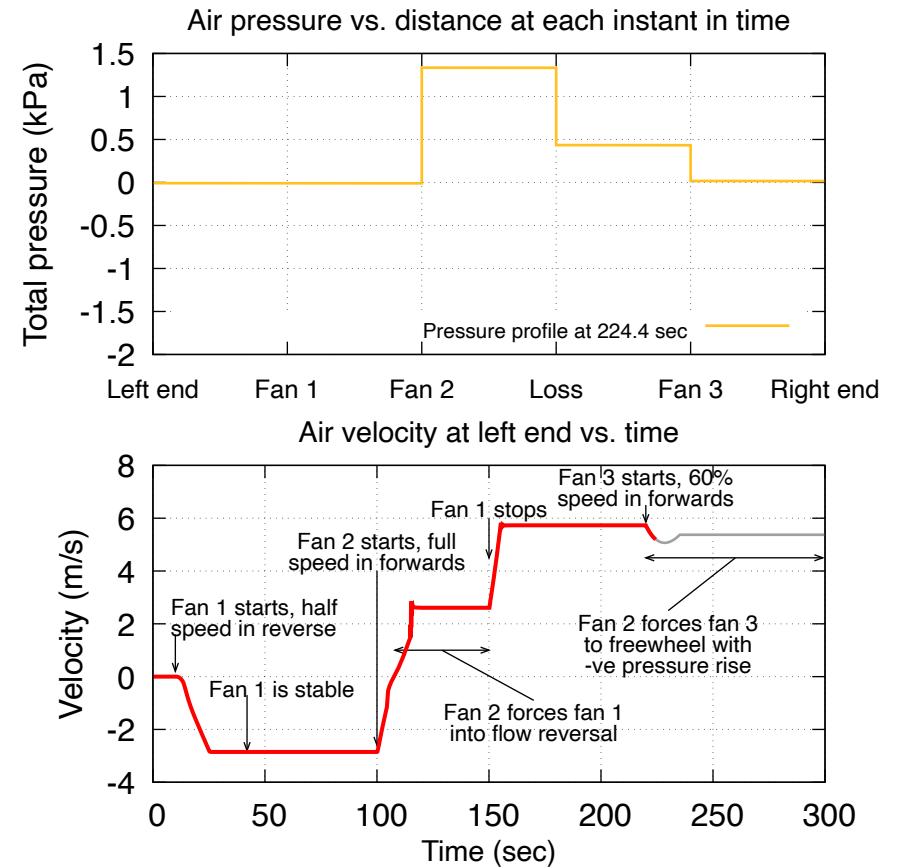

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

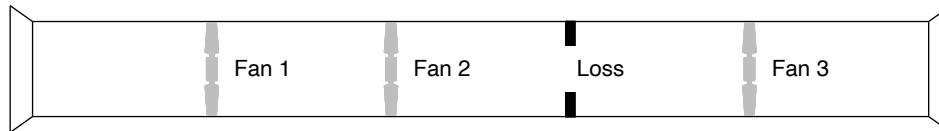



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

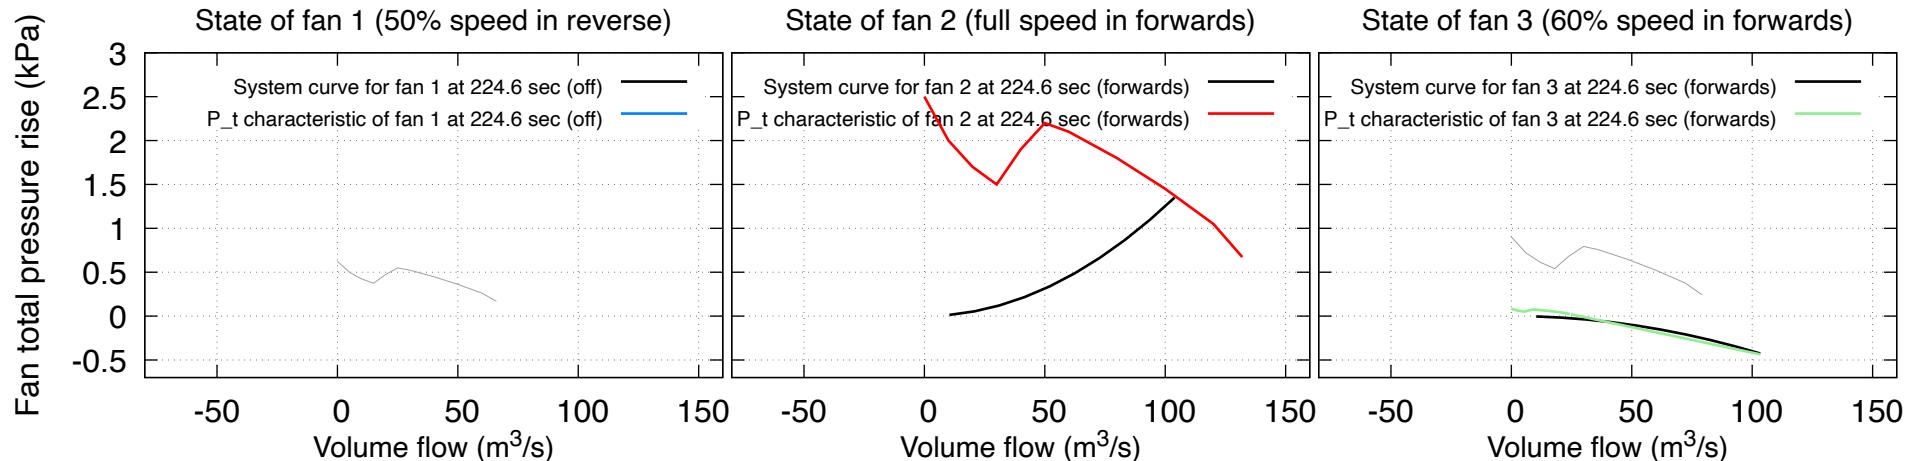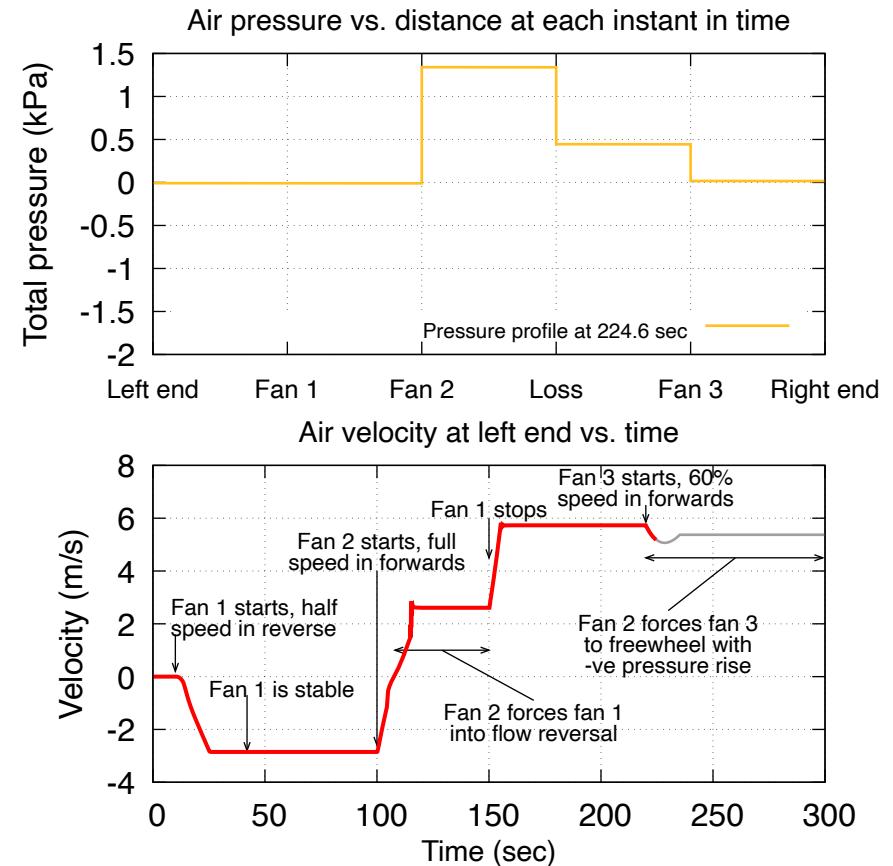

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

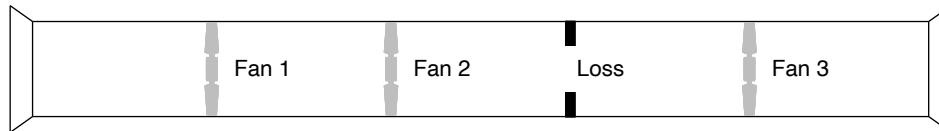



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

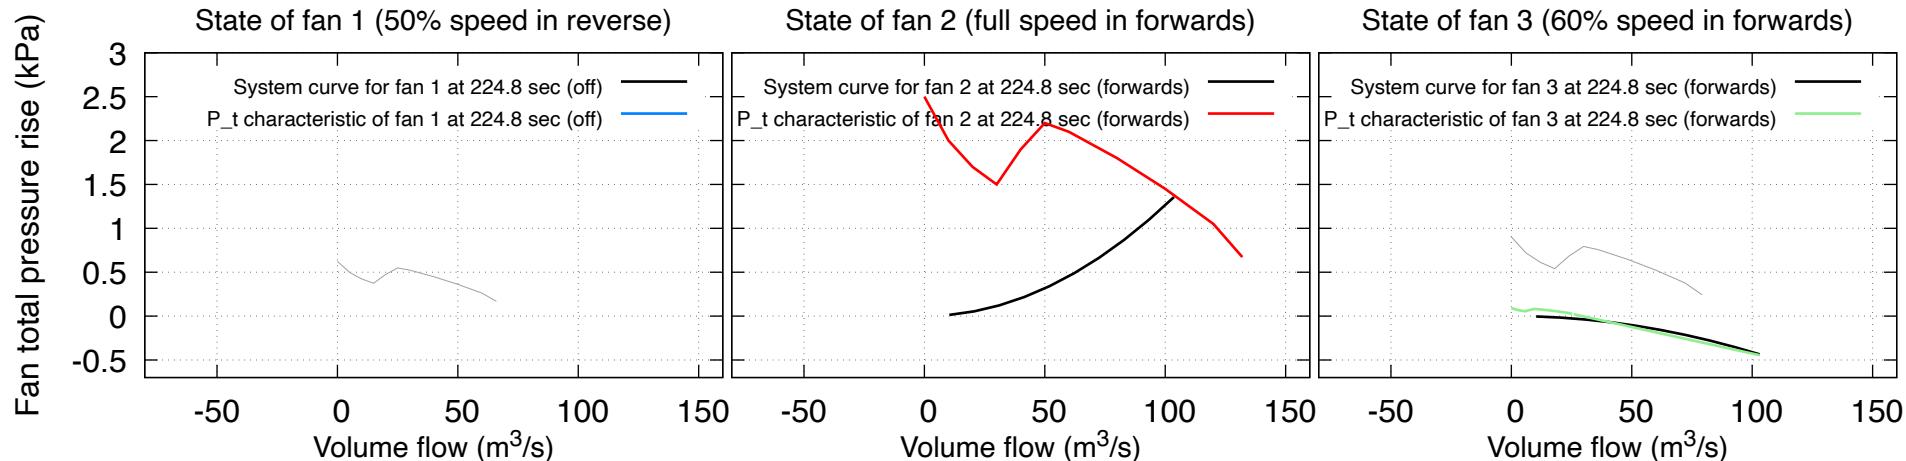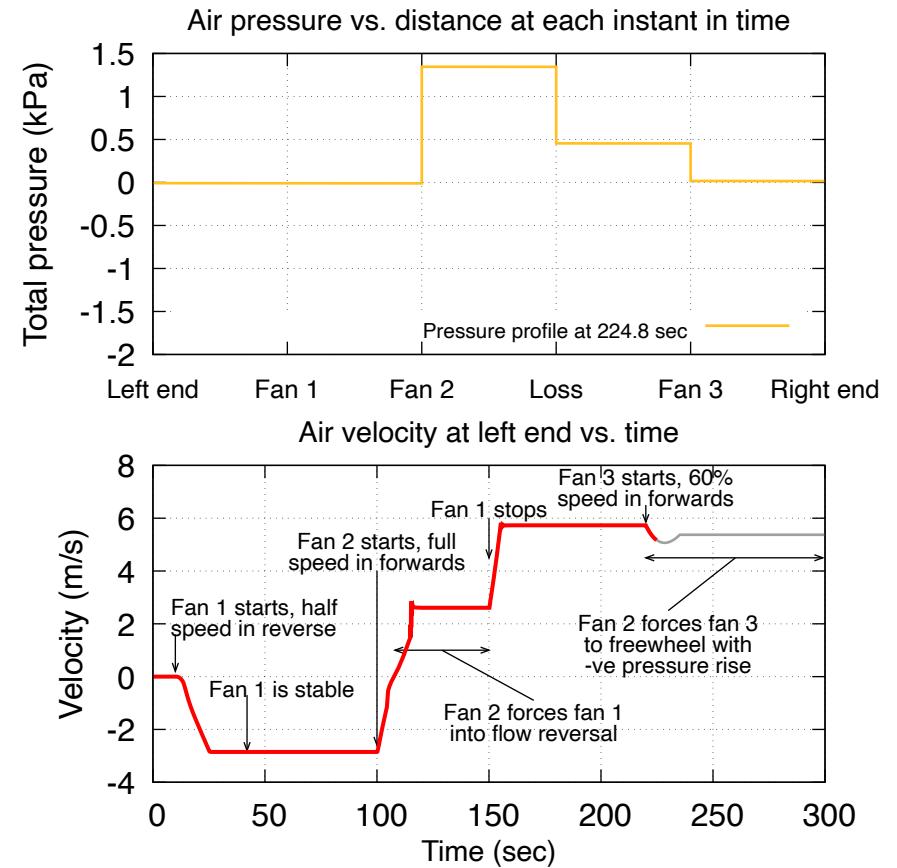

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

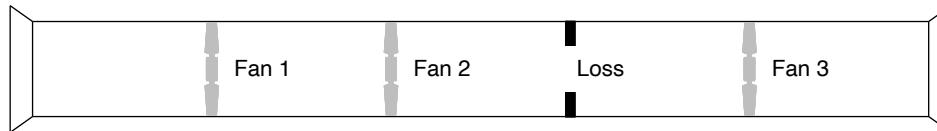



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

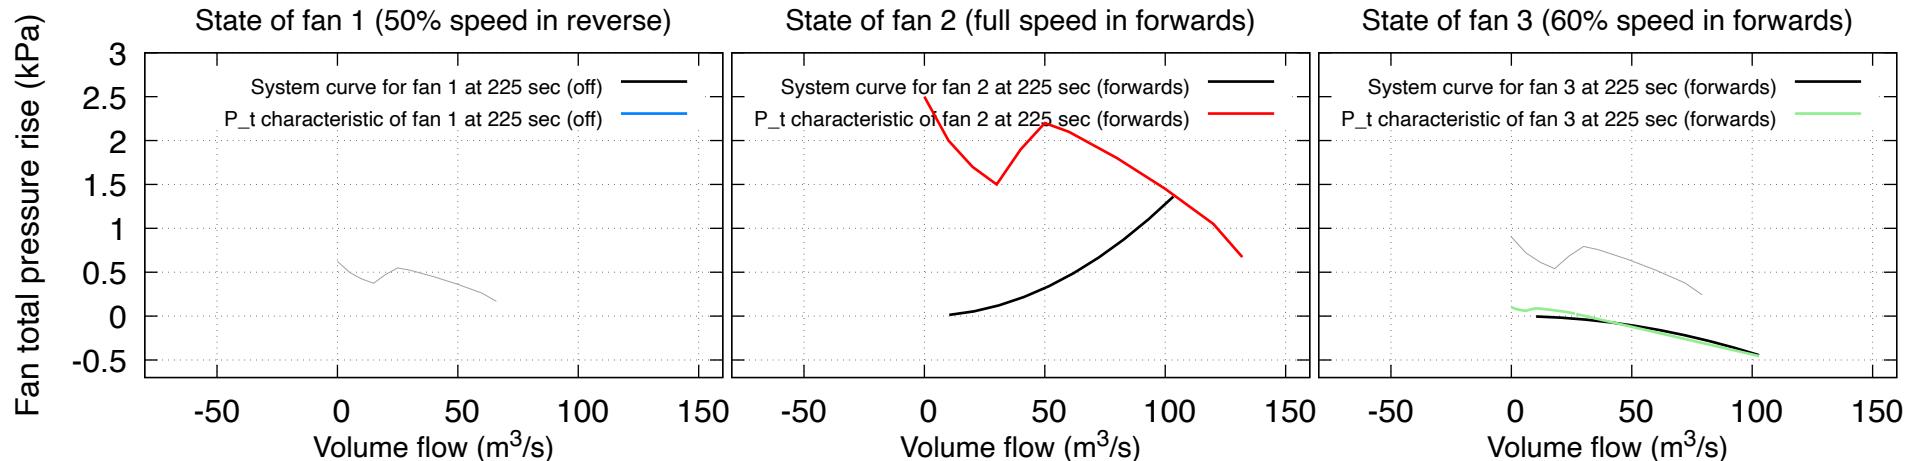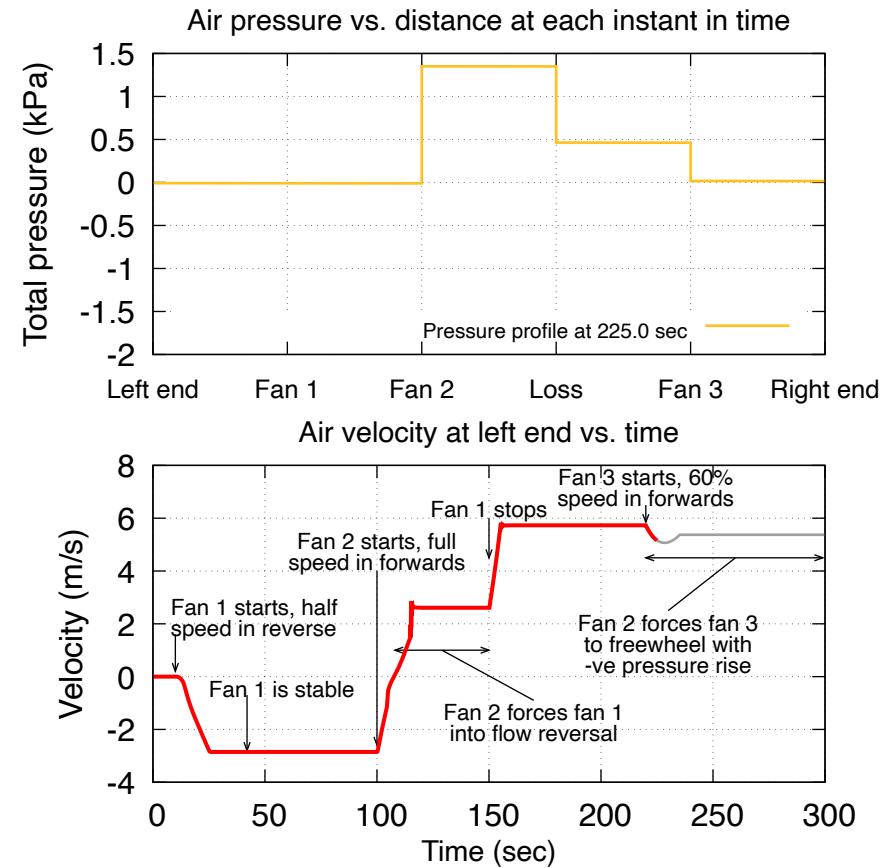

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

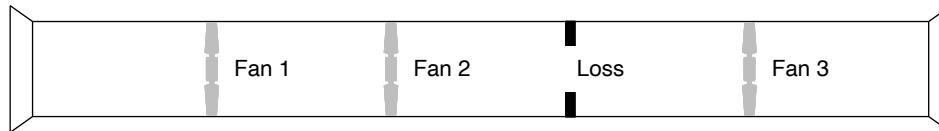



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

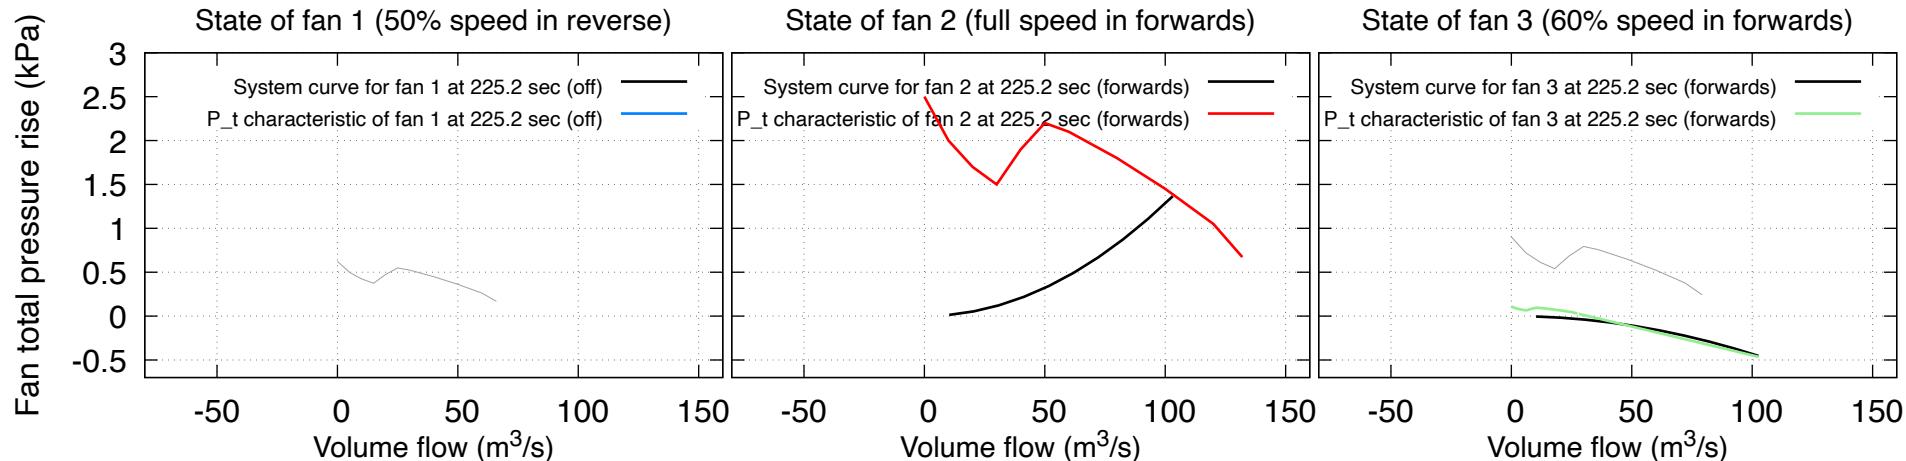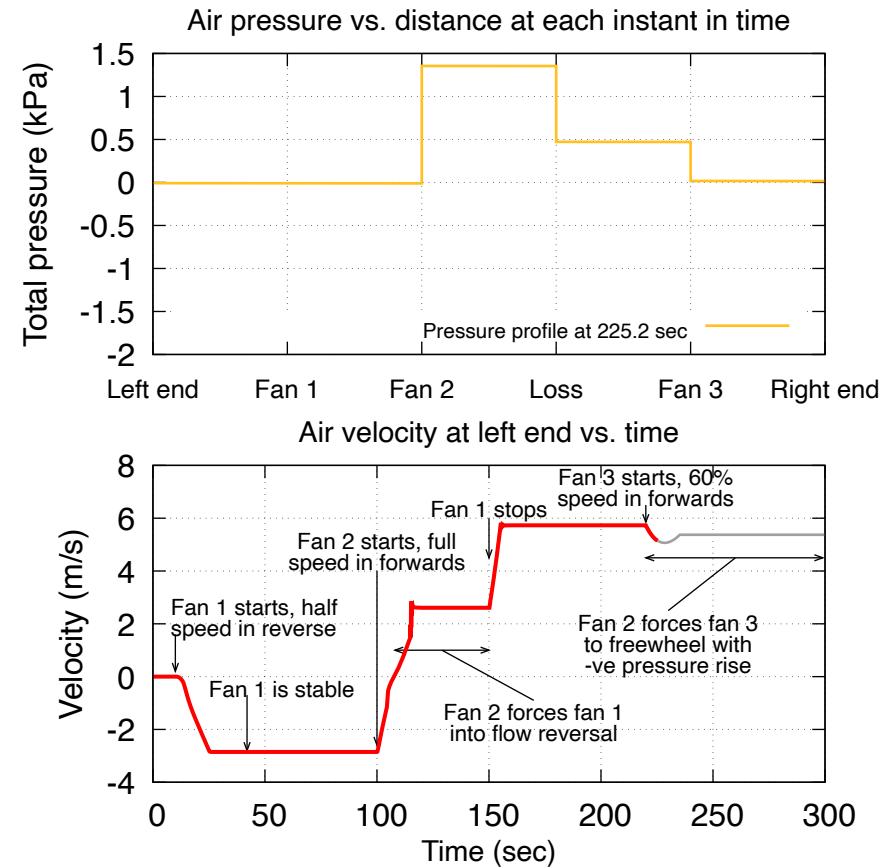

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

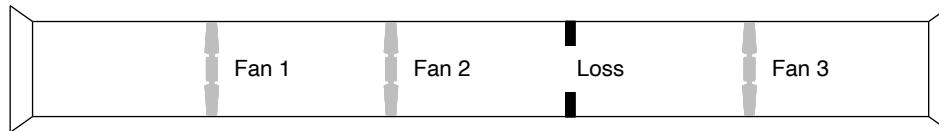



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

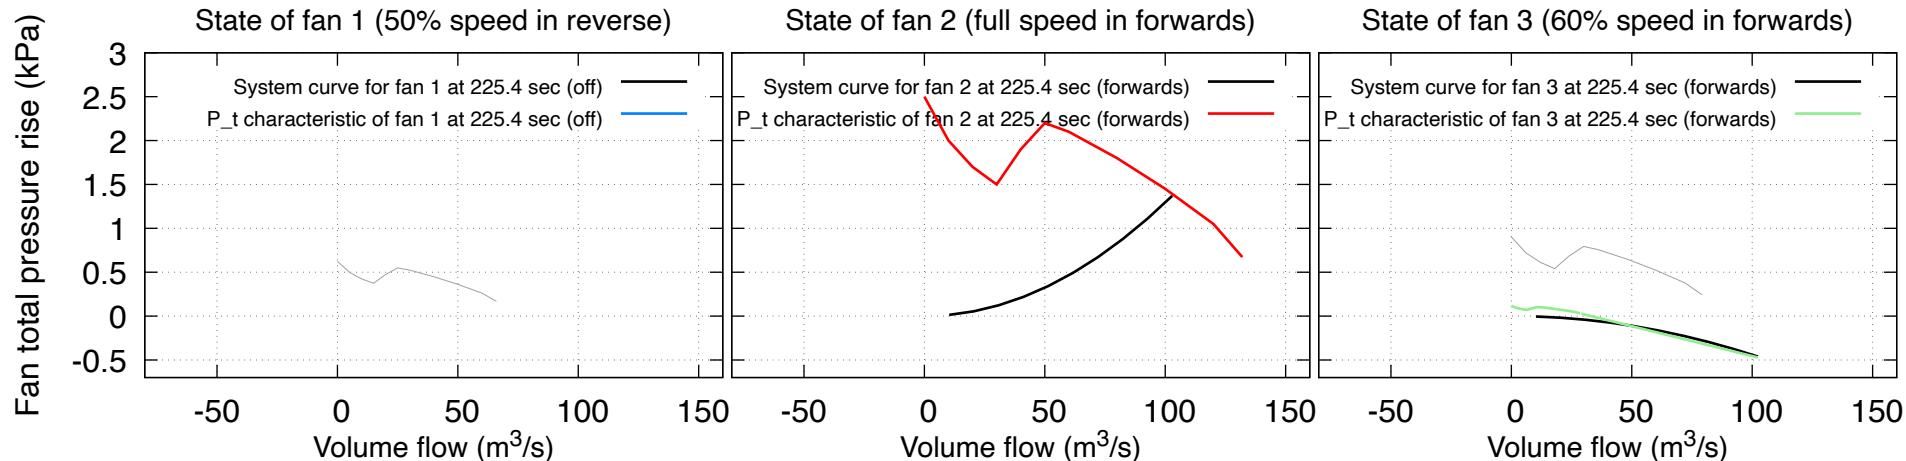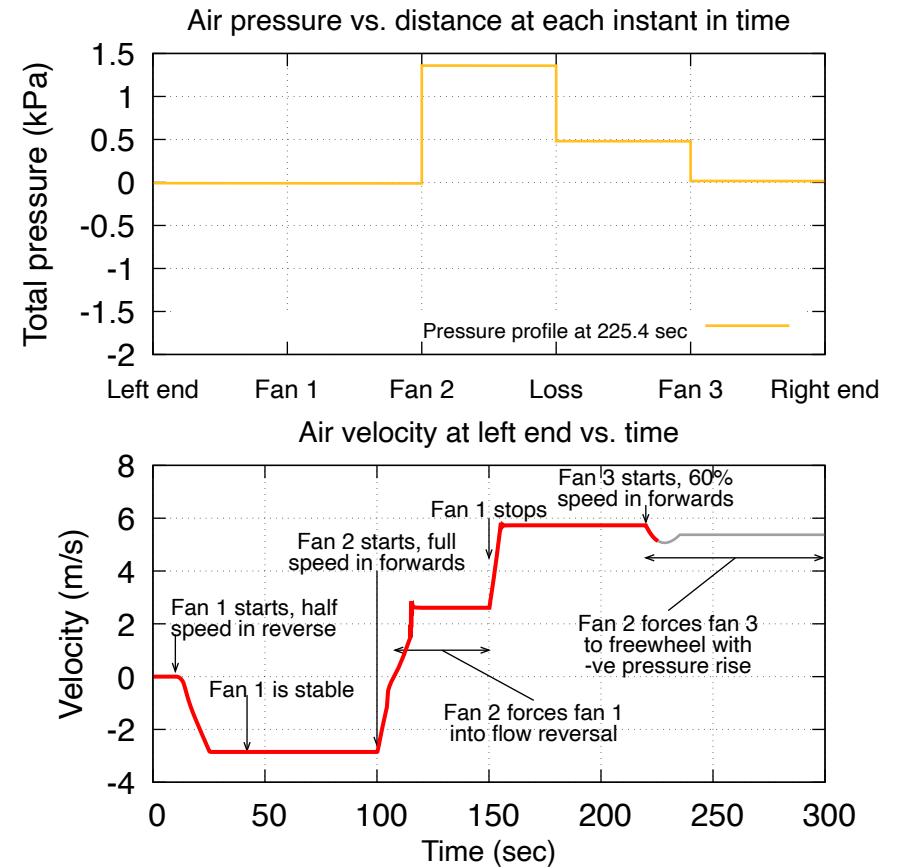

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

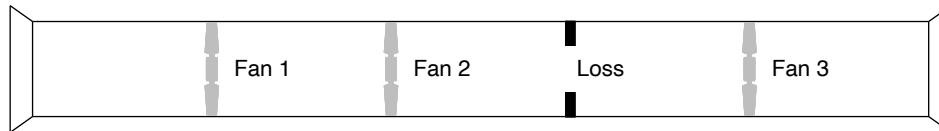



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

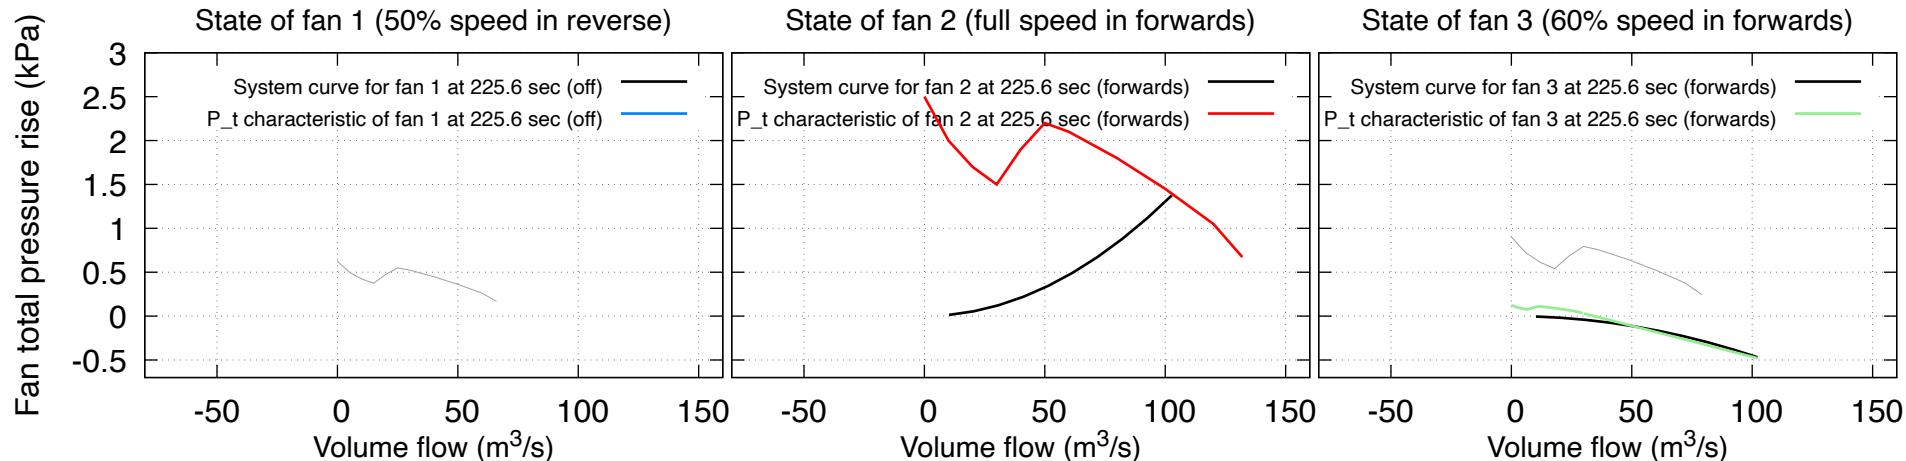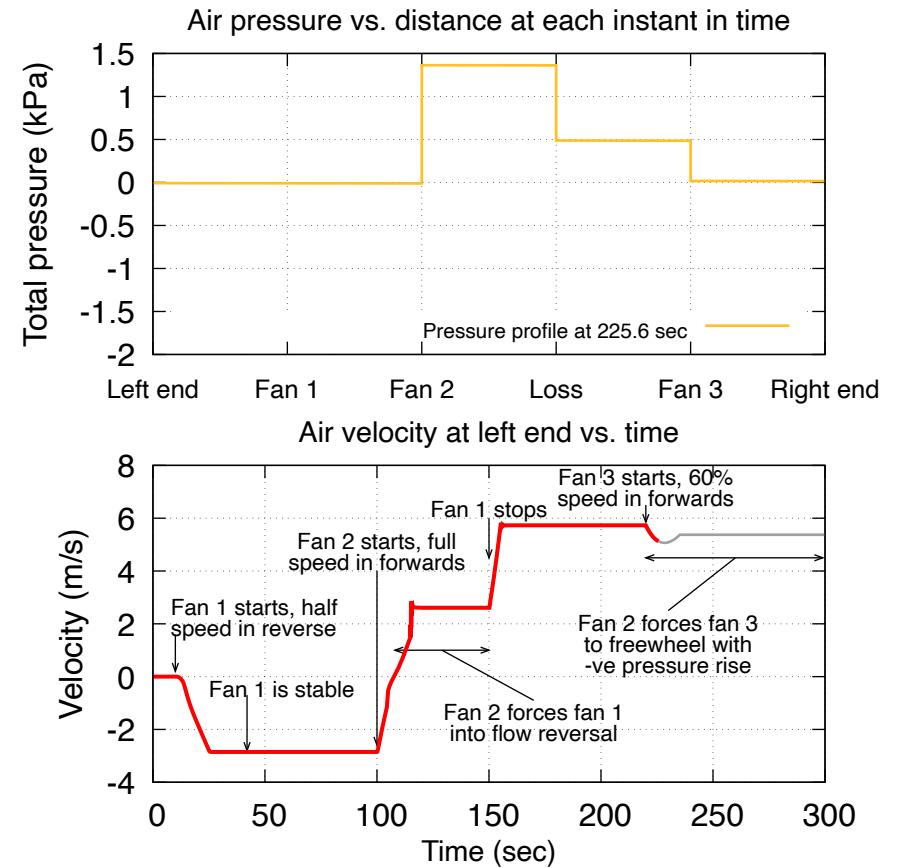

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

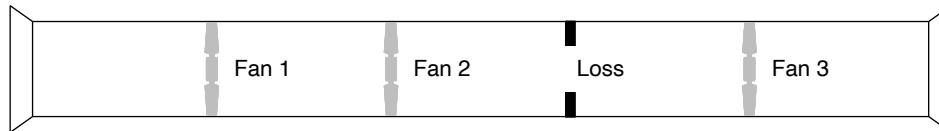



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

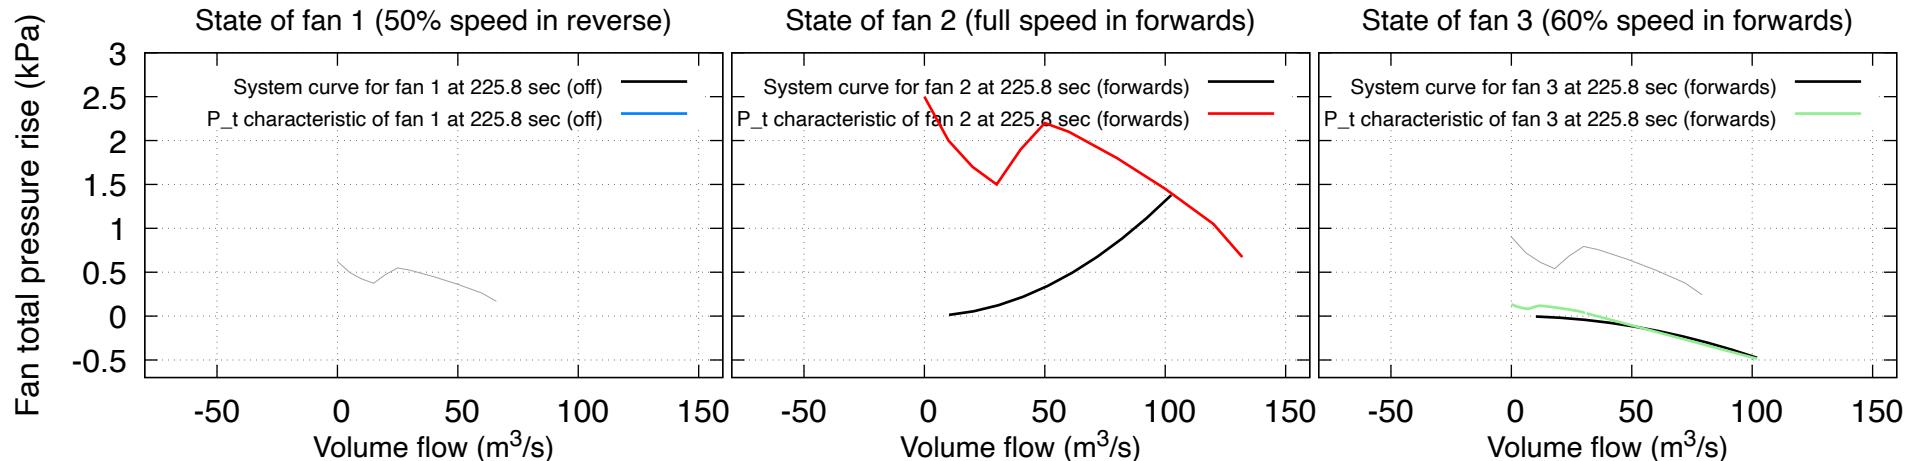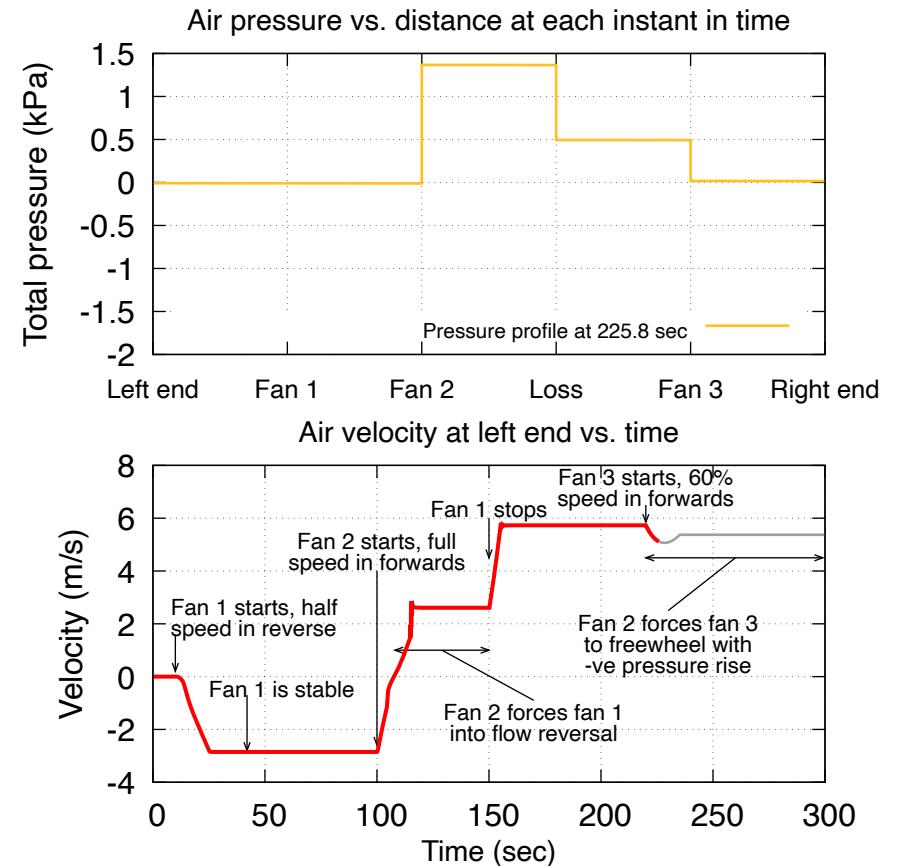

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

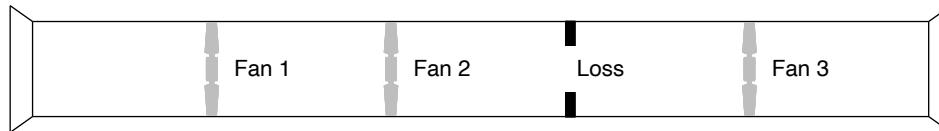



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

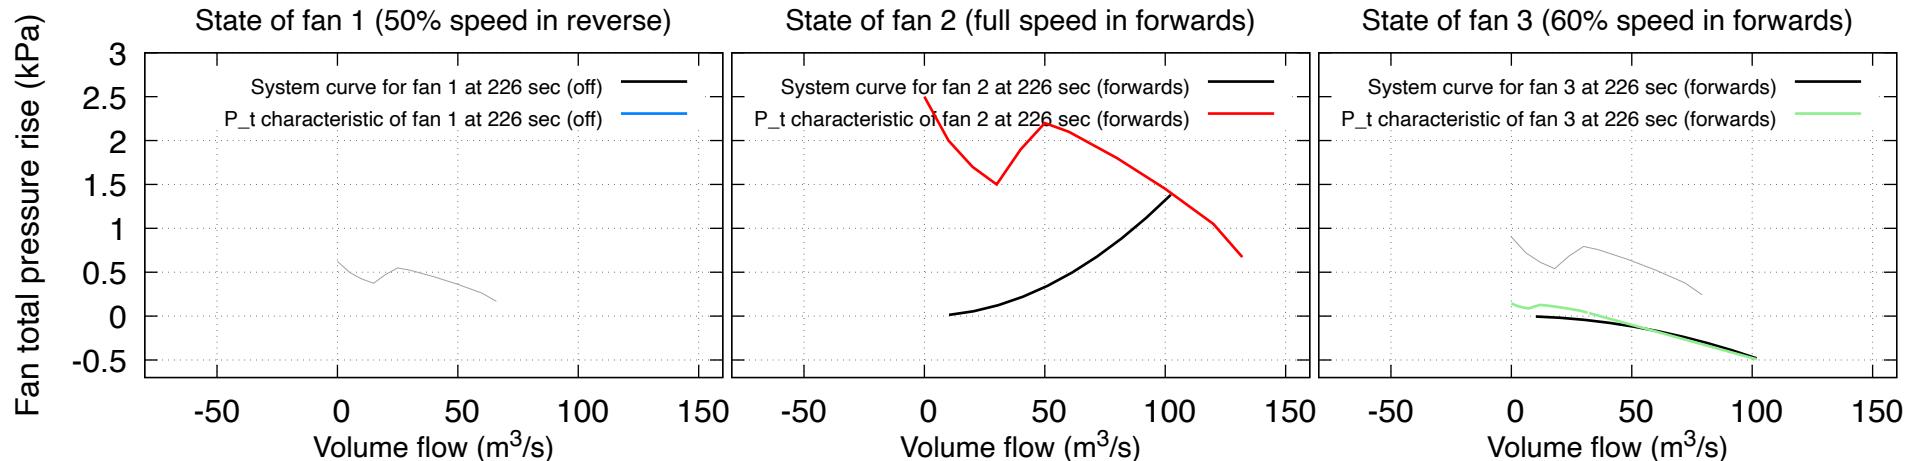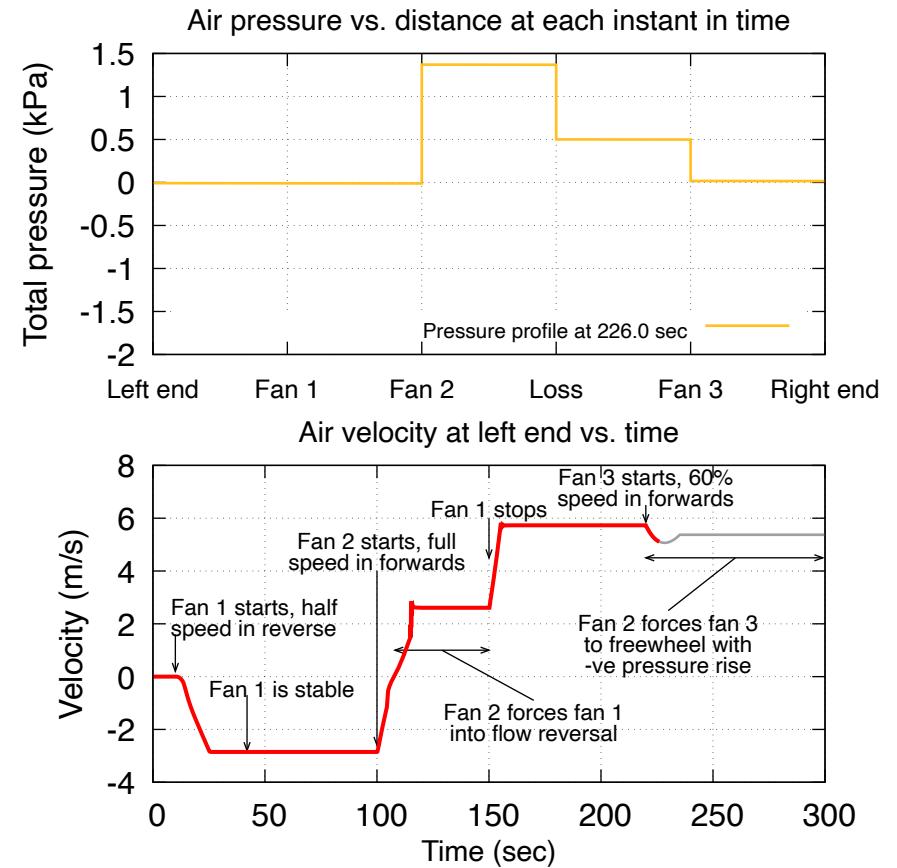

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

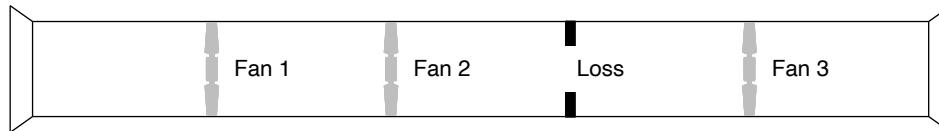



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

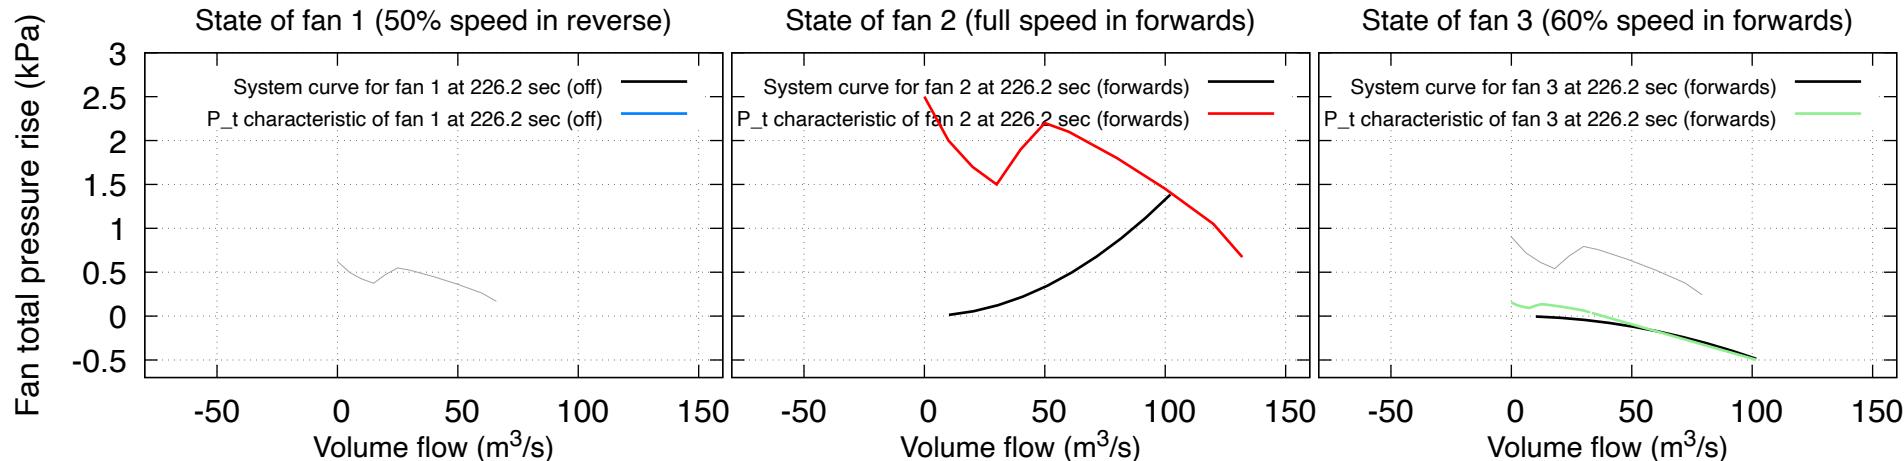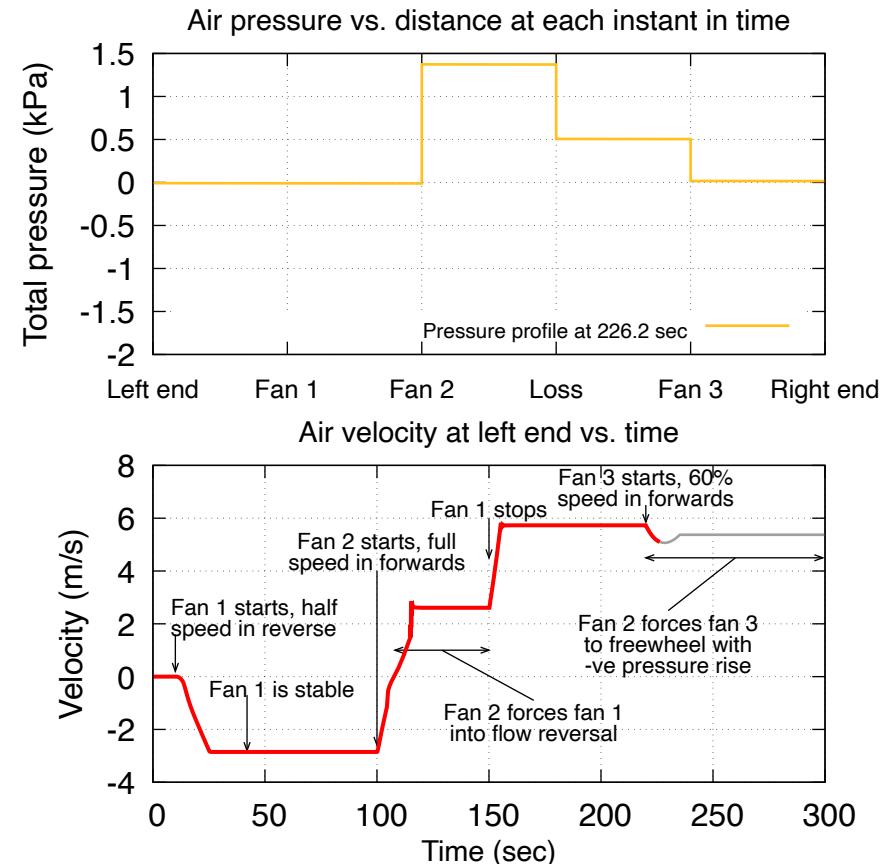

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

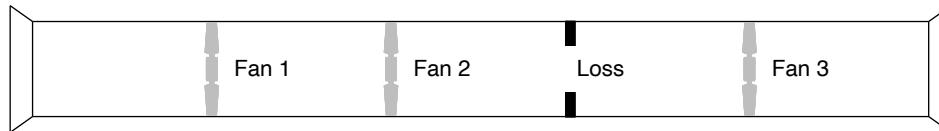



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

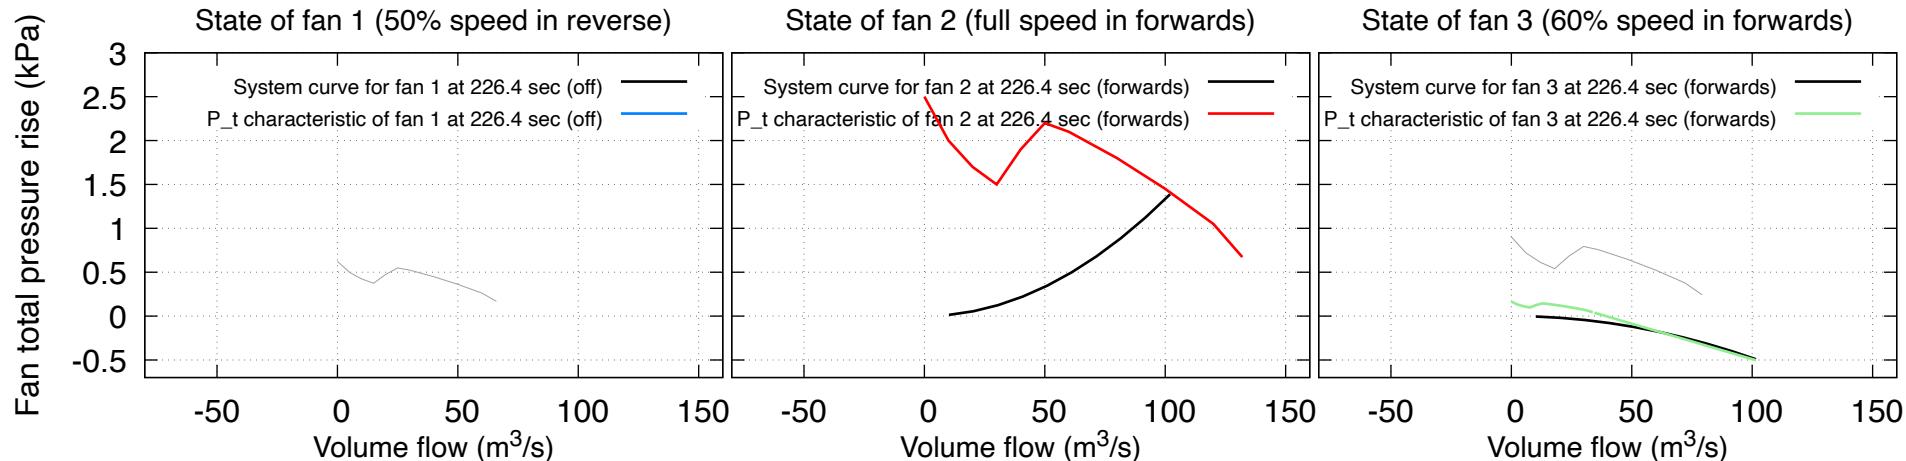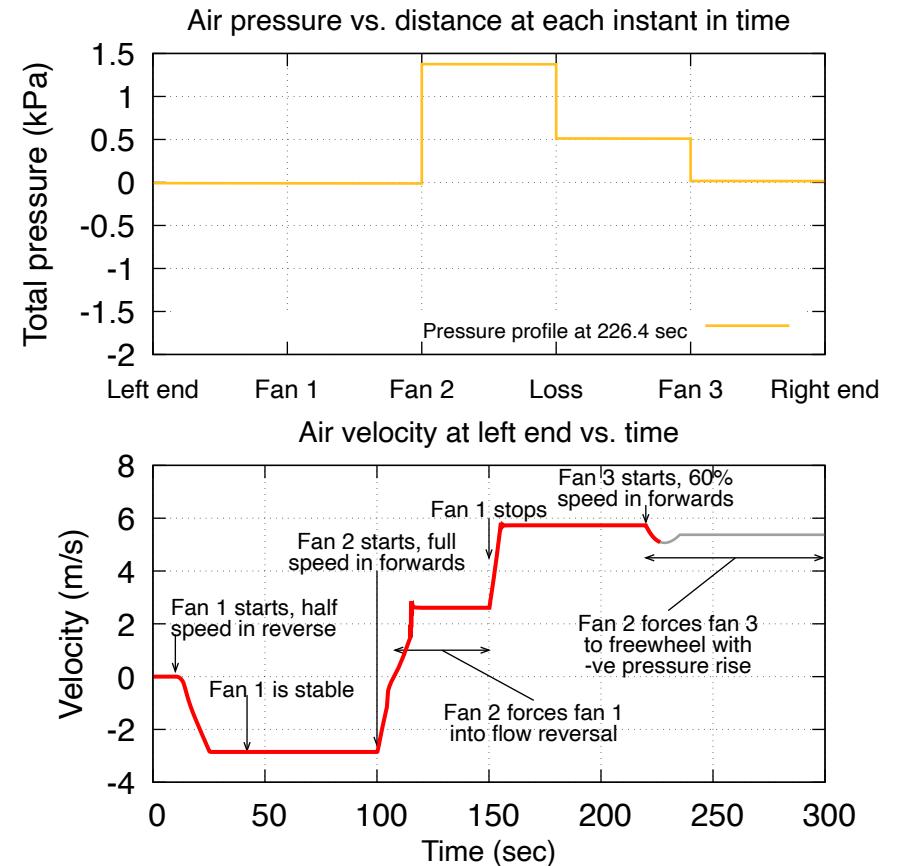

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

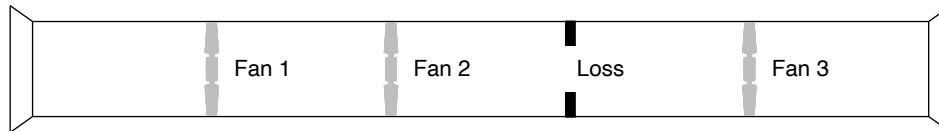



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

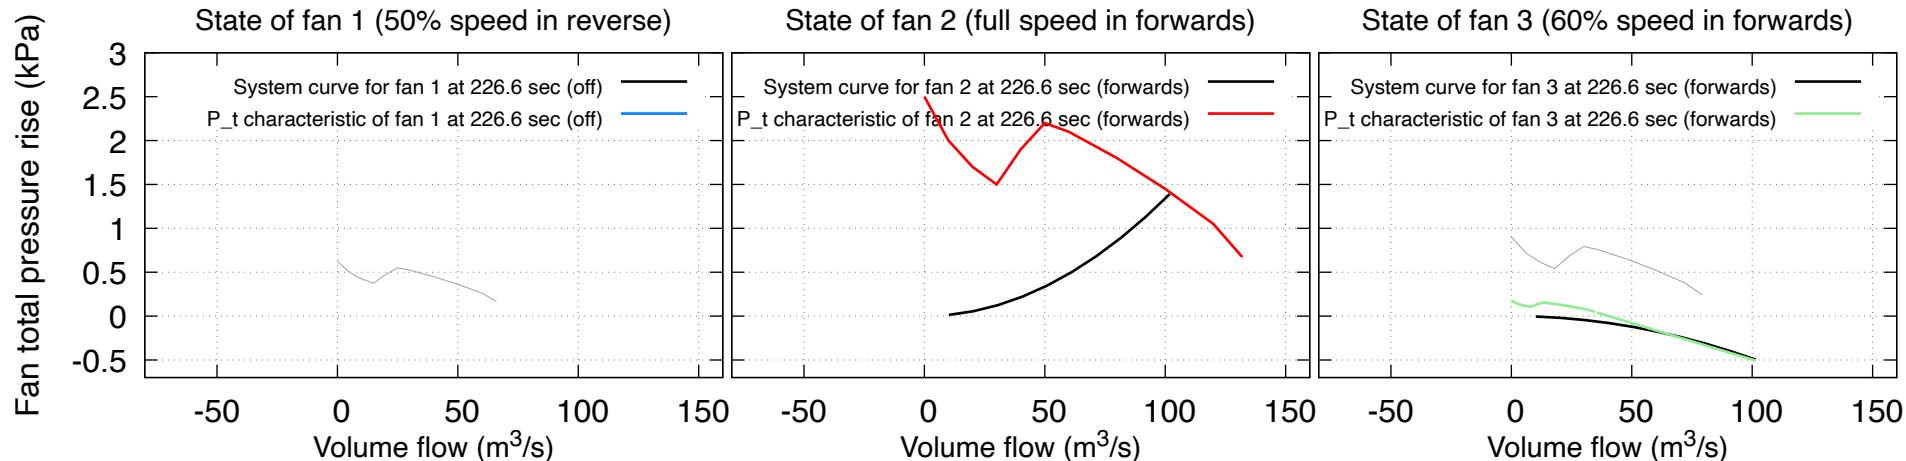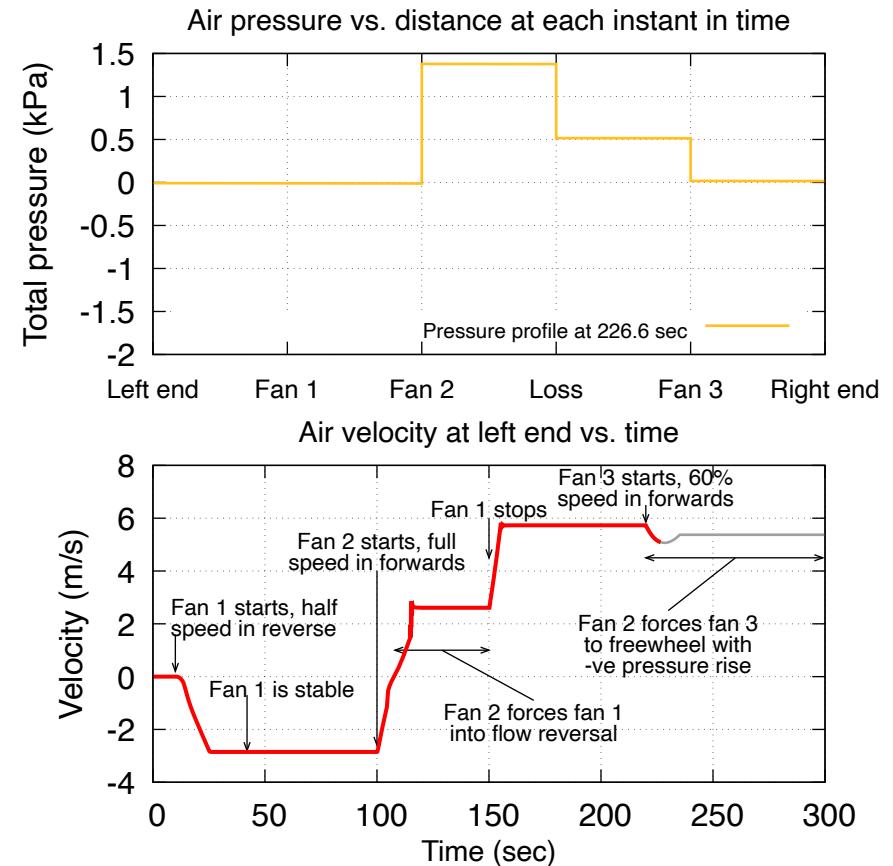

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

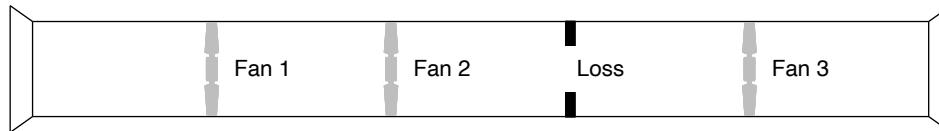



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

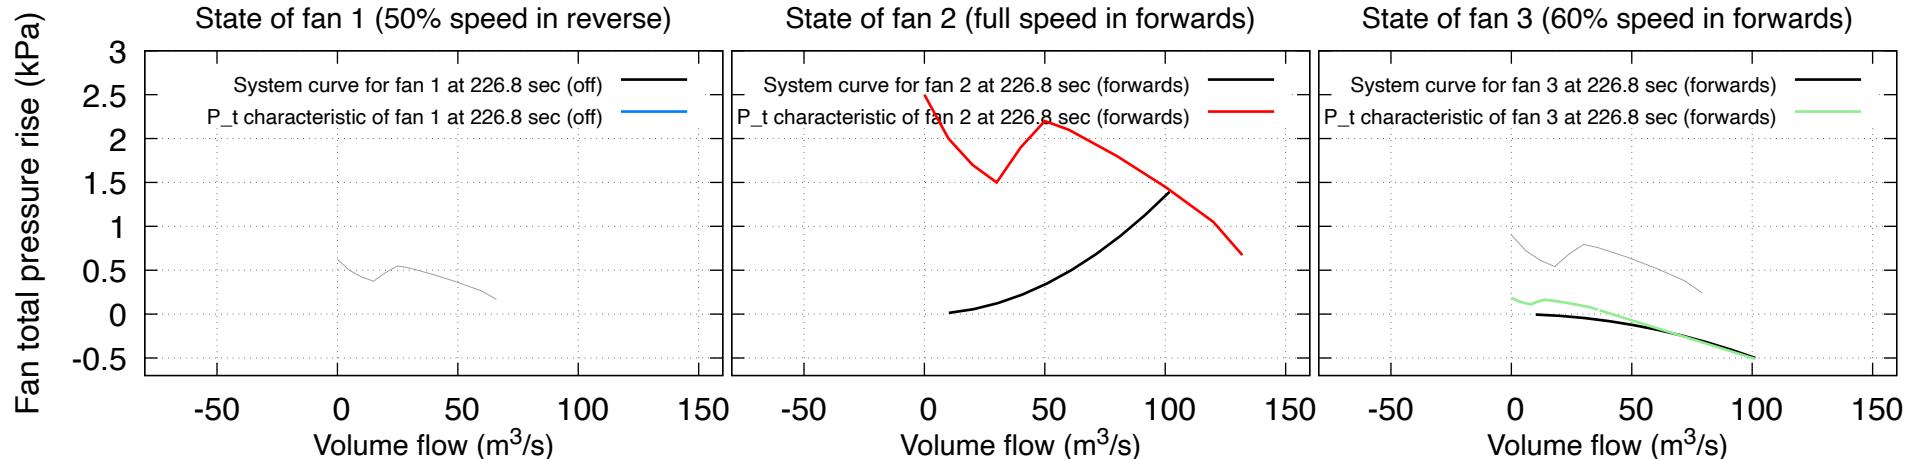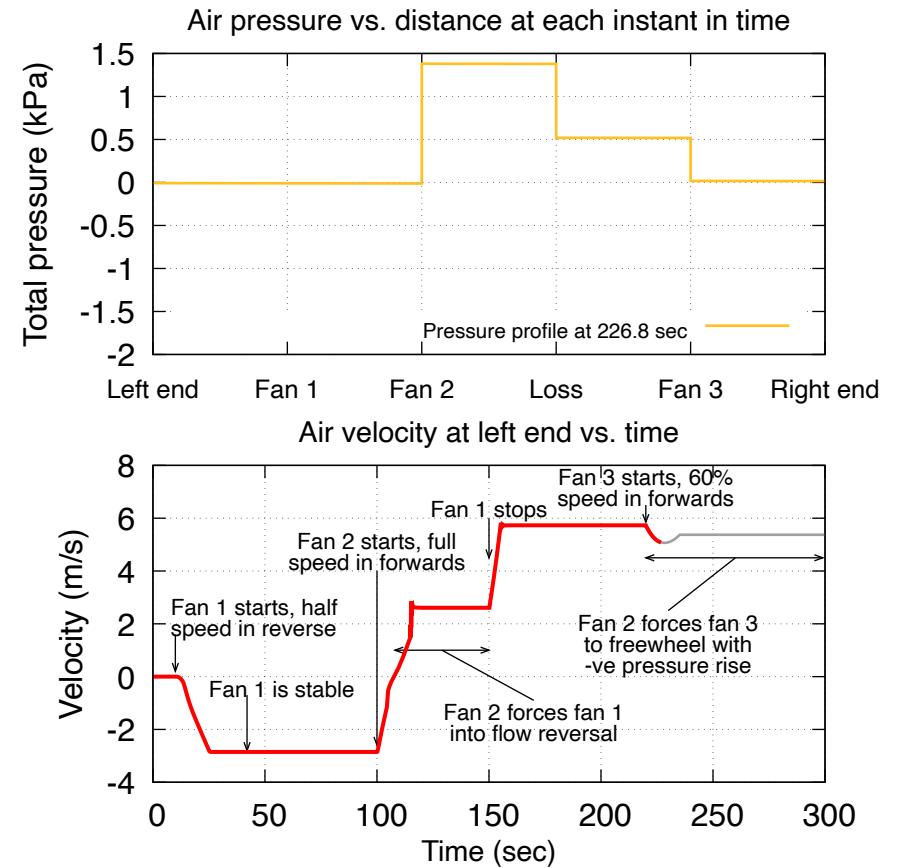

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

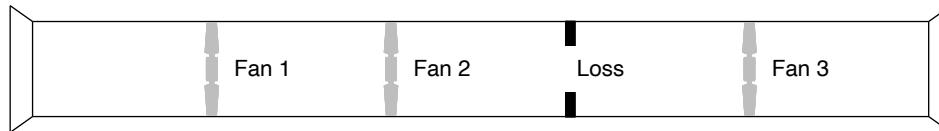



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

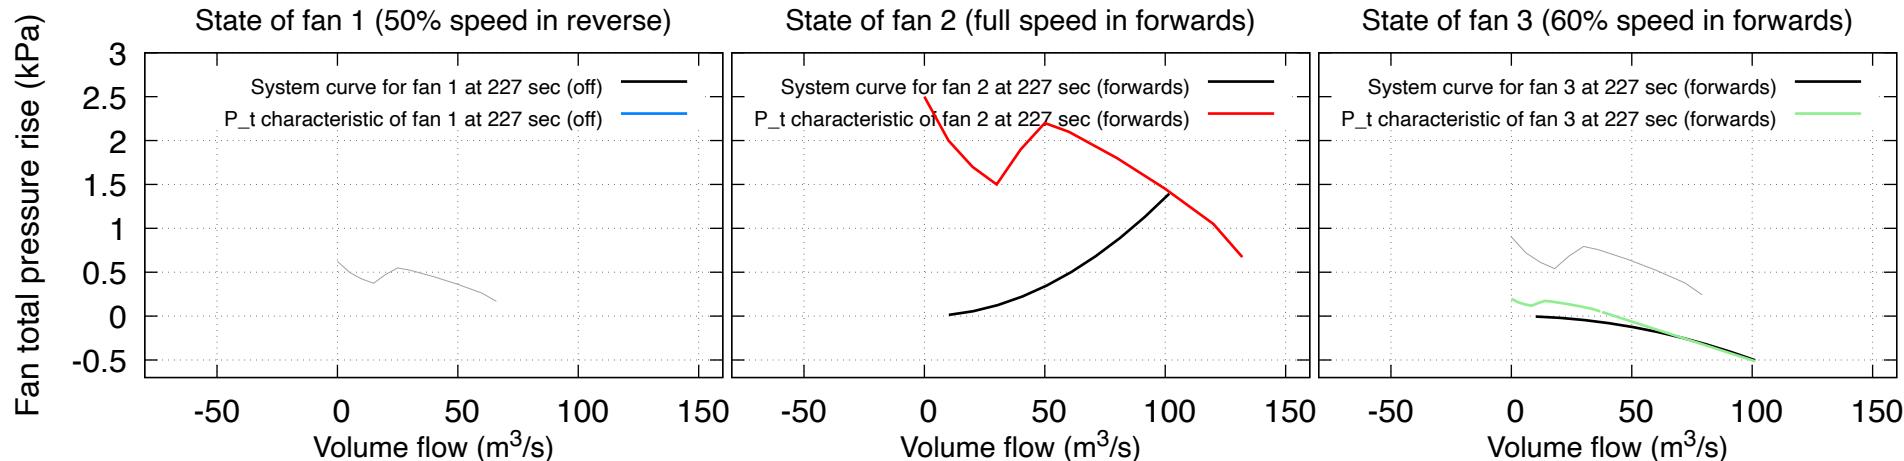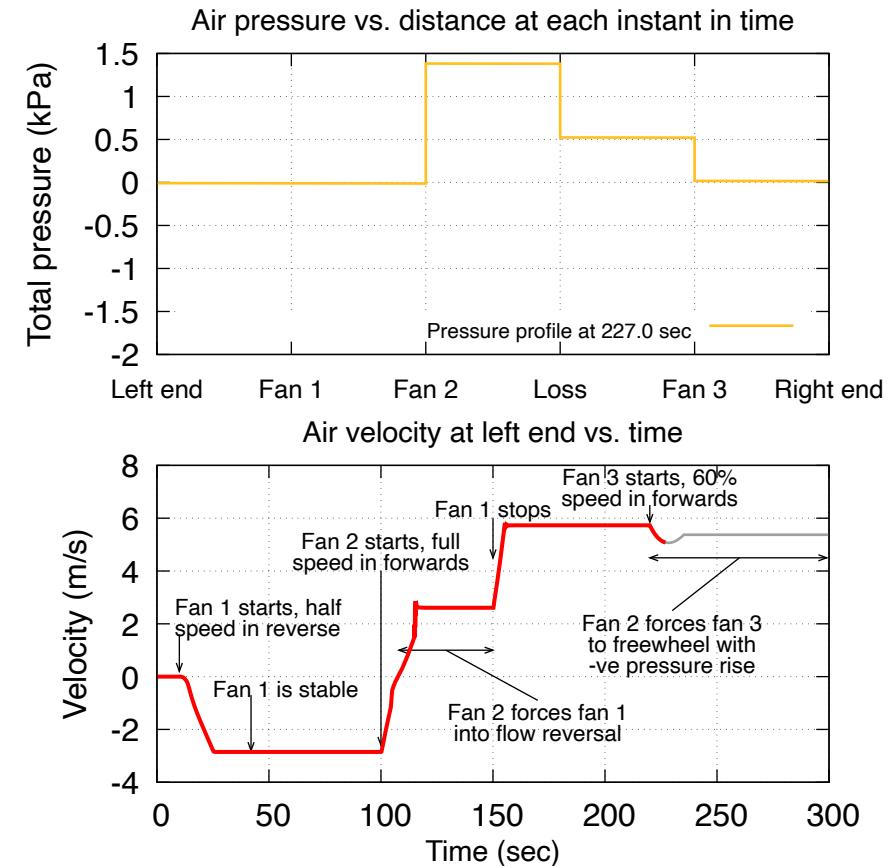

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

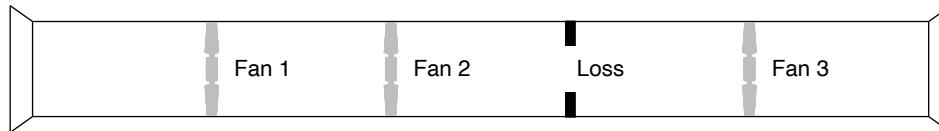



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

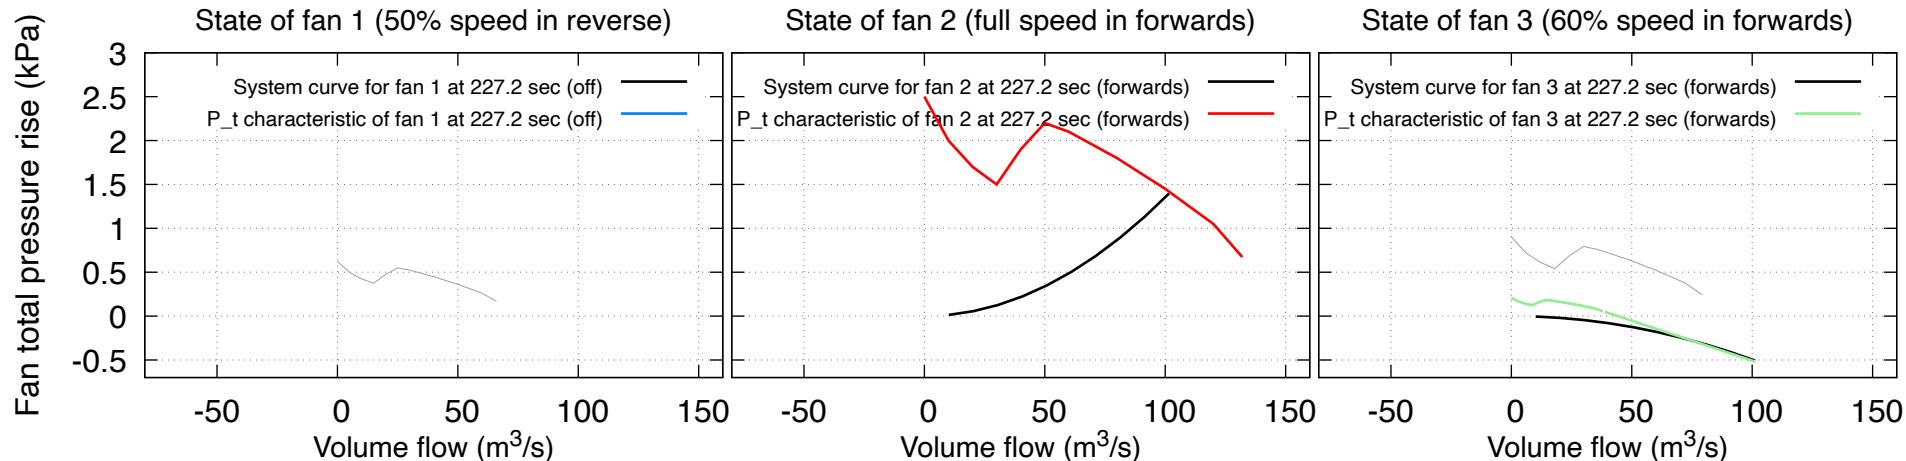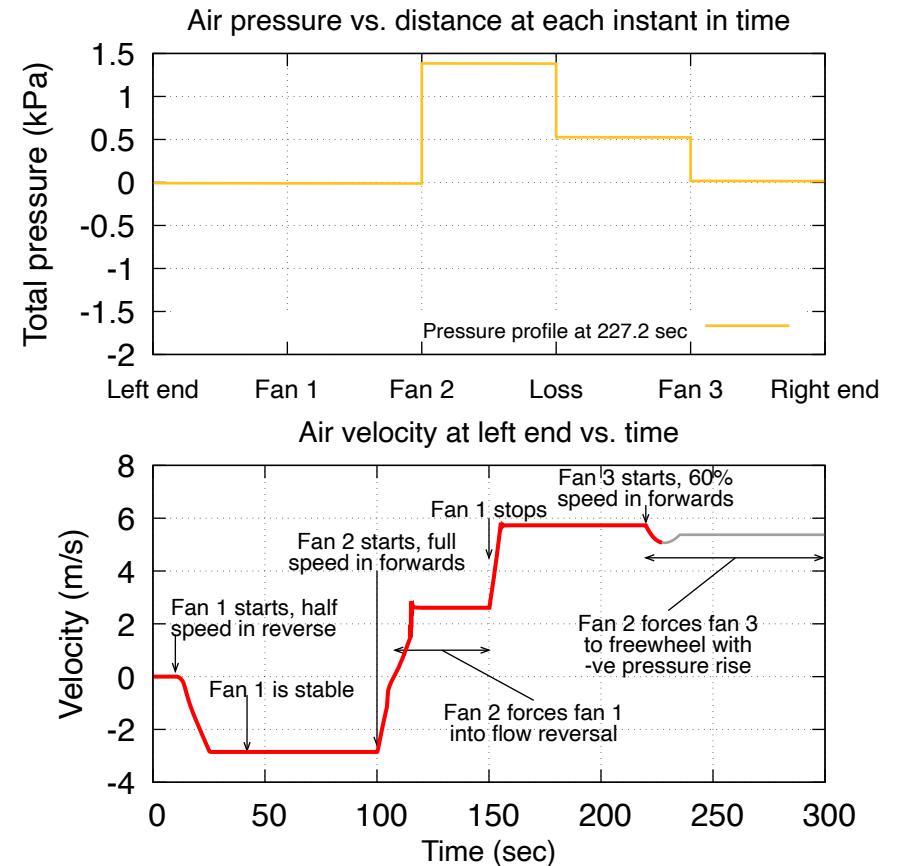

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

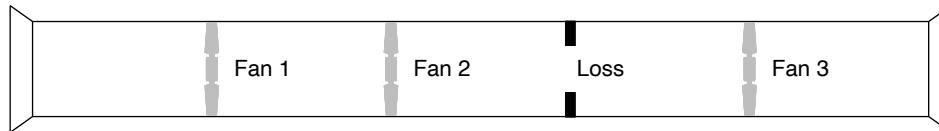



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

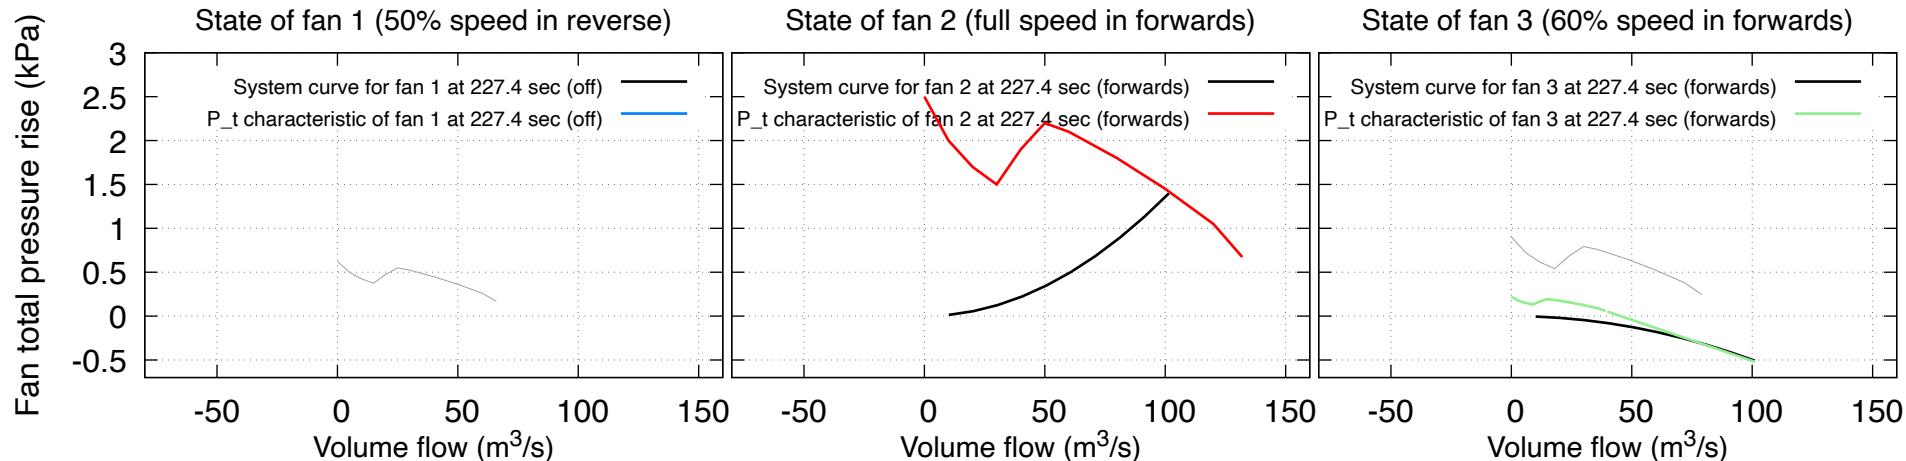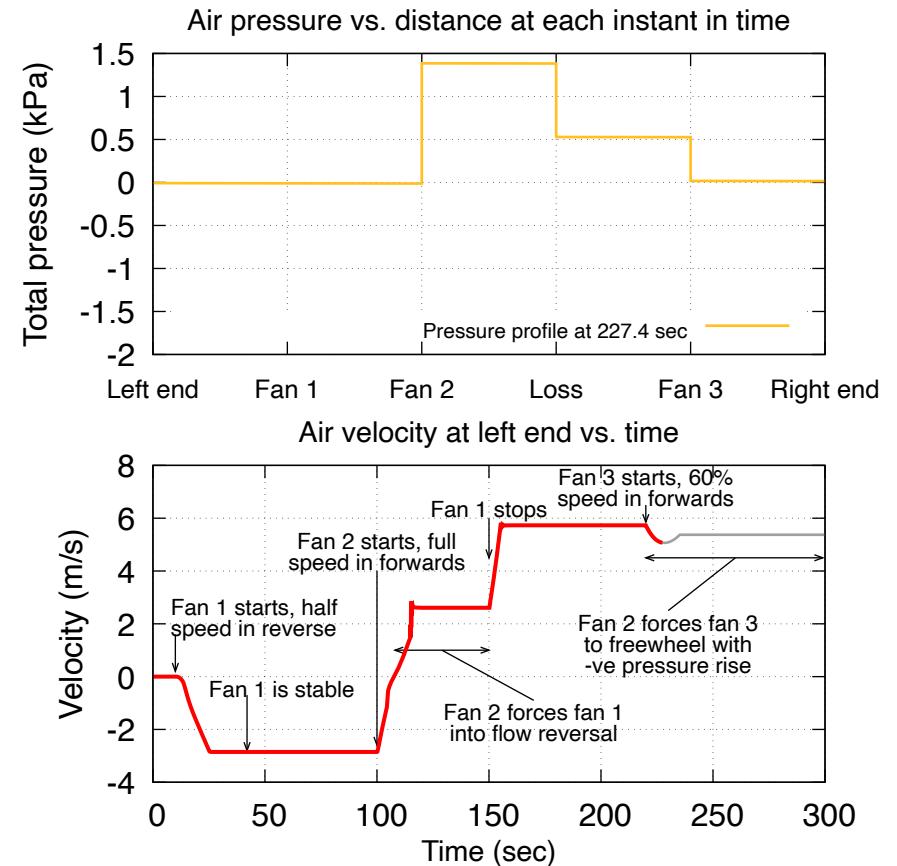

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

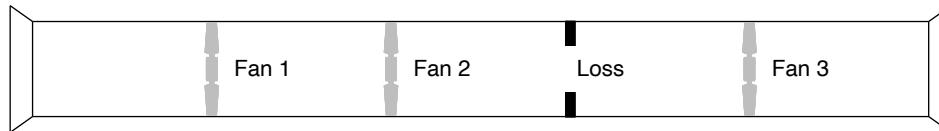



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

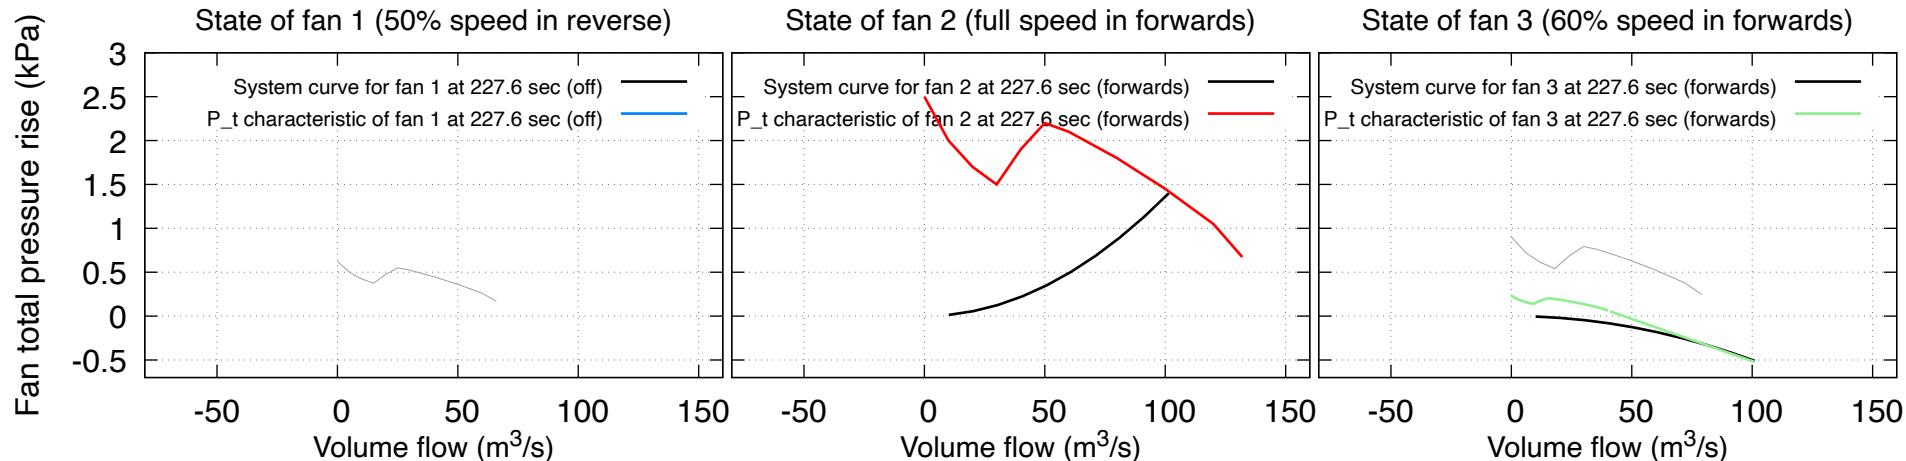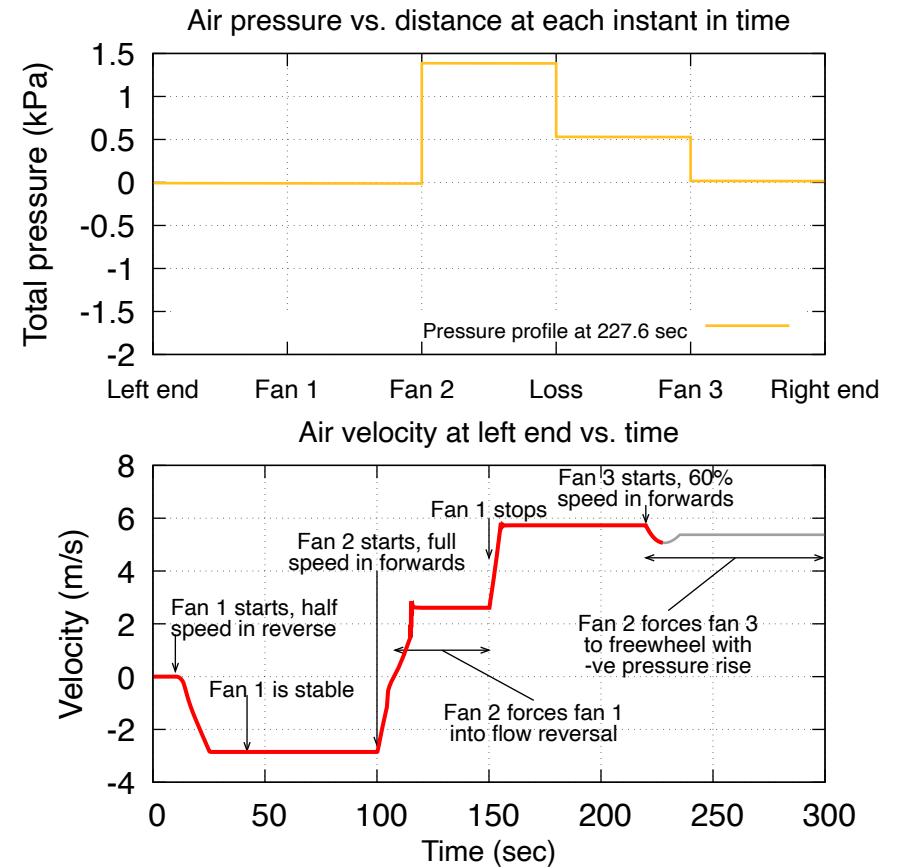

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

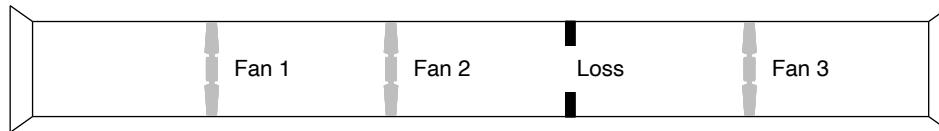



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

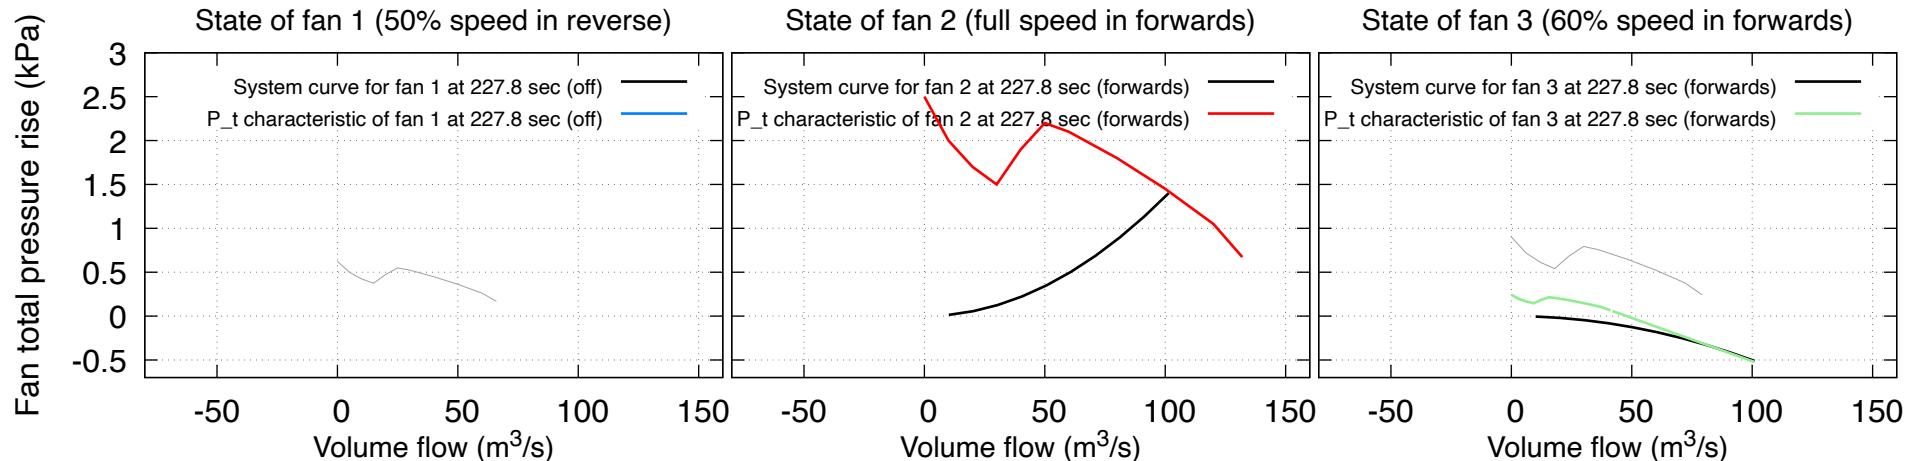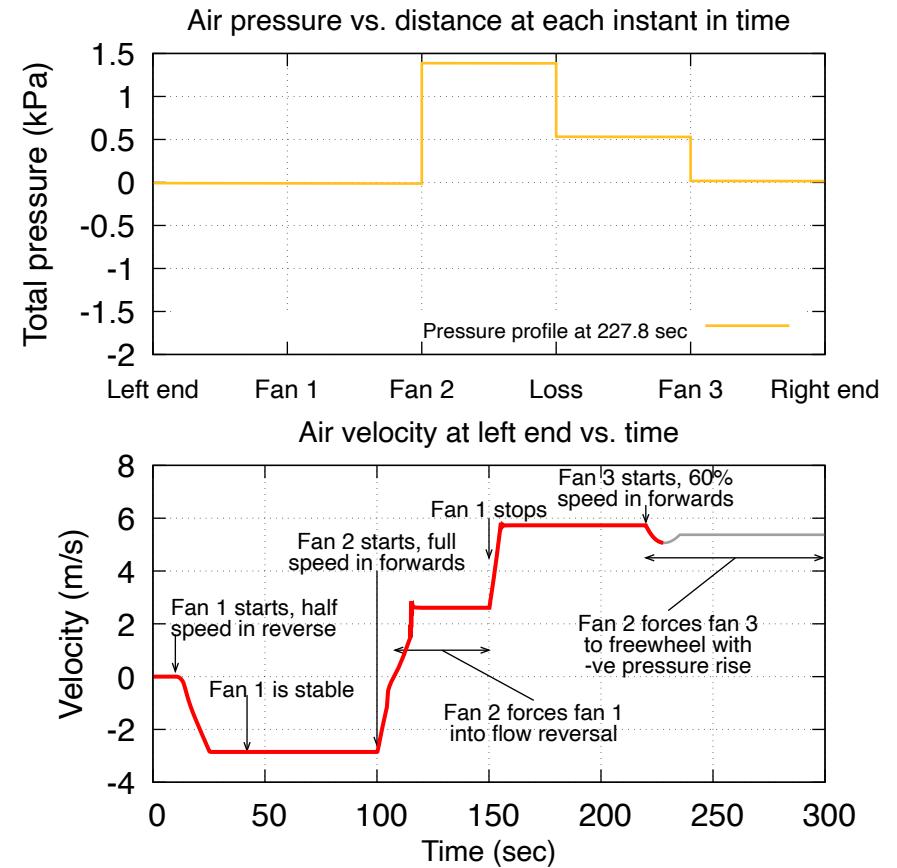

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

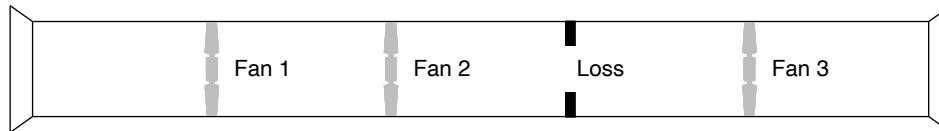



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

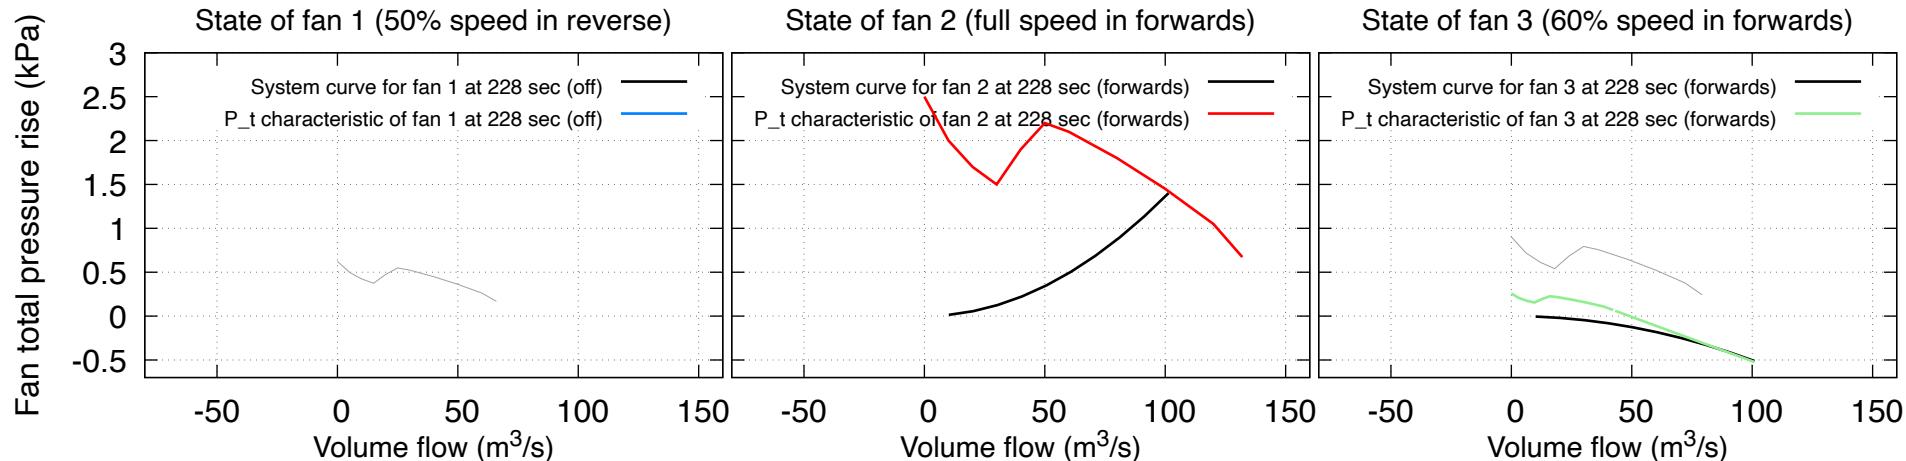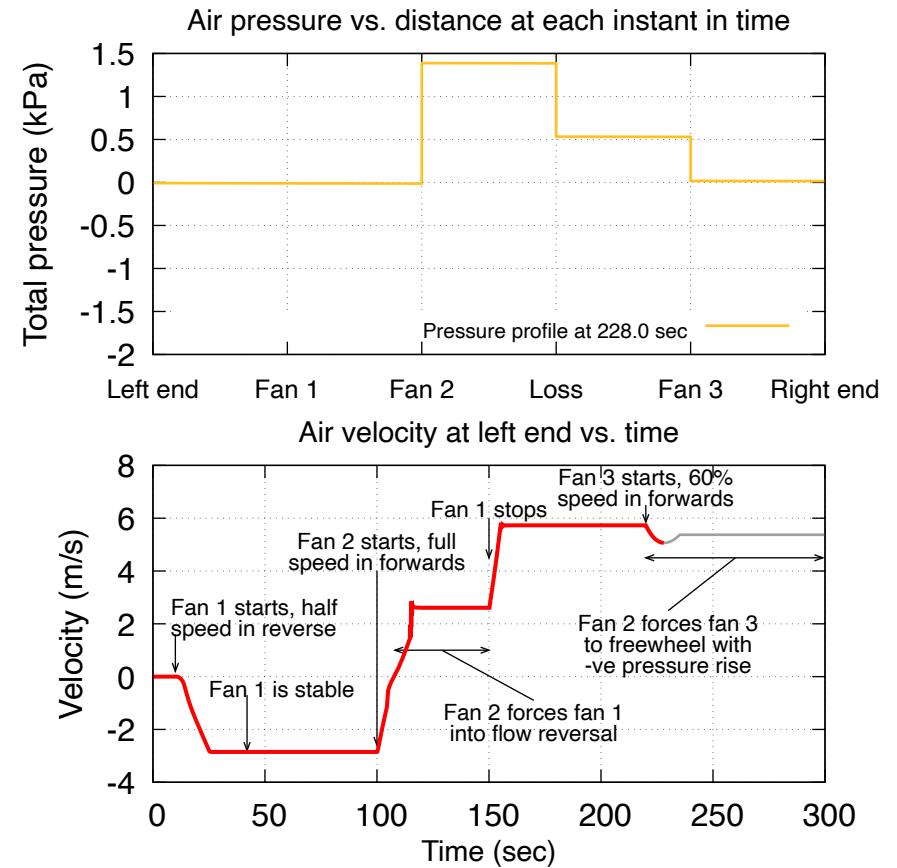

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

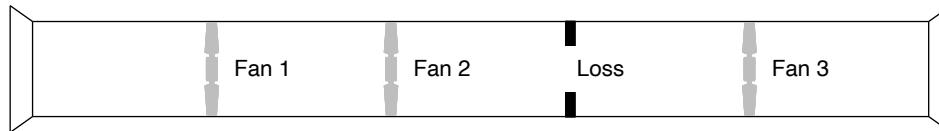



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

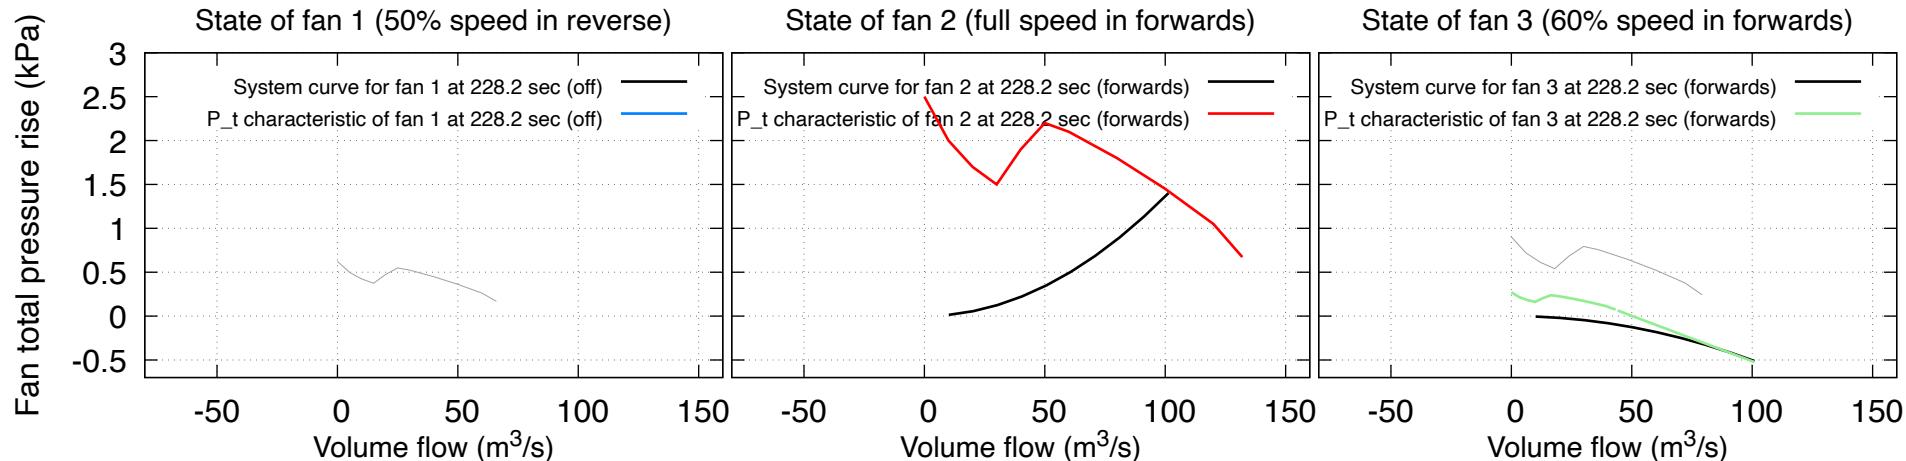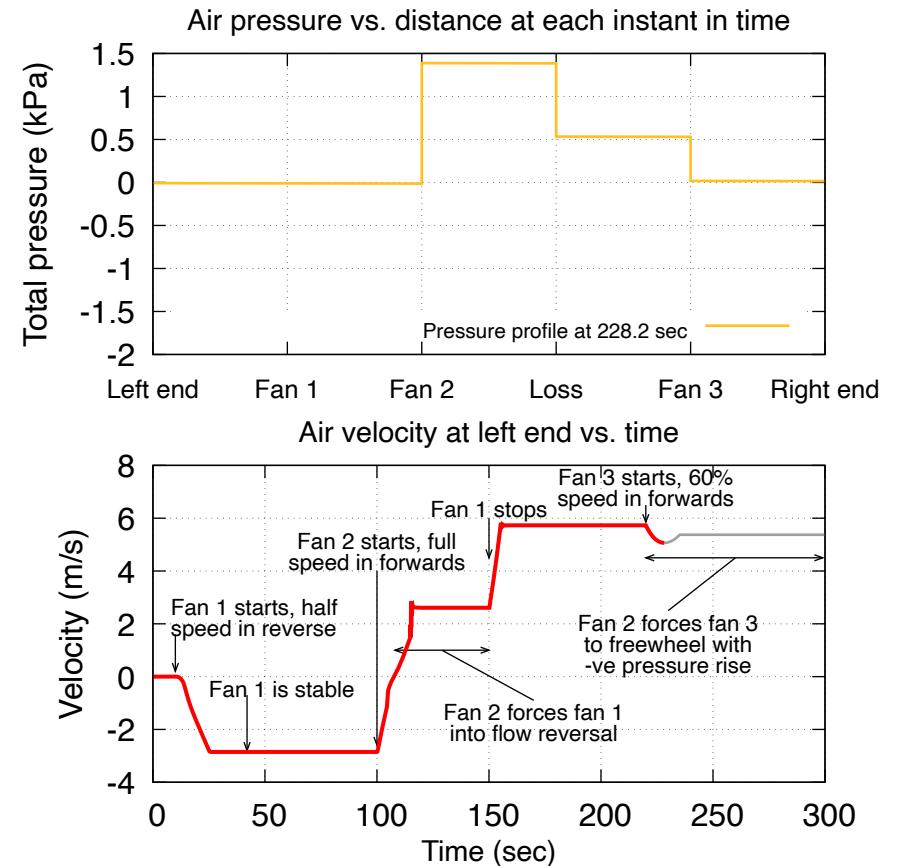

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

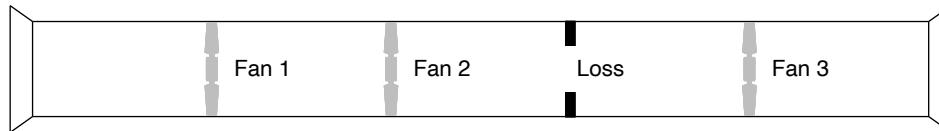



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

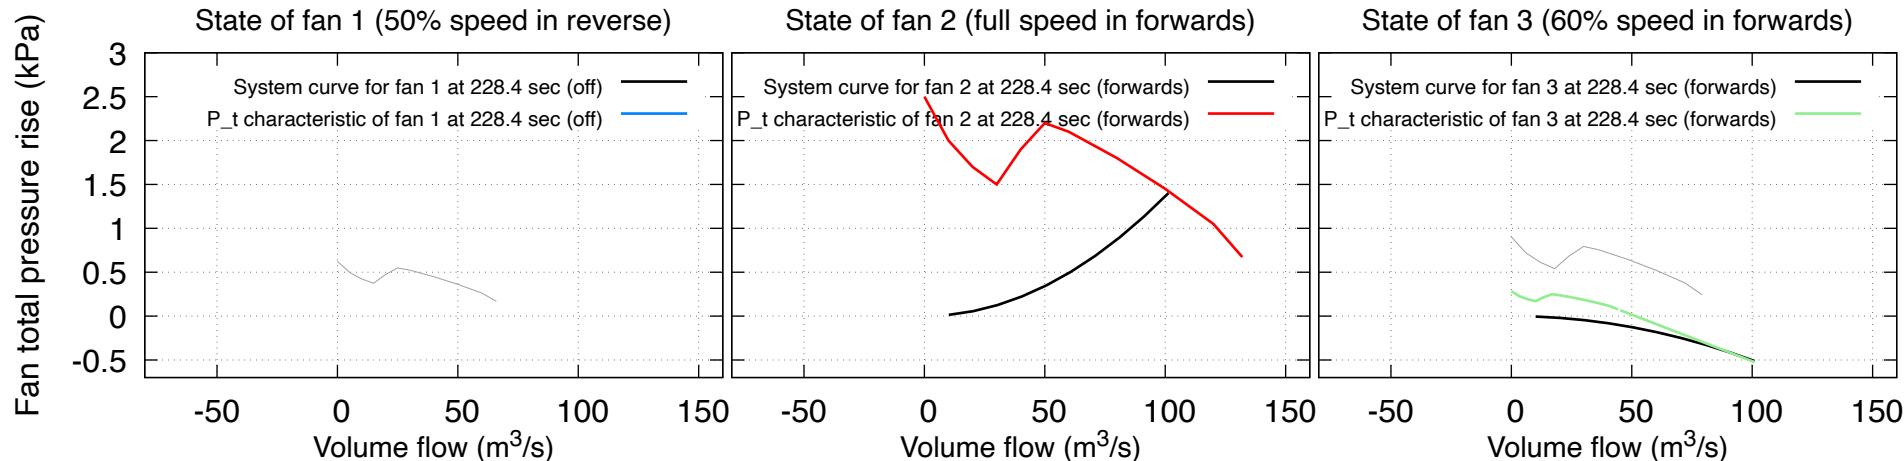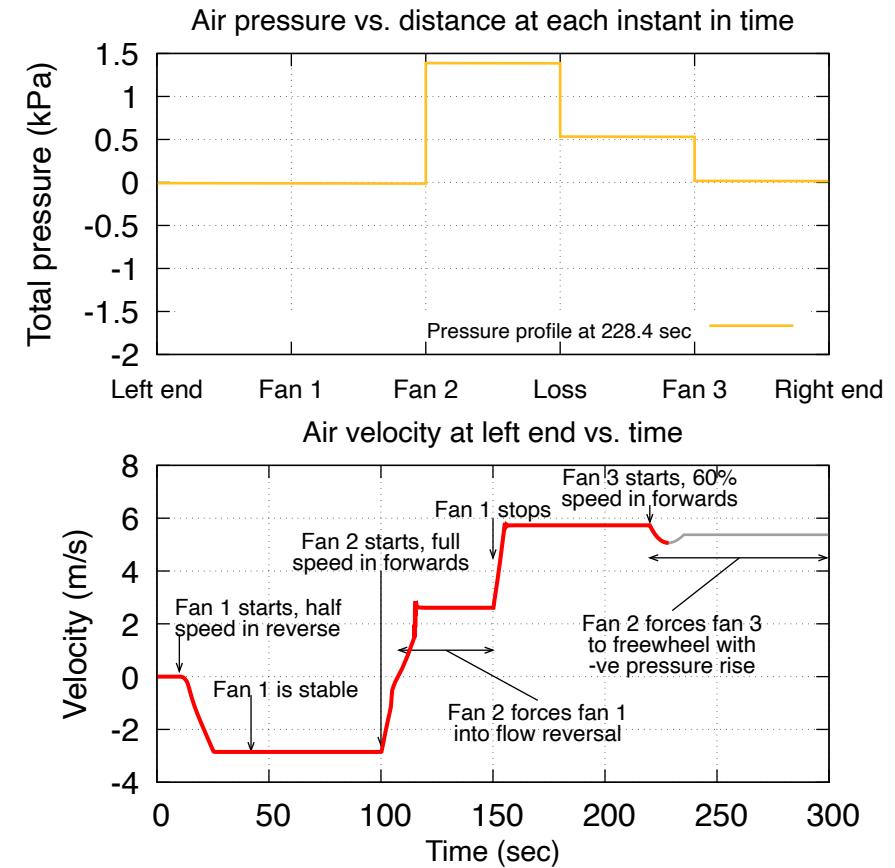

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

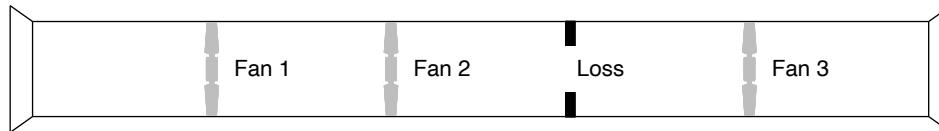



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

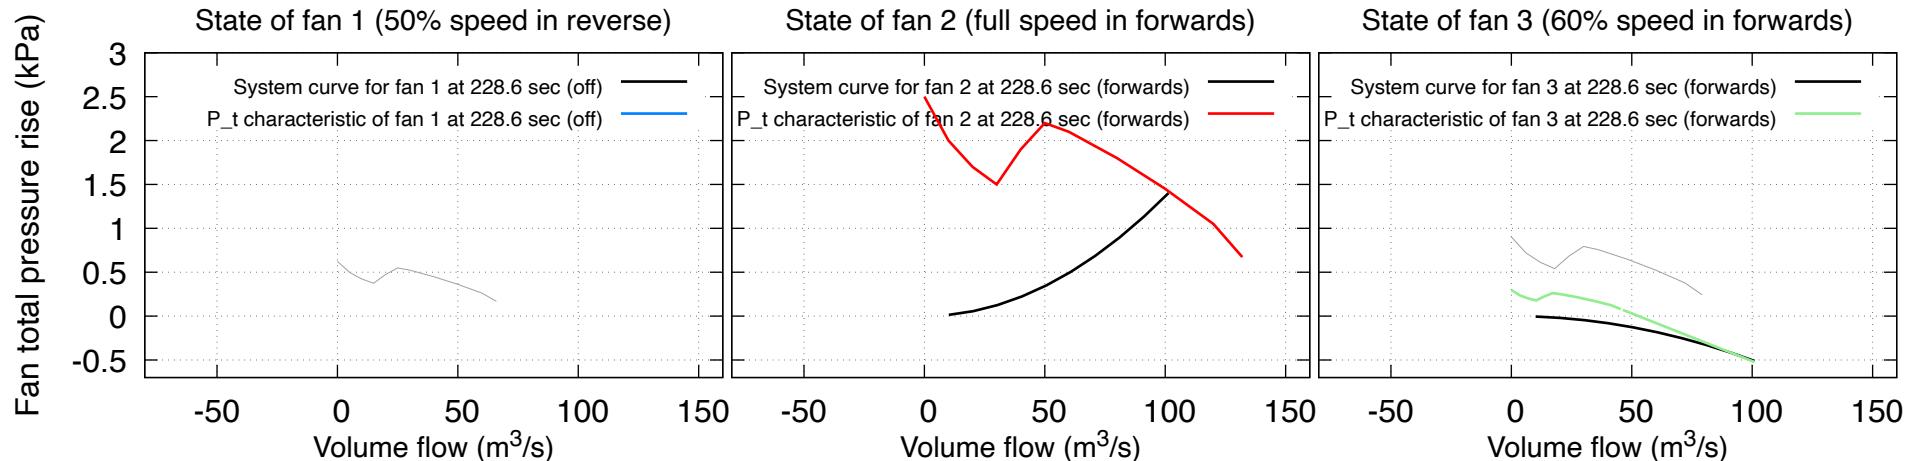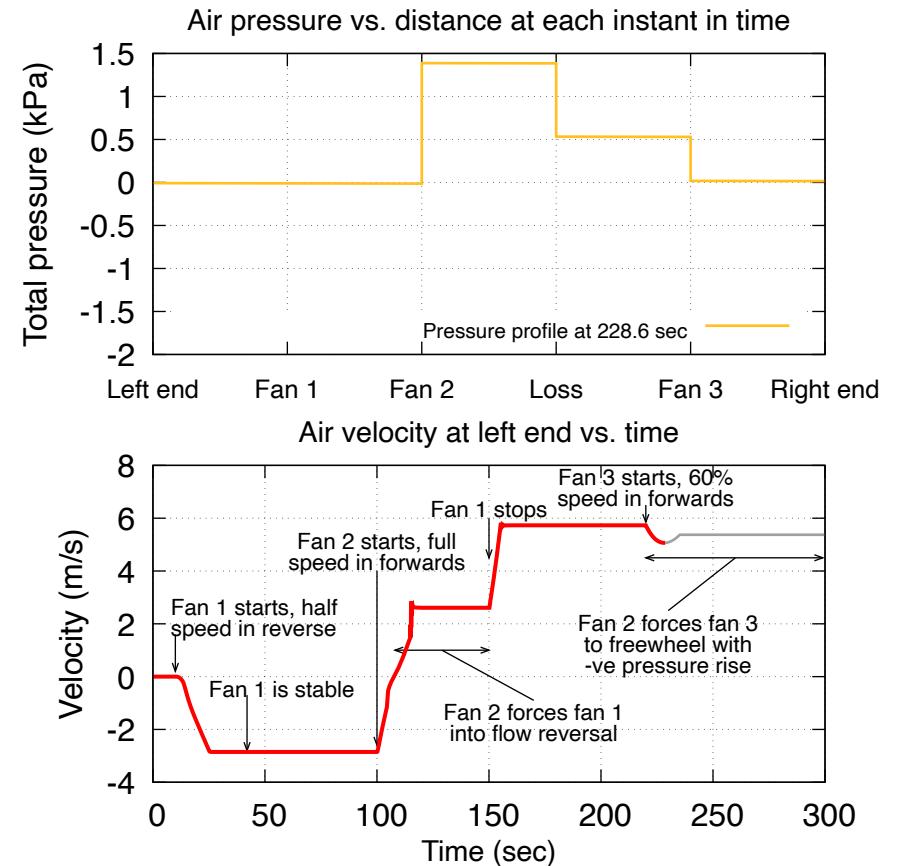

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

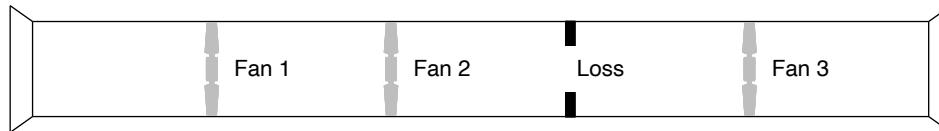



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

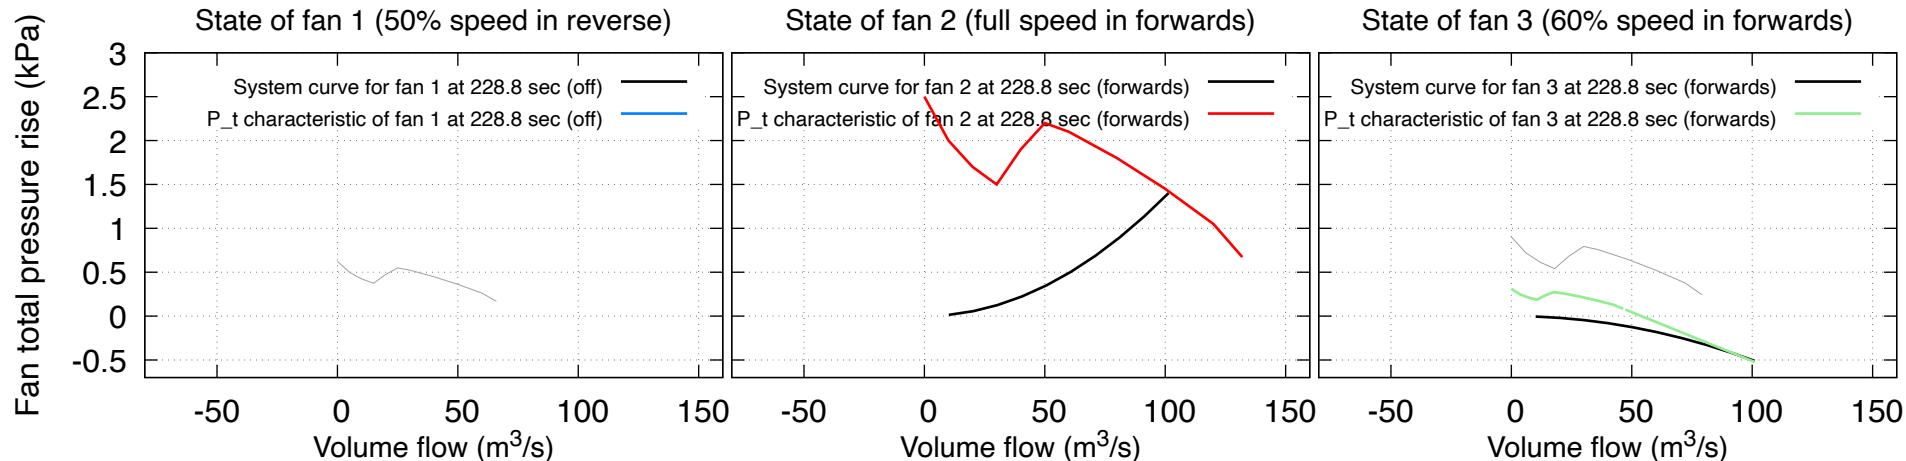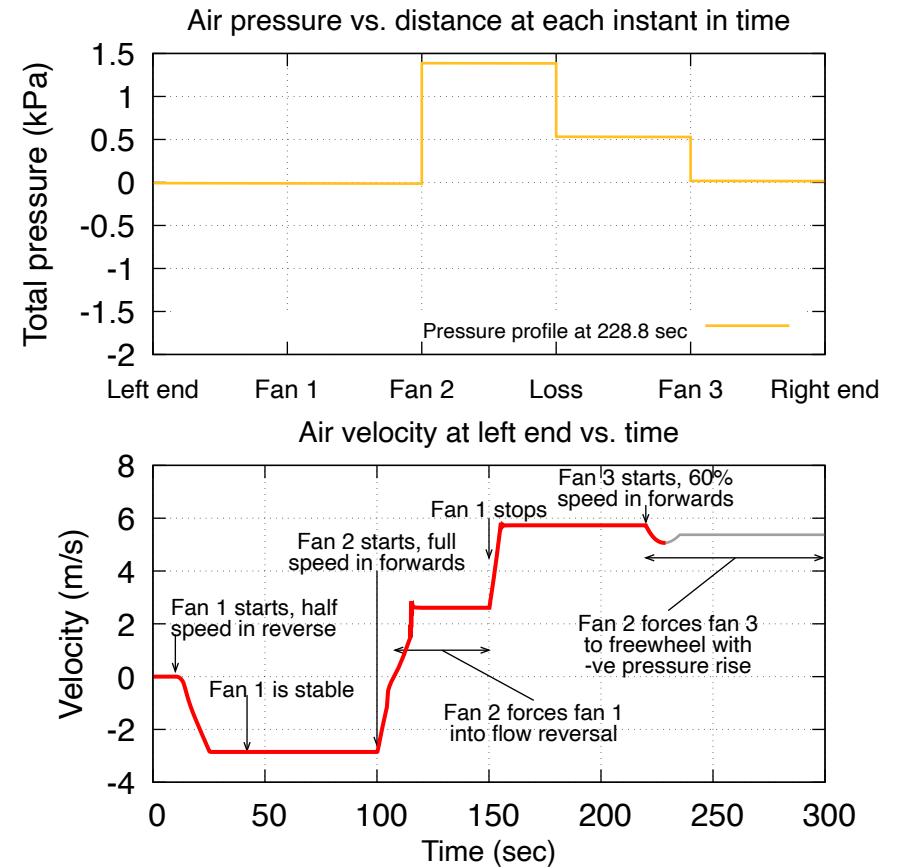

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

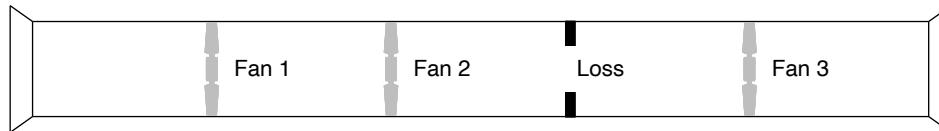



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

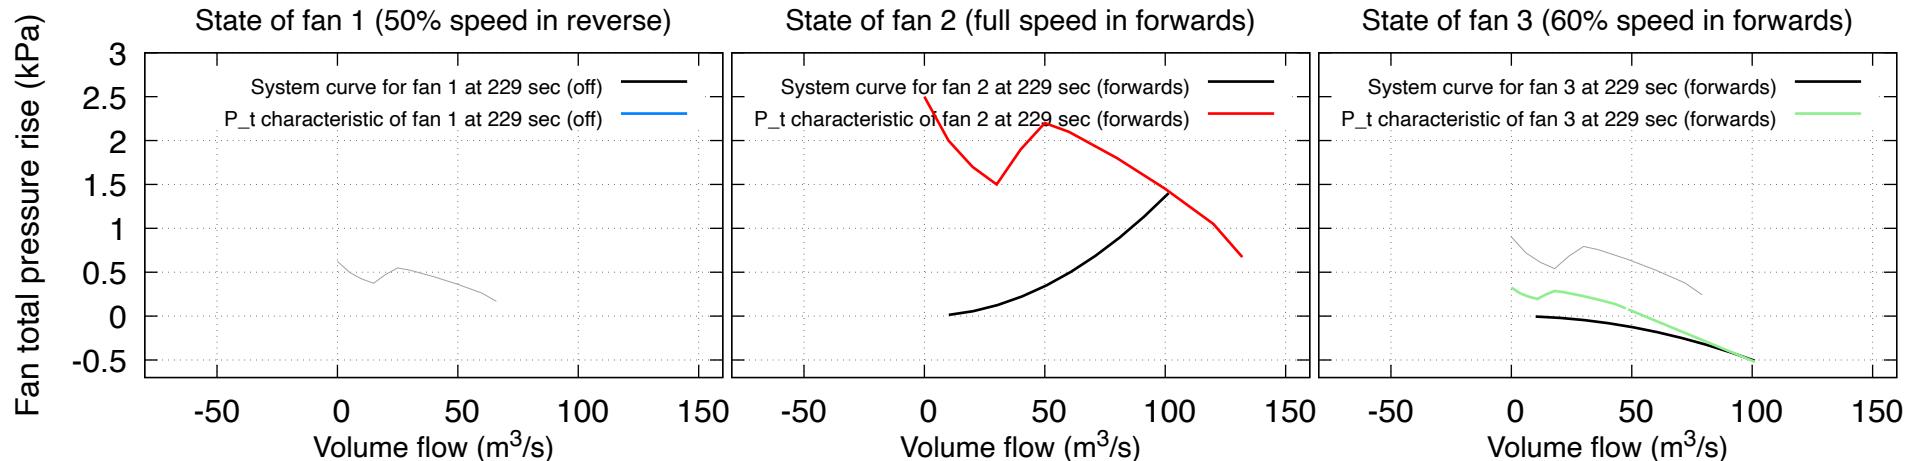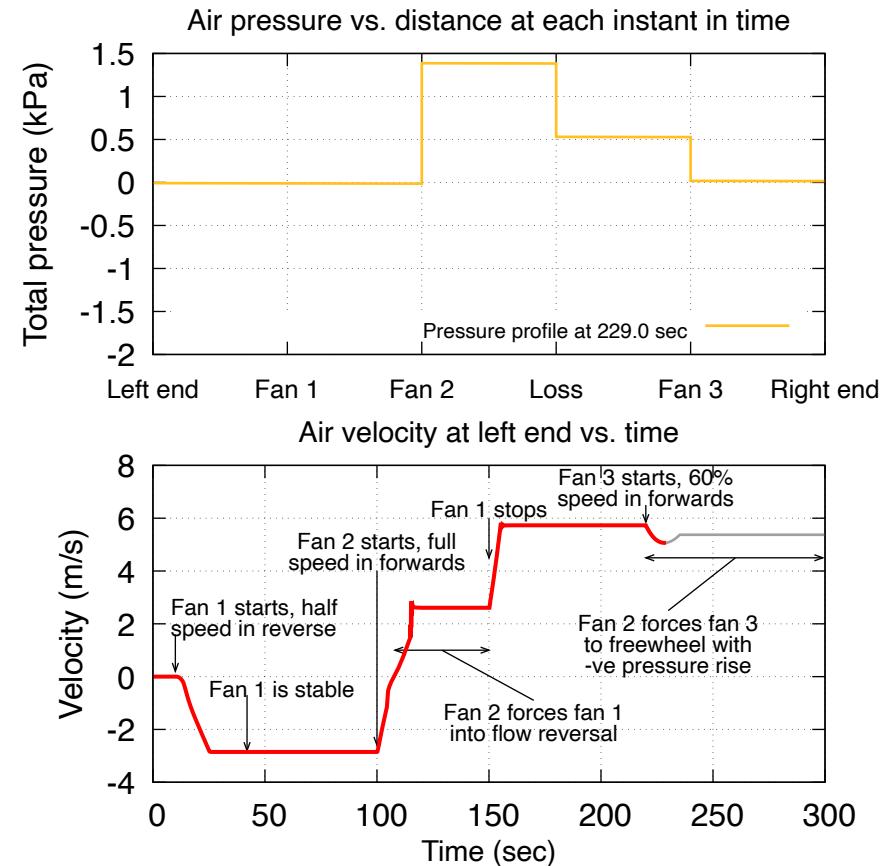

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

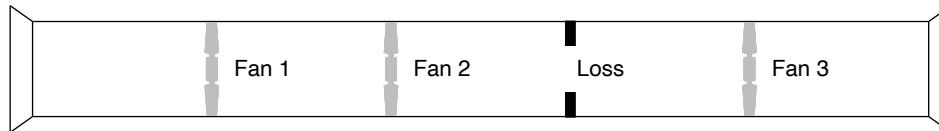



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

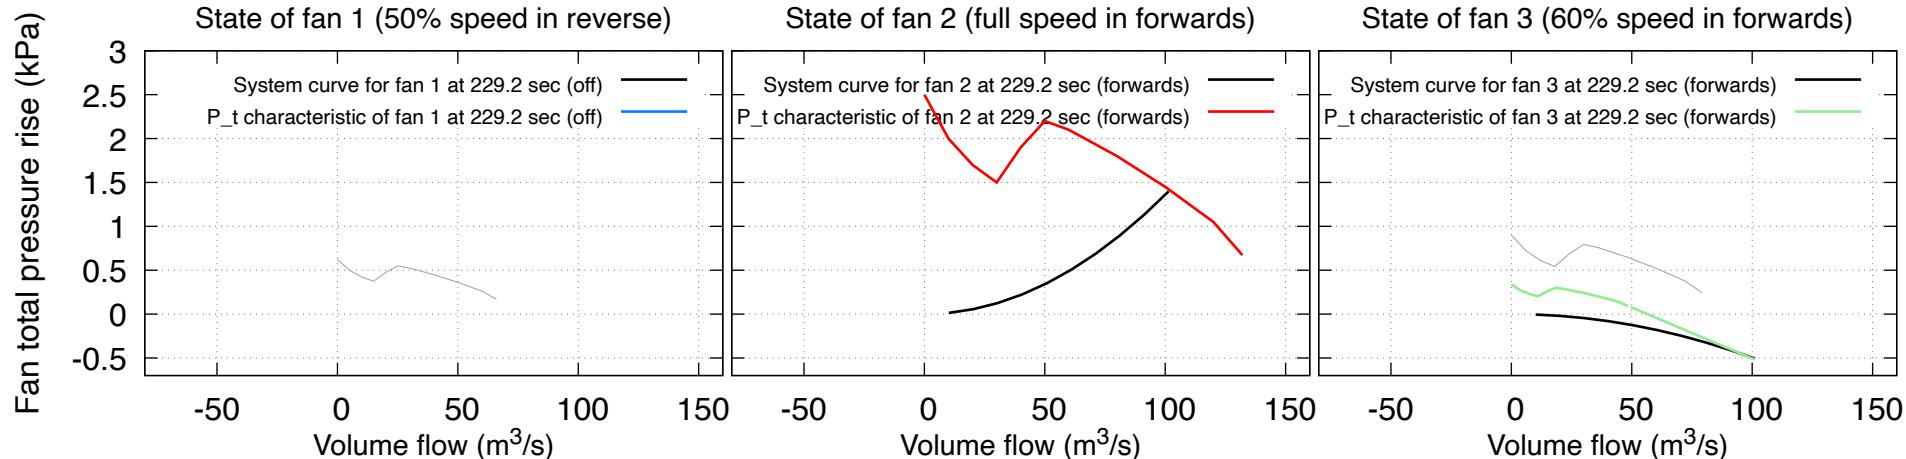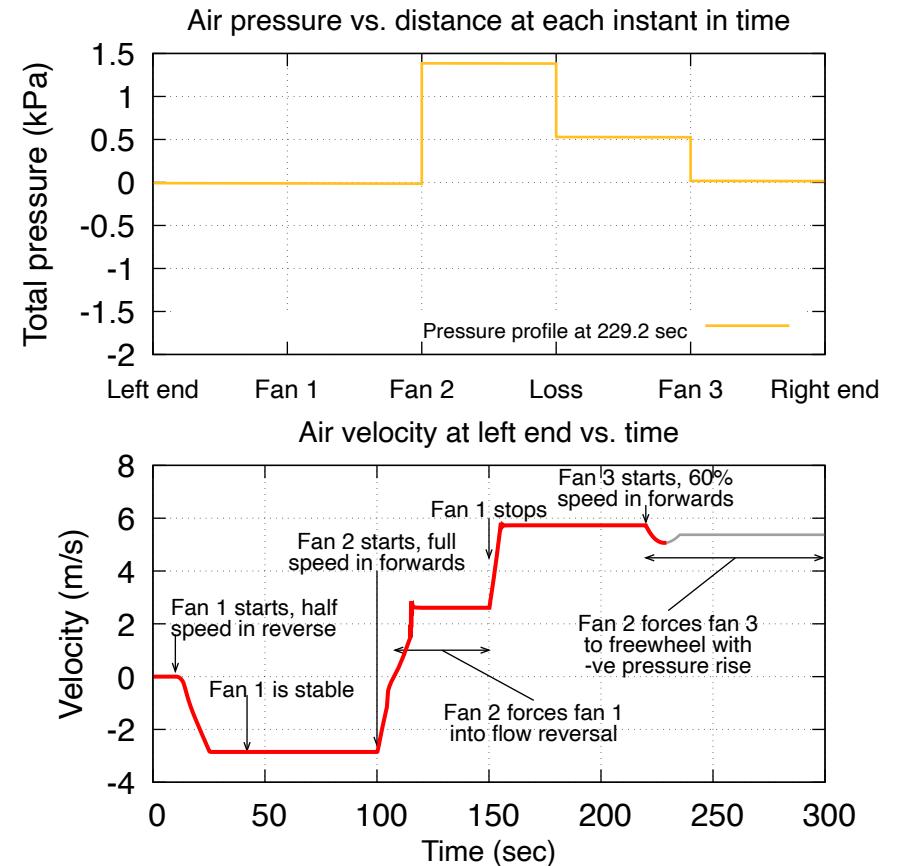

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

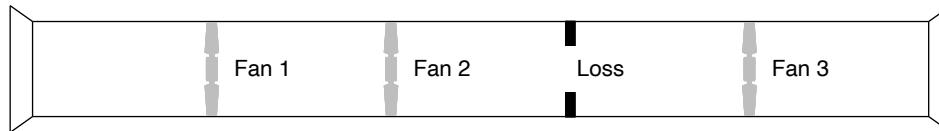



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

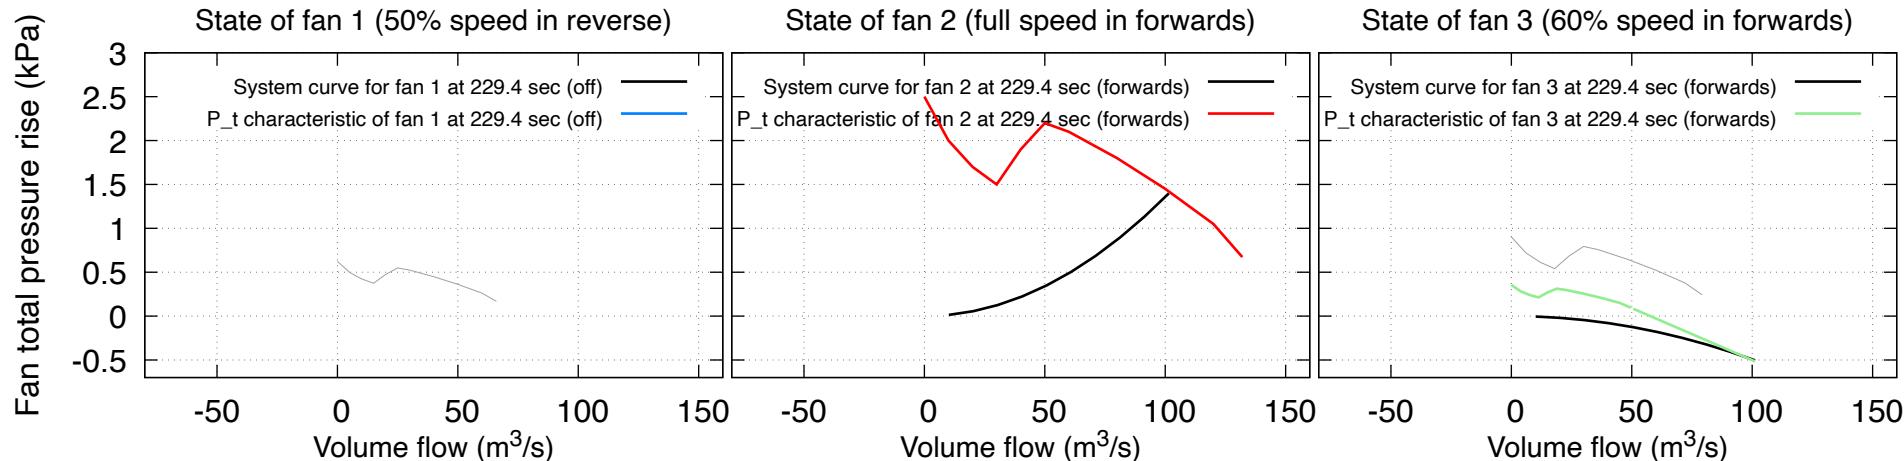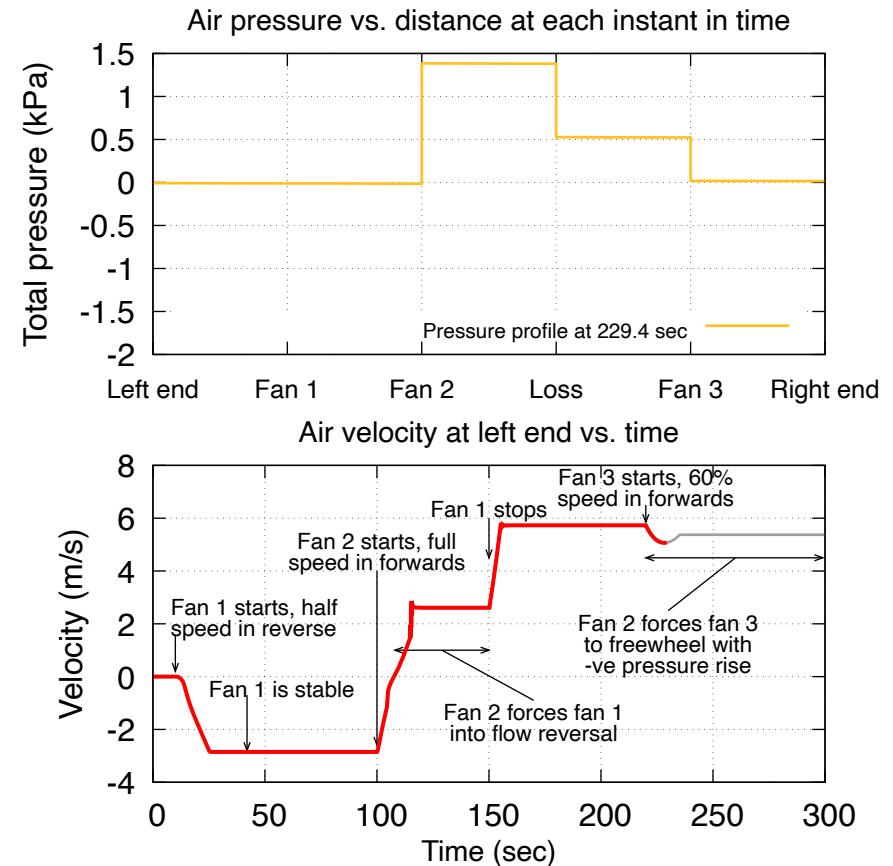

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

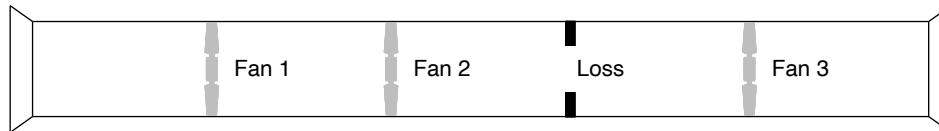



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

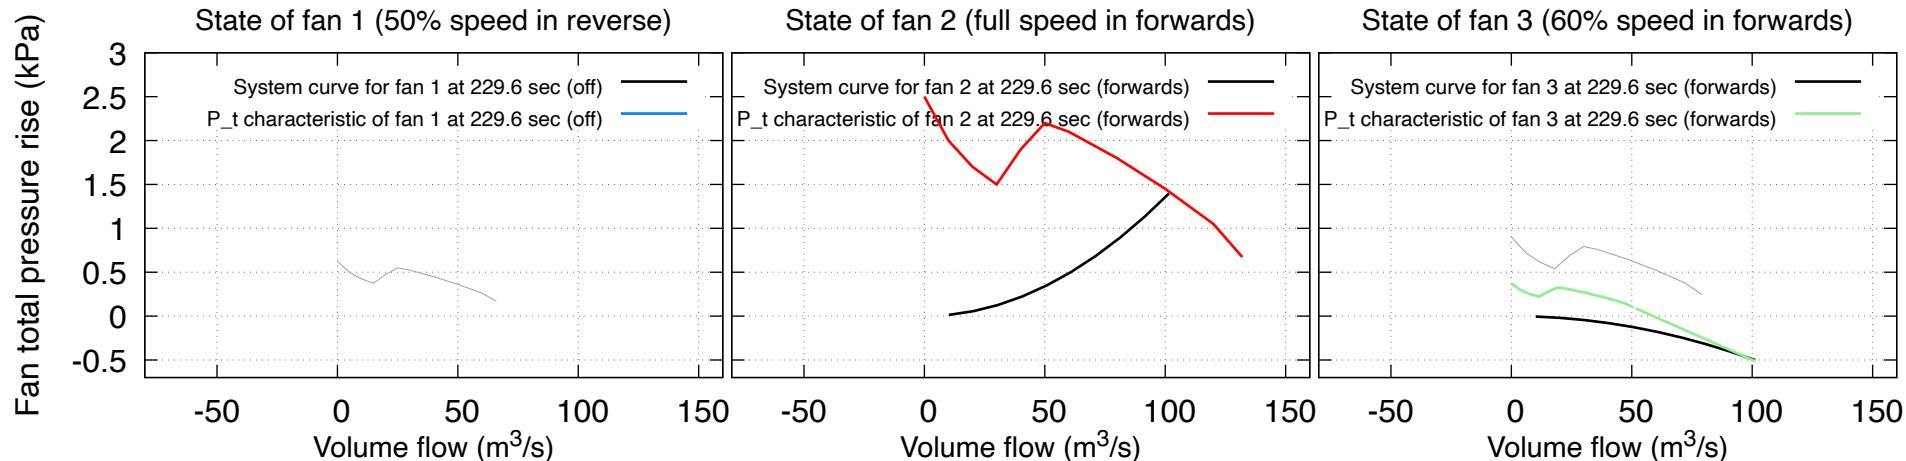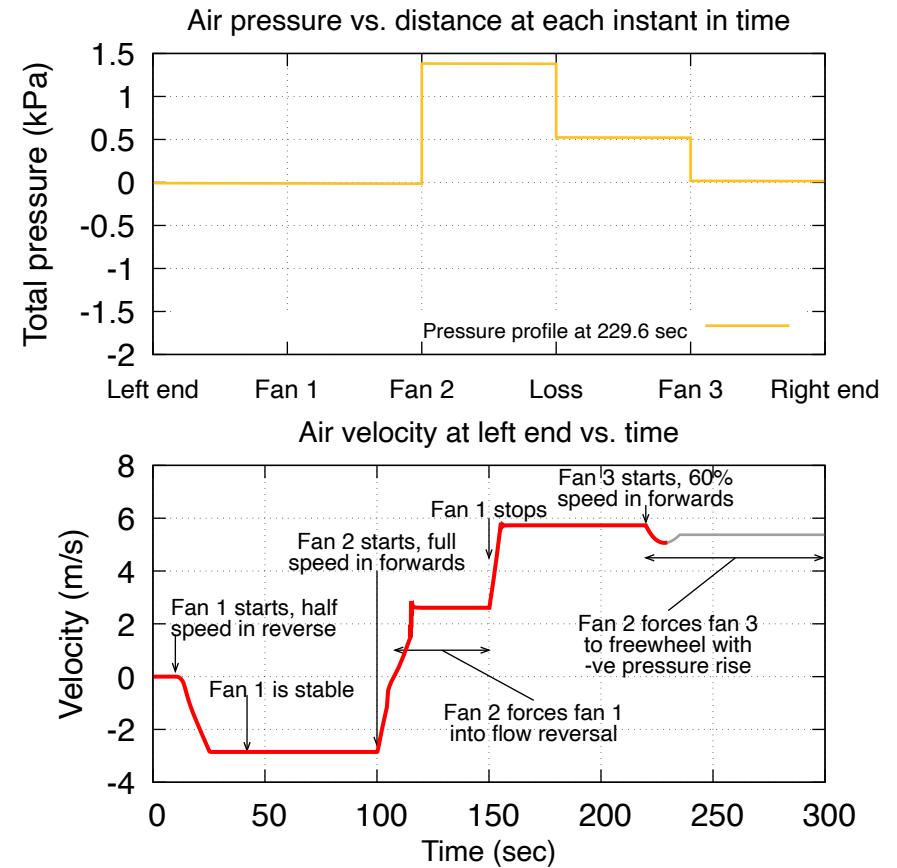

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

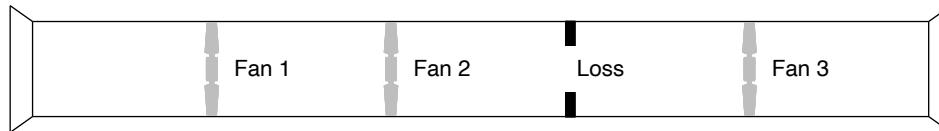



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

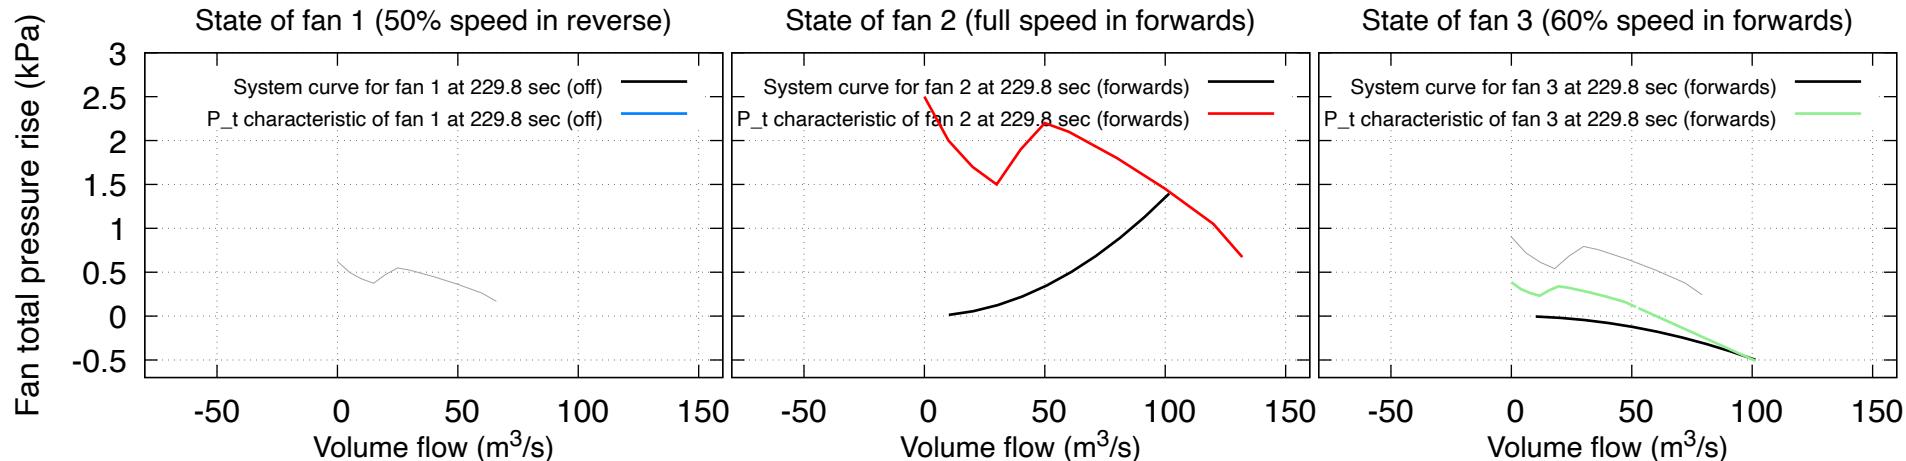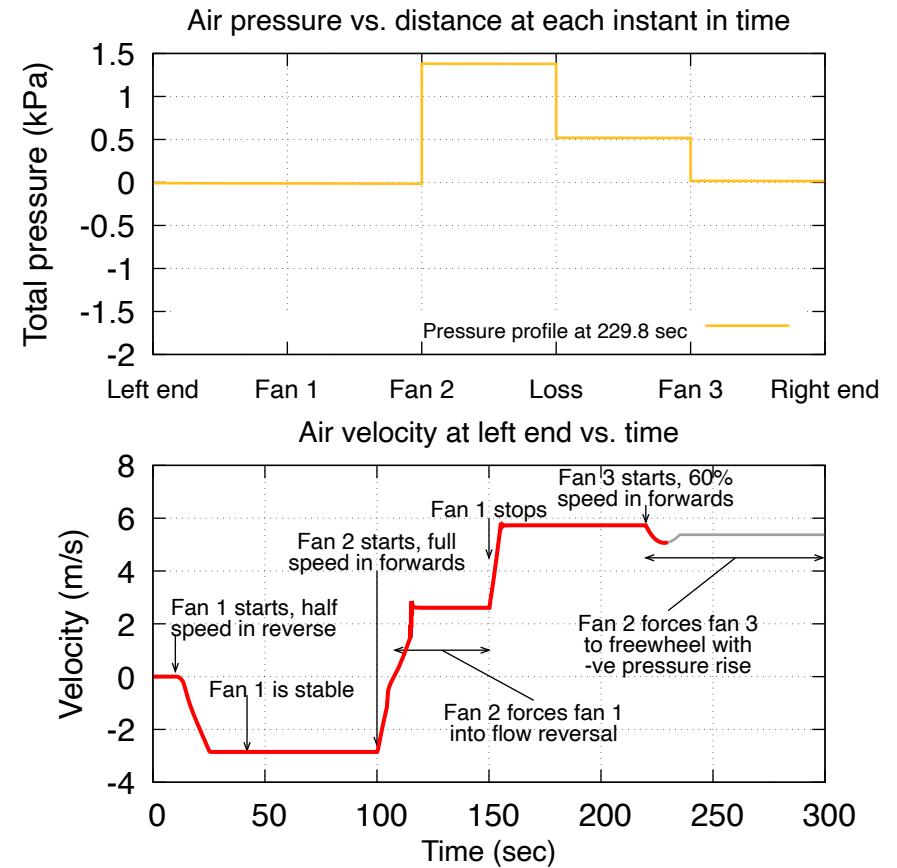

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

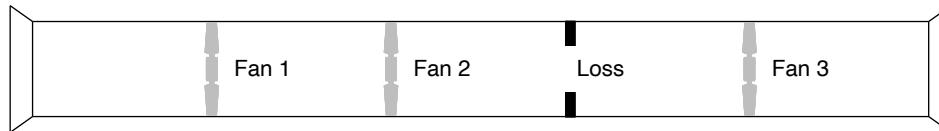



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

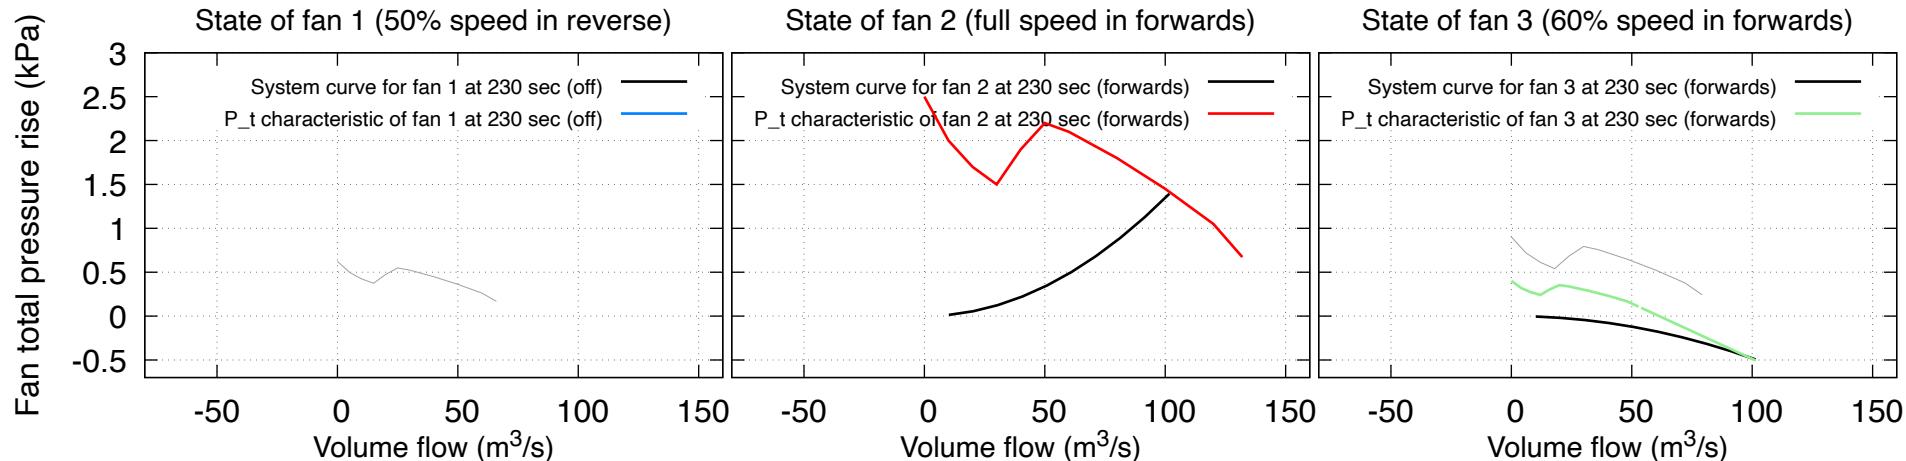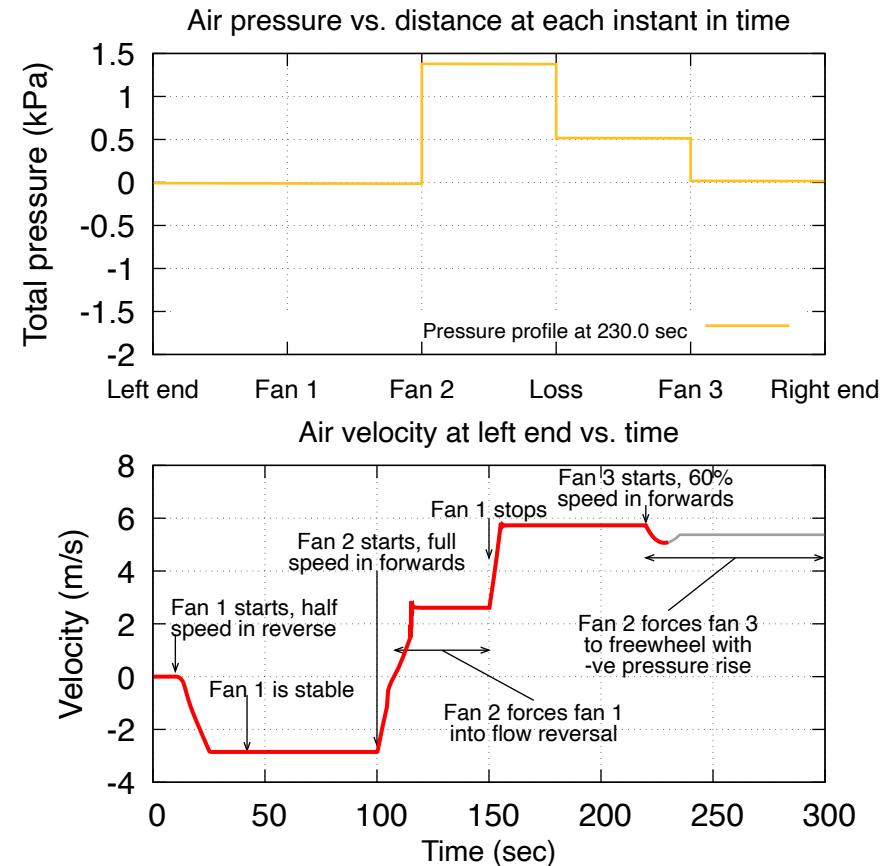

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

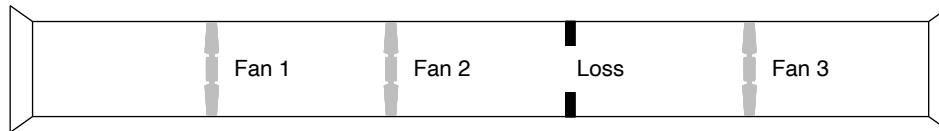



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

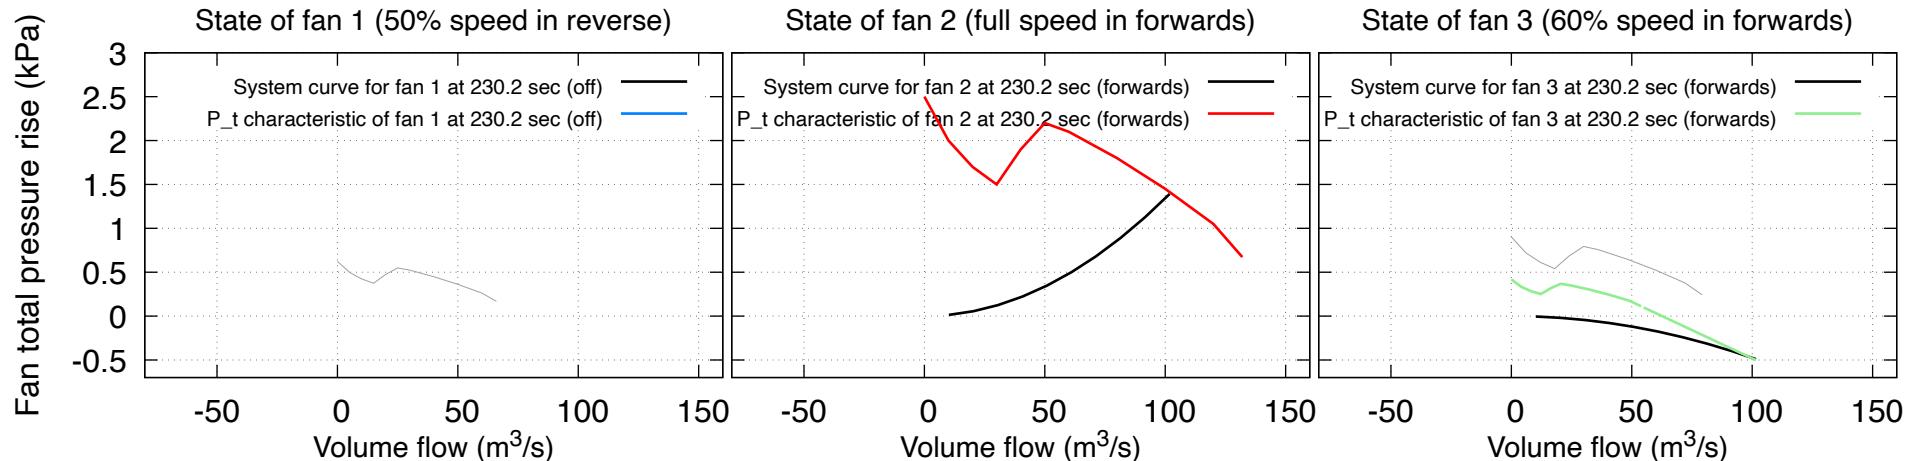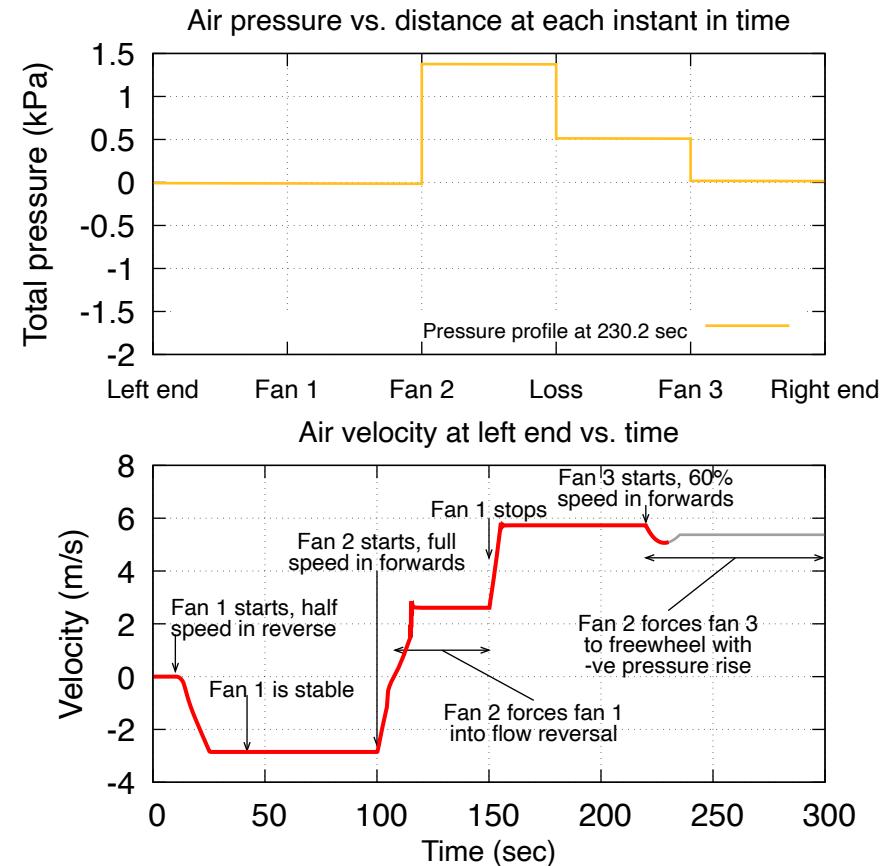

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

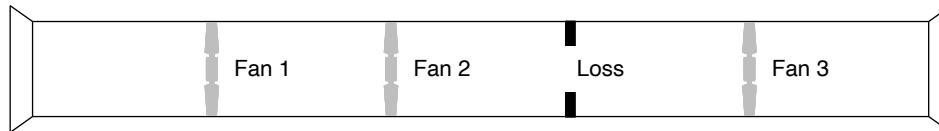



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

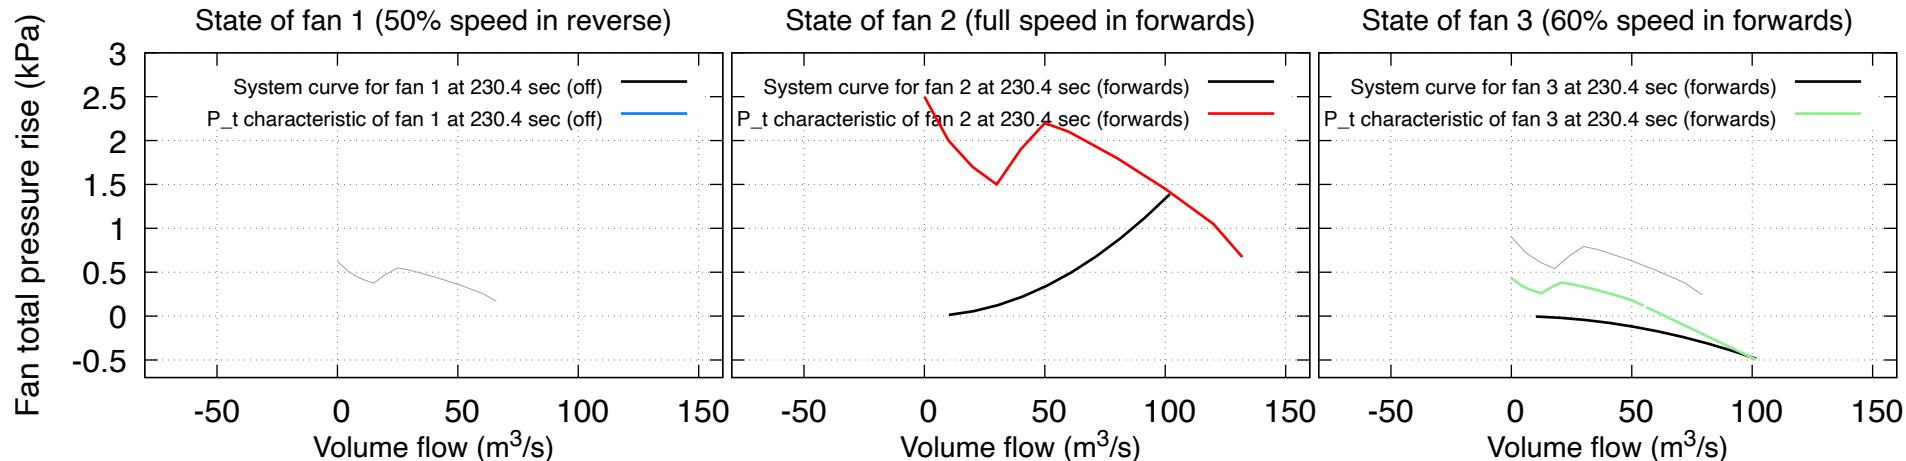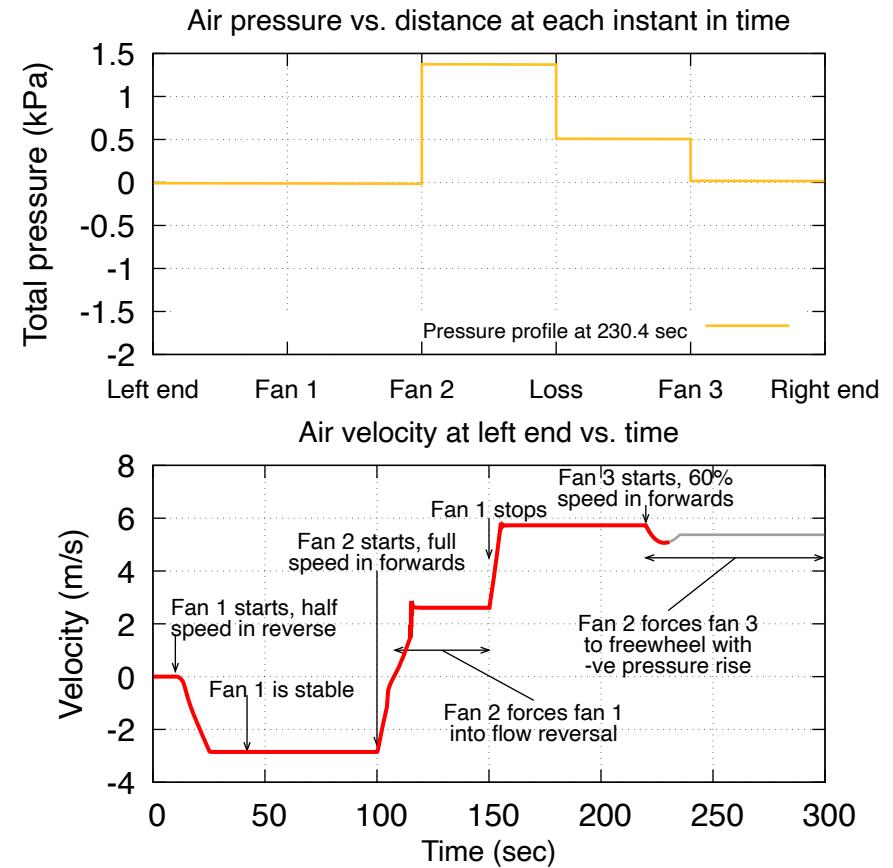

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

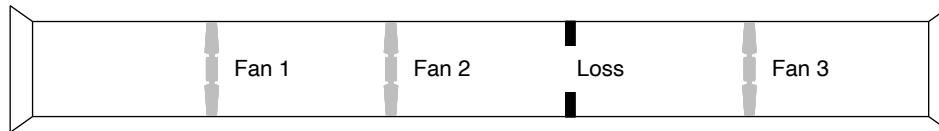



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

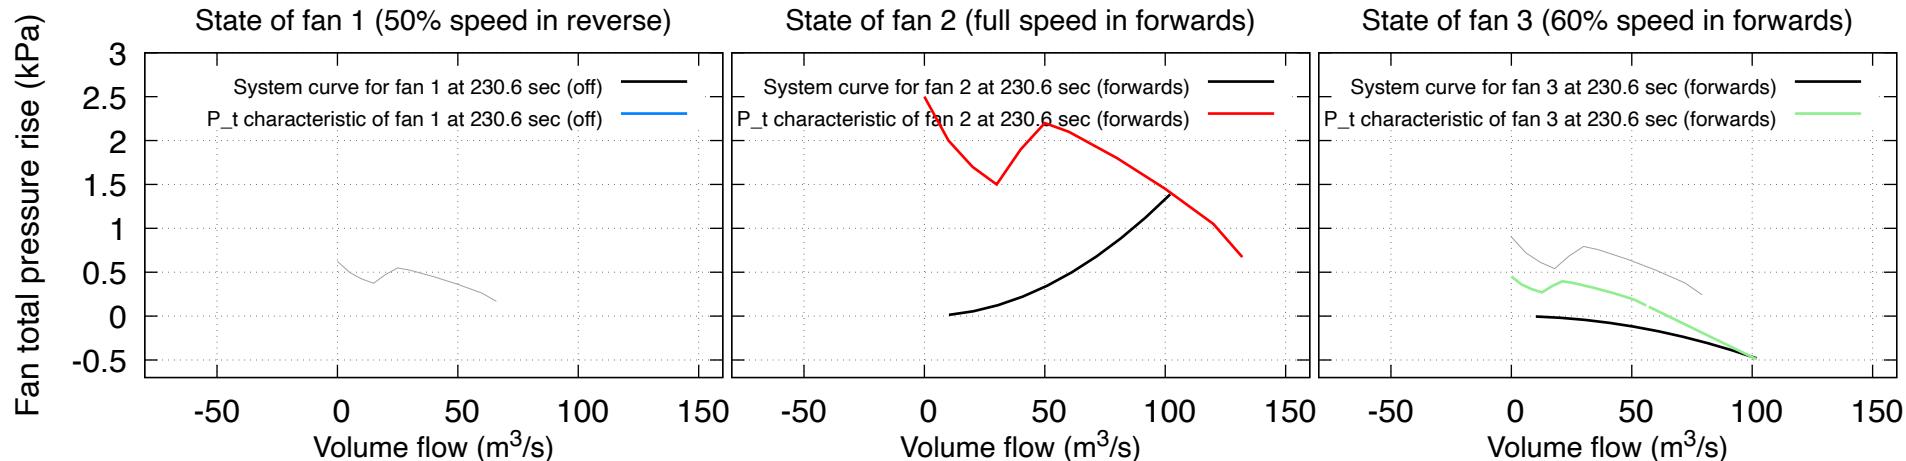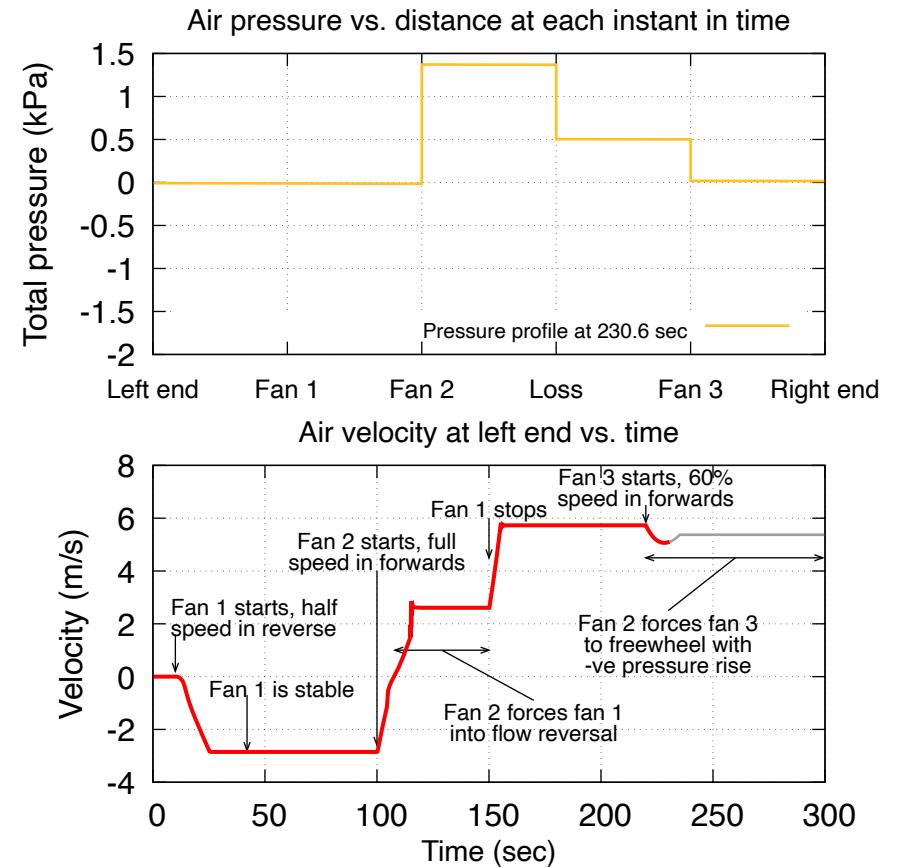

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

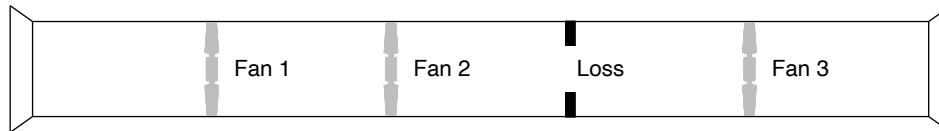



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

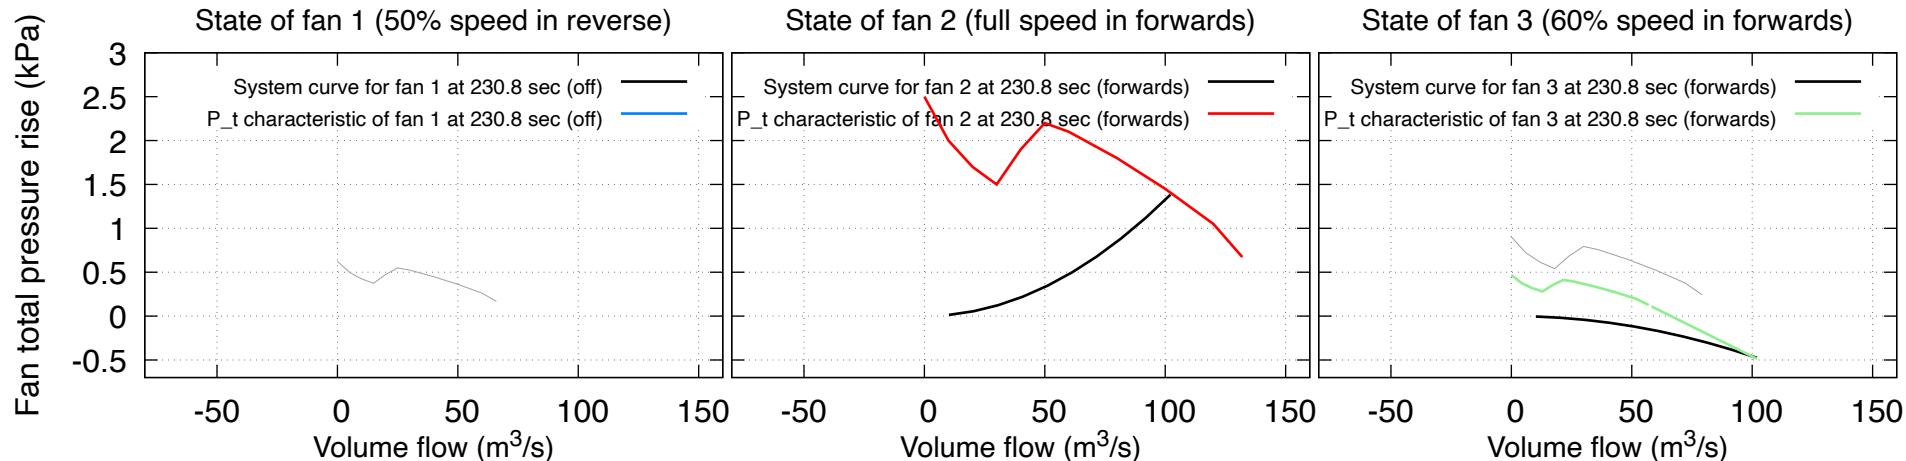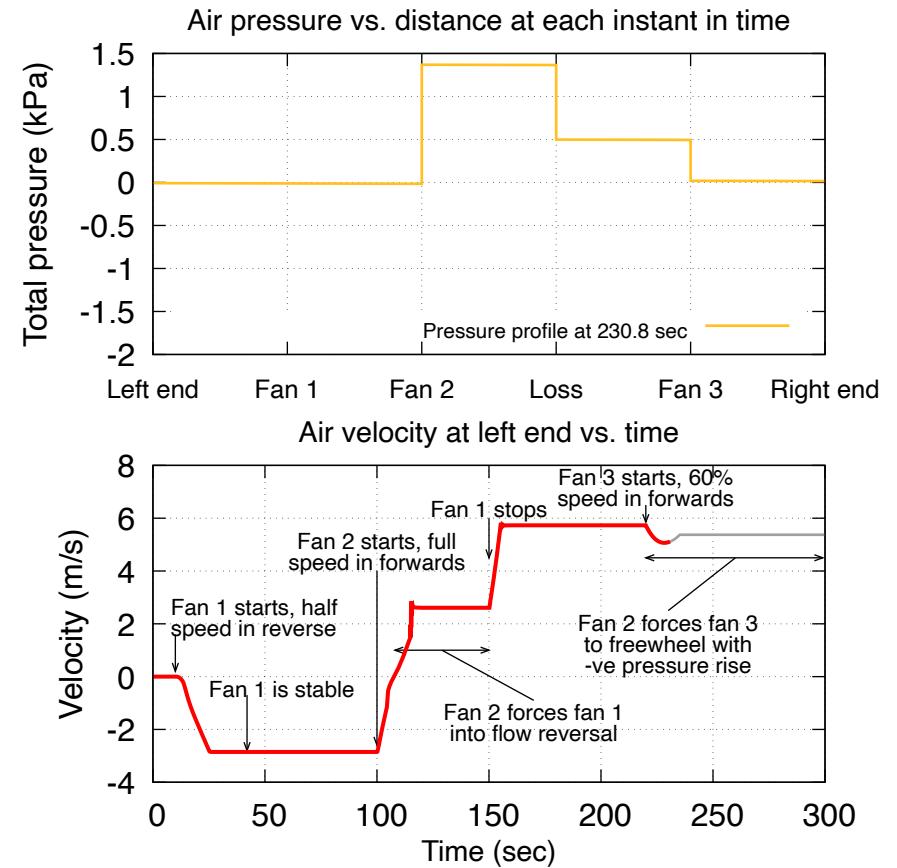

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

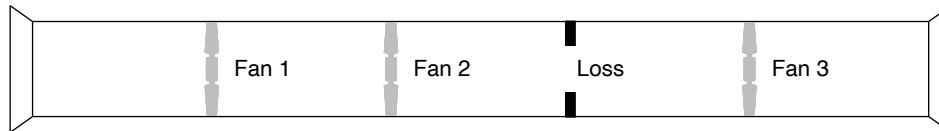



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

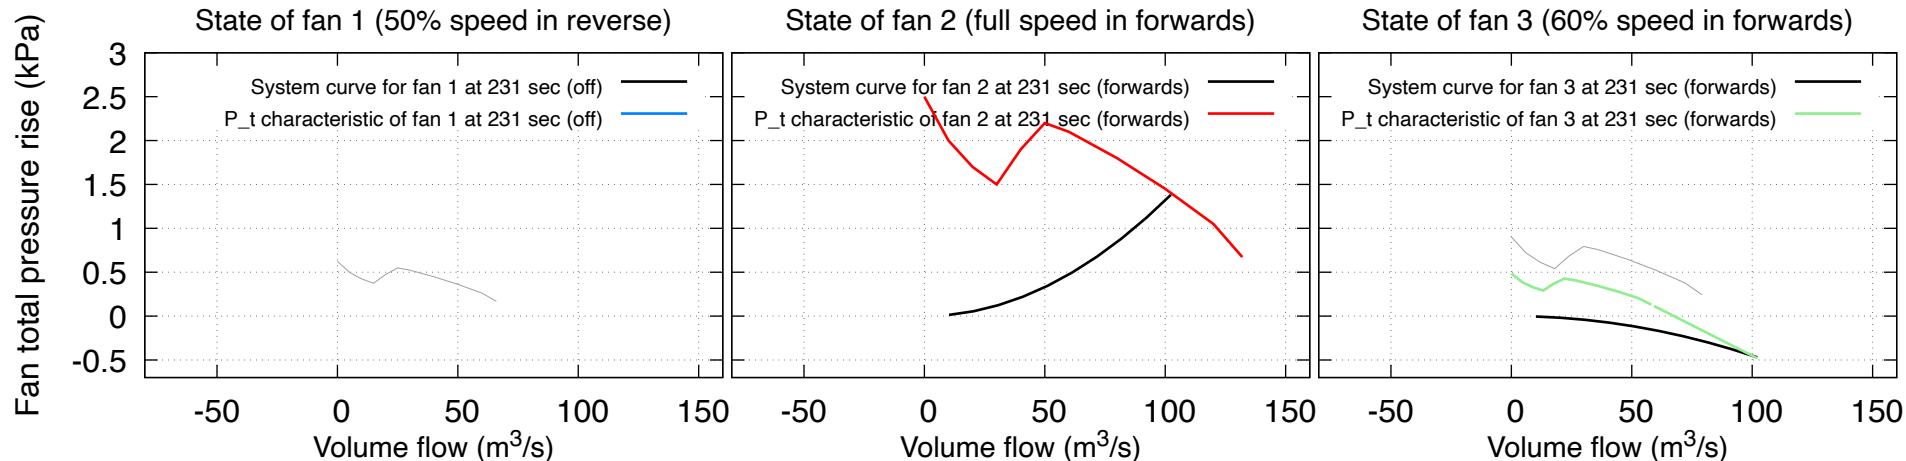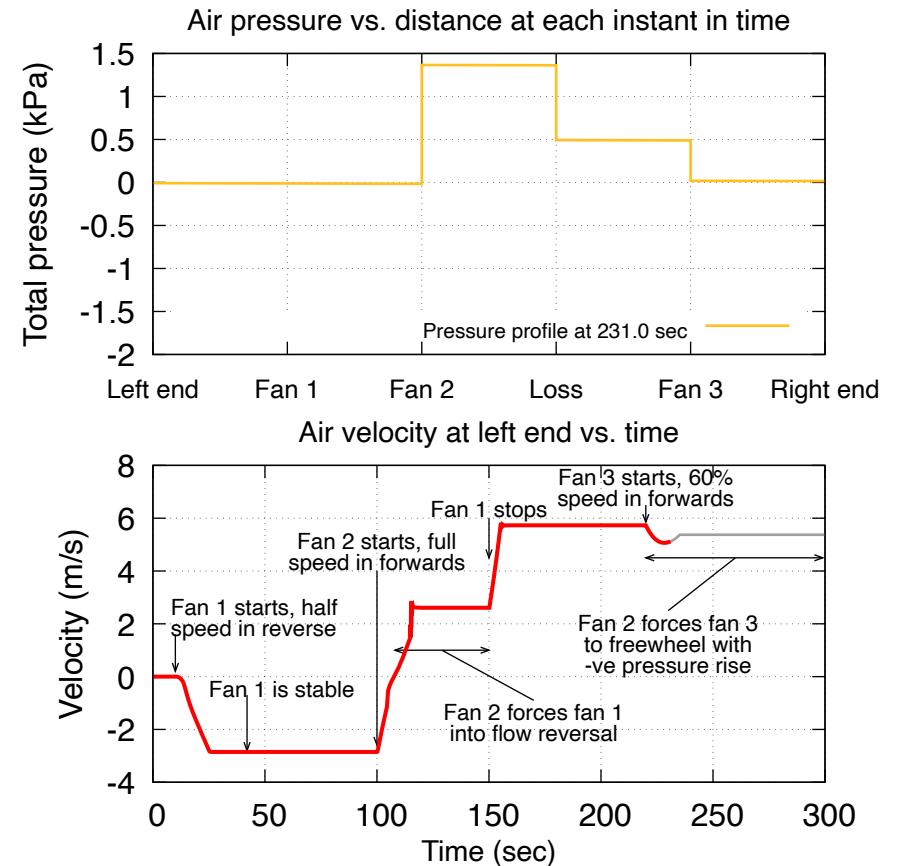

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

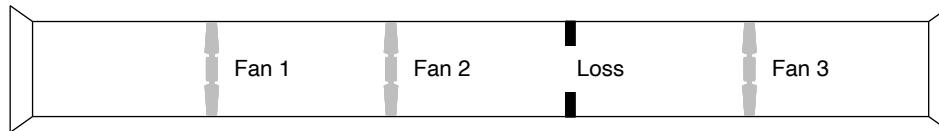



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

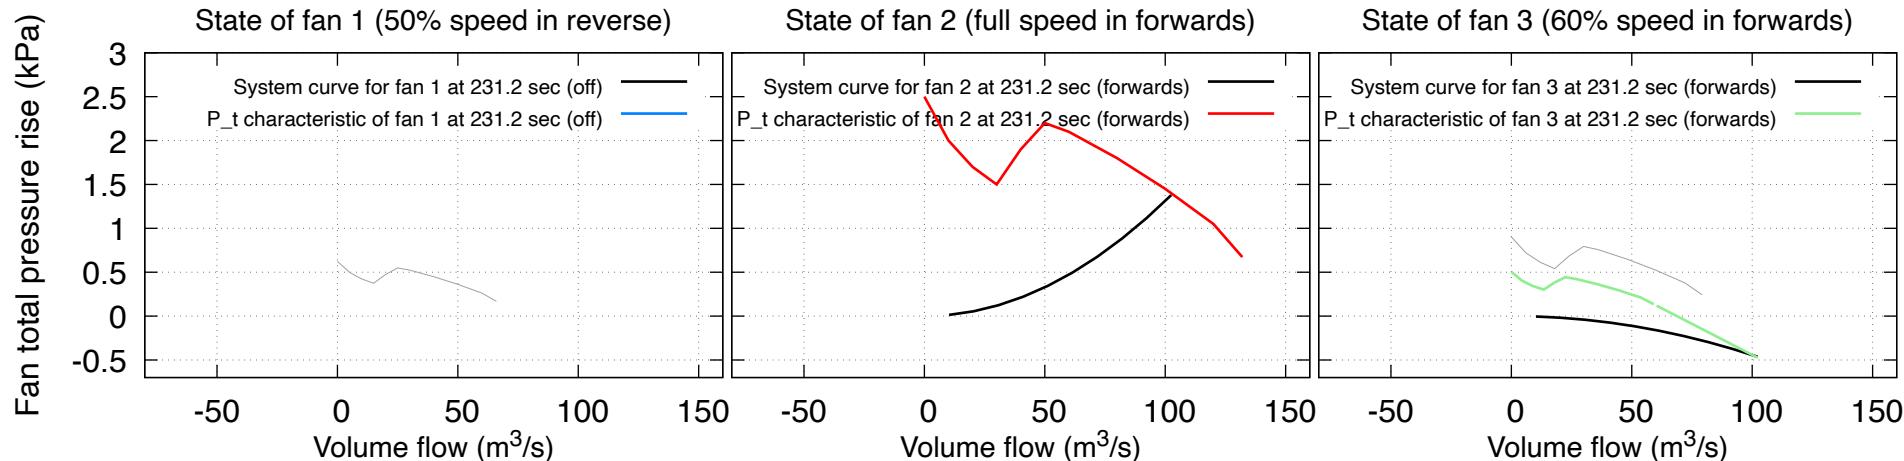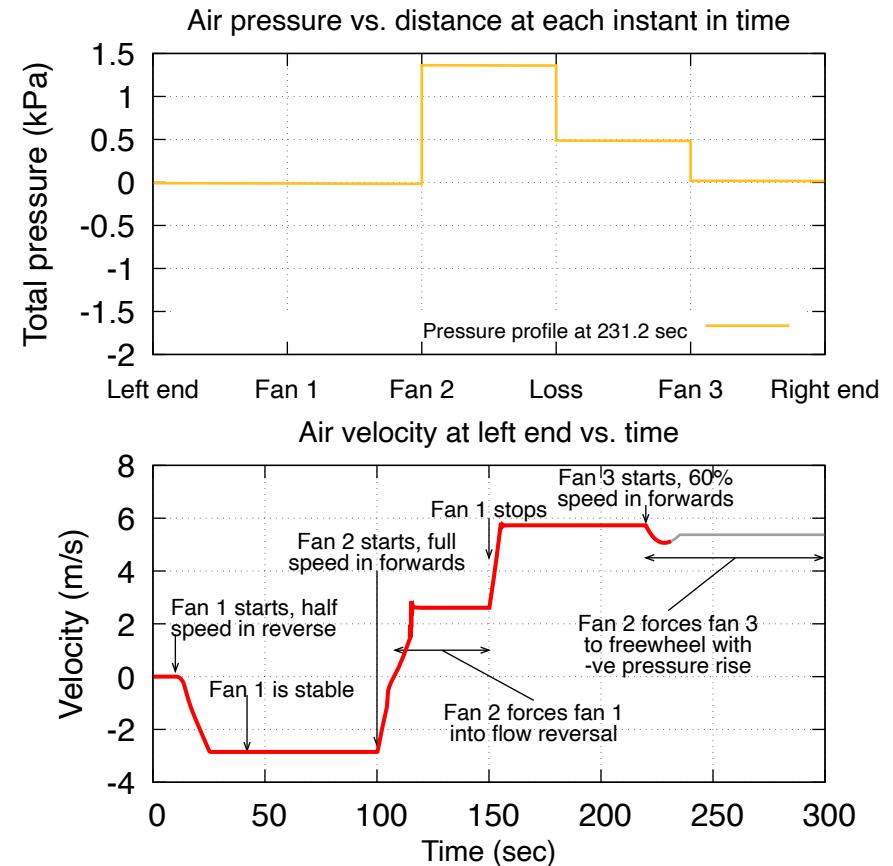

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

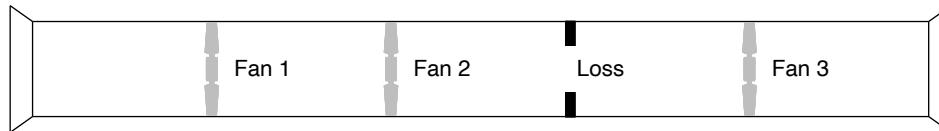



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

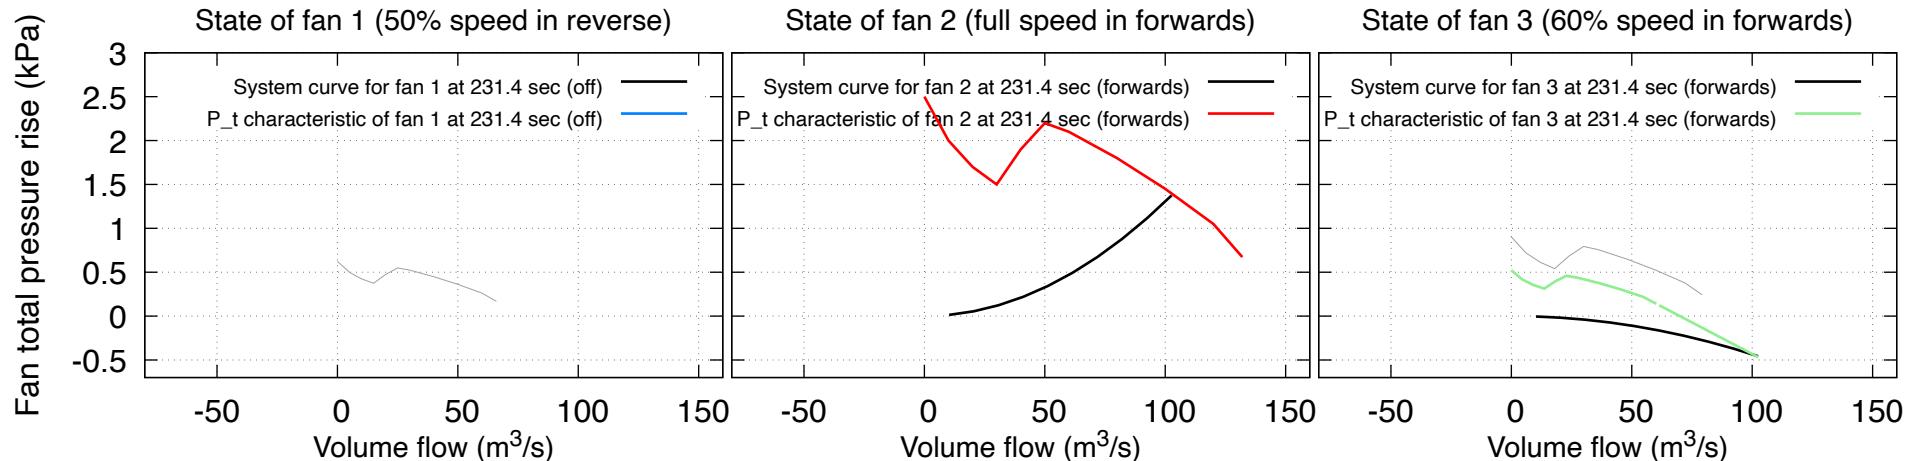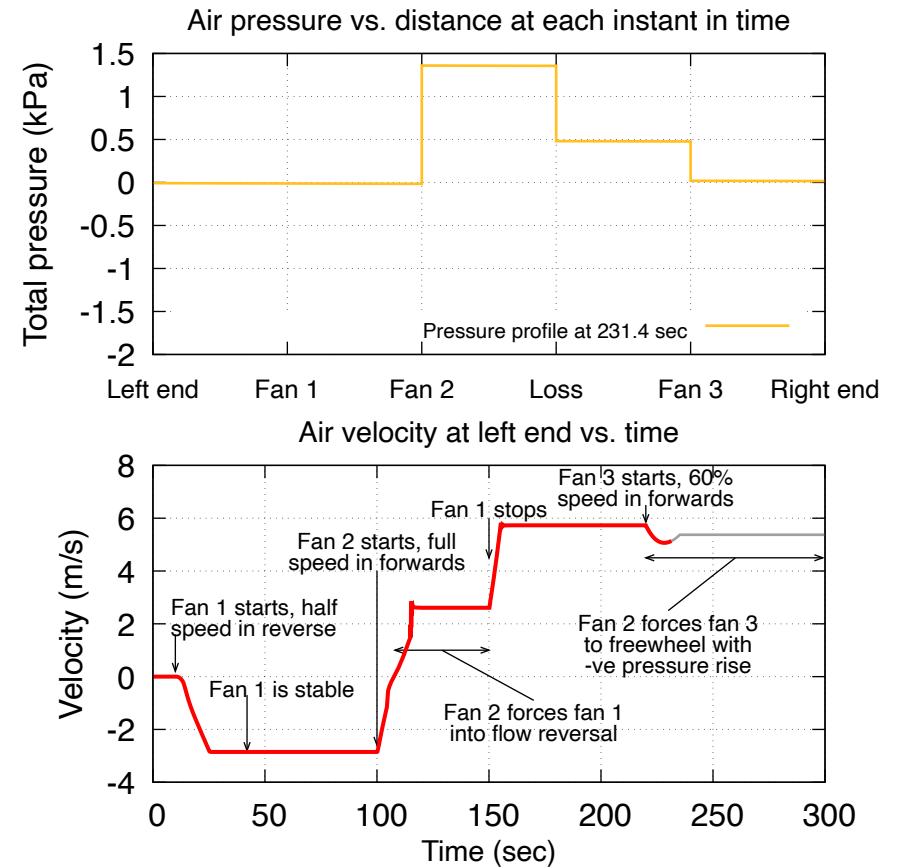

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

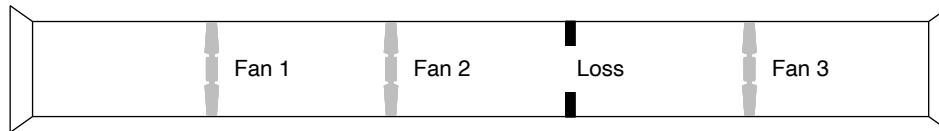



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

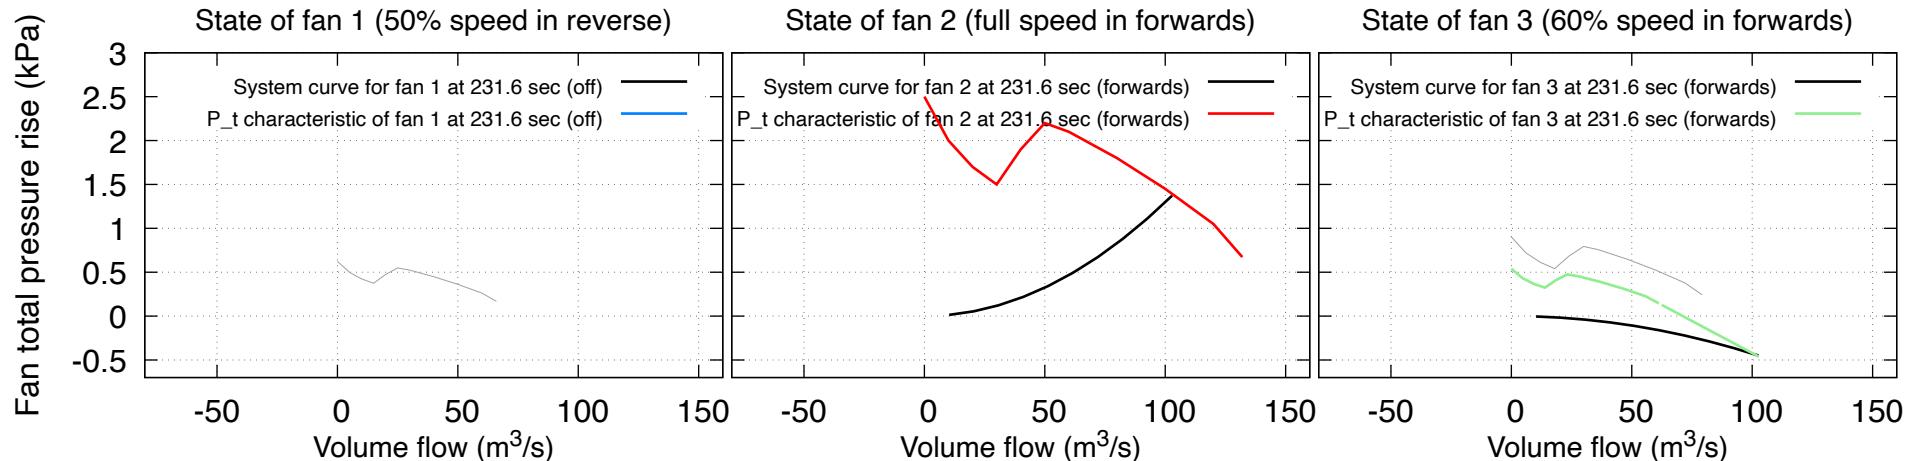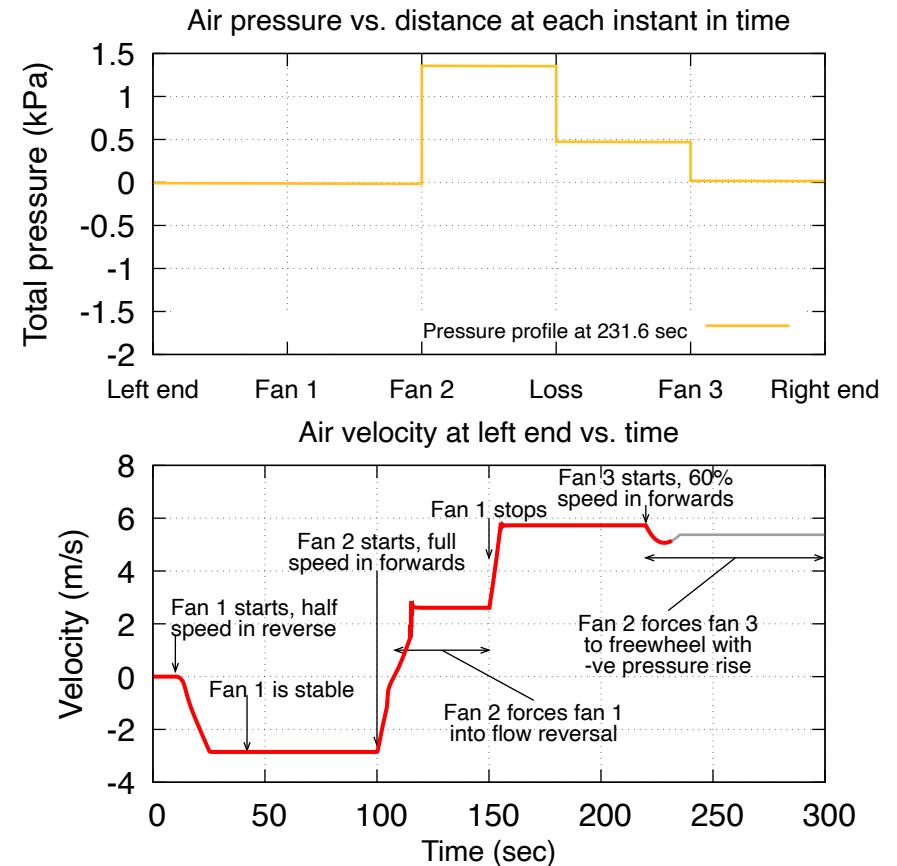

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

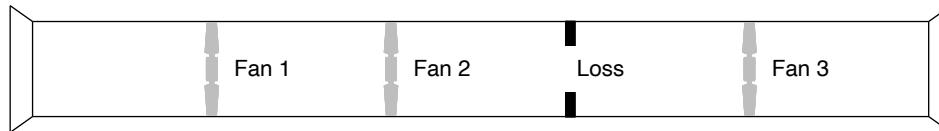



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

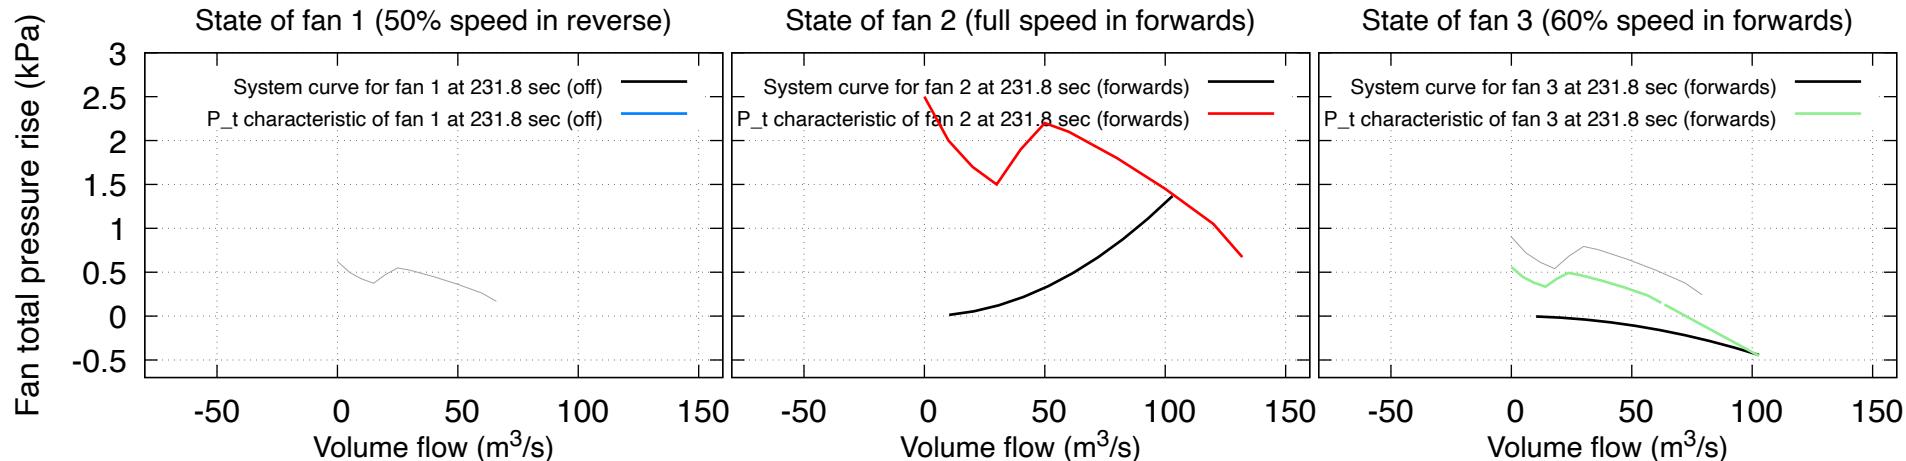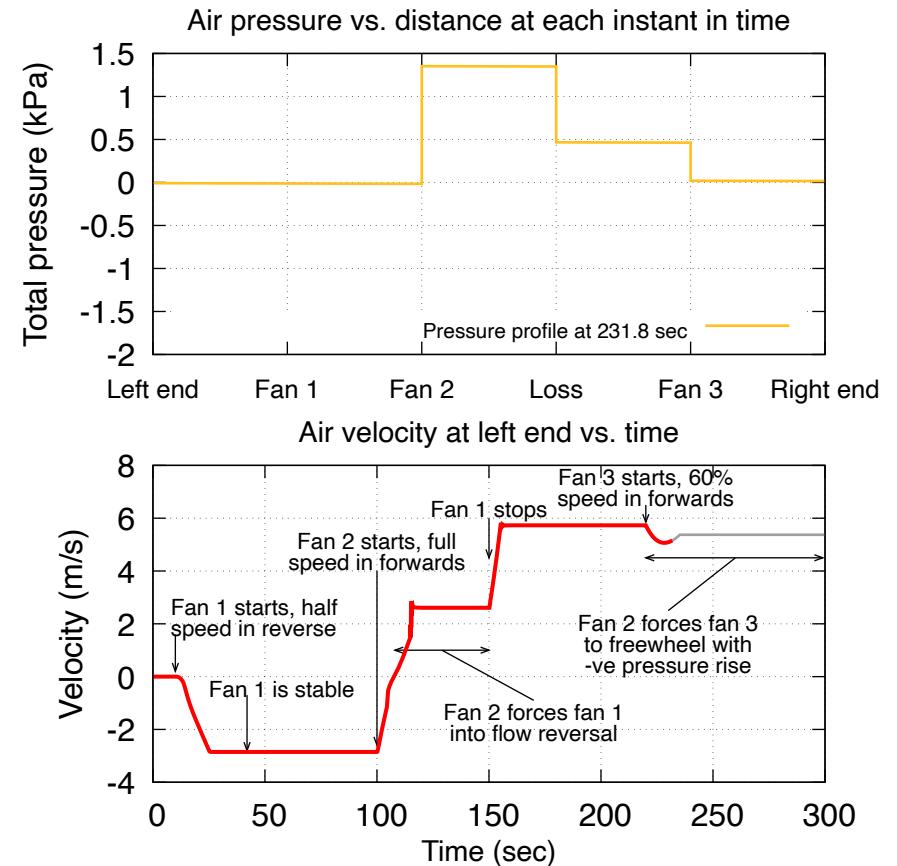

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

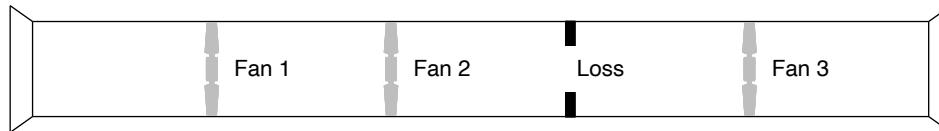



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

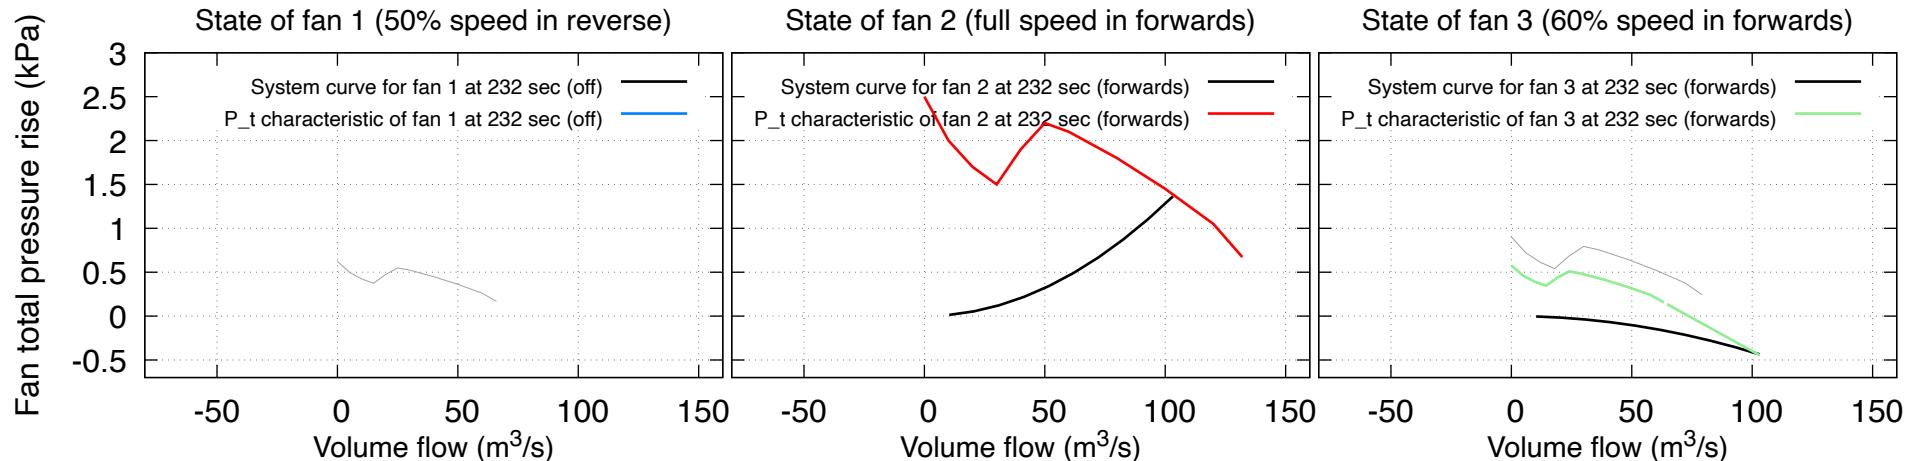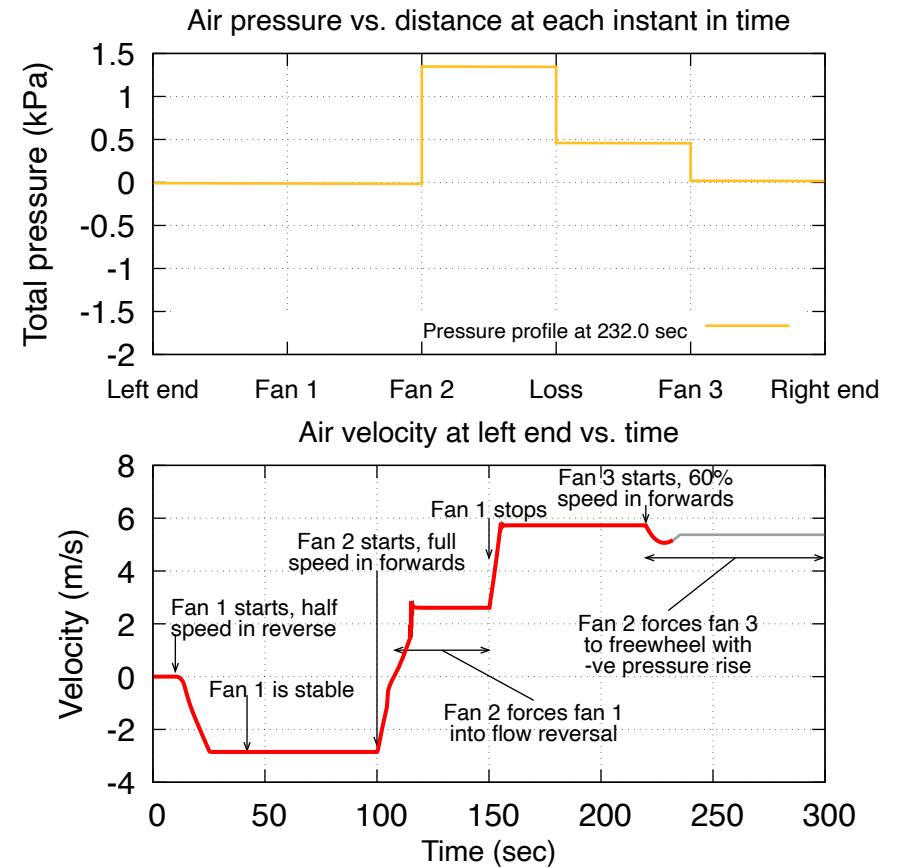

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

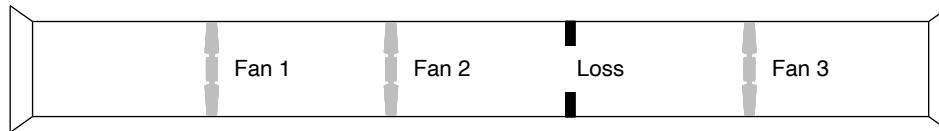



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

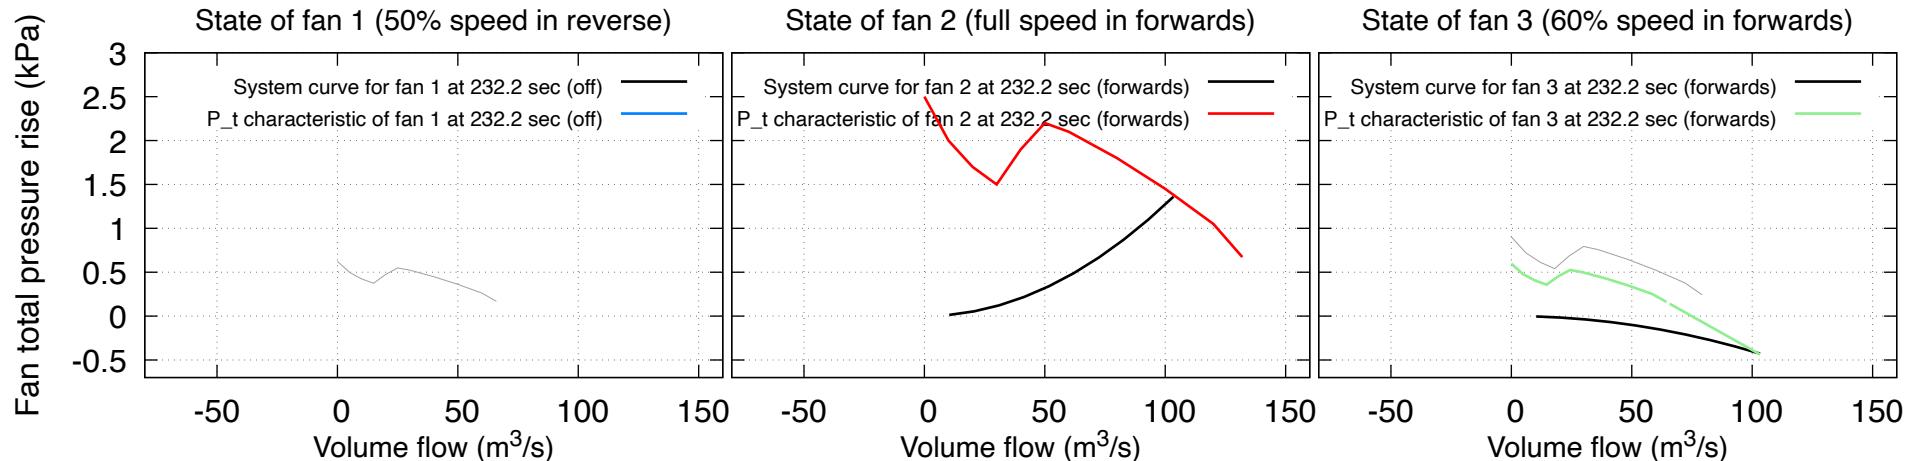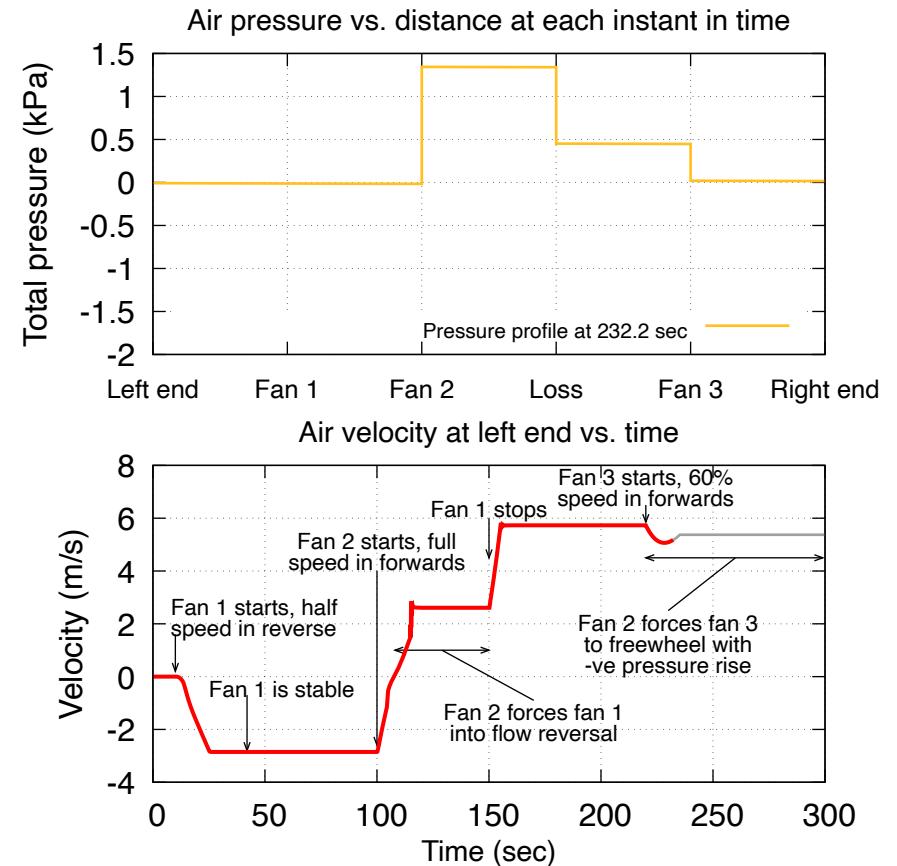

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

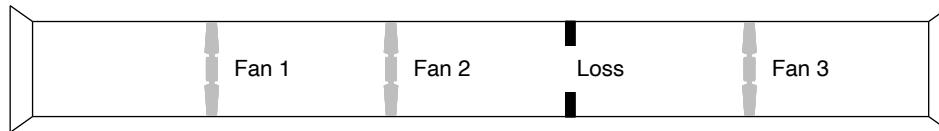



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

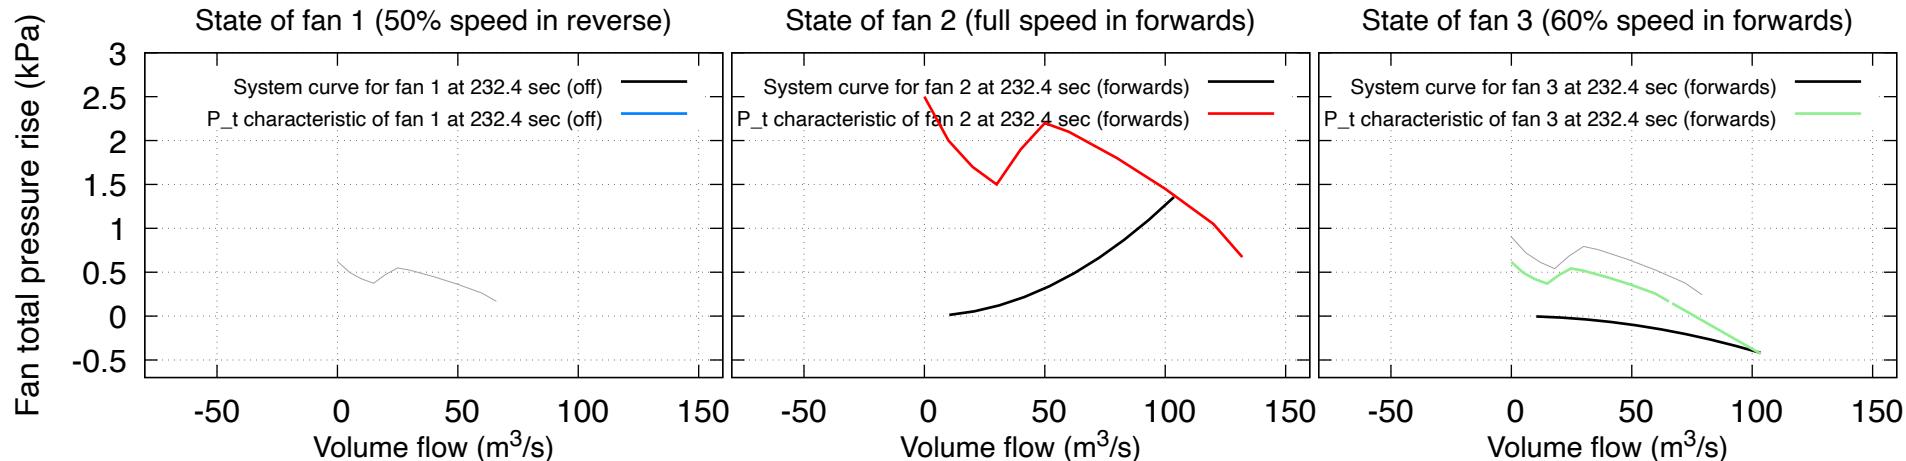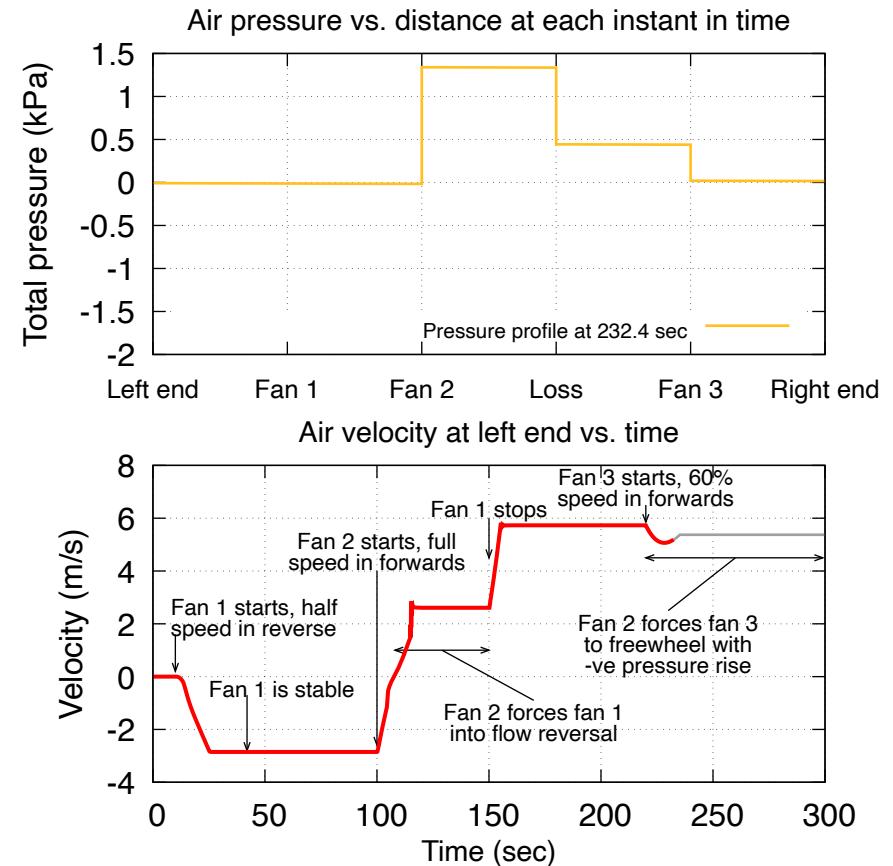

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

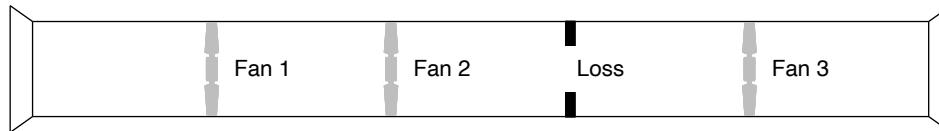



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

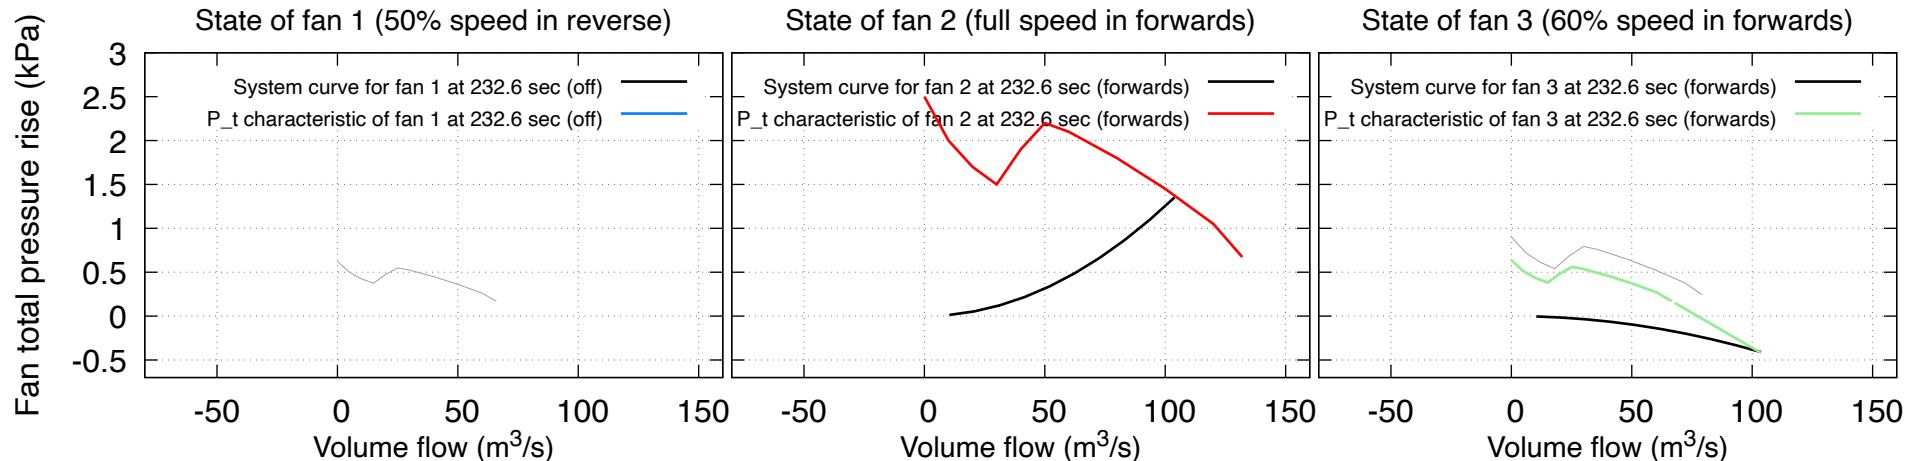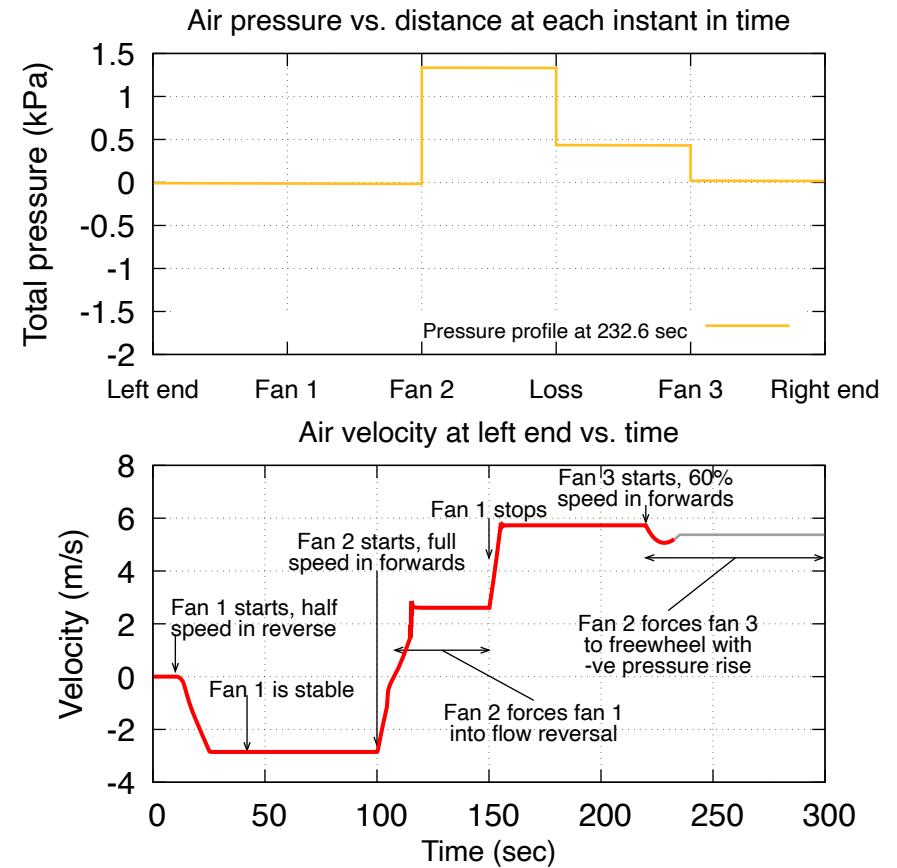

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

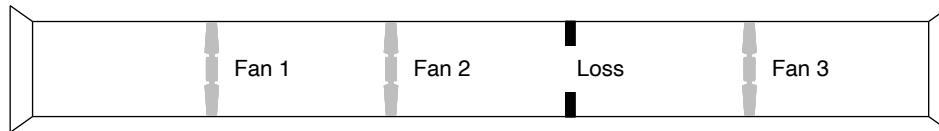



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

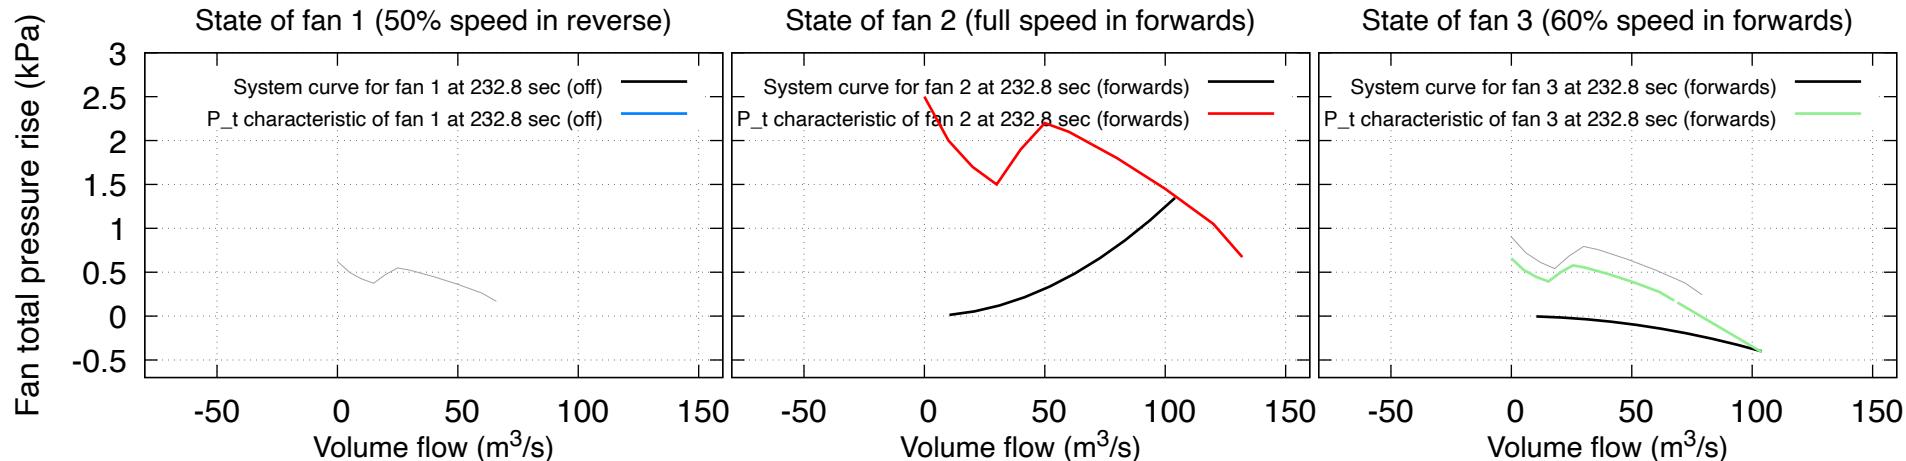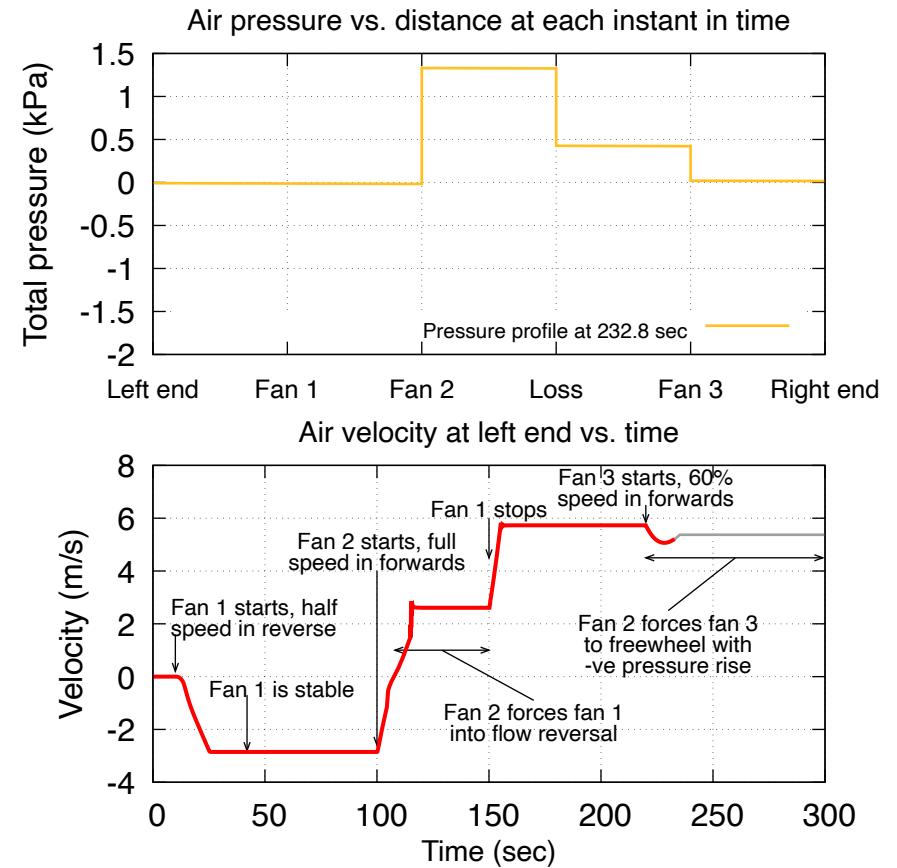

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

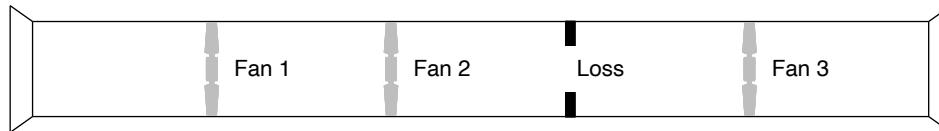



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

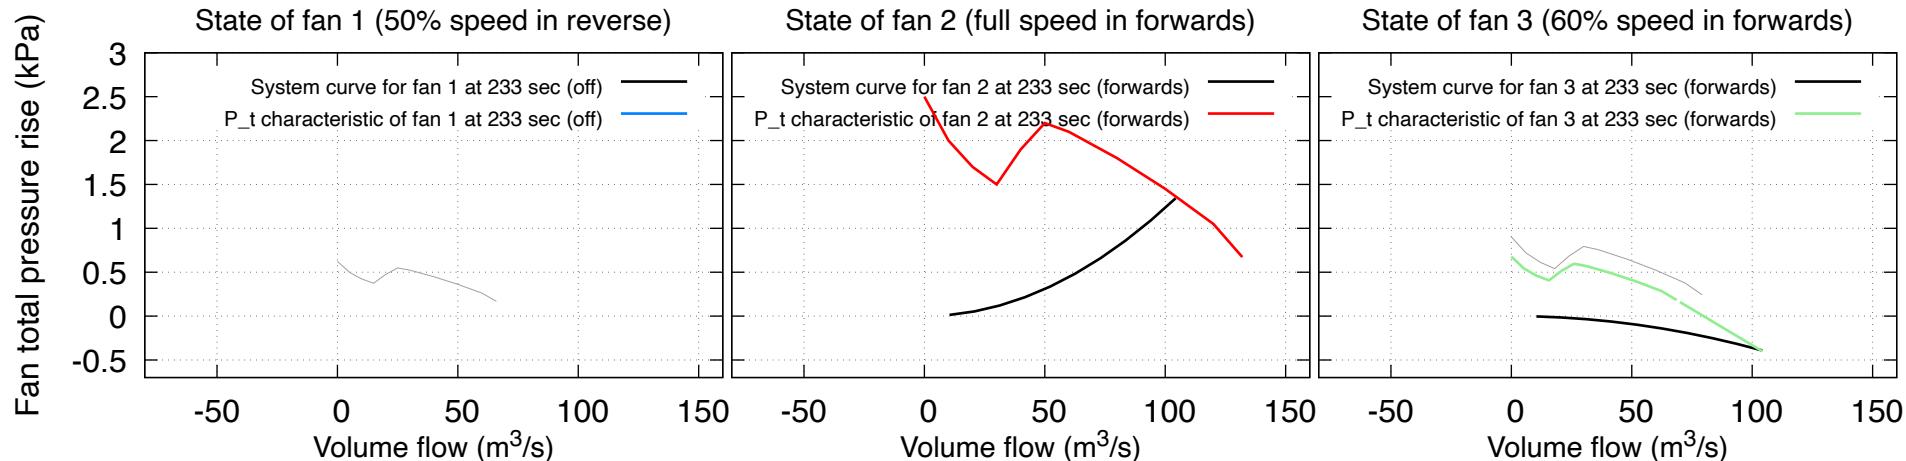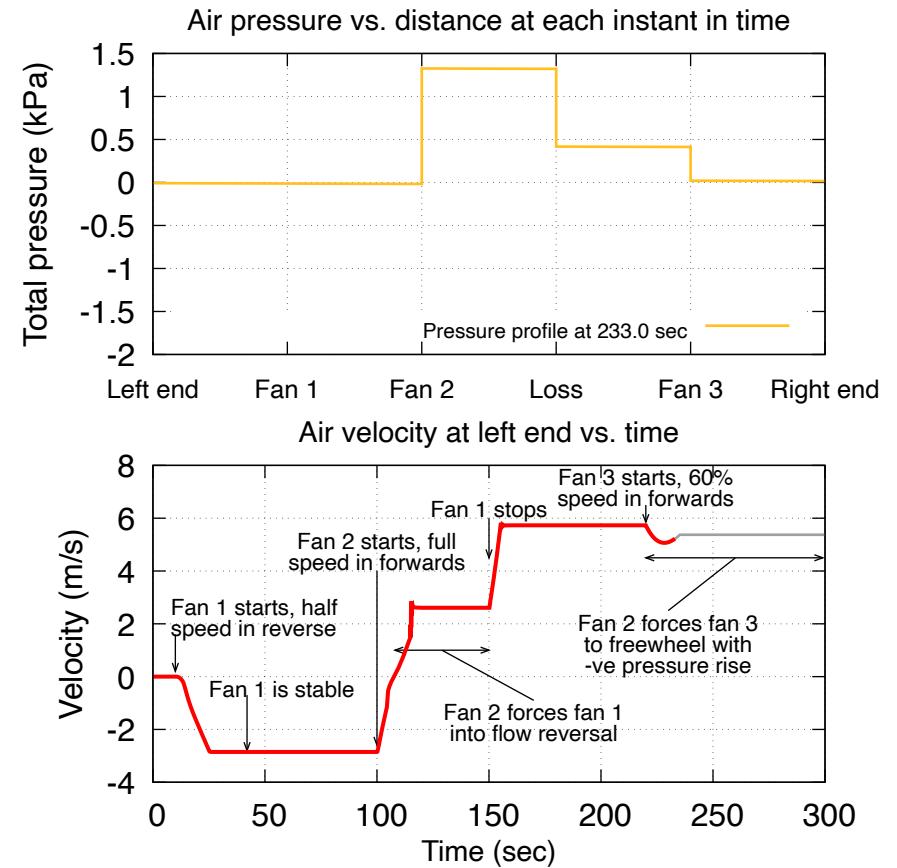

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

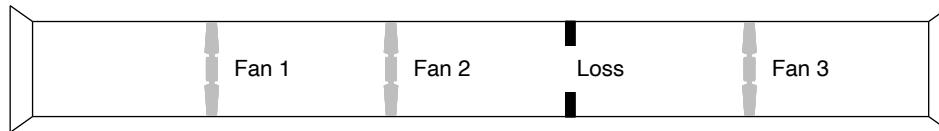



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

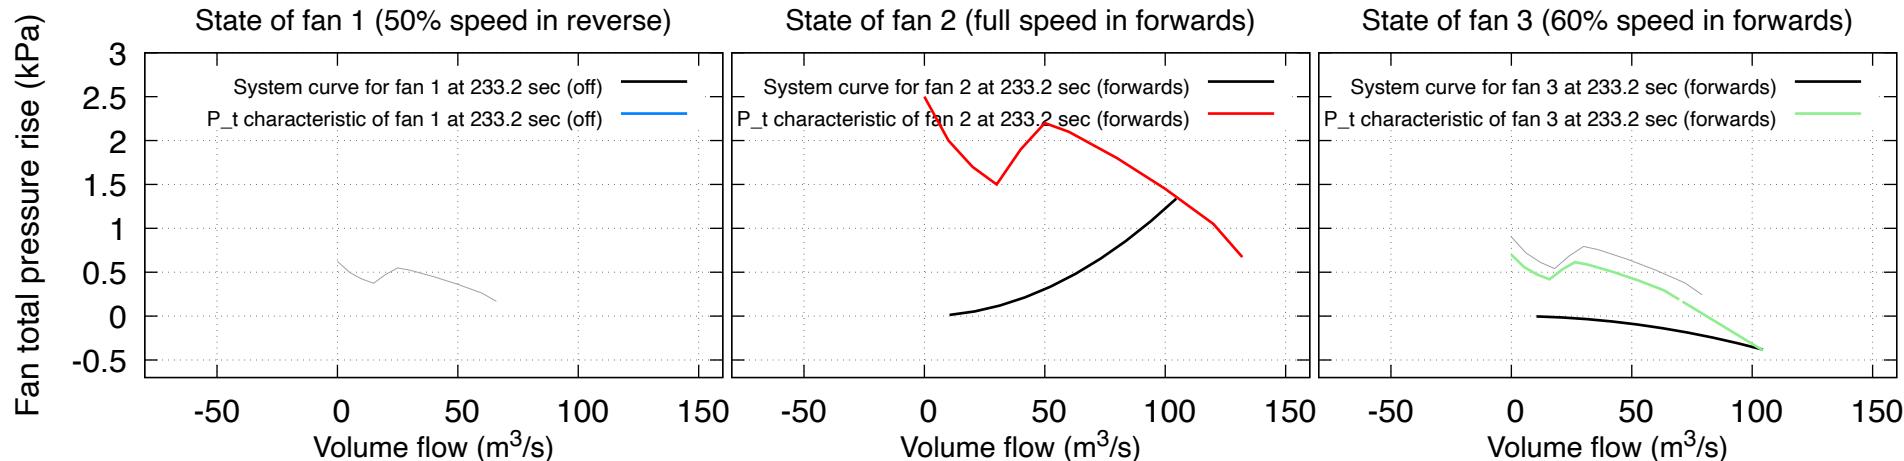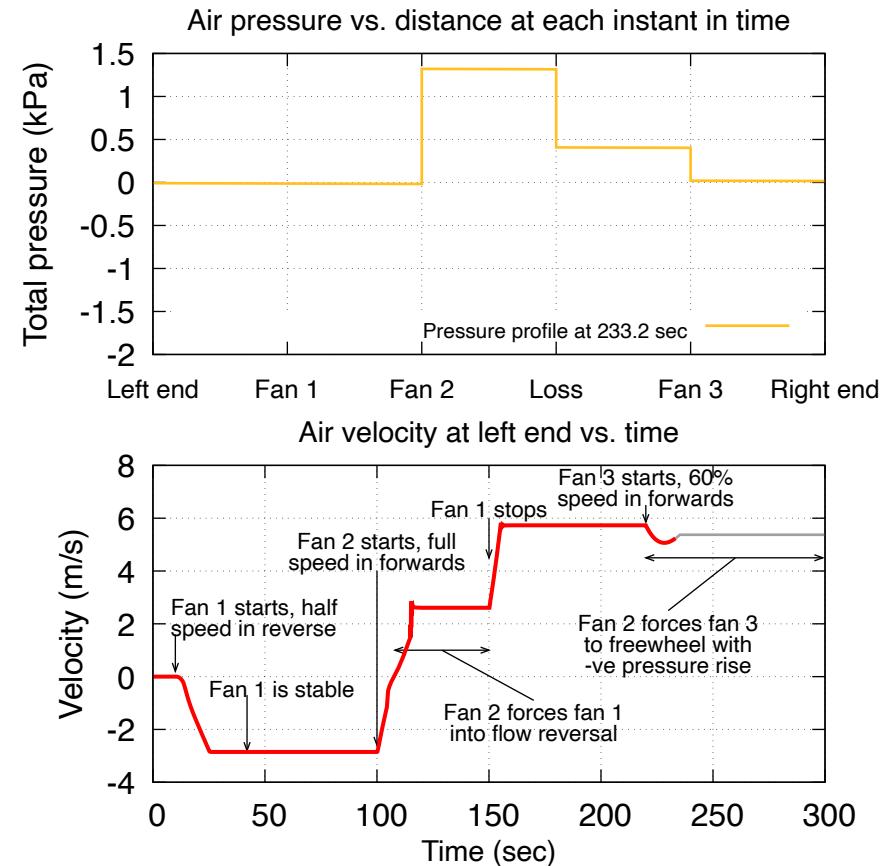

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

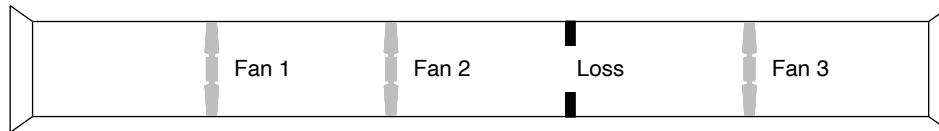



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

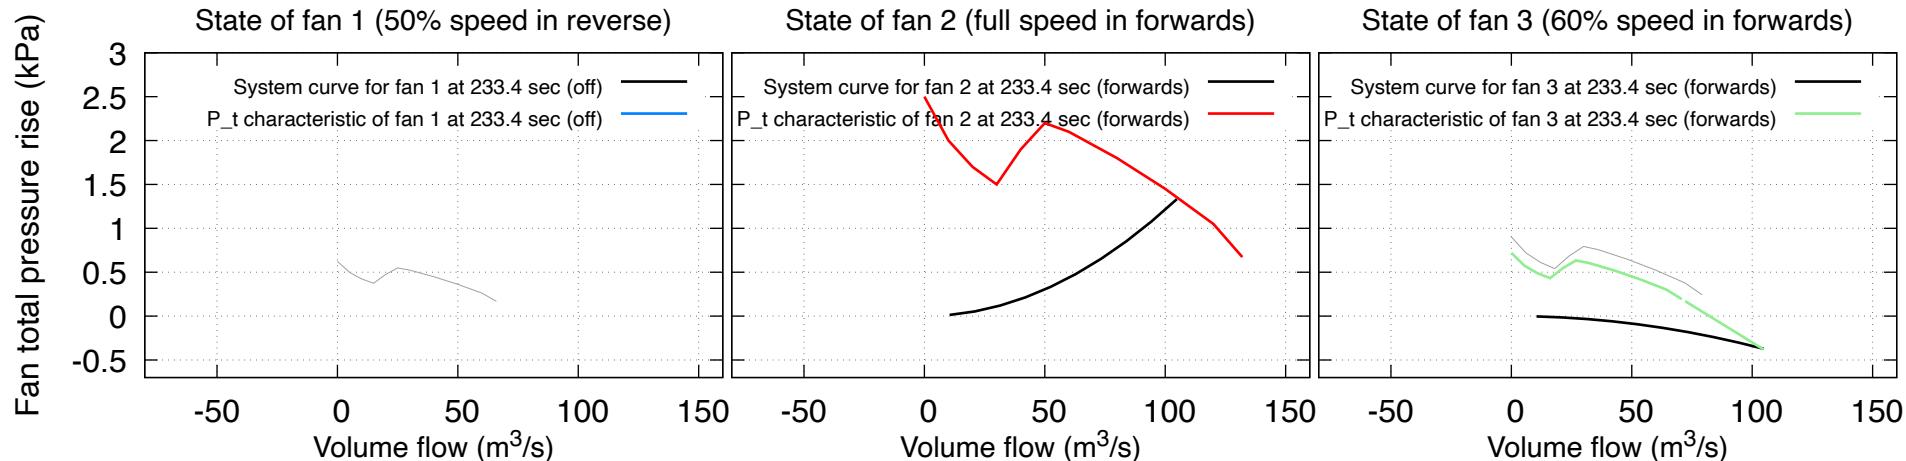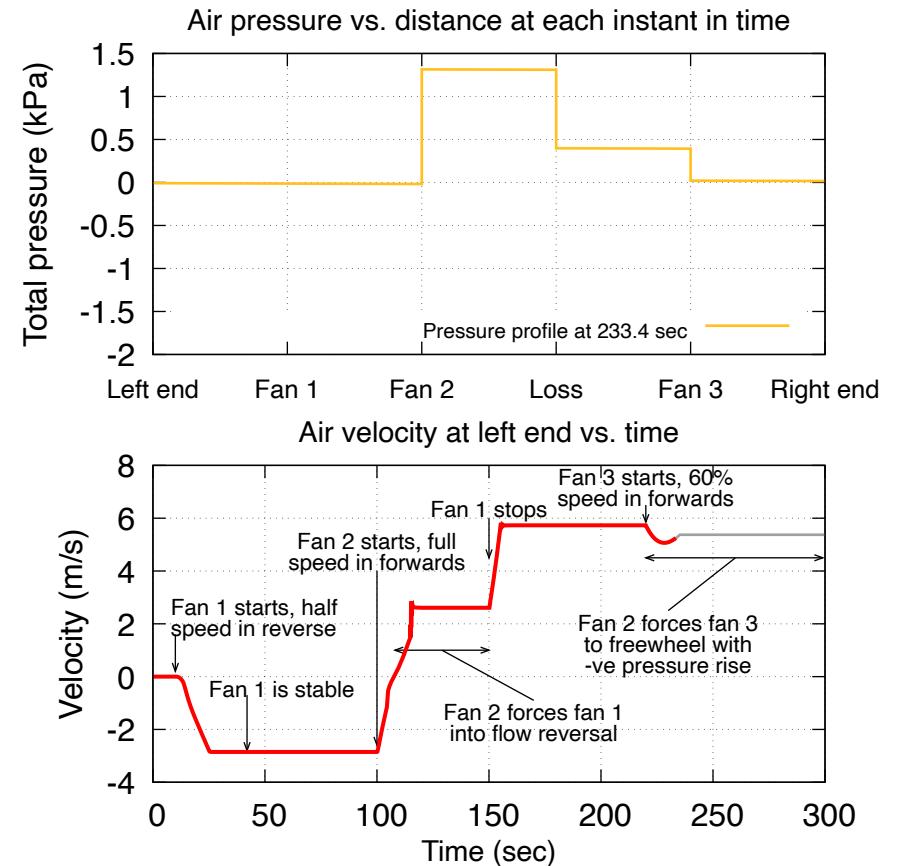

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

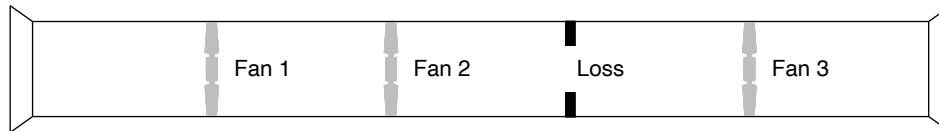



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

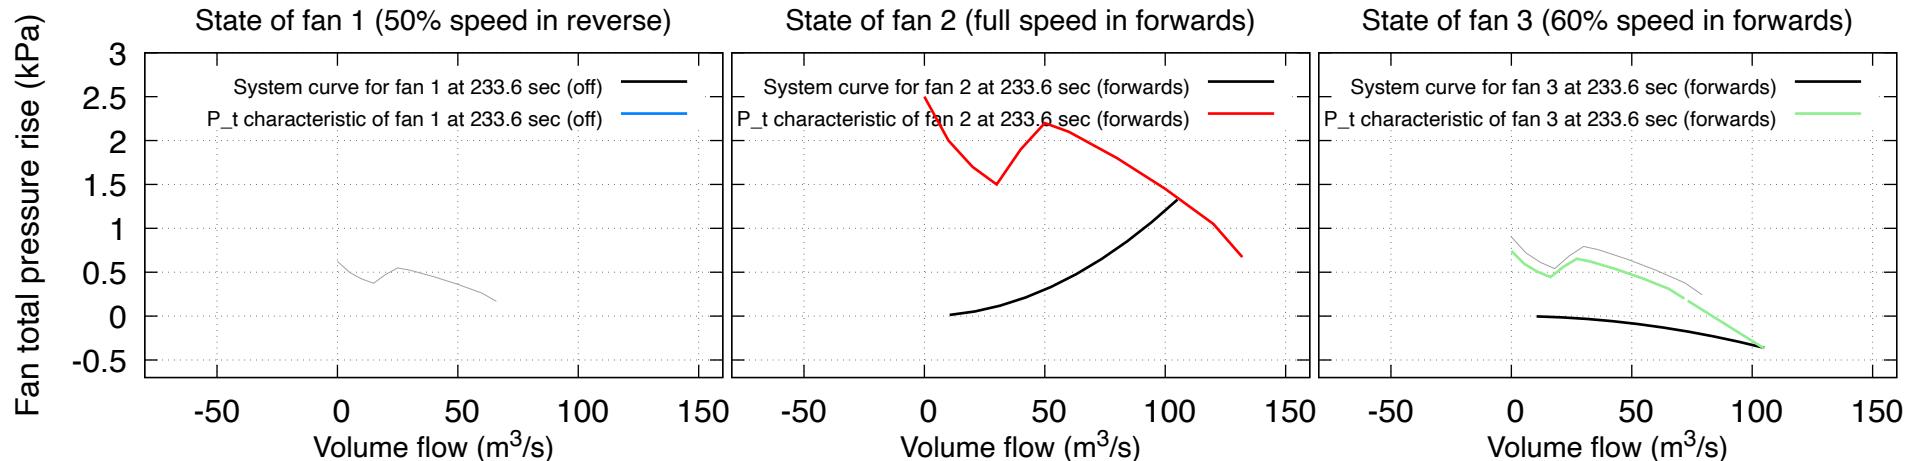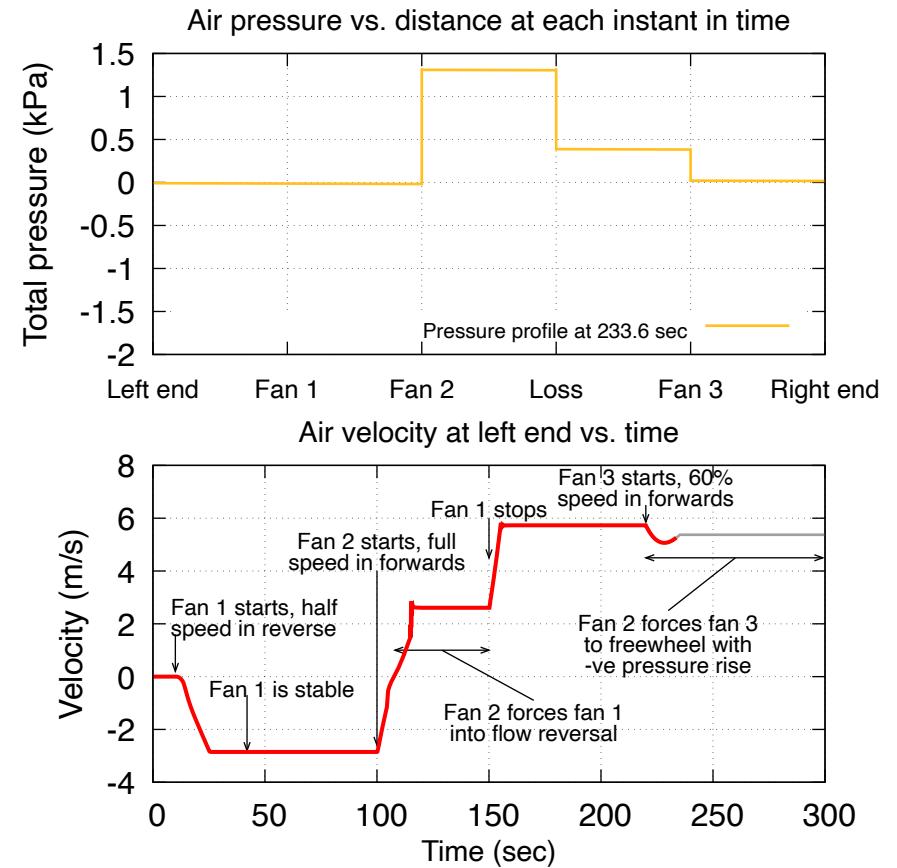

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

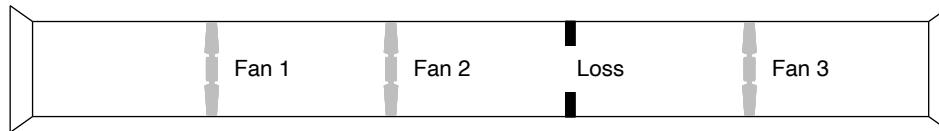



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

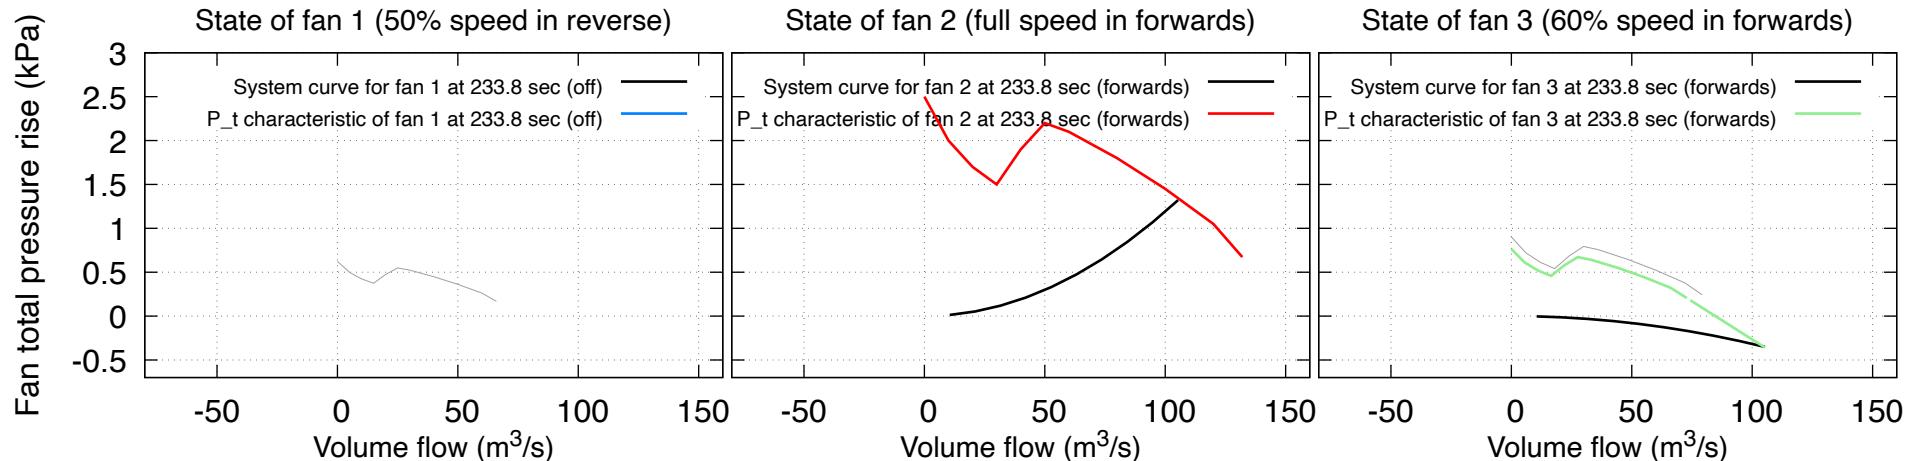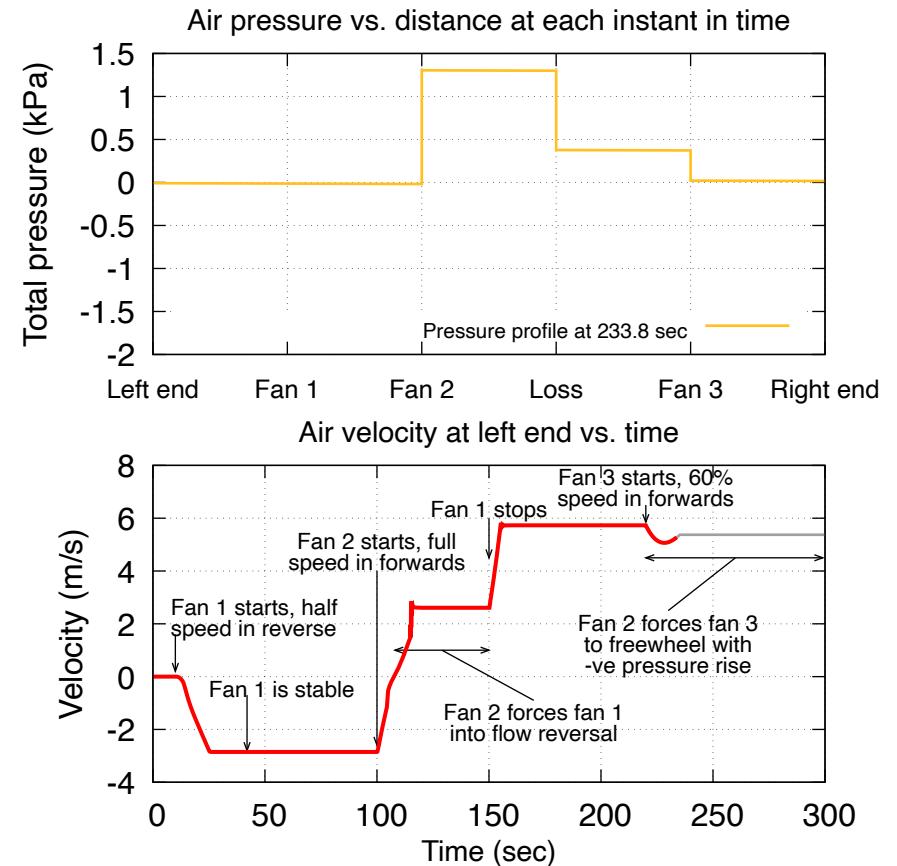

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

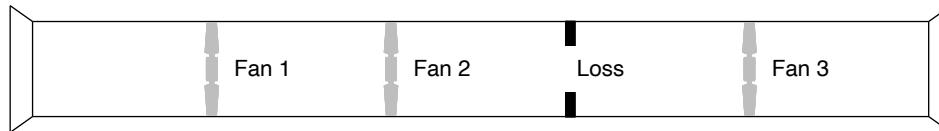



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

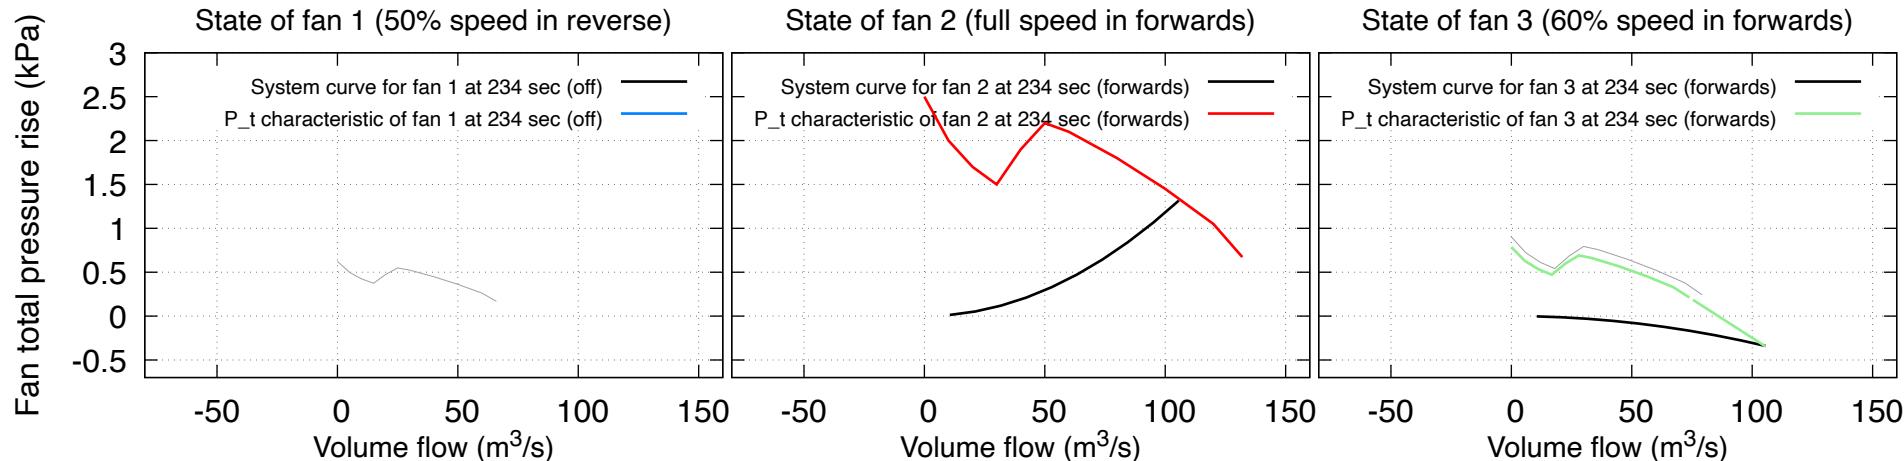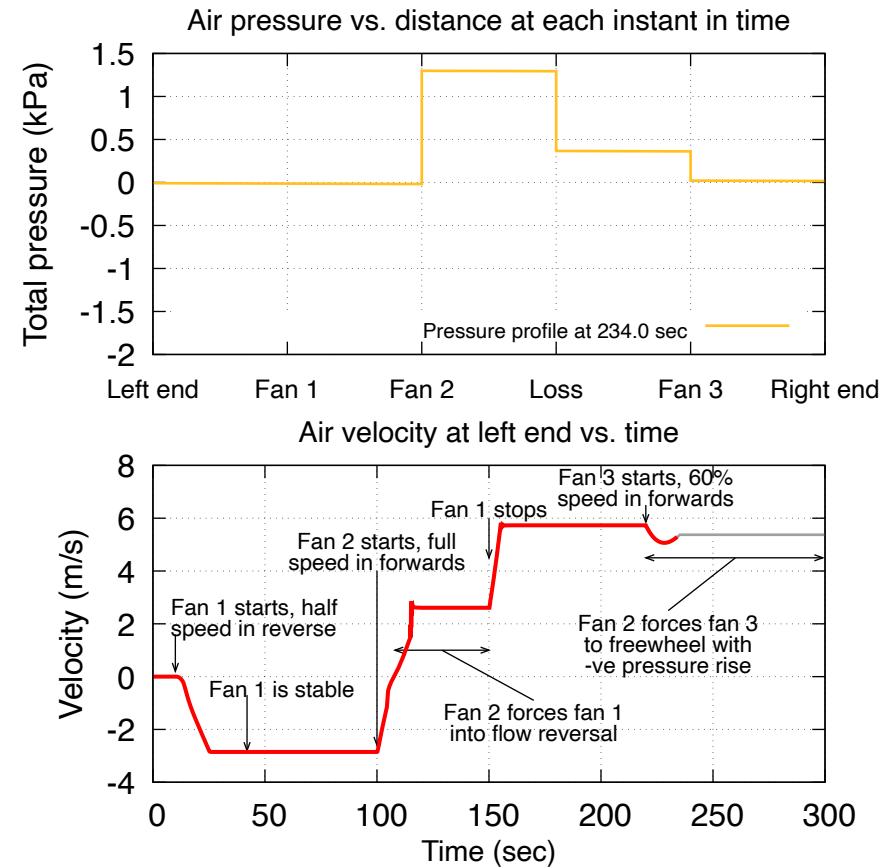

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

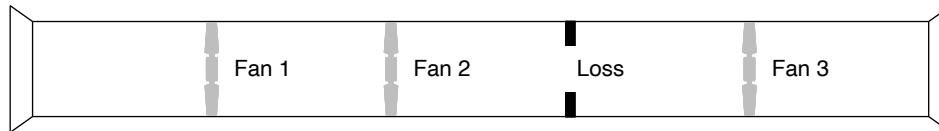



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

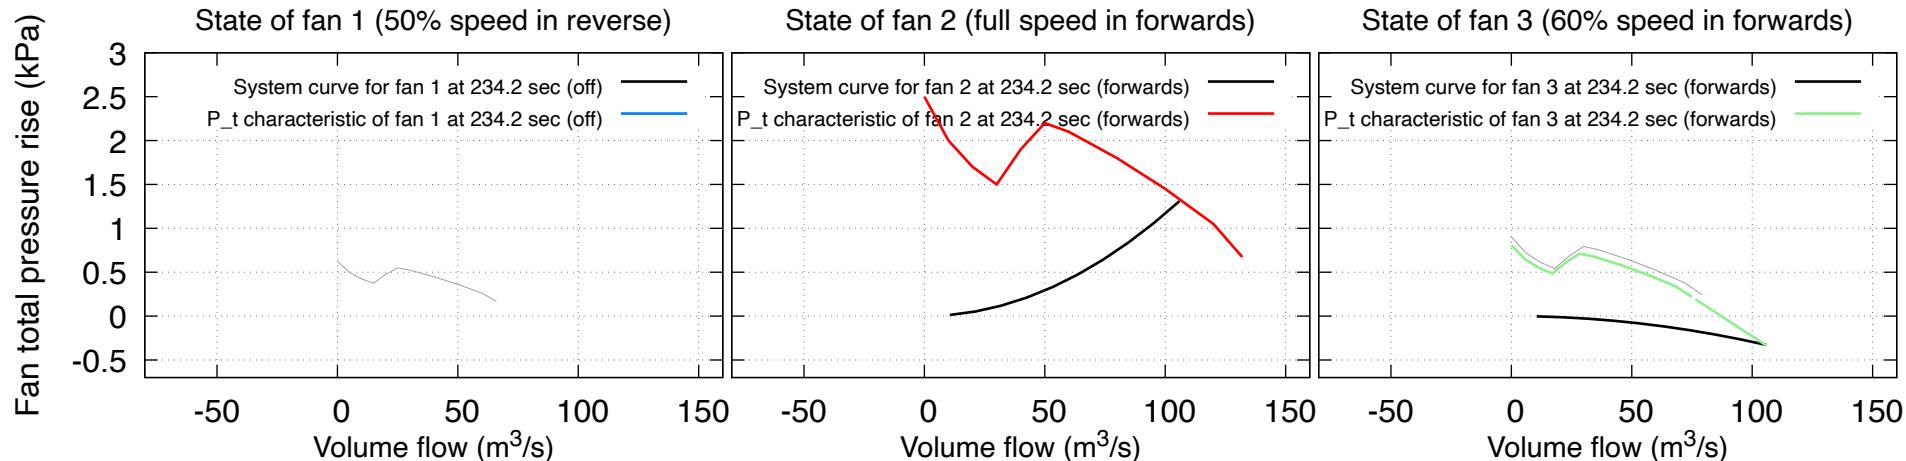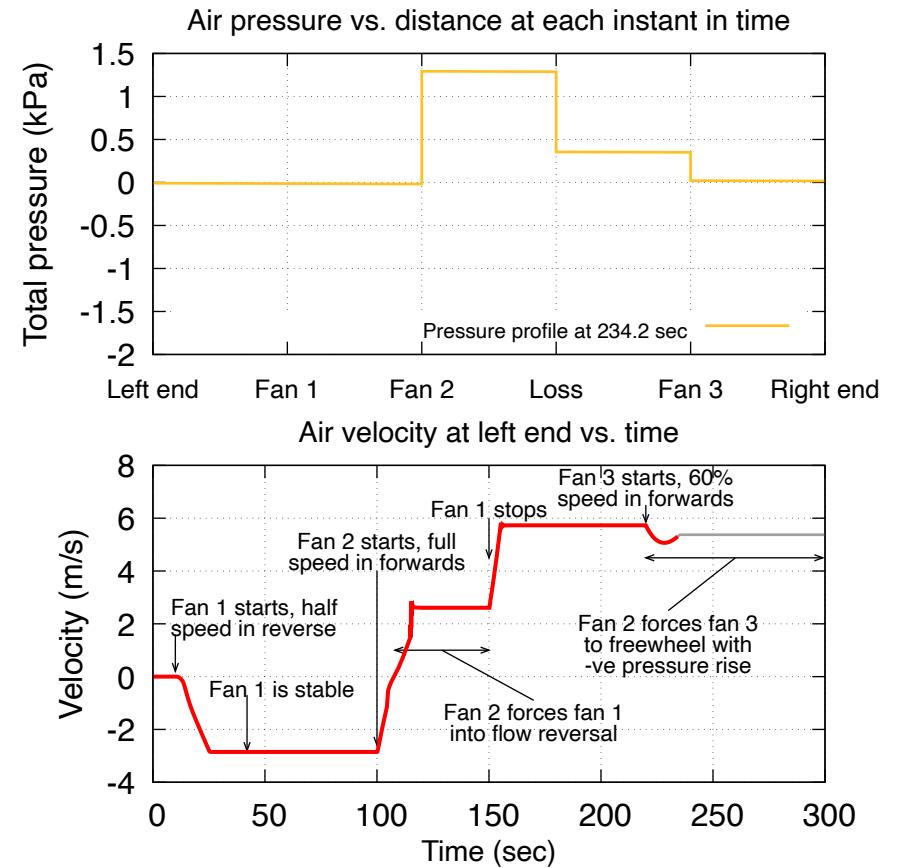

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

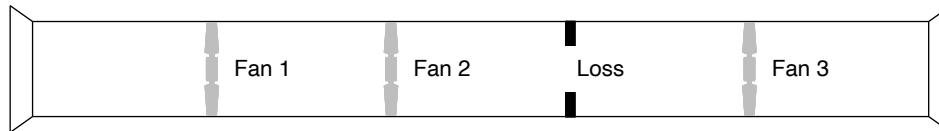



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

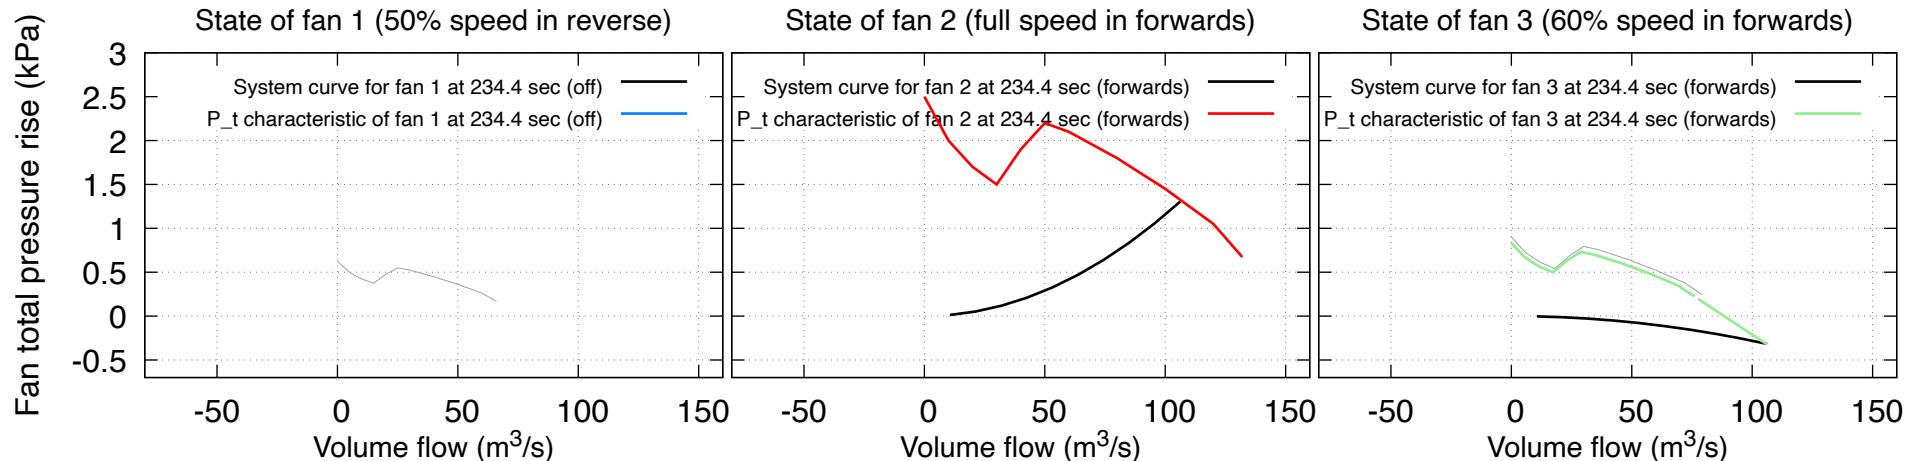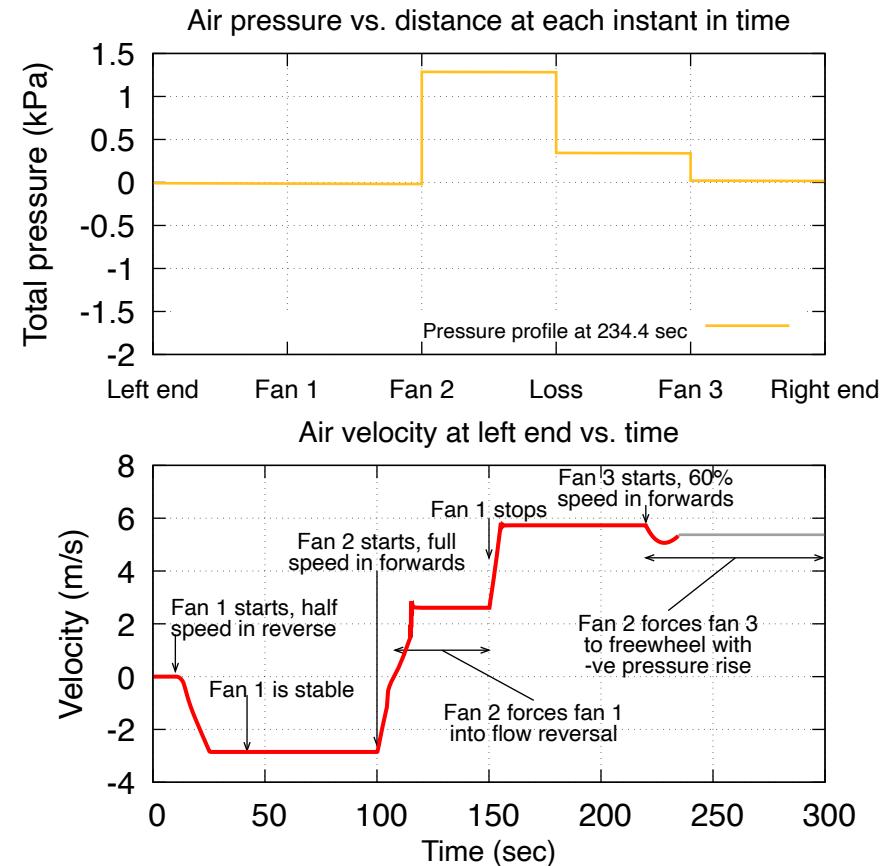

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

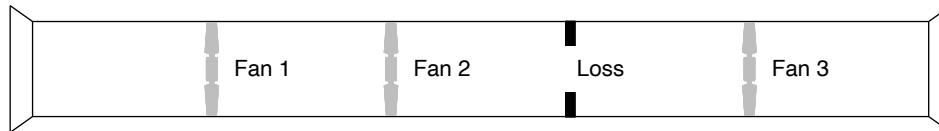



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

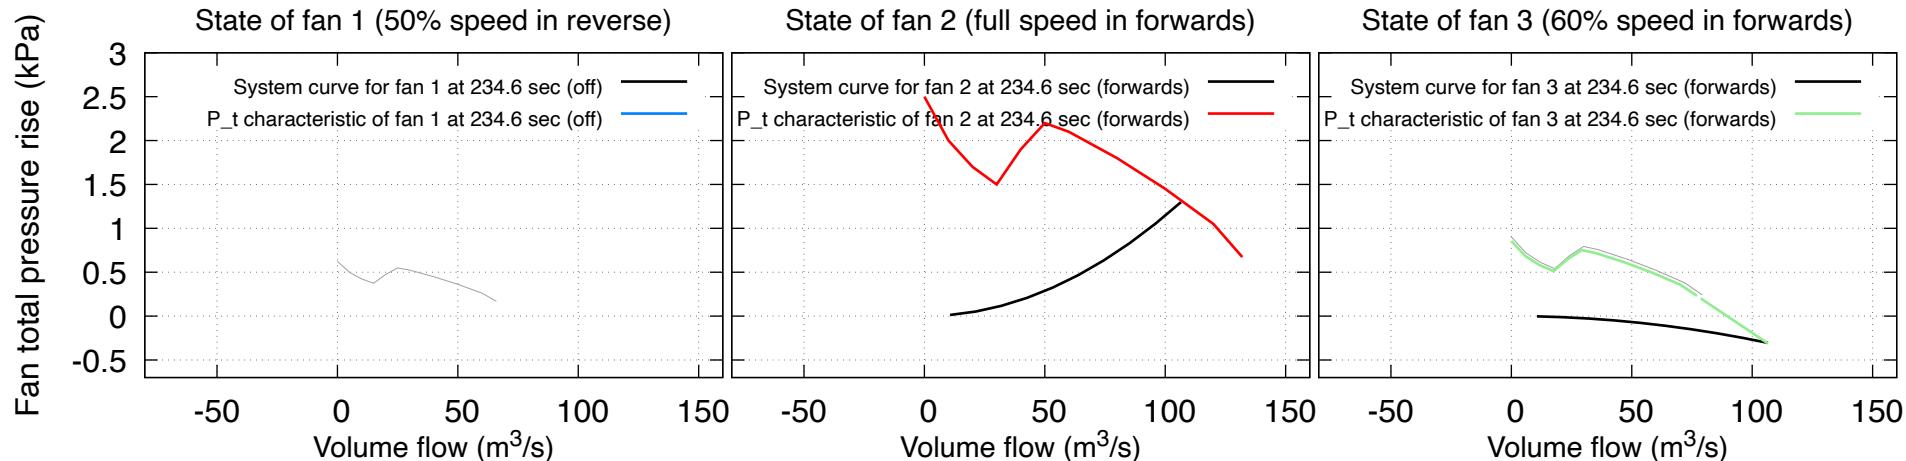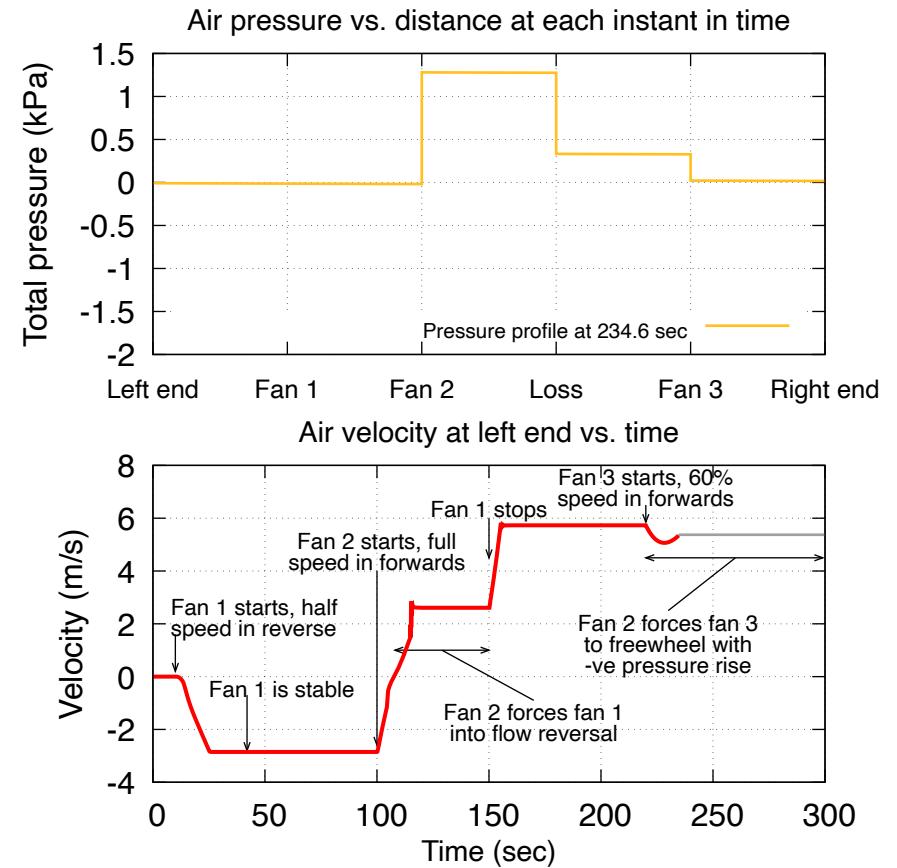

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

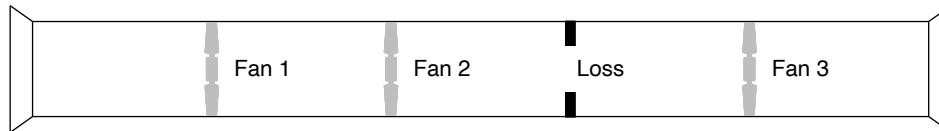



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

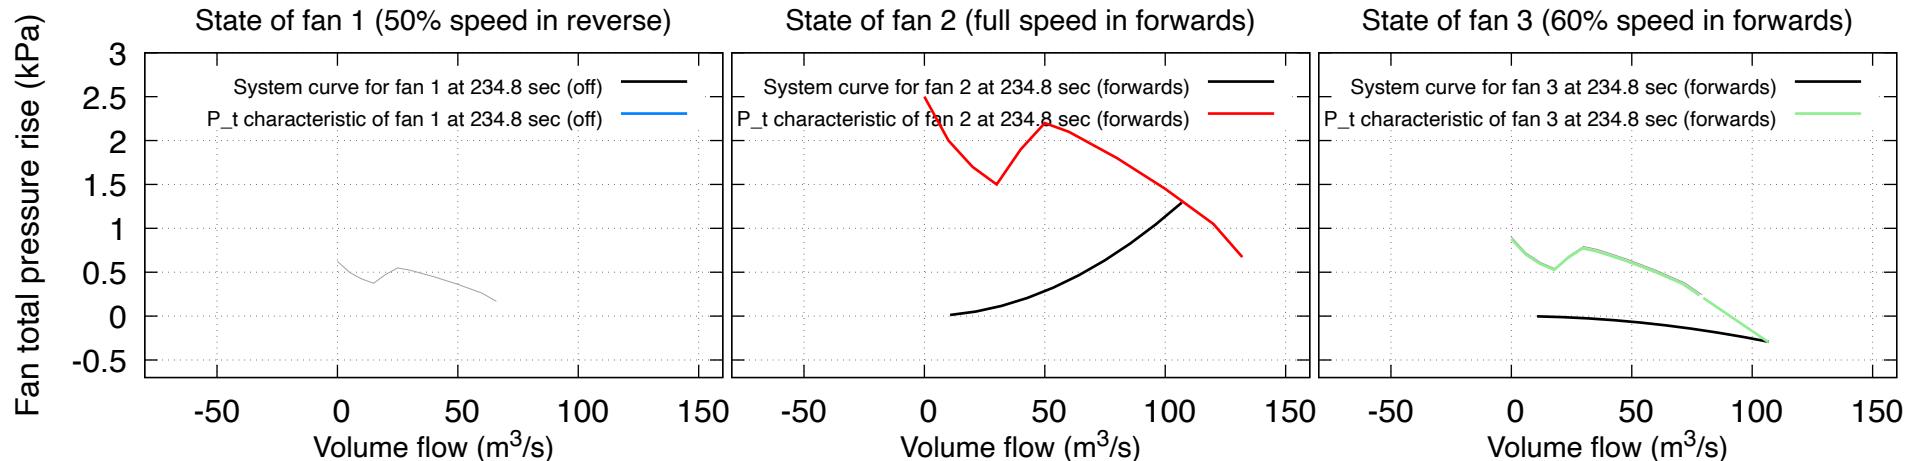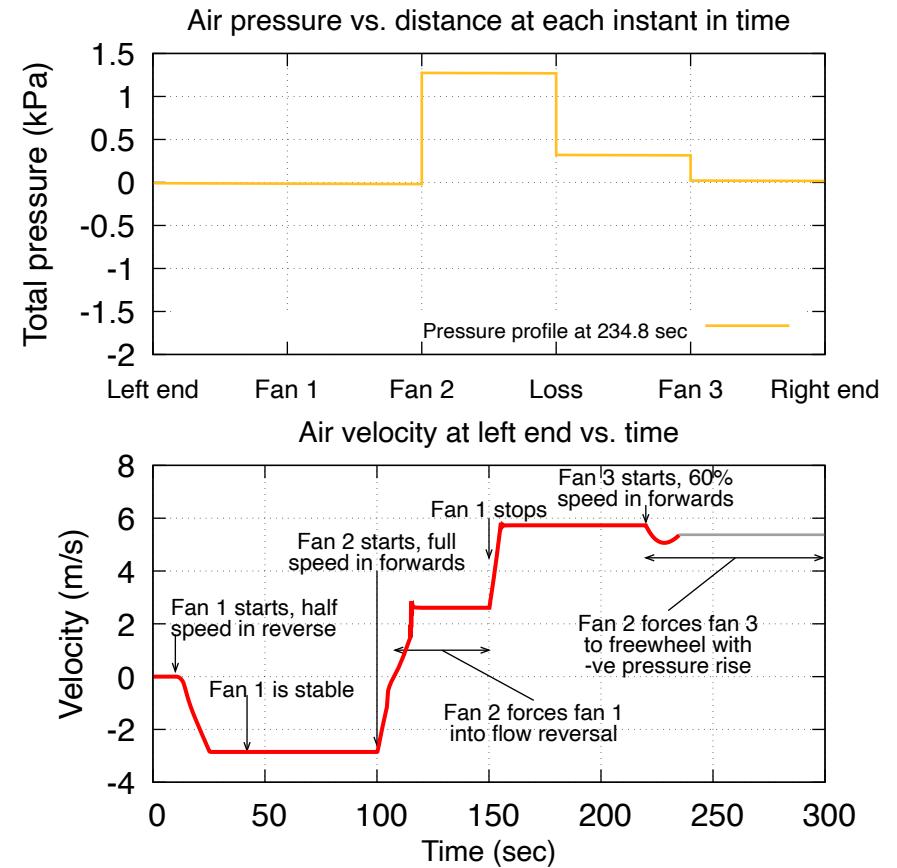

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

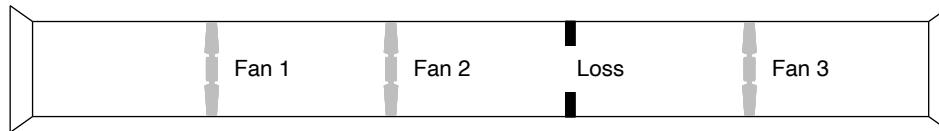



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

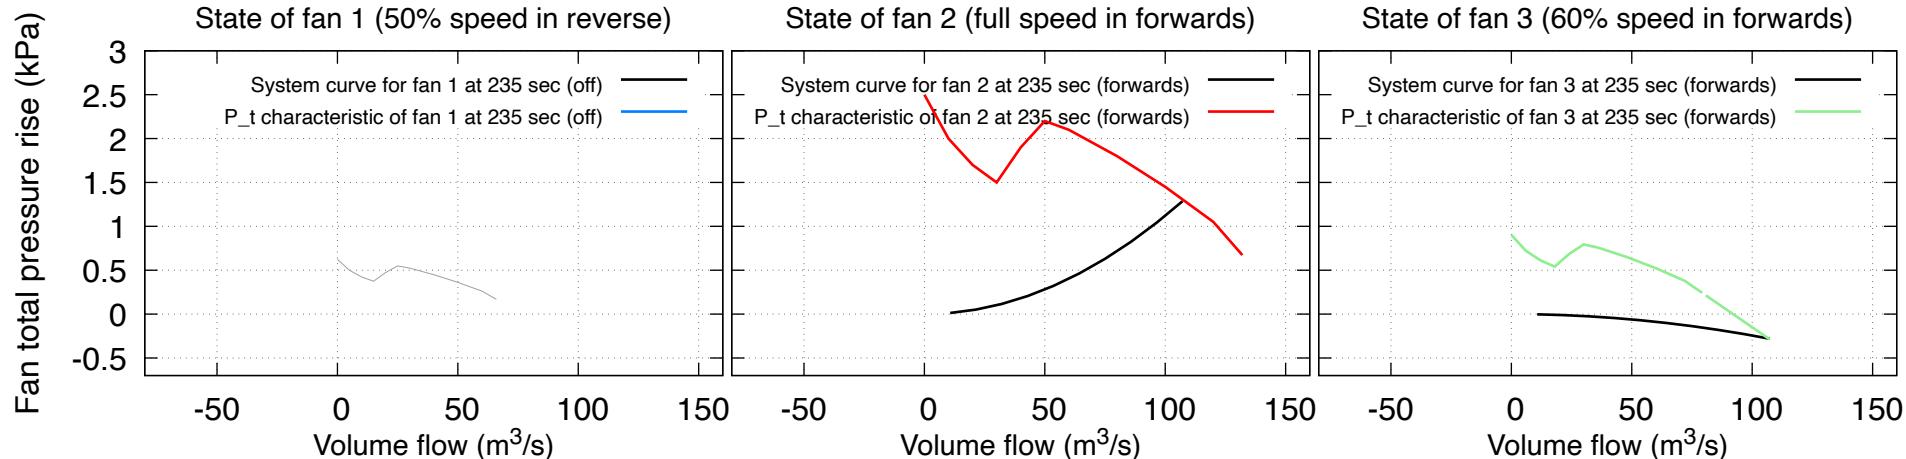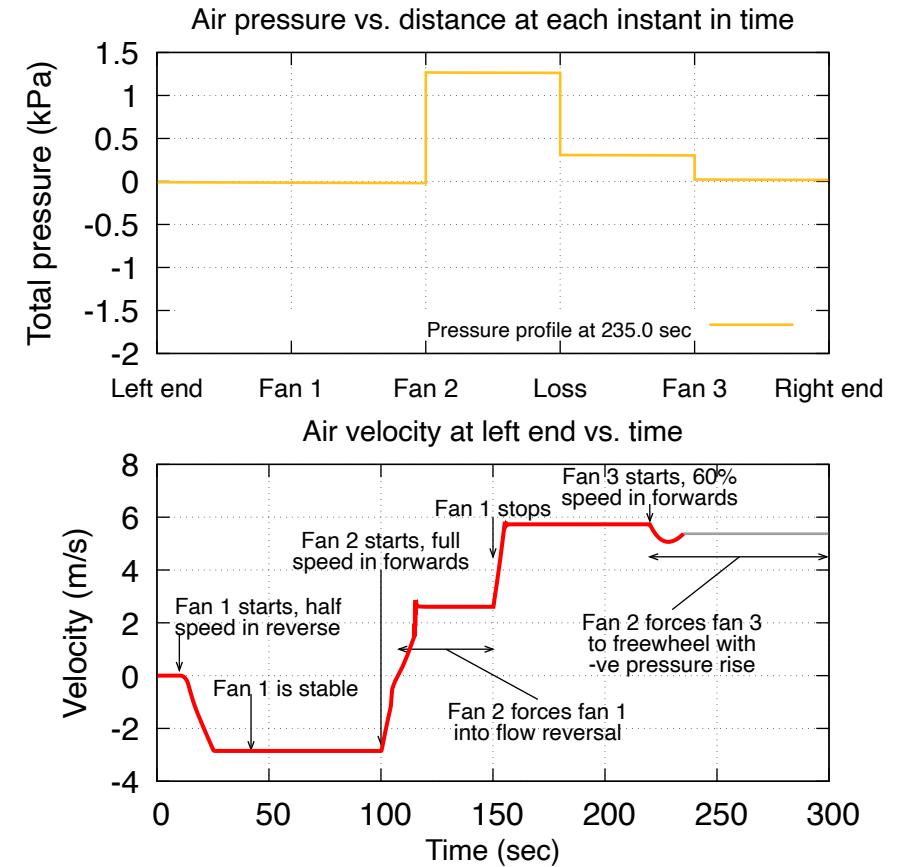

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

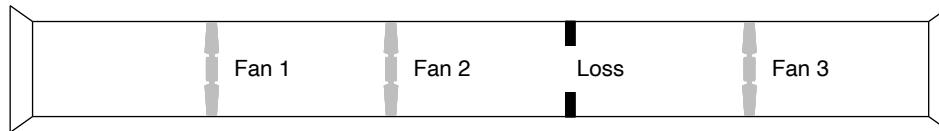



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

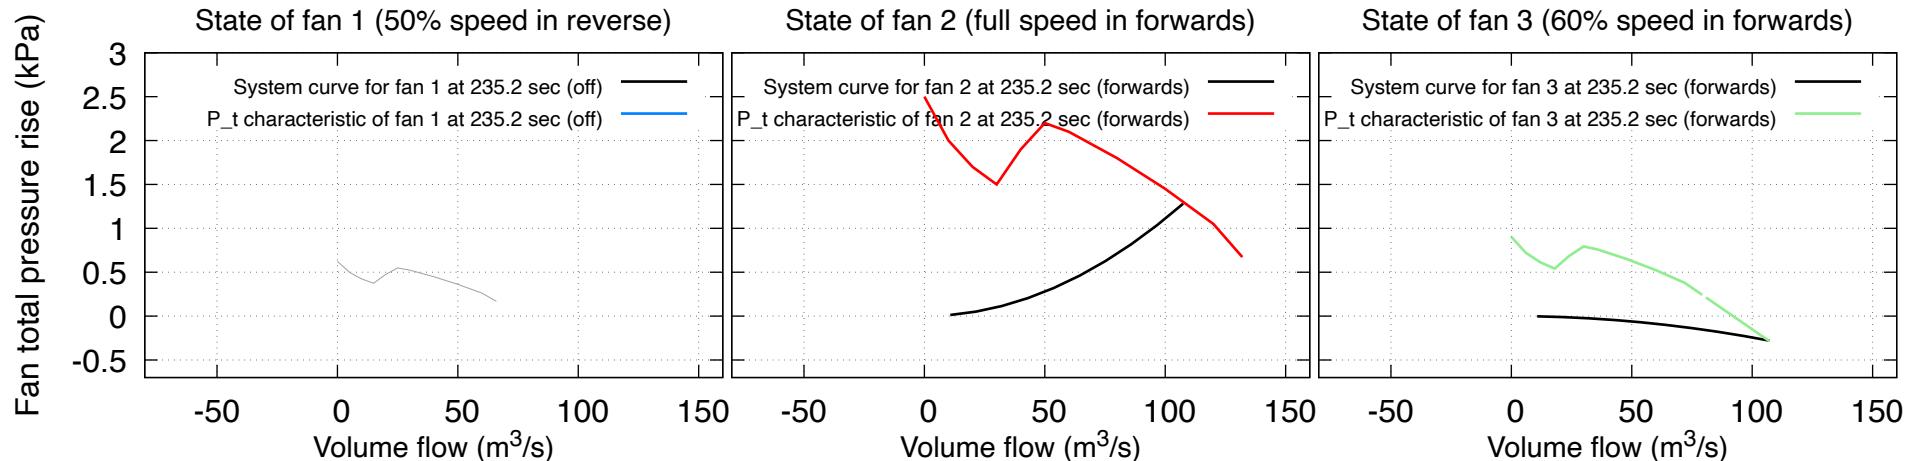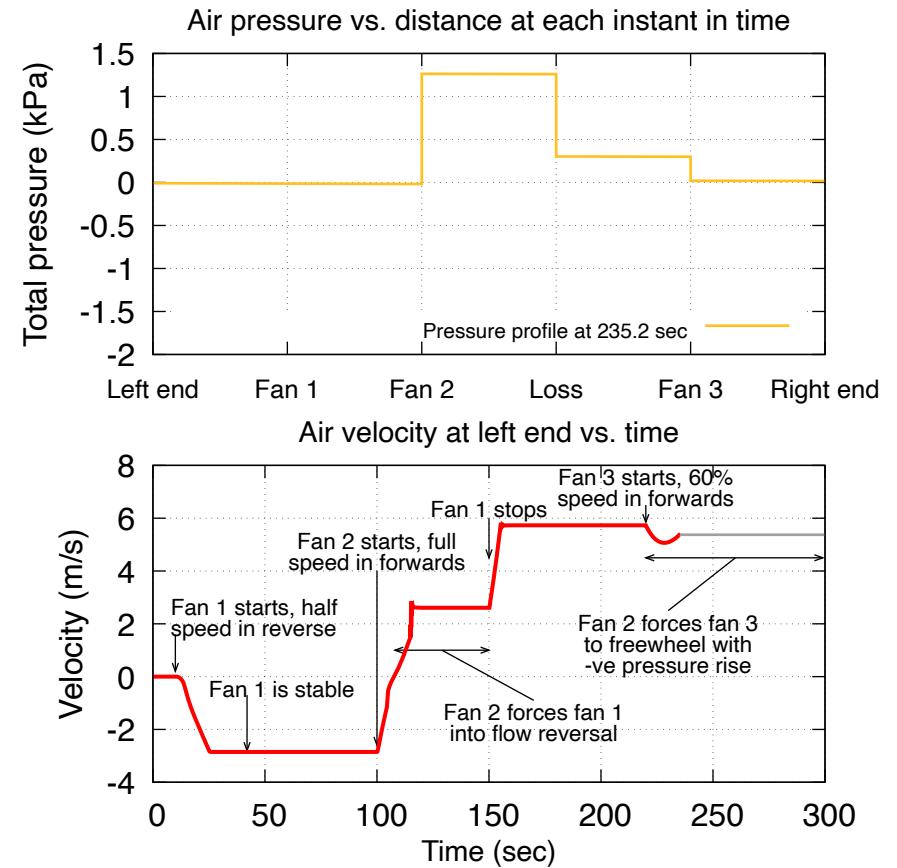

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

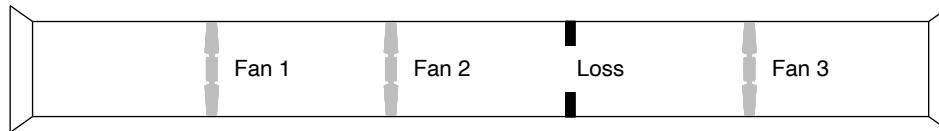



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

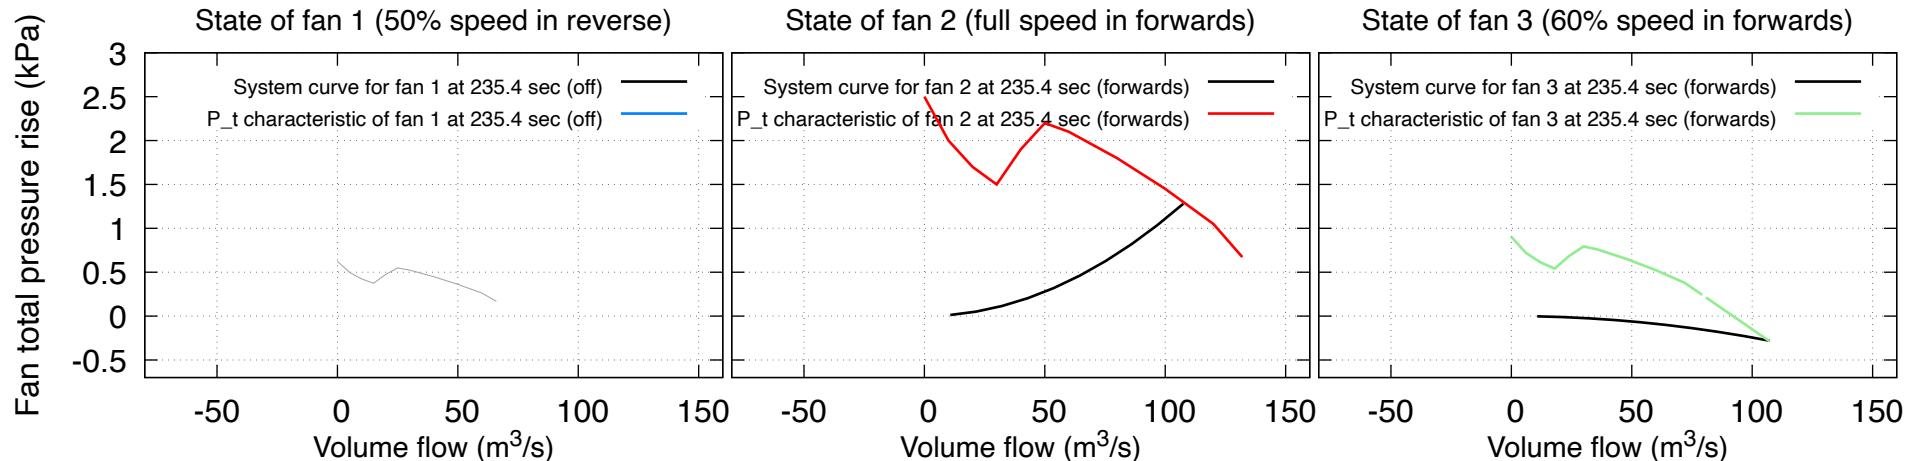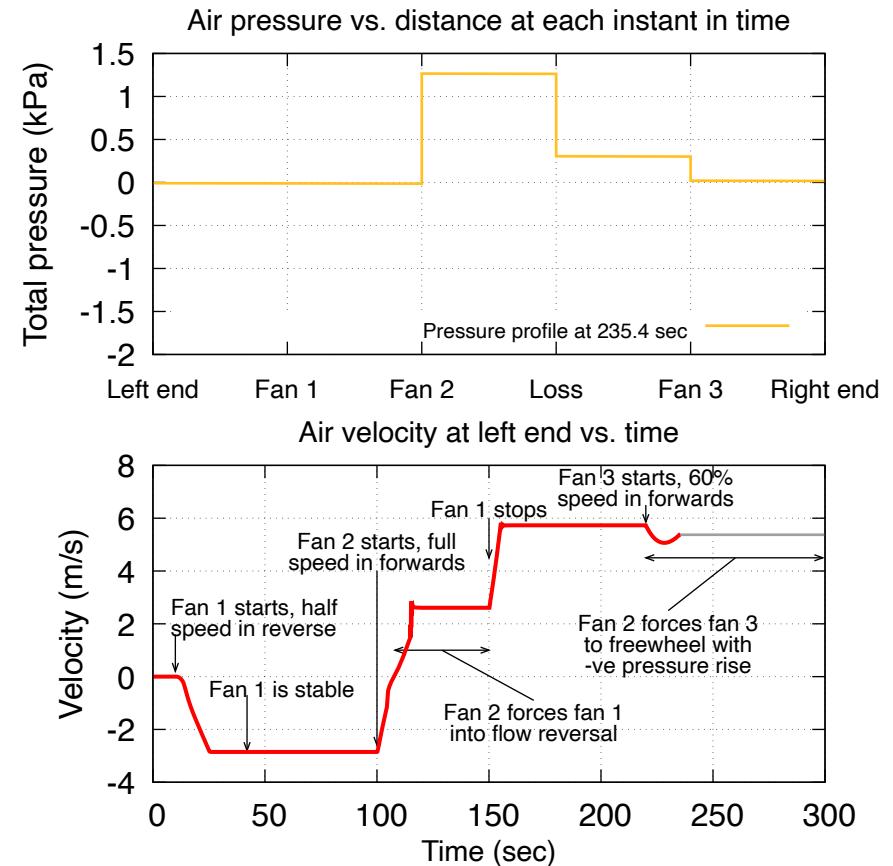

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

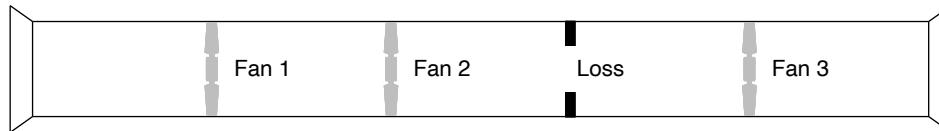



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

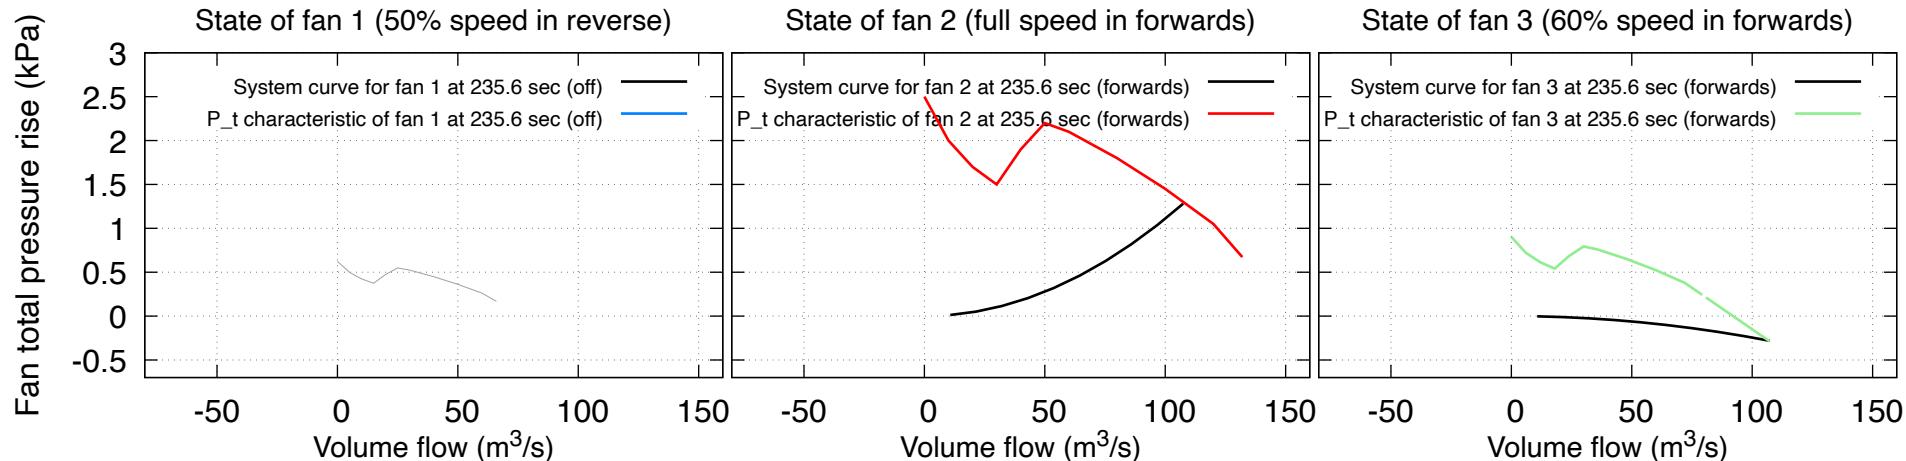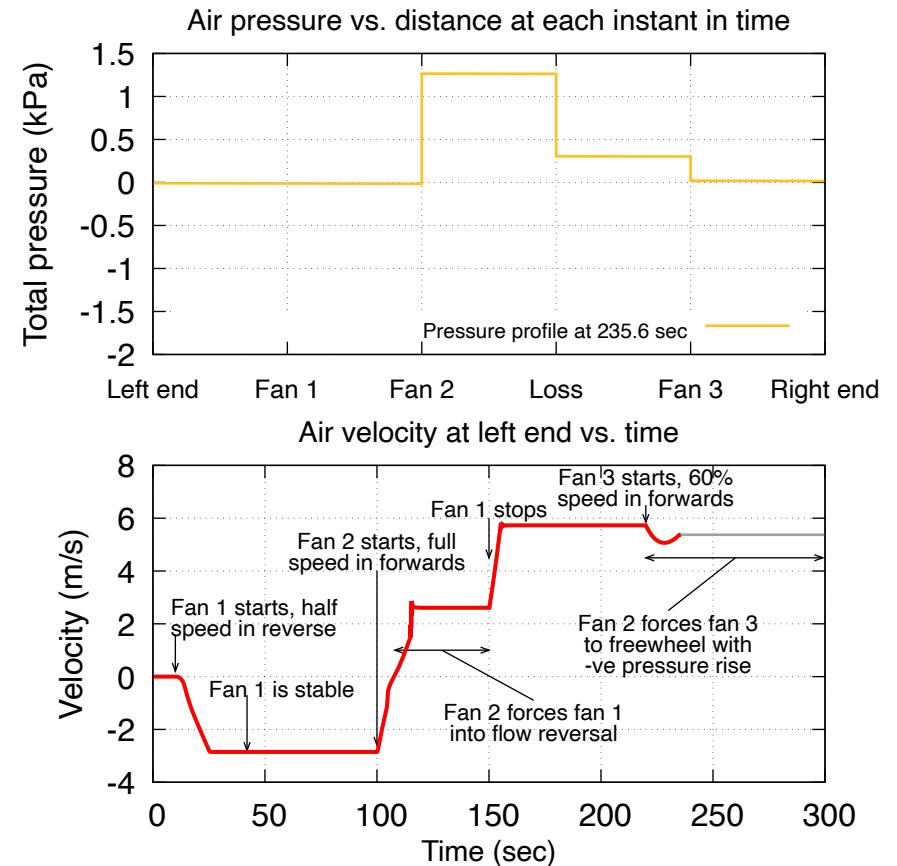

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

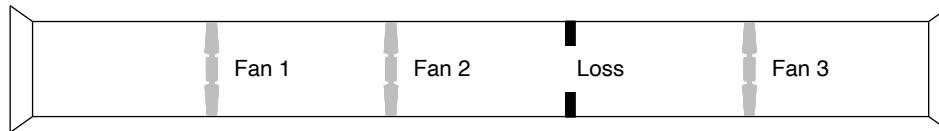



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

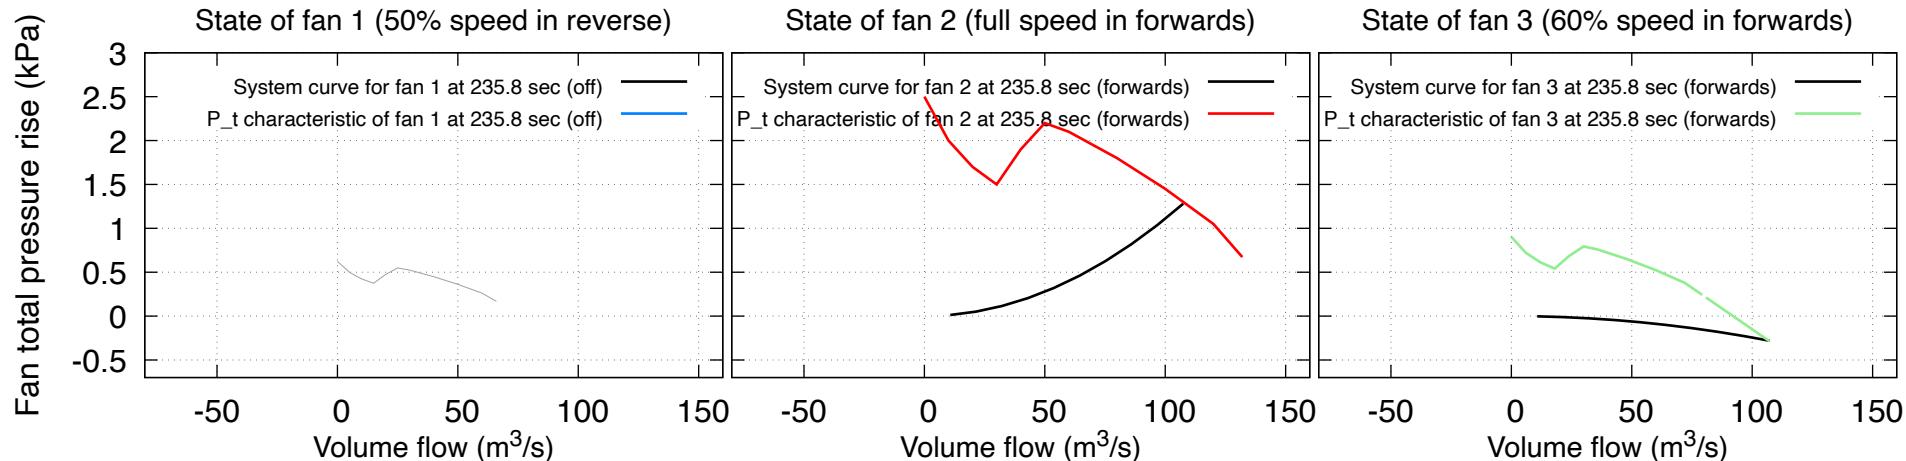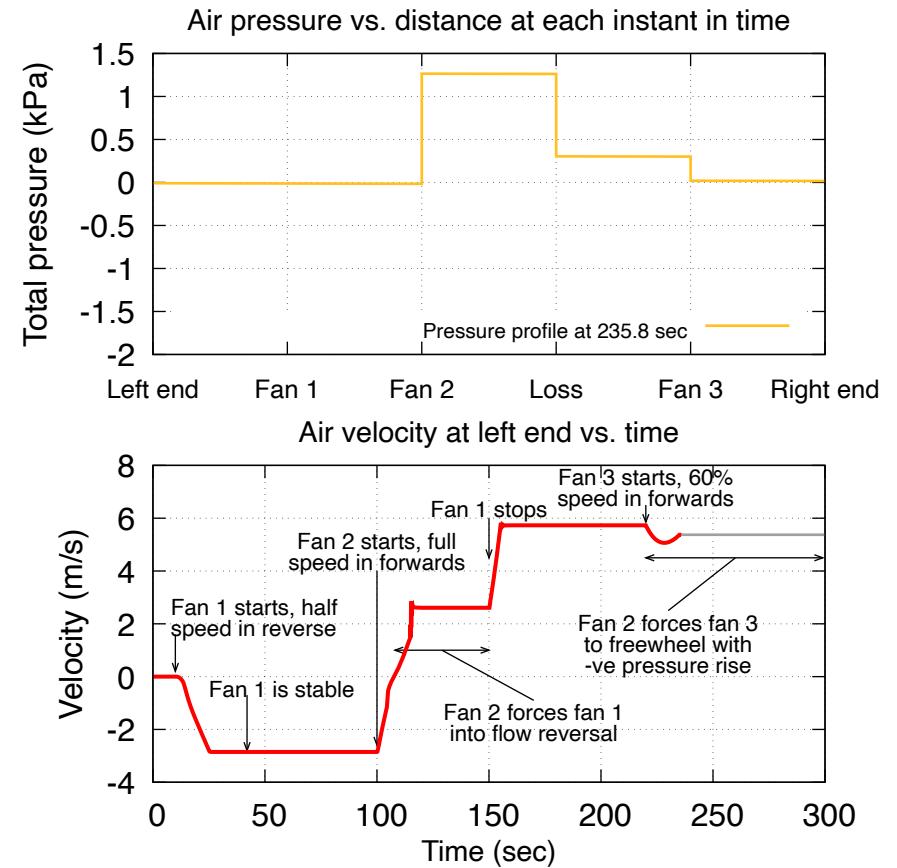

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

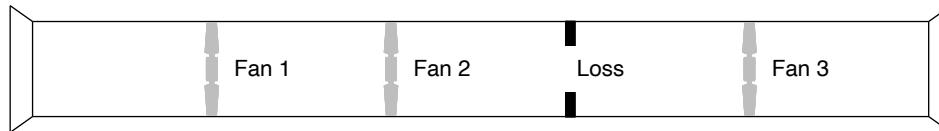



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

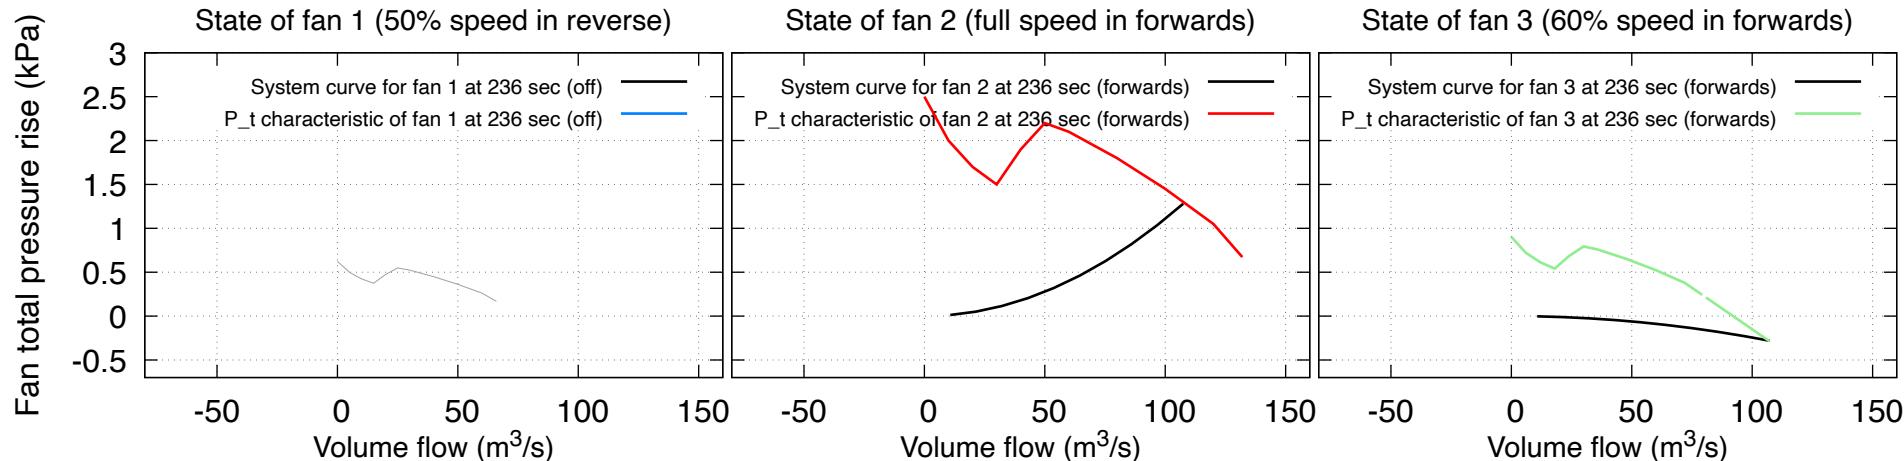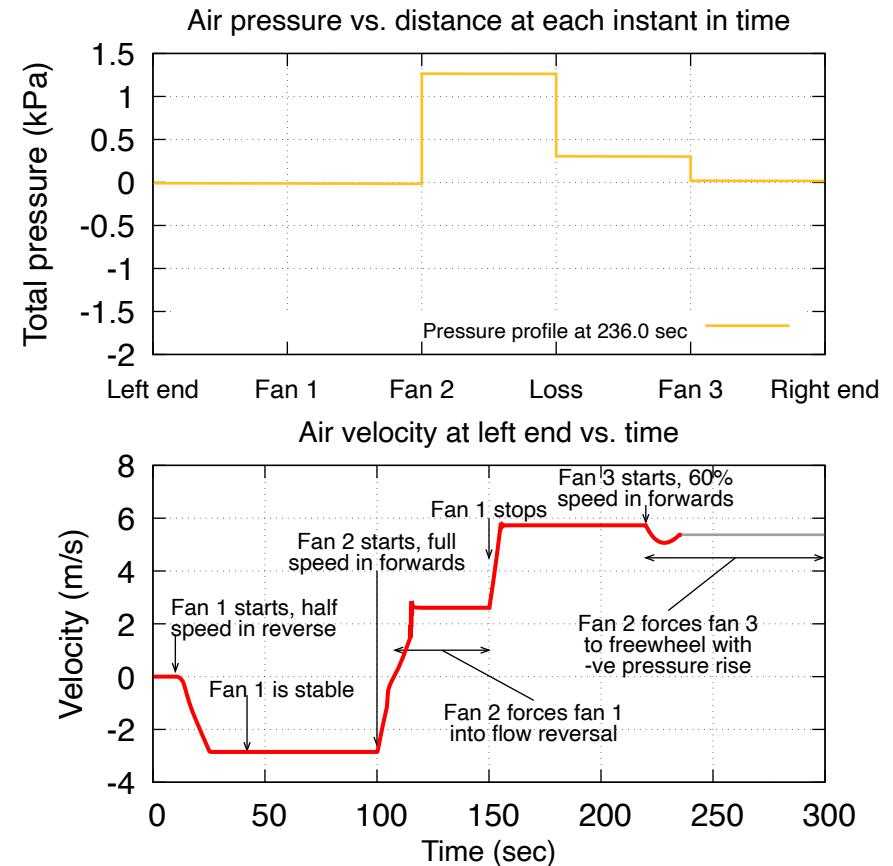

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

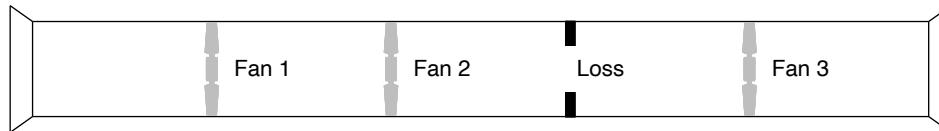



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

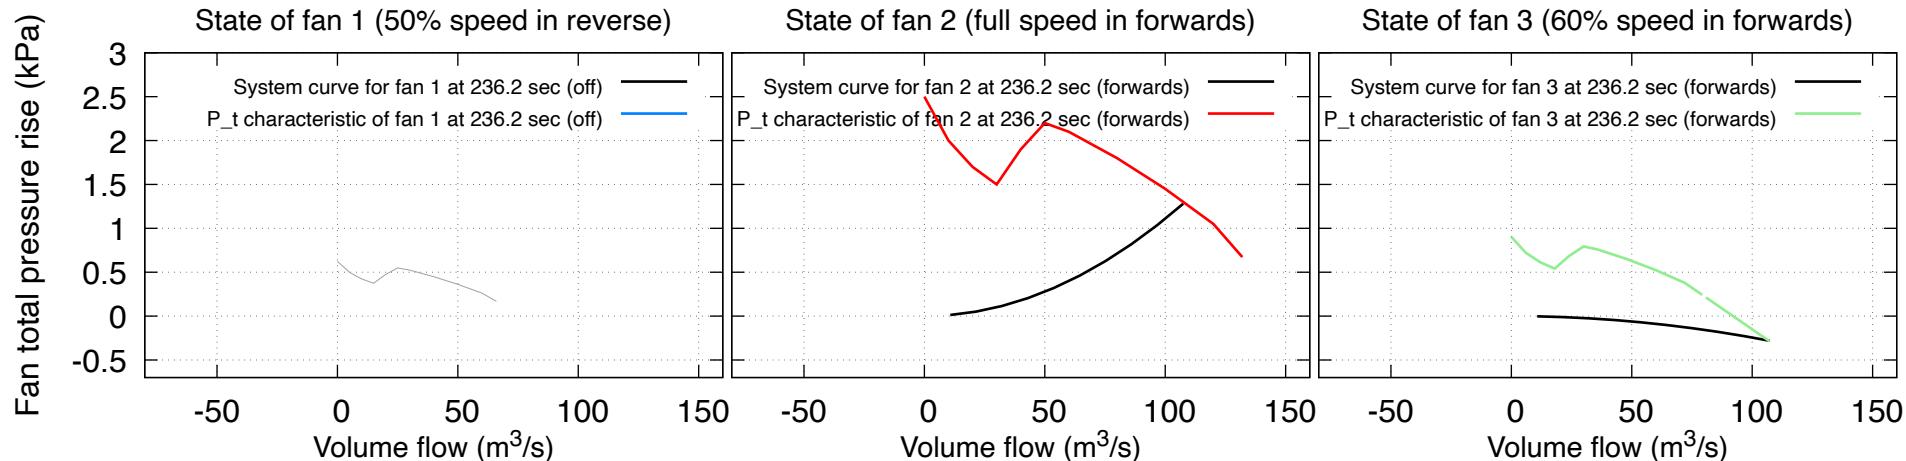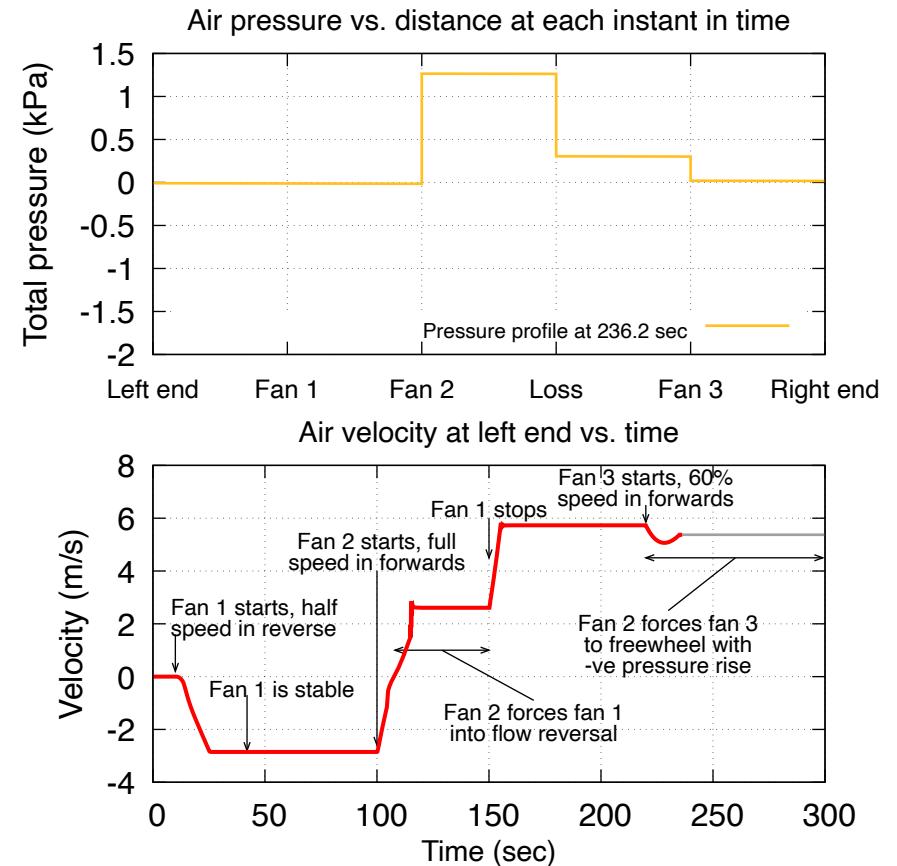

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

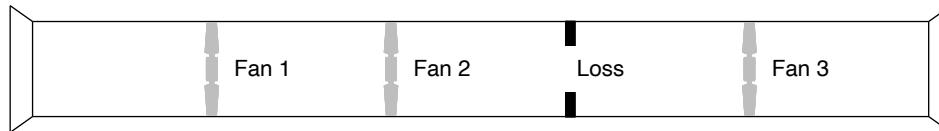



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

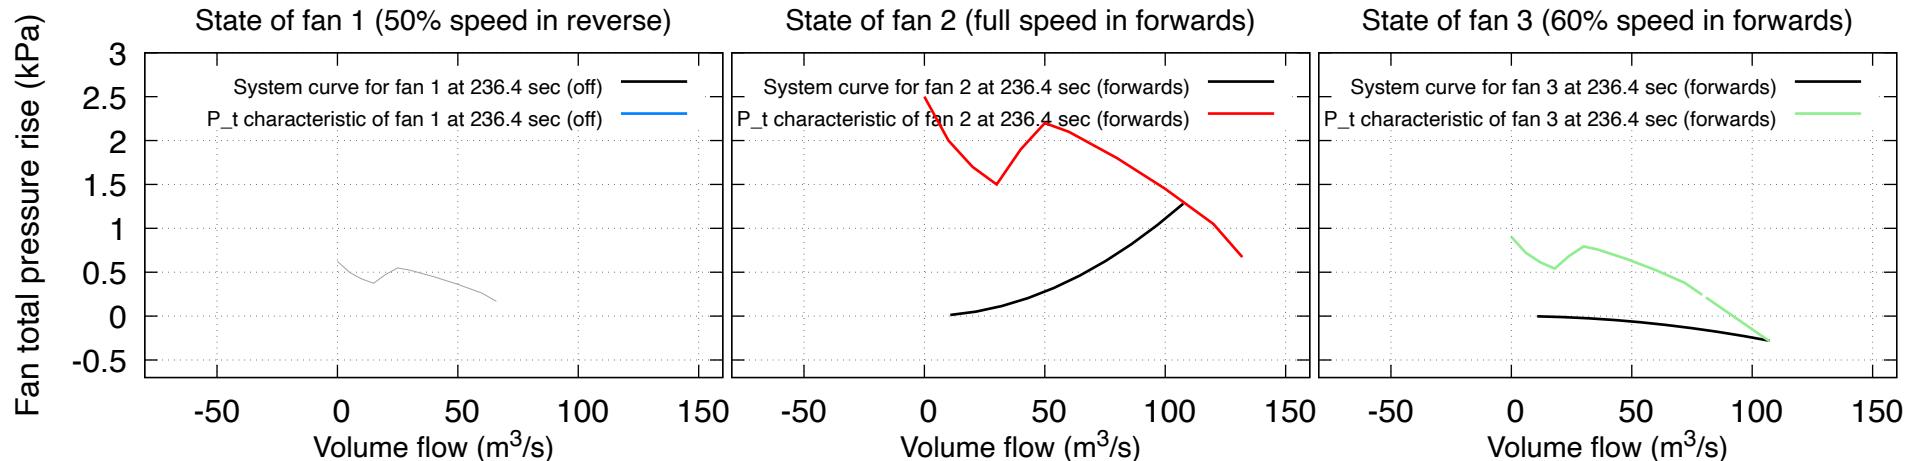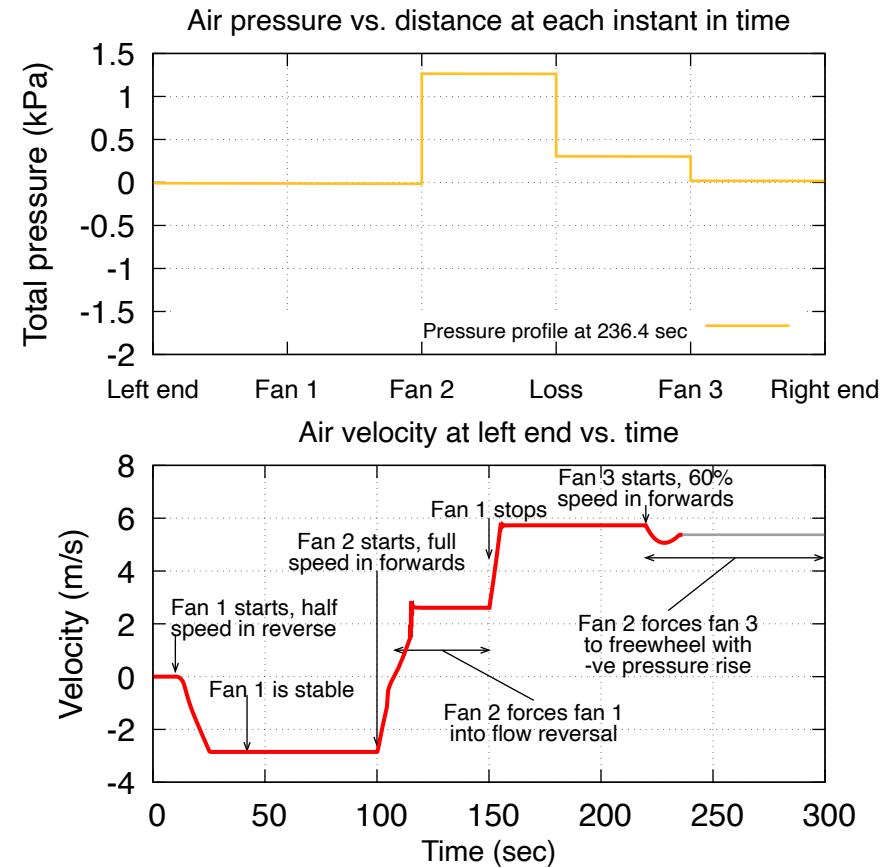

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

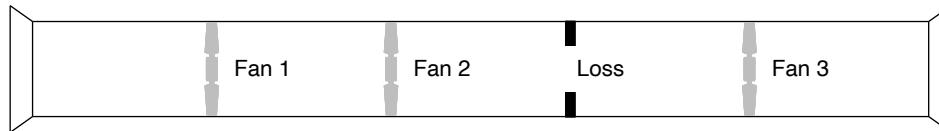



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

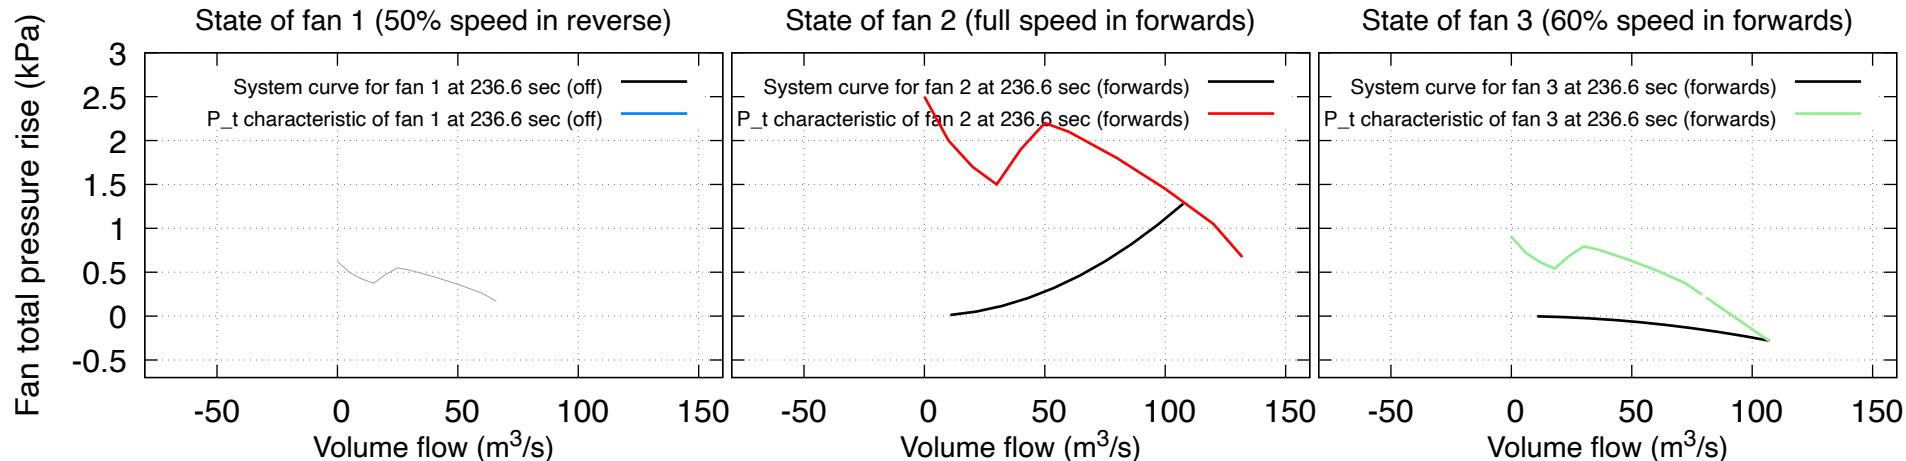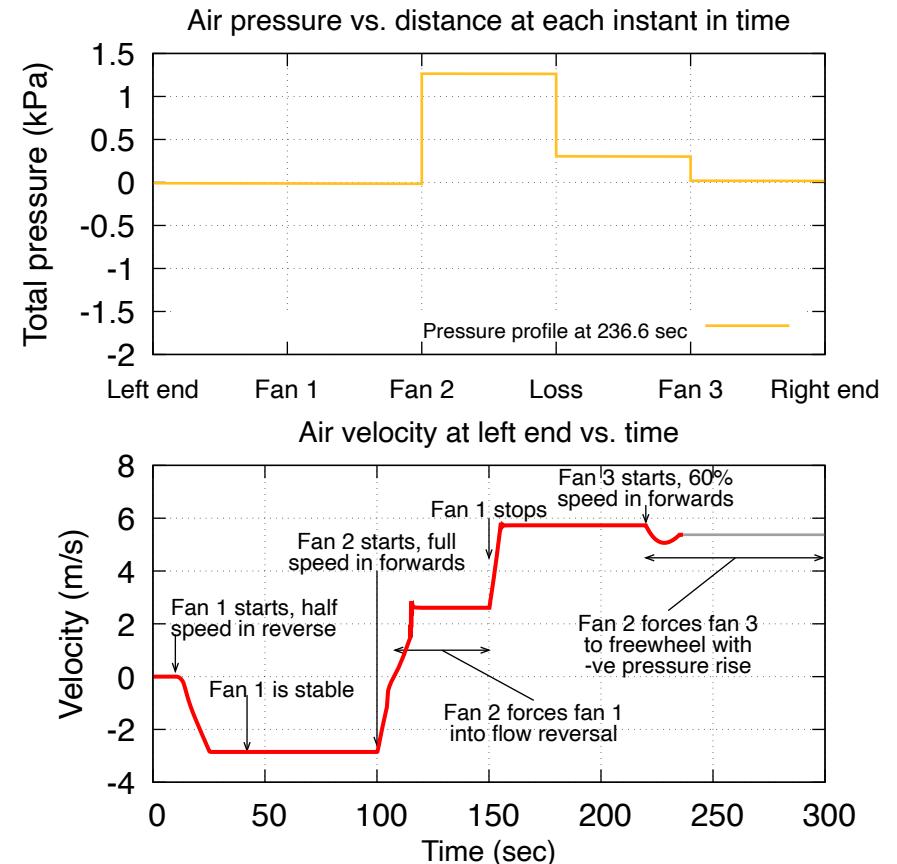

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

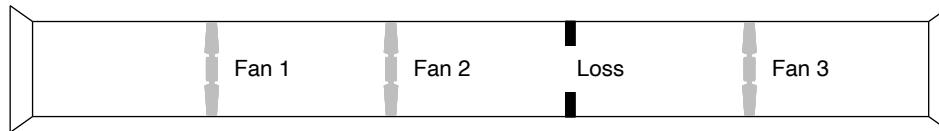



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

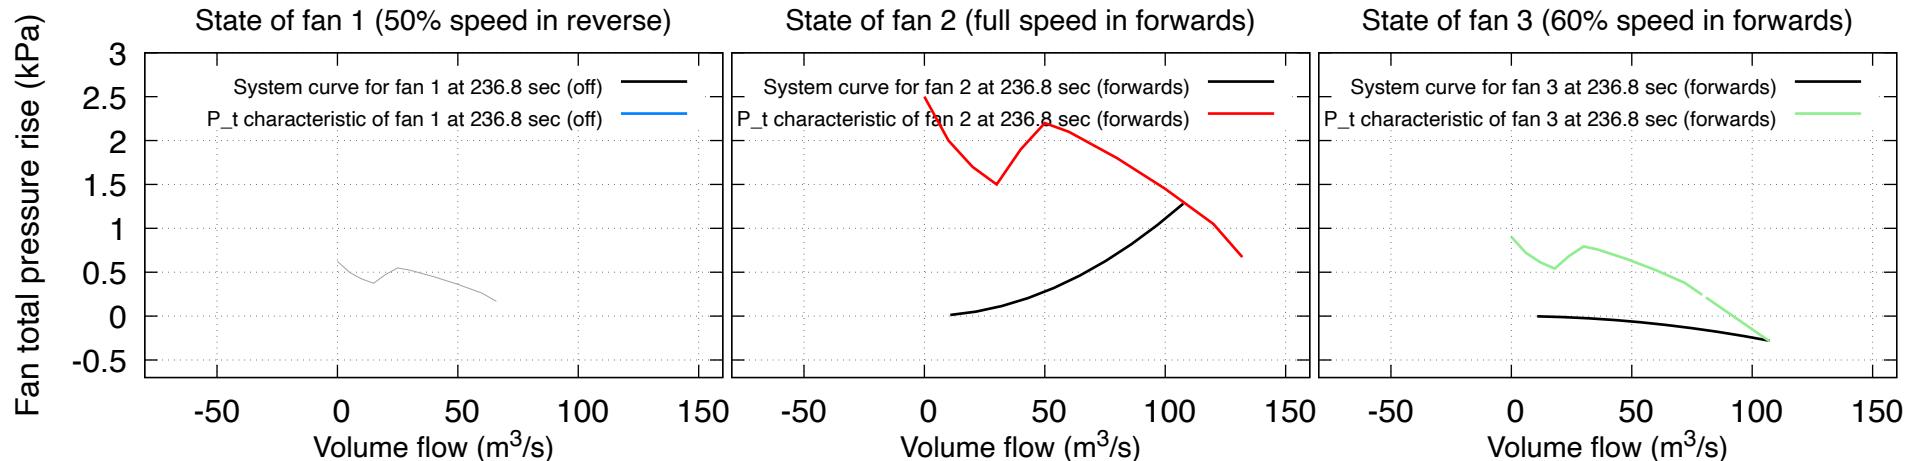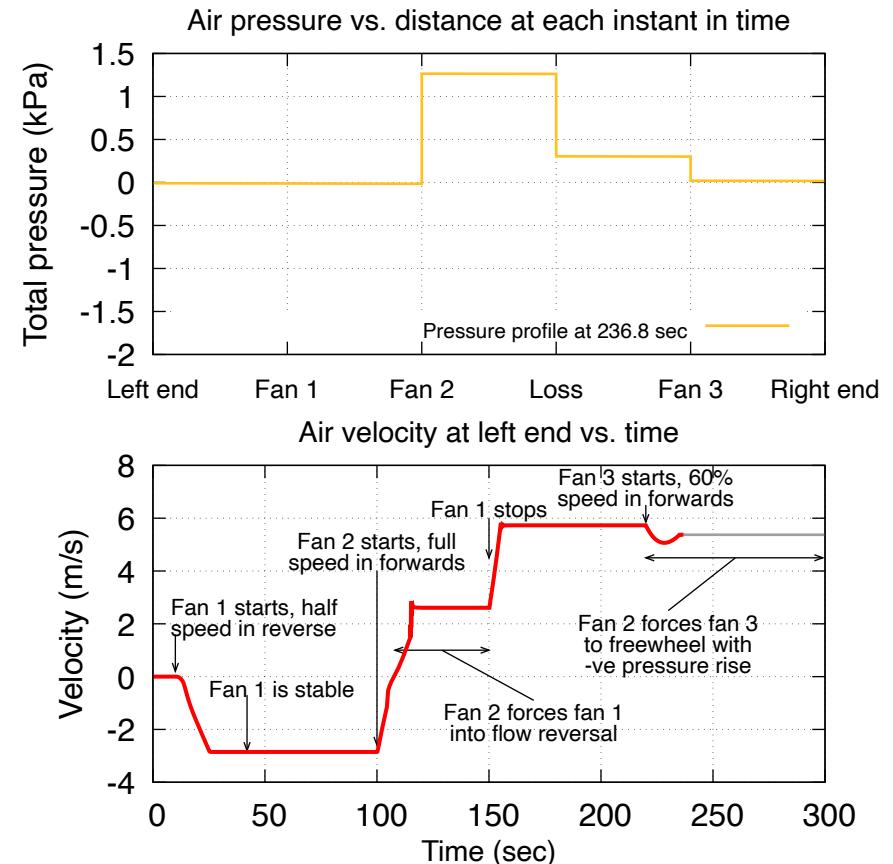

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

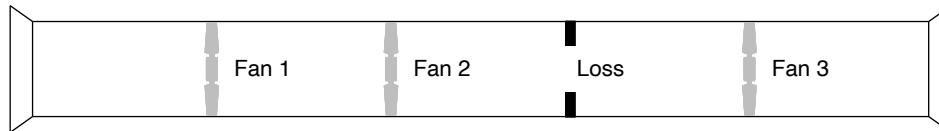



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

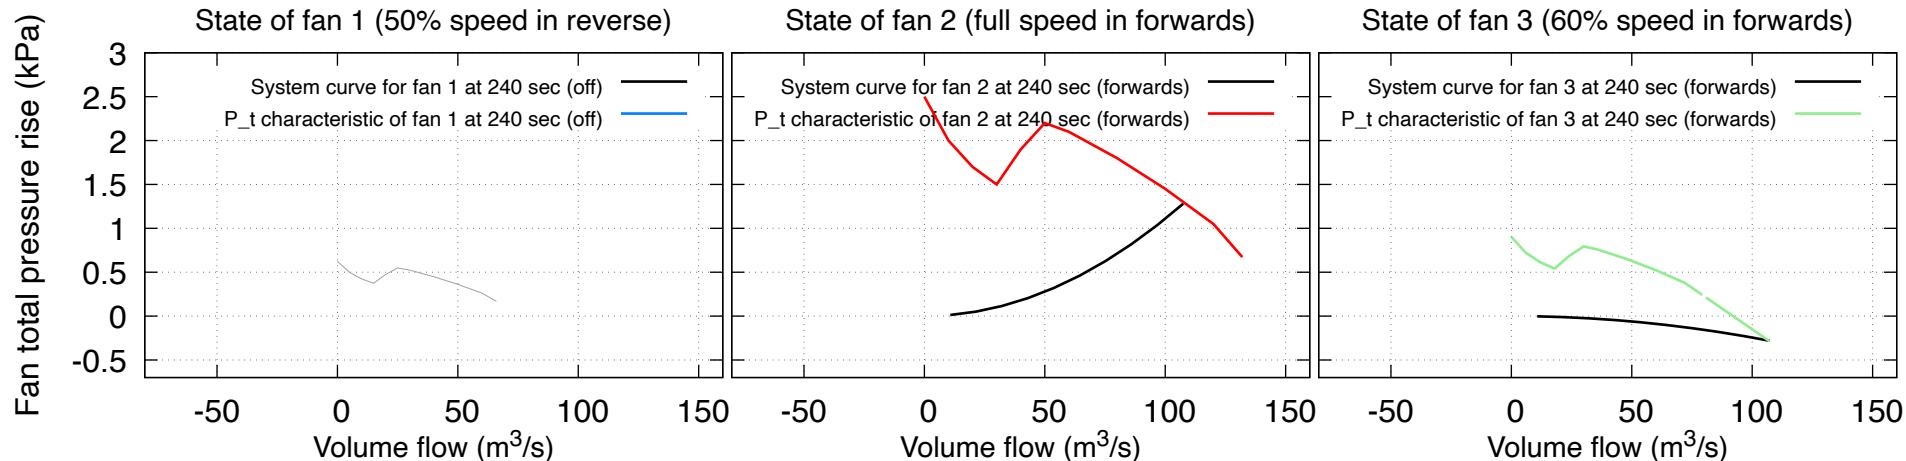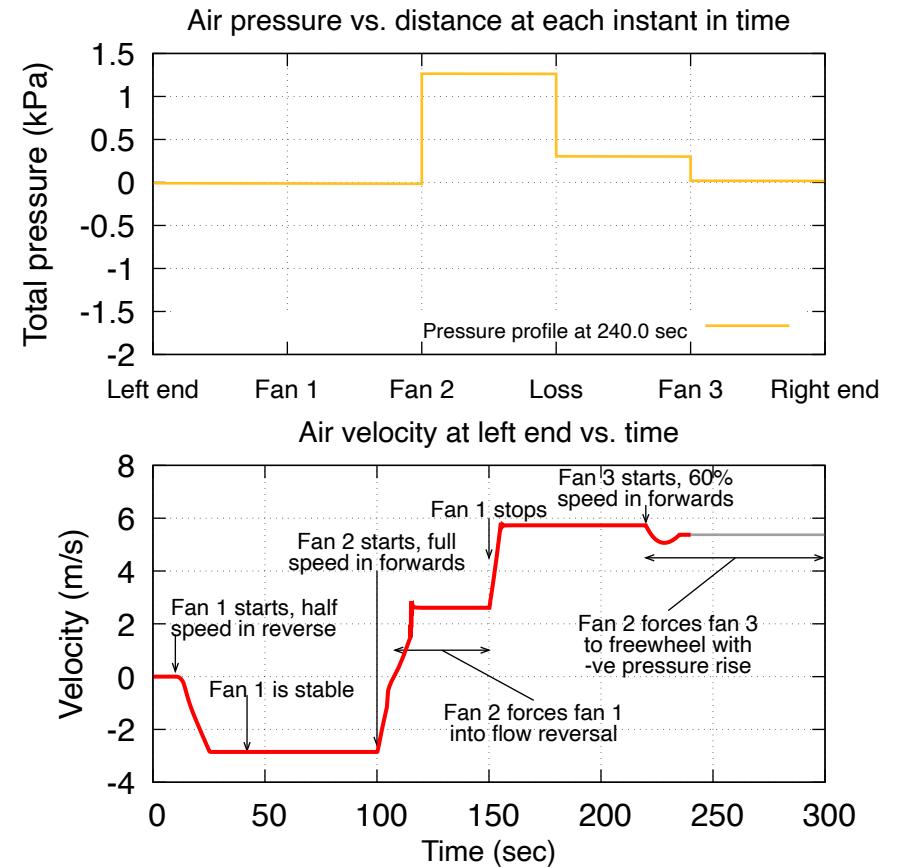

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

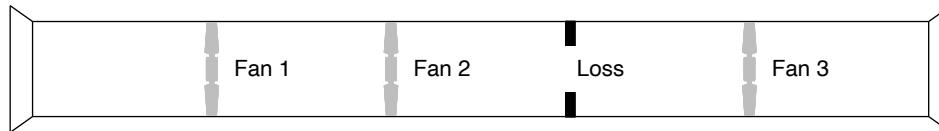



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

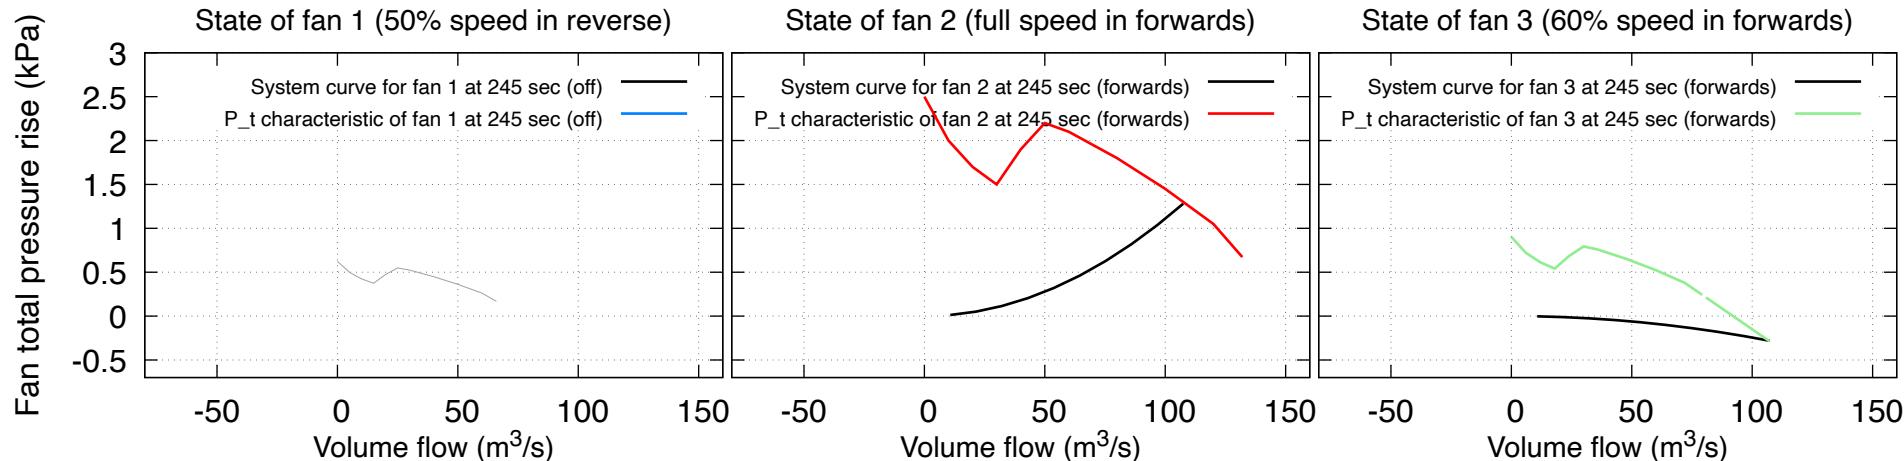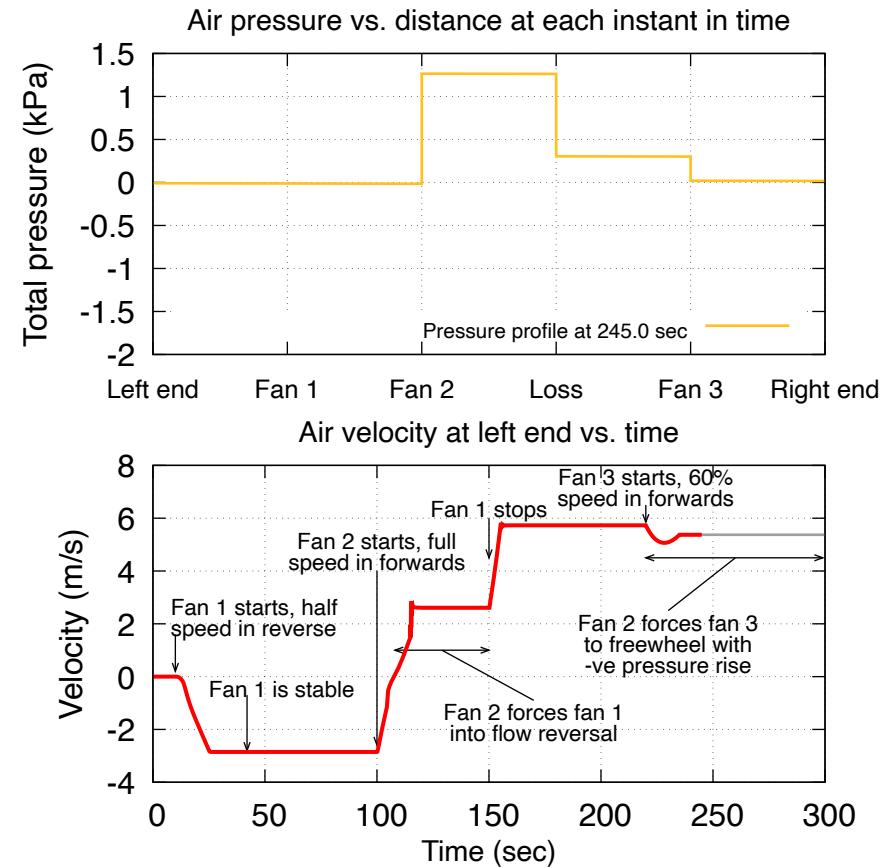

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

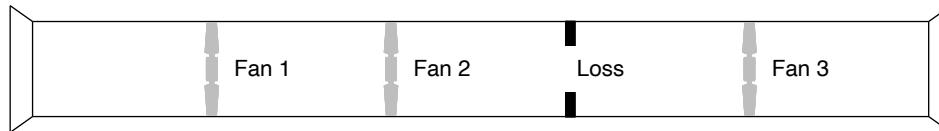



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

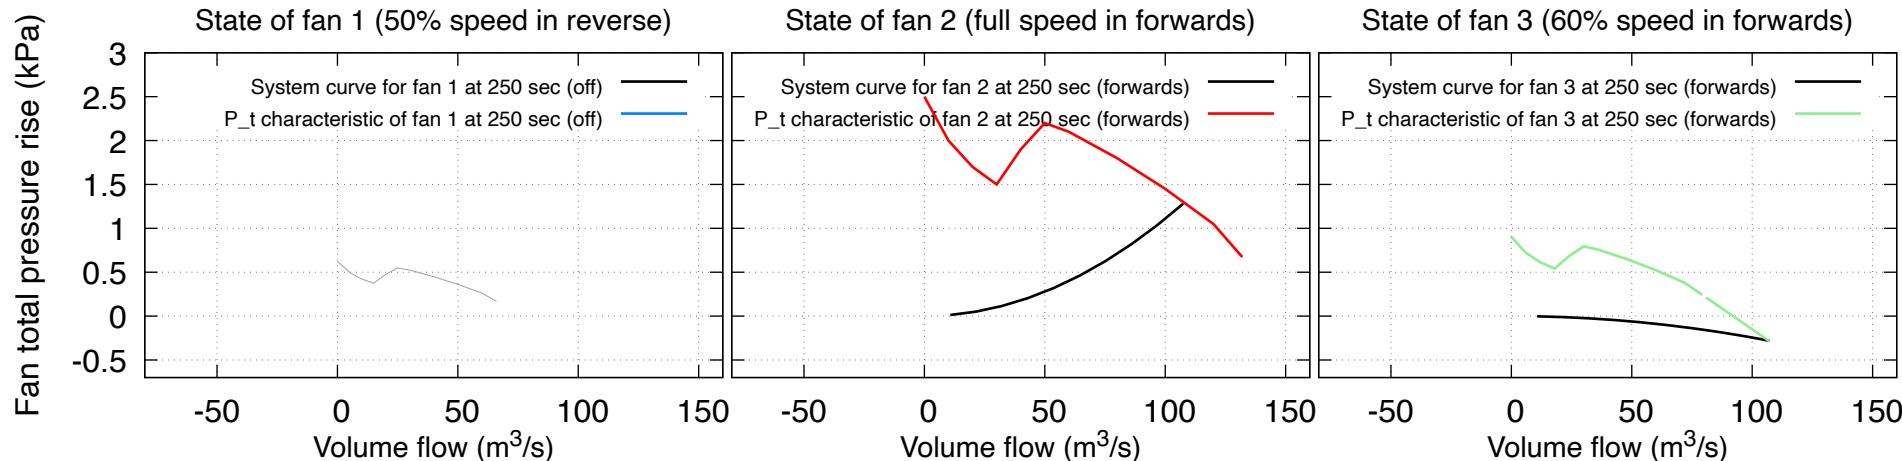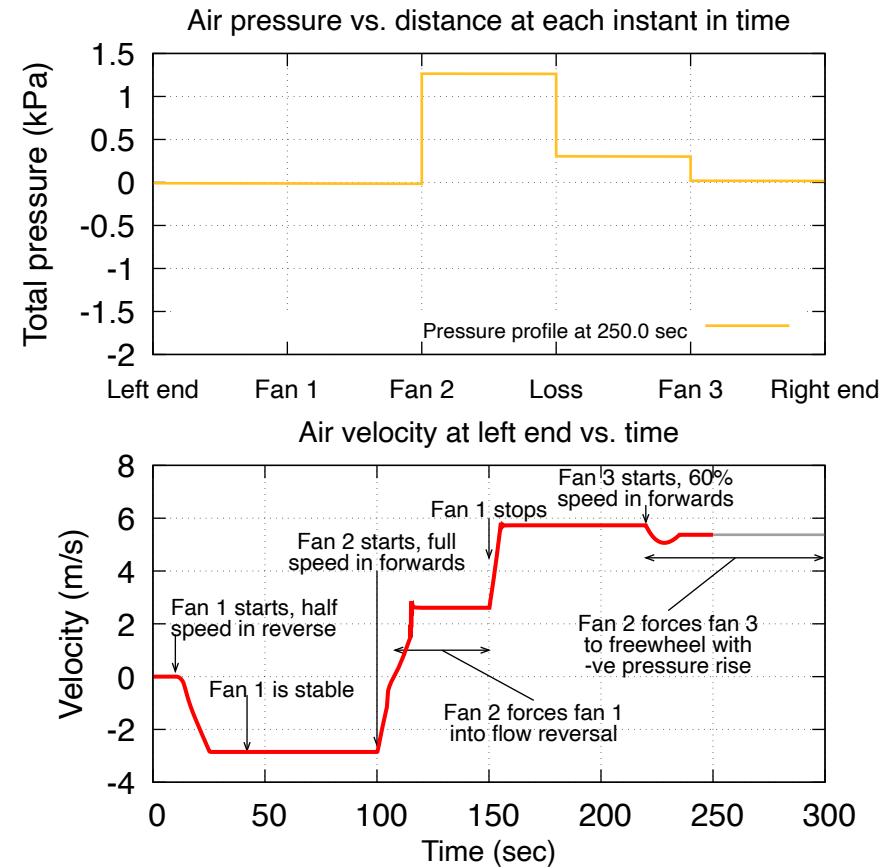

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

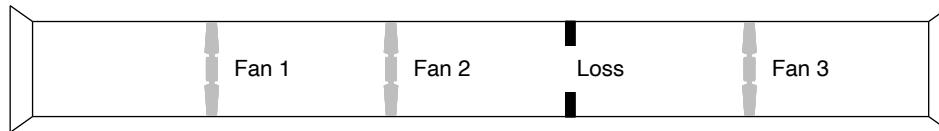



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

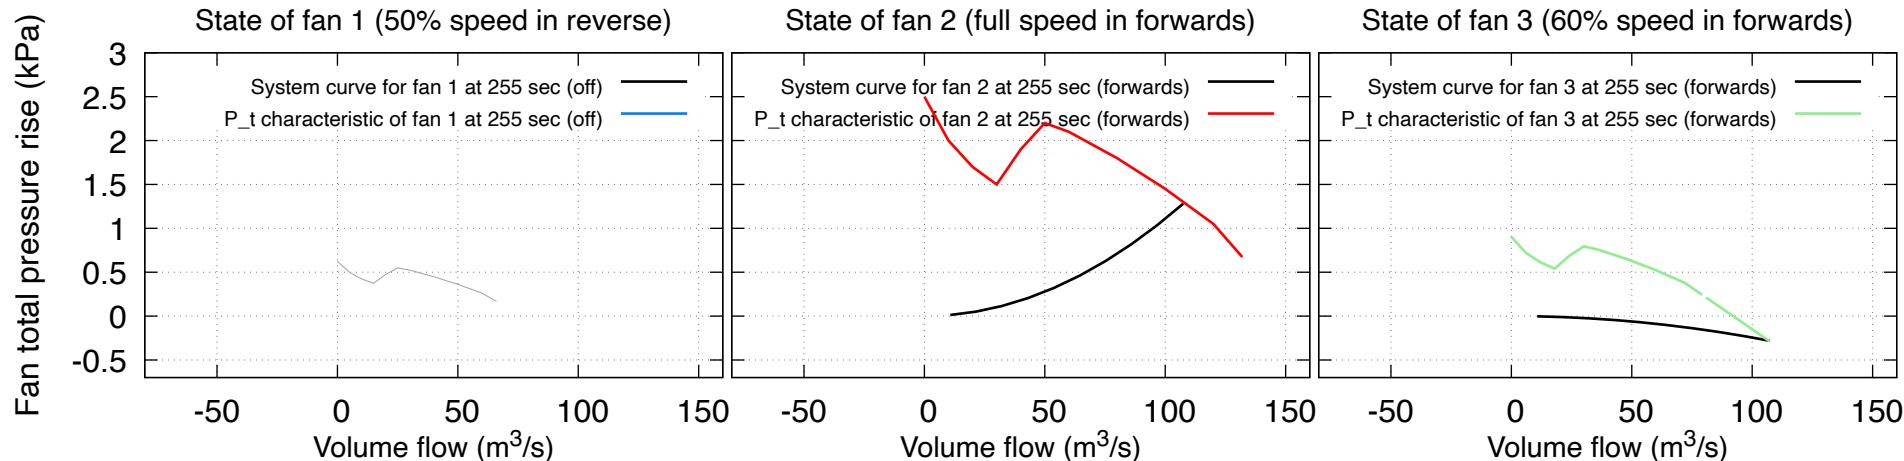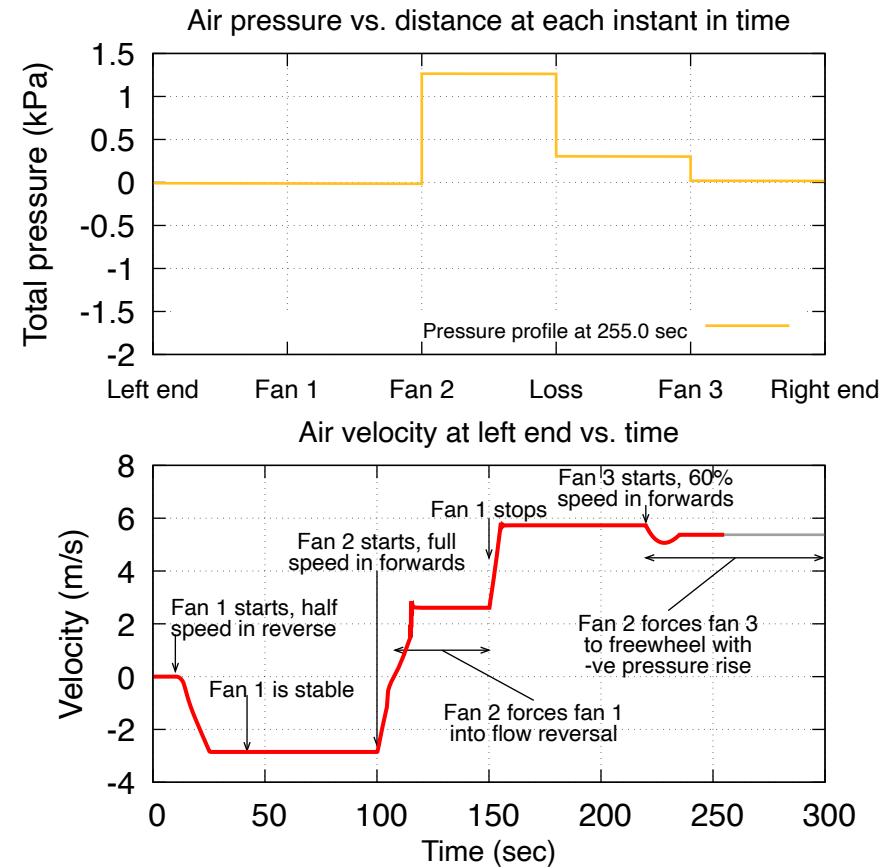

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

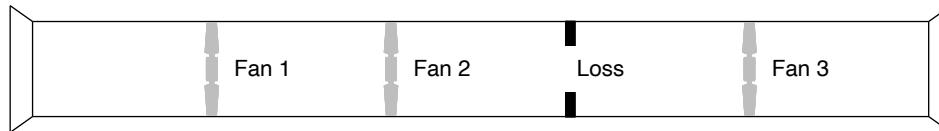



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

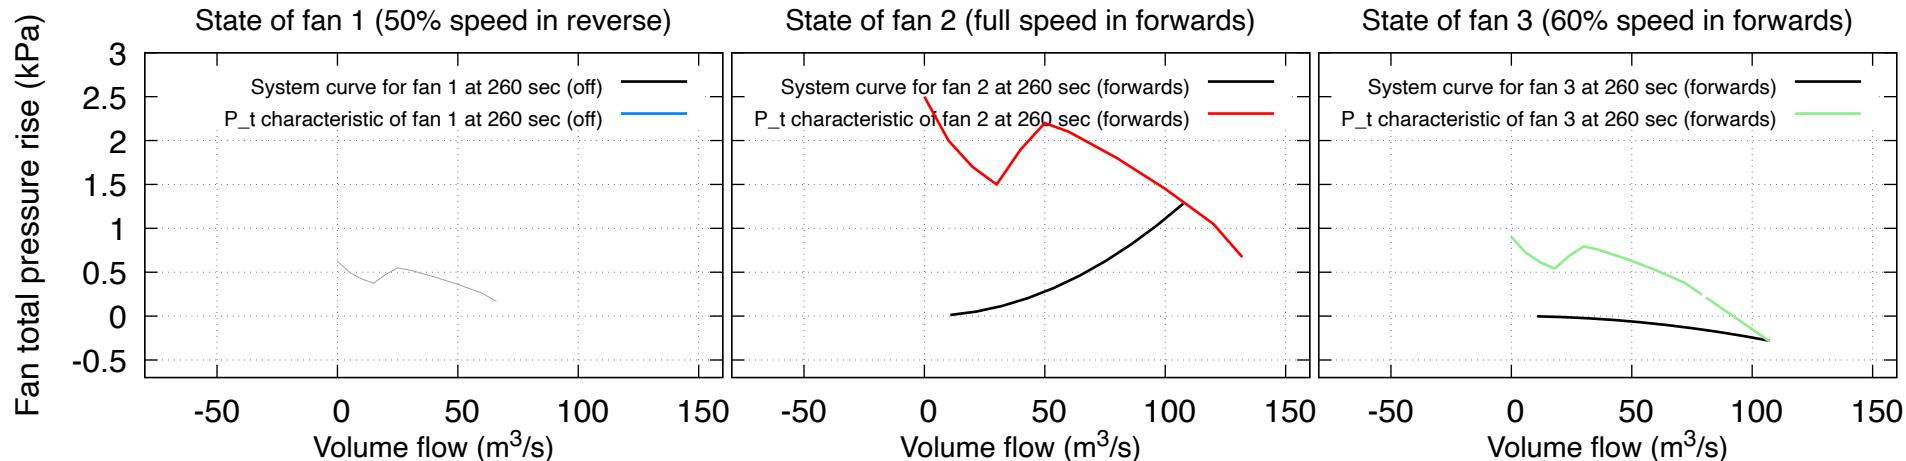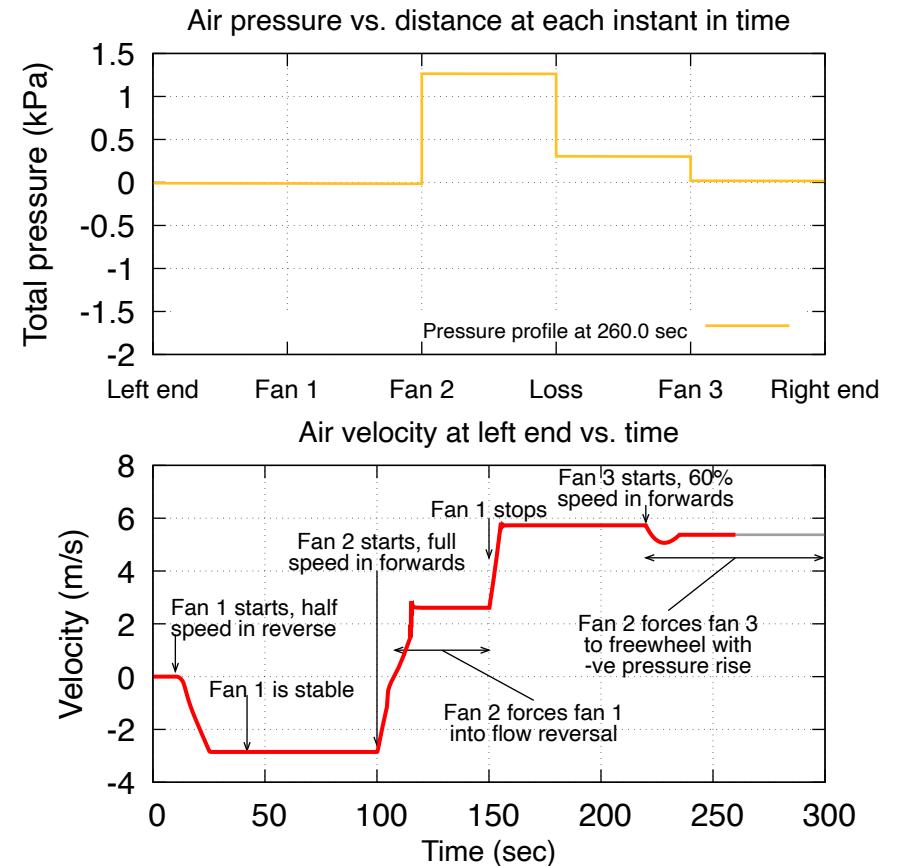

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

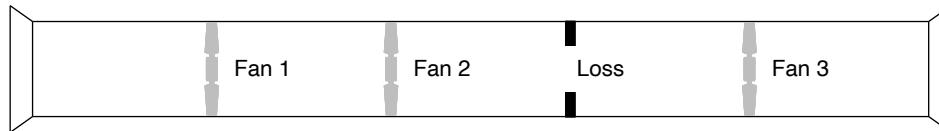



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

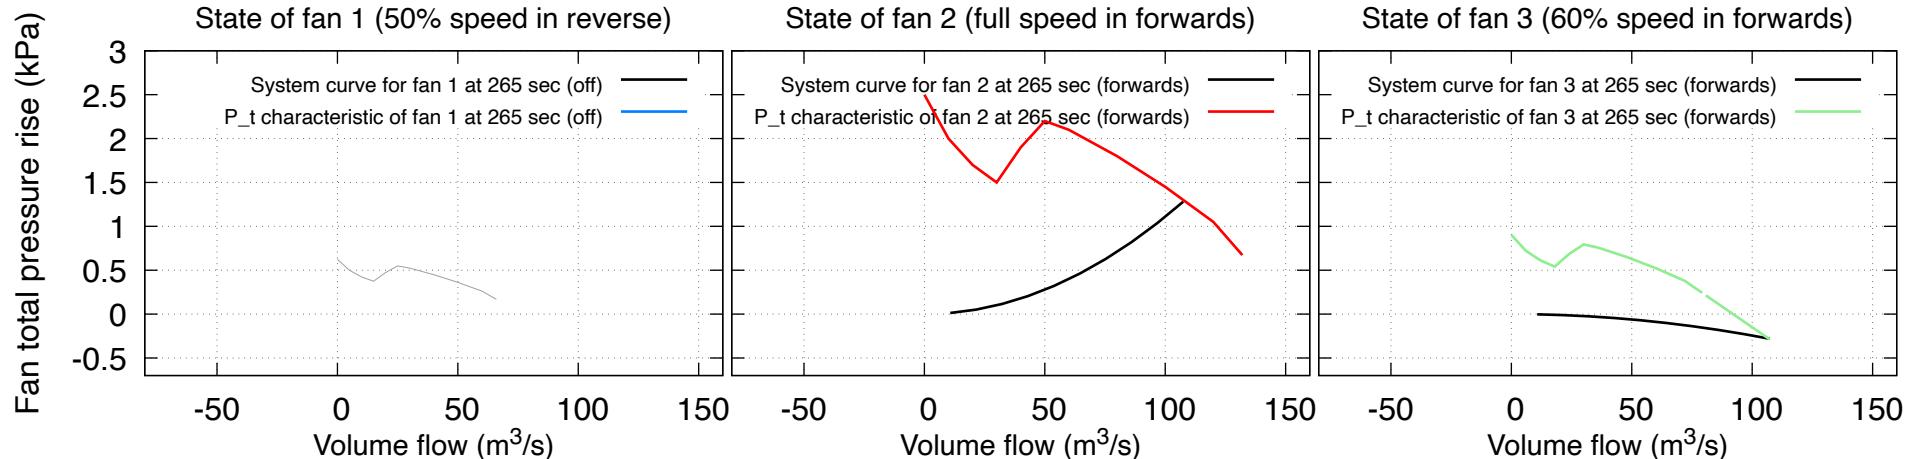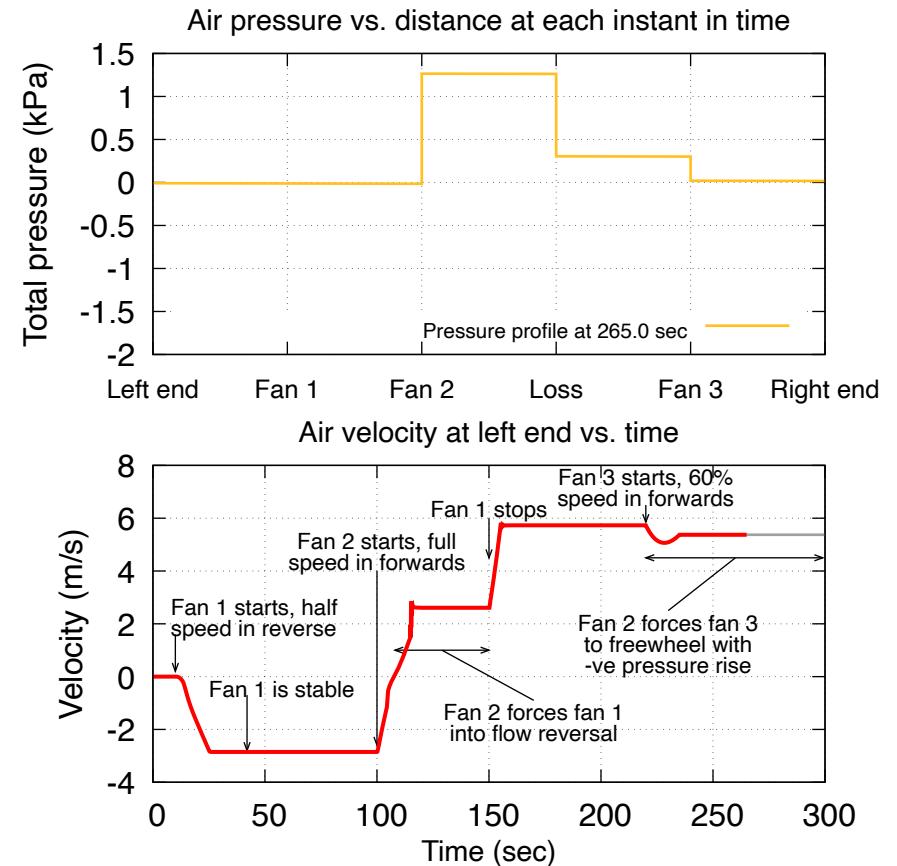

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

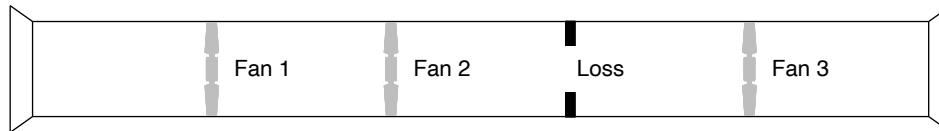



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

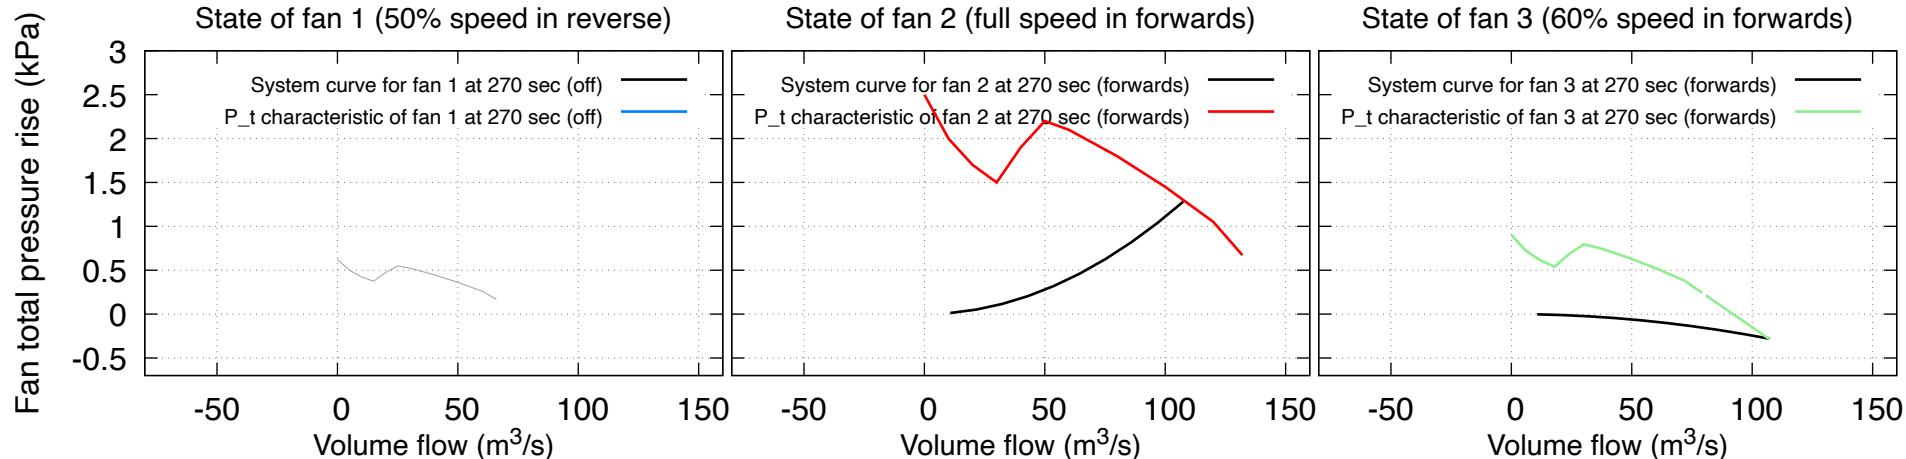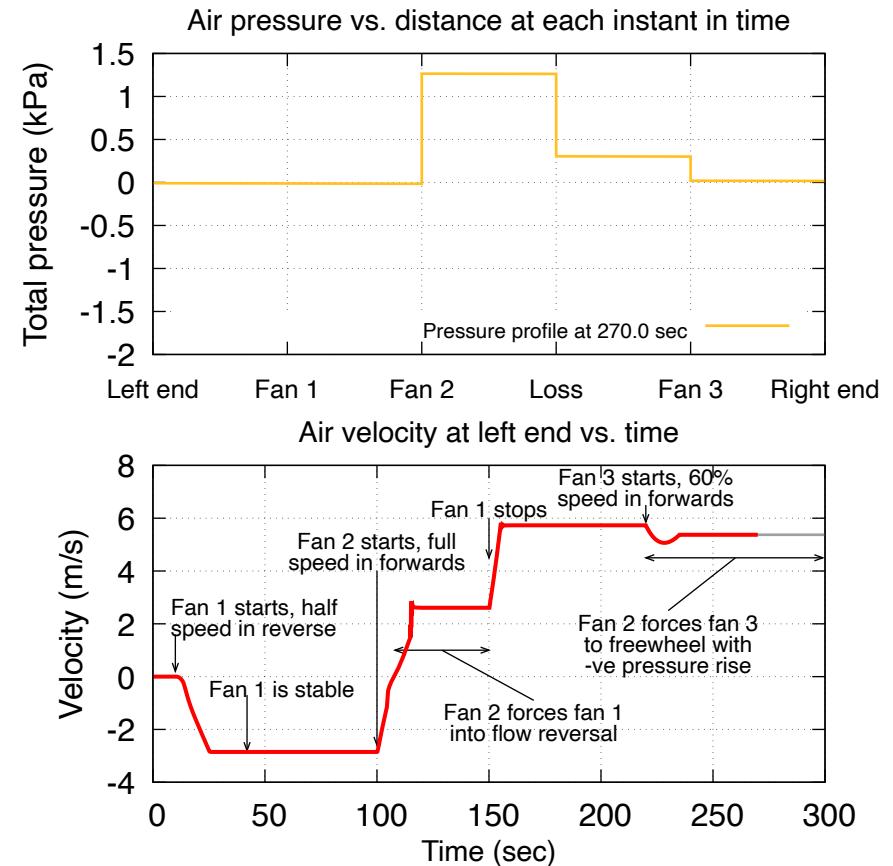

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

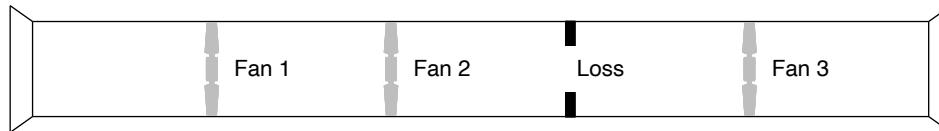



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

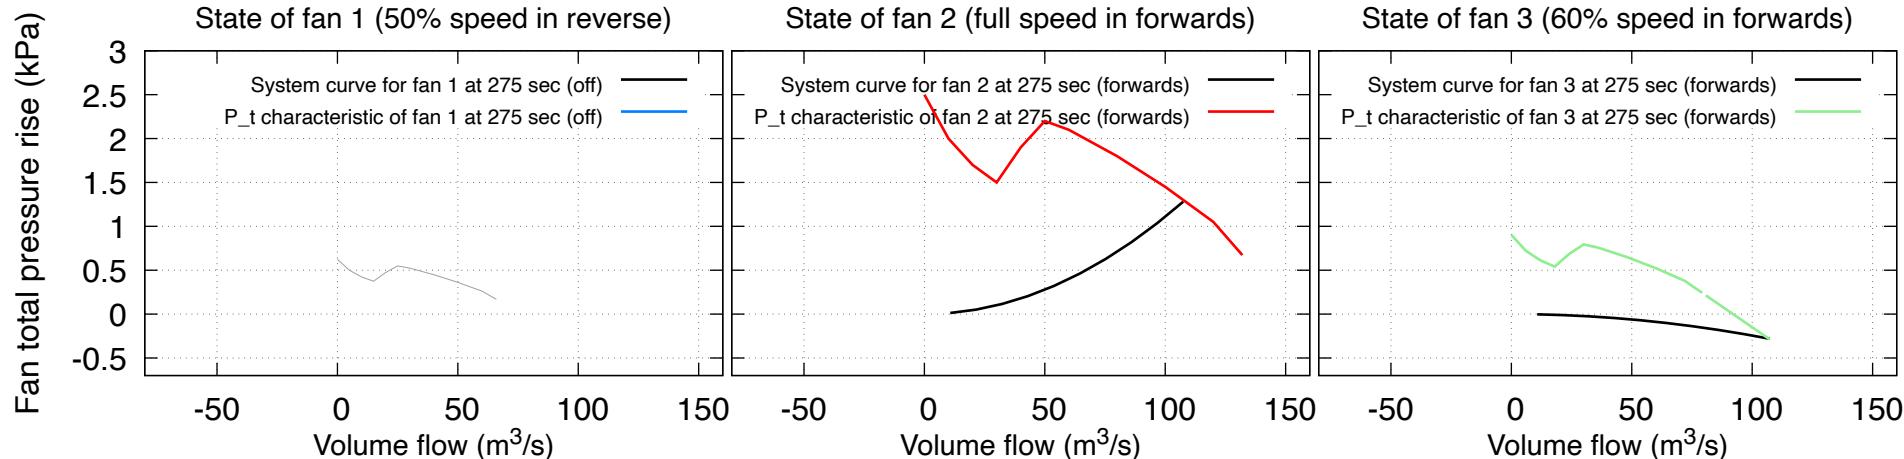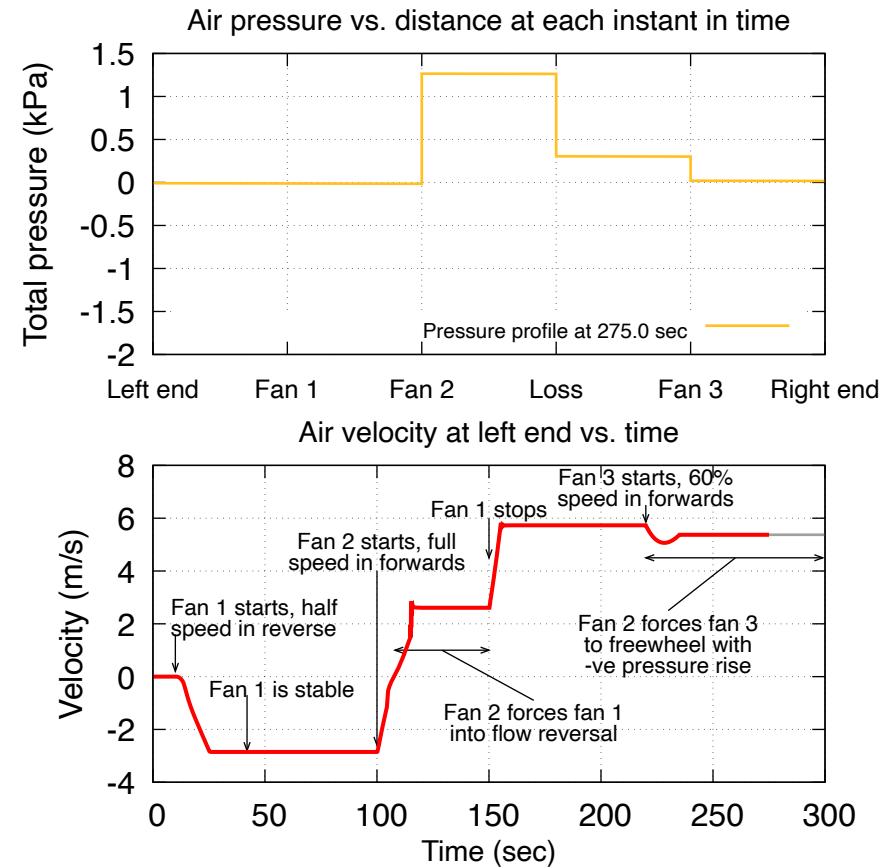

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

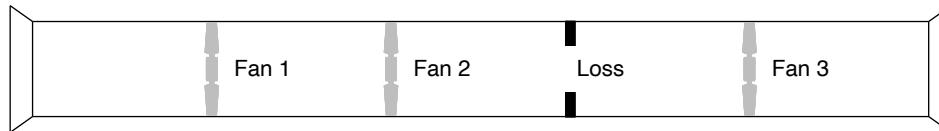



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

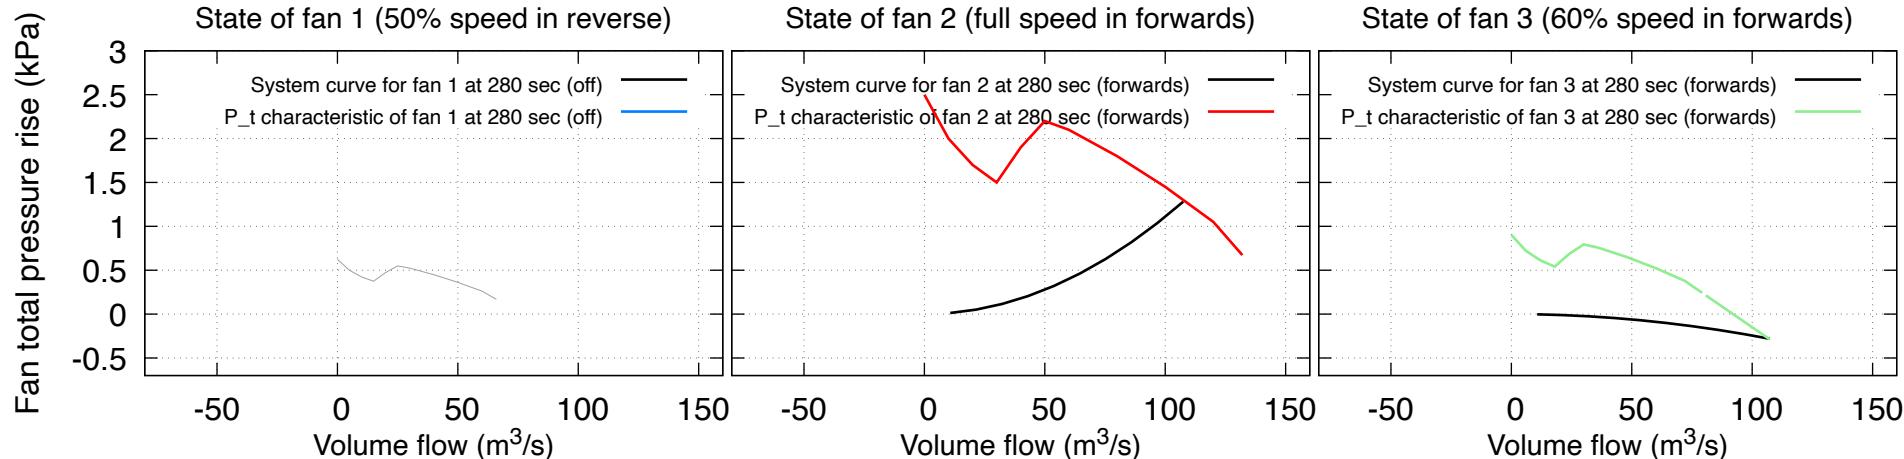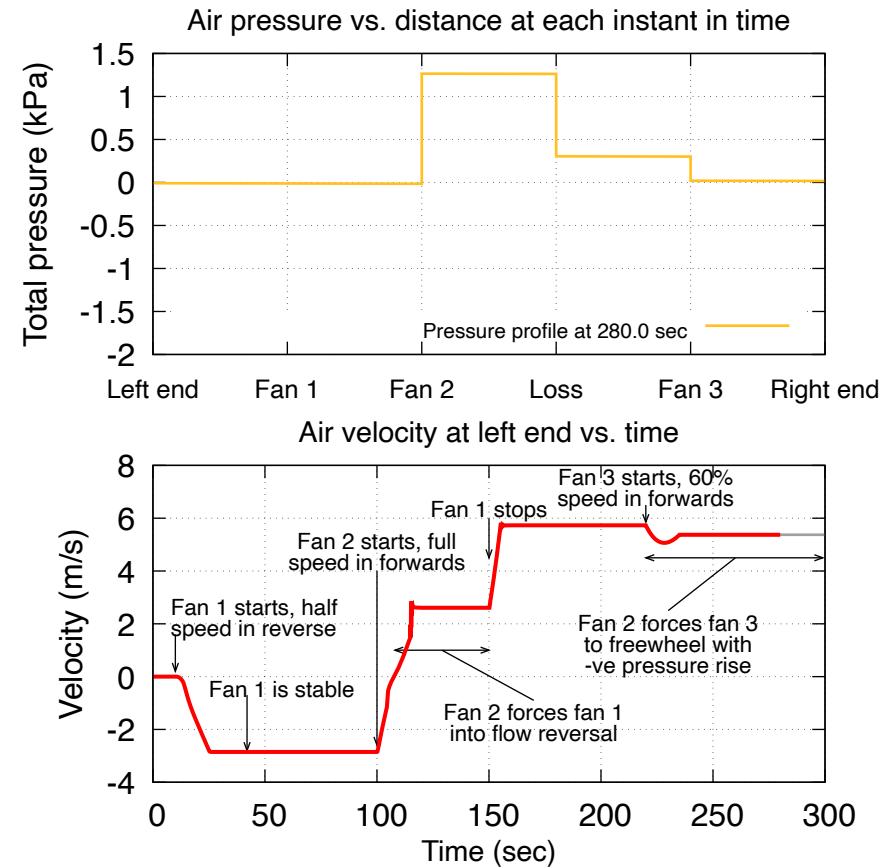

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

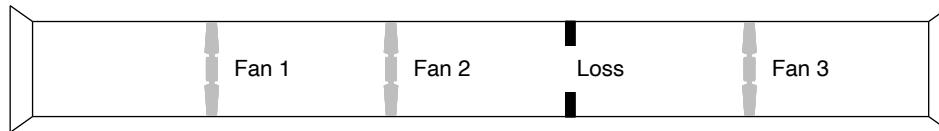



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

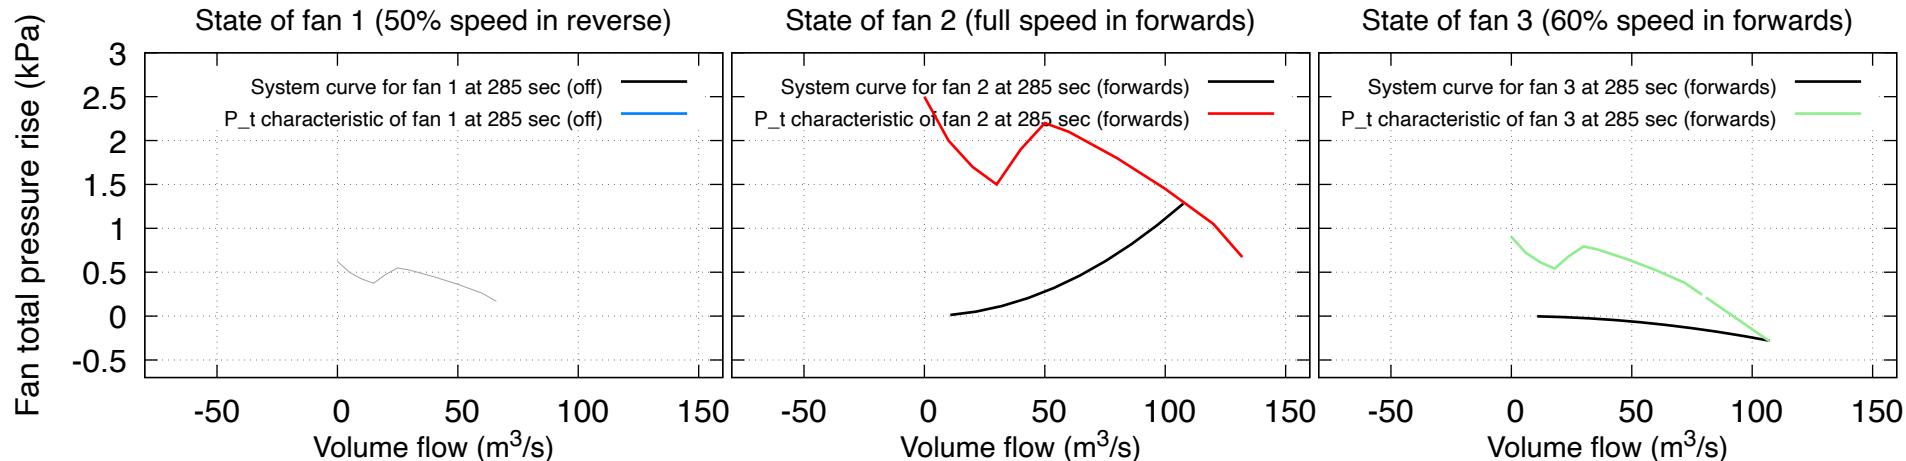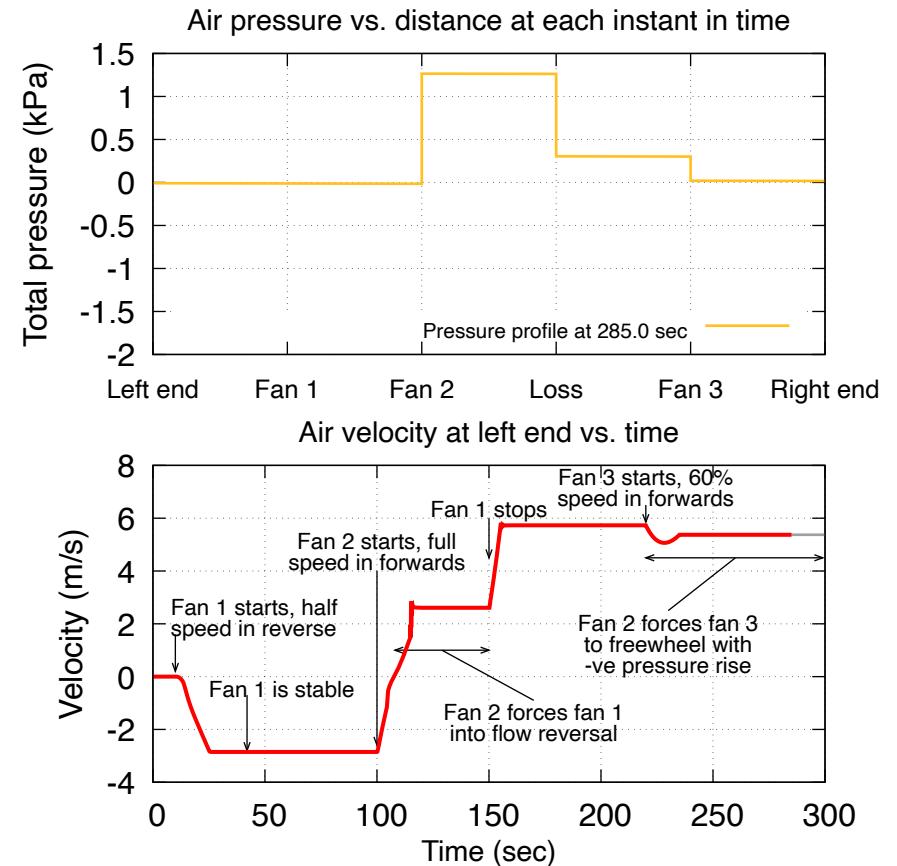

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

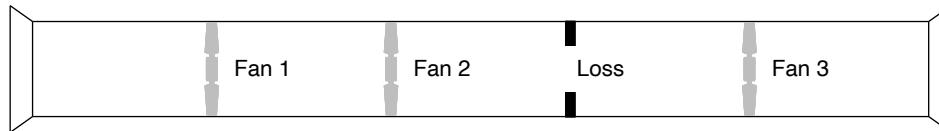



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

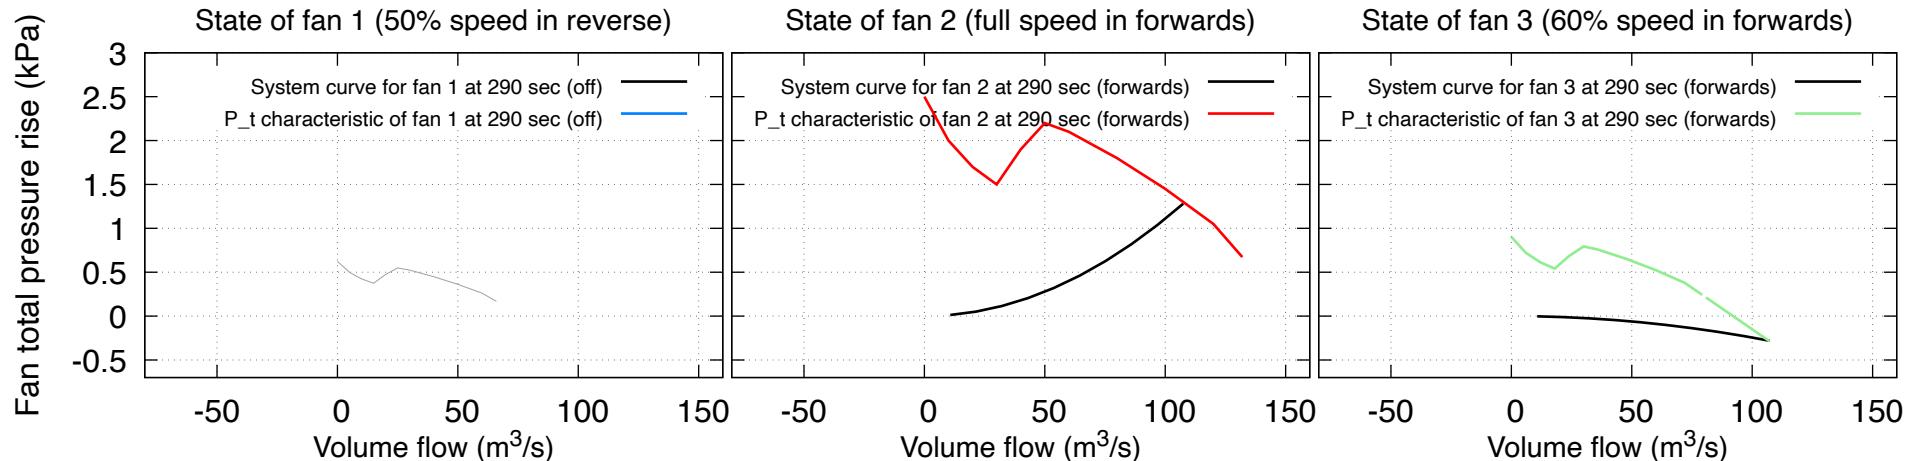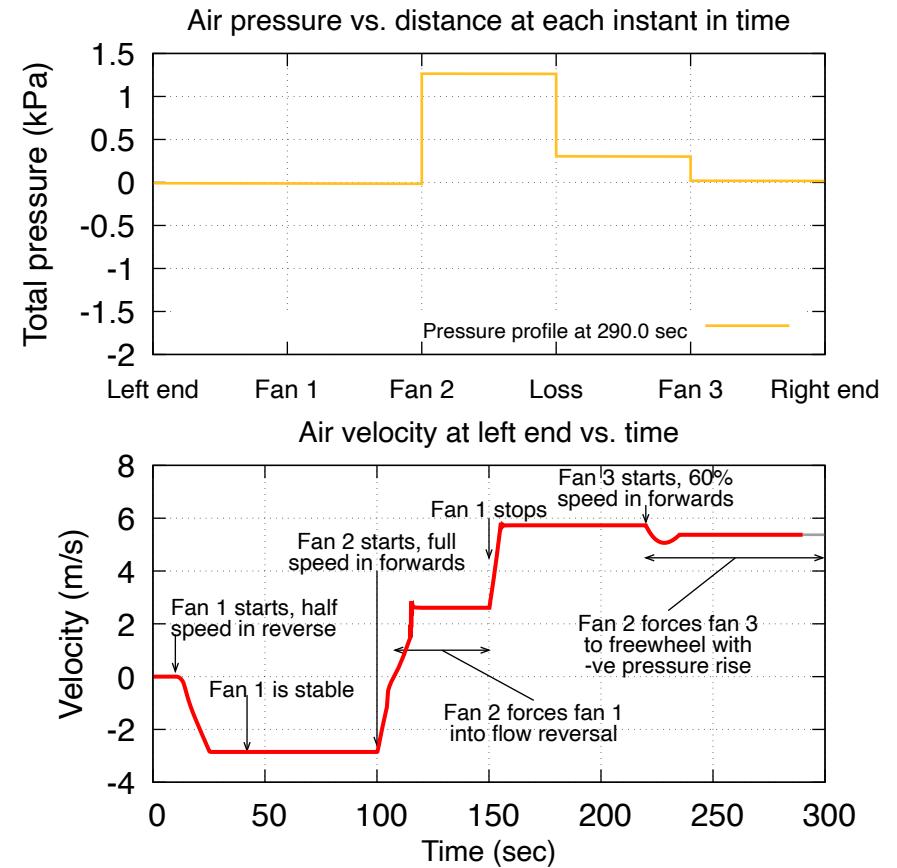

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

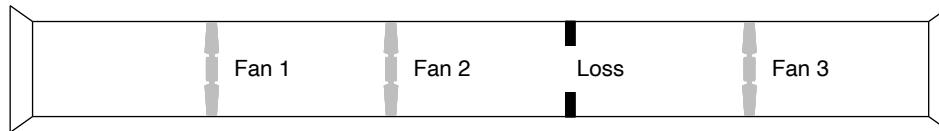



Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).


Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

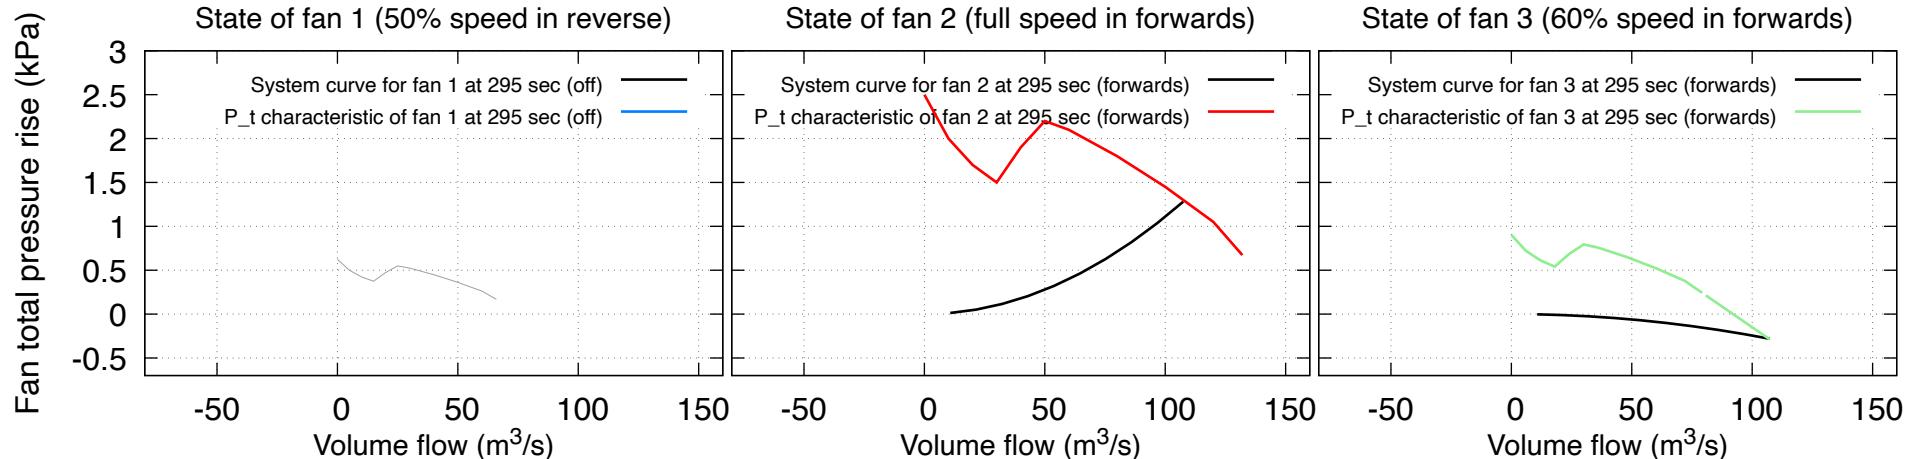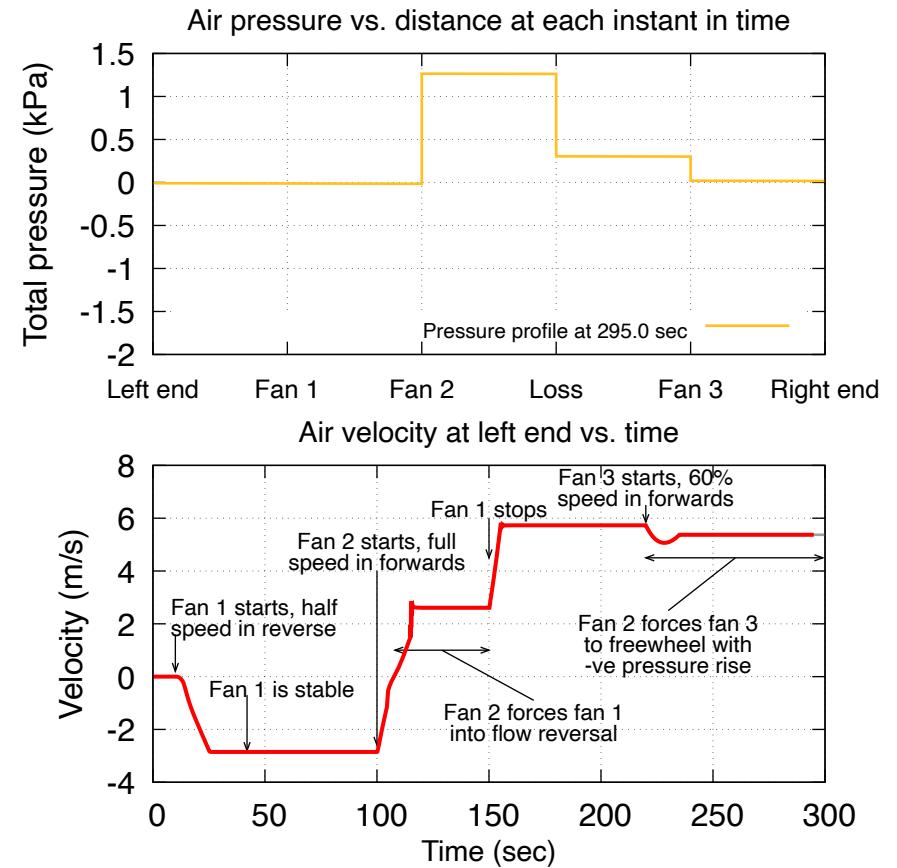

How fans in series interact

This flipbook illustrates how fans interact when they operate in series. Take three identical axial fans and a pressure loss in a 100 m long duct:

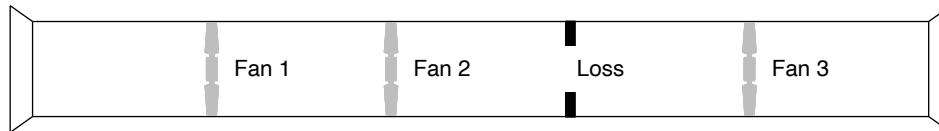

Fan 1 starts in reverse at half speed and ends up at a suitable duty point.

Then Fan 2 starts in forwards mode at full speed. It forces fan 1 into the reverse flow quadrant of its fan characteristic. The fan characteristic is not defined there, so the calculation extrapolates from the first two points on the fan curve.

Fan 2 and fan 1 oppose each other: fan 2 ends up just to the right of its stall point (there is some numerical instability before it gets there).

Fan 1 turns off, after which fan 2 moves to a better part of its characteristic.

Fan 3 starts in forwards mode at 60% speed. Fan 2 is generating so much more pressure than fan 3 that fan 3 is forced into the freewheeling part of its characteristic (which is also extrapolated) and ends up reducing the airflow.

