

Application Note AN_130 FT2232H Used in an FT245 Style Synchronous FIFO Mode

Version 1.3

Issue Date: 2015-11-17

This application note describes how to use the FT2232H device in FT245 Style Synchronous FIFO mode

Use of FTDI devices in life support and/or safety applications is entirely at the user's risk, and the user agrees to defend, indemnify and hold FTDI harmless from any and all damages, claims, suits or expense resulting from such use.

Future Technology Devices International Limited (FTDI)

Document Reference No.: FT_000186 Clearance No.: FTDI# 117



Table of Contents

1	In	troduction	2
2	На	rdware Configuration	3
2	2.1	Pin Assignment under Synchronous FIFO Interface	4
2	2.2	IO Timing	5
3	So	ftware Configuration	7
3	3.1	EEPROM Setting	8
4	Аp	plication Development	9
4	l.1	Code example	10
4	l.2	Getting The Best Performance	11
4	I.3	Write Data Mode	14
4	1.4	Read Data Mode	15
5	Co	ntact Information	16
Αp	pei	ndix A – References	17
C	Ocu	ment References	17
A	cro	nyms and Abbreviations	17
Αp	pei	ndix B – List of Tables & Figures	18
L	.ist d	of Tables	18
L	.ist d	of Figures	18
Αp	pei	ndix C– Revision History	19



Document Reference No.: FT_000186 Clearance No.: FTDI# 117

1 Introduction

This application note illustrates how to set the FT2232H into an FT245 Style Synchronous FIFO mode. If the requirement is to transfer data at 60MHz, and the data rate must greater than 8MB per second, then the FT245 Style Synchronous FIFO mode is the best solution.

The FT2232H only channel A can be configured as a FT245 style synchronous FIFO interface. When Configured in this mode, channel B is not available as all resources have been switched onto channel A.

Note: This mode is only available with port A of FT2232H device.

Document Reference No.: FT_000186 Clearance No.: FTDI# 117

2 Hardware Configuration

EEPROM Configuration:

The FT2232H device requires an external 93C46 EEPROM organized in 16-bit words. It also supports the 93C56 and 93C66 EEPROMs organized in 16-bit words.

Device connection setting:

Use a USB cable to connect an FT2232H device to a PC - the pin assignment in Table 1 - Channel A FT245 Style Synchronous FIFO Configured Pin Descriptions

give details of the required connection between the system and FT2232H.

Version 1.3

Document Reference No.: FT_000186 Clearance No.: FTDI# 117

2.1 Pin Assignment under Synchronous FIFO Interface

Only channel A of FT2232H device can be configured as a FT245 style synchronous FIFO interface. When it is configured in this mode, the pins used and the descriptions of the signals are shown as Table 1 -Channel A FT245 Style Synchronous FIFO Configured Pin Descriptions

Channel A Pin No.	Name	Туре	RS245 Configuration Description	
24,23,22,21, 19,18,17,16	ADBUS[7:0]	I/O	D7 to D0 bidirectional FIFO data. This bus is normally input unless OE# is low.	
data available in the FIFO value. When in synchronous clock that RXF# and RD# a		When high, do not read data from the FIFO. When low, there is data available in the FIFO which can be read by driving RD# low. When in synchronous mode, data is transferred on every clock that RXF# and RD# are both low. Note that the OE# pin must be driven low at least 1 clock period before asserting RD# low.		
27	TXE#	OUTPUT	When high, do not write data into the FIFO. When low, data can be written into the FIFO by driving WR# low. When in synchronous mode, data is transferred on every clock that TXE# and WR# are both low.	
28	RD#	INPUT	Enables the current FIFO data byte to be driven onto D0D7 when RD# goes low. The next FIFO data byte (if available) is fetched from the receive FIFO buffer each CLKOUT cycle until RD# goes high.	
29	WR#	INPUT	Enables the data byte on the D0D7 pins to be written into the transmit FIFO buffer when WR# is low. The next FIFO data byte is written to the transmit FIFO buffer each CLKOUT cycle until WR# goes high.	
32	CLKOUT	OUTPUT	60 MHz Clock driven from the chip. All signals should be synchronized to this clock.	
33	OE#	INPUT	Output enable when low to drive data onto D0-7. This should be driven low at least 1 clock period before driving RD# low to allow for data buffer turn-around.	
on rer wil		INPUT	The Send Immediate / WakeUp signal combines two functions on a single pin. If USB is in suspend mode (PWREN# = 1) and remote wakeup is enabled in the EEPROM, strobing this pin low will cause the device to request a resume on the USB Bus. Normally, this can be used to wake up the Host PC.	
			During normal operation (PWREN# = 0), if this pin is strobed low any data in the device TX buffer will be sent out over USB on the next Bulk-IN request from the drivers regardless of the pending packet size. This can be used to optimize USB transfer speed for some applications. Tie this pin to VCCIO if not used.	

Table 1 - Channel A FT245 Style Synchronous FIFO Configured Pin Descriptions

Document Reference No.: FT_000186 Clearance No.: FTDI# 117

2.2 IO Timing


It's necessary to follow the IO timing as shown in Figure 1 - Read Timing

and Figure 2 - Write Timing

to access the data. Note that only a read or a write cycle can be performed at any one time. Data is read or written on the rising edge of the CLKOUT clock.


Table 2 - Timing Table

shows the detail information for the timing.

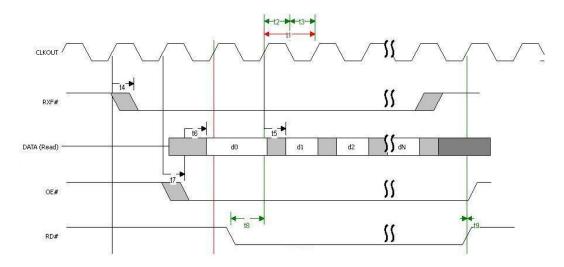

Read Timing (External system read data from FTDI chip)

Figure 1 - Read Timing

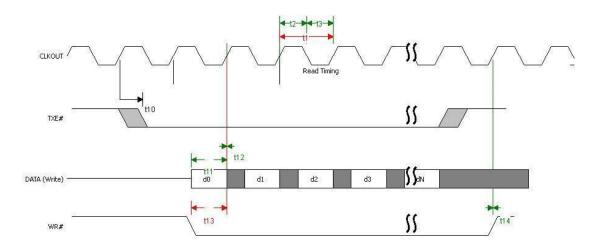

Write Timing (External system write data into FTDI chip)

Figure 2 - Write Timing

Document Reference No.: FT_000186 Clearance No.: FTDI# 117

Name	Minimum	Typical	Maximum	Units	Description
t1		16.67	16.67	ns	CLKOUT period
t2	7.5	8.33	9.17	ns	CLKOUT high period
t3	7.5	8.33	9.17	ns	CLKOUT low period
t4	1		7.15	ns	CLKOUT to RXF#
t5	1		7.15	ns	CLKOUT to read DATA valid
t6	1		7.15	ns	OE# to read DATA valid
t7	8		16.67	ns	OE# setup time
t8	0			ns	OE# hold time
t9	8		16.67	ns	RD# setup time to CLKOUT (RD# low afterOE# low)
t10	0			ns	RD# hold time
t11	1		7.15	ns	CLKOUT TO TXE#
t12	8		16.67	ns	Write DATA setup time
t13	0			ns	Write DATA hold time
t14	8		16.67	ns	WR# setup time to CLKOUT (WR# low after TXE# low)
t15	0			ns	WR# hold time

Table 2 - Timing Table

Document Reference No.: FT_000186 Clearance No.: FTDI# 117

3 Software Configuration

With the FT2232H device, it is necessary to install the FTDI D2XX driver on the PC. Please visit the FTDI Drivers page to download and install the necessary driver which matches the PC.

The table below is taken from the FT2232H datasheet. It indicates that it is necessary to set the FT245 mode by configuring the EEPROM to 245 FIFO modes before developing a software application to access data under FT245 style Sync FIFO mode. Configuring the EEPROM is illustrated in chapter **3.1** Developing software application is illustrated in chapter **4**.

	SYNC 245 FIFO
EEPROM configured	YES
Application Software configured	YES

Table 3 - Configuration using EEPROM and Application Software

Document Reference No.: FT_000186 Clearance No.: FTDI# 117

3.1 EEPROM Setting

Connect the FT2232H to a PC via USB cable, if the driver is installed already, the EEPROM settings can be programmed using either FTDIs MPROG or FT_PROG utilities (downloadable from FTDI website). Any one of these utilities can be used to set port A to "245 FIFO" mode in EEPROM. Figure 3 for the setting illustrates this using MPROG.

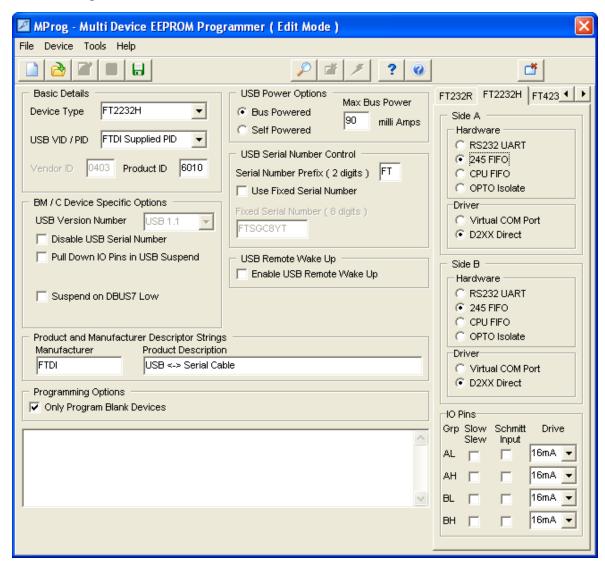


Figure 3 - MProg Tool Setting

4 Application Development

As shown in Table 3 - Configuration using EEPROM and Application Software, it is necessary to develop an application to access data under FT245 style Sync FIFO mode. In following section describes how to do this.

In the application code, it is firstly necessary to open Port A of the FT2232H.

Next send command FT_SetBitMode(Mask, 0x40) to the FTDI driver to switch the FT2232H to FT245 Synchronous FIFO mode (this mode uses the RX & TX buffer of port B, so port B cannot be used for any other purpose in this mode).

Then we can send command FT_SetLatencyTimer(ftHandle, latencytime) to the FTDI driver to configure latency time, which is the receive buffer timeout that is used to flush remaining data from the receive buffer. If you don't call this command, the default setting is 16ms; it can be set at 1 ms intervals between 2ms and 255 ms.

The command FT_SetUSBParameters() can then be used to set the USB buffer size for the required data transfer. The buffer sizes must be set to a multiple of 64 bytes between 64 bytes and 64k bytes. The default size is 4KB. It is recommended changing this to 64KB.

Next the command, FT_SetFlowControl(), should to be called and parameter usFlowControl used to set FT_FLOW_RTS_CTS. This is configures the device driver to avoid data loss.

When the FT2232H has been set to FT245 Synchronous FIFO mode, the CLKOUT pin will output 60MHz a clock. Observing this with an oscilloscope is a good check to make sure the interface has entered FT245 Synchronous FIFO mode. If the waveform edges do not appear sharp enough, then the drive strength of the IO can be increased by altering the EEPROM values using MPROG or FT_PROG.

Although the RX and TX buffers are 4KB, they only use 2x 512 bytes for each buffer under FT245 Synchronous FIFO mode (maximum USB2.0 packet size under BULK mode is 512 bytes). The two buffers continually swap between each other to increase the performance.

To use the software commands, it is necessary to download the ftd2xx.dll, ftd2xx.lib, ftd2xx.h from the FTDI CDM driver. Details on how to use the software commands are available in the $\underline{D2XX\ Programmers}$ Guide.

Document Reference No.: FT_000186 Clearance No.: FTDI# 117

4.1 Code example

The following section gives an application example. This code is not guaranteed and is provided for illustration only. It is not supported by FTDI.

Example code

```
FT HANDLE ftHandle;
   FT_STATUS ftStatus;
   UCHAR\ Mask = 0xff;
   UCHAR Mode;
   UCHAR LatencyTimer = 16; //our default setting is 16
   ftStatus = FT_Open(0, &ftHandle);
   if(ftStatus != FT_OK)
   {
   // FT_Open failed return;
   Mode = 0x00; //reset mode
   ftStatus = FT_SetBitMode(ftHandle, Mask, Mode);
   delay_ms(10);
   Mode = 0x40; //Sync FIFO mode
   ftStatus = FT_SetBitMode(ftHandle, Mask, Mode);
   if (ftStatus == FT_OK)
   {
       ftStatus = FT_SetLatencyTimer(ftHandle, LatencyTimer);
                                                               ftStatus =
FT_SetUSBParameters(ftHandle,0x10000,0x10000);
     ftStatus = FT_SetFlowControl(ftHandle,FT_FLOW_RTS_CTS,0,0);
   //access data from here
   }
   else
   // FT SetBitMode FAILED!
   }
   FT_Close(ftHandle);
```

Document Reference No.: FT_000186 Clearance No.: FTDI# 117

4.2 Getting The Best Performance

Performance depends on the interaction between the FTDI device and external system. If the external system uses a polling method to check the detect pins (RXF#, TXE#) then this may delay the data transfer speed. To get the better performance connect the RXF# and TXE# pins to the external system interrupt pins.

When transferring large amounts of data, in order to get best performance, it is recommended to send the following commands to the FTDI driver at the initial setup stage.

```
ftStatus = FT_SetLatencyTimer(ftHandle, 2);
ftStatus = FT_SetUSBParameters(ftHandle,0x10000, 0x10000);
```

The following example code gives an example of how to calculate performance of "write data mode". This code is provided for illustration only and is not supported by FTDI.

```
#define OneSector 64*1024
#define SectorNum 2000
  FT_HANDLE ftHandle;
  FT_STATUS ftStatus;
  UCHAR\ Mask = 0xff;
  UCHAR Mode;
   ftStatus = FT_Open(0, &ftHandle);
  if(ftStatus != FT_OK)
  // FT_Open failed return;
     printf("FT_Open FAILED! \r\n");
  }
  //set interface into FT245 Synchronous FIFO mode
  Mode = 0x00; //reset mode
  ftStatus = FT_SetBitMode(ftHandle, Mask, Mode);
  Sleep(1000);
  Mode = 0x40; //Sync FIFO mode
  ftStatus = FT SetBitMode(ftHandle, Mask, Mode);
   if (ftStatus!= FT OK)
```



Document Reference No.: FT_000186 Clearance No.: FTDI# 117

```
// FT_SetBitMode FAILED!
   Printf("FT_SetBitMode FAILED! \r\n");
}
FT_SetLatencyTimer(ftHandle, 2);
FT_SetUSBParameters(ftHandle,0x10000, 0x10000);
FT_SetFlowControl(ftHandle, FT_FLOW_RTS_CTS, 0x0, 0x0);
FT_Purge(ftHandle, FT_PURGE_RX);
DWORD EventDWord;
DWORD RxBytes;
DWORD TxBytes;
DWORD BytesReceived;
char RxBuffer[OneSector];
LARGE_INTEGER | PreTime, | PostTime, | Frequency;
QueryPerformanceFrequency(&lFrequency);
QueryPerformanceCounter(&IPreTime);
DWORD dwSum = 0;
for(int i=0; i< SectorNum;i++)</pre>
{
  //ftStatus = FT_GetStatus(ftHandle,&RxBytes,&TxBytes,&EventDWord);
 // if((ftStatus == FT_OK) && (RxBytes >= OneSector))
  {
    ftStatus = FT_Read(ftHandle,RxBuffer,OneSector,&BytesReceived);
      if (ftStatus == FT_OK)
      {
      // FT_Read OK
         //printf("Read one sector bytes!\r\n");
         dwSum += BytesReceived;
```

Document Reference No.: FT_000186 Clearance No.: FTDI# 117

else
{
 // FT_Read Failed
}

//check the end condition and quit
}

QueryPerformanceCounter(&IPostTime);
float IPassTick = IPostTime.QuadPart - IPreTime.QuadPart;
float IPassTime = IPassTick/(float)IFrequency.QuadPart;
printf("Received data bytes:%d \r\n", dwSum);
printf("Time passed:%f \r\n", IPassTime);

Document Reference No.: FT_000186 Clearance No.: FTDI# 117

4.3 Write Data Mode

When an external system writes data to a PC via FT2232H, it is referred to as write data mode.

External system - When the external system is ready to transmit data, the external system should first check the TXE#. The external system must wait until TXE# goes low, it should then pull WR# signal low, before sending data bytes to D0~D7 at the CLKOUT frequency. If the external system detects TXE#=high, then it should stop data transferring and pull WR# signal high. The external system must then continue to poll the TXE# signal.

PC application - The application in PC side should poll the RX buffer to read data which has been transferred by the external system until the data transfer task is done.

Example code

```
#define OneSector 1024
FT_HANDLE ftHandle;
FT_STATUS ftStatus;
DWORD EventDWord;
DWORD RxBytes;
DW ORD TxBytes;
DWORD BytesReceived;
char RxBuffer[OneSector];
 //set interface into FT245 Synchronous FIFO mode
 While(1)
  {
    ftStatus = FT GetStatus(ftHandle,&RxBytes,&TxBytes,&EventDWord);
    if((ftStatus == FT_OK) && (RxBytes >= OneSector))
    {
      ftStatus = FT_Read(ftHandle,RxBuffer,RxBytes,&BytesReceived);
      if (ftStatus == FT_OK)
      {
         // FT_Read OK
      }
      else
      {
         // FT_Read Failed
      }
    }
           //check the end condition and quit
   }
```



Document Reference No.: FT_000186 Clearance No.: FTDI# 117

4.4 Read Data Mode

When an external system wants to read data from PC via FT2232H, it is referred to as read data mode.

PC application - The application at the PC side sends data to FT2232H using the call FT_Write() command. This step is repeated until the data transfer is complete.

External system - The external system must poll until RXF# = low. It should then pull OE# = low then RD#=low after one clock delay, and read data bytes from D0~D7 at the CLKOUT frequency. When the external system detects RXF#=high, then it should stop reading data and pull OE# = high and RD#= high. The external system should then continue to poll the RXF # signal until data transfer task is complete.

Example code

```
#define OneSector 1024
 FT_HANDLE ftHandle;
 FT_STATUS ftStatus;
 DWORD EventDWord;
 DWORD RxBytes;
 DW ORD TxBytes;
 DWORD BytesWritten;
 char TxBuffer[OneSector];
  //set interface into FT245 Synchronous FIFO mode
   While(1)
   {
     ftStatus = FT_GetStatus(ftHandle,&RxBytes,&TxBytes,&EventDWord);
     if((ftStatus == FT_OK) && (TxBytes == 0))
     {
       ftStatus = FT_Write(ftHandle, TxBuffer, sizeof(TxBuffer), &BytesWritten);
       if (ftStatus == FT_OK)
         // FT_Write OK
        }
       else
       {
         // FT_Write Failed
       }
     }
    //check the end condition and quit
}
```

Version 1.3

Document Reference No.: FT_000186 Clearance No.: FTDI# 117

5 Contact Information

Head Office - Glasgow, UK

Future Technology Devices International Limited Unit 1, 2 Seaward Place, Centurion Business Park Glasgow G41 1HH

United Kingdom

Tel: +44 (0) 141 429 2777 Fax: +44 (0) 141 429 2758

sales1@ftdichip.com E-mail (Sales) E-mail (Support) support1@ftdichip.com E-mail (General Enquiries) admin1@ftdichip.com

Branch Office - Tigard, Oregon, USA

Future Technology Devices International Limited (USA)

7130 SW Fir Loop Tigard, OR 97223-8160

USA

Tel: +1 (503) 547 0988

Fax: +1 (503) 547 0987

E-Mail (Sales) us.sales@ftdichip.com E-Mail (Support) us.support@ftdichip.com E-Mail (General Enquiries) us.admin@ftdichip.com

Branch Office - Taipei, Taiwan

Future Technology Devices International Limited (Taiwan) 2F, No. 516, Sec. 1, NeiHu Road

Taipei 114 Taiwan, R.O.C.

Tel: +886 (0) 2 8791 3570

Fax: +886 (0) 2 8791 3576

E-mail (Sales) tw.sales1@ftdichip.com E-mail (Support) tw.support1@ftdichip.com E-mail (General Enquiries) tw.admin1@ftdichip.com

Branch Office - Shanghai, China

Future Technology Devices International Limited (China)

Room 1103, No. 666 West Huaihai Road, Shanghai, 200052

China

Tel: +86 21 62351596 Fax: +86 21 62351595

E-Mail (Sales) cn.sales@ftdichip.com E-Mail (Support) cn.support@ftdichip.com E-Mail (General Enquiries) cn.admin@ftdichip.com

Web Site

http://ftdichip.com

Distributor and Sales Representatives

Please visit the Sales Network page of the FTDI Web site for the contact details of our distributor(s) and sales representative(s) in your country.

Vinculum is part of Future Technology Devices International Ltd. Neither the whole nor any part of the information contained in, or the product described in this manual, may be adapted or reproduced in any material or electronic form without the prior written consent of the copyright holder. This product and its documentation are supplied on an as-is basis and no warranty as to their suitability for any particular purpose is either made or implied. Future Technology Devices International Ltd will not accept any claim for damages howsoever arising as a result of use or failure of this product. Your statutory rights are not affected. This product or any variant of it is not intended for use in any medical appliance, device or system in which the failure of the product might reasonably be expected to result in personal injury. This document provides preliminary information that may be subject to change without notice. No freedom to use patents or other intellectual property rights is implied by the publication of this document. Future Technology Devices International Ltd, Unit 1, 2 Seaward Place, Centurion Business Park, Glasgow G41 1 HH United Kingdom. Scotland Registered Number: SC136640



Document Reference No.: FT_000186 Clearance No.: FTDI# 117

Appendix A – References

Document References

D2XX Programmers Guide

Acronyms and Abbreviations

Terms	Description
EEPROM Electrically Erasable Programmable Read-Only Memory	
FIFO	First-In First-Out
PC	Personal Computer
USB	Universal Serial Bus



AN_130 FT2232H Used in an FT245 Style Synchronous FIFO Mode Version 1.3 Document Reference No.: FT_000186 Clearance No.: FTDI# 117

Appendix B - List of Tables & Figures

List of Tables

Table 1 - Channel A FT245 Style Synchronous FIFO Configured Pin Descriptions	4
Table 2 - Timing Table	6
Table 3 - Configuration using EEPROM and Application Software	7
List of Figures	
Figure 1 - Read Timing	5
Figure 2 - Write Timing	5
Figure 3 - MProg Tool Setting	8

Document Reference No.: FT_000186 Clearance No.: FTDI# 117

Appendix C- Revision History

Document Title: AN_130 FT2232H Used in an FT245 Style Synchronous FIFO Mode

Document Reference No.: FT_000186
Clearance No.: FTDI# 117

Product Page: http://www.ftdichip.com/FTProducts.htm

Document Feedback: Send Feedback

Revision	Changes	Date
1.0	Initial release	2009-10-23
1.1	Added Chapter 4.2 Getting the Best Performance	2009-10-30
1.2	Edited Figure 3.1 MProg tool setting	2010-03-05
1.3	Updated Table 2 – Timing Table	2015-11-17